


—
INSTALLATION INSTRUCTION


Terminal set

OZXT1

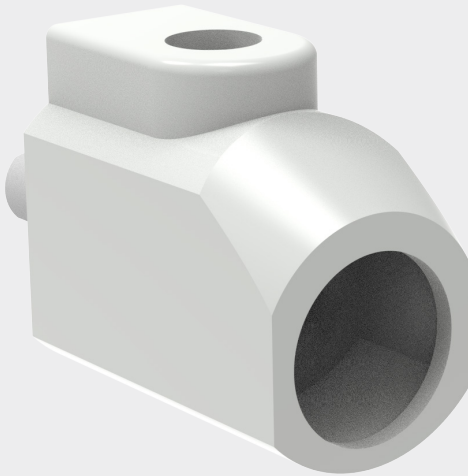


OZXT1



OT45_...OT125_
OTP_45...OTP_125_

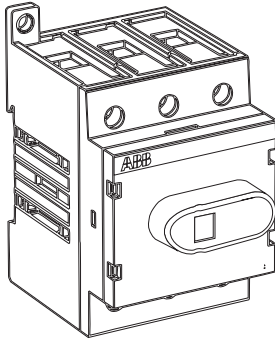

OZXT1
OZXT1/1

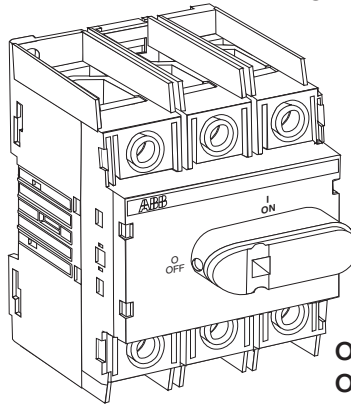

- OT45_ = 2 Nm
- OT63_ = 2 Nm
- OT80_ = 2 Nm
- OT100_ = 6 Nm
- OT125_ = 6 Nm

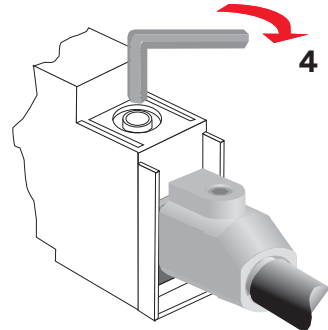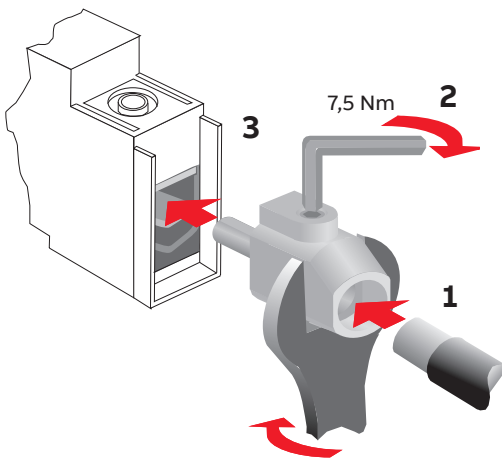

Al 16...50 mm²
Cu 2,5...50 mm²



Contact us

ABB Oy

Protection and Connection

P.O. Box 622

FI-65101 Vaasa

Finland

<https://www.abb.com/low-voltage>