

SIEMENS

MICROMASTER 420

Parameter List

Issue 10/03



Available Documentation for the MICROMASTER 420


Getting Started Guide

Is for quick commissioning .



Operating Instructions

Gives information about features of the MICROMASTER 420, Installation, Commissioning, Control modes, System Parameter structure, Troubleshooting, Specifications and available options of the MICROMASTER 420.

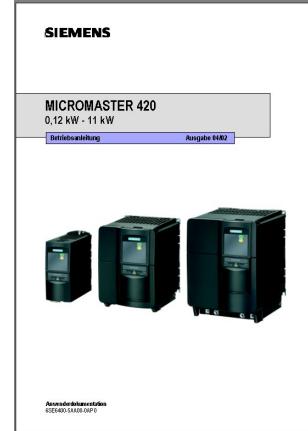

Parameter List

The Parameter List contains the description of all Parameters structured in functional order and a detailed description. The Parameter list also includes a series of function plans.



Catalogues

In the catalogue you will find all needs to select a certain inverter, as well as filters chokes, operator panels or communications options.





MICROMASTER 420

Parameter List

User Documentation

Valid for

Converter Type
MICROMASTER 420

Issue 10/03

Software Version
V1.1

Issue 10/03

Parameter List

1

Function Diagrams

2

Faults and Alarms

3

Abbreviations

**Warning**

Please refer to all Definitions and Warnings contained in the Operating Instructions. You will find the Operating Instructions on the Docu CD delivered with your inverter. If the CD is lost, it can be ordered via your local Siemens department under the Order No. 6SE6400-5AB00-1AP0.

Further information can be obtained from Internet website:
<http://www.siemens.de/micromaster>

Approved Siemens Quality for Software and Training
is to DIN ISO 9001, Reg. No. 2160-01

The reproduction, transmission or use of this document, or its contents is not permitted unless authorized in writing.
Offenders will be liable for damages. All rights including rights created by patent grant or registration of a utility model or design are reserved.

© Siemens AG 2001, 2002, 2003. All Rights Reserved.

MICROMASTER® is a registered trademark of Siemens

Other functions not described in this document may be available. However, this fact shall not constitute an obligation to supply such functions with a new control, or when servicing.

We have checked that the contents of this document correspond to the hardware and software described. There may be discrepancies nevertheless, and no guarantee can be given that they are completely identical. The information contained in this document is reviewed regularly and any necessary changes will be included in the next edition. We welcome suggestions for improvement.

Siemens handbooks are printed on chlorine-free paper that has been produced from managed sustainable forests. No solvents have been used in the printing or binding process.
Document subject to change without prior notice.

Parameters MICROMASTER 420

This Parameter List must only be used together with the Operating Instructions of the MICROMASTER 420. Please pay special attention to the Warnings, Cautions, Notices and Notes contained in these manuals.

Table of Contents

1	Parameters.....	7
1.1	Introduction to MICROMASTER System Parameters.....	7
1.2	Quick commissioning (P0010 = 1)	10
1.3	Binector Input Parameters.....	12
1.4	Connector Input Parameters	12
1.5	Binector Output Parameters.....	12
1.6	Connector Output Parameters	13
1.7	Connector/Binector Output Parameters.....	13
1.8	Parameter Description.....	14
2	Function Diagrams	125
3	Faults and Alarms	157
3.1	Fault messages	157
3.2	Alarm Messages.....	161
4	Abbreviations.....	165

1 Parameters

1.1 Introduction to MICROMASTER System Parameters

The layout of the parameter description is as follows.

1 Par number [index]	2 Parameter name	3 CStat:	5 Datatype	7 Unit:	9 Min:	10 Def:	11 Max:	12 Level: 2
13	Description:							

1. Parameter number

Indicates the relevant parameter number. The numbers used are 4-digit numbers in the range 0000 to 9999. Numbers prefixed with an “r” indicate that the parameter is a “read-only” parameter, which displays a particular value but cannot be changed directly by specifying a different value via this parameter number (in such cases, dashes “-“ are entered at the points “Unit”, “Min”, “Def” and “Max” in the header of the parameter description).

All other parameters are prefixed with a “P”. The values of these parameters can be changed directly in the range indicated by the “Min” and “Max” settings in the header.


[index] indicates that the parameter is an indexed parameter and specifies the number of indices available.


2. Parameter name


Indicates the name of the relevant parameter.


Certain parameter names include the following abbreviated prefixes: BI, BO, CI, and CO followed by a colon.


These abbreviations have the following meanings:

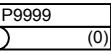BI =  Binector input, i.e. parameter selects the source of a binary signal

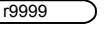BO =  Binector output, i.e. parameter connects as a binary signal

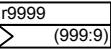CI =  Connector input, i.e. parameter selects the source of an analog signal

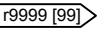CO =  Connector output, i.e. parameter connects as an analog signal

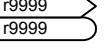CO/BO =  Connector/Binector output, i.e. parameter connects as an analog signal and/or as a binary signal

To make use of BiCo you will need access to the full parameter list. At this level many new parameter settings are possible, including BiCo functionality. BiCo functionality is a different, more flexible way of setting and combining input and output functions. It can be used in most cases in conjunction with the simple, level 2 settings.

The BiCo system allows complex functions to be programmed. Boolean and mathematical relationships can be set up between inputs (digital, analog, serial etc.) and outputs (inverter current, frequency, analog output, relays, etc.).

3. CStat

Commissioning status of the parameter. Three states are possible:

Commissioning	C
Run	U
Ready to run	T

This indicates when the parameter can be changed. One, two or all three states may be specified. If all three states are specified, this means that it is possible to change this parameter setting in all three inverter states

4. P-Group

Indicates the functional group of the particular.

Note

Parameter P0004 (parameter filter) acts as a filter and focuses access to parameters according to the functional group selected.

5. Datatype

The data types available are shown in the table below.

Notation	Meaning
U16	16-bit unsigned
U32	32-bit unsigned
I16	16-bit integer
I32	32-bit integer
Float	Floating point

6. Active

Indicates whether

- ◆ Immediately changes to the parameter values take effect immediately after they have been entered, or
- ◆ Confirm the “P” button on the operator panel (BOP or AOP) must be pressed before the changes take effect.

7. Unit

Indicates the unit of measure applicable to the parameter values

8. QuickComm

Indicates whether or not (Yes or No) a parameter can only be changed during quick commissioning, i.e. when P0010 (parameter groups for commissioning) is set to 1 (quick commissioning).

9. Min

Indicates the minimum value to which the parameter can be set.

10. Def

Indicates the default value, i.e. the value which applies if the user does not specify a particular value for the parameter.

11. Max

Indicates the maximum value to which the parameter can be set.

12. Level

Indicates the level of user access. There are four access levels: Standard, Extended, Expert and Service. The number of parameters that appear in each functional group depends on the access level set in P0003 (user access level).

13. Description

The parameter description consists of the sections and contents listed below. Some of these sections and contents are optional and will be omitted on a case-to-case basis if not applicable.

Description:	Brief explanation of the parameter function.
Diagram:	Where applicable, diagram to illustrate the effects of parameters on a characteristic curve, for example
Settings:	List of applicable settings. These include Possible settings, Most common settings, Index and Bitfields
Example:	Optional example of the effects of a particular parameter setting.
Dependency:	Any conditions that must be satisfied in connection with this parameter. Also any particular effects, which this parameter has on other parameter(s) or which other parameters have on this one.
Warning / Caution / Notice / Note:	Important information which must be heeded to prevent personal injury or damage to equipment / specific information which should be heeded in order to avoid problems / information which may be helpful to the user
More details:	Any sources of more detailed information concerning the particular parameter.

Operators

The following operators are used in the parameter list to represent mathematical interrelationships:

Arithmetic operators

- + Addition
- Subtraction
- * Multiplication
- / Division

Comparison operators

- > Greater than
- >= Greater than / equal to
- < Less than
- <= Less than / equal to

Equivalence operators

- == Equal to
- != Not equal to

Logical operators

- && AND logic operation
- || OR logic operation

1.2 Quick commissioning (P0010 = 1)

The following parameters are necessary for quick commissioning (P0010 = 1).

Quick commissioning (P0010 = 1)

Par.-No.	Name	Access level	Cstat
P0100	Europe / North America	1	C
P0300	Select motor type	2	C
P0304	Motor voltage rating	1	C
P0305	Motor current rating	1	C
P0307	Motor power rating	1	C
P0308	Motor cosPhi rating	2	C
P0309	Motor efficiency rating	2	C
P0310	Motor frequency rating	1	C
P0311	Motor speed rating	1	C
P0320	Motor magnetizing current	3	CT
P0335	Motor cooling	2	CT
P0640	Motor overload factor [%]	2	CUT
P0700	Selection of command source	1	CT
P1000	Selection of frequency setpoint	1	CT
P1080	Min. speed	1	CUT
P1082	Max. speed	1	CT
P1120	Ramp-up time	1	CUT
P1121	Ramp-down time	1	CUT
P1135	OFF3 ramp-down time	2	CUT
P1300	Control mode	2	CT
P1910	Select motor data identification	2	CT
P3900	End of quick commissioning	1	C

When P0010 = 1 is chosen, P0003 (user access level) can be used to select the parameters to be accessed. This parameter also allows selection of a user-defined parameter list for quick commissioning.

At the end of the quick commissioning sequence, set P3900 = 1 to carry out the necessary motor calculations and clear all other parameters (not included in P0010 = 1) to their default settings.

Note

This applies only in Quick Commissioning mode.

Reset to Factory default

To reset all parameters to the factory default settings; the following parameters should be set as follows:

Set P0010 = 30


Set P0970 = 1

Note

The reset process takes approximately 10 seconds to complete. Reset to Factory default

Seven-segment display

The seven-segment display is structured as follows:

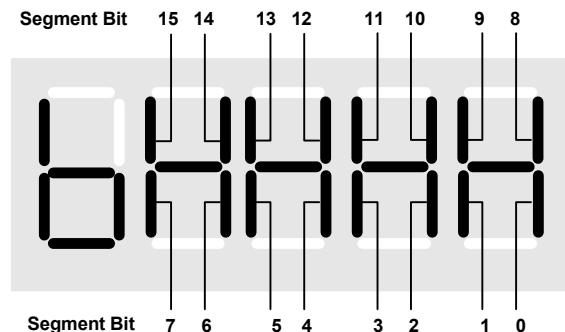

The significance of the relevant bits in the display is described in the status and control word parameters.

1.3 Binector Input Parameters

ParNo	Parameter name
P0731	BI: Function of digital output 1
P0800	BI: Download parameter set 0
P0801	BI: Download parameter set 1
P0810	BI: CDS bit 0 (Local / Remote)
P0840	BI: ON/OFF1
P0842	BI: ON reverse/OFF1
P0844	BI: 1. OFF2
P0845	BI: 2. OFF2
P0848	BI: 1. OFF3
P0849	BI: 2. OFF3
P0852	BI: Pulse enable
P1020	BI: Fixed freq. selection Bit 0
P1021	BI: Fixed freq. selection Bit 1
P1022	BI: Fixed freq. selection Bit 2
P1035	BI: Enable MOP (UP-command)
P1036	BI: Enable MOP (DOWN-command)
P1055	BI: Enable JOG right
P1056	BI: Enable JOG left
P1074	BI: Disable additional setpoint
P1110	BI: Inhibit neg. freq. setpoint

ParNo	Parameter name
P1113	BI: Reverse
P1124	BI: Enable JOG ramp times
P1140	BI: RFG enable
P1141	BI: RFG start
P1142	BI: RFG enable setpoint
P1230	BI: Enable DC braking
P2103	BI: 1. Faults acknowledgement
P2104	BI: 2. Faults acknowledgement
P2106	BI: External fault
P2200	BI: Enable PID controller
P2220	BI: Fixed PID setp. select Bit 0
P2221	BI: Fixed PID setp. select Bit 1
P2222	BI: Fixed PID setp. select Bit 2
P2235	BI: Enable PID-MOP (UP-cmd)
P2236	BI: Enable PID-MOP (DOWN-cmd)

1.4 Connector Input Parameters

ParNo	Parameter name
P0771	CI: DAC
P1070	CI: Main setpoint
P1071	CI: Main setpoint scaling
P1075	CI: Additional setpoint
P1076	CI: Additional setpoint scaling

ParNo	Parameter name
P2016[4]	CI: PZD to BOP link (USS)
P2019[4]	CI: PZD to COM link (USS)
P2051[4]	CI: PZD to CB
P2253	CI: PID setpoint
P2254	CI: PID trim source
P2264	CI: PID feedback

1.5 Binector Output Parameters

ParNo	Parameter name
r0751	BO: Status word of ADC
r2032	BO: CtrlWrd1 from BOP link (USS)
r2033	BO: CtrlWrd2 from BOP link (USS)
r2036	BO: CtrlWrd1 from COM link (USS)
r2037	BO: CtrlWrd2 from COM link (USS)

ParNo	Parameter name
r2090	BO: Control word 1 from CB
r2091	BO: Control word 2 from CB

1.6 Connector Output Parameters

ParNo	Parameter name
r0020	CO: Freq. setpoint before RFG
r0021	CO: Act. frequency
r0024	CO: Act. output frequency
r0025	CO: Act. output voltage
r0026	CO: Act. DC-link voltage
r0027	CO: Act. output current
r0034	CO: Motor temperature (i2t)
r0036	CO: Inverter overload utilization
r0037	CO: Inverter temperature [°C]
r0039	CO: Energy consumpt. meter [kWh]
r0067	CO: Act. output current limit
r0071	CO: Max. output voltage
r0078	CO: Act. current lsq
r0084	CO: Act. air gap flux
r0086	CO: Act. active current
r0395	CO: Total stator resistance [%]
r0755	CO: Act. ADC after scal. [4000h]
r1024	CO: Act. fixed frequency
r1050	CO: Act. Output freq. of the MOP
r1078	CO: Total frequency setpoint

ParNo	Parameter name
r1079	CO: Selected frequency setpoint
r1114	CO: Freq. setp. after dir. ctrl.
r1119	CO: Freq. setpoint before RFG
r1170	CO: Frequency setpoint after RFG
r1242	CO: Switch-on level of Vdc-max
r1315	CO: Total boost voltage
r1337	CO: V/f slip frequency
r1343	CO: Imax controller freq. output
r1344	CO: Imax controller volt. output
r1801	CO: Act. pulse frequency
r2015[4]	CO: PZD from BOP link (USS)
r2018[4]	CO: PZD from COM link (USS)
r2050[4]	CO: PZD from CB
r2224	CO: Act. fixed PID setpoint
r2250	CO: Output setpoint of PID-MOP
r2260	CO: PID setpoint after PID-RFG
r2262	CO: Filtered PID setp. after RFG
r2266	CO: PID filtered feedback
r2272	CO: PID scaled feedback
r2273	CO: PID error
r2294	CO: Act. PID output

1.7 Connector/Binector Output Parameters

ParNo	Parameter name
r0019	CO/BO: BOP control word
r0052	CO/BO: Act. status word 1
r0053	CO/BO: Act. status word 2
r0054	CO/BO: Act. control word 1
r0055	CO/BO: Act. control word 2

ParNo	Parameter name
r0056	CO/BO: Status of motor control
r0722	CO/BO: Binary input values
r0747	CO/BO: State of digital outputs
r2197	CO/BO: Monitoring word 1

1.8 Parameter Description

Note

Level 4 Parameters are not visible with BOP or AOP.

r0000	Drive display	Datatype: U16	Unit: -	Min: -	Def: -	Max: -	Level 1
	P-Group: ALWAYS						

Displays the user selected output as defined in P0005.

Note:

Pressing the "Fn" button for 2 seconds allows the user to view the values of DC link voltage, output frequency, output voltage, output current, and chosen r0000 setting (defined in P0005).

r0002	Drive state	Datatype: U16	Unit: -	Min: -	Def: -	Max: -	Level 2
	P-Group: COMMANDS						

Displays actual drive state.

Possible Settings:

- 0 Commissioning mode (P0010 != 0)
- 1 Drive ready
- 2 Drive fault active
- 3 Drive starting (DC-link precharging)
- 4 Drive running
- 5 Stopping (ramping down)

Dependency:

State 3 visible only while precharging DC link, and when externally powered communications board is fitted.

P0003	User access level	CStat: CUT	Datatype: U16	Unit: -	Min: 0	Def: 1	Level 1
	P-Group: ALWAYS		Active: first confirm	QuickComm.: No			

Defines user access level to parameter sets. The default setting (standard) is sufficient for most simple applications.

Possible Settings:

- 0 User defined parameter list - see P0013 for details on use
- 1 Standard: Allows access into most frequently used parameters.
- 2 Extended: Allows extended access e.g. to inverter I/O functions.
- 3 Expert: For expert use only.
- 4 Service: Only for use by authorized service personal - password protected.

P0004	Parameter filter	CStat: CUT	Datatype: U16	Unit: -	Min: 0	Def: 0	Level 1
	P-Group: ALWAYS		Active: first confirm	QuickComm.: No			

Filters available parameters according to functionality to enable a more focussed approach to commissioning.

Possible Settings:

- 0 All parameters
- 2 Inverter
- 3 Motor
- 7 Commands, binary I/O
- 8 ADC and DAC
- 10 Setpoint channel / RFG
- 12 Drive features
- 13 Motor control
- 20 Communication
- 21 Alarms / warnings / monitoring
- 22 Technology controller (e.g. PID)

Example:

P0004 = 22 specifies that only PID parameters will be visible.

Dependency:

Parameters marked "Quick Comm: Yes" in the parameter header can only be set when P0010 = 1 (Quick Commissioning).

P0005	Display selection	Min: 2	Level
CStat:	CUT	Datatype: U16	Def: 21
P-Group:	FUNC	Active: first confirm	Max: 2294

Selects display for parameter r0000 (drive display).

Common Settings:

- 21 Actual frequency
- 25 Output voltage
- 26 DC link voltage
- 27 Output current

Notice:

These settings refer to read only parameter numbers ("xxxx").

Details:

See relevant "xxxx" parameter descriptions.

P0006	Display mode	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 2
P-Group:	FUNC	Active: first confirm	Max: 4

Defines mode of display for r0000 (drive display).

Possible Settings:

- 0 In Ready state alternate between setpoint and output frequency. In run display output frequency
- 1 In Ready state display setpoint. In run display output frequency.
- 2 In Ready state alternate between P0005 value and r0020 value. In run display P0005 value
- 3 In Ready state alternate between r0002 value and r0020 value. In run display r0002 value
- 4 In all states just display P0005

Note:

When inverter is not running, the display alternates between the values for "Not Running" and "Running".

Per default, the setpoint and actual frequency values are displayed alternately.

P0007	Backlight delay time	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0
P-Group:	FUNC	Active: first confirm	Max: 2000

Defines time period after which the backlight display turns off if no operator keys have been pressed.

Value:

P0007 = 0:

Backlight always on (default state).

P0007 = 1 - 2000:

Number of seconds after which the backlight will turn off.

P0010	Commissioning parameter	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 0
P-Group:	ALWAYS	Unit: -	Max: 30

Filters parameters so that only those related to a particular functional group are selected.

Possible Settings:

- 0 Ready
- 1 Quick commissioning
- 2 Inverter
- 29 Download
- 30 Factory setting

Dependency:

Reset to 0 for inverter to run.

P0003 (user access level) also determines access to parameters.

Note:

P0010 = 1

The inverter can be commissioned very quickly and easily by setting P0010 = 1. After that only the important parameters (e.g.: P0304, P0305, etc.) are visible. The value of these parameters must be entered one after the other. The end of quick commissioning and the start of internal calculation will be done by setting P3900 = 1 - 3. Afterward parameter P0010 and P3900 will be reset to zero automatically.

P0010 = 2

For service purposes only.

P0010 = 29

To transfer a parameter file via PC tool (e.g.: DriveMonitor, STARTER) parameter P0010 will be set to 29 by the PC tool. When download has been finished PC tool resets parameter P0010 to zero.

P0010 = 30

When resetting the parameters of inverter P0010 must be set to 30. Resetting of the parameters will be started by setting parameter P0970 = 1. The inverter will automatically reset all its parameters to their default settings. This can prove beneficial if you experience problems during parameter setup and wish to start again. Duration of factory setting will take about 60 s.

P0011	Lock for user defined parameter	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0
P-Group:	FUNC	Unit: -	Max: 65535

Details:

See parameter P0013 (user defined parameter)

P0012	Key for user defined parameter	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0
P-Group:	FUNC	Active: first confirm	Max: 65535

Details:

See parameter P0013 (user defined parameter).

P0013[20]	User defined parameter	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0
P-Group:	FUNC	Active: first confirm	Max: 65535

Defines a limited set of parameters to which the end user will have access.

Instructions for use:

1. Set P0003 = 3 (expert user)
2. Go to P0013 indices 0 to 16 (user list)
3. Enter into P0013 index 0 to 16 the parameters required to be visible in the user-defined list. The following values are fixed and cannot be changed:
 - P0013 index 19 = 12 (key for user defined parameter)
 - P0013 index 18 = 10 (commissioning parameter filter)
 - P0013 index 17 = 3 (user access level)
4. Set P0003 = 0 to activate the user defined parameter.

Index:

P0013[0] : 1st user parameter
 P0013[1] : 2nd user parameter
 P0013[2] : 3rd user parameter
 P0013[3] : 4th user parameter
 P0013[4] : 5th user parameter
 P0013[5] : 6th user parameter
 P0013[6] : 7th user parameter
 P0013[7] : 8th user parameter
 P0013[8] : 9th user parameter
 P0013[9] : 10th user parameter
 P0013[10] : 11th user parameter
 P0013[11] : 12th user parameter
 P0013[12] : 13th user parameter
 P0013[13] : 14th user parameter
 P0013[14] : 15th user parameter
 P0013[15] : 16th user parameter
 P0013[16] : 17th user parameter
 P0013[17] : 18th user parameter
 P0013[18] : 19th user parameter
 P0013[19] : 20th user parameter

Dependency:

First, set P0011 ("lock") to a different value than P0012 ("key") to prevent changes to user-defined parameter. Then, set P0003 to 0 to activate the user-defined list.

When locked and the user-defined parameter is activated, the only way to exit the user-defined parameter (and view other parameters) is to set P0012 ("key") to the value in P0011 ("lock").

Note:

Alternatively, set P0010 = 30 (commissioning parameter filter = factory setting) and P0970 = 1 (factory reset) to perform a complete factory reset.

The default values of P0011 ("lock") and P0012 ("key") are the same.

r0018	Firmware version	Min: -	Level
	Datatype: Float	Unit: -	Def: -
P-Group:	INVERTER		Max: -

Displays version number of installed firmware.

r0019	CO/BO: BOP control word P-Group: COMMANDS	Datatype: U16	Unit: -	Min: - Def: - Max: -	Level 3
Displays status of operator panel commands.					
The settings below are used as the "source" codes for keypad control when connecting to BICO input parameters.					
Bitfields:					
Bit00	ON/OFF1		0 NO	1 YES	
Bit01	OFF2: Electrical stop		0 YES	1 NO	
Bit08	JOG right		0 NO	1 YES	
Bit11	Reverse (setpoint inversion)		0 NO	1 YES	
Bit13	Motor potentiometer MOP up		0 NO	1 YES	
Bit14	Motor potentiometer MOP down		0 NO	1 YES	
Note:					
When BICO technology is used to allocate functions to panel buttons, this parameter displays the actual status of the relevant command.					
The following functions can be "connected" to individual buttons: - ON/OFF1, - OFF2, - JOG, - REVERSE, - INCREASE, - DECREASE					
r0020	CO: Freq. setpoint before RFG P-Group: CONTROL	Datatype: Float	Unit: Hz	Min: - Def: - Max: -	Level 3
Displays actual frequency setpoint (output from ramp function generator).					
r0021	CO: Act. frequency P-Group: CONTROL	Datatype: Float	Unit: Hz	Min: - Def: - Max: -	Level 2
Displays actual inverter output frequency (r0021) excluding slip compensation, resonance damping and frequency limitation.					
r0022	Act. rotor speed P-Group: CONTROL	Datatype: Float	Unit: 1/min	Min: - Def: - Max: -	Level 3
Displays calculated rotor speed based on inverter output frequency [Hz] x 120 / number of poles.					
Note: This calculation makes no allowance for load-dependent slip.					
r0024	CO: Act. output frequency P-Group: CONTROL	Datatype: Float	Unit: Hz	Min: - Def: - Max: -	Level 3
Displays actual output frequency (slip compensation, resonance damping and frequency limitation are included).					
r0025	CO: Act. output voltage P-Group: CONTROL	Datatype: Float	Unit: V	Min: - Def: - Max: -	Level 2
Displays [rms] voltage applied to motor.					
r0026	CO: Act. DC-link voltage P-Group: INVERTER	Datatype: Float	Unit: V	Min: - Def: - Max: -	Level 2
Displays DC-link voltage.					
r0027	CO: Act. output current P-Group: CONTROL	Datatype: Float	Unit: A	Min: - Def: - Max: -	Level 2
Displays [rms] value of motor current [A].					

r0034	CO: Motor temperature (I²t) P-Group: MOTOR	Datatype: Float	Unit: %	Min: - Def: - Max: -	Level 2
--------------	---	-----------------	---------	----------------------------	-------------------

Displays calculated motor temperature (I²t model) as [%] of the maximum permissible value.

Note:

A value of 100 % means that the motor has reached its maximum permissible operating temperature. In this case, the motor will attempt to reduce the motor loading as defined in P0610 (motor I²t temperature reaction).

r0036	CO:Inverter overload utilization P-Group: INVERTER	Datatype: Float	Unit: %	Min: - Def: - Max: -	Level 4
--------------	--	-----------------	---------	----------------------------	-------------------

Displays inverter overload utilization calculated via I²t model.


The actual I²t value relative to the max. possible I²t value supplies utilization in [%].

If the current exceeds the threshold for P0294 (inverter I²t overload warning), alarm A0505 (inverter I²t) is generated and the output current of the inverter reduced via P0290 (inverter overload reaction).

If 100 % utilization is exceeded, alarm F0005 (inverter I²t) is tripped.

Example:

Normalized output current

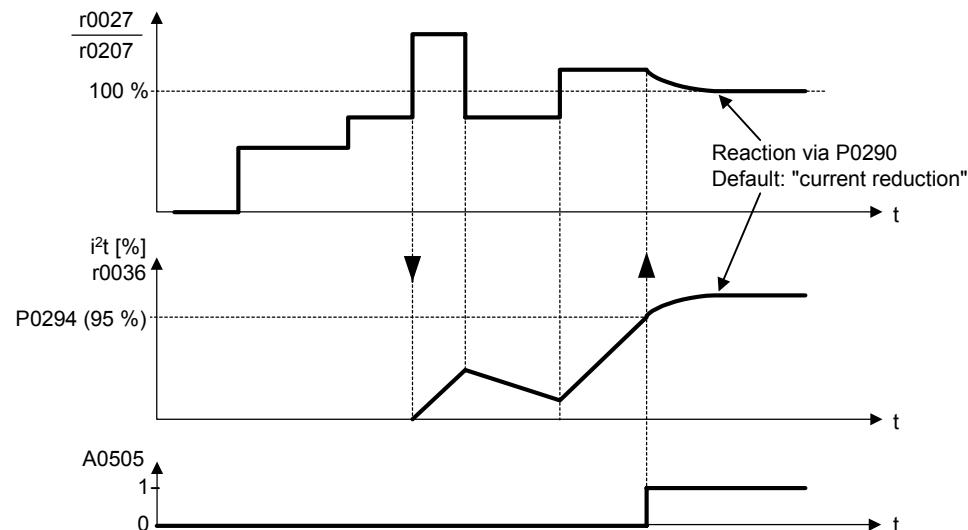

Dependency:

r0036 > 0:

If the nominal current of the inverter is exceed, utilization will be displayed. Otherwise, 0 % utilization is displayed.

r0037	CO: Inverter temperature [°C] P-Group: INVERTER	Datatype: Float	Unit: °C	Min: - Def: - Max: -	Level 3
--------------	---	-----------------	----------	----------------------------	-------------------

Displays internal inverter heatsink temperature.

r0039	CO: Energy consumpt. meter [kWh] P-Group: INVERTER	Datatype: Float	Unit: kWh	Min: - Def: - Max: -	Level 2
--------------	--	-----------------	-----------	----------------------------	-------------------

Displays electrical energy used by inverter since display was last reset (see P0040 - reset energy consumption meter).

Dependency:

Value is reset when

P0040 = 1 reset energy consumption meter.

P0040	Reset energy consumption meter		Min: 0	Level
CStat: CT	Datatype: U16	Unit: -	Def: 0	
P-Group: INVERTER	Active: first confirm	QuickComm.: No	Max: 1	2

Resets value of parameter r0039 (energy consumption meter) to zero.

Possible Settings:

- 0 No reset
- 1 Reset r0039 to 0

Dependency:

No reset until "P" is pressed.

r0052	CO/BO: Act. status word 1	Datatype: U16	Unit: -	Min: -	Level
		P-Group: COMMANDS		Def: -	2

Displays first active status word of inverter (bit format) and can be used to diagnose inverter status.


Bitfields:

Bit00	Drive ready	0	NO	1	YES
Bit01	Drive ready to run	0	NO	1	YES
Bit02	Drive running	0	NO	1	YES
Bit03	Drive fault active	0	NO	1	YES
Bit04	OFF2 active	0	YES	1	NO
Bit05	OFF3 active	0	YES	1	NO
Bit06	ON inhibit active	0	NO	1	YES
Bit07	Drive warning active	0	NO	1	YES
Bit08	Deviation setpoint / act. value	0	YES	1	NO
Bit09	PZD control	0	NO	1	YES
Bit10	Maximum frequency reached	0	NO	1	YES
Bit11	Warning: Motor current limit	0	YES	1	NO
Bit12	Motor holding brake active	0	NO	1	YES
Bit13	Motor overload	0	YES	1	NO
Bit14	Motor runs right	0	NO	1	YES
Bit15	Inverter overload	0	YES	1	NO

Dependency:

r0052 Bit00 - Bit02:

State-sequence diagram after Power On or ON/OFF1 respectively: ==> see below

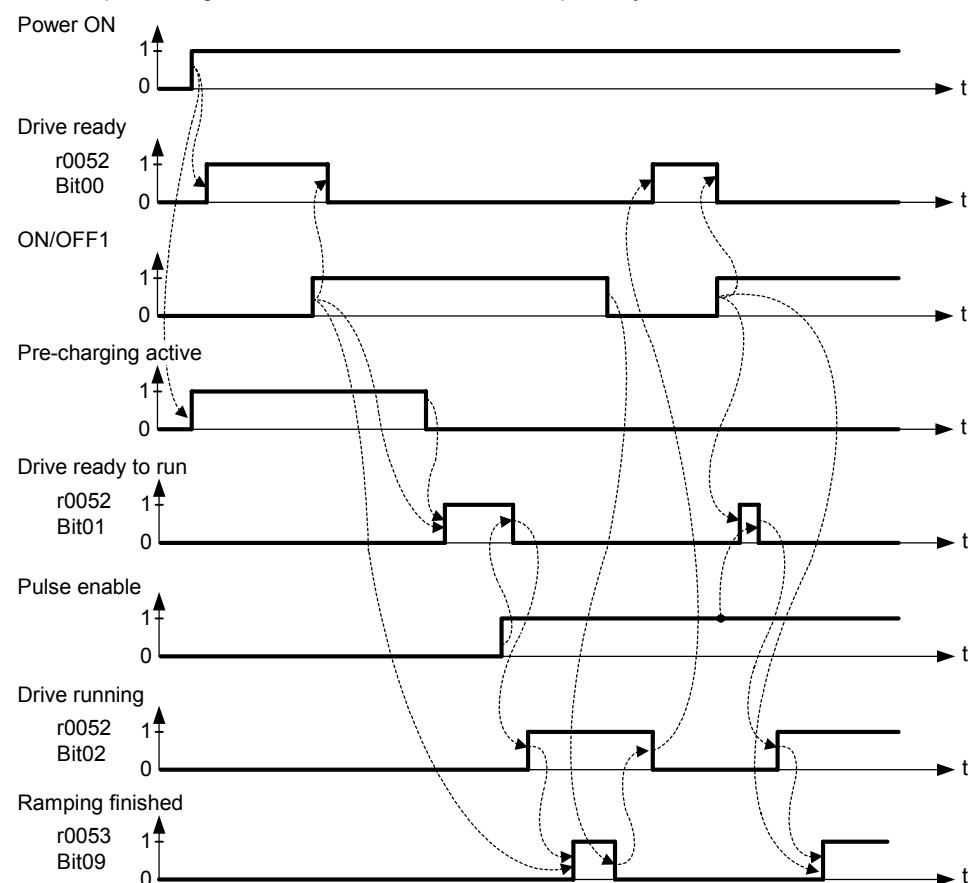

r0052 Bit03 "Drive fault active":


Output of Bit3 (Fault) will be inverted on digital output (Low = Fault, High = No Fault).

r0052 Bit08 "Deviation setpoint / act. value" ==> see parameter P2164

r0052 Bit10 "f_act >= P1082 (f_max)" ==> see parameter P1082

r0052 Bit12 "Motor holding brake active" ==> see parameter P1215

r0052 Bit14 "Motor runs right" ==> see below

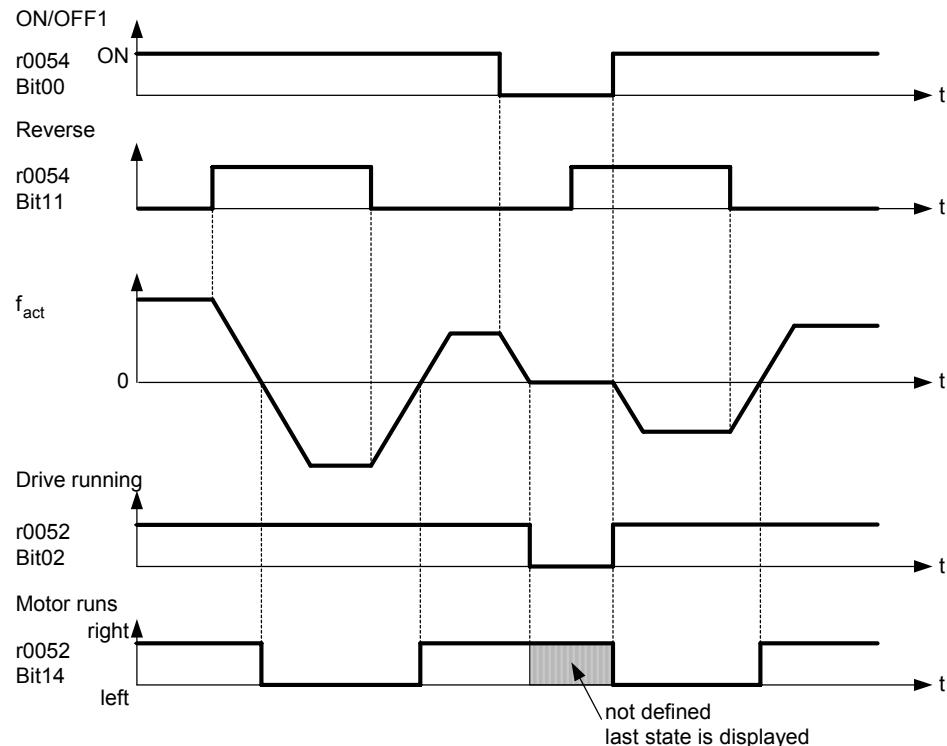

Details:

The 7-segment display of the bit-parameters (binary parameters) is explained in the Introduction of the Parameter List.

r0053	CO/BO: Act. status word 2	Datatype: U16	Unit: -	Min: -	Level
	P-Group: COMMANDS			Def: -	2

Displays second status word of inverter (in bit format).

Bitfields:

Bit00	DC brake active	0	NO	1	YES
Bit01	f_act > P2167 (f_off)	0	NO	1	YES
Bit02	f_act <= P1080 (f_min)	0	NO	1	YES
Bit03	Act. current r0027 <= P2170	0	NO	1	YES
Bit04	f_act > P2155 (f_1)	0	NO	1	YES
Bit05	f_act <= P2155 (f_1)	0	NO	1	YES
Bit06	f_act >= setpoint	0	NO	1	YES
Bit07	Act. Vdc r0026 < P2172	0	NO	1	YES
Bit08	Act. Vdc r0026 > P2172	0	NO	1	YES
Bit09	Ramping finished	0	NO	1	YES
Bit10	PID output r2294 == P2292 (PID_min)	0	NO	1	YES
Bit11	PID output r2294 == P2291 (PID_max)	0	NO	1	YES
Bit14	Download data set 0 from AOP	0	NO	1	YES
Bit15	Download data set 1 from AOP	0	NO	1	YES

Details:

See description of seven-segment display given in the "Introduction to MICROMASTER System Parameters" in this manual.

r0054	CO/BO: Act. control word 1	Datatype: U16	Unit: -	Min: -	Def: -	Level
	P-Group: COMMANDS			Max: -		3

Displays first control word of inverter and can be used to diagnose which commands are active.

Bitfields:

Bit00	ON/OFF1	0	NO	1	YES
Bit01	OFF2: Electrical stop	0	YES	1	NO
Bit02	OFF3: Fast stop	0	YES	1	NO
Bit03	Pulse enable	0	NO	1	YES
Bit04	RFG enable	0	NO	1	YES
Bit05	RFG start	0	NO	1	YES
Bit06	Setpoint enable	0	NO	1	YES
Bit07	Fault acknowledge	0	NO	1	YES
Bit08	JOG right	0	NO	1	YES
Bit09	JOG left	0	NO	1	YES
Bit10	Control from PLC	0	NO	1	YES
Bit11	Reverse (setpoint inversion)	0	NO	1	YES
Bit13	Motor potentiometer MOP up	0	NO	1	YES
Bit14	Motor potentiometer MOP down	0	NO	1	YES
Bit15	Local / Remote	0	NO	1	YES

Details:

See description of seven-segment display given in the "Introduction to MICROMASTER System Parameters" in this manual.

r0055	CO/BO: Act. control word 2	Datatype: U16	Unit: -	Min: -	Def: -	Level
	P-Group: COMMANDS			Max: -		3

Displays additional control word of inverter and can be used to diagnose which commands are active.

Bitfields:

Bit00	Fixed frequency Bit 0	0	NO	1	YES
Bit01	Fixed frequency Bit 1	0	NO	1	YES
Bit02	Fixed frequency Bit 2	0	NO	1	YES
Bit08	PID enabled	0	NO	1	YES
Bit09	DC brake enabled	0	NO	1	YES
Bit13	External fault 1	0	YES	1	NO

Details:

See description of seven-segment display given in the "Introduction to MICROMASTER System Parameters" in this handbook.

r0056	CO/BO: Status of motor control	Datatype: U16	Unit: -	Min: -	Def: -	Level
	P-Group: CONTROL			Max: -		3

Displays status of motor control (MM420: V/f status), which can be used to diagnose inverter status.

Bitfields:

Bit00	Init. control finished	0	NO	1	YES
Bit01	Motor demagnetizing finished	0	NO	1	YES
Bit02	Pulses enabled	0	NO	1	YES
Bit03	Voltage soft start select	0	NO	1	YES
Bit04	Motor excitation finished	0	NO	1	YES
Bit05	Starting boost active	0	NO	1	YES
Bit06	Acceleration boost active	0	NO	1	YES
Bit07	Frequency is negative	0	NO	1	YES
Bit08	Field weakening active	0	NO	1	YES
Bit09	Volts setpoint limited	0	NO	1	YES
Bit10	Slip frequency limited	0	NO	1	YES
Bit11	F_out > F_max Freq. limited	0	NO	1	YES
Bit12	Phase reversal selected	0	NO	1	YES
Bit13	I-max controller active	0	NO	1	YES
Bit14	Vdc-max controller active	0	NO	1	YES
Bit15	KIB (Vdc-min control) active	0	NO	1	YES

Details:


See description of seven-segment display given in the introduction.

r0067	CO: Act. output current limit	Datatype: Float	Unit: A	Min: -	Level
	P-Group: CONTROL			Def: -	3

Displays valid maximum output current of inverter.

Parameter r0067 is influenced/determined by the following factors:

- Rated motor current P0305
- Motor overload factor P0640
- Motor protection in dependency of P0610
- r0067 is less than or equal to maximum inverter current r0209
- Inverter protection in dependency of P0290

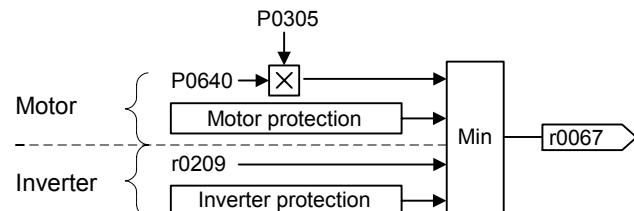


Note:

A reduction of r0067 may indicate an inverter overload or a motor overload.

r0071	CO: Max. output voltage	Datatype: Float	Unit: V	Min: -	Level
	P-Group: CONTROL			Def: -	3

Displays maximum output voltage.

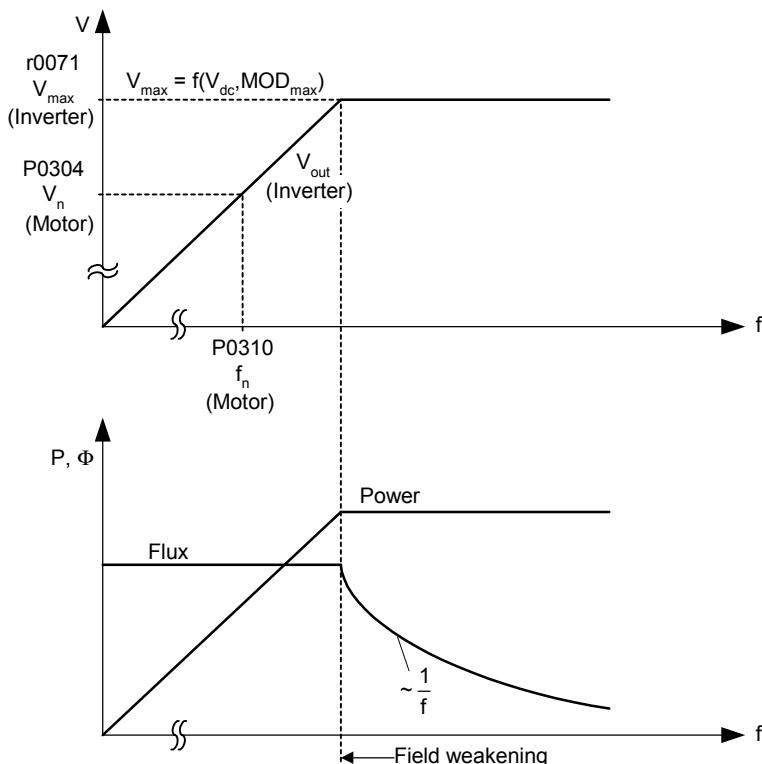

Dependency:

Actual maximum output voltage depends on the actual input supply voltage.

r0078	CO: Act. current lsq	Datatype: Float	Unit: A	Min: -	Level
	P-Group: CONTROL			Def: -	3

Displays component of torque generating current.

r0084	CO: Act. air gap flux	Datatype: Float	Unit: %	Min: -	Def: -	Level 4
	P-Group: CONTROL			Max: -		

Displays air gap flux in [%] relative to the rated motor flux.

r0086	CO: Act. active current	Datatype: Float	Unit: A	Min: -	Def: -	Level 3
	P-Group: CONTROL			Max: -		

Displays active (real part) of motor current.

Dependency:

Applies when V/f control is selected in P1300 (control mode); otherwise, the display shows the value zero.

P0100	Europe / North America	Datatype: U16	Unit: -	Min: 0	Def: 0	Level 1
	CStat: C P-Group: QUICK	Active: first confirm	QuickComm.: Yes	Max: 2		

Determines whether power settings (e.g. nominal rating plate power - P0307) are expressed in [kW] or [hp].

The default settings for the nominal rating plate frequency (P0310) and maximum motor frequency (P1082) are also set automatically here, in addition to reference frequency (P2000).

Possible Settings:

- 0 Europe [kW], frequency default 50 Hz
- 1 North America [hp], frequency default 60 Hz
- 2 North America [kW], frequency default 60 Hz


Dependency:

Where:

- Stop drive first (i.e. disable all pulses) before you change this parameter.
- Changing P0100 resets all rated motor parameters as well as other parameters that depend on the rated motor parameters (see P0340 - calculation of motor parameters).

Changing P0100 overwrites the settings of the DIP50/60 switch (location shown in the diagram below):

1. Parameter P0100 has an higher priority than the DIP50/60 switch.
2. However, after the inverter is powered-on again and $P0100 < 2$, the DIP50/60 setting will take priority and overwrite P0100.
3. The DIP50/60 switch does not have any effect, if $P0100 = 2$.

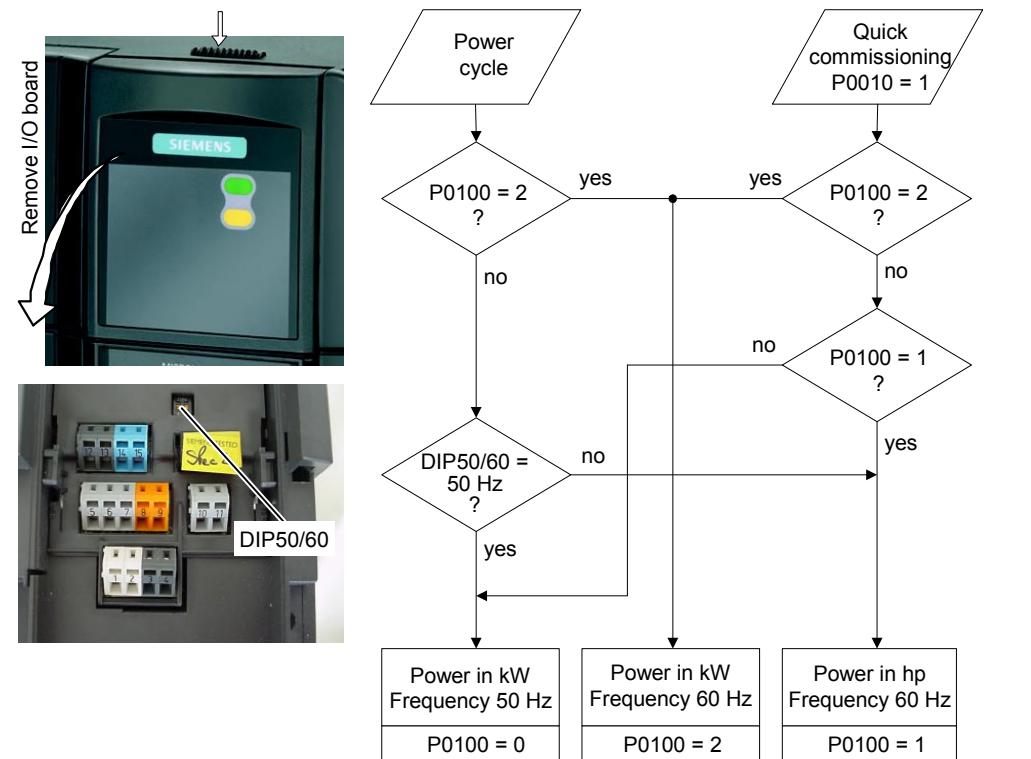

Notice:

P0100 setting 2 (==> [kW], frequency default 60 [Hz]) is not overwritten by the setting of DIP switch 2 (see diagram above).

P0199	Equipment system number	Min: 0	Level
CStat: UT	Datatype: U16	Def: 0	
P-Group: -	Unit: -	Max: 255	2

Equipment system number. This parameter has no operation effect.

r0200	Act. power stack code number	Min: -	Level
	Datatype: U32	Def: -	
P-Group: INVERTER	Unit: -	Max: -	3

Identifies hardware variant as shown in table below.

Code-No.	MM420 MLFB	Input Voltage & Frequency	CT Power kW	Internal Filter	Frame Size
1	6SE6420-2UC11-2AAx	1/3AC200-240V +10% -10% 47-63Hz	0,12	no	A
2	6SE6420-2UC12-5AAx	1/3AC200-240V +10% -10% 47-63Hz	0,25	no	A
3	6SE6420-2UC13-7AAx	1/3AC200-240V +10% -10% 47-63Hz	0,37	no	A
4	6SE6420-2UC15-5AAx	1/3AC200-240V +10% -10% 47-63Hz	0,55	no	A
5	6SE6420-2UC17-5AAx	1/3AC200-240V +10% -10% 47-63Hz	0,75	no	A
6	6SE6420-2UC21-1BAx	1/3AC200-240V +10% -10% 47-63Hz	1,1	no	B
7	6SE6420-2UC21-5BAx	1/3AC200-240V +10% -10% 47-63Hz	1,5	no	B
8	6SE6420-2UC22-2BAx	1/3AC200-240V +10% -10% 47-63Hz	2,2	no	B
9	6SE6420-2UC23-0CAx	1/3AC200-240V +10% -10% 47-63Hz	3	no	C
10	6SE6420-2UC24-0CAx	3AC200-240V +10% -10% 47-63Hz	4	no	C
11	6SE6420-2UC25-5CAx	3AC200-240V +10% -10% 47-63Hz	5,5	no	C
12	6SE6420-2AB11-2AAx	1AC200-240V +10% -10% 47-63Hz	0,12	Cl. A	A
13	6SE6420-2AB12-5AAx	1AC200-240V +10% -10% 47-63Hz	0,25	Cl. A	A
14	6SE6420-2AB13-7AAx	1AC200-240V +10% -10% 47-63Hz	0,37	Cl. A	A
15	6SE6420-2AB15-5AAx	1AC200-240V +10% -10% 47-63Hz	0,55	Cl. A	A
16	6SE6420-2AB17-5AAx	1AC200-240V +10% -10% 47-63Hz	0,75	Cl. A	A
17	6SE6420-2AB21-1BAx	1AC200-240V +10% -10% 47-63Hz	1,1	Cl. A	B
18	6SE6420-2AB21-5BAx	1AC200-240V +10% -10% 47-63Hz	1,5	Cl. A	B
19	6SE6420-2AB22-2BAx	1AC200-240V +10% -10% 47-63Hz	2,2	Cl. A	B
20	6SE6420-2AB23-0CAx	1AC200-240V +10% -10% 47-63Hz	3	Cl. A	C
21	6SE6420-2AB23-1CAx	3AC200-240V +10% -10% 47-63Hz	3	Cl. A	C
22	6SE6420-2AB24-0CAx	3AC200-240V +10% -10% 47-63Hz	4	Cl. A	C
23	6SE6420-2AB25-0CAx	3AC200-240V +10% -10% 47-63Hz	5,5	Cl. A	C
24	6SE6420-2UD13-7AAx	3AC380-480V +10% -10% 47-63Hz	0,37	no	A
25	6SE6420-2UD15-5AAx	3AC380-480V +10% -10% 47-63Hz	0,55	no	A
26	6SE6420-2UD17-5AAx	3AC380-480V +10% -10% 47-63Hz	0,75	no	A
27	6SE6420-2UD21-1AAx	3AC380-480V +10% -10% 47-63Hz	1,1	no	A
28	6SE6420-2UD21-5AAx	3AC380-480V +10% -10% 47-63Hz	1,5	no	A
29	6SE6420-2UD22-2BAx	3AC380-480V +10% -10% 47-63Hz	2,2	no	B
30	6SE6420-2UD23-0BAx	3AC380-480V +10% -10% 47-63Hz	3	no	B
31	6SE6420-2UD24-0BAx	3AC380-480V +10% -10% 47-63Hz	4	no	B
32	6SE6420-2UD25-5CAx	3AC380-480V +10% -10% 47-63Hz	5,5	no	C
33	6SE6420-2UD27-5CAx	3AC380-480V +10% -10% 47-63Hz	7,5	no	C
34	6SE6420-2UD31-1CAx	3AC380-480V +10% -10% 47-63Hz	11	no	C
35	6SE6420-2AD22-2BAx	3AC380-480V +10% -10% 47-63Hz	2,2	Cl. A	B
36	6SE6420-2AD23-0BAx	3AC380-480V +10% -10% 47-63Hz	3	Cl. A	B
37	6SE6420-2AD24-0BAx	3AC380-480V +10% -10% 47-63Hz	4	Cl. A	B
38	6SE6420-2AD25-5CAx	3AC380-480V +10% -10% 47-63Hz	5,5	Cl. A	C
39	6SE6420-2AD27-5CAx	3AC380-480V +10% -10% 47-63Hz	7,5	Cl. A	C
40	6SE6420-2AD31-1CAx	3AC380-480V +10% -10% 47-63Hz	11	Cl. A	C

Notice:

Parameter r0200 = 0 indicates that no power stack has been identified.

P0201	Power stack code number	Min: 0	Level
CStat: C	Datatype: U16	Def: 0	
P-Group: INVERTER	Unit: -	Max: 65535	3

Confirms actual power stack identified.

r0203	Act. inverter type	Datatype: U16	Unit: -	Min: -	Level
	P-Group: INVERTER			Def: -	3

Type number of actual inverter identified.

Possible Settings:

- 1 MICROMASTER 420
- 2 MICROMASTER 440
- 3 MICRO- / COMBIMASTER 411
- 4 MICROMASTER 410
- 5 Reserved
- 6 MICROMASTER 440 PX
- 7 MICROMASTER 430

r0204	Power stack features	Datatype: U32	Unit: -	Min: -	Level
	P-Group: INVERTER			Def: -	3

Displays hardware features of power stack.

Bitfields:

Bit00	DC input voltage	0 NO	1 YES
Bit01	RFI filter	0 NO	1 YES

Note:

Parameter r0204 = 0 indicates that no power stack has been identified.

r0206	Rated inverter power [kW] / [hp]	Datatype: Float	Unit: -	Min: -	Level
	P-Group: INVERTER			Def: -	2

Displays nominal rated motor power from inverter.

Dependency:

Value is displayed in [kW] or [hp] depending on setting for P0100 (operation for Europe / North America).

$$r0206 [\text{hp}] = 0.75 \cdot r0206 [\text{kW}]$$

r0207	Rated inverter current	Datatype: Float	Unit: A	Min: -	Level
	P-Group: INVERTER			Def: -	2

Displays maximum continuous output current of inverter.

r0208	Rated inverter voltage	Datatype: U32	Unit: V	Min: -	Level
	P-Group: INVERTER			Def: -	2

Displays nominal AC supply voltage of inverter.

Value:

- r0208 = 230 : 200 - 240 V +/- 10 %
- r0208 = 400 : 380 - 480 V +/- 10 %
- r0208 = 575 : 500 - 600 V +/- 10 %

r0209	Maximum inverter current	Datatype: Float	Unit: A	Min: -	Level
	P-Group: INVERTER			Def: -	2

Displays maximum output current of inverter.

Dependency:

Parameter r0209 depends on the derating which is affected by pulse frequency P1800, ambient temperature and altitude. The data of deration is given in the OPERATING INSTRUCTION.

P0210	Supply voltage	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 230
P-Group:	INVERTER	Unit: V	Max: 1000

Parameter P0210 defines the supply voltage. Its default value depends upon the type of inverter. If P0210 does not correspond to the supply voltage, then it must be modified.

When P0210 has been modified, the following thresholds are changed:

Dependency:

Optimizes Vdc controller, which extends the ramp-down time if regenerative energy from motor would otherwise cause DC link overvoltage trips.

Reducing the value enables controller to cut in earlier and reduce the risk of overvoltage.

Set P1254 ("Auto detect Vdc switch-on levels") = 0. Cut-in levels for Vdc-controller and compound braking are then derived directly from P0210 (supply voltage).

$$\text{Vdc_max switch-on level} = 1.15 \cdot \sqrt{2} \cdot \text{P0210}$$

$$\text{Compound braking switch-on level} = 1.13 \cdot \sqrt{2} \cdot \text{P0210}$$

Note:

If mains voltage is higher than value entered, automatic deactivation of the Vdc controller may occur to avoid acceleration of the motor. An alarm will be issued in this case (A0910).

r0231[2]	Max. cable length	Min: -	Level
	Datatype: U16	Unit: m	Def: -

Indexed parameter to display maximum allowable cable length between inverter and motor.

Index:

r0231[0] : Max. allowed unscreened cable length

r0231[1] : Max. allowed screened cable length

Notice:


For full EMC compliance, the screened cable must not exceed 25 m in length when an EMC filter is fitted.

P0290	Inverter overload reaction	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 2

Selects reaction of inverter to an internal over-temperature.

Following physical values influence the inverter overload protection (see diagram):

- heat sink temperature
- inverter i^2t

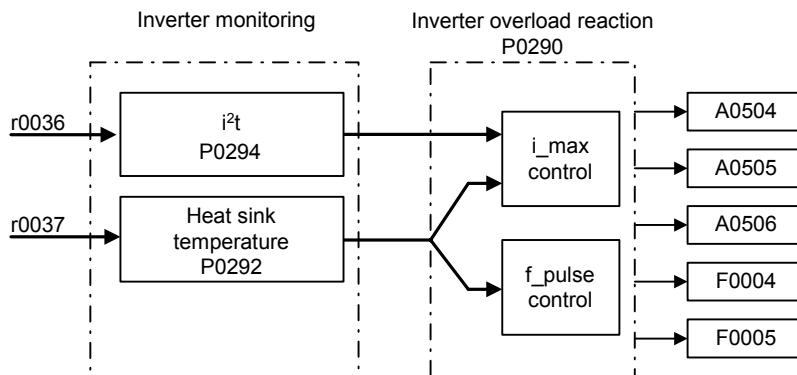

Possible Settings:

- 0 Reduce output frequency
- 1 Trip (F0004)
- 2 Reduce pulse frequency and output frequency
- 3 Reduce pulse frequency then trip (F0004)

Notice:

P0290 = 0:

Reduction of output frequency is only effective if the load is also reduced. This is for example valid for variable torque applications with a quadratic torque characteristic as pumps or fans.

A trip will always result, if the action taken does not sufficiently reduce internal temperature.

The pulse frequency P1800 is reduced only if higher than 2 kHz. The actual pulse frequency is displayed in parameter r1801.

P0292	Inverter temperature warning	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 15
P-Group:	INVERTER	Active: first confirm	Max: 25

Defines the temperature difference (in °C) between the Overtemperature trip threshold and the warning threshold of the inverter. The trip threshold is stored internally by the inverter and cannot be changed by the user.

Temperature warning threshold of inverter T_{warn} :

$$T_{\text{warn}} = T_{\text{trip}} - P0292 = 110 \text{ °C} - P0292$$

If the actual inverter temperature (r0037) exceeds the corresponding threshold, a warning A0504, if the temperature still increases then a fault F0004 will be displayed.

P0294	Inverter I2t overload warning	Min: 10.0	Level
CStat:	CUT	Datatype: Float	Def: 95.0
P-Group:	INVERTER	Active: first confirm	Max: 100.0

Defines the [%] value at which alarm A0505 (inverter I2t) is generated.

Inverter I2t calculation is used to determine a maximum tolerable period for inverter overload. The I2t calculation value is deemed = 100 % when this maximum tolerable period is reached.

Dependency:

That the output current of the inverter has been reduced and that the value of I2t does not exceed 100%.

Note:

P0294 = 100 % corresponds to stationary nominal load.

P0295	Inverter fan off delay time	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0
P-Group:	TERMINAL	Active: first confirm	Max: 3600

Defines inverter fan switch off delay time in seconds after drive has stopped.

Note:

Setting to 0, inverter fan will switch off when the drive stops, that is no delay.

P0300	Select motor type	Min: 1	Level
CStat:	C	Datatype: U16	Def: 1
P-Group:	MOTOR	Active: first confirm	Max: 2

Selects motor type.

This parameter is required during commissioning to select motor type and optimize inverter performance. Most motors are asynchronous; if in doubt, use the formula below.

$$x = P0310 \cdot \frac{60}{P0311}$$

$x = 1, 2, \dots, n$: Synchronous motor

$x \neq 1, 2, \dots, n$: Asynchronous motor

If the result is a whole number, the motor is synchronous.

Possible Settings:

- 1 Asynchronous motor
- 2 Synchronous motor

Dependency:


Changeable only when P0010 = 1 (quick commissioning).

If synchronous motor is selected, the following functions are not available:

- P0308 Power factor
- P0309 Motor efficiency
- P0346 Magnetization time
- P0347 Demagnetization time
- P1335 Slip compensation
- P1336 Slip limit
- P0320 Motor magnetizing current
- P0330 Rated motor slip
- P0331 Rated magnetization current
- P0332 Rated power factor
- P0384 Rotor time constant
- P1200, P1202, P1203 Flying start
- P1230, P1232, P1233 DC braking

P0304	Rated motor voltage	Min: 10	Level
CStat: C	Datatype: U16	Def: 230	1
P-Group: MOTOR	Active: first confirm	QuickComm.: Yes	Max: 2000

Nominal motor voltage [V] from rating plate. Following diagram shows a typical rating plate with the locations of the relevant motor data.

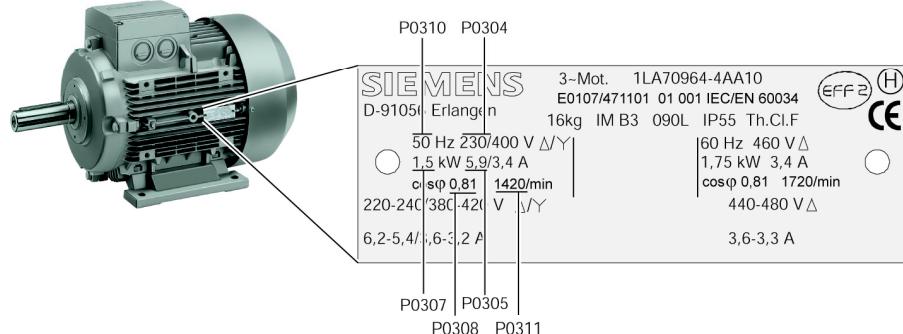
Dependency:


Changeable only when P0010 = 1 (quick commissioning).


Caution:


The input of rating plate data must correspond with the wiring of the motor (star / delta). This means, if delta wiring is used for the motor, delta rating plate data has to be entered.

Three-phase motor connection

Mains 3AC 230/400 V

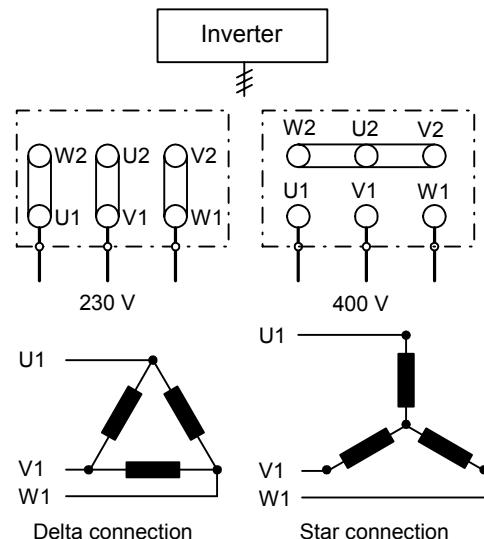

Mains 3AC 400/690 V

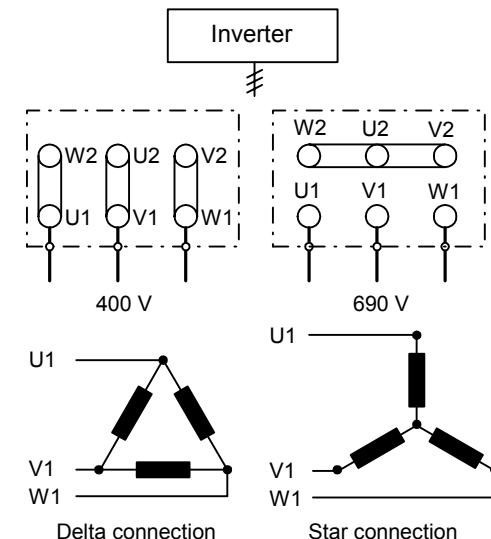

P0305	Rated motor current	Min: 0.01	Level
CStat:	C	Datatype: Float	Def: 3.25
P-Group:	MOTOR	Active: first confirm	Max: 10000.00

Nominal motor current [A] from rating plate - see diagram in P0304.

Dependency:

Changeable only when P0010 = 1 (quick commissioning).

Depends also on P0320 (motor magnetization current).

Note:

The maximum value of P0305 depends on the maximum inverter current r0209 and the motor type:

Asynchronous motor : P0305 max, asyn = r0209

Synchronous motor : P0305 max, syn = 2 · r0209

It is recommended that the ratio of P0305 (rated motor current) and r0207 (rated inverter current) should not be lower than:

$$V/f: \frac{1}{8} \leq \frac{P0305}{r0207}$$

The absolute minimum value of P0305 is defined as 1/32 times inverter rated current (r0207).

P0307	Rated motor power	Min: 0.01	Level
CStat:	C	Datatype: Float	Def: 0.12
P-Group:	MOTOR	Active: first confirm	Max: 2000.00

Nominal motor power [kW/hp] from rating plate.

Dependency:

If P0100 = 1, values will be in [hp] - see diagram P0304 (rating plate).

Changeable only when P0010 = 1 (quick commissioning).

P0308	Rated motor cosPhi	Min: 0.000	Level
CStat:	C	Datatype: Float	Def: 0.000
P-Group:	MOTOR	Active: first confirm	Max: 1.000

Nominal motor power factor (cosPhi) from rating plate - see diagram P0304.

Dependency:

Changeable only when P0010 = 1 (quick commissioning).

Visible only when P0100 = 0 or 2, (motor power entered in [kW]).

Setting 0 causes internal calculation of value (see r0332).

P0309	Rated motor efficiency	Min: 0.0	Level
CStat:	C	Datatype: Float	Def: 0.0
P-Group:	MOTOR	Active: first confirm	Max: 99.9

Nominal motor efficiency in [%] from rating plate.

Dependency:

Changeable only when P0010 = 1 (quick commissioning).

Visible only when P0100 = 1, (i.e. motor power entered in [hp]).

Setting 0 causes internal calculation of value (see r0332).

Note:

P0309 = 100 % corresponds to superconducting.

Details:

See diagram in P0304 (rating plate).

P0310	Rated motor frequency	Min: 12.00	Level
CStat:	C	Datatype: Float	Def: 50.00
P-Group:	MOTOR	Active: first confirm	Max: 650.00

Nominal motor frequency [Hz] from rating plate.

Dependency:

Changeable only when P0010 = 1 (quick commissioning).

Pole pair number recalculated automatically if parameter is changed.

Details:

See diagram in P0304 (rating plate)

P0311	Rated motor speed	Min: 0	Level
CStat:	C	Datatype: U16	Def: 0
P-Group:	MOTOR	Active: first confirm	Max: 40000

Nominal motor speed [rpm] from rating plate.

Dependency:

Changeable only when P0010 = 1 (quick commissioning).

Setting 0 causes internal calculation of value.

Required for vector control and V/f control with speed controller.

Slip compensation in V/f control requires rated motor speed for correct operation.

Pole pair number recalculated automatically if parameter is changed.

Details:

See diagram in P0304 (rating plate)

r0313	Motor pole pairs	Min: -	Level
P-Group:	MOTOR	Datatype: U16	Def: -

Displays number of motor pole pairs that the inverter is currently using for internal calculations.

Value:

r0313 = 1 : 2-pole motor
r0313 = 2 : 4-pole motor
etc.

Dependency:

Recalculated automatically when P0310 (rated motor frequency) or P0311 (rated motor speed) is changed.

$$r0313 = 60 \cdot \frac{P0310}{P0311}$$

P0320	Motor magnetizing current	Min: 0.0	Level
CStat:	CT	Datatype: Float	Def: 0.0
P-Group:	MOTOR	Active: Immediately	Max: 99.0

Defines motor magnetization current in [%] relative to P0305 (rated motor current).

Dependency:

P0320 = 0:

Setting 0 causes calculation by P0340 = 1 (data entered from rating plate) or by P3900 = 1 - 3 (end of quick commissioning). The calculated value is displayed in parameter r0331.

r0330	Rated motor slip	Min: -	Level
P-Group:	MOTOR	Datatype: Float	Def: -

Displays nominal motor slip in [%] relative to P0310 (rated motor frequency) and P0311 (rated motor speed).

$$r0330 [\%] = \frac{P0310 - \frac{P0311}{60} \cdot r0313}{P0310} \cdot 100 \%$$

r0331	Rated magnetization current	Min: -	Level
P-Group:	MOTOR	Datatype: Float	Def: -

Displays calculated magnetizing current of motor in [A].

r0332	Rated power factor	Min: -	Level
P-Group:	MOTOR	Datatype: Float	Def: -

Displays power factor for motor

Dependency:

Value is calculated internally if P0308 (rated motor cosPhi) set to 0; otherwise, value entered in P0308 is displayed.

P0335	Motor cooling	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 0
P-Group:	MOTOR	Active: first confirm	Max: 1

Selects motor cooling system used.

Possible Settings:

- 0 Self-cooled: Using shaft mounted fan attached to motor
- 1 Force-cooled: Using separately powered cooling fan

Caution:

The following combination of parameter setting should not be combined:

P0610 = 1 and P0335 = 0 or 2 :

When P0335 = 0 or 2 the inverter cools the motor using a shaft mounted fan. If this is used in conjunction with P0610 the cooling of the motor will be inefficient.

In essence, if the i2t calculation reduces the output frequency, then the shaft mounted fan will also reduce its cooling effect, the motor will then eventually overheat and trip.

Exception:

Applications with variable torque the reduction of max. current leads automatically to a reduction of the load / output current.

Notice:

Motors of series 1LA1 and 1LA8 have an internal fan. This internal motor fan must not be confused with the fan at the end of the motor shaft.

P0340	Calculation of motor parameters	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 0
P-Group:	MOTOR	Active: first confirm	Max: 1

Calculates various motor parameters (see table below):

P0340 = 1	
P0344 Motor weight	x
P0346 Magnetization time	x
P0347 Demagnetization time	x
P0350 Stator resistance (line-to-line)	x
P0611 Motor I2t time constant	x
P1253 Vdc-controller output limitation	x
P1316 Boost end frequency	x
P2000 Reference frequency	x
P2002 Reference current	x

Possible Settings:

- 0 No calculation
- 1 Complete parameterization

Note:

This parameter is required during commissioning to optimize inverter performance.

P0344	Motor weight	Min: 1.0	Level
CStat:	CUT	Datatype: Float	Def: 9.4
P-Group:	MOTOR	Active: Immediately	Max: 6500.0

Specifies motor weight [kg].

Note:

This value is used in the motor thermal model.

It is normally calculated automatically from P0340 (motor parameters) but can also be entered manually.

P0346	Magnetization time	Min: 0.000	Level
CStat:	CUT	Datatype: Float	Def: 1.000
P-Group:	MOTOR	Active: Immediately	Max: 20.000

Sets magnetization time [s], i.e. waiting time between pulse enable and start of ramp-up. Motor magnetization builds up during this time.

Magnetization time is normally calculated automatically from the motor data and corresponds to the rotor time constant (r0384).

Note:

If boost settings are higher than 100 %, magnetization may be reduced.

Notice:

An excessive reduction of this time can result in insufficient motor magnetization.

P0347	Demagnetization time	Min: 0.000	Level
CStat:	CUT	Datatype: Float	Def: 1.000
P-Group:	MOTOR	Active: Immediately	Max: 20.000

Changes time allowed after OFF2 / fault condition, before pulses can be re-enabled.

Note:

The demagnetization time is approximately 2.5 x rotor time constant (r0384) in seconds.

Notice:

Not active following a normally completed ramp-down, e.g. after OFF1, OFF3 or JOG.

Overcurrent trips will occur if the time is decreased excessively.

P0350	Stator resistance (line-to-line)	Min: 0.00001	Level
CStat:	CUT	Datatype: Float	Def: 4.00000
P-Group:	MOTOR	Active: Immediately	Max: 2000.00000

Stator resistance value in [Ohms] for connected motor (from line-to-line). The parameter value includes the cable resistance.

There are three ways to determine the value for this parameter:

1. Calculate using
 - P0340 = 1 (data entered from rating plate) or
 - P0010 = 1, P3900 = 1,2 or 3 (end of quick commissioning).
2. Measure using P1910 = 1 (motor data identification - value for stator resistance is overwritten).
3. Measure manually using an Ohmmeter.

Note:

Since measured line-to-line, this value may appear to be higher (up to 2 times higher) than expected.

The value entered in P0350 (stator resistance) is the one obtained by the method last used.

r0370	Stator resistance [%]	Min: -	Level
P-Group:	MOTOR	Datatype: Float	Def: - Max: -

Displays standardized stator resistance of motor equivalent circuit (phase value) in [%] of the temperature value in P0625.

Note:

$$100 \% \Leftrightarrow Z_N = \frac{V_{ph}}{I_{ph}} = \frac{V_N}{\sqrt{3} \cdot I_N} = \frac{P0304}{\sqrt{3} \cdot P0305}$$

r0372	Cable resistance [%]	Min: -	Level
P-Group:	MOTOR	Datatype: Float	Def: - Max: -

Displays standardized cable resistance of motor equivalent circuit (phase value) in [%]. It is estimated to be 20 % of the stator resistance.

Note:

$$100 \% \Leftrightarrow Z_N = \frac{V_{ph}}{I_{ph}} = \frac{V_N}{\sqrt{3} \cdot I_N} = \frac{P0304}{\sqrt{3} \cdot P0305}$$

r0373	Rated stator resistance [%]	Min: -	Level
P-Group:	MOTOR	Datatype: Float	Def: - Max: -

Displays rated stator resistance of the motor equivalent circuit (phase value) in [%] of the temperature values in P0625 and P0627.

Note:

$$100 \% \Leftrightarrow Z_N = \frac{V_{ph}}{I_{ph}} = \frac{V_N}{\sqrt{3} \cdot I_N} = \frac{P0304}{\sqrt{3} \cdot P0305}$$

r0374	Rotor resistance [%]	Min: -	Level
P-Group:	MOTOR	Datatype: Float	Def: - Max: -

Displays standardized rotor resistance of the motor equivalent circuit (phase value) in [%] of the temperature value in P0625.

Note:

$$100 \% \Leftrightarrow Z_N = \frac{V_{ph}}{I_{ph}} = \frac{V_N}{\sqrt{3} \cdot I_N} = \frac{P0304}{\sqrt{3} \cdot P0305}$$

r0376	Rated rotor resistance [%] P-Group: MOTOR	Datatype: Float	Unit: %	Min: - Def: - Max: -	Level 4
Displays rated rotor resistance of the motor equivalent circuit (phase value) in [%] of the temperature values in P0625 and P0628.					
Note:	$100 \% \Leftrightarrow Z_N = \frac{V_{ph}}{I_{ph}} = \frac{V_N}{\sqrt{3} \cdot I_N} = \frac{P0304}{\sqrt{3} \cdot P0305}$				
r0377	Total leakage reactance [%] P-Group: MOTOR	Datatype: Float	Unit: %	Min: - Def: - Max: -	Level 4
Displays standardized total leakage reactance of the motor equivalent circuit (phase value) in [%] of the temperature value in P0625.					
Note:	$100 \% \Leftrightarrow Z_N = \frac{V_{ph}}{I_{ph}} = \frac{V_N}{\sqrt{3} \cdot I_N} = \frac{P0304}{\sqrt{3} \cdot P0305}$				
r0382	Main reactance [%] P-Group: MOTOR	Datatype: Float	Unit: %	Min: - Def: - Max: -	Level 4
Displays standardized main reactance of the motor equivalent circuit (phase value) in [%] of the temperature value in P0625..					
Note:	$100 \% \Leftrightarrow Z_N = \frac{V_{ph}}{I_{ph}} = \frac{V_N}{\sqrt{3} \cdot I_N} = \frac{P0304}{\sqrt{3} \cdot P0305}$				
r0384	Rotor time constant P-Group: MOTOR	Datatype: Float	Unit: ms	Min: - Def: - Max: -	Level 3
Displays calculated rotor time constant [ms].					
r0386	Total leakage time constant P-Group: MOTOR	Datatype: Float	Unit: ms	Min: - Def: - Max: -	Level 4
Displays total leakage time constant of motor.					
r0395	CO: Total stator resistance [%] P-Group: MOTOR	Datatype: Float	Unit: %	Min: - Def: - Max: -	Level 3
Displays stator resistance of motor (combined stator/cable resistance) in [%] of the temperature value in r0632.					
Note:	$100 \% \Leftrightarrow Z_N = \frac{V_{ph}}{I_{ph}} = \frac{V_N}{\sqrt{3} \cdot I_N} = \frac{P0304}{\sqrt{3} \cdot P0305}$				
P0610	Motor I²t reaction CStat: CT P-Group: MOTOR	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	Min: 0 Def: 2 Max: 2	Level 3
Defines reaction when motor I ² t reaches warning threshold.					
Possible Settings:					
0 Warning, no reaction, no trip 1 Warning, I _{max} reduction, trip F0011 2 Warning, no reaction, trip F0011					
Dependency:					
$i^2 t_{trip} [\%] = i^2 t_{warn} [\%] \cdot 1.1 = P0614 \cdot 1.1$					
Note:	P0610 = 1: If the max. permissible current I _{max} is reduced, this results in a lower output frequency. The motor I ² t monitoring function is used to protect the motor against overheating. The motor temperature will be dependent on many factors, including the size of the motor, the ambient temperature, the previous history of the motor's loading, and of course, the load current. (The square of the current actually determines the heating of the motor and the temperature rises with time - hence I ² t). Because most motors are cooled by fans integrated in the motor and running at the motor speed, the speed of the motor is also important. Clearly a motor running with a high current (maybe due to boost) and a low speed, will overheat more quickly than one running at 50 or 60 Hz, full load. The MM4 take account of these factors.				

P0611	Motor I²t time constant	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 100
P-Group:	MOTOR	Active: Immediately	Max: 16000

Thermal Time constant for the motor.

The time until the thermal limit of a motor is reached, is calculated via the thermal time constant. A higher value increases the time at which the motor thermal limit is reached.

The value of P0611 is estimated according to the motor data during quick commissioning or is calculated using P0340 (Calculating of the motor parameters). When the calculation of motor parameters during quick commission is complete the stored value can be replaced by the value given by the motor manufacturer.

Example:

For a 2 pole 1LA7063 motor the value is 8 min (see table). The value for P0611 is calculated as follows:

$$P0611 = 8 \text{ min} \cdot 60 \frac{\text{s}}{\text{min}} = 480 \text{ s}$$

For Siemens standard motors 1LA7 the thermal time constant values are given in minutes (see following table):

Type	2 pole	4 pole	6 pole	8 pole
1LA7050	13	13	-	-
1LA7053	13	13	-	-
1LA7060	8	11	-	-
1LA7063	8	13	12	-
1LA7070	8	10	12	12
1LA7073	8	10	12	12
1LA7080	8	10	12	12
1LA7083	10	10	12	12
1LA7090	5	9	12	12
1LA7096	6	11	12	14
1LA7106	8	12	12	16
1LA7107	-	12	-	16
1LA7113	14	11	13	12
1LA7130	11	10	13	10
1LA7131	11	-	-	-
1LA7133	-	10	14	10
1LA7134	-	-	16	-
1LA7163	15	19	20	12
1LA7164	15	-	-	14
1LA7166	15	19	20	14

Dependency:

P0611 < 99 s (I²t-calculation inactive):

To activate I²t calculation set P0611 to a value > 99 s.

Note:

Mode of operation of I²t:


The square of the normalized motor current (measured motor current r0027 divided by the rated motor current P0305) weighted with the thermal motor time constant results in the I²t value of the motor.

In addition, the output frequency (motor speed) is incorporated in the calculation to take into consideration the cooling effect of the motor fan. If parameter P0335 is changed to a force-ventilated motor, then the calculation is appropriately modified.

The I²t value represents a dimension for the temperature rise / temperature of the motor.

If users do not enter parameters such as P0344 (motor weight), then a value, based on a Siemens motor is used. When required, the motor time constant can be changed using P0611, which is the same as overwriting the calculated value.

The I²t value that is obtained is displayed in r0034. If this value reaches the value defined in P0614 (default: 100%), an alarm message A0511 is output and, depending on P0610 a response is initiated or, when a shutdown threshold is reached, a fault is output.

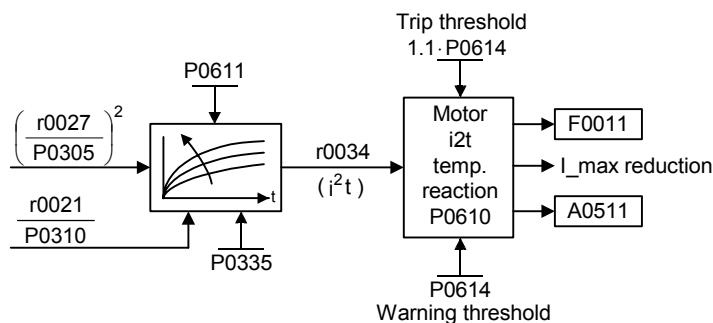

P0614	Motor I2t warning level	Min: 0.0	Level
CStat: CUT P-Group: MOTOR	Datatype: Float Active: first confirm	Def: 100.0 Max: 400.0	2

Defines the [%] value at which alarm A0511 (motor overtemperature) is generated.

The motor temperature will be dependent on many factors, including the size of the motor, the ambient temperature, the previous history of the loading of the motor, and of course, the load current. (The square of the current actually determines the heating of the motor and the temperature rises with time - hence I^2t). A motor- I^2t -value of 100 % means that the motor has reached its maximum permissible operating temperature. The actual I^2t -value is displayed in parameter r0034.

Dependency:

A motor over-temperature trip (F0011) is produced at 110 % of this level.

$$I^2t_{trip} [\%] = I^2t_{warn} [\%] \cdot 1.1 = P0614 \cdot 1.1$$

P0640	Motor overload factor [%]	Min: 10.0	Level
CStat: CUT P-Group: MOTOR	Datatype: Float Active: Immediately	Def: 150.0 Max: 400.0	2

Defines motor overload current limit in [%] relative to P0305 (rated motor current).

Dependency:

Limited to maximum inverter current or to 400 % of rated motor current (P0305), whichever is the lower.

$$P0640_{max} = \frac{\min(r0209, 4 \cdot P0305)}{P0305} \cdot 100$$

Details:

See function diagram for current limitation.

P0700	Selection of command source	Min: 0	Level
CStat: CT P-Group: COMMANDS	Datatype: U16 Active: first confirm	Def: 2 Max: 6	1


Selects digital command source.

Possible Settings:

- 0 Factory default setting
- 1 BOP (keypad)
- 2 Terminal
- 4 USS on BOP link
- 5 USS on COM link
- 6 CB on COM link

Example:

Changing from P0700 = 1 to P0700 = 2 sets all digital inputs to default settings.

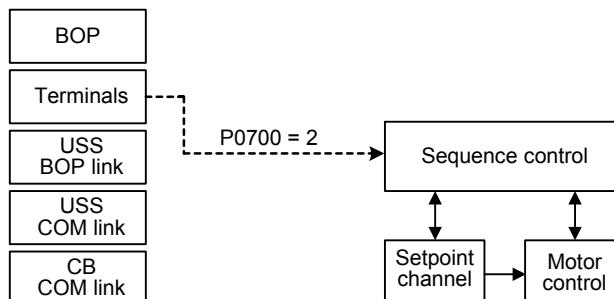

Caution:

Be aware, by changing of parameter P0700 all BI parameters are reset to the default value or modified as listed in the table below.

If the Inverter is being controlled via the AOP, select USS (with the corresponding interface) for the Command Source. If the AOP is connected to the BOP-Link Interface, then set Parameter P0700 to the value 4 (P0700 = 4).

Note:

Changing this parameter sets (to default) all settings on item selected (see table).

	P0700 = 0	P0700 = 1	P0700 = 2	P0700 = 4	P0700 = 5	P0700 = 6
P0701	1	0	1	0	0	0
P0702	12	0	12	0	0	0
P0703	9	9	9	9	9	9
P0704	0	0	0	0	0	0
P0705	15	15	15	15	15	15
P0731	52.3	52.3	52.3	52.3	52.3	52.3
P0800	0.0	0.0	0.0	0.0	0.0	0.0
P0801	0.0	0.0	0.0	0.0	0.0	0.0
P0840	722.0	19.0	722.0	2032.0	2036.0	2090.0
P0842	0.0	0.0	0.0	0.0	0.0	0.0
P0844	1.0	19.1	1.0	2032.1	2036.1	2090.1
P0845	19.1	19.1	19.1	19.1	19.1	19.1
P0848	1.0	1.0	1.0	2032.2	2036.2	2090.2
P0849	1.0	1.0	1.0	1.0	1.0	1.0
P0852	1.0	1.0	1.0	2032.3	2036.3	2090.3
P1020	0.0	0.0	0.0	0.0	0.0	0.0
P1021	0.0	0.0	0.0	0.0	0.0	0.0
P1022	0.0	0.0	0.0	0.0	0.0	0.0
P1035	19.13	19.13	19.13	2032.13	2036.13	2090.13
P1036	19.14	19.14	19.14	2032.14	2036.14	2090.14
P1055	0.0	19.8	0.0	2032.8	2036.8	2090.8
P1056	0.0	0.0	0.0	2032.9	2036.9	2090.9
P1074	0.0	0.0	0.0	0.0	0.0	0.0
P1110	0.0	0.0	0.0	0.0	0.0	0.0
P1113	722.1	19.11	722.1	2032.11	2036.11	2090.11
P1124	0.0	0.0	0.0	0.0	0.0	0.0
P1140	1.0	1.0	1.0	2032.4	2036.4	2090.4
P1141	1.0	1.0	1.0	2032.5	2036.5	2090.5
P1142	1.0	1.0	1.0	2032.6	2036.6	2090.6
P1230	0.0	0.0	0.0	0.0	0.0	0.0
P2103	722.2	722.2	722.2	722.2	722.2	722.2
P2104	0.0	0.0	0.0	2032.7	2036.7	2090.7
P2106	1.0	1.0	1.0	1.0	1.0	1.0
P2200	0.0	0.0	0.0	0.0	0.0	0.0
P2220	0.0	0.0	0.0	0.0	0.0	0.0
P2221	0.0	0.0	0.0	0.0	0.0	0.0
P2222	0.0	0.0	0.0	0.0	0.0	0.0
P2235	19.13	19.13	19.13	2032.13	2036.13	2090.13
P2236	19.14	19.14	19.14	2032.14	2036.14	2090.14


The following parameters are not overwritten when changing P0700:

P0810

P0701	Function of digital input 1	Min: 0	Level 2
CStat: CT P-Group: COMMANDS	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	Def: 1 Max: 99

Selects function of digital input 1.

DIN channel (e.g. DIN1 - PNP)

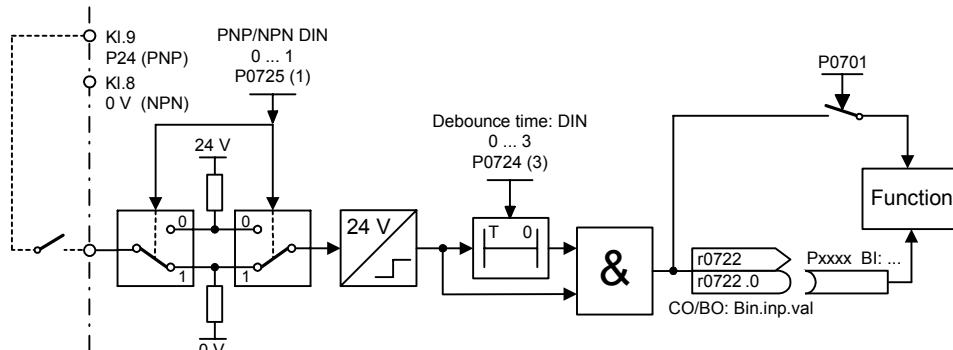

Possible Settings:

- 0 Digital input disabled
- 1 ON/OFF1
- 2 ON reverse /OFF1
- 3 OFF2 - coast to standstill
- 4 OFF3 - quick ramp-down
- 9 Fault acknowledge
- 10 JOG right
- 11 JOG left
- 12 Reverse
- 13 MOP up (increase frequency)
- 14 MOP down (decrease frequency)
- 15 Fixed setpoint (Direct selection)
- 16 Fixed setpoint (Direct selection + ON)
- 17 Fixed setpoint (Binary coded selection + ON)
- 21 Local/remote
- 25 DC brake enable
- 29 External trip
- 33 Disable additional freq setpoint
- 99 Enable BICO parameterization

Dependency:

- Setting 99 (enable BICO parameterization) requires
 - P0700 command source or
 - P0010 = 1, P3900 = 1, 2 or 3 quick commissioning or
 - P0010 = 30, P0970 = 1 factory reset in order to reset.

Notice:

Setting 99 (BICO) for expert use only.

P0702	Function of digital input 2	Min: 0	Level 2
CStat: CT P-Group: COMMANDS	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	Def: 12 Max: 99

Selects function of digital input 2.

Possible Settings:

- 0 Digital input disabled
- 1 ON/OFF1
- 2 ON reverse /OFF1
- 3 OFF2 - coast to standstill
- 4 OFF3 - quick ramp-down
- 9 Fault acknowledge
- 10 JOG right
- 11 JOG left
- 12 Reverse
- 13 MOP up (increase frequency)
- 14 MOP down (decrease frequency)
- 15 Fixed setpoint (Direct selection)
- 16 Fixed setpoint (Direct selection + ON)
- 17 Fixed setpoint (Binary coded selection + ON)
- 21 Local/remote
- 25 DC brake enable
- 29 External trip
- 33 Disable additional freq setpoint
- 99 Enable BICO parameterization

Details:

See P0701 (function of digital input1).

P0703	Function of digital input 3				Min: 0	Level
CStat:	CT	Datatype: U16	Unit: -	Def: 9		
P-Group:	COMMANDS	Active: first confirm	QuickComm.: No	Max: 99	2	

Selects function of digital input 3.

Possible Settings:

- 0 Digital input disabled
- 1 ON/OFF1
- 2 ON reverse /OFF1
- 3 OFF2 - coast to standstill
- 4 OFF3 - quick ramp-down
- 9 Fault acknowledge
- 10 JOG right
- 11 JOG left
- 12 Reverse
- 13 MOP up (increase frequency)
- 14 MOP down (decrease frequency)
- 15 Fixed setpoint (Direct selection)
- 16 Fixed setpoint (Direct selection + ON)
- 17 Fixed setpoint (Binary coded selection + ON)
- 21 Local/remote
- 25 DC brake enable
- 29 External trip
- 33 Disable additional freq setpoint
- 99 Enable BICO parameterization

Details:

See P0701 (function of digital input 1).

P0704	Function of digital input 4				Min: 0	Level
CStat:	CT	Datatype: U16	Unit: -	Def: 0		
P-Group:	COMMANDS	Active: first confirm	QuickComm.: No	Max: 99	2	

Selects function of digital input 4 (via analog input).

Possible Settings:

- 0 Digital input disabled
- 1 ON/OFF1
- 2 ON reverse /OFF1
- 3 OFF2 - coast to standstill
- 4 OFF3 - quick ramp-down
- 9 Fault acknowledge
- 10 JOG right
- 11 JOG left
- 12 Reverse
- 13 MOP up (increase freq.)
- 14 MOP down (decrease freq.)
- 21 Local/remote
- 25 DC brake enable
- 29 External trip
- 33 Disable additional freq setpoint
- 99 Enable BICO parameterization

Details:

See P0701 (function of digital input 1).

P0719[2]	Selection of cmd. & freq. setup.	Min: 0	Level
CStat: CT	Datatype: U16	Unit: -	Def: 0
P-Group: COMMANDS	Active: first confirm	QuickComm.: No	Max: 66

Central switch to select control command source for inverter.

Switches command and setpoint source between freely programmable BICO parameters and fixed command/setpoint profiles. Command and setpoint sources can be changed independently.

The tens digit chooses the command source and the units digit chooses the setpoint source.

The two indices of this parameter are used for local/remote switching. The local/remote signal switches between these settings.

The default setting is 0 for the first index (i.e. normal parameterization is active).

The second index is for control via BOP (i.e. activating the local/remote signal will then switch to BOP).

Possible Settings:

- 0 Cmd = BICO parameter Setpoint = BICO parameter
- 1 Cmd = BICO parameter Setpoint = MOP setpoint
- 2 Cmd = BICO parameter Setpoint = Analog setpoint
- 3 Cmd = BICO parameter Setpoint = Fixed frequency
- 4 Cmd = BICO parameter Setpoint = USS on BOP link
- 5 Cmd = BICO parameter Setpoint = USS on COM link
- 6 Cmd = BICO parameter Setpoint = CB on COM link
- 10 Cmd = BOP Setpoint = BICO parameter
- 11 Cmd = BOP Setpoint = MOP setpoint
- 12 Cmd = BOP Setpoint = Analog setpoint
- 13 Cmd = BOP Setpoint = Fixed frequency
- 15 Cmd = BOP Setpoint = USS on COM link
- 16 Cmd = BOP Setpoint = CB on COM link
- 40 Cmd = USS on BOP link Setpoint = BICO parameter
- 41 Cmd = USS on BOP link Setpoint = MOP setpoint
- 42 Cmd = USS on BOP link Setpoint = Analog setpoint
- 43 Cmd = USS on BOP link Setpoint = Fixed frequency
- 44 Cmd = USS on BOP link Setpoint = USS on BOP link
- 45 Cmd = USS on BOP link Setpoint = USS on COM link
- 46 Cmd = USS on BOP link Setpoint = CB on COM link
- 50 Cmd = USS on COM link Setpoint = BICO parameter
- 51 Cmd = USS on COM link Setpoint = MOP setpoint
- 52 Cmd = USS on COM link Setpoint = Analog setpoint
- 53 Cmd = USS on COM link Setpoint = Fixed frequency
- 54 Cmd = USS on COM link Setpoint = USS on BOP link
- 55 Cmd = USS on COM link Setpoint = USS on COM link
- 60 Cmd = CB on COM link Setpoint = BICO parameter
- 61 Cmd = CB on COM link Setpoint = MOP setpoint
- 62 Cmd = CB on COM link Setpoint = Analog setpoint
- 63 Cmd = CB on COM link Setpoint = Fixed frequency
- 64 Cmd = CB on COM link Setpoint = USS on BOP link
- 66 Cmd = CB on COM link Setpoint = CB on COM link

Index:

P0719[0] : 1st Control source (Remote)

P0719[1] : 2nd Control source (Local)

Note:

If set to a value other than 0 (i.e. BICO parameter is not the setpoint source), P0844 / P0848 (first source of OFF2 / OFF3) are not effective; instead, P0845 / P0849 (second source of OFF2 / OFF3) apply and the OFF commands are obtained via the particular source defined.

BICO connections made previously remain unchanged.

r0720	Number of digital inputs	Min: -	Level
	Datatype: U16	Unit: -	Def: -

P-Group: COMMANDS

Max: -

3

Displays number of digital inputs.

r0722	CO/BO: Binary input values	Datatype: U16	Unit: -	Min: -	Def: -	Max: -	Level 2
	P-Group: COMMANDS						

Displays status of digital inputs.

Bitfields:

Bit00	Digital input 1	0	OFF	1	ON
Bit01	Digital input 2	0	OFF	1	ON
Bit02	Digital input 3	0	OFF	1	ON
Bit03	Digital input 4 (via ADC)	0	OFF	1	ON

Note:

Segment is lit when signal is active.

P0724	Debounce time for digital inputs	Datatype: U16	Unit: -	Min: 0	Def: 3	Max: 3	Level 3
	CStat: CT	P-Group: COMMANDS	Active: Immediately	QuickComm.: No			

Defines debounce time (filtering time) used for digital inputs.

Possible Settings:

- 0 No debounce time
- 1 2.5 ms debounce time
- 2 8.2 ms debounce time
- 3 12.3 ms debounce time

P0725	PNP / NPN digital inputs	Datatype: U16	Unit: -	Min: 0	Def: 1	Max: 1	Level 3
	CStat: CT	P-Group: COMMANDS	Active: Immediately	QuickComm.: No			

Switches between active high (PNP) and active low (NPN). This is valid for all digital inputs simultaneously.

The following is valid by using the internal supply:

Possible Settings:

- 0 NPN mode ==> low active
- 1 PNP mode ==> high active

Value:

NPN: Terminals 5/6/7 must be connected via terminal 9 (0 V).


PNP: Terminals 5/6/7 must be connected via terminal 8 (24 V).

r0730	Number of digital outputs	Datatype: U16	Unit: -	Min: -	Def: -	Max: -	Level 3
	P-Group: COMMANDS						

Displays number of digital outputs (relays).

P0731	BI: Function of digital output 1			Min: 0:0	Level
CStat:	CUT	Datatype: U32	Unit: -	Def: 52:3	
P-Group:	COMMANDS	Active: first confirm	QuickComm.: No	Max: 4000:0	2

Defines source of digital output 1.

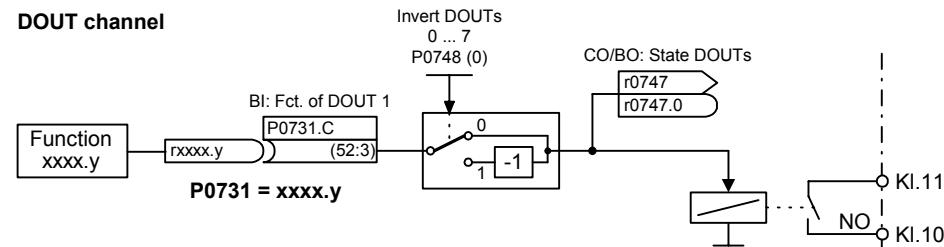

Common Settings:

52.0 Drive ready	0	Closed
52.1 Drive ready to run	0	Closed
52.2 Drive running	0	Closed
52.3 Drive fault active	0	Closed
52.4 OFF2 active	1	Closed
52.5 OFF3 active	1	Closed
52.6 Switch on inhibit active	0	Closed
52.7 Drive warning active	0	Closed
52.8 Deviation setpoint/actual value	1	Closed
52.9 PZD control (Process Data Control)	0	Closed
52.A Maximum frequency reached	0	Closed
52.B Warning: Motor current limit	1	Closed
52.C Motor holding brake (MHB) active	0	Closed
52.D Motor overload	1	Closed
52.E Motor running direction right	0	Closed
52.F Inverter overload	1	Closed
53.0 DC brake active	0	Closed
53.1 Act. freq. f_act > P2167 (f_off)	0	Closed
53.2 Act. freq. f_act <= P1080 (f_min)	0	Closed
53.3 Act. current r0027 <= P2170	0	Closed
53.4 Act. freq. f_act > P2155 (f_1)	0	Closed
53.5 Act. freq. f_act <= P2155 (f_1)	0	Closed
53.6 Act. freq. f_act >= setpoint	0	Closed
53.7 Act. Vdc r0026 < P2172	0	Closed
53.8 Act. Vdc r0026 > P2172	0	Closed
53.A PID output r2294 == P2292 (PID_min)	0	Closed
53.B PID output r2294 == P2291 (PID_max)	0	Closed

r0747	CO/BO: State of digital outputs			Min: -	Level
P-Group:	COMMANDS	Datatype: U16	Unit: -	Def: -	3

Displays status of digital outputs (also includes inversion of digital outputs via P0748).

Bitfields:

Bit00 Digital output 1 energized 0 NO 1 YES

Dependency:

Bit 0 = 0 :
Relay de-energized / contacts open

Bit 0 = 1 :
Relay energized / contacts closed

P0748	Invert digital outputs			Min: 0	Level
CStat:	CUT	Datatype: U16	Unit: -	Def: 0	3

Defines high and low states of relay for a given function.

Bitfields:

Bit00 Invert digital output 1 0 NO 1 YES

r0750	Number of ADCs			Min: -	Level
P-Group:	TERMINAL	Datatype: U16	Unit: -	Def: -	3

Displays number of analog inputs available.

r0751	BO: Status word of ADC	Datatype: U16	Unit: -	Min: -	Level
	P-Group: TERMINAL			Def: -	4

Displays status of analog input.

Bitfields:


Bit00 Signal lost on ADC 1

0 NO

1 YES

r0752	Act. input of ADC [V]	Datatype: Float	Unit: -	Min: -	Level
	P-Group: TERMINAL			Def: -	2

Displays smoothed analog input value in volts before the characteristic block.

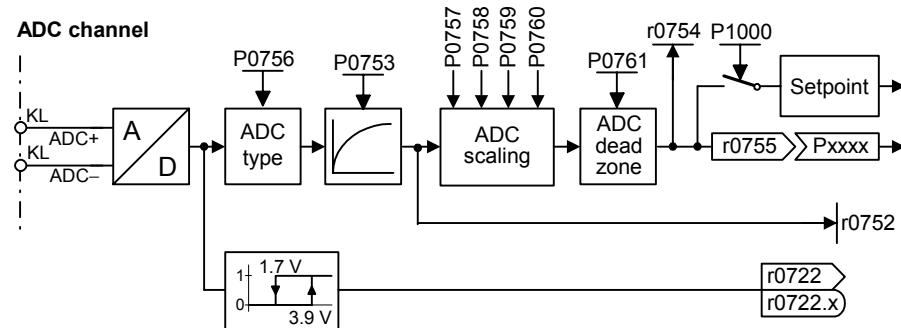

P0753	Smooth time ADC	CStat: CUT	Datatype: U16	Unit: ms	Min: 0	Level
	P-Group: TERMINAL		Active: first confirm	QuickComm.: No	Def: 3	3

Defines filter time (PT1 filter) in [ms] for analog input.

Note:

Increasing this time (smooth) reduces jitter but slows down response to the analog input.

P0753 = 0 : No filtering

r0754	Act. ADC value after scaling [%]	Datatype: Float	Unit: %	Min: -	Level
	P-Group: TERMINAL			Def: -	2

Shows smoothed value of analog input in [%] after scaling block.

Dependency:

P0757 to P0760 define range (ADC scaling).


r0755	CO: Act. ADC after scal. [4000h] P-Group: TERMINAL	Datatype: I16	Unit: -	Min: -	Def: -	Max: -	Level 2
--------------	--	---------------	---------	--------	--------	--------	-------------------

Displays analog input, scaled using ASPmin and ASPmax.

Analog setpoint (ASP) from the analog scaling block can vary from min. analog setpoint (ASPmin) to a max. analog setpoint (ASPmax) as shown in P0757 (ADC scaling).

The largest magnitude (value without sign) of ASPmin and ASPmax defines the scaling of 16384.

By associating parameter r0755 with an internal value (e.g. frequency setpoint), a scaled value is calculated internally by the MM4. The frequency value is calculated using the following equation:

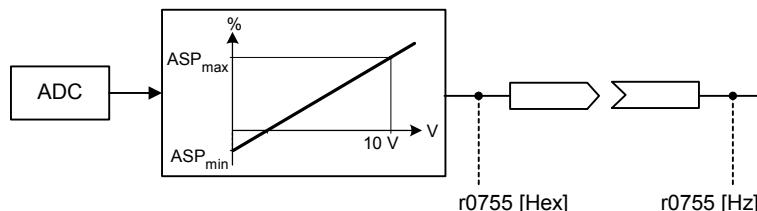

$$r0755 [\text{Hz}] = \frac{r0755 [\text{Hex}]}{4000 [\text{Hex}]} \cdot P2000 \cdot \frac{\max(|\text{ASP}_{\text{max}}|, |\text{ASP}_{\text{min}}|)}{100\%}$$


Example:

Case a:

- ASPmin = 300 %, ASPmax = 100 % then 16384 represents 300 %.
- This parameter will vary from 5461 to 16384.

Case b:

- ASPmin = -200 %, ASPmax = 100 % then 16384 represents 200 %.
- This parameter will vary from -16384 to +8192.

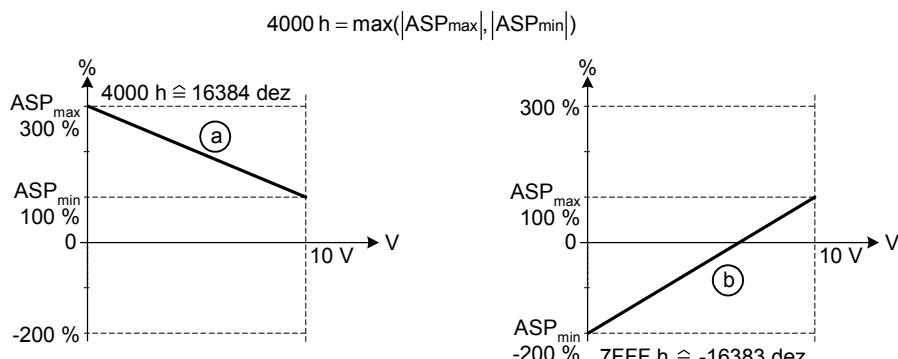

Note:

This value is used as an input to analog BICO connectors.

ASPmax represents the highest analog setpoint (this may be at 10 V).

ASPmin represents the lowest analog setpoint (this may be at 0 V).

Details:

See parameters P0757 to P0760 (ADC scaling)

P0756	Type of ADC CStat: CT P-Group: TERMINAL	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	Min: 0 Def: 0 Max: 1	Level 2
--------------	--	--	---------------------------	----------------------------	-------------------

Defines type of analog input and also enables analog input monitoring.

Possible Settings:

- 0 Unipolar voltage input (0 to +10 V)
- 1 Unipolar voltage input with monitoring (0 to 10 V)

Notice:

When monitoring is enabled and a deadband defined (P0761), a fault condition will be generated (F0080) if the analog input voltage falls below 50 % of the deadband voltage.


Details:

See P0757 to P0760 (ADC scaling).

P0757	Value x1 of ADC scaling [V]	Min: 0	Level
CStat: CUT	Datatype: Float	Def: 0	
P-Group: TERMINAL	Active: first confirm	Unit: V	Max: 10

Parameters P0757 - P0760 configure the input scaling as shown in the diagram:

P0761 = 0

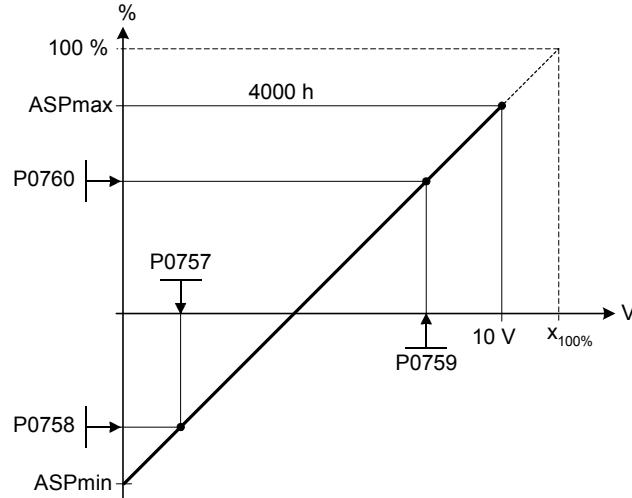

Where:

- Analog setpoints represent a [%] of the normalized frequency in P2000.
- Analog setpoints may be larger than 100 %.
- ASPmax represents highest analog setpoint (this may be at 10 V).
- ASPmin represents lowest analog setpoint (this may be at 0 V).
- Default values provide a scaling of 0 V = 0 %, and 10 V = 100 %.

Note:

The ADC-linear characteristic is described by 4 coordinates, based on a two-point equation:

$$\frac{y - P0758}{x - P0757} = \frac{P0760 - P0758}{P0759 - P0757}$$

For calculations the point-gradient form (offset and gradient) is more advantageous:

$$y = m \cdot x + y_0$$


The transformation between these two forms is given by:

$$m = \frac{P0760 - P0758}{P0759 - P0757} \quad y_0 = \frac{P0758 \cdot P0759 - P0757 \cdot P0760}{P0759 - P0757}$$

For scaling of the input the value of y_{max} and x_{min} has to be determined. This is done by the following equations:

$$x_{\text{min}} = \frac{P0760 \cdot P0757 - P0758 \cdot P0759}{P0760 - P0758}$$

$$y_{\text{max}} = (x_{\text{max}} - x_{\text{min}}) \cdot \frac{P0760 - P0758}{P0759 - P0757}$$

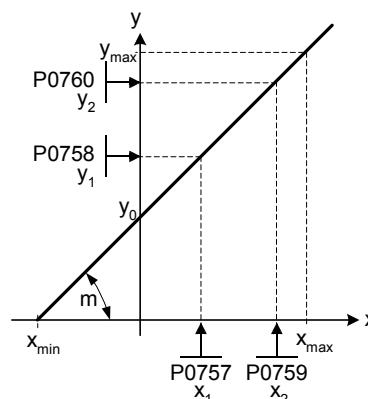

Notice:

The value x_2 of ADC scaling P0759 must be greater than the value x_1 of ADC scaling P0757.

P0758	Value y1 of ADC scaling	Min: -99999.9	Level
CStat:	CUT	Datatype: Float	Def: 0.0
P-Group:	TERMINAL	Active: first confirm	Max: 99999.9

Sets value of Y1 in [%] as described in P0757 (ADC scaling)

Dependency:

Affects P2000 to P2003 (reference frequency, voltage, current or torque) depending on which setpoint is to be generated.

P0759	Value x2 of ADC scaling [V]	Min: 0	Level
CStat:	CUT	Datatype: Float	Def: 10
P-Group:	TERMINAL	Active: first confirm	Max: 10

Sets value of X2 as described in P0757 (ADC scaling).

Notice:

The value x2 of ADC scaling P0759 must be greater than the value x1 of ADC scaling P0757.

P0760	Value y2 of ADC scaling	Min: -99999.9	Level
CStat:	CUT	Datatype: Float	Def: 100.0
P-Group:	TERMINAL	Active: first confirm	Max: 99999.9

Sets value of Y2 in [%] as described in P0757 (ADC scaling).

Dependency:

Affects P2000 to P2003 (reference frequency, voltage, current or torque) depending on which setpoint is to be generated.

P0761	Width of ADC deadband [V]	Min: 0	Level
CStat:	CUT	Datatype: Float	Def: 0
P-Group:	TERMINAL	Active: first confirm	Max: 10


Defines width of deadband on analog input. The diagrams below explain its use.

Example:

The below example produces a 2 to 10 V analog input 0 to 50 Hz (ADC value 2 to 10 V, 0 to 50 Hz):


- P2000 = 50 Hz
- P0759 = 8 V P0760 = 75 %
- P0757 = 2 V P0758 = 0 %
- P0761 = 2 V
- P0756 = 0 or 1

P0761 > 0 and (0 < P0758 < P0760 or 0 > P0758 > P0760)

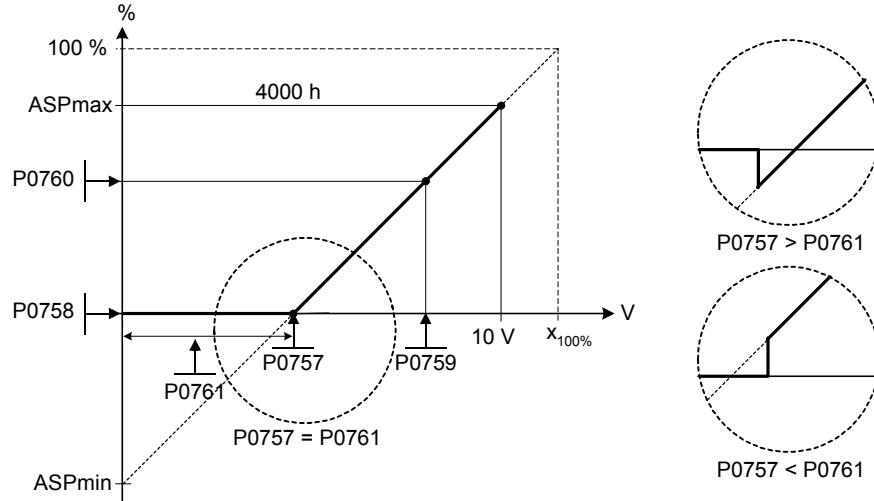

The below example produces a 0 to 10 V analog input (-50 to +50 Hz) with center zero and a "holding point" 0.2 V wide (0.1 V to each side of center, ADC value 0 to 10 V, -50 to +50 Hz):

- P2000 = 50 Hz
- P0759 = 8 V P0760 = 75 %
- P0757 = 2 V P0758 = -75 %
- P0761 = 0.1 V
- P0756 = 0 or 1

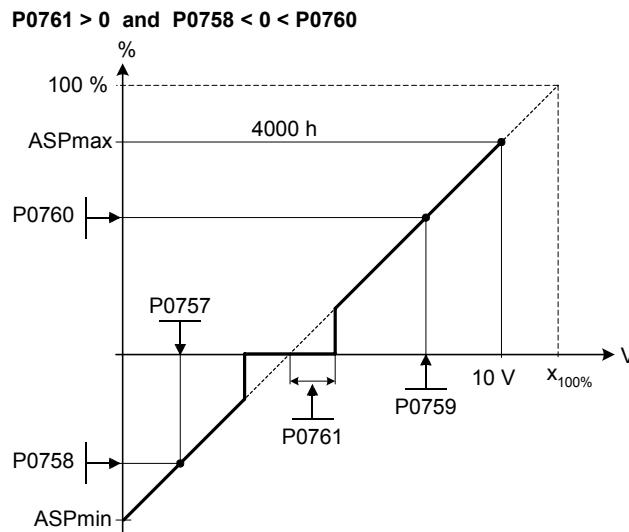**Note:**

P0761[x] = 0 : No deadband active.

Notice:

Deadband starts from 0 V to value of P0761, if both values of P0758 and P0760 (y coordinates of ADC scaling) are positive or negative respectively. However, deadband is active in both directions from point of intersection (x axis with ADC scaling curve), if sign of P0758 and P0760 are opposite.

Min. frequency P1080 should be zero when using center zero setup. There is no hysteresis at the end of the deadband.

P0762	Delay for loss of signal action		Min: 0	Level
CStat: CUT P-Group: TERMINAL	Datatype: U16 Active: Immediately	Unit: ms	Def: 10 QuickComm.: No	3 Max: 10000

Defines time delay between loss of analog setpoint and appearance of fault code F0080.

Note:

Expert users can choose the desired reaction to F0080 (default is OFF2).

r0770	Number of DACs		Min: -	Level
P-Group: TERMINAL	Datatype: U16	Unit: -	Def: - Max: -	3


Displays number of analog outputs available.

P0771	CI: DAC		Min: 0:0	Level
CStat: CUT P-Group: TERMINAL	Datatype: U32 Active: first confirm	Unit: -	Def: 21:0 QuickComm.: No	2 Max: 4000:0

Defines function of the 0 - 20 mA analog output.

Common Settings:

- 21 CO: Act. frequency (scaled to P2000)
- 24 CO: Act. output frequency (scaled to P2000)
- 25 CO: Act. output voltage (scaled to P2001)
- 26 CO: Act. DC-link voltage (scaled to P2001)
- 27 CO: Act. output current (scaled to P2002)

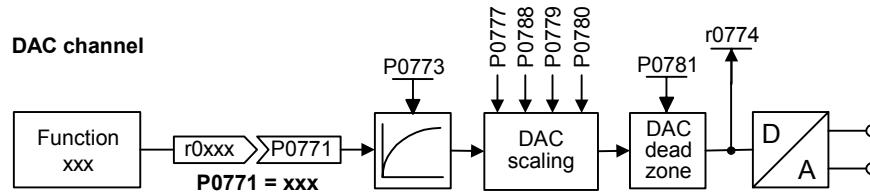

P0773	Smooth time DAC				Min: 0	Level
CStat:	CUT	Datatype: U16	Unit: ms		Def: 2	
P-Group:	TERMINAL	Active: first confirm	QuickComm.: No		Max: 1000	3

Defines smoothing time [ms] for analog output signal. This parameter enables smoothing for DAC using a PT1 filter.

Dependency:

P0773 = 0: Deactivates filter.

r0774	Act. DAC value [mA]				Min: -	Level
P-Group:	TERMINAL	Datatype: Float	Unit: -		Def: -	2

Shows value of analog output in [mA] after filtering and scaling.

P0776	Type of DAC				Min: 0	Level
CStat:	CT	Datatype: U16	Unit: -		Def: 0	
P-Group:	TERMINAL	Active: first confirm	QuickComm.: No		Max: 0	4

Defines type of analog output.

Possible Settings:

0 Current output

Note:


The analog output is designed as a current output with a range of 0...20 mA.

For a voltage output with a range of 0...10 V an external resistor of 500 Ohms has to be connected at the terminals (12/13).

P0777	Value x1 of DAC scaling	Min: -99999.0	Level
CStat: CUT	Datatype: Float	Def: 0.0	
P-Group: TERMINAL	Active: first confirm	Unit: %	Max: 99999.0

Defines x1 output characteristic in [%]. Scaling block is responsible for adjustment of output value defined in P0771 (DAC connector input).

Parameters of DAC scaling block (P0777 ... P0781) work as follows:

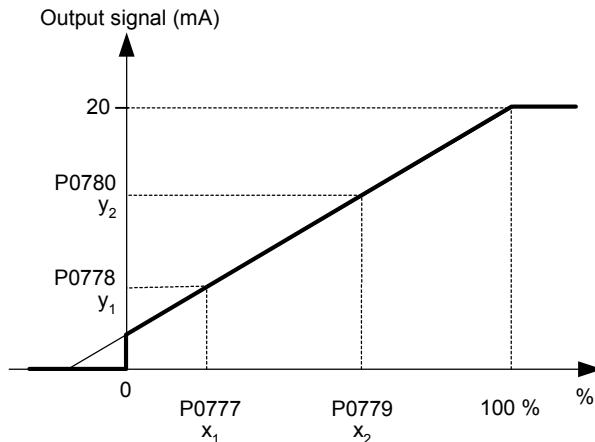

Where:

Points P1 (x_1, y_1) and P2 (x_2, y_2) can be chosen freely.

Example:

The default values of the scaling block provides a scaling of:

P1: 0.0 % = 0 mA
P2: 100.0 % = 20 mA

Dependency:

Affects P2000 to P2003 (referency frequency, voltage, current or torque) depending on which setpoint is to be generated.

Note:

The DAC-linear characteristic is described by 4 coordinates, based on a two-point equation:

$$\frac{y - P0778}{x - P0777} = \frac{P0780 - P0778}{P0779 - P0777}$$

For calculations the point-gradient form (offset and gradient) is more advantageous:

$$y = m \cdot x + y_0$$


The transformation between these two forms is given by:

$$m = \frac{P0780 - P0778}{P0779 - P0777} \quad y_0 = \frac{P0778 \cdot P0779 - P0777 \cdot P0780}{P0779 - P0777} \leq | 200 \% |$$

For scaling of the input the value of y_{\max} and x_{\min} has to be determined. This is done by the following equations:

$$x_{\min} = \frac{P0780 \cdot P0777 - P0778 \cdot P0779}{P0780 - P0778}$$

$$y_{\max} = (x_{\max} - x_{\min}) \cdot \frac{P0780 - P0778}{P0779 - P0777}$$

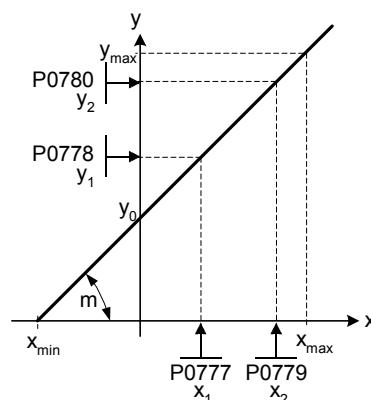

P0778	Value y1 of DAC scaling	Min: 0	Level
CStat:	CUT	Datatype: Float	Def: 0
P-Group:	TERMINAL	Active: first confirm	Max: 20

Defines y1 of output characteristic.

P0779	Value x2 of DAC scaling	Min: -99999.0	Level
CStat:	CUT	Datatype: Float	Def: 100.0
P-Group:	TERMINAL	Active: first confirm	Max: 99999.0

Defines x2 of output characteristic in [%].

Dependency:


Affects P2000 to P2003 (referency frequency, voltage, current or torque) depending on which setpoint is to be generated.

P0780	Value y2 of DAC scaling	Min: 0	Level
CStat:	CUT	Datatype: Float	Def: 20
P-Group:	TERMINAL	Active: first confirm	Max: 20

Defines y2 of output characteristic.

P0781	Width of DAC deadband	Min: 0	Level
CStat:	CUT	Datatype: Float	Def: 0
P-Group:	TERMINAL	Active: first confirm	Max: 20

Sets width of dead-band in [mA] for analog output.

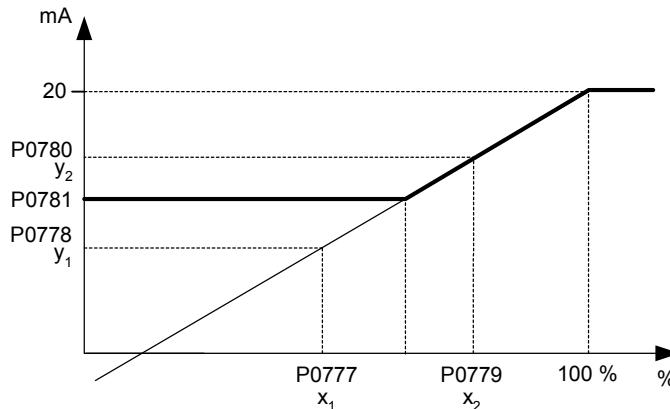

P0800	BI: Download parameter set 0	Min: 0:0	Level
CStat:	CT	Datatype: U32	Def: 0:0
P-Group:	COMMANDS	Active: first confirm	QuickComm.: No Max: 4000:0

Defines source of command to start download of parameter set 0 from attached AOP. The first three digits describe the parameter number of the command source, the last digit refers to the bit setting for that parameter.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)

Note:

- Signal of digital input:
- 0 = No download
- 1 = Start download parameter set 0 from AOP.

P0801	BI: Download parameter set 1	Min: 0:0	Level
CStat:	CT	Datatype: U32	Def: 0:0
P-Group:	COMMANDS	Active: first confirm	QuickComm.: No Max: 4000:0

Defines sources of command to start download of parameter set 1 from attached AOP. The first three digits describe the parameter number of the command source, the last digit refers to the bit setting for that parameter.

Common Settings:


- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)

Note:

- Signal of digital input:
- 0 = No download
- 1 = Start download parameter set 1 from AOP.

P0810	BI: CDS bit 0 (Local / Remote)	Min: 0:0	Level
CStat: CUT	Datatype: U32	Def: 0:0	
P-Group: COMMANDS	Active: first confirm	Unit: -	Max: 4095:0

Selects command source from which to read Bit 0 for selecting a command data set (CDS).

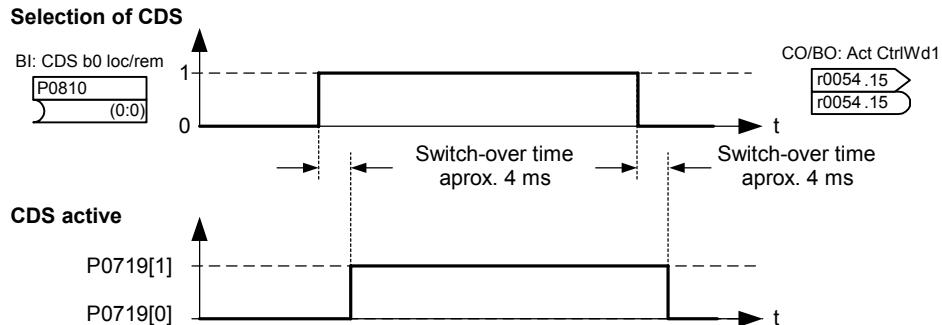

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

P0840	BI: ON/OFF1	Min: 0:0	Level
CStat: CT	Datatype: U32	Def: 722:0	
P-Group: COMMANDS	Active: first confirm	Unit: -	Max: 4000:0

Allows ON/OFF1 command source to be selected using BICO. The first three digits describe the parameter number of the command source; the last digit denotes the bit setting for that parameter.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

19.0 = ON/OFF1 via BOP

Dependency:

Active only when P0719 = 0 (remote selection of command/setpoint source).

BICO requires P0700 set to 2 (enable BICO).

The default setting (ON right) is digital input 1 (722.0). Alternative source possible only when function of digital input 1 is changed (via P0701) before changing value of P0840.

P0842	BI: ON reverse/OFF1	Min: 0:0	Level
CStat: CT	Datatype: U32	Def: 0:0	
P-Group: COMMANDS	Active: first confirm	Unit: -	Max: 4000:0

Allows ON/OFF1 reverse command source to be selected using BICO. The first three digits describe the parameter number of the command source and the last digit denotes the bit setting for that parameter.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

19.0 = ON/OFF1 via BOP

Dependency:

Active only when P0719 = 0 (remote selection of command/setpoint source).

P0844	BI: 1. OFF2	CStat: CT P-Group: COMMANDS	Datatype: U32 Active: first confirm	Unit: - QuickComm.: No	Min: 0:0 Def: 1:0 Max: 4000:0	Level 3
--------------	--------------------	--	--	---	--	--------------------------

Defines first source of OFF2 when P0719 = 0 (BICO). The first three digits describe the parameter number of the command source and the last digit denotes the bit setting for that parameter.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

- 19.0 = ON/OFF1 via BOP
- 19.1 = OFF2: Electrical stop via BOP

Dependency:

Active only when P0719 = 0 (remote selection of command/setpoint source).

If one of the digital inputs is selected for OFF2, the inverter will not run unless the digital input is active.

Note:

OFF2 means immediate pulse-disabling; the motor is coasting.

OFF2 is low-active, i.e. :
0 = Pulse disabling.
1 = Operating condition.

P0845	BI: 2. OFF2	CStat: CT P-Group: COMMANDS	Datatype: U32 Active: first confirm	Unit: - QuickComm.: No	Min: 0:0 Def: 19:1 Max: 4000:0	Level 3
--------------	--------------------	--	--	---	---	--------------------------

Defines second source of OFF2. The first three digits describe the parameter number of the command source and the last digit denotes the bit setting for that parameter.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

- 19.0 = ON/OFF1 via BOP

Dependency:

In contrast to P0844 (first source of OFF2), this parameter is always active, independent of P0719 (selection of command and frequency setpoint).

If one of the digital inputs is selected for OFF2, the inverter will not run unless the digital input is active.

Note:

OFF2 means immediate pulse-disabling; the motor is coasting.

OFF2 is low-active, i.e. :
0 = Pulse disabling.
1 = Operating condition.

P0848	BI: 1. OFF3	CStat: CT P-Group: COMMANDS	Datatype: U32 Active: first confirm	Unit: - QuickComm.: No	Min: 0:0 Def: 1:0 Max: 4000:0	Level 3
--------------	--------------------	--	--	---	--	--------------------------

Defines first source of OFF3 when P0719 = 0 (BICO). The first three digits describe the parameter number of the command source and the last digit denotes the bit setting for that parameter.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

19.0 = ON/OFF1 via BOP

Dependency:

Active only when P0719 = 0 (remote selection of command/setpoint source).

If one of the digital inputs is selected for OFF3, the inverter will not run unless the digital input is active.

Note:

OFF3 means fast ramp-down to 0.

OFF3 is low-active, i.e.

0 = Ramp-down.

1 = Operating condition.

P0849	BI: 2. OFF3	CStat: CT P-Group: COMMANDS	Datatype: U32 Active: first confirm	Unit: - QuickComm.: No	Min: 0:0 Def: 1:0 Max: 4000:0	Level 3
--------------	--------------------	--	--	---	--	--------------------------

Defines second source of OFF3. The first three digits describe the parameter number of the command source and the last digit denotes the bit setting for that parameter.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

19.0 = ON/OFF1 via BOP

Dependency:

In contrast to P0848 (first source of OFF3), this parameter is always active, independent of P0719 (selection of command and frequency setpoint).

If one of the digital inputs is selected for OFF3, the inverter will not run unless the digital input is active.

Note:

OFF3 means fast ramp-down to 0.

OFF3 is low-active, i.e.

0 = Ramp-down.

1 = Operating condition.

P0852	BI: Pulse enable	CStat: CT P-Group: COMMANDS	Datatype: U32 Active: first confirm	Unit: - QuickComm.: No	Min: 0:0 Def: 1:0 Max: 4000:0	Level 3
--------------	-------------------------	--	--	---	--	--------------------------

Defines source of pulse enable/disable signal.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

Dependency:

Active only when P0719 = 0 (remote selection of command/setpoint source).

P0918	CB address	Min: 0	Level
CStat: CT	Datatype: U16	Def: 3	
P-Group: COMM	Active: first confirm	Max: 65535	2

Defines address of CB (communication board) or address of the other option modules.

- There are two ways to set the bus address:
 - via DIP switches on the PROFIBUS module
 - via a user-entered value

Note:

- Possible PROFIBUS settings:
 - 1 ... 125
 - 0, 126, 127 are not allowed

The following applies when a PROFIBUS module is used:

- DIP switch = 0 Address defined in P0918 (CB address) is valid
 - DIP switch not = 0 DIP switch setting has priority and P0918 indicates DIP switch setting.

P0927	Parameter changeable via	Min: 0	Level
CStat: CUT	Datatype: U16	Def: 15	
P-Group: COMM	Active: first confirm	Max: 15	2

Specifies the interfaces which can be used to change parameters.

This parameter allows the user to easily protect the inverter from unauthorized modification of parameters.
 Annotation: Parameter P0927 is not password protected.

Bitfields:

Bit00	PROFIBUS / CB	0 NO	1 YES
Bit01	BOP	0 NO	1 YES
Bit02	USS on BOP link	0 NO	1 YES
Bit03	USS on COM link	0 NO	1 YES

Example:

Bits 0, 1, 2 and 3 set:

The default setting allows parameters to be changed via any interface. If all bits are set, the parameter is displayed on BOP as follows:

BOP: P0927

Bits 0, 1, 2 and 3 reset:

This setting allows no parameters to be modified via any interface with the exception of P0003 and P0927. If all bits are reset, the parameter is displayed on BOP as follows:

BOP: P0927

Details:

The seven-segment display is explained in the "Introduction to MICROMASTER System Parameters" in this handbook.


r0947[8]	Last fault code	Datatype: U16	Unit: -	Min: -	Level
	P-Group: ALARMS			Def: -	2

Displays fault history according to the diagram below

where:

- "F1" is the first active fault (not yet acknowledged).
- "F2" is the second active fault (not yet acknowledged).
- "F1e" is the occurrence of the fault acknowledgement for F1 & F2.

This moves the value in the 2 indices down to the next pair of indices, where they are stored. Indices 0 & 1 contain the active faults. When faults are acknowledged, indices 0 & 1 are reset to 0.

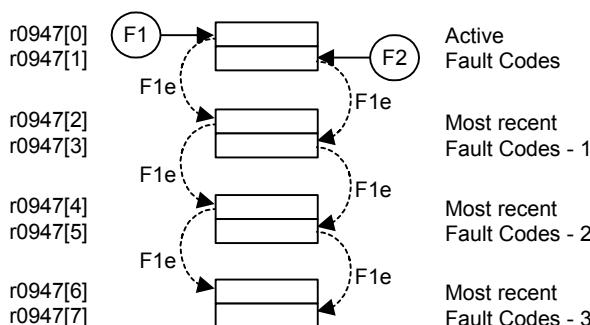

Index:

- r0947[0] : Recent fault trip --, fault 1
- r0947[1] : Recent fault trip --, fault 2
- r0947[2] : Recent fault trip -1, fault 3
- r0947[3] : Recent fault trip -1, fault 4
- r0947[4] : Recent fault trip -2, fault 5
- r0947[5] : Recent fault trip -2, fault 6
- r0947[6] : Recent fault trip -3, fault 7
- r0947[7] : Recent fault trip -3, fault 8

Example:

If the inverter trips on undervoltage and then receives an external trip before the undervoltage is acknowledged, you will obtain:

- r0947[0] = 3 Undervoltage (F0003)
- r0947[1] = 85 External trip (F0085)

Whenever a fault in index 0 is acknowledged (F1e), the fault history shifts as indicated in the diagram above.

Dependency:

Index 1 used only if second fault occurs before first fault is acknowledged.

Details:

See "Faults and Warnings"

r0948[12]	Fault time	Datatype: U16	Unit: -	Min: -	Level
	P-Group: ALARMS			Def: -	3

Time stamp to indicate when the fault has occurred. P2114 (run-time counter) or P2115 (real time clock) are the possible sources of the time stamp.

Index:

- r0948[0] : Recent fault trip --, fault time seconds+minutes
- r0948[1] : Recent fault trip --, fault time hours+days
- r0948[2] : Recent fault trip --, fault time month+year
- r0948[3] : Recent fault trip -1, fault time seconds+minutes
- r0948[4] : Recent fault trip -1, fault time hours+days
- r0948[5] : Recent fault trip -1, fault time month+year
- r0948[6] : Recent fault trip -2, fault time seconds+minutes
- r0948[7] : Recent fault trip -2, fault time hours+days
- r0948[8] : Recent fault trip -2, fault time month+year
- r0948[9] : Recent fault trip -3, fault time seconds+minutes
- r0948[10] : Recent fault trip -3, fault time hours+days
- r0948[11] : Recent fault trip -3, fault time month+year

Example:

The time is taken from P2115 if this parameter has been updated with the real time. If not, P2114 is used.

Note:

P2115 can be updated via AOP, Starter, DriveMonitor, etc.

r0949[8]	Fault value	Datatype: U16	Unit: -	Min: -	Level
	P-Group: ALARMS			Def: -	4

Displays drive fault values. It is for service purposes and indicate the type of fault reported. The values are listed in the code where faults are reported.

Index:

- r0949[0] : Recent fault trip --, fault value 1
- r0949[1] : Recent fault trip --, fault value 2
- r0949[2] : Recent fault trip -1, fault value 3
- r0949[3] : Recent fault trip -1, fault value 4
- r0949[4] : Recent fault trip -2, fault value 5
- r0949[5] : Recent fault trip -2, fault value 6
- r0949[6] : Recent fault trip -3, fault value 7
- r0949[7] : Recent fault trip -3, fault value 8

P0952	Total number of faults	Datatype: U16	Unit: -	Min: 0	Level
	CStat: CT	Active: first confirm	QuickComm.: No	Def: 0	3

Displays number of faults stored in P0947 (last fault code).

Dependency:

Setting 0 resets fault history. (changing to 0 also resets parameter r0948 - fault time).

r0964[5]	Firmware version data	Datatype: U16	Unit: -	Min: -	Level
	P-Group: COMM			Def: -	3

Firmware version data.

Index:

- r0964[0] : Company (Siemens = 42)
- r0964[1] : Product type
- r0964[2] : Firmware version
- r0964[3] : Firmware date (year)
- r0964[4] : Firmware date (day/month)

Example:

No.	Value	Meaning
r0964[0]	42	SIEMENS
r0964[1]	1001	MICROMASTER 420
	1002	MICROMASTER 440
	1003	MICRO- / COMBIMASTER 411
	1004	MICROMASTER 410
	1005	reserved
	1006	MICROMASTER 440 PX
	1007	MICROMASTER 430
	105	Firmware V1.05
r0964[2]	2001	
r0964[3]	2001	27.10.2001
r0964[4]	2710	

r0965	Profibus profile	Datatype: U16	Unit: -	Min: -	Level
	P-Group: COMM			Def: -	3

Identification for PROFIDrive. Profile number and version.

r0967	Control word 1	Datatype: U16	Unit: -	Min: -	Level
	P-Group: COMM			Def: -	3

Displays control word 1.

Bitfields:

Bit00	ON/OFF1	0	NO	1	YES
Bit01	OFF2: Electrical stop	0	YES	1	NO
Bit02	OFF3: Fast stop	0	YES	1	NO
Bit03	Pulse enable	0	NO	1	YES
<hr/>					
Bit04	RFG enable	0	NO	1	YES
Bit05	RFG start	0	NO	1	YES
Bit06	Setpoint enable	0	NO	1	YES
Bit07	Fault acknowledge	0	NO	1	YES
<hr/>					
Bit08	JOG right	0	NO	1	YES
Bit09	JOG left	0	NO	1	YES
Bit10	Control from PLC	0	NO	1	YES
Bit11	Reverse (setpoint inversion)	0	NO	1	YES
<hr/>					
Bit13	Motor potentiometer MOP up	0	NO	1	YES
Bit14	Motor potentiometer MOP down	0	NO	1	YES
Bit15	Local / Remote	0	NO	1	YES

r0968	Status word 1	Datatype: U16	Unit: -	Min: -	Level
	P-Group: COMM			Def: -	3

Displays active status word of inverter (in binary) and can be used to diagnose which commands are active.

Bitfields:

Bit00	Drive ready	0	NO	1	YES
Bit01	Drive ready to run	0	NO	1	YES
Bit02	Drive running	0	NO	1	YES
Bit03	Drive fault active	0	NO	1	YES
<hr/>					
Bit04	OFF2 active	0	YES	1	NO
Bit05	OFF3 active	0	YES	1	NO
Bit06	ON inhibit active	0	NO	1	YES
Bit07	Drive warning active	0	NO	1	YES
<hr/>					
Bit08	Deviation setpoint / act. value	0	YES	1	NO
Bit09	PZD control	0	NO	1	YES
Bit10	Maximum frequency reached	0	NO	1	YES
Bit11	Warning: Motor current limit	0	YES	1	NO
<hr/>					
Bit12	Motor holding brake active	0	NO	1	YES
Bit13	Motor overload	0	YES	1	NO
Bit14	Motor runs right	0	NO	1	YES
Bit15	Inverter overload	0	YES	1	NO

P0970	Factory reset	Datatype: U16	Unit: -	Min: 0	Level
CStat:	C			Def: 0	1

P-Group: PAR_RESET Active: first confirm

QuickComm.: No

Max: 1

P0970 = 1 resets all parameters to their default values.

Possible Settings:

- 0 Disabled
- 1 Parameter reset

Dependency:

First set P0010 = 30 (factory settings).

Stop drive (i.e. disable all pulses) before you can reset parameters to default values.

Note:

The following parameters retain their values after a factory reset:

- r0039 CO: Energy consumption meter [kWh]
- P0100 Europe / North America
- P0918 CB address
- P2010 USS baud rate
- P2011 USS address

P0971	Transfer data from RAM to EEPROM		Min: 0	Level
CStat:	CUT	Datatype: U16	Unit: -	Def: 0
P-Group:	COMM	Active: first confirm	QuickComm.: No	Max: 1

Transfers values from RAM to EEPROM when set to 1.

Possible Settings:

- 0 Disabled
- 1 Start transfer

Note:

All values in RAM are transferred to EEPROM.

Parameter is automatically reset to 0 (default) after successful transfer.

The storage from RAM to EEPROM is accomplished via P0971. The communications are reset, if the transfer was successful. During the reset process communications will be interrupted. This creates the following conditions:

- PLC (e.g. SIMATIC S7) enters Stop mode
- Starter automatically recovers communications once they are re-established.
- BOP displays "busy"

After completion of the transfer process, the communication between the inverter and the PC-tools (e.g. Starter) or BOP is automatically re-established.

P1000	Selection of frequency setpoint		Min: 0	Level
CStat:	CT	Datatype: U16	Unit: -	Def: 2
P-Group:	SETPOINT	Active: first confirm	QuickComm.: Yes	Max: 66

Selects frequency setpoint source. In the table of possible settings below, the main setpoint is selected from the least significant digit (i.e., 0 to 6) and any additional setpoint from the most significant digit (i.e., x0 through to x6).

Possible Settings:


- | | |
|----|------------------------------------|
| 0 | No main setpoint |
| 1 | MOP setpoint |
| 2 | Analog setpoint |
| 3 | Fixed frequency |
| 4 | USS on BOP link |
| 5 | USS on COM link |
| 6 | CB on COM link |
| 10 | No main setpoint + MOP setpoint |
| 11 | MOP setpoint + MOP setpoint |
| 12 | Analog setpoint + MOP setpoint |
| 13 | Fixed frequency + MOP setpoint |
| 14 | USS on BOP link + MOP setpoint |
| 15 | USS on COM link + MOP setpoint |
| 16 | CB on COM link + MOP setpoint |
| 20 | No main setpoint + Analog setpoint |
| 21 | MOP setpoint + Analog setpoint |
| 22 | Analog setpoint + Analog setpoint |
| 23 | Fixed frequency + Analog setpoint |
| 24 | USS on BOP link + Analog setpoint |
| 25 | USS on COM link + Analog setpoint |
| 26 | CB on COM link + Analog setpoint |
| 30 | No main setpoint + Fixed frequency |
| 31 | MOP setpoint + Fixed frequency |
| 32 | Analog setpoint + Fixed frequency |
| 33 | Fixed frequency + Fixed frequency |
| 34 | USS on BOP link + Fixed frequency |
| 35 | USS on COM link + Fixed frequency |
| 36 | CB on COM link + Fixed frequency |
| 40 | No main setpoint + USS on BOP link |
| 41 | MOP setpoint + USS on BOP link |
| 42 | Analog setpoint + USS on BOP link |
| 43 | Fixed frequency + USS on BOP link |
| 44 | USS on BOP link + USS on BOP link |
| 45 | USS on COM link + USS on BOP link |
| 46 | CB on COM link + USS on BOP link |
| 50 | No main setpoint + USS on COM link |
| 51 | MOP setpoint + USS on COM link |
| 52 | Analog setpoint + USS on COM link |
| 53 | Fixed frequency + USS on COM link |
| 54 | USS on BOP link + USS on COM link |
| 55 | USS on COM link + USS on COM link |
| 60 | No main setpoint + CB on COM link |
| 61 | MOP setpoint + CB on COM link |
| 62 | Analog setpoint + CB on COM link |
| 63 | Fixed frequency + CB on COM link |
| 64 | USS on BOP link + CB on COM link |
| 66 | CB on COM link + CB on COM link |

Example:

Setting 12 selects main setpoint (2) derived from analog input with additional setpoint (1) taken from the motor potentiometer.

Example P1000 = 12 :

P1000 = 12 \Rightarrow P1070 = 755	P1070 CI: Main setpoint r0755 CO: Act. ADC after scal. [4000h]
P1000 = 12 \Rightarrow P1075 = 1050	P1075 CI: Additional setpoint r1050 CO: Act. Output freq. of the MOP

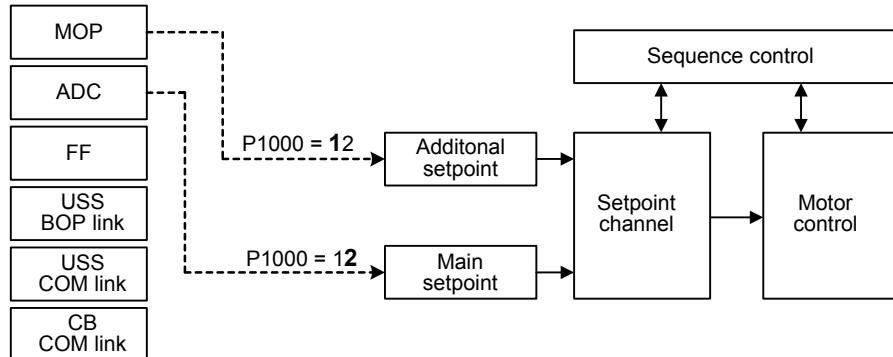**Caution:**

Be aware, by changing of parameter P1000 all BICO parameters (see table below) are modified.

Note:

Single digits denote main setpoints that have no additional setpoint.

Changing this parameter sets (to default) all settings on item selected (see table).

		P1000 = xy							
		y = 0	y = 1	y = 2	y = 3	y = 4	y = 5	y = 6	
x = 0	0.0	1050.0	755.0	1024.0	2015.1	2018.1	2050.1	P1070	
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1071	
	0.0	0.0	0.0	0.0	0.0	0.0	0.0	P1075	
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1076	
x = 1	0.0	1050.0	755.0	1024.0	2015.1	2018.1	2050.1	P1070	
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1071	
	1050.0	1050.0	1050.0	1050.0	1050.0	1050.0	1050.0	P1075	
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1076	
x = 2	0.0	1050.0	755.0	1024.0	2015.1	2018.1	2050.1	P1070	
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1071	
	755.0	755.0	755.0	755.0	755.0	755.0	755.0	P1075	
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1076	
P1000 = xy	x = 3	0.0	1050.0	755.01	1024.0	2015.1	2018.1	2050.1	P1070
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1071	
	1024.0	1024.0	1024.0	1024.0	1024.0	1024.0	1024.0	P1075	
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1076	
x = 4	0.0	1050.0	755.0	1024.0	2015.1	2018.1	2050.1	P1070	
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1071	
	2015.1	2015.1	2015.1	2015.1	2015.1	2015.1	2015.1	P1075	
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1076	
x = 5	0.0	1050.0	755.0	1024.0	2015.1	2018.1	2050.1	P1070	
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1071	
	2018.1	2018.1	2018.1	2018.1	2018.1	2018.1	2018.1	P1075	
	1.0	1.0	1.0	1.0	1.0	1.0	1.0	P1076	
x = 6	0.0	1050.0	755.0	1024.0	2015.1		2050.1	P1070	
	1.0	1.0	1.0	1.0	1.0		1.0	P1071	
	2050.1	2050.1	2050.1	2050.1	2050.1		2050.1	P1075	
	1.0	1.0	1.0	1.0	1.0		1.0	P1076	

Example:

P1000 = 21 \rightarrow P1070 = 1050.0

P1071 = 1.0

P1075 = 755.0

P1076 = 1.0

P1001	Fixed frequency 1	Min: -650.00	Level
CStat: CUT	Datatype: Float	Def: 0.00	
P-Group: SETPOINT	Active: Immediately	Unit: Hz	Max: 650.00

Defines fixed frequency setpoint 1.

There are three options available for selection of the fixed frequencies:

1. Direct selection
2. Direct selection + ON command
3. Binary coded selection + ON command

1. Direct selection (P0701 - P0703 = 15):

- In this mode of operation 1 digital input selects 1 fixed frequency.
- If several inputs are active together, the selected frequencies are summed.
- E.g.: FF1 + FF2 + FF3.

2. Direct selection + ON command (P0701 - P0703 = 16):

- The fixed frequency selection combines the fixed frequencies with an ON command.
- In this mode of operation 1 digital input selects 1 fixed frequency.
- If several inputs are active together, the selected frequencies are summed.
- E.g.: FF1 + FF2 + FF3.

3. Binary coded selection + ON command (P0701 - P0703 = 17):

- Up to 7 fixed frequencies can be selected using this method.
- The fixed frequencies are selected according to the following table:

Example:


Binary coded selection :

	DIN3	DIN2	DIN1
0 Hz	FF0	0	0
P1001	FF1	0	1
P1002	FF2	0	1
P1003	FF3	0	1
P1004	FF4	1	0
P1005	FF5	1	0
P1006	FF6	1	1
P1007	FF7	1	1

Direct selection of FF P1001 via DIN 1:

P0701 = 15 or P0701 = 99, P1020 = 722.0, P1016 = 1

P0702 = 15 or P0702 = 99, P1021 = 722.1, P1017 = 1

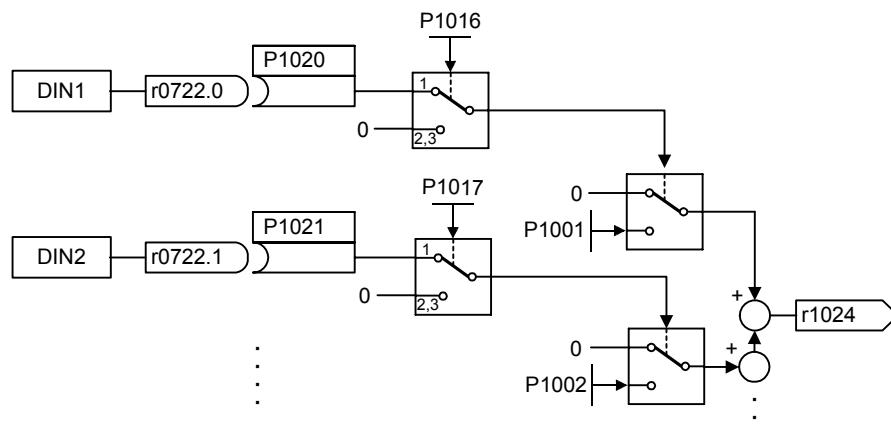

Dependency:

Select fixed frequency operation (using P1000).

Inverter requires ON command to start in the case of direct selection (P0701 - P0703 = 15).

Note:

Fixed frequencies can be selected using the digital inputs, and can also be combined with an ON command.

P1002	Fixed frequency 2	Min: -650.00	Level
CStat: CUT	Datatype: Float	Def: 5.00	
P-Group: SETPOINT	Active: Immediately	Unit: Hz	Max: 650.00

Defines fixed frequency setpoint 2.

Details:

See parameter P1001 (fixed frequency 1).

P1003	Fixed frequency 3				Min: -650.00	Level
CStat:	CUT	Datatype: Float	Unit: Hz	Def: 10.00	Def: 10.00	
P-Group:	SETPOINT	Active: Immediately	QuickComm.: No	Max: 650.00	Max: 650.00	2
Defines fixed frequency setpoint 3.						
Details: See parameter P1001 (fixed frequency 1).						
P1004	Fixed frequency 4				Min: -650.00	Level
CStat:	CUT	Datatype: Float	Unit: Hz	Def: 15.00	Def: 15.00	
P-Group:	SETPOINT	Active: Immediately	QuickComm.: No	Max: 650.00	Max: 650.00	2
Defines fixed frequency setpoint 4.						
Details: See parameter P1001 (fixed frequency 1).						
P1005	Fixed frequency 5				Min: -650.00	Level
CStat:	CUT	Datatype: Float	Unit: Hz	Def: 20.00	Def: 20.00	
P-Group:	SETPOINT	Active: Immediately	QuickComm.: No	Max: 650.00	Max: 650.00	2
Defines fixed frequency setpoint 5.						
Details: See parameter P1001 (fixed frequency 1).						
P1006	Fixed frequency 6				Min: -650.00	Level
CStat:	CUT	Datatype: Float	Unit: Hz	Def: 25.00	Def: 25.00	
P-Group:	SETPOINT	Active: Immediately	QuickComm.: No	Max: 650.00	Max: 650.00	2
Defines fixed frequency setpoint 6.						
Details: See parameter P1001 (fixed frequency 1).						
P1007	Fixed frequency 7				Min: -650.00	Level
CStat:	CUT	Datatype: Float	Unit: Hz	Def: 30.00	Def: 30.00	
P-Group:	SETPOINT	Active: Immediately	QuickComm.: No	Max: 650.00	Max: 650.00	2
Defines fixed frequency setpoint 7.						
Details: See parameter P1001 (fixed frequency 1).						
P1016	Fixed frequency mode - Bit 0				Min: 1	Level
CStat:	CT	Datatype: U16	Unit: -	Def: 1	Def: 1	
P-Group:	SETPOINT	Active: first confirm	QuickComm.: No	Max: 3	Max: 3	3
Fixed frequencies can be selected in three different modes. Parameter P1016 defines the mode of selection Bit 0.						
Possible Settings:						
1 Direct selection 2 Direct selection + ON command 3 Binary coded selection + ON command						
Details: See table in P1001 (fixed frequency 1) for description of how to use fixed frequencies.						
P1017	Fixed frequency mode - Bit 1				Min: 1	Level
CStat:	CT	Datatype: U16	Unit: -	Def: 1	Def: 1	
P-Group:	SETPOINT	Active: first confirm	QuickComm.: No	Max: 3	Max: 3	3
Fixed frequencies can be selected in three different modes. Parameter P1017 defines the mode of selection Bit 1.						
Possible Settings:						
1 Direct selection 2 Direct selection + ON command 3 Binary coded selection + ON command						
Details: See table in P1001 (fixed frequency 1) for description of how to use fixed frequencies.						
P1018	Fixed frequency mode - Bit 2				Min: 1	Level
CStat:	CT	Datatype: U16	Unit: -	Def: 1	Def: 1	
P-Group:	SETPOINT	Active: first confirm	QuickComm.: No	Max: 3	Max: 3	3
Fixed frequencies can be selected in three different modes. Parameter P1018 defines the mode of selection Bit 2.						
Possible Settings:						
1 Direct selection 2 Direct selection + ON command 3 Binary coded selection + ON command						
Details: See table in P1001 (fixed frequency 1) for description of how to use fixed frequencies.						

P1020	BI: Fixed freq. selection Bit 0	Min: 0:0	Level
CStat:	CT	Datatype: U32	Def: 0:0
P-Group:	COMMANDS	Active: first confirm	Max: 4000:0

Defines origin of fixed frequency selection.

Common Settings:

P1020 = 722.0 ==> Digital input 1

P1021 = 722.1 ==> Digital input 2

P1022 = 722.2 ==> Digital input 3

Dependency:

Accessible only if P0701 - P0703 = 99 (function of digital inputs = BICO)

P1021	BI: Fixed freq. selection Bit 1	Min: 0:0	Level
CStat:	CT	Datatype: U32	Def: 0:0
P-Group:	COMMANDS	Active: first confirm	Max: 4000:0

Defines origin of fixed frequency selection.

Dependency:

Accessible only if P0701 - P0703 = 99 (function of digital inputs = BICO)

Details:

See P1020 (fixed frequency selection Bit 0) for most common settings

P1022	BI: Fixed freq. selection Bit 2	Min: 0:0	Level
CStat:	CT	Datatype: U32	Def: 0:0
P-Group:	COMMANDS	Active: first confirm	Max: 4000:0

Defines origin of fixed frequency selection.

Dependency:

Accessible only if P0701 - P0703 = 99 (function of digital inputs = BICO)

Details:

See P1020 (fixed frequency selection Bit 0) for most common settings

r1024	CO: Act. fixed frequency	Min: -	Level
P-Group:	SETPOINT	Datatype: Float	Def: -
		Unit: Hz	Max: -

Displays sum total of selected fixed frequencies.

P1031	Setpoint memory of the MOP	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0
P-Group:	SETPOINT	Active: Immediately	Max: 1

Saves last motor potentiometer setpoint (MOP) that was active before OFF command or power down.

Possible Settings:

0 MOP setpoint will not be stored

1 MOP setpoint will be stored (P1040 is updated)

Note:

On next ON command, motor potentiometer setpoint will be the saved value in parameter P1040 (setpoint of the MOP).

P1032	Inhibit negative MOP setpoints	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 1
P-Group:	SETPOINT	Active: first confirm	Max: 1

This parameter suppresses negative setpoints of the MOP output r1050.

Possible Settings:

0 Neg. MOP setpoint is allowed

1 Neg. MOP setpoint inhibited

Note:

The reversing functions (e.g. BOP-Reverse button if P0700 = 1) are not affected by the settings of P1032. Use P1110 to fully prevent change of direction in setpoint channel.

P1035	BI: Enable MOP (UP-command)	Min: 0:0	Level
CStat:	CT	Datatype: U32	Def: 19:13
P-Group:	COMMANDS	Active: first confirm	Max: 4000:0

Defines source for motor potentiometer setpoint increase frequency.

Common Settings:

722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)

722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)

722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)

722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

19.D = MOP up via BOP

P1036	BI: Enable MOP (DOWN-command)	Min: 0:0	Level
CStat:	CT	Datatype: U32	Def: 19:14
P-Group:	COMMANDS	Unit: -	Max: 4000:0

Defines source for motor potentiometer setpoint decrease frequency.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

19.E = MOP down via BOP

P1040	Setpoint of the MOP	Min: -650.00	Level
CStat:	CUT	Def: 5.00	
P-Group:	SETPOINT	Unit: Hz	Max: 650.00

Determines setpoint for motor potentiometer control (P1000 = 1).


Note:

If motor potentiometer setpoint is selected either as main setpoint or additional setpoint, the reverse direction will be inhibited by default of P1032 (inhibit reverse direction of MOP).

To re-enable reverse direction, set P1032 = 0.

r1050	CO: Act. Output freq. of the MOP	Min: -	Level
	Datatype: Float	Def: -	
P-Group:	SETPOINT	Unit: Hz	Max: -

Displays output frequency of motor potentiometer setpoint ([Hz]).

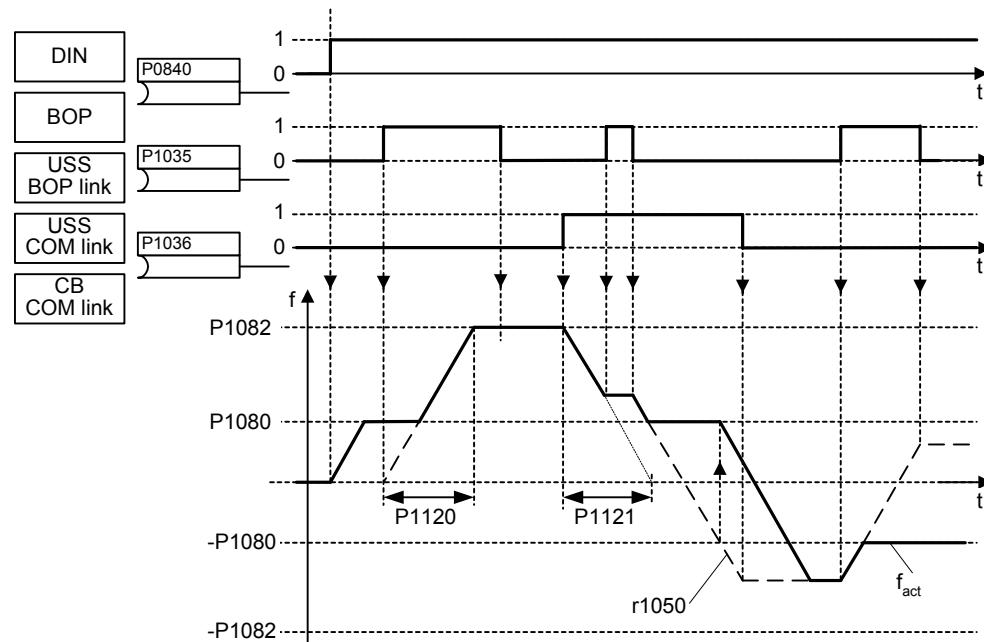

P1055	BI: Enable JOG right	Min: 0:0	Level
CStat:	CT	Datatype: U32	Def: 0:0
P-Group:	COMMANDS	Unit: -	Max: 4000:0

Defines source of JOG right when P0719 = 0 (remote selection of command/setpoint source).

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

19.8 = JOG right via BOP

P1056	BI: Enable JOG left	Min: 0:0	Level
CStat:	CT	Datatype: U32	Def: 0:0
P-Group:	COMMANDS	Unit: -	Max: 4000:0

Defines source of JOG left when P0719 = 0 (remote selection of command/setpoint source).

Common Settings:


- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

19.9 = JOG left via BOP

P1058	JOG frequency right	Min: 0.00	Level
CStat:	CUT	Datatype: Float	Def: 5.00
P-Group:	SETPOINT	Unit: Hz	Max: 650.00

Jogging increases the motor frequency by small amounts. The JOG buttons uses a non-latching switch on one of the digital inputs to control the motor frequency.

While JOG right is selected, this parameter determines the frequency at which the inverter will run.

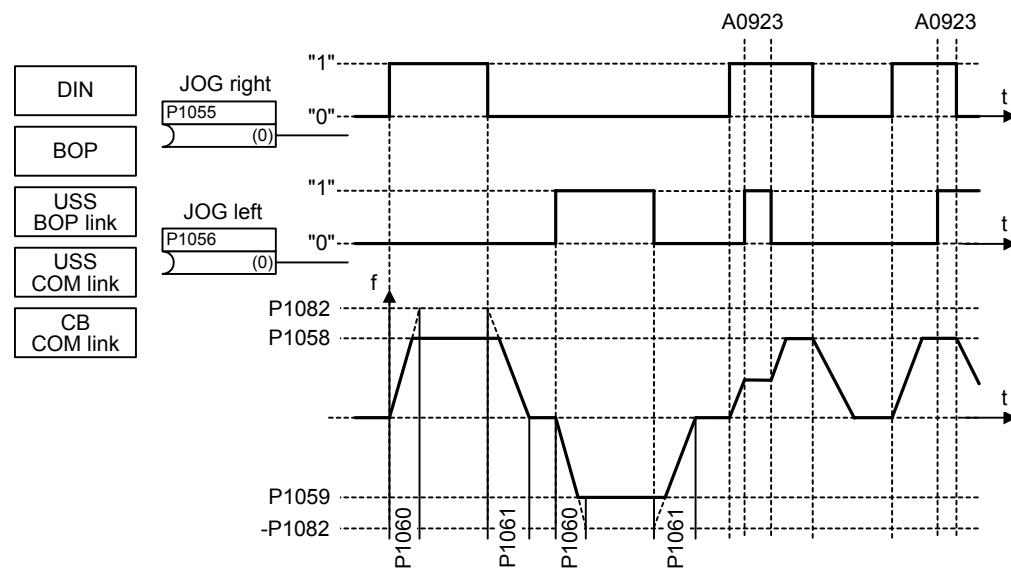

Dependency:

P1060 and P1061 set up and down ramp times respectively for jogging.

P1059	JOG frequency left	Min: 0.00	Level
CStat:	CUT	Datatype: Float	Def: 5.00
P-Group:	SETPOINT	Unit: Hz	Max: 650.00


While JOG left is selected, this parameter determines the frequency at which the inverter will run.

Dependency:

P1060 and P1061 set up and down ramp times respectively for jogging.

P1060	JOG ramp-up time	CStat: CUT P-Group: SETPOINT	Datatype: Float Active: first confirm	Unit: s QuickComm.: No	Min: 0.00 Def: 10.00 Max: 650.00	Level 2
--------------	-------------------------	---	--	---	---	--------------------------

Sets jog ramp-up time. This is the time used while jogging is active.

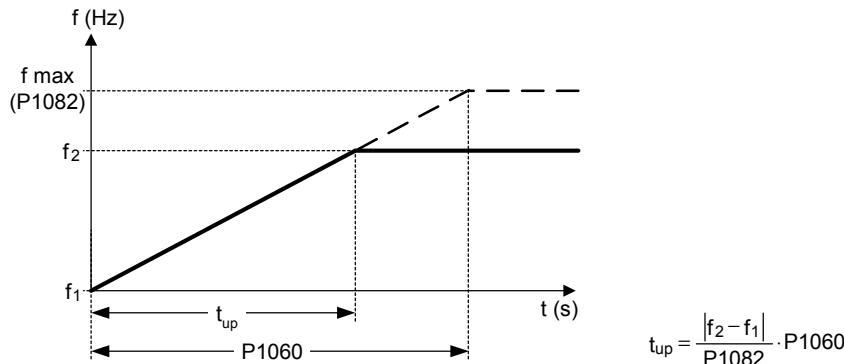

Notice:

Ramp times will be used as follows:

- P1060 / P1061 : JOG mode is active
- P1120 / P1121 : Normal mode (ON/OFF) is active
- P1060 / P1061 : Normal mode (ON/OFF) and P1124 is active

P1061	JOG ramp-down time	CStat: CUT P-Group: SETPOINT	Datatype: Float Active: first confirm	Unit: s QuickComm.: No	Min: 0.00 Def: 10.00 Max: 650.00	Level 2
--------------	---------------------------	---	--	---	---	--------------------------

Sets ramp-down time. This is the time used while jogging is active.

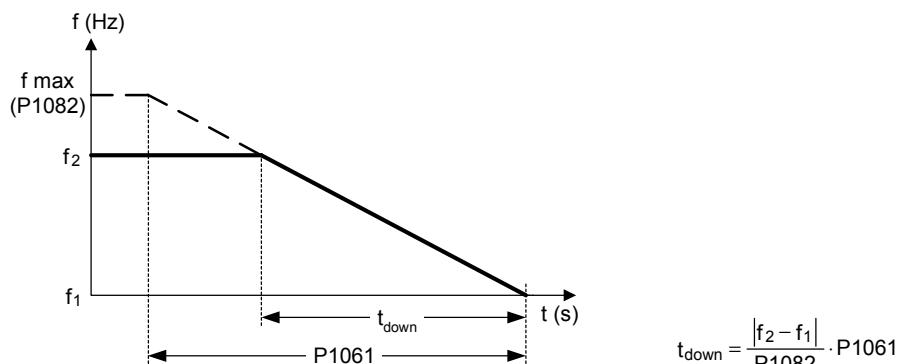
Notice:

Ramp times will be used as follows:

- P1060 / P1061 : JOG mode is active
- P1120 / P1121 : Normal mode (ON/OFF) is active
- P1060 / P1061 : Normal mode (ON/OFF) and P1124 is active

P1070	CI: Main setpoint	CStat: CT P-Group: SETPOINT	Datatype: U32 Active: first confirm	Unit: - QuickComm.: No	Min: 0:0 Def: 755:0 Max: 4000:0	Level 3
--------------	--------------------------	--	--	---	--	--------------------------

Defines source of main setpoint.

Common Settings:

- 755 = Analog input 1 setpoint
- 1024 = Fixed frequency setpoint
- 1050 = Motor potentiometer (MOP) setpoint

P1071	CI: Main setpoint scaling	CStat: CT P-Group: SETPOINT	Datatype: U32 Active: first confirm	Unit: - QuickComm.: No	Min: 0:0 Def: 1:0 Max: 4000:0	Level 3
--------------	----------------------------------	--	--	---	--	--------------------------

Defines source of the main setpoint scaling.

Common Settings:

- 755 = Analog input 1 setpoint
- 1024 = Fixed frequency setpoint
- 1050 = Motor potentiometer (MOP) setpoint

P1074	BI: Disable additional setpoint		Min: 0:0	Level
CStat:	CUT	Datatype: U32	Unit: -	Def: 0:0
P-Group:	COMMANDS	Active: first confirm	QuickComm.: No	Max: 4000:0

Disables additional setpoint

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

P1075	CI: Additional setpoint		Min: 0:0	Level
CStat:	CT	Datatype: U32	Unit: -	Def: 0:0
P-Group:	SETPOINT	Active: first confirm	QuickComm.: No	Max: 4000:0

Defines source of the additional setpoint (to be added to main setpoint).

Common Settings:

- 755 = Analog input 1 setpoint
- 1024 = Fixed frequency setpoint
- 1050 = Motor potentiometer (MOP) setpoint

P1076	CI: Additional setpoint scaling		Min: 0:0	Level
CStat:	CT	Datatype: U32	Unit: -	Def: 1:0
P-Group:	SETPOINT	Active: first confirm	QuickComm.: No	Max: 4000:0

Defines source of scaling for additional setpoint (to be added to main setpoint).

Common Settings:

- 1 = Scaling of 1.0 (100%)
- 755 = Analog input 1 Setpoint
- 1024 = Fixed Frequency Setpoint
- 1050 = MOP Setpoint

r1078	CO: Total frequency setpoint		Min: -	Level
		Datatype: Float	Unit: Hz	Def: -
P-Group:	SETPOINT			Max: -

Displays sum of main and additional setpoints in [Hz].

r1079	CO: Selected frequency setpoint		Min: -	Level
		Datatype: Float	Unit: Hz	Def: -
P-Group:	SETPOINT			Max: -

Displays selected frequency setpoint.

Following frequency setpoints are displayed:

- r1078 Total frequency setpoint
- P1058 JOG frequency right
- P1059 JOG frequency left

Dependency:

P1055 (BI: Enable JOG right) or P1056 (BI: Enable JOG left) define command source of JOG right or JOG left respectively.

Note:

P1055 = 0 and P1056 = 0 ==> Total frequency setpoint is selected.


P1080	Min. frequency				Min: 0.00	Level
CStat:	CUT	Datatype: Float	Unit: Hz		Def: 0.00	
P-Group:	SETPOINT	Active: Immediately	QuickComm.: Yes		Max: 650.00	1

Sets minimum motor frequency [Hz] at which motor will run irrespective of frequency setpoint.

The minimum frequency P1080 represents a masking frequency of 0 Hz for all frequency target value sources (e.g. ADC, MOP, FF, USS), with the exception of the JOG target value source (analogous to P1091). Thus the frequency band +/- P1080 is run through in optimum time by means of the acceleration/deceleration ramps. Dwelling in the frequency band is not possible (see example).

Furthermore, an undershoot of the actual frequency f_{act} below min. frequency P1080 is output by the following signal function.

Example:

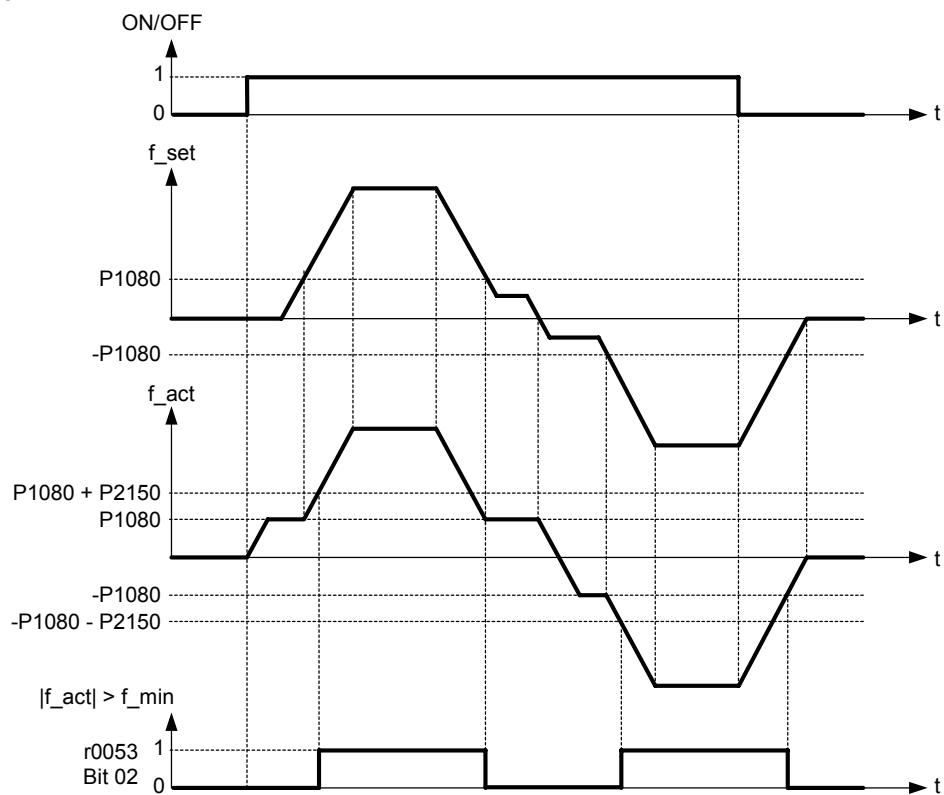

Note:

Value set here is valid both for clockwise and for anticlockwise rotation.


Under certain conditions (e.g. ramping, current limiting), motor can run below minimum frequency.

P1082	Max. frequency			Min: 0.00	Level
CStat:	CT	Datatype: Float	Unit: Hz	Def: 50.00	
P-Group:	SETPOINT	Active: first confirm	QuickComm.: Yes	Max: 650.00	1

Sets maximum motor frequency [Hz] at which motor will run irrespective of the frequency setpoint. The value set here is valid for both clockwise and anticlockwise rotation.

Furthermore, the monitoring function $|f_{act}| \geq P1082$ (r0052 Bit10, see example below) is affected by this parameter.

Example:

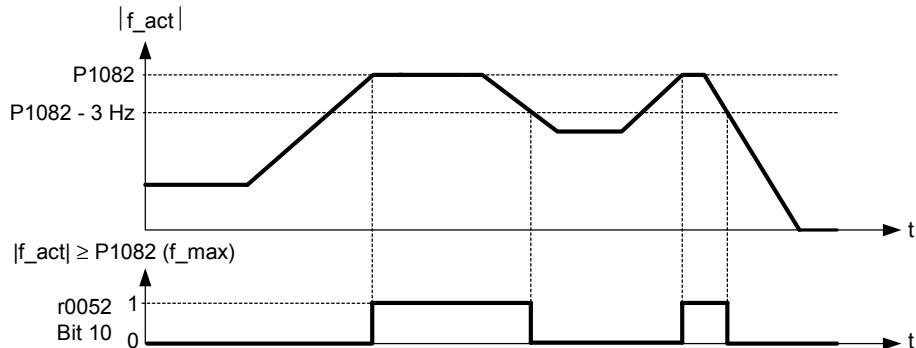

Dependency:

The maximal value of motor frequency P1082 is limited to pulse frequency P1800. P1082 is dependent on the derating characteristic as followed:

f_{max}	P1800			
	2 kHz	4 kHz	6 kHz	8 - 16 kHz
P1082	0 - 133.3 Hz	0 - 266.6 Hz	0 - 400 Hz	0 - 650 Hz

The maximum output frequency of inverter can be exceeded if one of the following is active:

- $P1335 \neq 0$ (Slip compensation active) :

$$f_{max}(P1335) = f_{max} + f_{slip,max} = P1082 + \frac{P1336}{100} \cdot \frac{r0330}{100} \cdot P0310$$

- $P1200 \neq 0$ (Flying restart active) :

$$f_{max}(P1200) = f_{max} + 2 \cdot f_{slip,nom} = P1082 + 2 \cdot \frac{r0330}{100} \cdot P0310$$

Note:

When using the setpoint source


- Analog Input
- USS
- CB (e.g. PROFIBUS)

The setpoint frequency (in Hz) is cyclically calculated using a percentage value (e.g. for the analog input r0754) or a hexadecimal value (e.g. for the USS r2018[1]) and the reference frequency P2000.

If for example P1082 = 80 Hz, P2000 = 50 Hz and the analog input is parameterised with P0757 = 0 V, P0758 = 0 %, P0759 = 10 V, P0760 = 100 %, a setpoint frequency of 50 Hz will be applied at 10 V of the analog input.

P1091	Skip frequency 1	CStat: CUT P-Group: SETPOINT	Datatype: Float Active: Immediately	Unit: Hz QuickComm.: No	Min: 0.00 Def: 0.00 Max: 650.00	Level 3
--------------	-------------------------	---	--	--	--	--------------------------

Defines skip frequency 1 which avoids effects of mechanical resonance and suppresses frequencies within +/- P1101 (skip frequency bandwidth).

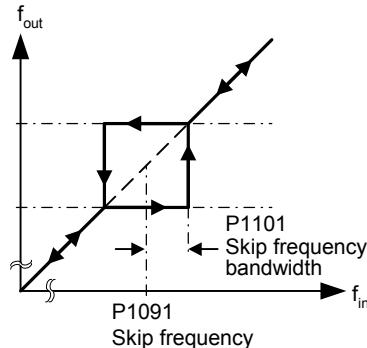
Notice:

Stationary operation is not possible within the suppressed frequency range; the range is merely passed through (on the ramp).

For example, if P1091 = 10 Hz and P1101 = 2 Hz, it is not possible to operate continuously between 10 Hz +/- 2 Hz (i.e. between 8 and 12 Hz).

P1092	Skip frequency 2	CStat: CUT P-Group: SETPOINT	Datatype: Float Active: Immediately	Unit: Hz QuickComm.: No	Min: 0.00 Def: 0.00 Max: 650.00	Level 3
--------------	-------------------------	---	--	--	--	--------------------------

Defines skip frequency 2 which avoids effects of mechanical resonance and suppresses frequencies within +/- P1101 (skip frequency bandwidth).

Details:

See P1091 (skip frequency 1).

P1093	Skip frequency 3	CStat: CUT P-Group: SETPOINT	Datatype: Float Active: Immediately	Unit: Hz QuickComm.: No	Min: 0.00 Def: 0.00 Max: 650.00	Level 3
--------------	-------------------------	---	--	--	--	--------------------------

Defines skip frequency 3 which avoids effects of mechanical resonance and suppresses frequencies within +/- P1101 (skip frequency bandwidth).

Details:

See P1091 (skip frequency 1).

P1094	Skip frequency 4	CStat: CUT P-Group: SETPOINT	Datatype: Float Active: Immediately	Unit: Hz QuickComm.: No	Min: 0.00 Def: 0.00 Max: 650.00	Level 3
--------------	-------------------------	---	--	--	--	--------------------------

Defines skip frequency 4 which avoids effects of mechanical resonance and suppresses frequencies within +/- P1101 (skip frequency bandwidth).

Details:

See P1091 (skip frequency 1).

P1101	Skip frequency bandwidth	CStat: CUT P-Group: SETPOINT	Datatype: Float Active: Immediately	Unit: Hz QuickComm.: No	Min: 0.00 Def: 2.00 Max: 10.00	Level 3
--------------	---------------------------------	---	--	--	---	--------------------------

Delivers frequency bandwidth to be applied to skip frequencies (in [Hz]).

Details:

See P1091 (skip frequency 1).

P1110	BI: Inhibit neg. freq. setpoint	Min: 0:0	Level
CStat:	CT	Datatype: U32	Def: 0:0
P-Group:	COMMANDS	Active: first confirm	Max: 4000:0

This parameter suppresses negative setpoints. Therefore, modification of the motor direction is inhibited to the setpoint channel.

Common Settings:


- 0 = Disabled
- 1 = Enabled

Notice:

Where

- If a min. frequency (P1080) and a negative setpoint are given, the motor is accelerated by a positive value in relationship to the min. frequency.
- This function does not disable the "reverse command functions" (e.g. Reverse, ON left); rather, a reverse command causes motor to run in the positive direction only, as described above.

P1110 = 1

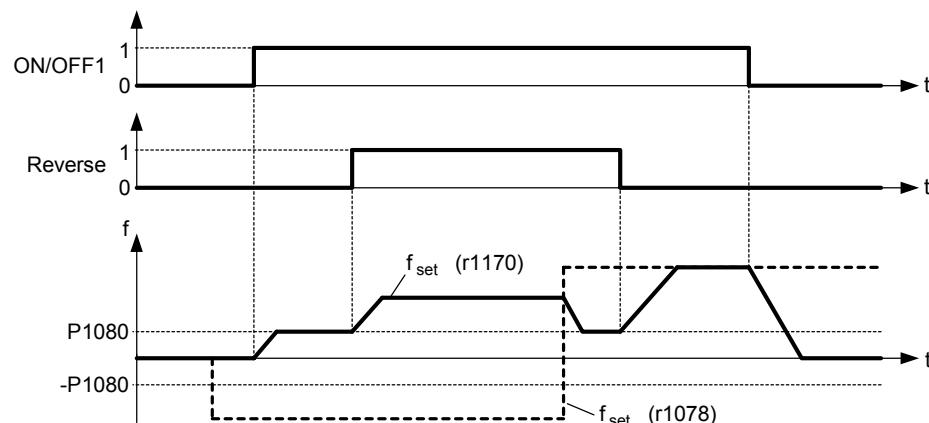

P1113	BI: Reverse	Min: 0:0	Level
CStat:	CT	Datatype: U32	Def: 722:1
P-Group:	COMMANDS	Active: first confirm	Max: 4000:0

Defines source of reverse command used when P0719 = 0 (remote selection of command/setpoint source).

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)

19.B = Reverse via BOP

r1114	CO: Freq. setup. after dir. ctrl.	Min: -	Level
	Datatype: Float	Unit: Hz	Def: -
P-Group:	SETPOINT		Max: -

Displays setpoint frequency after change of direction.


r1119	CO: Freq. setpoint before RFG	Min: -	Level
	Datatype: Float	Unit: Hz	Def: -
P-Group:	SETPOINT		Max: -

Displays output frequency after modification by other functions, e.g.:

- P1110 BI: Inhibit neg. freq. setpoint,
- P1091 - P1094 skip frequencies,
- P1080 Min. frequency,
- P1082 Max. frequency,
- limitations,
- etc.

P1120	Ramp-up time	CStat: CUT P-Group: SETPOINT	Datatype: Float Active: first confirm	Unit: s QuickComm.: Yes	Min: 0.00 Def: 10.00 Max: 650.00	Level 1
--------------	---------------------	---	--	--	---	--------------------------

Time taken for motor to accelerate from standstill up to maximum motor frequency (P1082) when no rounding is used.

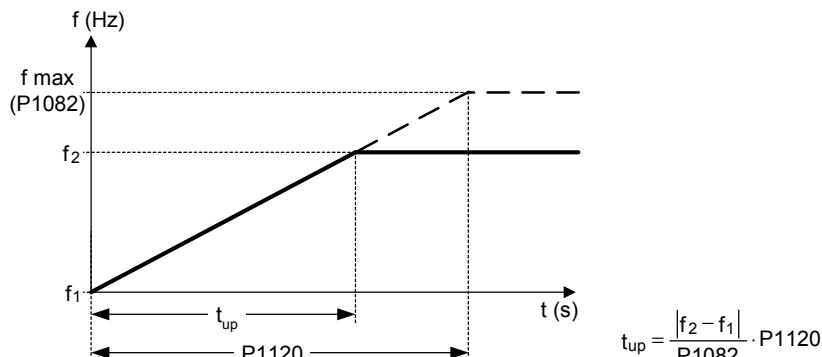

Setting the ramp-up time too short can cause the inverter to trip (overcurrent).

Note:

If an external frequency setpoint with set ramp rates is used (e.g. from a PLC). The best way to achieve optimum drive performance is to set ramp times in P1120 and P1121 slightly shorter than those of the PLC.


Notice:

Ramp times will be used as follows:

- P1060 / P1061 : JOG mode is active
- P1120 / P1121 : Normal mode (ON/OFF) is active
- P1060 / P1061 : Normal mode (ON/OFF) and P1124 is active

P1121	Ramp-down time	CStat: CUT P-Group: SETPOINT	Datatype: Float Active: first confirm	Unit: s QuickComm.: Yes	Min: 0.00 Def: 10.00 Max: 650.00	Level 1
--------------	-----------------------	---	--	--	---	--------------------------

Time taken for motor to decelerate from maximum motor frequency (P1082) down to standstill when no rounding is used.

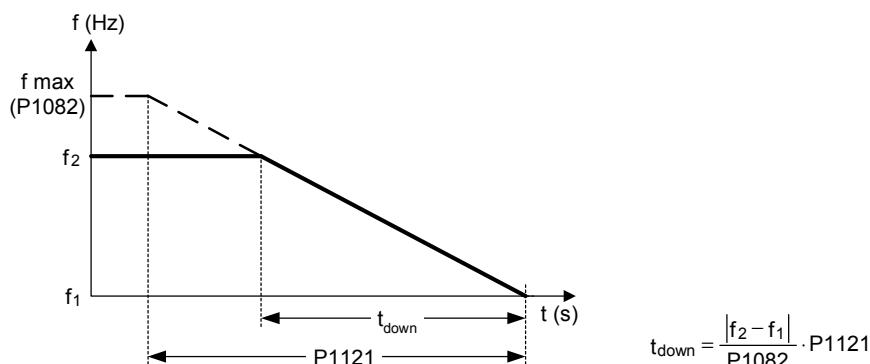

Notice:

Setting the ramp-down time too short can cause the inverter to trip (overcurrent (F0001) / overvoltage (F0002)).

Ramp times will be used as follows:

- P1060 / P1061 : JOG mode is active
- P1120 / P1121 : Normal mode (ON/OFF) is active
- P1060 / P1061 : Normal mode (ON/OFF) and P1124 is active

P1124	BI: Enable JOG ramp times	Min: 0:0	Level
CStat: CT	Datatype: U32	Unit: -	Def: 0:0
P-Group: COMMANDS	Active: first confirm	QuickComm.: No	Max: 4000:0

Defines source for switching between jog ramp times (P1060, P1061) and normal ramp times (P1120, P1121) as applied to the RFG. This parameter is valid for normal mode (ON/OFF) only.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)

Notice:


P1124 does not have any impact when JOG mode is selected. In this case, jog ramp times (P1060, P1061) will be used all the time.

Ramp times will be used as follows:

- P1060 / P1061 : JOG mode is active
- P1120 / P1121 : Normal mode (ON/OFF) is active
- P1060 / P1061 : Normal mode (ON/OFF) and P1124 is active

P1130	Ramp-up initial rounding time	Min: 0.00	Level
CStat: CUT	Datatype: Float	Unit: s	Def: 0.00
P-Group: SETPOINT	Active: first confirm	QuickComm.: No	Max: 40.00

Defines initial rounding time in seconds as shown on the diagram below.

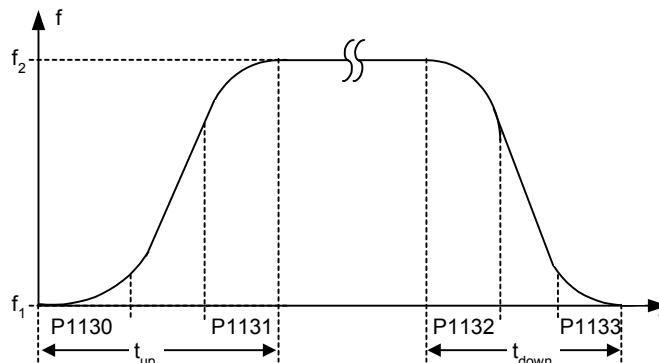

where:

$$\text{for } \frac{f_2 - f_1}{P1082} \cdot P1120 \geq \frac{1}{2}(P1130 + P1131)$$

$$t_{\text{up}} = \frac{1}{2}(P1130 + P1131) + \frac{f_2 - f_1}{P1082} \cdot P1120$$

$$\text{for } \frac{f_2 - f_1}{P1082} \cdot P1121 \geq \frac{1}{2}(P1132 + P1133)$$

$$t_{\text{down}} = \frac{1}{2}(P1132 + P1133) + \frac{f_2 - f_1}{P1082} \cdot P1121$$

Note:

Rounding times are recommended, since they prevent an abrupt response, thus avoiding detrimental effects on the mechanics.

Notice:

Rounding times are not recommended when analog inputs are used, since they would result in overshoot/undershoot in the inverter response.

P1131	Ramp-up final rounding time	Min: 0.00	Level
CStat: CUT	Datatype: Float	Unit: s	Def: 0.00
P-Group: SETPOINT	Active: first confirm	QuickComm.: No	Max: 40.00

Defines rounding time at end of ramp-up as shown in P1130 (ramp-up initial rounding time).

Note:

Rounding times are recommended, since they prevent an abrupt response, thus avoiding detrimental effects on the mechanics.

Notice:

Rounding times are not recommended when analog inputs are used, since they would result in overshoot/undershoot in the inverter response.

P1132	Ramp-down initial rounding time		Min: 0.00	Level
CStat:	CUT	Datatype: Float	Def: 0.00	
P-Group:	SETPOINT	Active: first confirm	Max: 40.00	2

Defines rounding time at start of ramp-down as shown in P1130 (ramp-up initial rounding time).

Note:

Rounding times are recommended, since they prevent an abrupt response, thus avoiding detrimental effects on the mechanics.

Notice:

Rounding times are not recommended when analog inputs are used, since they would result in overshoot/undershoot in the inverter response.

P1133	Ramp-down final rounding time		Min: 0.00	Level
CStat:	CUT	Datatype: Float	Def: 0.00	
P-Group:	SETPOINT	Active: first confirm	Max: 40.00	2

Defines rounding time at end of ramp-down as shown in P1130 (ramp-up initial rounding time).

Note:

Rounding times are recommended, since they prevent an abrupt response, thus avoiding detrimental effects on the mechanics.

Notice:

Rounding times are not recommended when analog inputs are used, since they would result in overshoot/undershoot in the inverter response.



P1134	Rounding type		Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0	
P-Group:	SETPOINT	Active: Immediately	Max: 1	2

Defines the smoothing which is active by setpoint modifications during acceleration or deceleration (e.g. new setpoint, OFF1, OFF3, REV).

This smoothing is applied, if the motor is ramped-up or ramped-down and

- P1134 = 0,
- P1132 > 0, P1133 > 0 and
- the setpoint is not yet reached.

P1132 > 0, P1133 > 0

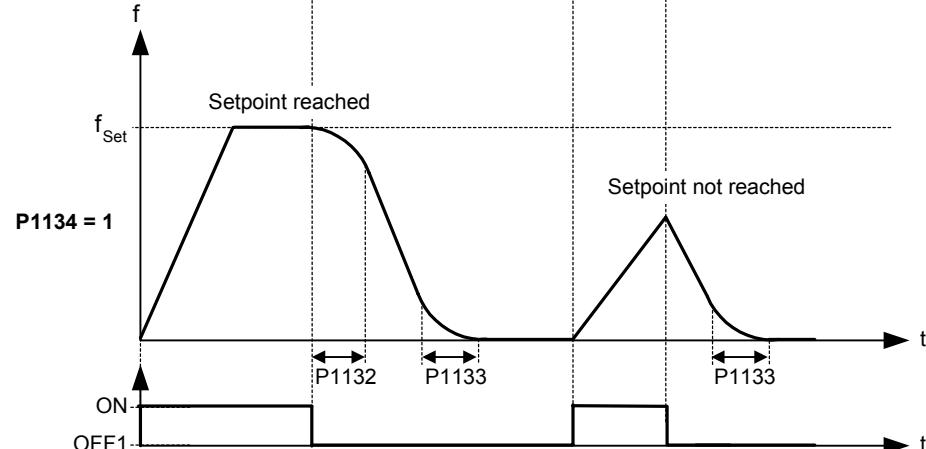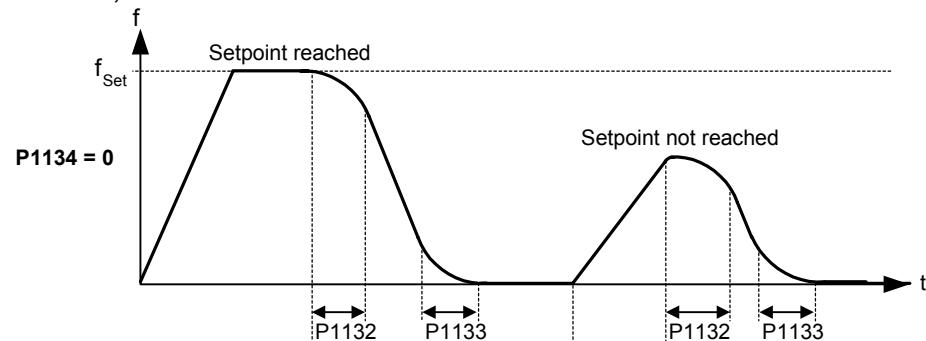

Possible Settings:

- 0 Continuous smoothing
- 1 Discontinuous smoothing

Dependency:

No effect until P1132 (Ramp-down initial rounding time) or P1133 (Ramp-down final rounding time) > 0 s.

P1135	OFF3 ramp-down time			Min: 0.00	Level
CStat:	CUT	Datatype: Float	Unit: s	Def: 5.00	
P-Group:	SETPOINT	Active: first confirm	QuickComm.: Yes	Max: 650.00	2

Defines ramp-down time from maximum frequency to standstill for OFF3 command.

Note:

This time may be exceeded if the VDC_max. level is reached.

P1140	BI: RFG enable			Min: 0:0	Level
CStat:	CT	Datatype: U32	Unit: -	Def: 1:0	
P-Group:	COMMANDS	Active: first confirm	QuickComm.: No	Max: 4000:0	4

Defines command source of RFG enable command (RFG: ramp function generator). If binary input is equal to zero than the RFG output will be set immediately to 0.

P1141	BI: RFG start			Min: 0:0	Level
CStat:	CT	Datatype: U32	Unit: -	Def: 1:0	
P-Group:	COMMANDS	Active: first confirm	QuickComm.: No	Max: 4000:0	4

Defines command source of RFG start command (RFG: ramp function generator). If binary input is equal to zero than the RFG output is held at it present value.

P1142	BI: RFG enable setpoint			Min: 0:0	Level
CStat:	CT	Datatype: U32	Unit: -	Def: 1:0	
P-Group:	COMMANDS	Active: first confirm	QuickComm.: No	Max: 4000:0	4


Defines command source of RFG enable setpoint command (RFG: ramp function generator). If binary input is equal to zero than the RFG input will be set to zero and the RFG output will be ramp-down to zero.

r1170	CO: Frequency setpoint after RFG			Min: -	Level
		Datatype: Float	Unit: Hz	Def: -	
		P-Group: SETPOINT		Max: -	3

Displays overall frequency setpoint after ramp generator.

P1200	Flying start	CStat: CUT P-Group: FUNC	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	Min: 0 Def: 0 Max: 6	Level 2
--------------	---------------------	---	--	---	---	--------------------------

Starts inverter onto a spinning motor by rapidly changing the output frequency of the inverter until the actual motor speed has been found. Then, the motor runs up to setpoint using the normal ramp time.

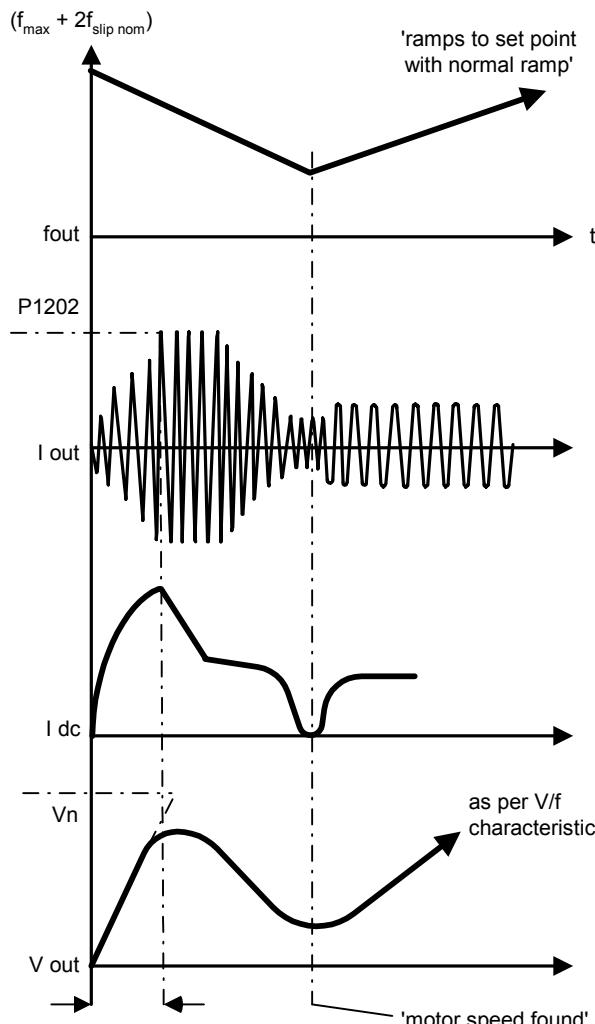
Possible Settings:

- 0 Flying start disabled
- 1 Flying start is always active, start in direction of setpoint
- 2 Flying start is active if power on, fault, OFF2, start in direction of setpoint
- 3 Flying start is active if fault, OFF2, start in direction of setpoint
- 4 Flying start is always active, only in direction of setpoint
- 5 Flying start is active if power on, fault, OFF2, only in direction of setpoint
- 6 Flying start is active if fault, OFF2, only in direction of setpoint

Note:

Useful for motors with high inertia loads.

Settings 1 to 3 search in both directions.

Settings 4 to 6 search only in direction of setpoint.

Notice:

Flying start must be used in cases where the motor may still be turning (e.g. after a short mains break) or can be driven by the load. Otherwise, overcurrent trips will occur.

P1202	Motor-current: Flying start	CStat: CUT P-Group: FUNC	Datatype: U16 Active: first confirm	Unit: % QuickComm.: No	Min: 10 Def: 100 Max: 200	Level 3
--------------	------------------------------------	---	--	---	--	--------------------------

Defines search current used for flying start.


Value is in [%] based on rated motor current (P0305).

Note:

Reducing the search current may improve performance for flying start if the inertia of the system is not very high.

P1203	Search rate: Flying start	Min: 10	Level
CStat: CUT	Datatype: U16	Def: 100	
P-Group: FUNC	Active: first confirm	Max: 200	3

Sets factor by which the output frequency changes during flying start to synchronize with turning motor. This value is entered in [%] defines the reciprocal initial gradient in the search sequence (see curve below). Parameter P1203 influences the time taken to search for the motor frequency.

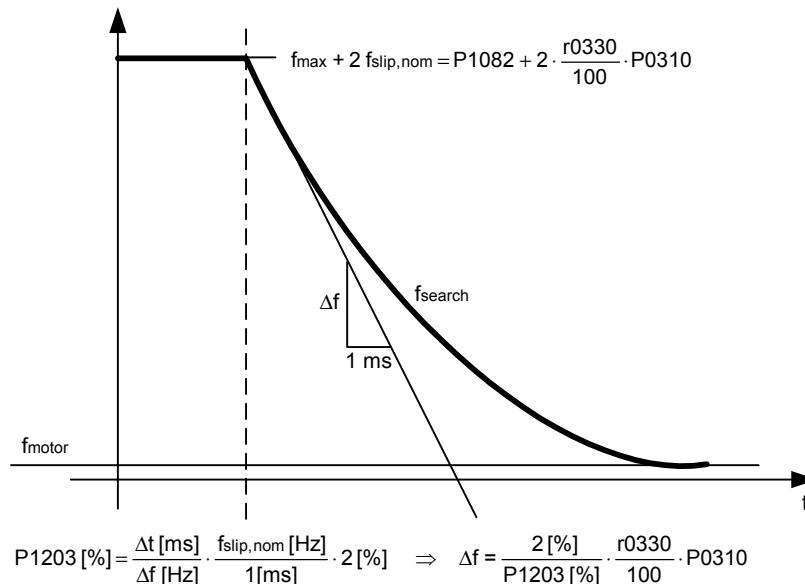

The search time is the time taken to search through all frequencies between max. frequency $P1082 + 2 \times f_{\text{slip}}$ to 0 Hz.

$P1203 = 100 \%$ is defined as giving a rate of 2 % of $f_{\text{slip},\text{nom}} / [\text{ms}]$.

$P1203 = 200 \%$ would result in a rate of frequency change of 1 % of $f_{\text{slip},\text{nom}} / [\text{ms}]$.

Example:

For a motor with 50 Hz, 1350 rpm, 100 % would produce a maximum search time of 600 ms. If the motor is turning, the motor frequency is found in a shorter time.

Note:

A higher value produces a flatter gradient and thus a longer search time.

A lower value has the opposite effect.

r1204	Status word: Flying start V/f	Min: -	Level
	Datatype: U16	Def: -	
	P-Group: FUNC	Unit: -	4

Bit parameter for checking and monitoring states during search, if V/f control mode is selected (see P1300).

Bitfields:

Bit00	Current applied	0	NO	1	YES
Bit01	Current could not be applied	0	NO	1	YES
Bit02	Voltage reduced	0	NO	1	YES
Bit03	Slope-filter started	0	NO	1	YES
Bit04	Current less threshold	0	NO	1	YES
Bit05	Current-minimum	0	NO	1	YES
Bit07	Speed could not be found	0	NO	1	YES

P1210	Automatic restart			Min: 0	Level
CStat:	CUT	Datatype: U16	Unit: -	Def: 1	
P-Group:	FUNC	Active: first confirm	QuickComm.: No	Max: 6	2

Configures automatic restart function

Possible Settings:

- | | | |
|---|--|----------------|
| 0 | Disabled | |
| 1 | Trip reset after power on, | P1211 disabled |
| 2 | Restart after mains blackout, | P1211 disabled |
| 3 | Restart after mains brownout or fault, | P1211 enabled |
| 4 | Restart after mains brownout, | P1211 enabled |
| 5 | Restart after mains blackout and fault, | P1211 disabled |
| 6 | Restart after mains brown- /blackout or fault, | P1211 disabled |

Dependency:

Automatic restart requires constant ON command via a digital input wire link.



Caution:

P1210 > 2 can cause the motor to restart automatically without toggling the ON command !

Notice:

A "mains brownout" is where the power is interrupted and re-applied before the display on the BOP (if one is fitted to the inverter) has gone dark (a very short mains break where the DC link has not fully collapsed).

A "mains blackout" is where the display has gone dark (a long mains break where the DC link has fully collapsed) before the power is re-applied.

P1210 = 0:

Automatic restart is disabled.

P1210 = 1:

The inverter will acknowledge (reset) faults i.e. it will reset a fault when it is re-applied. This means the inverter must be fully powered down, a brownout is not sufficient. The inverter will not run until the ON command has been toggled.

P1210 = 2:

The inverter will acknowledge the fault F0003 at power on after blackout and restarts the drive. It is necessary that the ON command is wired via digital input (DIN).

P1210 = 3:

For these settings it is fundamental that the drive only restarts if it has been in a RUN state at the time of the faults (F0003, etc.). The inverter will acknowledge the fault and restarts the drive after a blackout or brownout. It is necessary that the ON command is wired via digital input (DIN).

P1210 = 4:

For these settings it is fundamental that the drive only restarts if it has been in a RUN state at the time of the fault (F0003). The inverter will acknowledge the fault and restarts the drive after a blackout or brownout. It is necessary that the ON command is wired via digital input (DIN).

P1210 = 5:

The inverter will acknowledge the faults F0003 etc. at power on after blackout and restarts the drive. It is necessary that the ON command is wired via digital input (DIN).

P1210 = 6:

The inverter will acknowledge the faults (F0003 etc.) at power on after blackout or brownout and restarts the drive. It is necessary that the ON command is wired via digital input (DIN). Setting 6 causes the motor to restart immediately.

Following table presents an overview of parameter P1210 and its functionality.

P1210	ON always active				ON in no-voltage condition All faults + F0003
	Fault F0003 on Blackout	Brownout	All other faults on Blackout	Brownout	
0	–	–	–	–	–
1	Fault acknowl.	–	–	–	Fault acknowl.
2	Fault acknowl. + restart	–	–	–	Fault acknowl. + restart
3	Fault acknowl. + restart	Fault acknowl. + restart	Fault acknowl. + restart	Fault acknowl. + restart	–
4	Fault acknowl. + restart	Fault acknowl. + restart	–	–	–
5	Fault acknowl. + restart	–	–	Fault acknowl. + restart	Fault acknowl. + restart
6	Fault acknowl. + restart	Fault acknowl. + restart	Fault acknowl. + restart	Fault acknowl. + restart	Fault acknowl. + restart

Flying start must be used in cases where the motor may still be turning (e.g. after a short mains break) or can be driven by the load (P1200).

P1211	Number of restart attempts	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 3
P-Group:	FUNC	Unit: - Active: first confirm	Max: 10


Specifies number of times inverter will attempt to restart if automatic restart P1210 is activated.

P1215	Holding brake enable			Min: 0	Level
CStat:	T	Datatype: U16	Unit: -	Def: 0	
P-Group:	FUNC	Active: first confirm	QuickComm.: No	Max: 1	2


Enables/disables holding brake function.

This function applies the following profile to the inverter:

ON / OFF1/OFF3:

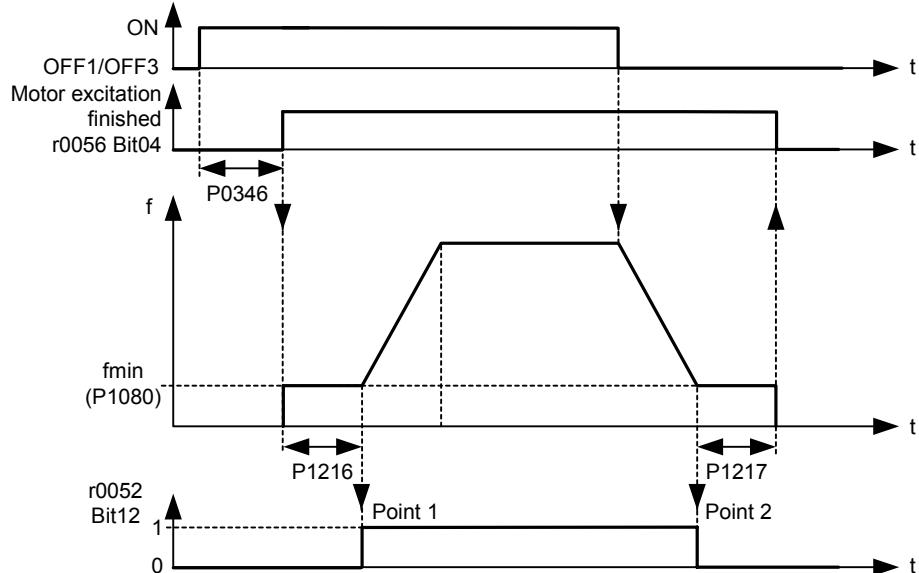

ON / OFF2:

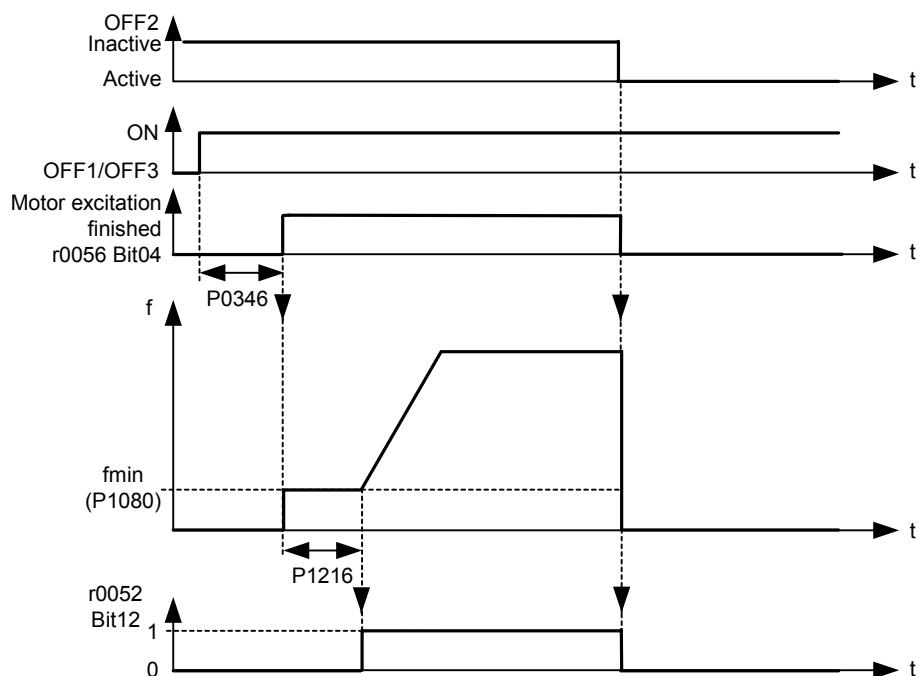

Possible Settings:

- 0 Motor holding brake disabled
- 1 Motor holding brake enabled



Caution:

It is not permissible to use the motor holding brake as working brake, as it is generally only designed for a limited number of emergency braking operations.

Note:

The brake relay opens at point 1, if enabled using P0731 (function of digital output), and closes at point 2.

A typical value of min. frequency P1080 for motor holding brake is the slip frequency of the motor r0330.

P1216	Holding brake release delay		Min: 0.0	Level
CStat:	T	Datatype: Float	Def: 1.0	
P-Group:	FUNC	Active: first confirm	Max: 20.0	2

Defines period during which inverter runs at min. frequency P1080 before ramping up at point 1 (as shown in P1215 - holding brake enable). Inverter starts at min. frequency P1080 on this profile, i.e. it does not use a ramp.

Note:

A typical value of min. frequency P1080 for this type of application is the slip frequency of the motor.

You can calculate the rated slip frequency by using the following formula:

$$f_{\text{slip}}[\text{Hz}] = \frac{f_{0330}}{100} \cdot P0310 = \frac{n_{\text{syn}} - n_n}{n_{\text{syn}}} \cdot f_n$$

Notice:

If used to hold the motor at a certain frequency against a mechanical brake (i.e. you are using a relay to control mechanical brake), it is important that min. frequency P1080 < 5 Hz; otherwise, the current drawn may be too high and the relay may not open.

Details:

See diagram P1215 (holding brake enable).

P1217	Holding time after ramp down		Min: 0.0	Level
CStat:	T	Datatype: Float	Def: 1.0	
P-Group:	FUNC	Active: first confirm	Max: 20.0	2

Defines time for which inverter runs at minimum frequency (P1080) after ramping down at point 2.

Details:


See diagram P1215 (holding brake enable).

P1230	BI: Enable DC braking	Min: 0:0	Level
CStat: CUT	Datatype: U32	Def: 0:0	
P-Group: COMMANDS	Active: first confirm	Unit: -	Max: 4000:0

Enables DC braking via a signal applied from an external source. Function remains active while external input signal is active.

DC braking causes the motor to stop rapidly by applying a DC braking current (current applied also holds shaft stationary).

When the DC braking signal is applied, the inverter output pulses are blocked and the DC current is not applied until the motor has been sufficiently demagnetized.

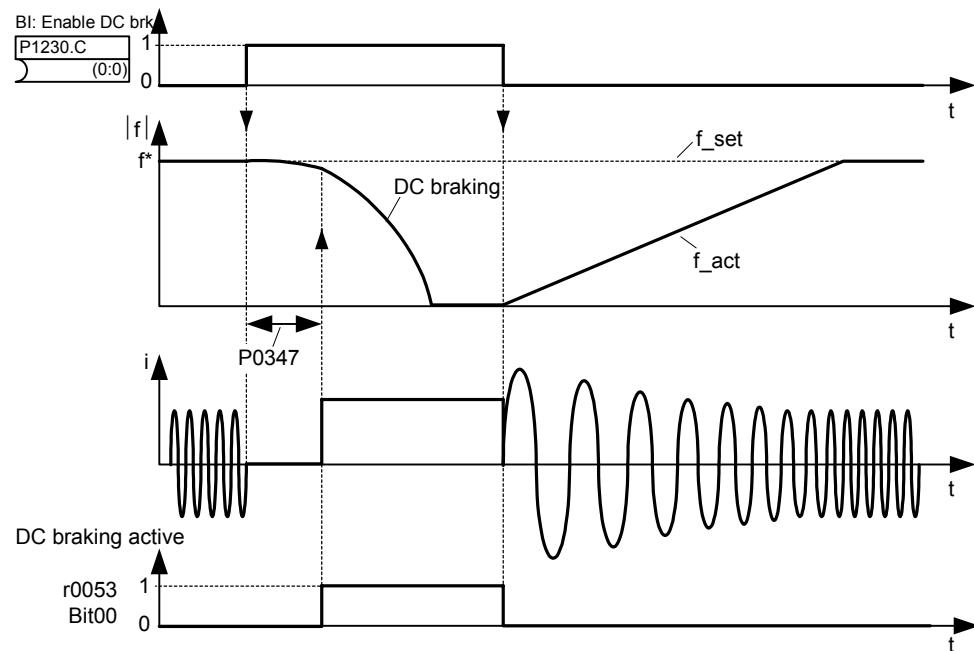

Note: DC brake can be applied in drive states r0002 = 1, 4, 5

The level of DC braking is set in P1232 (DC braking current - relative to the rated motor current) which is set to 100 % by default.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)



Caution:

With the DC braking, the kinetic energy of the motor is converted into heat in the motor. The drive could overheat if the remains in this status for an excessive period of time !

DC braking is not possible when using a synchronous motor (i.e. P0300 = 2).

Notice:


This delay time is set in P0347 (demagnetization time). If this delay is too short, overcurrent trips can occur.

P1232	DC braking current	Min: 0	Level
CStat: CUT	Datatype: U16	Def: 100	
P-Group: FUNC	Active: Immediately	Unit: %	Max: 250

Defines level of DC current in [%] relative to rated motor current (P0305).

P1233	Duration of DC braking	Min: 0	Level
CStat: CUT	Datatype: U16	Def: 0	
P-Group: FUNC	Active: Immediately	Unit: s	Max: 250

Defines duration for which DC injection braking is to be active following an OFF1 or OFF3 command. Setting this parameter between 1 and 250 sets the time duration (in seconds) of the DC injection starting with the OFF1 or OFF3 command.

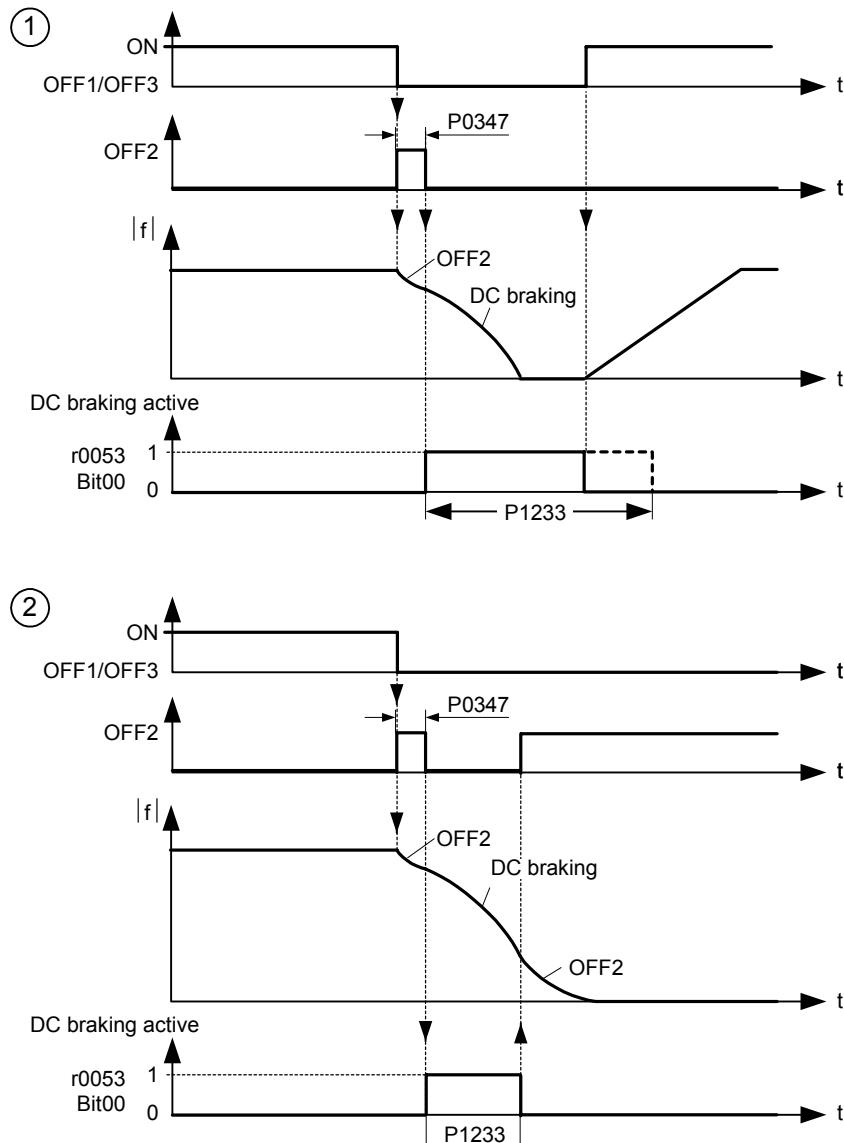

Parameter P1232 still controls the level of DC injection.

Value:

P1233 = 0 :
Not active following OFF1 / OFF3.

P1233 = 1 - 250 :
Active for the specified duration.



Caution:

With the DC braking, the kinetic energy of the motor is converted into heat in the motor. The drive could overheat if it remains in this status for an excessive period of time !

DC braking is not possible when using a synchronous motor (i.e. P0300 = 2).

Notice:

The DC braking function causes the motor to stop rapidly by applying a DC braking current (the current applied also holds the shaft stationary). When the DC braking signal is applied, the inverter output pulses are blocked and the DC current is applied until the motor has been sufficiently demagnetized (demagnetization time is calculated automatically from motor data).

The inverter will not restart if an ON-command is given during this period.

P1236	Compound braking current		Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0	
P-Group:	FUNC	Active: Immediately	Max: 250	2

Defines DC level superimposed on AC waveform after exceeding DC-link voltage threshold of compound braking. The value is entered in [%] relative to rated motor current (P0305).

If P1254 = 0 :

Compound braking switch-on level


$$U_{DC_Comp} = 1.13 \cdot \sqrt{2} \cdot V_{mains} = 1.13 \cdot \sqrt{2} \cdot P0210$$

otherwise :

Compound braking switch-on level

$$U_{DC_Comp} = 0.98 \cdot r1242$$

The Compound Brake is an overlay of the DC brake function with regenerative braking (effective braking at the ramp) after OFF1 or OFF3. This enables braking with controlled motor frequency and a minimum of energy returned to the motor. Through optimization of the ramp-down time and the compound braking an efficient braking without additional HW components is possible.

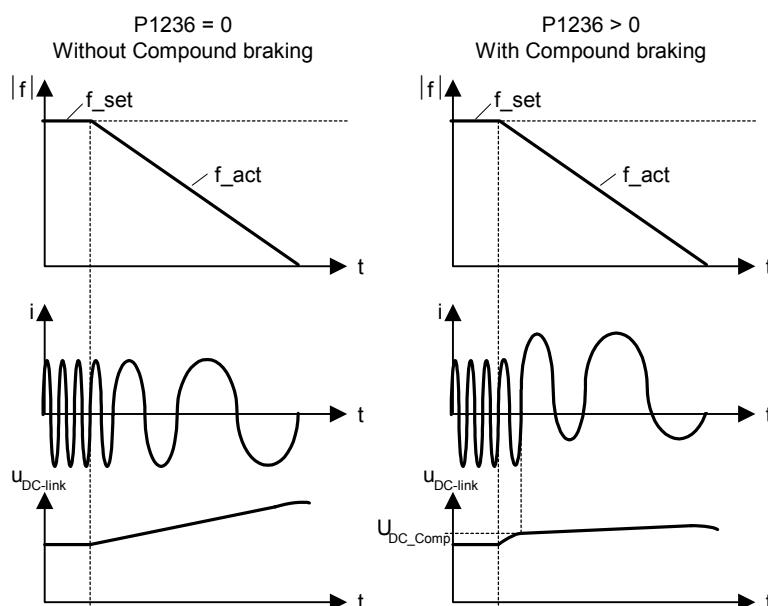

Value:

P1236 = 0 :

Compound braking disabled.

P1236 = 1 - 250 :

Level of DC braking current defined as a [%] of rated motor current (P0305).

Dependency:

Compound braking depends on the DC link voltage only (see threshold above).

It is disabled, when:

- DC braking is active
- Flying start is active

Notice:

Increasing the value will generally improve braking performance; however, if you set the value too high, an overcurrent trip may result.

If used with dynamic braking enabled as well compound braking will take priority.

If used with the Vdc max controller enabled the drive behaviour whilst braking may be worsened particularly with high values of compound braking.

P1240	Configuration of Vdc controller		Min: 0	Level
CStat:	CT	Datatype: U16	Def: 1	
P-Group:	FUNC	Active: Immediately	Max: 1	3

Enables / disables Vdc controller.

The Vdc controller dynamically controls the DC link voltage to prevent overvoltage trips on high inertia systems.

Possible Settings:


- 0 Vdc controller disabled
- 1 Vdc-max controller enabled

Note:

Vdc max controller automatically increases ramp-down times to keep the DC-link voltage (r0026) within limits (r1242).

r1242	CO: Switch-on level of Vdc-max	Datatype: Float	Unit: V	Min: -	Level
P-Group:	FUNC			Def: -	3

Displays switch-on level of Vdc max controller.

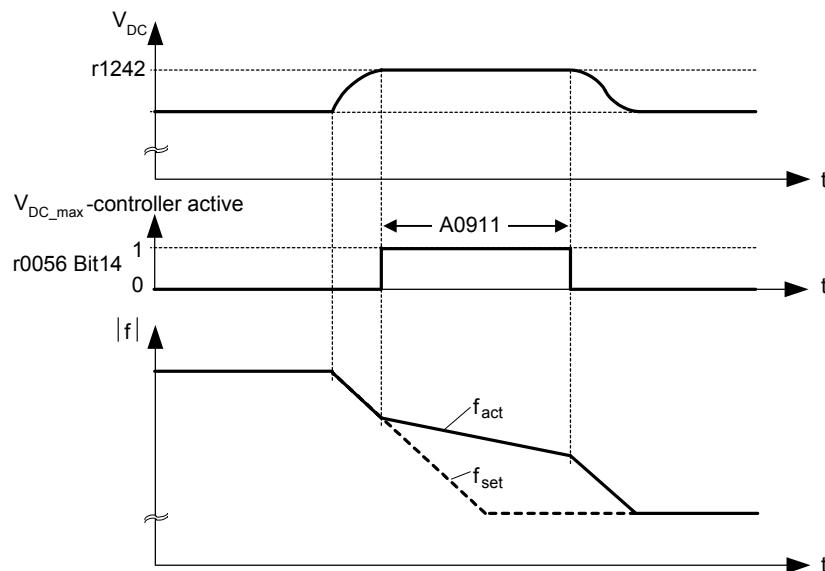

Following equation is only valid, if P1254 = 0 :

$$r1242 = 1.15 \cdot \sqrt{2} \cdot V_{mains} = 1.15 \cdot \sqrt{2} \cdot P0210$$

otherwise :

r1242 is internally calculated

P1243	Dynamic factor of Vdc-max	Datatype: U16	Unit: %	Min: 10	Level
CStat:	CUT	Active: Immediately	QuickComm.: No	Def: 100	3
P-Group:	FUNC			Max: 200	

Defines dynamic factor for DC link controller in [%].

Dependency:

P1243 = 100 % means parameters P1250, P1251 and P1252 (gain, integration time and differential time) are used as set. Otherwise, these are multiplied by P1243 (dynamic factor of Vdc-max).

Note:

Vdc controller adjustment is calculated automatically from motor and inverter data.

P1250	Gain of Vdc-controller	Datatype: Float	Unit: -	Min: 0.00	Level
CStat:	CUT	Active: Immediately	QuickComm.: No	Def: 1.00	4
P-Group:	FUNC			Max: 10.00	

Enters gain for Vdc controller.

P1251	Integration time Vdc-controller	Datatype: Float	Unit: ms	Min: 0.1	Level
CStat:	CUT	Active: Immediately	QuickComm.: No	Def: 40.0	4
P-Group:	FUNC			Max: 1000.0	

Enters integral time constant for Vdc controller.

P1252	Differential time Vdc-controller	Datatype: Float	Unit: ms	Min: 0.0	Level
CStat:	CUT	Active: Immediately	QuickComm.: No	Def: 1.0	4
P-Group:	FUNC			Max: 1000.0	

Enters differential time constant for Vdc controller.

P1253	Vdc-controller output limitation	Datatype: Float	Unit: Hz	Min: 0.00	Level
CStat:	CUT	Active: Immediately	QuickComm.: No	Def: 10.00	3
P-Group:	FUNC			Max: 600.00	

Limits maximum effect of Vdc max controller.

P1254	Auto detect Vdc switch-on levels	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 1
P-Group:	FUNC	Unit: -	Max: 1

Enables/disables auto-detection of switch-on levels for Vdc control functionalities.

Following switch-on levels are calculated

- Switch-on level compound brake
- Switch-on level Vdc_max controller r1242

Possible Settings:

- | | |
|---|----------|
| 0 | Disabled |
| 1 | Enabled |

Note:


The switch-on thresholds are only calculated during the start-up of the inverter after connection to the mains. An online-adaption is not performed during operation. This means that modification of P1254 does not immediately take effect and variations in the mains are also not initially taken into account.

P1254 = 0 (Automatic Detection disabled):

The above thresholds are calculated via P0210, if automatic detection is disabled.

P1300	Control mode	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 0
P-Group:	CONTROL	Unit: -	Max: 3

Controls relationship between speed of motor and voltage supplied by inverter as illustrated in the diagram below.

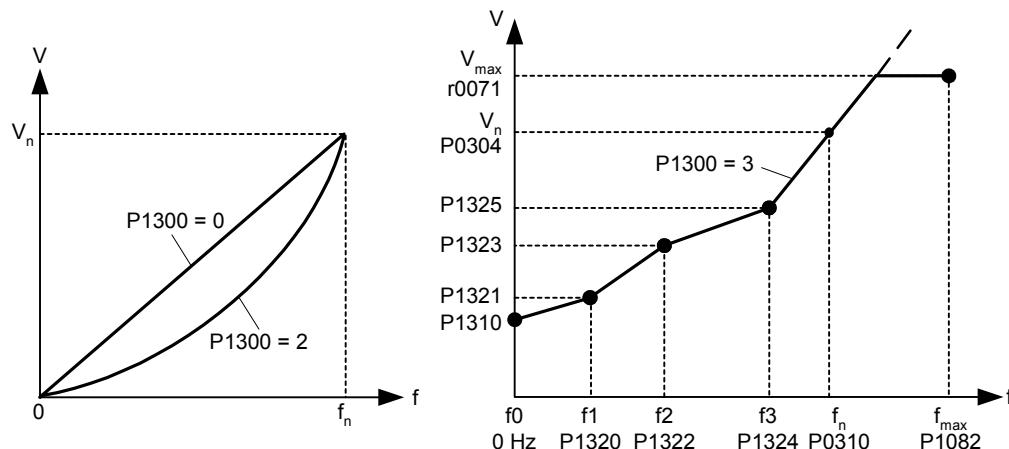

Possible Settings:

- | | |
|---|--|
| 0 | V/f with linear characteristic |
| 1 | V/f with FCC |
| 2 | V/f with parabolic characteristic |
| 3 | V/f with programmable characteristic |

Note:

- P1300 = 1 : V/f with FCC (flux current control)
- Maintains motor flux current for improved efficiency.
- If FCC is chosen, linear V/f is active at low frequencies.

- P1300 = 2 : V/f with a quadratic characteristic
- Suitable for centrifugal fans / pumps

- P1300 = 3 : V/f with a programmable characteristic
- User defined characteristic (see P1320)
- For synchronous motors (e.g. SIEMOSYN motors)

The following table presents an overview of control parameters (V/f) that can be modified in relationship to P1300 dependencies:


ParNo.	Parameter name	Level	V/f			
			P1300 =			
			0	1	2	3
P1300	Control mode	2	x	x	x	x
P1310	Continuous boost	2	x	x	x	x
P1311	Acceleration boost	2	x	x	x	x
P1312	Starting boost	2	x	x	x	x
P1316	Boost end frequency	3	x	x	x	x
P1320	Programmable V/f freq. coord. 1	3	-	-	-	x
P1321	Programmable V/f volt. coord. 1	3	-	-	-	x
P1322	Programmable V/f freq. coord. 2	3	-	-	-	x
P1323	Programmable V/f volt. coord. 2	3	-	-	-	x
P1324	Programmable V/f freq. coord. 3	3	-	-	-	x
P1325	Programmable V/f volt. coord. 3	3	-	-	-	x
P1333	Start frequency for FCC	3	-	x	-	-
P1335	Slip compensation	2	x	x	x	x
P1336	CO: U/f Slip limit	2	x	x	x	x
P1338	Resonance damping gain V/f	3	x	x	x	x
P1340	Imax freq. controller prop. gain	3	x	x	x	x
P1341	Imax controller integral time	3	x	x	x	x
P1345	Imax controller prop. gain	3	x	x	x	x
P1346	Imax voltage ctrl. integral time	3	x	x	x	x
P1350	Voltage soft start	3	x	x	x	x


P1310	Continuous boost				Min: 0.0	Level
CStat:	CUT	Datatype: Float	Unit: %	Def: 50.0	Max: 250.0	2
P-Group:	CONTROL	Active: Immediately	QuickComm.: No			

At low output frequencies the output voltage is low to keep the flux level constant. However, the output voltage may be too low

- for magnetisation the asynchronous motor
- to hold the load
- to overcome losses in the system. The output voltage can be increased using parameter P1310.

Defines boost level in [%] relative to P0305 (rated motor current) applicable to both linear and quadratic V/f curves according to the diagram below:

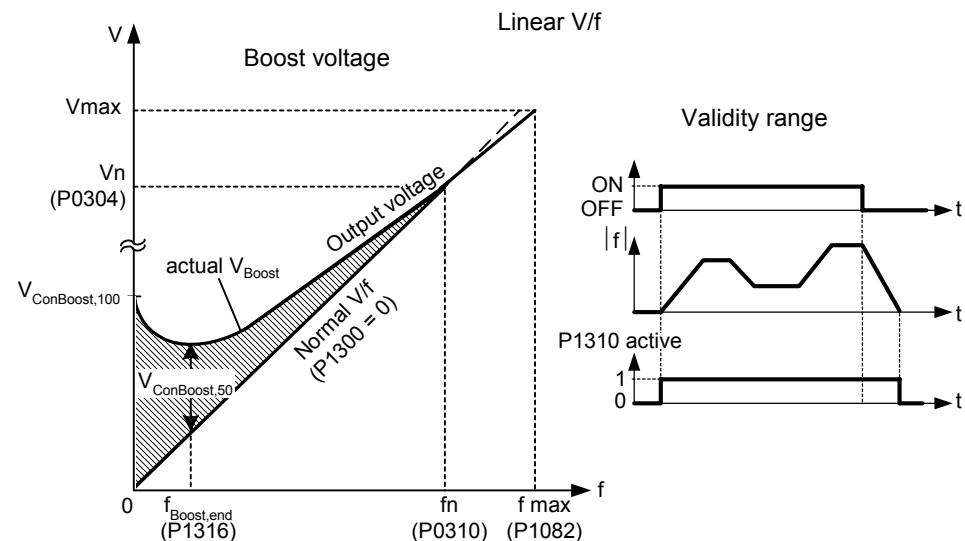

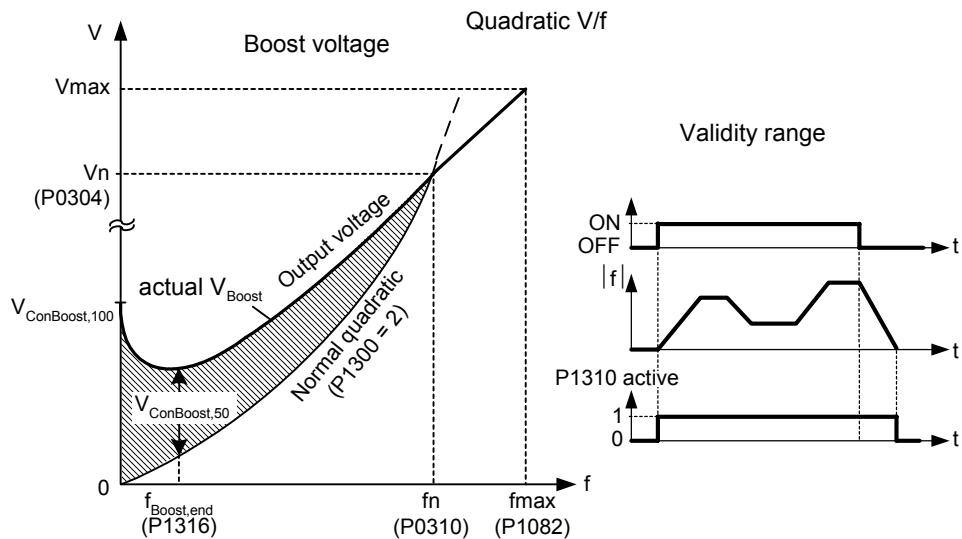

where voltage values are given

$$V_{ConBoost,100} = P0305 \cdot P0350 \cdot \frac{P1310}{100}$$

$$V_{ConBoost,50} = \frac{V_{ConBoost,100}}{2}$$

Note:

Increasing the boost levels increases motor heating (especially at standstill).

The boost values are combined when continuous boost (P1310) used in conjunction with other boost parameters (acceleration boost P1311 and starting boost P1312).

However priorities are allocated to these parameters as follows:
P1310 > P1311 > P1312

The total boost is limited by following equation:

$$\sum V_{Boost} \leq 3 \cdot R_s \cdot I_{Mot} = 3 \cdot P0305 \cdot P0350$$


Setting in P0640 (motor overload factor [%]) limits the boost:

$$\frac{\sum V_{Boost}}{P0305 \cdot P0350} \leq \frac{P0640}{100}$$

P1311	Acceleration boost	Datatype: Float	Unit: %	Min: 0.0	Def: 0.0	Max: 250.0	Level
	CStat: CUT P-Group: CONTROL	Active: Immediately	QuickComm.: No				2

P1311 will only produce boost during ramping, and is therefore useful for additional torque during acceleration and deceleration.

Applies boost in [%] relative to P0305 (rated motor current) following a positive setpoint change and drops back out once the setpoint is reached.

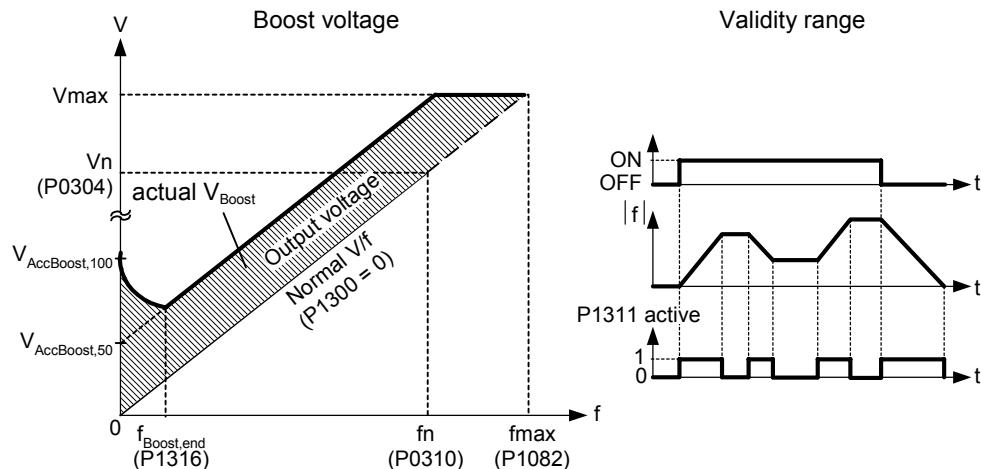

where voltage values are given

$$V_{\text{AccBoost},100} = P0305 \cdot P0350 \cdot \frac{P1311}{100}$$

$$V_{\text{AccBoost},50} = \frac{V_{\text{AccBoost},100}}{2}$$

Note:


See parameter P1310

P1312	Starting boost				Min: 0.0	Level
CStat:	CUT	Datatype: Float	Unit: %		Def: 0.0	
P-Group:	CONTROL	Active: Immediately	QuickComm.: No		Max: 250.0	2

Applies a constant linear offset (in [%] relative to P0305 (rated motor current)) to active V/f curve (either linear or quadratic) after an ON command and is active until
 1) ramp output reaches setpoint for the first time respectively
 2) setpoint is reduced to less than present ramp output

This is useful for starting loads with high inertia.

Setting the starting boost (P1312) too high will cause the inverter to limit the current, which will in turn restrict the output frequency to below the setpoint frequency.

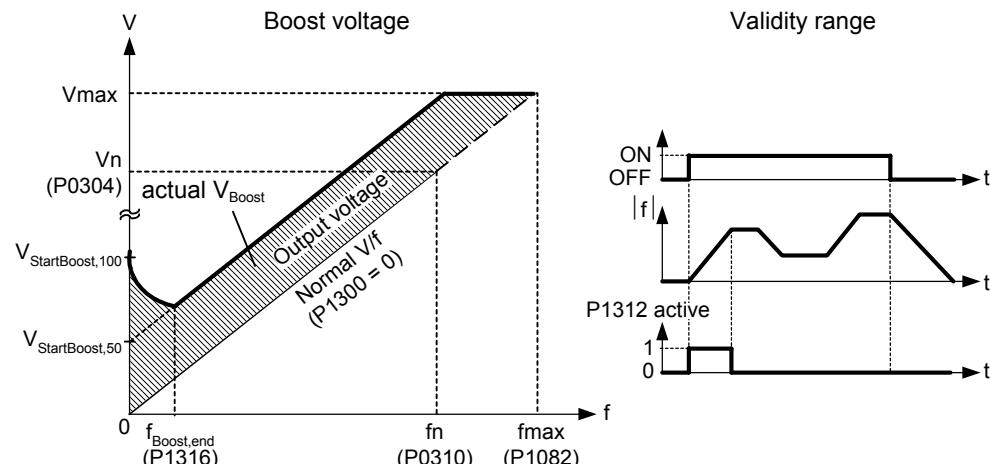

where voltage values are given

$$V_{\text{StartBoost},100} = P0305 \cdot P0350 \cdot \frac{\text{P1312}}{100}$$

$$V_{\text{StartBoost},50} = \frac{V_{\text{StartBoost},100}}{2}$$

Example:

Setpoint = 50Hz. Ramping up with starting boost. During ramp up, setpoint changed to 20Hz. As soon as setpoint changed, starting boost removed because setpoint smaller than present ramp output.

Note:

See parameter P1310

r1315	CO: Total boost voltage	Datatype: Float	Unit: V	Min: -	Level
	P-Group: CONTROL			Def: -	4

Displays total value of voltage boost (in volts).

P1316	Boost end frequency			Min: 0.0	Level
CStat:	CUT	Datatype: Float	Unit: %	Def: 20.0	3
P-Group:	CONTROL	Active: Immediately	QuickComm.: No	Max: 100.0	

Defines point at which programmed boost reaches 50 % of its value.

This value is expressed in [%] relative to P0310 (rated motor frequency).

The default frequency is defined as follows:

$$f_{\text{Boost min}} = 2 \cdot \left(\frac{153}{\sqrt{P_{\text{motor}}}} + 3 \right)$$

Note:


The expert user may change this value to alter the shape of the curve, e.g. to increase torque at a particular frequency.

Details:

See diagram in P1310 (continuous boost).

P1320	Programmable V/f freq. coord. 1				Min: 0.00	Level
CStat:	CT	Datatype: Float	Unit: Hz	Def: 0.00	Max: 650.00	3
P-Group:	CONTROL	Active: Immediately	QuickComm.: No			

Sets V/f coordinates (P1320/1321 to P1324/1325) to define V/f characteristic.

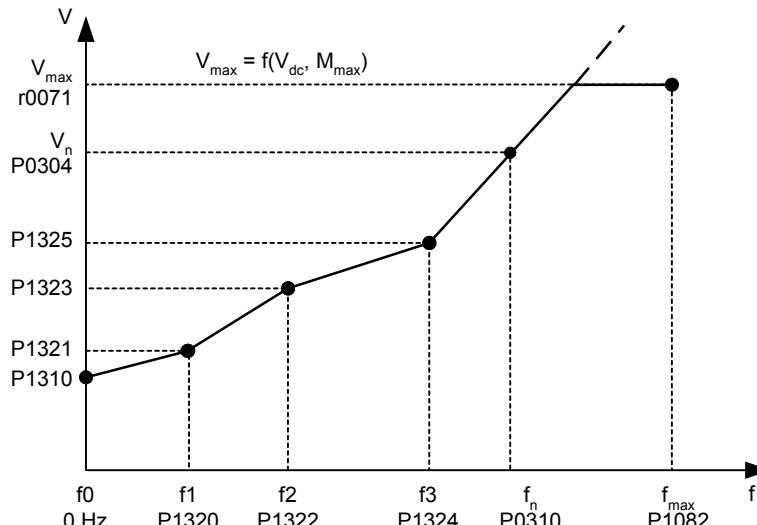

$$P1310[V] = \frac{P1310[\%]}{100[\%]} \cdot \frac{r0395[\%]}{100[\%]} \cdot P0304[V]$$

Example:

This parameter can be used to provide correct torque at correct frequency and is useful when used with synchronous motors.

Dependency:

To set parameter, select P1300 = 3 (V/f with programmable characteristic).

Note:

Linear interpolation will be applied between the individual data points.

V/f with programmable characteristic (P1300 = 3) has 3 programmable points. The two non-programmable points are:

- Continuous boost P1310 at zero 0 Hz
- Rated motor voltage P0304 at rated motor frequency P0310

The acceleration boost and starting boost defined in P1311 and P1312 are applied to V/f with programmable characteristic.

P1321	Programmable V/f volt. coord. 1				Min: 0.0	Level
CStat:	CUT	Datatype: Float	Unit: V	Def: 0.0	Max: 3000.0	3
P-Group:	CONTROL	Active: Immediately	QuickComm.: No			

See P1320 (programmable V/f freq. coord. 1).

P1322	Programmable V/f freq. coord. 2				Min: 0.00	Level
CStat:	CT	Datatype: Float	Unit: Hz	Def: 0.00	Max: 650.00	3
P-Group:	CONTROL	Active: Immediately	QuickComm.: No			

See P1320 (programmable V/f freq. coord. 1).

P1323	Programmable V/f volt. coord. 2				Min: 0.0	Level
CStat:	CUT	Datatype: Float	Unit: V	Def: 0.0	Max: 3000.0	3
P-Group:	CONTROL	Active: Immediately	QuickComm.: No			

See P1320 (programmable V/f freq. coord. 1).

P1324	Programmable V/f freq. coord. 3				Min: 0.00	Level
CStat:	CT	Datatype: Float	Unit: Hz	Def: 0.00	Max: 650.00	3
P-Group:	CONTROL	Active: Immediately	QuickComm.: No			

See P1320 (programmable V/f freq. coord. 1).

P1325	Programmable V/f volt. coord. 3				Min: 0.0	Level
CStat:	CUT	Datatype: Float	Unit: V	Def: 0.0	Max: 3000.0	3
P-Group:	CONTROL	Active: Immediately	QuickComm.: No			

See P1320 (programmable V/f freq. coord. 1).

P1333	Start frequency for FCC			Min: 0.0	Level
CStat:	CUT	Datatype: Float	Unit: %	Def: 10.0	
P-Group:	CONTROL	Active: Immediately	QuickComm.: No	Max: 100.0	3

Defines start frequency at which FCC (flux current control) is enabled as [%] of rated motor frequency (P0310).

Notice:


If this value is too low, the system may become unstable.

P1335	Slip compensation			Min: 0.0	Level
CStat:	CUT	Datatype: Float	Unit: %	Def: 0.0	
P-Group:	CONTROL	Active: Immediately	QuickComm.: No	Max: 600.0	2

Dynamically adjusts output frequency of inverter so that motor speed is kept constant independent of motor load.

In the V/f-control, the motor speed will always be less than the command speed due to the slip speed. For a given speed command, the speed will drop as load is increased. The speed regulation of drive can be improved by the technique known as slip compensation.

Increasing the load from M1 to M2 (see diagram) will decrease the motor speed from f1 to f2, due to the slip. The inverter can compensate for this by increasing the output frequency slightly as the load increases. The inverter measures the current and increases the output frequency to compensate for the expected slip.

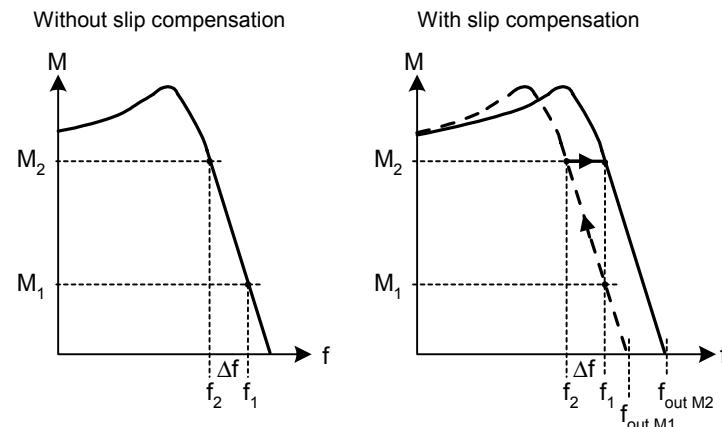


Value:

P1335 = 0 % :
Slip compensation disabled.

P1335 = 50 % - 70 % :
Full slip compensation at cold motor (partial load).

P1335 = 100 % :
Full slip compensation at warm motor (full load).

Range of slip compensation :

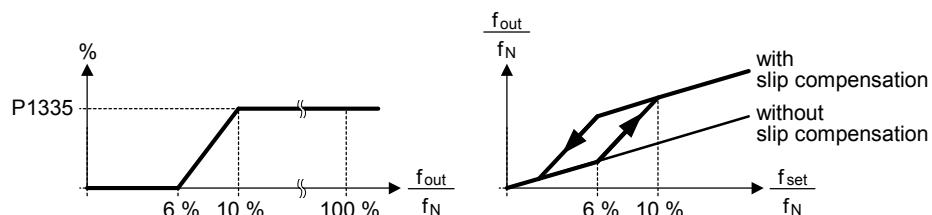

Notice:

The applied value of the slip compensation (scaled by P1335) is limited by following equation:

$$f_{\text{Slip_comp_max}} = \frac{P1336}{100} \cdot r0330$$

P1336	Slip limit				Min: 0	Level
CStat:	CUT	Datatype: U16	Unit: %		Def: 250	
P-Group:	CONTROL	Active: Immediately	QuickComm.: No		Max: 600	2

Compensation slip limit in [%] relative to r0330 (rated motor slip), which is added to frequency setpoint.

Dependency:

Slip compensation (P1335) active.

r1337	CO: V/f slip frequency				Min: -	Level
P-Group:	CONTROL	Datatype: Float	Unit: %		Def: -	


Displays actual compensated motor slip as [%]

Dependency:

Slip compensation (P1335) active.

P1338	Resonance damping gain V/f				Min: 0.00	Level
CStat:	CUT	Datatype: Float	Unit: -		Def: 0.00	
P-Group:	CONTROL	Active: Immediately	QuickComm.: No		Max: 10.00	3

Defines resonance damping gain for V/f. Here, di/dt of the active current will be scaled by P1338 (see diagram below). If di/dt increases the resonance damping circuit decreases the inverter output frequency.

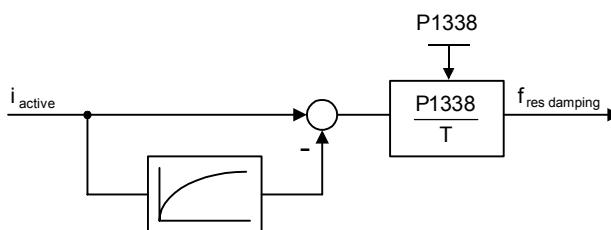

Note:

The resonance circuit damps oscillations of the active current which frequently occur during no-load operation.

In V/f modes (see P1300), the resonance damping circuit is active in a range from approx. 6 % to 80 % of rated motor frequency (P0310).

If the value of P1338 is too high, this will cause instability (forward control effect).

P1340	I_{max} controller prop. gain				Min: 0.000	Level
CStat:	CUT	Datatype: Float	Unit: -		Def: 0.000	

Proportional gain of the I_{max} controller.

Dynamically controls the inverter if the output current exceeds the maximum motor current (r0067). It does this by first limiting the inverter output frequency (to a possible minimum of the nominal slip frequency). If this action does not successfully remove the overcurrent condition, the inverter output voltage is reduced. When the overcurrent condition has been removed successfully, frequency limiting is removed using the ramp-up time set in P1120.

P1341	I_{max} controller integral time				Min: 0.000	Level
CStat:	CUT	Datatype: Float	Unit: s		Def: 0.300	

Integral time constant of the I_{max} controller.

P1341 = 0 :
I_{max} controller disabled

P1340 = 0 and P1341 > 0 :
enhanced integral

P1340 > 0 and P1341 > 0 :
normal PI control

See description in parameter P1340 for further information.

r1343	CO: Imax controller freq. output P-Group: CONTROL	Datatype: Float	Unit: Hz	Min: - Def: - Max: -	Level 3
--------------	---	-----------------	----------	----------------------------	-------------------

Displays effective frequency limitation.

Dependency:


If I_max controller not in operation, parameter normally shows max. frequency P1082.

r1344	CO: Imax controller volt. output P-Group: CONTROL	Datatype: Float	Unit: V	Min: - Def: - Max: -	Level 3
--------------	---	-----------------	---------	----------------------------	-------------------

Displays amount by which the I_max controller is reducing the inverter output voltage.

P1350	Voltage soft start CStat: CUT P-Group: CONTROL	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	Min: 0 Def: 0 Max: 1	Level 3
--------------	---	--	---------------------------	----------------------------	-------------------

Sets whether voltage is built up smoothly during magnetization time (ON) or whether it simply jumps to boost voltage (OFF).

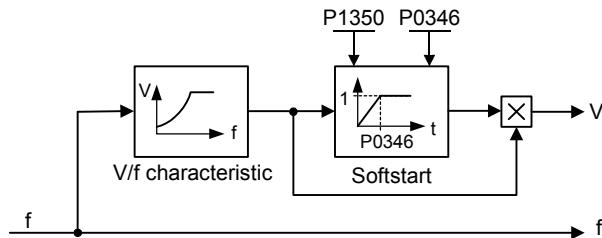

Possible Settings:

- 0 OFF
- 1 ON

Note:

The settings for this parameter bring benefits and drawbacks:

P1350 = 0: OFF (jump to boost voltage)

Benefit: flux is built up quickly

Drawback: motor may move

P1350 = 1: ON (smooth voltage build-up)

Benefit: motor less likely to move

Drawback: flux build-up takes longer

P1800	Pulse frequency CStat: CUT P-Group: INVERTER	Datatype: U16 Active: Immediately	Unit: kHz QuickComm.: No	Min: 2 Def: 4 Max: 16	Level 2
--------------	---	--------------------------------------	-----------------------------	-----------------------------	-------------------

Sets pulse frequency of power switches in inverter. The frequency can be changed in steps of 2 kHz.

Dependency:

Minimum pulse frequency depends on P1082 (maximum frequency) and P0310 (rated motor frequency).

The maximal value of motor frequency P1082 is limited to pulse frequency P1800 (see P1082).

Note:

If the pulse frequency is increased, max. inverter current r0209 can be reduced (derating). The derating characteristic depends on the type and power of the inverter (see manuall OPERATING INSTRUCTION).

If silent operation is not absolutely necessary, lower pulse frequencies may be selected to reduce inverter losses and radio-frequency emissions.

Under certain circumstances, the inverter may reduce the switching frequency to provide protection against over-temperature (see P0290).

r1801	CO: Act. pulse frequency P-Group: INVERTER	Datatype: U16	Unit: kHz	Min: - Def: - Max: -	Level 3
--------------	--	---------------	-----------	----------------------------	-------------------

Actual pulse frequency of power switches in inverter.

Notice:

Under certain conditions (inverter overtemperature, see P0290), this can differ from the values selected in P1800 (pulse frequency).

P1802	Modulator mode	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0
P-Group:	INVERTER	Active: first confirm	Max: 2

Selects inverter modulator mode.

Possible Settings:

- 0 SVM/ASVM automatic mode
- 1 Asymmetric SVM
- 2 Space vector modulation

Notice:

Asymmetric space vector modulation (ASVM) produces lower switching losses than space vector modulation (SVM), but may cause irregular rotation at very low frequencies.

Space vector modulation (SVM) with over-modulation may produce current waveform distortion at high output voltages.

Space vector modulation (SVM) without over-modulation will reduce maximum output voltage available to motor.

P1803	Max. modulation	Min: 20.0	Level
CStat:	CUT	Datatype: Float	Def: 106.0
P-Group:	INVERTER	Active: Immediately	Max: 150.0

Sets maximum modulation index.

Note:

P1803 = 100 % : Limit for over-control (for ideal inverter without switching delay). For vector control the modulation limit will be reduced automatically with 4 %.

P1820	Reverse output phase sequence	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 0
P-Group:	INVERTER	Active: first confirm	Max: 1

Changes direction of motor rotation without changing setpoint polarity.

Possible Settings:

- 0 OFF
- 1 ON

Dependency:

If positive and negative revolution is enabled, frequency setpoint is directly used.

If both positive and negative revolution are disabled, reference value is set to zero.

Details:

See P1000 (select frequency setpoint)

P1910	Select motor data identification	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 0
P-Group:	MOTOR	Active: first confirm	Max: 2

Performs a motor data identification.

Performs stator resistance measuring.

Possible Settings:

- 0 Disabled
- 1 Identification of Rs with parameter change
- 2 Identification of Rs without parameter change

Dependency:

No measurement if motor data incorrect.

P1910 = 1 : Calculated value for stator resistance (see P0350) is overwritten.

P1910 = 2 : Values already calculated are not overwritten.

Note:

Before selecting motor data identification, "Quick commissioning" has to be performed in advance.

Once enabled (P1910 = 1), A0541 generates a warning that the next ON command will initiate measurement of motor parameters.

Notice:

When choosing the setting for measurement, observe the following:

1. "with parameter change"

means that the value is actually adopted as P0350 parameter setting and applied to the control as well as being shown in the read-only parameters below.

2. "without parameter change"

means that the value is only displayed, i.e. shown for checking purposes in the read-only parameter r1912 (identified stator resistance). The value is not applied to the control.

r1912	Identified stator resistance	Datatype: Float	Unit: Ohm	Min: -	Level
	P-Group: MOTOR			Def: -	2

Displays measured stator resistance value (line-to-line) in [Ohms]

Note:

This value is measured using P1910 = 1 or 2, i.e., identification of all parameters with/without change.


P2000	Reference frequency	Datatype: Float	Unit: Hz	Min: 1.00	Level
	CStat: CT P-Group: COMM	Active: first confirm	QuickComm.: No	Def: 50.00 Max: 650.00	2

Parameter P2000 represents the reference frequency for frequency values which are displayed/transferred as a percentage or a hexadecimal value. Where:

- hexadecimal 4000 H ==> P2000 (e.g.: USS-PZD)
- percentage 100 % ==> P2000 (e.g.: ADC)


Example:

If a BICO connection is made between two parameters or alternatively using P0719 or P1000, the 'unit' of the parameters (standardized (Hex) or physical (i.e. Hz) values) may differ. MICROMASTER implicitly makes an automatic conversion to the target value.

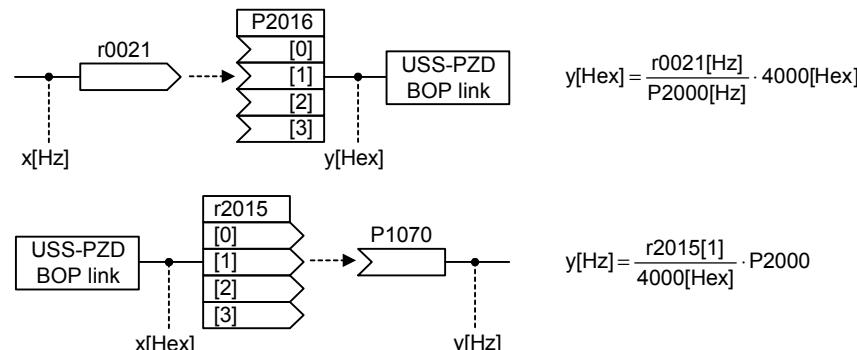

Caution:

Parameter P2000 represents the reference frequency of the above mentioned interfaces. A maximum frequency setpoint of $2 \times P2000$ can be applied via the corresponding interface. Unlike parameter P1082 (Max. Frequency) this limits the inverter frequency internally independent of the reference frequency. By modification of P2000 it will also adapt the parameter to the new settings.

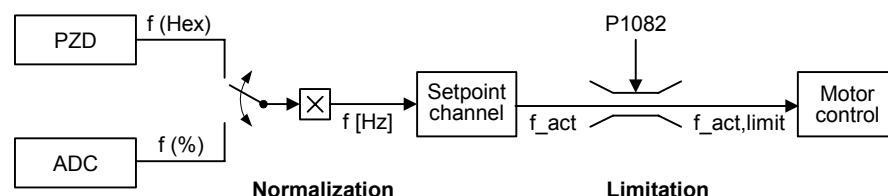

$$f[\text{Hz}] = \frac{f(\text{Hex})}{4000(\text{Hex})} \cdot P2000 = \frac{f(\%)}{100 \%} \cdot P2000 \quad f_{\text{act},\text{limit}} = \min(P1082, f_{\text{act}})$$

Notice:

Reference variables are intended as an aid to presenting setpoint and actual value signals in a uniform manner. This also applies to fixed settings entered as a percentage. A value of 100 % (USS / CB) corresponds to a process data value of 4000H, or 4000 0000H in the case of double values.

In this respect, the following parameters are available:

P2000	Reference frequency	Hz
P2001	Reference voltage	V
P2002	Reference current	A


P2001	Reference voltage	Min: 10 Def: 1000 Max: 2000	Level 3
CStat: P-Group:	CT COMM	Datatype: U16 Active: first confirm	Unit: V QuickComm.: No

Full-scale output voltage (i.e. 100 %) used over serial link (corresponds to 4000H).

Example:

P2001 = 230 specifies that 4000H received via USS denotes 230 V.

If a BICO connection is made between two parameters, the 'unit' of the parameters (standardized (Hex) or physical (i.e. V) values) may differ. MICROMASTER implicitly makes an automatic conversion to the target value.

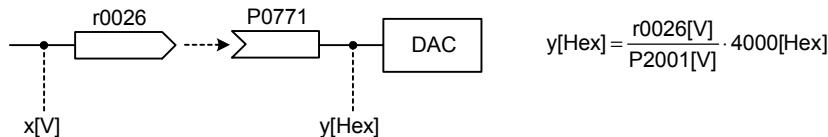


P2002	Reference current	Min: 0.10 Def: 0.10 Max: 10000.00	Level 3
CStat: P-Group:	CT COMM	Datatype: Float Active: first confirm	Unit: A QuickComm.: No

Full-scale output current used over serial link (corresponds to 4000H).

Example:

If a BICO connection is made between two parameters, the 'unit' of the parameters (standardized (Hex) or physical (i.e. A) values) may differ. MICROMASTER implicitly makes an automatic conversion to the target value.

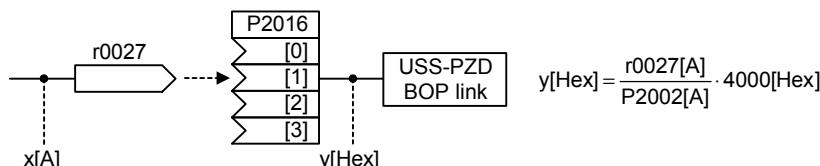

P2009[2]	USS denormalization	Min: 0 Def: 0 Max: 1	Level 3
CStat: P-Group:	CT COMM	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No

Enables denormalization for USS.

Possible Settings:

- 0 Disabled
- 1 Enabled

Index:

- P2009[0] : Serial interface COM link
- P2009[1] : Serial interface BOP link

Note:

If denormalization is enabled, the main setpoint (word 2 in PZD) is not interpreted as 100 % = 4000H, but as "absolute" instead (e.g. 4000H = 16384 means 163.84 Hz) if this is a frequency. Denormalization (P2009 = 1) only works for frequencies and is intended for backwards compatibility with MM3.

P2010[2]	USS baudrate	Min: 3 Def: 6 Max: 9	Level 2
CStat: P-Group:	CUT COMM	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No

Sets baud rate for USS communication.

Possible Settings:

- 3 1200 baud
- 4 2400 baud
- 5 4800 baud
- 6 9600 baud
- 7 19200 baud
- 8 38400 baud
- 9 57600 baud

Index:

- P2010[0] : Serial interface COM link
- P2010[1] : Serial interface BOP link

P2011[2]	USS address	CStat: CUT P-Group: COMM	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	Min: 0 Def: 0 Max: 31	Level 2
-----------------	--------------------	---	--	---	--	--------------------------

Sets unique address for inverter.

Index:

P2011[0] : Serial interface COM link
P2011[1] : Serial interface BOP link

Note:

You can connect up to a further 30 inverters via the serial link (i.e. 31 inverters in total) and control them with the USS serial bus protocol.

P2012[2]	USS PZD length	CStat: CUT P-Group: COMM	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	Min: 0 Def: 2 Max: 4	Level 3
-----------------	-----------------------	---	--	---	---	--------------------------


Defines the number of 16-bit words in PZD part of USS telegram. In this area, process data (PZD) are continually exchanged between the master and slaves. The PZD part of the USS telegram is used for the main setpoint, and to control the inverter.

Index:

P2012[0] : Serial interface COM link
P2012[1] : Serial interface BOP link

Notice:

USS protocol consists of PZD and PKW which can be changed by the user via parameters P2012 and P2013 respectively.

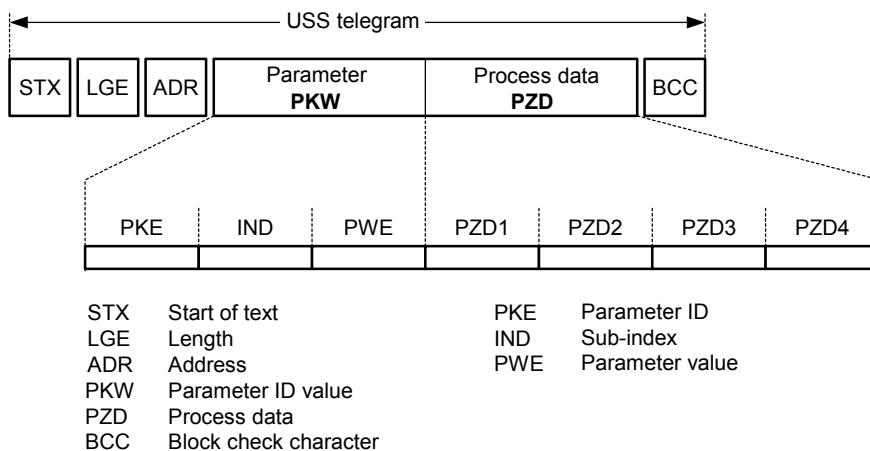


PZD transmits a control word and setpoint or status word and actual values. The number of PZD-words in a USS-telegram are determined by parameter P2012, where the first two words (P2012 >= 2) are either:

- control word and main setpoint or
- status word and actual value.

Restrictions:

- If the serial interface controls the inverter (P0700 or P0719) then the 1st control word must be transferred in the 1st PZD-word.
- If the setpoint source is selected via P1000 or P0719, then the main setpoint must be transferred in the 2nd PZD-word.
- When P2012 is greater than or equal to 4 the additional control word (2nd control word) must be transferred in the 4th PZD-word, if the serial interface controls the inverter (P0700 or P0719).

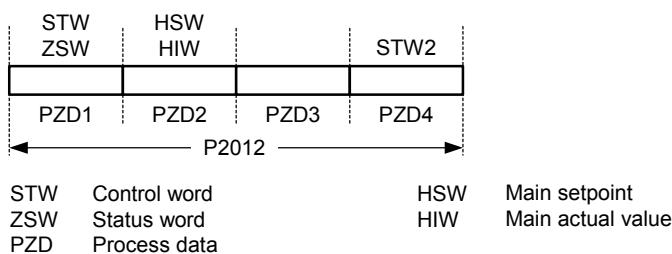

P2013[2]	USS PKW length	CStat: CUT P-Group: COMM	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	Min: 0 Def: 127 Max: 127	Level 3
-----------------	-----------------------	---	--	---	---	--------------------------

Defines the number of 16-bit words in PKW part of USS telegram. The PKW area can be varied. Depending on the particular requirement, 3-word, 4-word or variable word lengths can be parameterized. The PKW part of the USS telegram is used to read and write individual parameter values.

Possible Settings:

- 0 No words
- 3 3 words
- 4 4 words
- 127 Variable

Index:

- P2013[0] : Serial interface COM link
- P2013[1] : Serial interface BOP link


Example:

	Data type		
	U16 (16 Bit)	U32 (32 Bit)	Float (32 Bit)
P2013 = 3	X	Parameter access fault	Parameter access fault
P2013 = 4	X	X	X
P2013 = 127	X	X	X

Notice:

USS protocol consists of PZD and PKW which can be changed by the user via parameters P2012 and P2013 respectively. Parameter P2013 determines the number of PKW-words in a USS-telegram.

Setting P2013 to 3 or 4 determines the length of the PKW words (3 = three words and 4 = four words). When P2013 set to 127 automatically adjusts the length of the PKW words are required.

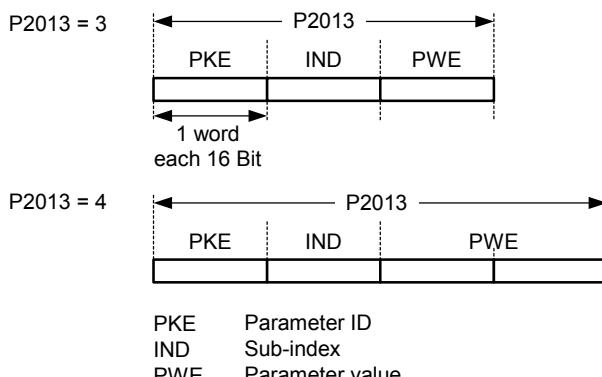

If a fixed PKW length is selected only one parameter value can be transferred. In the case of indexed parameter, you must use the variable PKW length if you wish to have the values of all indices transferred in a single telegram. In selecting the fixed PKW length, it is important to ensure the value in question can be transferred using this PKW length.

P2013 = 3, fixes PKW length, but does not allow access to many parameter values. A parameter fault is generated when an out-of-range value is used, the value will not be accepted but the inverter state will not be affected. Useful for applications where parameters are not changed, but MM3s are also used. Broadcast mode is not possible with this setting.

P2013 = 4, fixes PKW length. Allows access to all parameters, but indexed parameters can only be read one index at a time. Word order for single word values are different to setting 3 or 127, see example below.

P2013 = 127, most useful setting. PKW reply length varies depending on the amount of information needed. Can read fault information and all indices of a parameter with a single telegram with this setting.

Example:

Set P0700 to value 5 (0700 = 2BC (hex))

	P2013 = 3	P2013 = 4	P2013 = 127
Master → MM4	22BC 0000 0005	22BC 0000 0000 0005	22BC 0000 0005 0000
MM4 → Master	12BC 0000 0005	12BC 0000 0000 0005	12BC 0000 0005

P2014[2]	USS telegram off time	Min: 0	Level
CStat: CT	Datatype: U16	Def: 0	
P-Group: COMM	Active: Immediately	QuickComm.: No	Max: 65535

Defines a time T_off after which a fault will be generated (F0070) if no telegram is received via the USS channels.

Index:

- P2014[0] : Serial interface COM link
- P2014[1] : Serial interface BOP link

Notice:

By default (time set to 0), no fault is generated (i.e. watchdog disabled).


r2015[4]	CO: PZD from BOP link (USS)	Min: -	Level
	Datatype: U16	Unit: -	Def: -

P-Group: COMM

Max: -

3

Displays process data received via USS on BOP link (RS232 USS).

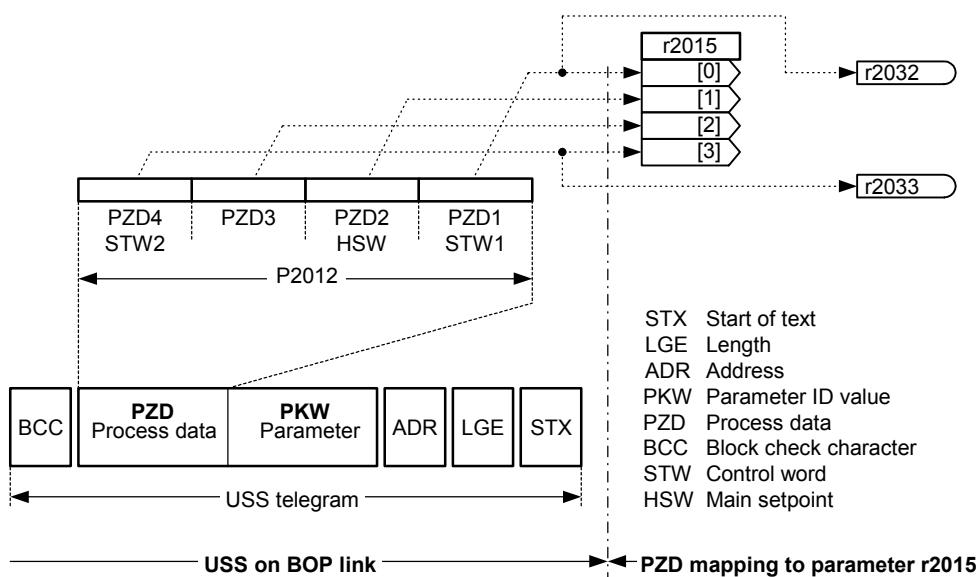
Index:

- r2015[0] : Received word 0
- r2015[1] : Received word 1
- r2015[2] : Received word 2
- r2015[3] : Received word 3

Note:


The control words can be viewed as bit parameters r2032 and r2033.

Restrictions:

- If the above serial interface controls the inverter (P0700 or P0719) then the 1st control word must be transferred in the 1st PZD-word.
- If the setpoint source is selected via P1000 or P0719, then the main setpoint must be transferred in the 2nd PZD-word,
- When P2012 is equal to 4 the additional control word (2nd control word) must be transferred in the 4th PZD-word, if the above serial interface controls the inverter (P0700 or P0719).

P2016[4]	CI: PZD to BOP link (USS)	CStat: CT Datatype: U32 Unit: - Min: 0:0 Def: 52:0 Max: 4000:0	Level
	P-Group: COMM Active: Immediately QuickComm.: No		3

Selects signals to be transmitted to serial interface via BOP link.

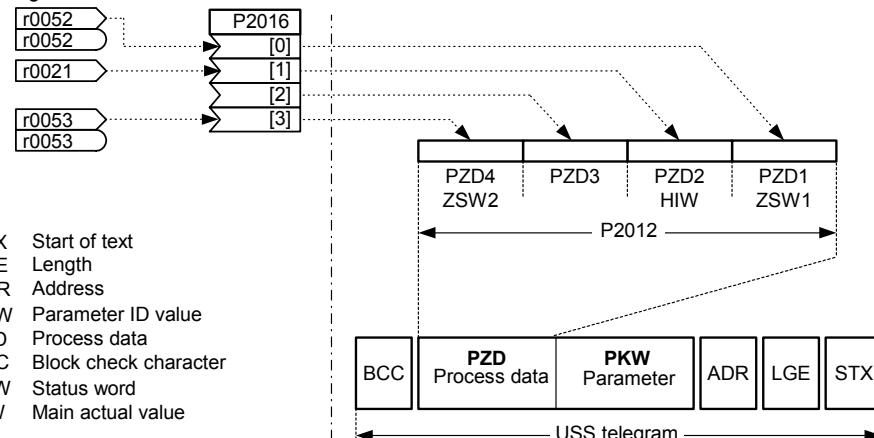

PZD mapping from parameter P2016

USS on BOP link

Index:

- P2016[0] : Transmitted word 0
- P2016[1] : Transmitted word 1
- P2016[2] : Transmitted word 2
- P2016[3] : Transmitted word 3

Example:


P2016[0] = 52.0 (default). In this case, the value of r0052[0] (CO/BO: Status word) is transmitted as 1st PZD to the BOP link.

Note:

If r0052 not indexed, display does not show an index ("0").

r2018[4]	CO: PZD from COM link (USS)	Datatype: U16 Unit: -	Min: - Def: - Max: -	Level
	P-Group: COMM			3

Displays process data received via USS on COM link.

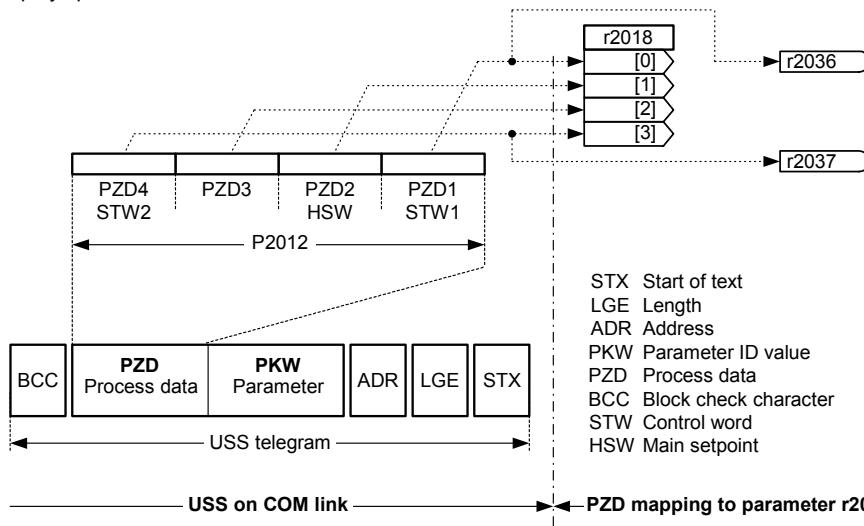

USS on COM link

PZD mapping to parameter r2018

Index:

- r2018[0] : Received word 0
- r2018[1] : Received word 1
- r2018[2] : Received word 2
- r2018[3] : Received word 3

Note:


The control words can be viewed as bit parameters r2036 and r2037.

Restrictions:

- If the above serial interface controls the inverter (P0700 or P0719) then the 1st control word must be transferred in the 1st PZD-word.
- If the setpoint source is selected via P1000 or P0719, then the main setpoint must be transferred in the 2nd PZD-word,
- When P2012 is equal to 4 the additional control word (2nd control word) must transferred in the 4th PZD-word, if the above serial interface controls the inverter (P0700 or P0719).

P2019[4]	CI: PZD to COM link (USS)	Min: 0:0	Level
CStat: CT	Datatype: U32	Def: 52:0	
P-Group: COMM	Active: Immediately	Max: 4000:0	3

Displays process data received via USS on COM link.

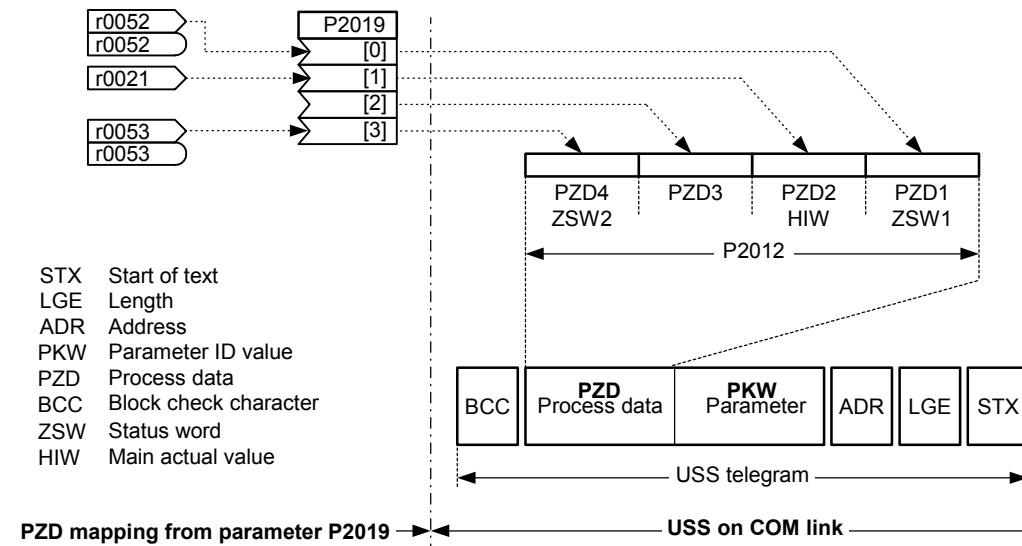

Index:

- P2019[0] : Transmitted word 0
- P2019[1] : Transmitted word 1
- P2019[2] : Transmitted word 2
- P2019[3] : Transmitted word 3

Details:

See P2016 (PZD to BOP link)

r2024[2]	USS error-free telegrams	Min: -	Level
	Datatype: U16	Unit: -	
	P-Group: COMM	Def: -	3

Displays number of error-free USS telegrams received.

Index:

- r2024[0] : Serial interface COM link
- r2024[1] : Serial interface BOP link

r2025[2]	USS rejected telegrams	Min: -	Level
	Datatype: U16	Unit: -	
	P-Group: COMM	Def: -	3

Displays number of USS telegrams rejected.

Index:

- r2025[0] : Serial interface COM link
- r2025[1] : Serial interface BOP link

r2026[2]	USS character frame error	Min: -	Level
	Datatype: U16	Unit: -	
	P-Group: COMM	Def: -	3

Displays number of USS character frame errors.

Index:

- r2026[0] : Serial interface COM link
- r2026[1] : Serial interface BOP link

r2027[2]	USS overrun error	Min: -	Level
	Datatype: U16	Unit: -	
	P-Group: COMM	Def: -	3

Displays number of USS telegrams with overrun error.

Index:

- r2027[0] : Serial interface COM link
- r2027[1] : Serial interface BOP link

r2028[2]	USS parity error	Datatype: U16	Unit: -	Min: -	Level
	P-Group: COMM			Def: -	
				Max: -	3
Displays number of USS telegrams with parity error.					
Index:					
r2028[0] : Serial interface COM link					
r2028[1] : Serial interface BOP link					
r2029[2]	USS start not identified	Datatype: U16	Unit: -	Min: -	Level
	P-Group: COMM			Def: -	
				Max: -	3
Displays number of USS telegrams with unidentified start.					
Index:					
r2029[0] : Serial interface COM link					
r2029[1] : Serial interface BOP link					
r2030[2]	USS BCC error	Datatype: U16	Unit: -	Min: -	Level
	P-Group: COMM			Def: -	
				Max: -	3
Displays number of USS telegrams with BCC error.					
Index:					
r2030[0] : Serial interface COM link					
r2030[1] : Serial interface BOP link					
r2031[2]	USS length error	Datatype: U16	Unit: -	Min: -	Level
	P-Group: COMM			Def: -	
				Max: -	3
Displays number of USS telegrams with incorrect length.					
Index:					
r2031[0] : Serial interface COM link					
r2031[1] : Serial interface BOP link					
r2032	BO: CtrlWrd1 from BOP link (USS)	Datatype: U16	Unit: -	Min: -	Level
	P-Group: COMM			Def: -	
				Max: -	3
Displays control word 1 from BOP link (word 1 within USS).					
Bitfields:					
Bit00	ON/OFF1	0	NO	1	YES
Bit01	OFF2: Electrical stop	0	YES	1	NO
Bit02	OFF3: Fast stop	0	YES	1	NO
Bit03	Pulse enable	0	NO	1	YES
Bit04	RFG enable	0	NO	1	YES
Bit05	RFG start	0	NO	1	YES
Bit06	Setpoint enable	0	NO	1	YES
Bit07	Fault acknowledge	0	NO	1	YES
Bit08	JOG right	0	NO	1	YES
Bit09	JOG left	0	NO	1	YES
Bit10	Control from PLC	0	NO	1	YES
Bit11	Reverse (setpoint inversion)	0	NO	1	YES
Bit13	Motor potentiometer MOP up	0	NO	1	YES
Bit14	Motor potentiometer MOP down	0	NO	1	YES
Bit15	Local / Remote	0	NO	1	YES
r2033	BO: CtrlWrd2 from BOP link (USS)	Datatype: U16	Unit: -	Min: -	Level
	P-Group: COMM			Def: -	
				Max: -	3
Displays control word 2 from BOP link (i.e. word 4 within USS).					
Bitfields:					
Bit00	Fixed frequency Bit 0	0	NO	1	YES
Bit01	Fixed frequency Bit 1	0	NO	1	YES
Bit02	Fixed frequency Bit 2	0	NO	1	YES
Bit08	PID enabled	0	NO	1	YES
Bit09	DC brake enabled	0	NO	1	YES
Bit13	External fault 1	0	YES	1	NO
Dependency:					
P0700 = 4 (USS on BOP link) and P0719 = 0 (Cmd / Setpoint = BICO parameter).					

r2036	BO: CtrlWrd1 from COM link (USS)	Datatype: U16	Unit: -	Min: -	Def: -	Level
	P-Group: COMM			Max: -		3

Displays control word 1 from COM link (i.e. word 1 within USS).

Bitfields:

Bit00	ON/OFF1	0	NO	1	YES
Bit01	OFF2: Electrical stop	0	YES	1	NO
Bit02	OFF3: Fast stop	0	YES	1	NO
Bit03	Pulse enable	0	NO	1	YES
Bit04	RFG enable	0	NO	1	YES
Bit05	RFG start	0	NO	1	YES
Bit06	Setpoint enable	0	NO	1	YES
Bit07	Fault acknowledge	0	NO	1	YES
Bit08	JOG right	0	NO	1	YES
Bit09	JOG left	0	NO	1	YES
Bit10	Control from PLC	0	NO	1	YES
Bit11	Reverse (setpoint inversion)	0	NO	1	YES
Bit13	Motor potentiometer MOP up	0	NO	1	YES
Bit14	Motor potentiometer MOP down	0	NO	1	YES
Bit15	Local / Remote	0	NO	1	YES

Details:

See r2033 (control word 2 from BOP link).

r2037	BO: CtrlWrd2 from COM link (USS)	Datatype: U16	Unit: -	Min: -	Def: -	Level
	P-Group: COMM			Max: -		3

Displays control word 2 from COM link (i.e. word 4 within USS).

Bitfields:

Bit00	Fixed frequency Bit 0	0	NO	1	YES
Bit01	Fixed frequency Bit 1	0	NO	1	YES
Bit02	Fixed frequency Bit 2	0	NO	1	YES
Bit08	PID enabled	0	NO	1	YES
Bit09	DC brake enabled	0	NO	1	YES
Bit13	External fault 1	0	YES	1	NO

Details:

See r2033 (control word 2 from BOP link).

P2040	CB telegram off time			Min: 0	Def: 20	Level
CStat:	CT	Datatype: U16	Unit: ms	Def: 0	Max: 65535	3
P-Group:	COMM	Active: Immediately	QuickComm.: No			

Defines time after which a fault will be generated (F0070) if no telegram is received via the link.

Dependency:

Setting 0 = watchdog disabled

P2041[5]	CB parameter			Min: 0	Def: 0	Level
CStat:	CT	Datatype: U16	Unit: -	Def: 0	Max: 65535	3
P-Group:	COMM	Active: first confirm	QuickComm.: No			

Configures a communication board (CB).

Index:


- P2041[0] : CB parameter 0
- P2041[1] : CB parameter 1
- P2041[2] : CB parameter 2
- P2041[3] : CB parameter 3
- P2041[4] : CB parameter 4

Details:

See relevant communication board manual for protocol definition and appropriate settings.

r2050[4]	CO: PZD from CB	Datatype: U16	Unit: -	Min: -	Level
		P-Group: COMM		Def: -	3

Displays PZD received from communication board (CB).

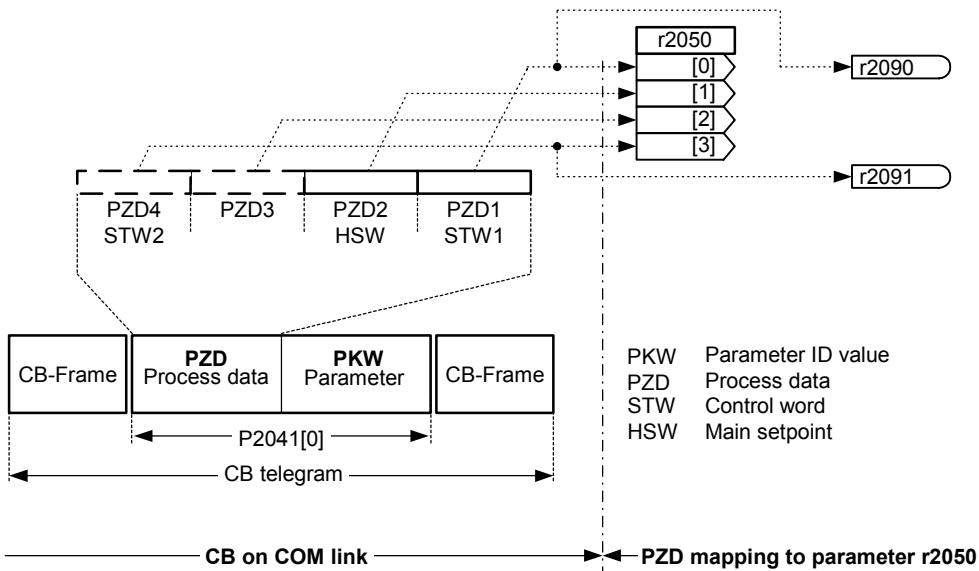
Index:

- r2050[0] : Received word 0
- r2050[1] : Received word 1
- r2050[2] : Received word 2
- r2050[3] : Received word 3

Note:

The control words can be viewed as bit parameters r2090 and r2091.


Restrictions:

- If the above serial interface controls the inverter (P0700 or P0719) then the 1st control word must be transferred in the 1st PZD-word.
- If the setpoint source is selected via P1000 or P0719, then the main setpoint must be transferred in the 2nd PZD-word,
- When P2012 is equal to 4 the additional control word (2nd control word) must be transferred in the 4th PZD-word, if the above serial interface controls the inverter (P0700 or P0719).

P2051[4]	CI: PZD to CB	CStat: CT	Datatype: U32	Unit: -	Min: 0:0	Def: 52:0	Level
		P-Group: COMM	Active: Immediately	QuickComm.: No	Max: 4000:0		3

Connects PZD to CB.

This parameter allows the user to define the source of status words and actual values for the reply PZD.

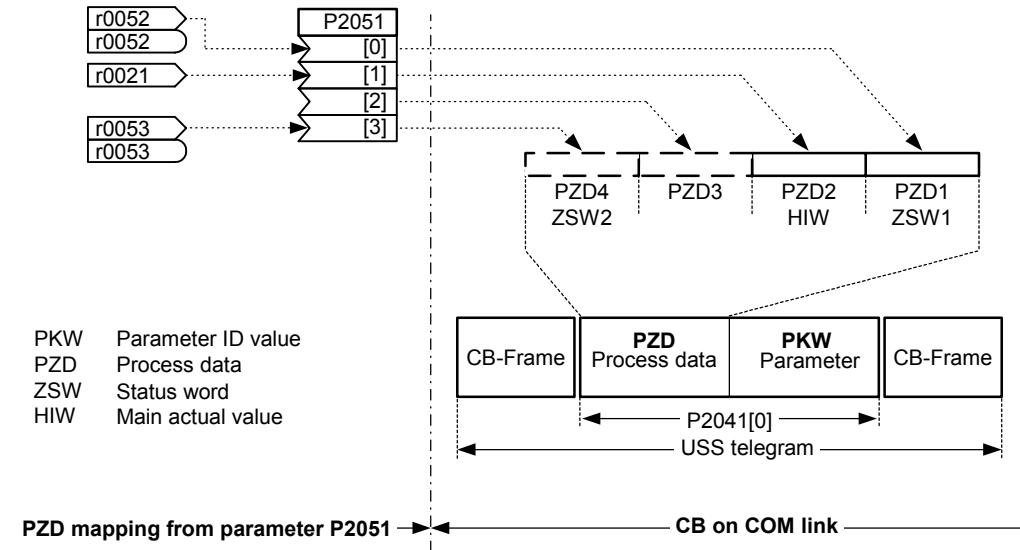

Index:

- P2051[0] : Transmitted word 0
- P2051[1] : Transmitted word 1
- P2051[2] : Transmitted word 2
- P2051[3] : Transmitted word 3

Common Settings:

- Status word 1 = 52 CO/BO: Act. status word 1 (see r0052)
- Actual value 1 = 21 inverter output frequency (see r0021)

Other BICO settings are possible

r2053[5]	CB identification	Datatype: U16	Unit: -	Min: -	Def: -	Level
		P-Group: COMM		Max: -		3

Displays identification data of the communication board (CB). The different CB types (r2053[0]) are given in the Enum declaration.

Possible Settings:

- 0 No CB option board
- 1 PROFIBUS DP
- 2 DeviceNet
- 256 not defined

Index:

- r2053[0] : CB type (PROFIBUS = 1)
- r2053[1] : Firmware version
- r2053[2] : Firmware version detail
- r2053[3] : Firmware date (year)
- r2053[4] : Firmware date (day/month)

r2054[7]	CB diagnosis	Datatype: U16	Unit: -	Min: -	Def: -	Level
		P-Group: COMM		Max: -		3

Displays diagnostic information of communication board (CB).

Index:

- r2054[0] : CB diagnosis 0
- r2054[1] : CB diagnosis 1
- r2054[2] : CB diagnosis 2
- r2054[3] : CB diagnosis 3
- r2054[4] : CB diagnosis 4
- r2054[5] : CB diagnosis 5
- r2054[6] : CB diagnosis 6

Details:

See relevant communications board manual.

r2090	BO: Control word 1 from CB	Datatype: U16	Unit: -	Min: -	Def: -	Level 3
	P-Group: COMM			Max: -		

Displays control word 1 received from communication board (CB).

Bitfields:

Bit00	ON/OFF1	0	NO	1	YES
Bit01	OFF2: Electrical stop	0	YES	1	NO
Bit02	OFF3: Fast stop	0	YES	1	NO
Bit03	Pulse enable	0	NO	1	YES
Bit04	RFG enable	0	NO	1	YES
Bit05	RFG start	0	NO	1	YES
Bit06	Setpoint enable	0	NO	1	YES
Bit07	Fault acknowledge	0	NO	1	YES
Bit08	JOG right	0	NO	1	YES
Bit09	JOG left	0	NO	1	YES
Bit10	Control from PLC	0	NO	1	YES
Bit11	Reverse (setpoint inversion)	0	NO	1	YES
Bit13	Motor potentiometer MOP up	0	NO	1	YES
Bit14	Motor potentiometer MOP down	0	NO	1	YES
Bit15	Local / Remote	0	NO	1	YES

Details:

See relevant communication board manual for protocol definition and appropriate settings.

r2091	BO: Control word 2 from CB	Datatype: U16	Unit: -	Min: -	Def: -	Level 3
	P-Group: COMM			Max: -		

Displays control word 2 received from communication board (CB).

Bitfields:

Bit00	Fixed frequency Bit 0	0	NO	1	YES
Bit01	Fixed frequency Bit 1	0	NO	1	YES
Bit02	Fixed frequency Bit 2	0	NO	1	YES
Bit08	PID enabled	0	NO	1	YES
Bit09	DC brake enabled	0	NO	1	YES
Bit13	External fault 1	0	YES	1	NO

Details:

See relevant communication board manual for protocol definition and appropriate settings.

P2100[3]	Alarm number selection	CStat: CT	Datatype: U16	Unit: -	Min: 0	Def: 0	Level 3
	P-Group: ALARMS		Active: first confirm	QuickComm.: No	Max: 65535		

Selects up to 3 faults or warnings for non-default reactions.

Index:

- P2100[0] : Fault Number 1
- P2100[1] : Fault Number 2
- P2100[2] : Fault Number 3

Example:

If you want F0005 to perform an OFF3 instead of an OFF2, set P2100[0] = 5, then select the desired reaction in P2101[0] (in this case, set P2101[0] = 3).

Note:

All fault codes have a default reaction to OFF2. Some fault codes caused by hardware trips (e.g. overcurrent) cannot be changed from the default reactions.

P2101[3]	Stop reaction value	Min: 0	Level
CStat: CT	Datatype: U16	Unit: -	Def: 0
P-Group: ALARMS	Active: first confirm	QuickComm.: No	Max: 4

Sets drive stop reaction values for fault selected by P2100 (alarm number stop reaction).

This indexed parameter specifies the special reaction to the faults/warnings defined in P2100 indices 0 to 2.

Possible Settings:

- 0 No reaction, no display
- 1 OFF1 stop reaction
- 2 OFF2 stop reaction
- 3 OFF3 stop reaction
- 4 No reaction warning only

Index:

- P2101[0] : Stop reaction value 1
- P2101[1] : Stop reaction value 2
- P2101[2] : Stop reaction value 3

Note:

Settings 0 - 3 only are available for fault codes.

Settings 0 and 4 only are available for warnings.

Index 0 (P2101) refers to fault/warning in index 0 (P2100).

P2103	BI: 1. Faults acknowledgement	Min: 0:0	Level
CStat: CT	Datatype: U32	Unit: -	Def: 722:2
P-Group: COMMANDS	Active: first confirm	QuickComm.: No	Max: 4000:0

Defines first source of fault acknowledgement, e.g. keypad/DIN, etc. (depending on setting).

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

P2104	BI: 2. Faults acknowledgement	Min: 0:0	Level
CStat: CT	Datatype: U32	Unit: -	Def: 0:0
P-Group: COMMANDS	Active: first confirm	QuickComm.: No	Max: 4000:0

Selects second source of fault acknowledgement.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

P2106	BI: External fault	Min: 0:0	Level
CStat: CT	Datatype: U32	Unit: -	Def: 1:0
P-Group: COMMANDS	Active: first confirm	QuickComm.: No	Max: 4000:0

Selects source of external faults.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

r2110[4]	Warning number	Min: -	Level
P-Group: ALARMS	Datatype: U16	Unit: -	Def: -

Displays warning information.

A maximum of 2 active warnings (indices 0 and 1) and 2 historical warnings (indices 2 and 3) may be viewed.

Index:

- r2110[0] : Recent Warnings --, warning 1
- r2110[1] : Recent Warnings --, warning 2
- r2110[2] : Recent Warnings -1, warning 3
- r2110[3] : Recent Warnings -1, warning 4

Note:

The keypad will flash while a warning is active. The LEDs indicate the warning status in this case.

If an AOP is in use, the display will show number and text of the active warning.

Notice:

Indices 0 and 1 are not stored.

P2111	Total number of warnings	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 0
P-Group:	ALARMS	Active: first confirm	Max: 4

Displays number of warning (up to 4) since last reset. Set to 0 to reset the warning history.

r2114[2]	Run time counter	Min: -	Level
	Datatype: U16	Unit: -	Def: -
	P-Group: ALARMS		Max: -

Displays run time counter. It is the total time the drive has been powered up. When power goes value is saved, then restored on powerup.

The run time counter r2114 will be calculate as followed:

Multiply the value in r2114[0], by 65536 and then add it to the value in r2114[1]. The resultant answer will be in seconds. This means that r2114[0] is not days.

When AOP is not connected, the time in this parameter is used by r0948 to indicate when a fault has occurred.

Index:

r2114[0] : System Time, Seconds, Upper Word

r2114[1] : System Time, Seconds, Lower Word

Example:

If r2114[0] = 1 & r2114[1] = 20864

We get $1 * 65536 + 20864 = 86400$ seconds which equals 1 day.

Details:

See r0948 (fault time)

P2115[3]	AOP real time clock	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 0
P-Group:	ALARMS	Active: Immediately	Max: 65535

Displays AOP real time.

All inverters require an on-board clock function with which fault conditions may be timestamped and logged. However, they have no battery backed Real Time Clock (RTC), unlike the AOP. Inverters may support a software driven RTC which requires synchronisation with the RTC of the AOP (heartbeat) - should the heartbeat be lost, the inverter after a timeout period will clear its local RTC to indicate the time is unknown. This will provide compatibility with the Basic Operator Panel (BOP), which cannot supply the time. The heartbeat period shall be 60 s, to avoid overloading the inverter with messages.

The time is stored in a word array parameter P2115. This parameter number is common to all inverters. Inverters not supporting this feature would respond with "Parameter not recognised" - a Master will ignore this. The time will be set by USS Protocol standard "word array parameter write" telegrams.

Within the AOP, while it is acting as a USS Master, at each tick of the heartbeat, the list of available USS Slaves will be flagged with a time update request. As the Master runs around the list of USS slaves on its next USS update cycle, if there are no higher priority tasks to perform, and the slave still has its time update flag set, then an array parameter write telegram will be issued, containing the current time. The request for that slave is cancelled if the slave responds correctly. The AOP will not need to read the time from the slave.

Time is maintained in a word array parameter and encoded as follows - the same format will be used in fault report logs.

Index	High Byte (MSB)	Low Byte (LSB)
0	Seconds (0 - 59)	Minutes (0 - 59)
1	Hours (0 - 23)	Days (1 - 31)
2	Month (1 - 12)	Years (00 - 250)

Time is measured from Jan 1st 2000. Values are in binary form.

Index:

P2115[0] : Real Time, Seconds+Minutes

P2115[1] : Real Time, Hours+Days

P2115[2] : Real Time, Month+Year

Details:

See r0948 (fault time).


P2120	Indication counter	Datatype: U16	Unit: -	Min: 0	Level
CStat:	CUT	Datatype: Float	Unit: Hz	Def: 0	4
P-Group:	ALARMS	Active: Immediately	QuickComm.: No	Max: 65535	

Indicates total number of alarm events. This parameter is incremented whenever an alarm event occurs. It also gets incremented when a warning is cleared or faults are cleared.

This parameter is used by the PC tools.


P2150	Hysteresis frequency f_hys	Datatype: Float	Unit: Hz	Min: 0.00	Level
CStat:	CUT	Datatype: Float	Unit: Hz	Def: 3.00	3
P-Group:	ALARMS	Active: Immediately	QuickComm.: No	Max: 10.00	

Defines hysteresis level applied for comparing frequency and speed to threshold as illustrated in the diagram below.

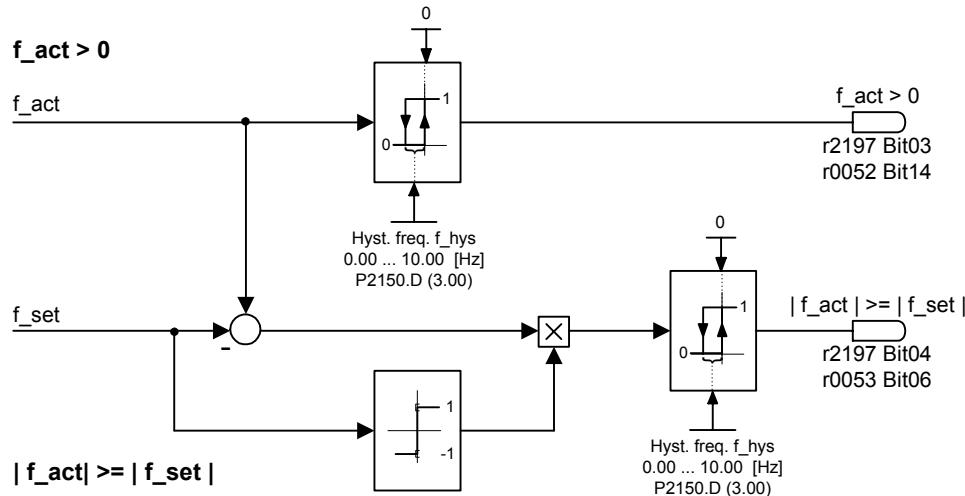

P2155	Threshold frequency f_1	Datatype: Float	Unit: Hz	Min: 0.00	Level
CStat:	CUT	Datatype: Float	Unit: Hz	Def: 30.00	3
P-Group:	ALARMS	Active: Immediately	QuickComm.: No	Max: 650.00	

Sets a threshold for comparing actual frequency or frequency to threshold values f_1 . This threshold controls status bits 4 and 5 in status word 2 (r0053).

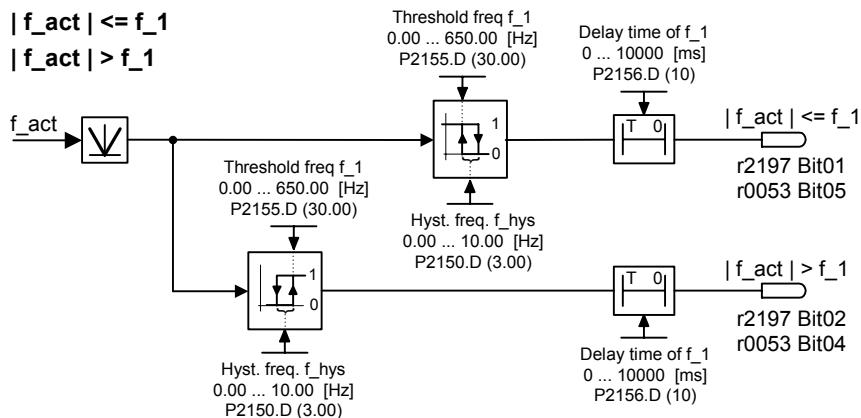

P2156	Delay time of threshold freq f_1	Datatype: U16	Unit: ms	Min: 0	Level
CStat:	CUT	Datatype: Float	Unit: ms	Def: 10	3
P-Group:	ALARMS	Active: Immediately	QuickComm.: No	Max: 10000	


Sets delay time prior to threshold frequency f_1 comparison (P2155).

Details:

See diagram in P2155 (threshold frequency f_1)

P2164	Hysteresis frequency deviation	Min: 0.00	Level
CStat:	CUT	Datatype: Float	Def: 3.00
P-Group:	ALARMS	Active: Immediately	Max: 10.00

Hysteresis frequency for detecting permitted deviation (from setpoint). This frequency controls bit 8 in status word 1 (r0052) and bit 6 in status word 2 (r0053).

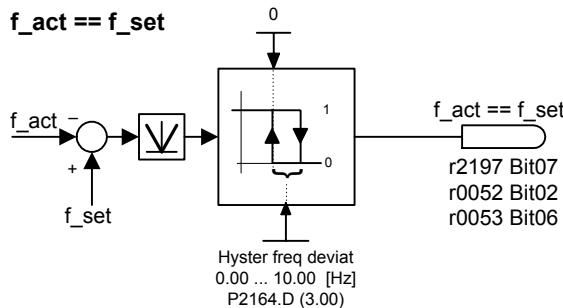

P2167	Switch-off frequency f_off	Min: 0.00	Level
CStat:	CUT	Datatype: Float	Def: 1.00
P-Group:	ALARMS	Active: Immediately	Max: 10.00


Defines the threshold of the monitoring function $|f_{act}| > P2167 (f_{off})$.

P2167 influences following functions:

- If the actual frequency falls below this threshold and the time delay has expired, bit 1 in status word 2 (r0053) is reset.
- If a OFF1 or OFF3 was applied and bit 1 is reset the inverter will disable the pulse (OFF2).

Restriction:

- The monitoring function $|f_{act}| > P2167 (f_{off})$ is not updated and pulses are not disabled, if motor holding brake (MHB, P1215 = 1) is enabled.

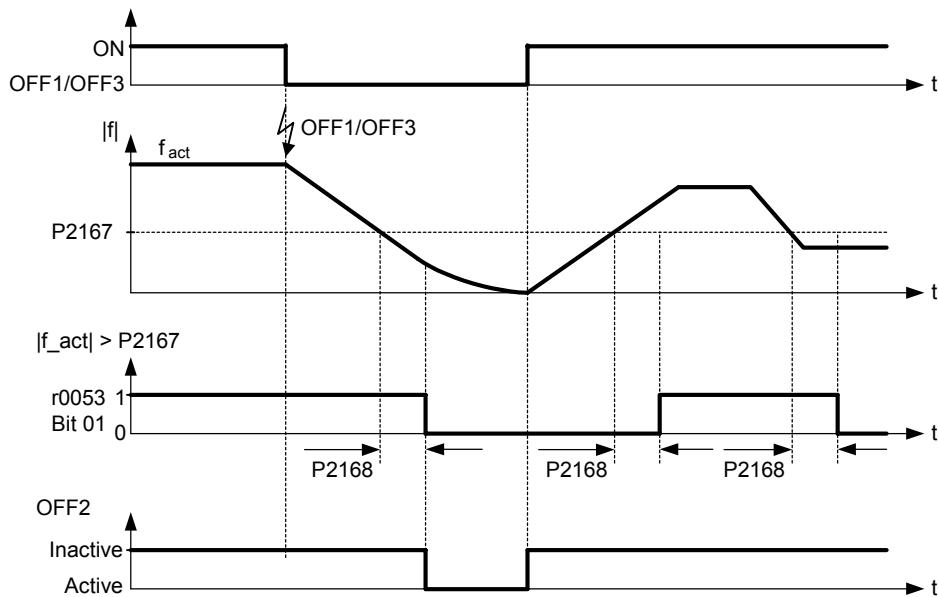

P2168	Delay time T_off	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 10
P-Group:	ALARMS	Active: Immediately	Max: 10000

Defines time for which the inverter may operate below switch-off frequency (P2167) before switch off occurs.

Dependency:


Active if holding brake (P1215) not parameterized.

Details:

See diagram in P2167 (switch-off frequency)

P2170	Threshold current I_thresh			Min: 0.0	Level
CStat:	CUT	Datatype: Float	Unit: %	Def: 100.0	
P-Group:	ALARMS	Active: Immediately	QuickComm.: No	Max: 400.0	3

Defines threshold current in [%] relative to P0305 (rated motor current) to be used in comparisons of $|I_{act}|$ and I_{Thresh} as illustrated in the diagram below.

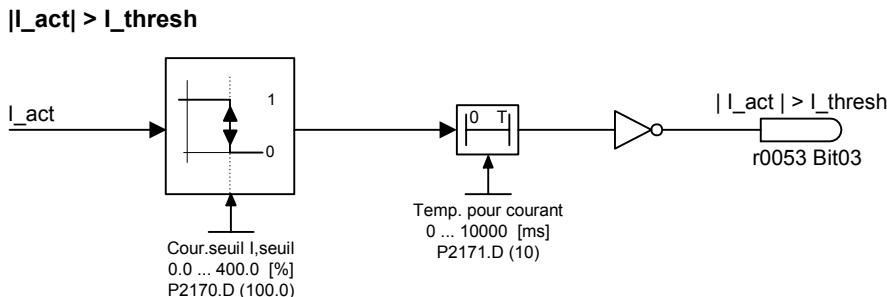**Note:**

This threshold controls bit 3 in status word 3 (r0053).

P2171	Delay time current			Min: 0	Level
CStat:	CUT	Datatype: U16	Unit: ms	Def: 10	
P-Group:	ALARMS	Active: Immediately	QuickComm.: No	Max: 10000	3


Defines delay time prior to activation of current comparison.

Details:

See diagram in P2170 (threshold current I_thresh)

P2172	Threshold DC-link voltage			Min: 0	Level
CStat:	CUT	Datatype: U16	Unit: V	Def: 800	
P-Group:	ALARMS	Active: Immediately	QuickComm.: No	Max: 2000	3

Defines DC link voltage to be compared to actual voltage as illustrated in the diagram below.

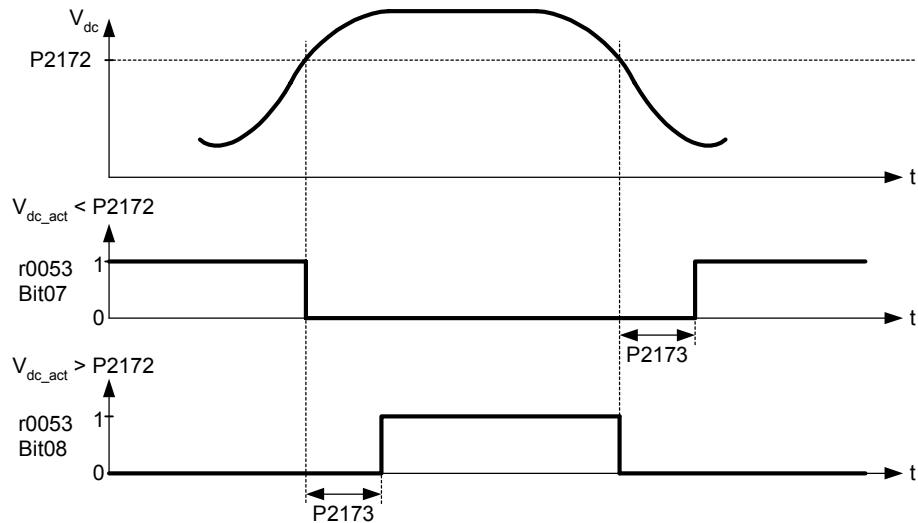**Note:**

This voltage controls bits 7 and 8 in status word 3 (r0053).

P2173	Delay time DC-link voltage			Min: 0	Level
CStat:	CUT	Datatype: U16	Unit: ms	Def: 10	
P-Group:	ALARMS	Active: Immediately	QuickComm.: No	Max: 10000	3

Defines delay time prior to activation of threshold comparison.


Details:

See diagram in P2172 (threshold DC-link voltage)

P2179	Current limit for no load ident.			Min: 0.0	Level
CStat: CUT	Datatype: Float	Unit: %		Def: 3.0	
P-Group: ALARMS	Active: Immediately	QuickComm.: No		Max: 10.0	3

Threshold current for A0922 (load missing) in [%] relative to P0305 (rated motor current) as illustrated in the diagram below.

Load missing

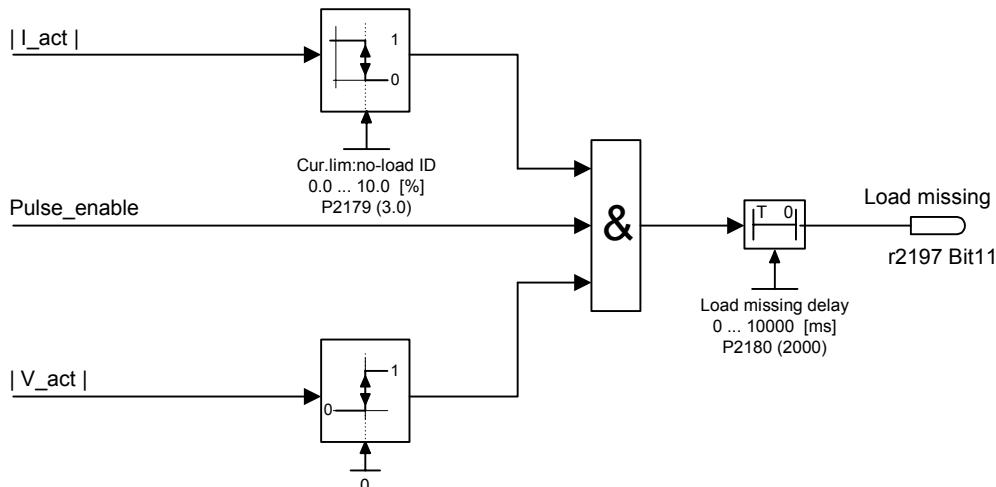
Note:

It may be that the motor is not connected (load missing) or a phase could be missing.

Notice:

If a motor setpoint cannot be entered and the current limit (P2179) is not exceeded, Alarm A0922 (no load applied) is issued when delay time (P2180) expires.

P2180	Delay time for load missing		Min: 0	Level
CStat: CUT	Datatype: U16	Unit: ms	Def: 2000	
P-Group: ALARMS	Active: Immediately	QuickComm.: No	Max: 10000	3

Delay time load missing

Note:

It may be that the motor is not connected (load missing) or a phase could be missing.

Notice:

If a motor setpoint cannot be entered and the current limit (P2179) is not exceeded, alarm A0922 (no load applied) is issued when delay time (P2180) expires.

Details:

See diagram in P2179 (current limit for no load identification).

r2197	CO/BO: Monitoring word 1		Min: -	Level
		Datatype: U16 Unit: -	Def: -	2
		P-Group: ALARMS	Max: -	

Monitoring word 1 which indicates the state of monitor functions. Each bit represents one monitor function.

Bitfields:

Bit00	f_act <= P1080 (f_min)	0	NO	1	YES
Bit01	f_act <= P2155 (f_1)	0	NO	1	YES
Bit02	f_act > P2155 (f_1)	0	NO	1	YES
Bit03	f_act > zero	0	NO	1	YES
Bit04	f_act >= setup. (f_set)	0	NO	1	YES
Bit05	f_act > P2167 (f_off)	0	NO	1	YES
Bit06	f_act >= P1082 (f_max)	0	NO	1	YES
Bit07	f_act == setup. (f_set)	0	NO	1	YES
Bit08	Act. current r0027 <= P2170	0	NO	1	YES
Bit09	Act. unfilt. Vdc < P2172	0	NO	1	YES
Bit10	Act. unfilt. Vdc > P2172	0	NO	1	YES
Bit11	Load missing	0	NO	1	YES

P2200	BI: Enable PID controller	Min: 0:0	Level
CStat: CT	Datatype: U32	Unit: -	Def: 0:0
P-Group: TECH	Active: first confirm	QuickComm.: No	Max: 4000:0

PID mode Allows user to enable/disable the PID controller. Setting to 1 enables the PID closed-loop controller.

Dependency:

Setting 1 automatically disables normal ramp times set in P1120 and P1121 and the normal frequency setpoints.

Following an OFF1 or OFF3 command, however, the inverter frequency will ramp down to zero using the ramp time set in P1121 (P1135 for OFF3).

Note:

The PID setpoint source is selected using P2253. The PID setpoint and the PID feedback signal are interpreted as [%] values (not [Hz]). The output of the PID controller is displayed as [%] and then normalized into [Hz] through P2000 (reference frequency) when PID is enabled.

In level 3, the PID controller source enable can also come from the digital inputs in settings 722.0 to 722.2 for DIN1 to DIN3 or from any other BiCo source.

Notice:

The minimum and maximum motor frequencies (P1080 and P1082) as well as the skip frequencies (P1091 to P1094) remain active on the inverter output. However, enabling skip frequencies with PID control can produce instabilities.

P2201	Fixed PID setpoint 1	Min: -200.00	Level
CStat: CUT	Datatype: Float	Unit: %	Def: 0.00
P-Group: TECH	Active: Immediately	QuickComm.: No	Max: 200.00

Defines Fixed PID Setpoint 1

There are three options available for selection of the PID fixed setpoints:

1. Direct selection
2. Direct selection + ON command
3. Binary coded selection + ON command

1. Direct selection (P0701 - P0706 = 15):

- In this mode of operation, 1 digital input selects one PID fixed setpoint.
- If several inputs are active together, the selected setpoints are summed.
- E.g.: PID-FF1 + PID-FF2 + PID-FF3.

2. Direct selection + ON command (P0701 - P0706 = 16):

- Description as for 1), except that this type of selection issues an ON command concurrent with any setpoint selection.
- If several inputs are active together, the selected setpoints are summed.
- E.g.: PID-FF1 + PID-FF2 + PID-FF3.

3. Binary coded selection + ON command (P0701 - P0706 = 17):

- Using this method to select the fixed PID setpoint (FF-PID) allows you to choose up to 8 different PID setpoints.
- The setpoints are selected according to the following table:


Example:

Binary coded selection :

	DIN3	DIN2	DIN1
0 %	PID - FF0	0	0
P2201	PID - FF1	0	0
P2202	PID - FF2	0	1
P2203	PID - FF3	0	1
P2204	PID - FF4	1	0
P2205	PID - FF5	1	0
P2206	PID - FF6	1	1
P2207	PID - FF7	1	1

Direct selection of PID-FF1 P2201 via DIN 1:

P0701 = 15
or
P0701 = 99, P2220 = 722.0, P2216 = 1

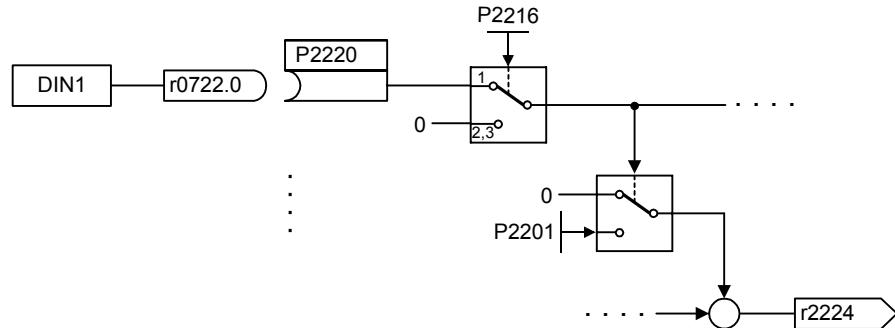

Dependency:

P2200 = 1 required in user access level 2 to enable setpoint source.

Note:

You may mix different types of frequencies; however, remember that they will be summed if selected together.

P2201 = 100 % corresponds to 4000 hex

P2202	Fixed PID setpoint 2	Min: -200.00	Level
CStat: P-Group:	CUT TECH	Datatype: Float Active: Immediately	Def: 10.00 Max: 200.00

Defines Fixed PID Setpoint 2

Details:

See P2201 (Fixed PID Setpoint 1).

P2203	Fixed PID setpoint 3	Min: -200.00	Level
CStat: P-Group:	CUT TECH	Datatype: Float Active: Immediately	Def: 20.00 Max: 200.00

Defines Fixed PID Setpoint 3

Details:

See P2201 fixed PID setpoint 1 (FF-PID 1).

P2204	Fixed PID setpoint 4	Min: -200.00	Level
CStat: P-Group:	CUT TECH	Datatype: Float Active: Immediately	Def: 30.00 Max: 200.00

Defines Fixed PID Setpoint 4

Details:

See P2201 (Fixed PID Setpoint 1).

P2205	Fixed PID setpoint 5	Min: -200.00	Level
CStat: P-Group:	CUT TECH	Datatype: Float Active: Immediately	Def: 40.00 Max: 200.00

Defines Fixed PID Setpoint 5

Details:

See P2201 (Fixed PID Setpoint 1).

P2206	Fixed PID setpoint 6	Min: -200.00	Level
CStat: P-Group:	CUT TECH	Datatype: Float Active: Immediately	Def: 50.00 Max: 200.00

Defines Fixed PID Setpoint 6

Details:

See P2201 (Fixed PID Setpoint 1).

P2207	Fixed PID setpoint 7	Min: -200.00	Level
CStat: P-Group:	CUT TECH	Datatype: Float Active: Immediately	Def: 60.00 Max: 200.00

Defines Fixed PID Setpoint 7

Details:

See P2201 (Fixed PID Setpoint 1).

P2216	Fixed PID setpoint mode - Bit 0	Min: 1 Def: 1 Max: 3	Level 3
CStat: CT P-Group: TECH	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	
Fixed frequencies for PID setpoint can be selected in three different modes. Parameter P2216 defines the mode of selection Bit 0.			
Possible Settings: 1 Direct selection 2 Direct selection + ON command 3 Binary coded selection + ON command			
P2217	Fixed PID setpoint mode - Bit 1	Min: 1 Def: 1 Max: 3	Level 3
CStat: CT P-Group: TECH	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	
BCD or direct selection Bit 1 for PID setpoint.			
Possible Settings: 1 Direct selection 2 Direct selection + ON command 3 Binary coded selection + ON command			
P2218	Fixed PID setpoint mode - Bit 2	Min: 1 Def: 1 Max: 3	Level 3
CStat: CT P-Group: TECH	Datatype: U16 Active: first confirm	Unit: - QuickComm.: No	
BCD or direct selection Bit 2 for PID setpoint.			
Possible Settings: 1 Direct selection 2 Direct selection + ON command 3 Binary coded selection + ON command			
P2220	BI: Fixed PID setup. select Bit 0	Min: 0:0 Def: 0:0 Max: 4000:0	Level 3
CStat: CT P-Group: COMMANDS	Datatype: U32 Active: first confirm	Unit: - QuickComm.: No	
Defines command source of fixed PID setpoint selection Bit 0			
Common Settings: 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO) 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO) 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO) 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)			
P2221	BI: Fixed PID setup. select Bit 1	Min: 0:0 Def: 0:0 Max: 4000:0	Level 3
CStat: CT P-Group: COMMANDS	Datatype: U32 Active: first confirm	Unit: - QuickComm.: No	
Defines command source of fixed PID setpoint selection Bit 1.			
Common Settings: 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO) 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO) 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)			
P2222	BI: Fixed PID setup. select Bit 2	Min: 0:0 Def: 0:0 Max: 4000:0	Level 3
CStat: CT P-Group: COMMANDS	Datatype: U32 Active: first confirm	Unit: - QuickComm.: No	
Defines command source of fixed PID setpoint selection Bit 2			
Common Settings: 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO) 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO) 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)			
r2224	CO: Act. fixed PID setpoint	Min: - Def: - Max: -	Level 2
P-Group: TECH	Datatype: Float	Unit: %	
Displays total output of PID fixed setpoint selection.			

Note:

r2224 = 100 % corresponds to 4000 hex

P2231	Setpoint memory of PID-MOP			Min: 0	Level
CStat:	CUT	Datatype: U16	Unit: -	Def: 0	
P-Group:	TECH	Active: Immediately	QuickComm.: No	Max: 1	2

Setpoint memory

Possible Settings:

- 0 PID-MOP setpoint will not be stored
- 1 PID-MOP setpoint will be stored (P2240 is updated)

Dependency:

P2231 = 0:
If 0 selected, setpoint returns to value set in P2240 (setpoint of PID-MOP) after an OFF command.

P2231 = 1:
If 1 is selected, active setpoint is 'remembered' and P2240 updated with current value.

Details:

See P2240 (setpoint of PID-MOP)

P2232	Inhibit neg. PID-MOP setpoints			Min: 0	Level
CStat:	CT	Datatype: U16	Unit: -	Def: 1	
P-Group:	TECH	Active: first confirm	QuickComm.: No	Max: 1	2

This parameter suppresses negative setpoints of the PID-MOP output r2250.

Possible Settings:

- 0 Neg. PID-MOP setpoint is allowed
- 1 Neg. PID-MOP setpoint inhibited

Note:

Setting 0 enables a change of motor direction using the motor potentiometer setpoint (increase/decrease frequency either by using digital inputs or motor potentiometer up/down buttons).

P2235	BI: Enable PID-MOP (UP-cmd)			Min: 0:0	Level
CStat:	CT	Datatype: U32	Unit: -	Def: 19:13	
P-Group:	COMMANDS	Active: first confirm	QuickComm.: No	Max: 4000:0	3

Defines source of UP command.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)

19.D = Keypad UP button

Dependency:

To change setpoint:
1. Use UP / DOWN key on BOP or
2. Set P0702/P0703 = 13/14 (function of digital inputs 2 and 3)

P2236	BI: Enable PID-MOP (DOWN-cmd)			Min: 0:0	Level
CStat:	CT	Datatype: U32	Unit: -	Def: 19:14	
P-Group:	COMMANDS	Active: first confirm	QuickComm.: No	Max: 4000:0	3

Defines source of DOWN command.

Common Settings:

- 722.0 = Digital input 1 (requires P0701 to be set to 99, BICO)
- 722.1 = Digital input 2 (requires P0702 to be set to 99, BICO)
- 722.2 = Digital input 3 (requires P0703 to be set to 99, BICO)
- 722.3 = Digital input 4 (via analog input, requires P0704 to be set to 99)

19.E = Keypad DOWN button

Dependency:

To change setpoint:
1. Use UP / DOWN key on BOP or
2. Set P0702/P0703 = 13/14 (function of digital inputs 2 and 3)

P2240	Setpoint of PID-MOP			Min: -200.00	Level
CStat:	CUT	Datatype: Float	Unit: %	Def: 10.00	
P-Group:	TECH	Active: Immediately	QuickComm.: No	Max: 200.00	2

Setpoint of the motor potentiometer.


Allows user to set a digital PID setpoint in [%].

Note:

P2240 = 100 % corresponds to 4000 hex

r2250	CO: Output setpoint of PID-MOP	Datatype: Float	Unit: %	Min: -	Level
	P-Group: TECH			Def: -	2

Displays output setpoint of motor potentiometer in [%].

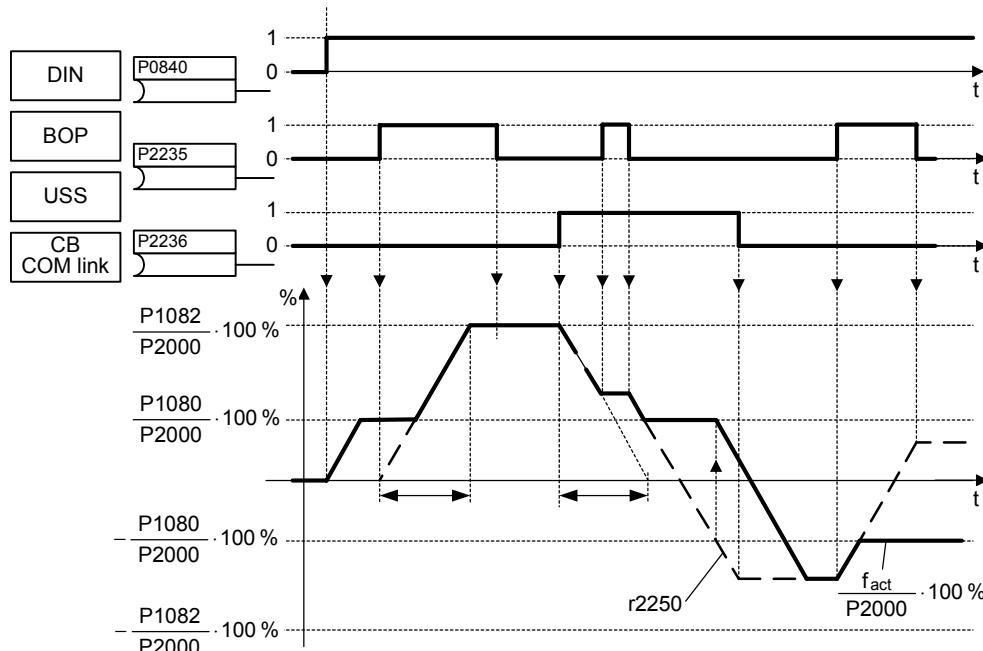


Note:

r2250 = 100 % corresponds to 4000 hex

P2253	CI: PID setpoint	Datatype: U32	Unit: -	Min: 0:0	Level
	CStat: CUT	Active: first confirm	QuickComm.: No	Def: 0:0	2

Defines setpoint source for PID setpoint input.

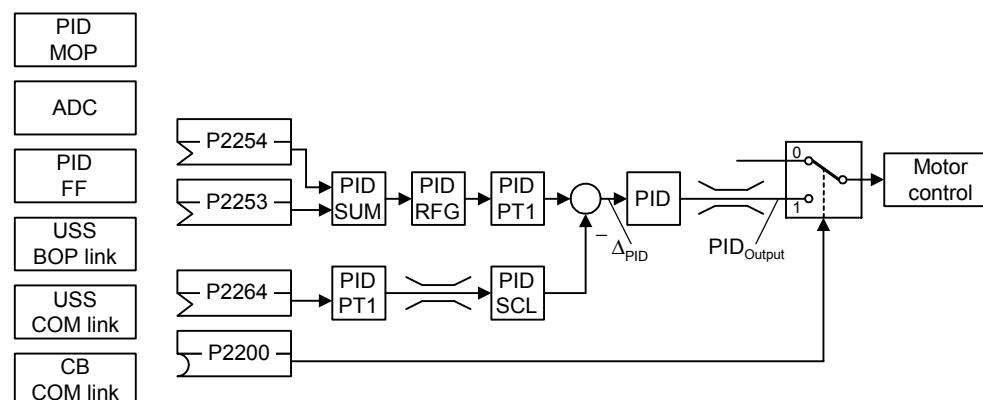

This parameter allows the user to select the source of the PID setpoint. Normally, a digital setpoint is selected either using a fixed PID setpoint or an active setpoint.

Common Settings:

- 755 = Analog input 1
- 2224 = Fixed PI setpoint (see P2201 to P2207)
- 2250 = Active PI setpoint (see P2240)

P2254	CI: PID trim source	Min: 0:0	Level
CStat:	CUT	Datatype: U32	Def: 0:0
P-Group:	TECH	Active: first confirm	Max: 4000:0

Selects trim source for PID setpoint. This signal is multiplied by the trim gain and added to the PID setpoint.

Common Settings:

755 = Analog input 1

2224 = Fixed PI setpoint (see P2201 to P2207)

2250 = Active PI setpoint (see P2240)

P2255	PID setpoint gain factor	Min: 0.00	Level
CStat:	CUT	Datatype: Float	Def: 100.00
P-Group:	TECH	Active: Immediately	QuickComm.: No Max: 100.00

Gain factor for PID setpoint. The PID setpoint input is multiplied by this gain factor to produce a suitable ratio between setpoint and trim.


P2256	PID trim gain factor	Min: 0.00	Level
CStat:	CUT	Datatype: Float	Def: 100.00
P-Group:	TECH	Active: Immediately	QuickComm.: No Max: 100.00

Gain factor for PID trim. This gain factor scales the trim signal, which is added to the main PID setpoint.

P2257	Ramp-up time for PID setpoint	Min: 0.00	Level
CStat:	CUT	Datatype: Float	Def: 1.00
P-Group:	TECH	Active: Immediately	QuickComm.: No Max: 650.00

Sets the ramp-up time for the PID setpoint.

PID Setpoint (%)

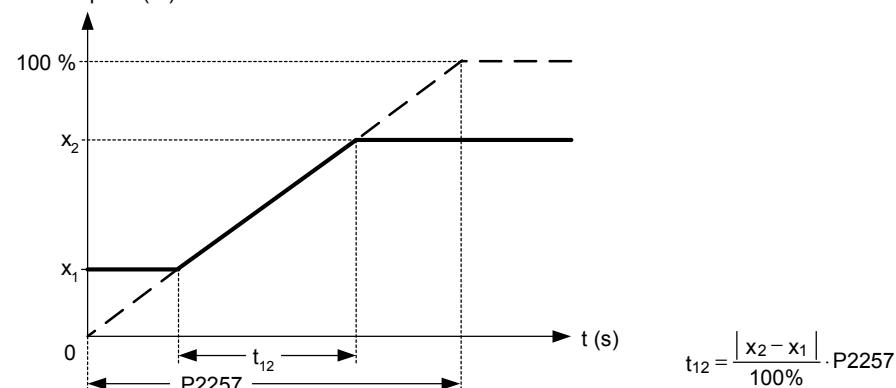

Dependency:

P2200 = 1 (PID control is enabled) disable normal ramp-up time (P1120).

PID ramp time effective only on PID setpoint and only active when PID setpoint is changed or when RUN command is given (when PID setpoint uses this ramp to reach its value from 0 %).


Notice:

Setting the ramp-up time too short may cause the inverter to trip, on overcurrent for example.

P2258	Ramp-down time for PID setpoint	Min: 0.00	Level
CStat: CUT	Datatype: Float	Def: 1.00	
P-Group: TECH	Active: Immediately	Unit: s	Max: 650.00

Sets ramp-down time for PID setpoint.

PID Setpoint (%)

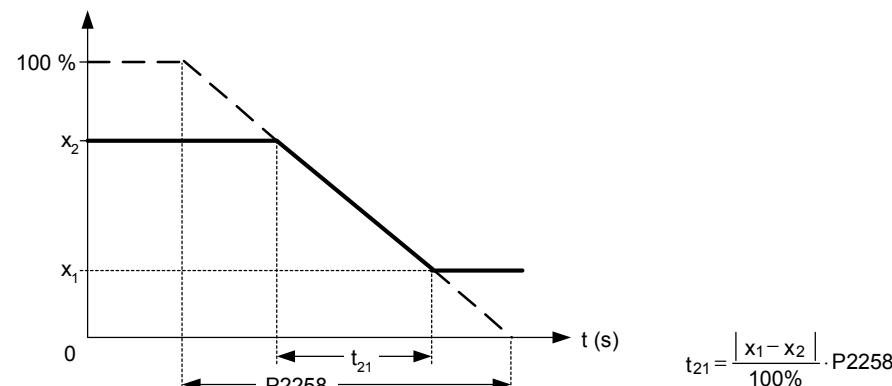

Dependency:

P2200 = 1 (PID control is enabled) disables normal ramp-up time (P1120).

PID setpoint ramp effective only on PID setpoint changes.

P1121 (ramp-down time) and P1135 (OFF3 ramp-down time) define the ramp times used after OFF1 and OFF3 respectively.

Notice:

Setting the ramp-down time too short can cause the inverter to trip on overvoltage (F0002) / overcurrent (F0001).

r2260	CO: PID setpoint after PID-RFG	Min: -	Level
	Datatype: Float	Def: -	
	P-Group: TECH	Unit: %	Max: -

Displays total active PID setpoint after PID-RFG in [%].

Note:

r2260 = 100 % corresponds to 4000 hex

P2261	PID setpoint filter timeconstant	Min: 0.00	Level
CStat: CUT	Datatype: Float	Def: 0.00	
P-Group: TECH	Active: Immediately	Unit: s	Max: 60.00

Sets a time constant for smoothing the PID setpoint.

Note:

0 = no smoothing

r2262	CO: Filtered PID setp. after RFG	Min: -	Level
	Datatype: Float	Def: -	
	P-Group: TECH	Unit: %	Max: -

Displays filtered PID setpoint after PID-RFG in [%].

Note:

r2262 = 100 % corresponds to 4000 hex

P2264	CI: PID feedback	Min: 0:0	Level
CStat: CUT	Datatype: U32	Def: 755:0	
P-Group: TECH	Active: first confirm	Unit: -	Max: 4000:0

Selects the source of the PID feedback signal.

Common Settings:

755 = Analog input 1 setpoint

2224 = Fixed PID setpoint

2250 = Output setpoint of PID-MOP

Note:

When analog input is selected, offset and gain can be implemented using parameters P0756 to P0760.

P2265	PID feedback filter timeconstant	Min: 0.00	Level
CStat:	CUT	Datatype: Float	Def: 0.00
P-Group:	TECH	Active: Immediately	Max: 60.00
Defines time constant for PID feedback filter.			
r2266	CO: PID filtered feedback	Min: -	Level
		Datatype: Float	Def: -
	P-Group: TECH	Unit: %	Max: -
Displays PID feedback signal in [%].			
Note:	r2266 = 100 % corresponds to 4000 hex		
P2267	Max. value for PID feedback	Min: -200.00	Level
CStat:	CUT	Datatype: Float	Def: 100.00
P-Group:	TECH	Active: Immediately	Max: 200.00
Sets the upper limit for the value of the feedback signal in [%].			
Note:	P2267 = 100 % corresponds to 4000 hex		
Notice:	When PID is enabled (P2200 = 1) and the signal rises above this value, the inverter will trip with F0222 .		
P2268	Min. value for PID feedback	Min: -200.00	Level
CStat:	CUT	Datatype: Float	Def: 0.00
P-Group:	TECH	Active: Immediately	Max: 200.00
Sets lower limit for value of feedback signal in [%].			
Note:	P2268 = 100 % corresponds to 4000 hex		
Notice:	When PID is enabled (P2200 = 1) and the signal rises below this value, the inverter will trip with F0221 .		
P2269	Gain applied to PID feedback	Min: 0.00	Level
CStat:	CUT	Datatype: Float	Def: 100.00
P-Group:	TECH	Active: Immediately	Max: 500.00
Allows the user to scale the PID feedback as a percentage value [%].			
A gain of 100.0 % means that feedback signal has not changed from its default value.			
P2270	PID feedback function selector	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0
P-Group:	TECH	Active: Immediately	Max: 3
Applies mathematical functions to the PID feedback signal, allowing multiplication of the result by P2269 (gain applied to PID feedback).			
Possible Settings:			
0	Disabled		
1	Square root (root(x))		
2	Square (x*x)		
3	Cube (x*x*x)		
P2271	PID transducer type	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0
P-Group:	TECH	Active: Immediately	Max: 1
Allows the user to select the transducer type for the PID feedback signal.			
Possible Settings:			
0	Disabled		
1	Inversion of PID feedback signal		
Notice:	It is essential that you select the correct transducer type.		
If you are unsure whether 0 or 1 is applicable, you can determine the correct type as follows:			
1.	Disable the PID function (P2200 = 0).		
2.	Increase the motor frequency while measuring the feedback signal.		
3.	If the feedback signal increases with an increase in motor frequency, the PID transducer type should be 0.		
4.	If the feedback signal decreases with an increase in motor frequency the PID transducer type should be set to 1.		

r2272	CO: PID scaled feedback	Datatype: Float	Unit: %	Min: -	Level
	P-Group: TECH			Def: -	2

Displays PID scaled feedback signal in [%].

Note:

r2272 = 100 % corresponds to 4000 hex

r2273	CO: PID error	Datatype: Float	Unit: %	Min: -	Level
	P-Group: TECH			Def: -	2

Displays PID error (difference) signal between setpoint and feedback signals in [%].


Note:

r2273 = 100 % corresponds to 4000 hex

P2280	PID proportional gain	CStat: CUT	Datatype: Float	Unit: -	Min: 0.000	Level
	P-Group: TECH		Active: Immediately	QuickComm.: No	Def: 3.000	2

Allows user to set proportional gain for PID controller.

The PID controller is implemented using the standard model.

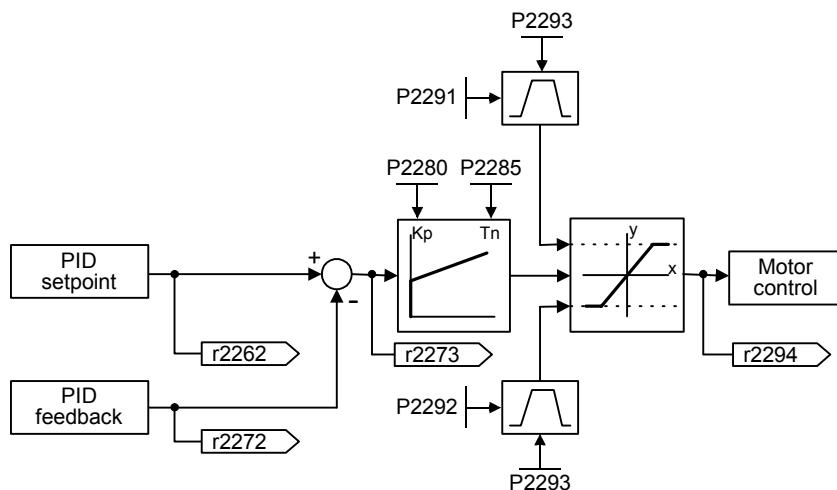

For best results, enable both P and I terms.

Dependency:

P2280 = 0 (P term of PID = 0):

I term acts on the square of the error signal.

P2285 = 0 (I term of PID = 0):

PID controller acts as a P or PD controller respectively.

Note:

If the system is prone to sudden step changes in the feedback signal, P term should normally be set to a small value (0.5) with a faster I term for optimum performance.

P2285	PID integral time	CStat: CUT	Datatype: Float	Unit: s	Min: 0.000	Level
	P-Group: TECH		Active: Immediately	QuickComm.: No	Def: 0.000	2

Sets integral time constant for PID controller.

Details:

See P2280 (PID proportional gain).

P2291	PID output upper limit	CStat: CUT	Datatype: Float	Unit: %	Min: -200.00	Level
	P-Group: TECH		Active: Immediately	QuickComm.: No	Def: 100.00	2

Sets upper limit for PID controller output in [%].

Dependency:

If F max (P1082) is greater than P2000 (reference frequency), either P2000 or P2291 (PID output upper limit) must be changed to achieve F max.

Note:

P2291 = 100 % corresponds to 4000 hex (as defined by P2000 (reference frequency)).

P2292	PID output lower limit	CStat: CUT P-Group: TECH	Datatype: Float Active: Immediately	Unit: % QuickComm.: No	Min: -200.00 Def: 0.00 Max: 200.00	Level 2
--------------	-------------------------------	---	--	---	---	--------------------------

Sets lower limit for the PID controller output in [%].

Dependency:

A negative value allows bipolar operation of PID controller.

Note:

P2292 = 100 % corresponds to 4000 hex

P2293	Ramp-up /-down time of PID limit	CStat: CUT P-Group: TECH	Datatype: Float Active: Immediately	Unit: s QuickComm.: No	Min: 0.00 Def: 1.00 Max: 100.00	Level 3
--------------	---	---	--	---	--	--------------------------

Sets maximum ramp rate on output of PID.

When PI is enabled, the output limits are ramped up from 0 to the limits set in P2291 (PID output upper limit) and P2292 (PID output lower limit). Limits prevent large step changes appearing on the output of the PID when the inverter is started. Once the limits have been reached, the PID controller output is instantaneous.

These ramp times are used whenever a RUN command is issued.

Note:

If an OFF1 or OFF 3 are issued, the inverter output frequency ramps down as set in P1121 (ramp-down time) or P1135 (OFF3 ramp-down time).

r2294	CO: Act. PID output	Datatype: Float P-Group: TECH	Unit: %	Min: - Def: - Max: -	Level 2
--------------	----------------------------	--	----------------	---	--------------------------

Displays PID output in [%]

Note:

r2294 = 100 % corresponds to 4000 hex

P3900	End of quick commissioning	CStat: C P-Group: QUICK	Datatype: U16 Active: first confirm	Unit: - QuickComm.: Yes	Min: 0 Def: 0 Max: 3	Level 1
--------------	-----------------------------------	--	--	--	---	--------------------------

Performs calculations necessary for optimized motor operation.

After completion of calculation, P3900 and P0010 (parameter groups for commissioning) are automatically reset to their original value 0.

Possible Settings:

- 0 No quick commissioning
- 1 Start quick commissioning with factory reset
- 2 Start quick commissioning
- 3 Start quick commissioning only for motor data

Dependency:

Changeable only when P0010 = 1 (quick commissioning)

Note:

P3900 = 1 :

When setting 1 is selected, only the parameter settings carried out via the commissioning menu "Quick commissioning", are retained; all other parameter changes, including the I/O settings, are lost. Motor calculations are also performed.

P3900 = 2 :

When setting 2 is selected, only those parameters, which depend on the parameters in the commissioning menu "Quick commissioning" (P0010 = 1) are calculated. The I/O settings are also reset to default and the motor calculations performed.

P3900 = 3 :

When setting 3 is selected, only the motor and controller calculations are performed. Exiting quick commissioning with this setting saves time (for example, if only motor rating plate data have been changed).

Calculates a variety of motor parameters, overwriting previous values (see parameter P0340, setting P0340 = 1).

P3950	Access of hidden parameters	Min: 0	Level
CStat:	CUT	Datatype: U16	Def: 0
P-Group:	ALWAYS	Active: first confirm	Max: 255

Accesses special parameters for development (expert only) and factory functionality (calibration parameter).

r3954[13]	CM version and GUI ID	Min: -	Level
	Datatype: U16	Unit: -	Def: -
	P-Group: -		Max: -

Used to classify firmware (only for SIEMENS internal purposes).

Index:

- r3954[0] : CM version (major release)
- r3954[1] : CM version (minor release)
- r3954[2] : CM version (baselevel or patch)
- r3954[3] : GUI ID
- r3954[4] : GUI ID
- r3954[5] : GUI ID
- r3954[6] : GUI ID
- r3954[7] : GUI ID
- r3954[8] : GUI ID
- r3954[9] : GUI ID
- r3954[10] : GUI ID
- r3954[11] : GUI ID major release
- r3954[12] : GUI ID minor release

P3980	Commissioning command selection	Min: 0	Level
CStat:	T	Datatype: U16	Def: 0
P-Group:	-	Active: first confirm	Max: 66

Toggles command and setpoint sources between freely programmable BICO parameters and fixed command/setpoint profiles for commissioning.

The command and setpoint sources can be changed independently. The tens digit selects the command source, the ones digit the setpoint source.

Possible Settings:

- | | | |
|----|-----------------------|----------------------------|
| 0 | Cmd = BICO parameter | Setpoint = BICO parameter |
| 1 | Cmd = BICO parameter | Setpoint = MOP setpoint |
| 2 | Cmd = BICO parameter | Setpoint = Analog setpoint |
| 3 | Cmd = BICO parameter | Setpoint = Fixed frequency |
| 4 | Cmd = BICO parameter | Setpoint = USS on BOP link |
| 5 | Cmd = BICO parameter | Setpoint = USS on COM link |
| 6 | Cmd = BICO parameter | Setpoint = CB on COM link |
| 10 | Cmd = BOP | Setpoint = BICO parameter |
| 11 | Cmd = BOP | Setpoint = MOP setpoint |
| 12 | Cmd = BOP | Setpoint = Analog setpoint |
| 13 | Cmd = BOP | Setpoint = Fixed frequency |
| 15 | Cmd = BOP | Setpoint = USS on COM link |
| 16 | Cmd = BOP | Setpoint = CB on COM link |
| 40 | Cmd = USS on BOP link | Setpoint = BICO parameter |
| 41 | Cmd = USS on BOP link | Setpoint = MOP setpoint |
| 42 | Cmd = USS on BOP link | Setpoint = Analog setpoint |
| 43 | Cmd = USS on BOP link | Setpoint = Fixed frequency |
| 44 | Cmd = USS on BOP link | Setpoint = USS on BOP link |
| 45 | Cmd = USS on BOP link | Setpoint = USS on COM link |
| 46 | Cmd = USS on BOP link | Setpoint = CB on COM link |
| 50 | Cmd = USS on COM link | Setpoint = BICO parameter |
| 51 | Cmd = USS on COM link | Setpoint = MOP setpoint |
| 52 | Cmd = USS on COM link | Setpoint = Analog setpoint |
| 53 | Cmd = USS on COM link | Setpoint = Fixed frequency |
| 54 | Cmd = USS on COM link | Setpoint = USS on BOP link |
| 55 | Cmd = USS on COM link | Setpoint = USS on COM link |
| 60 | Cmd = CB on COM link | Setpoint = BICO parameter |
| 61 | Cmd = CB on COM link | Setpoint = MOP setpoint |
| 62 | Cmd = CB on COM link | Setpoint = Analog setpoint |
| 63 | Cmd = CB on COM link | Setpoint = Fixed frequency |
| 64 | Cmd = CB on COM link | Setpoint = USS on BOP link |
| 66 | Cmd = CB on COM link | Setpoint = CB on COM link |

P3981	Reset active fault	Min: 0	Level
CStat:	CT	Datatype: U16	Def: 0
P-Group:	ALARMS	Active: first confirm	Max: 1

Resets active faults when changed from 0 to 1.

Possible Settings:

- 0 No fault reset
- 1 Reset fault

Note:

Automatically reset to 0.

Details:

See P0947 (last fault code)

r3986[2]	Number of parameters	Min: -	Level
	Datatype: U16	Unit: -	Def: -

P-Group: -

Max: -

4


Number of parameters on the drive


Index:


r3986[0] : Read only


r3986[1] : Read & write


2 Function Diagrams

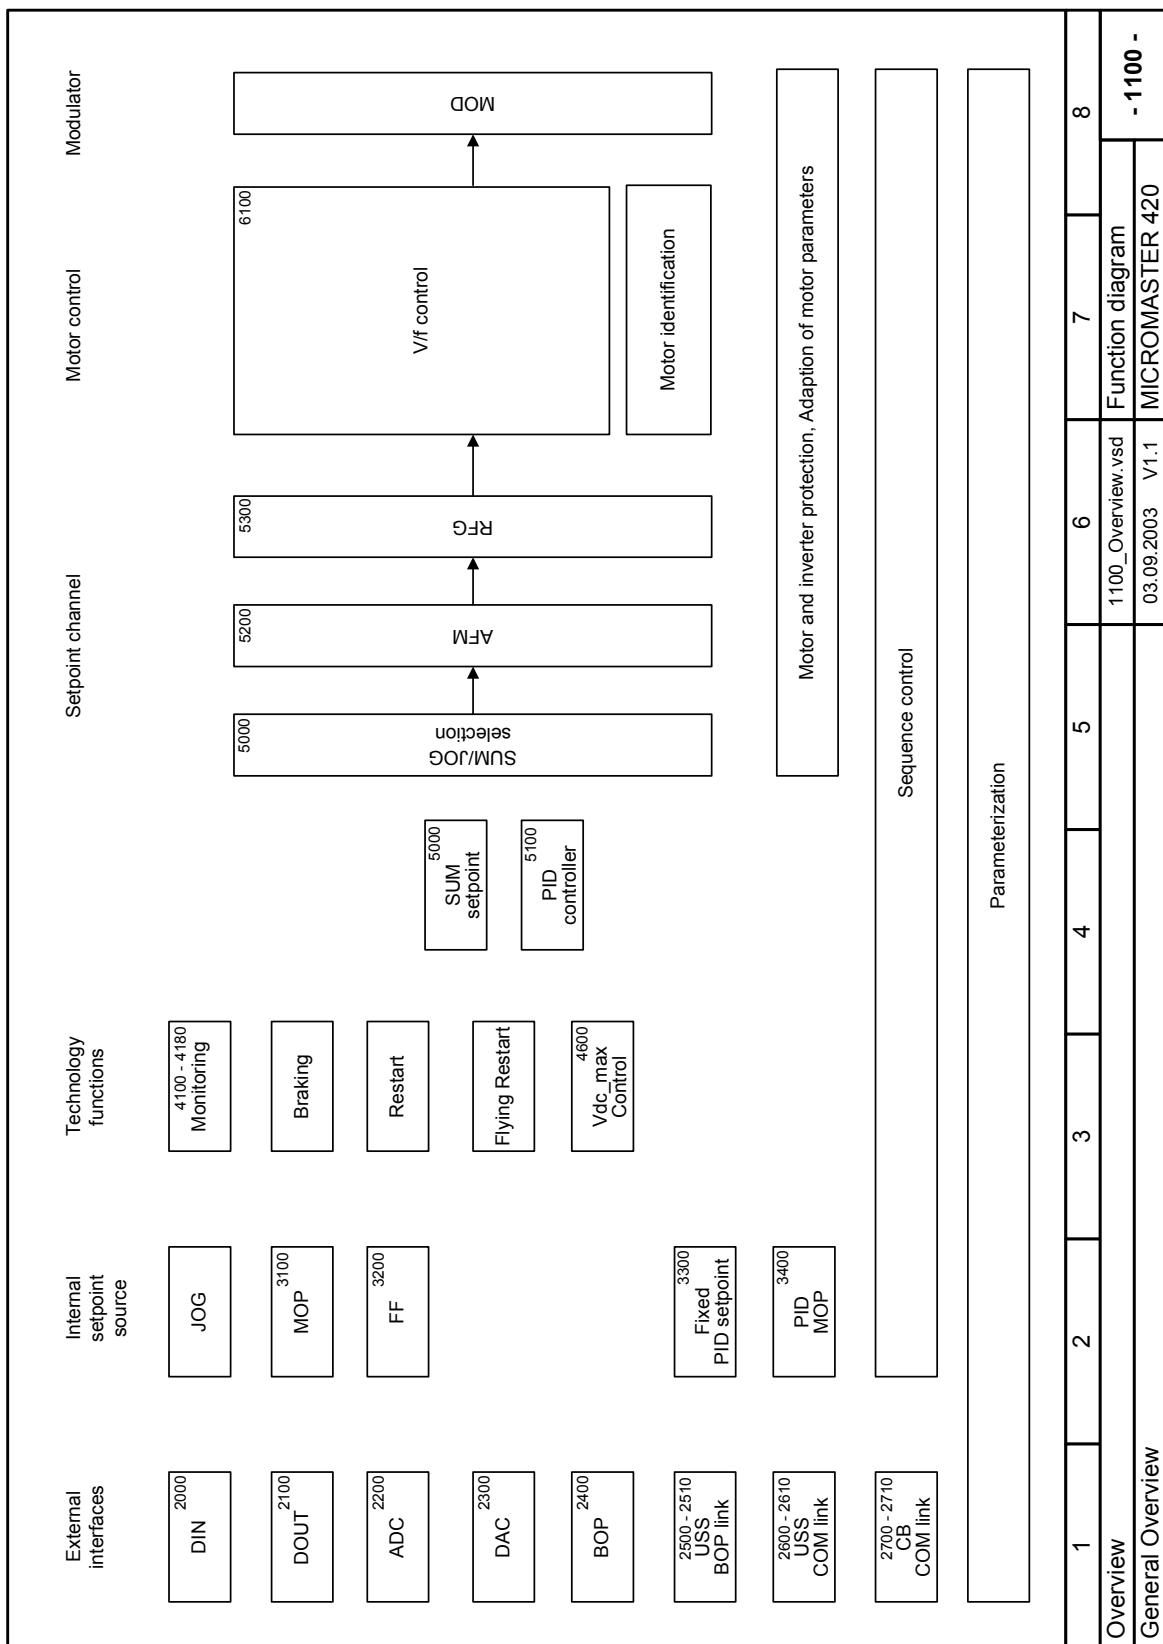


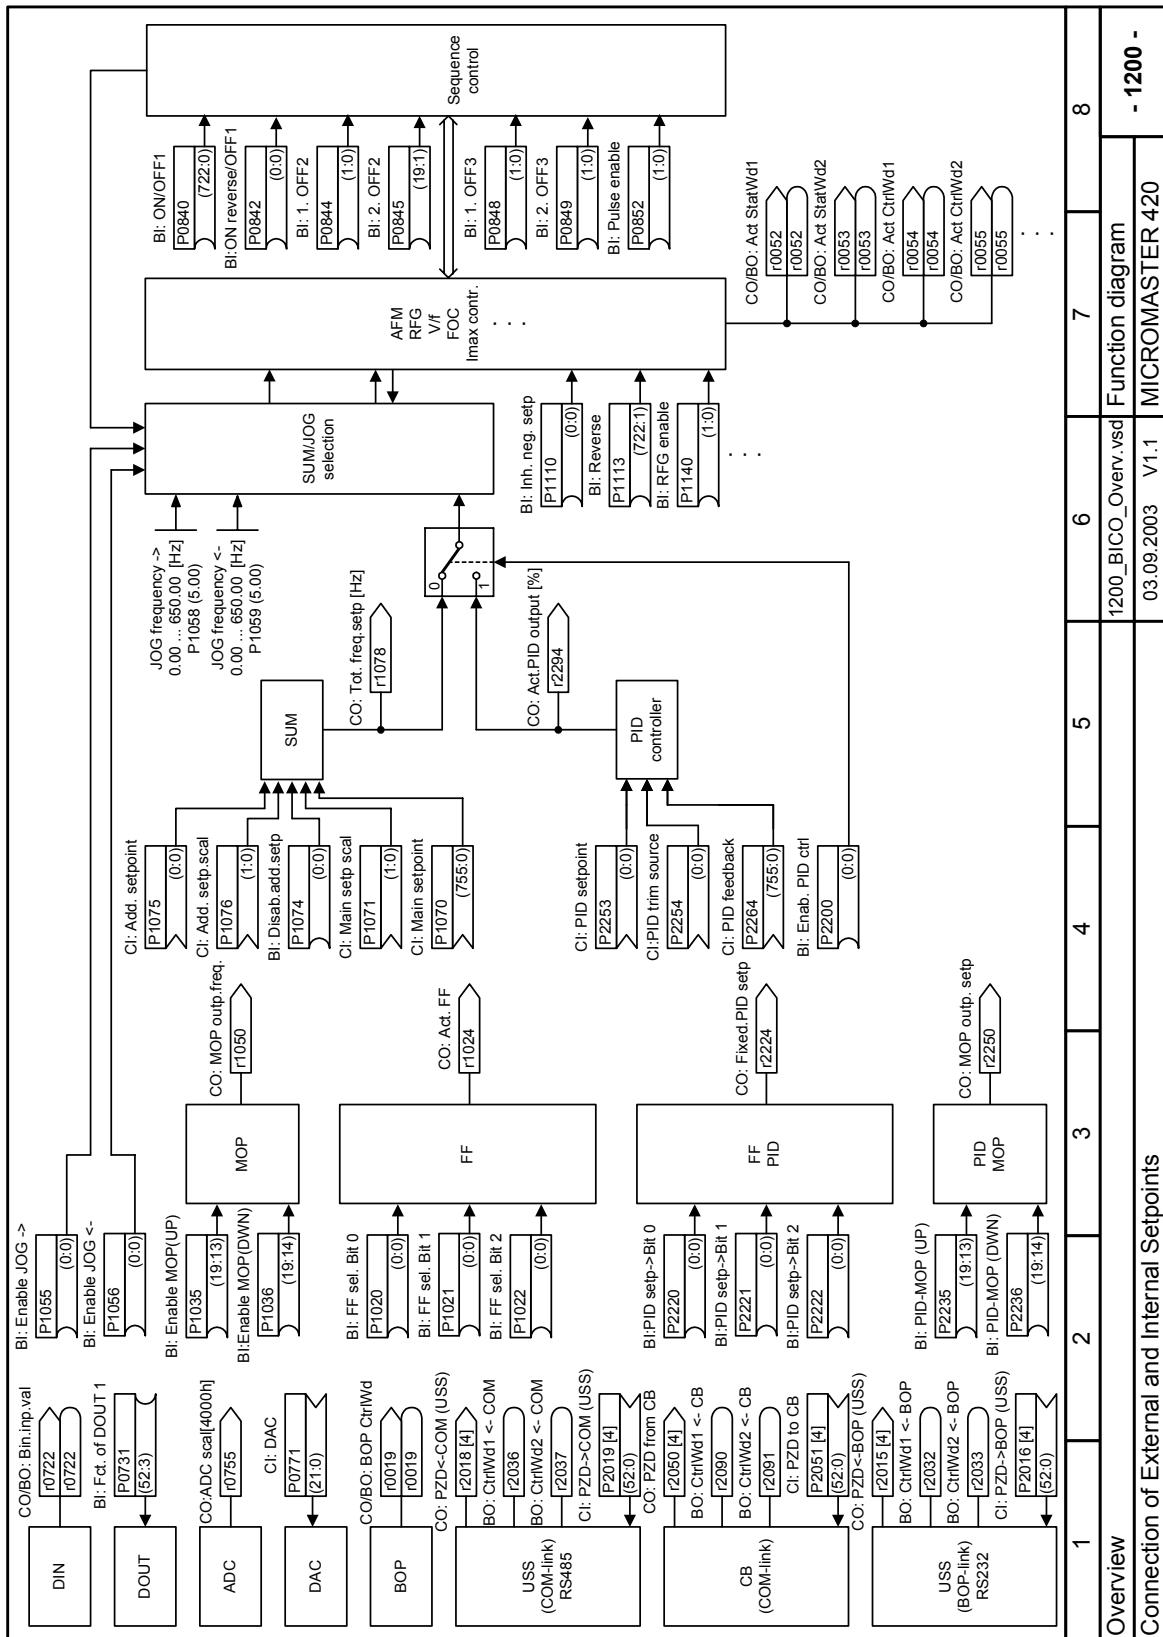

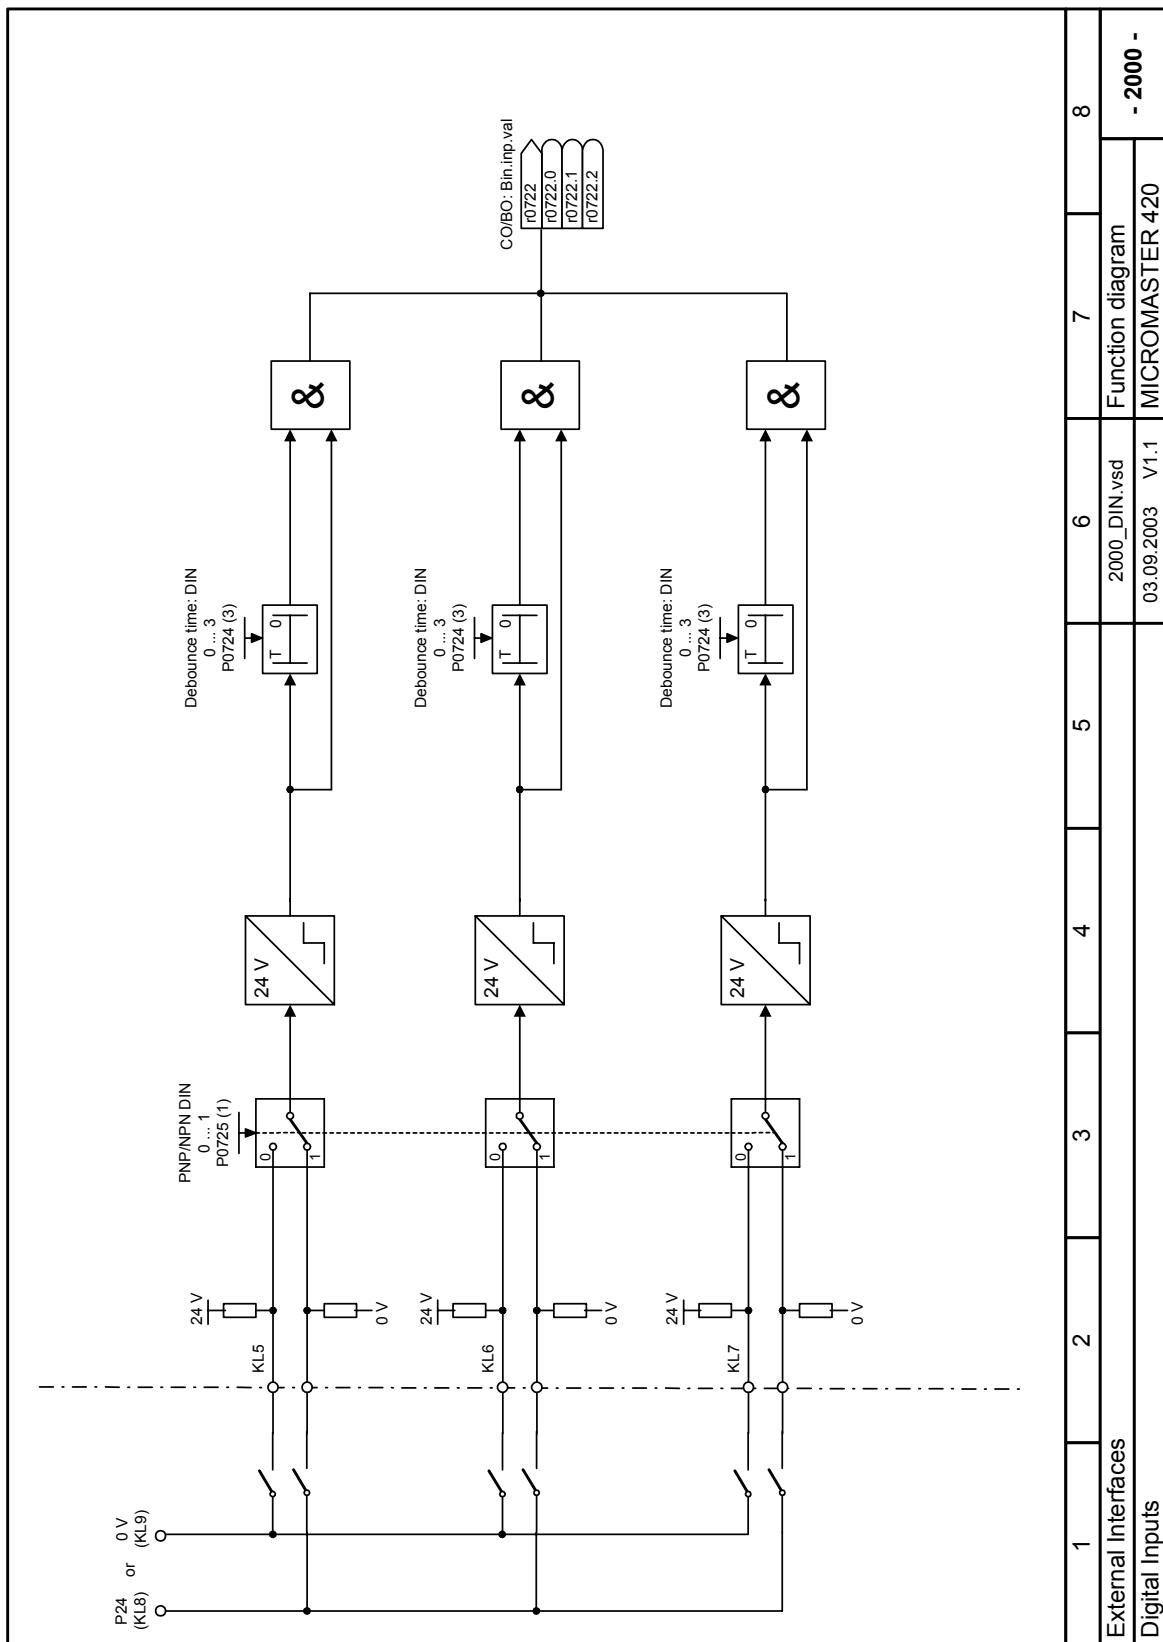


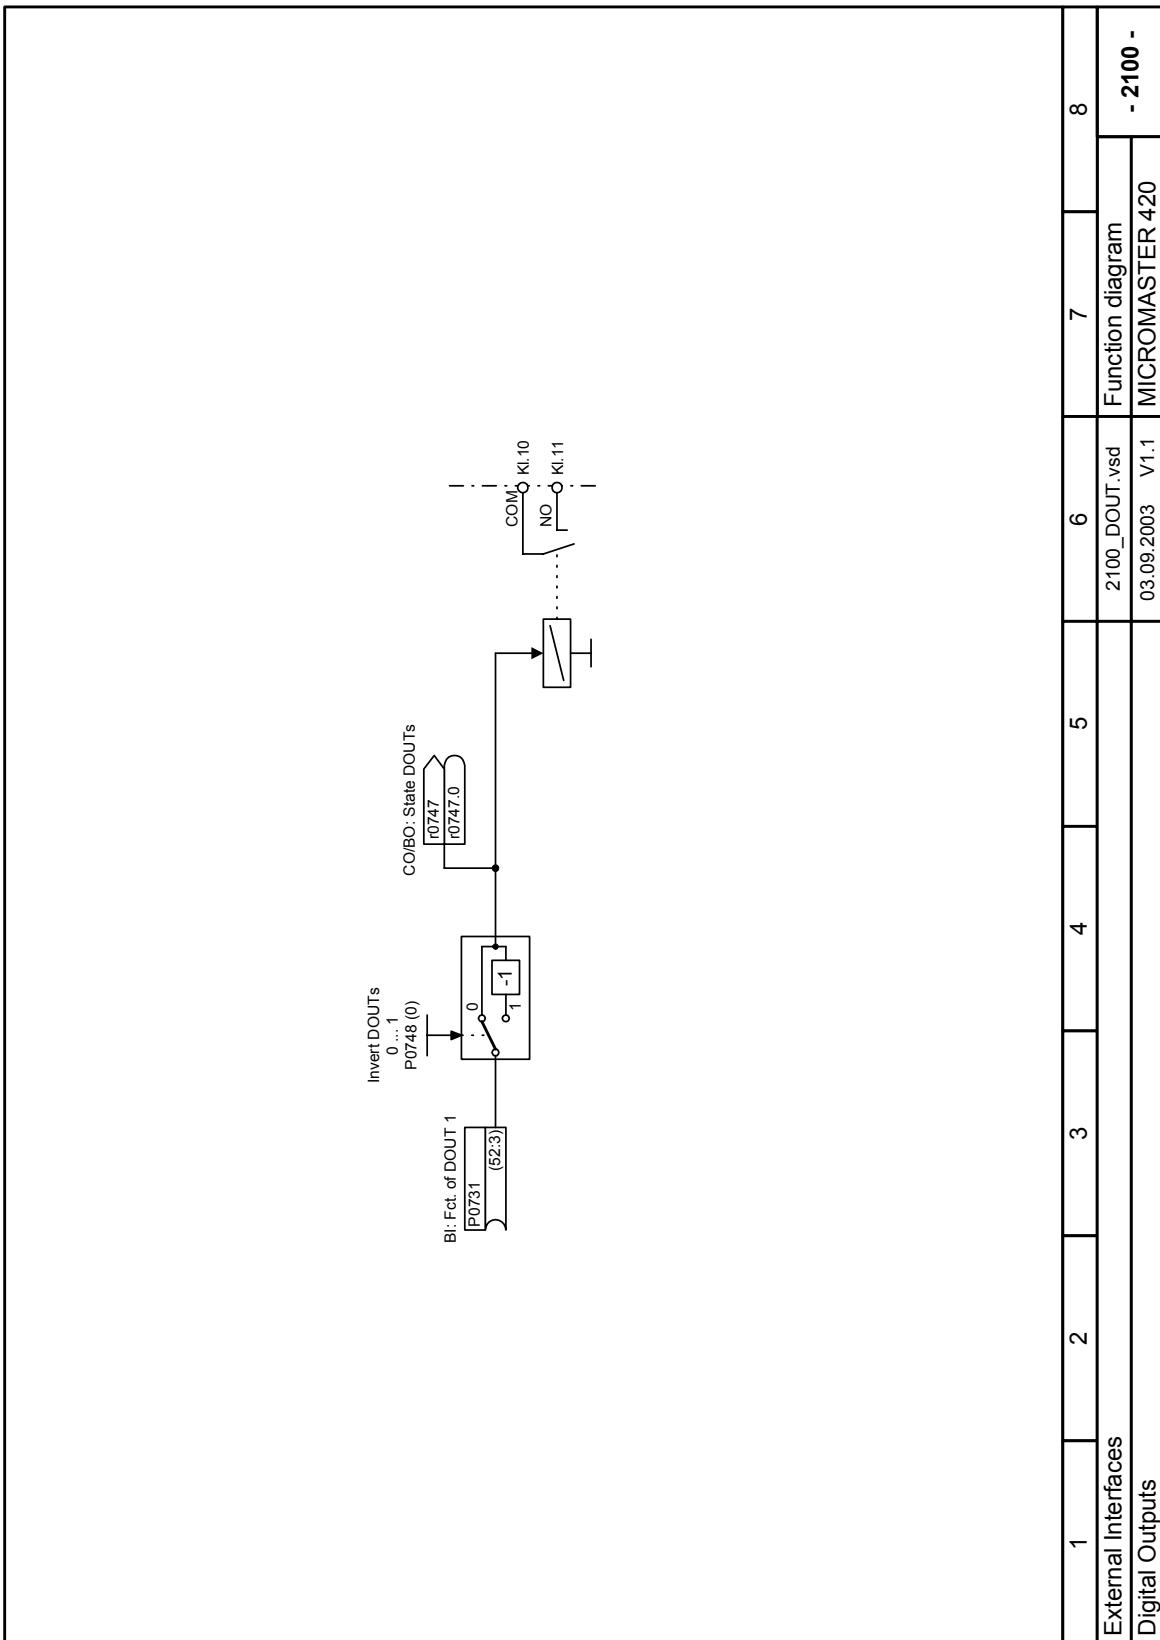


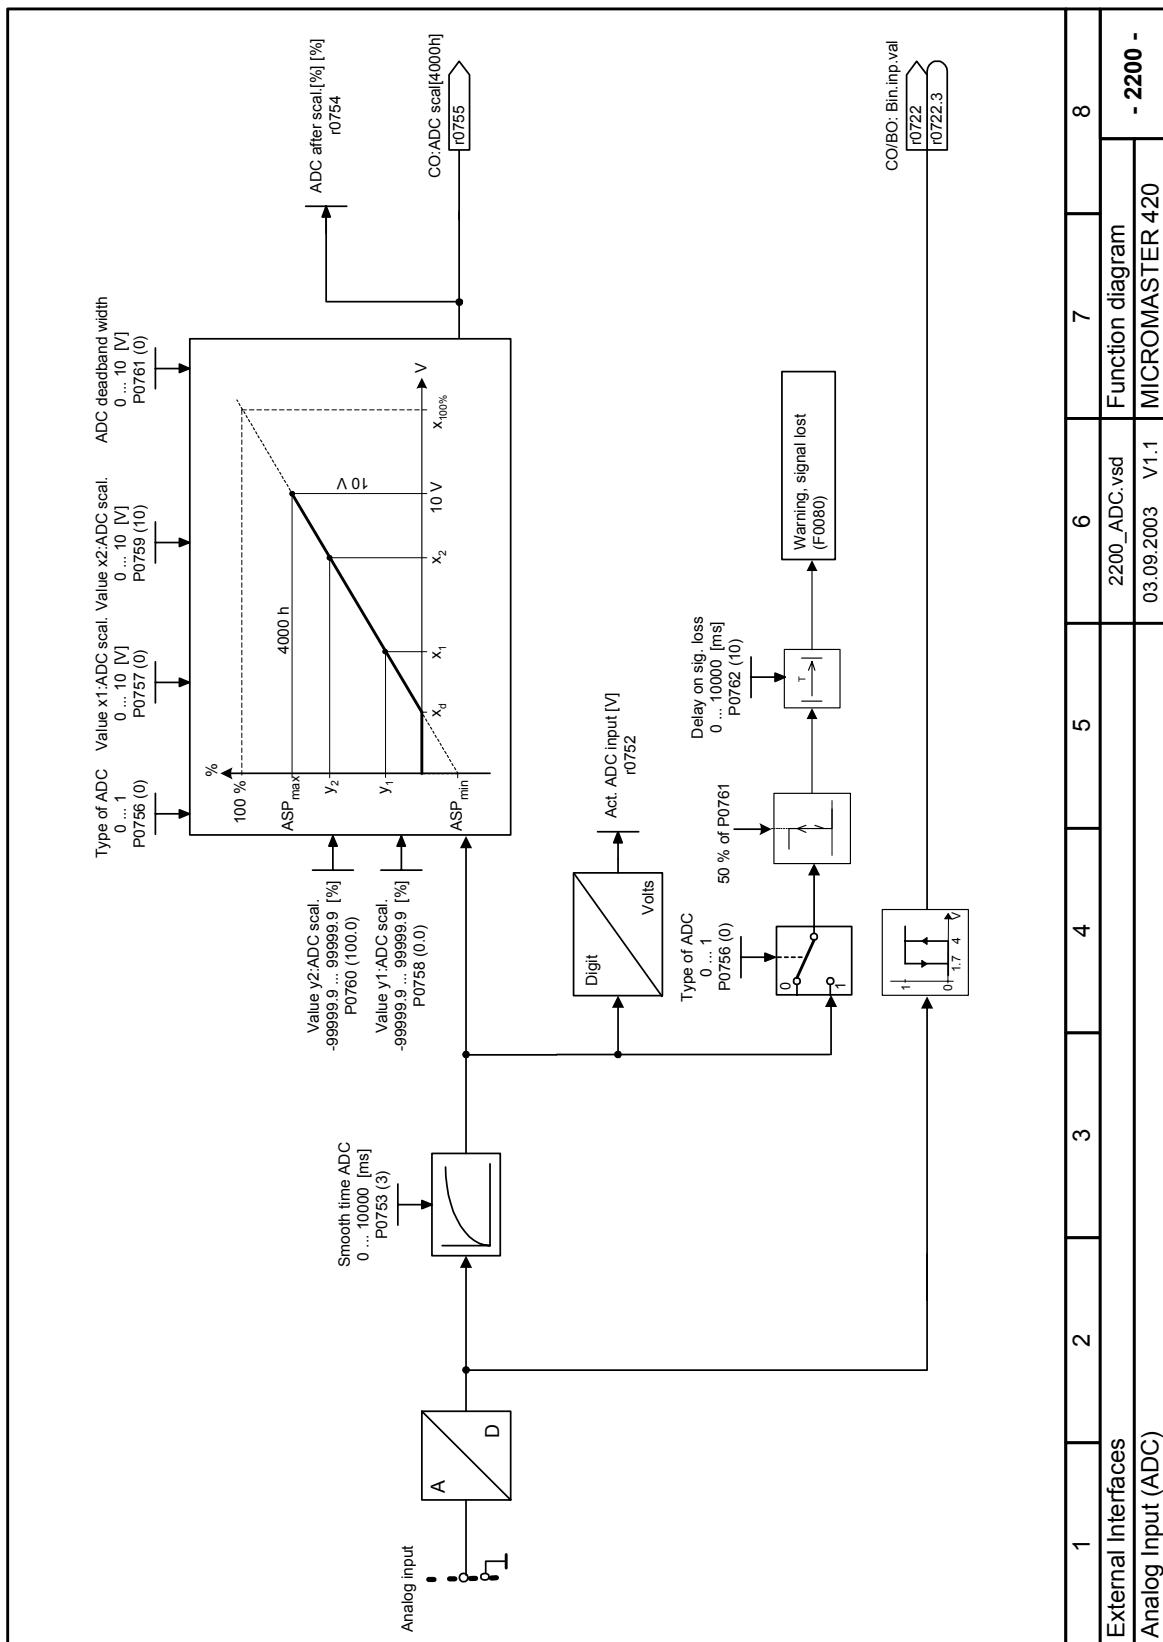


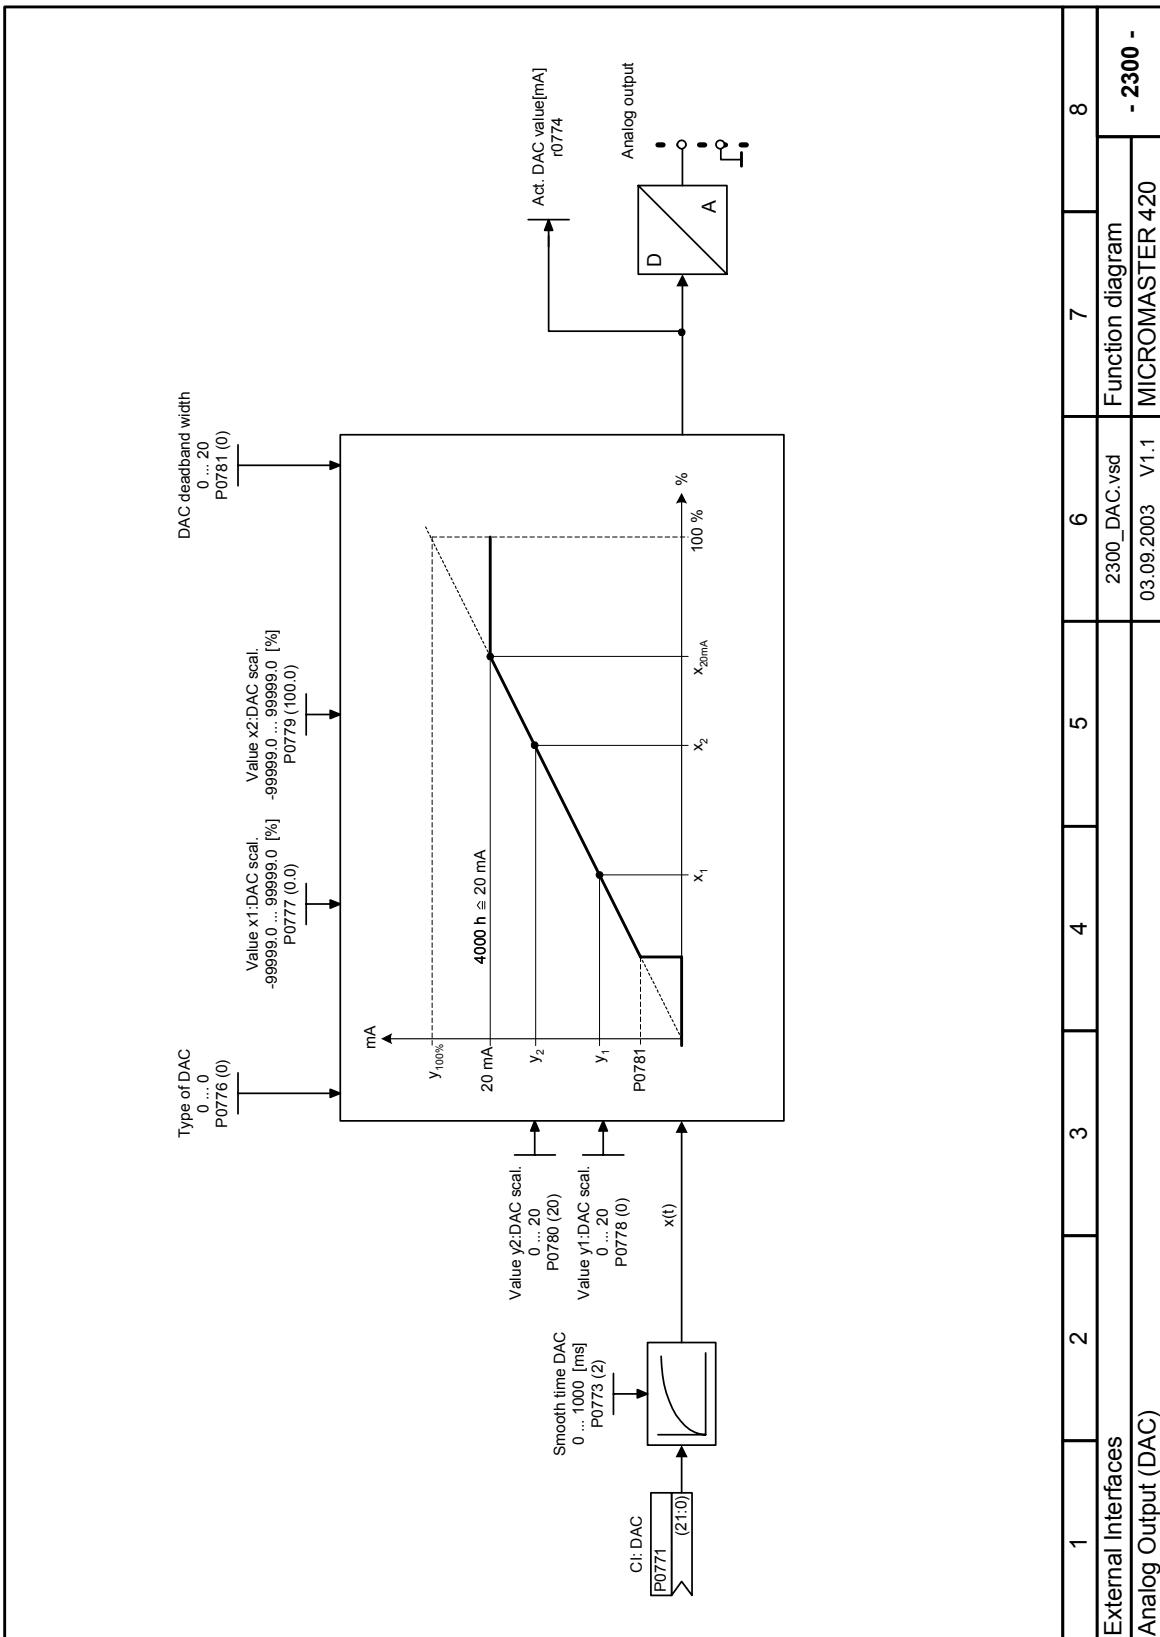



1	2	3	4	5	6	7	8
External Interfaces						2300_DAC.vsd	Function diagram
Analog Output (DAC)						03.09.2003 V1.1	-2300 - MICROMASTER 420

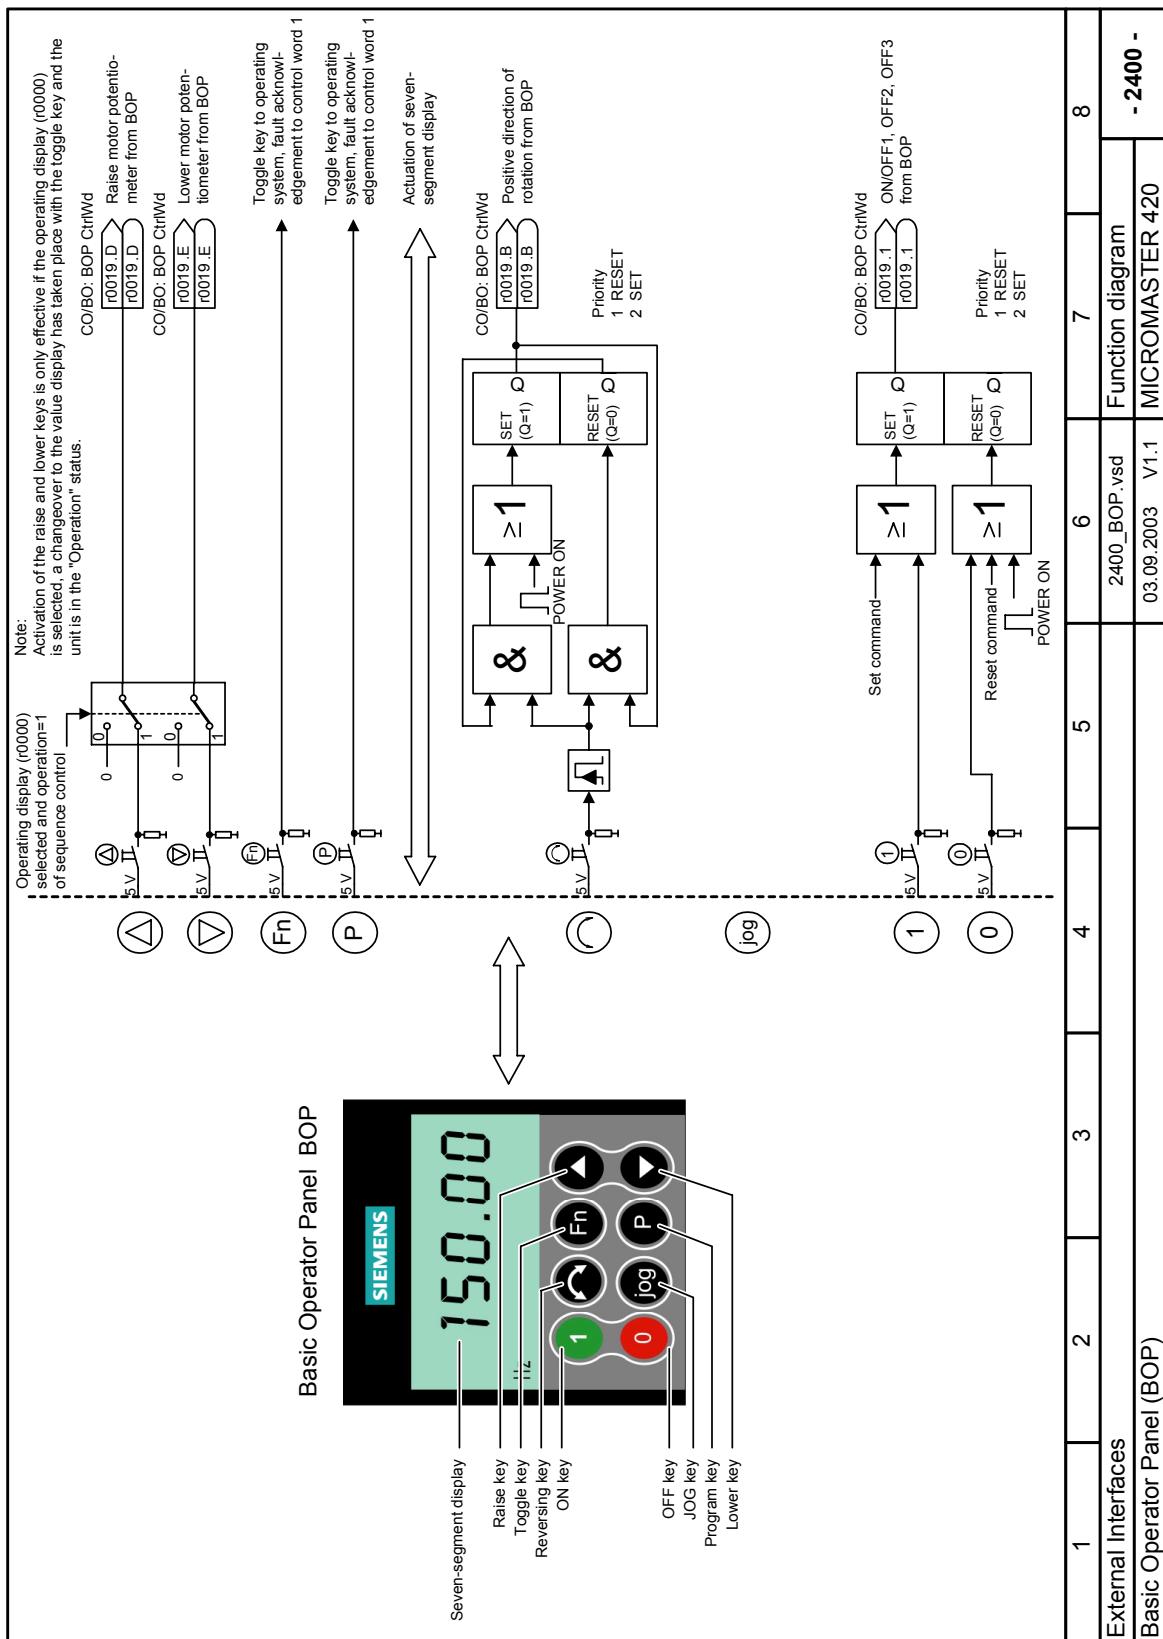


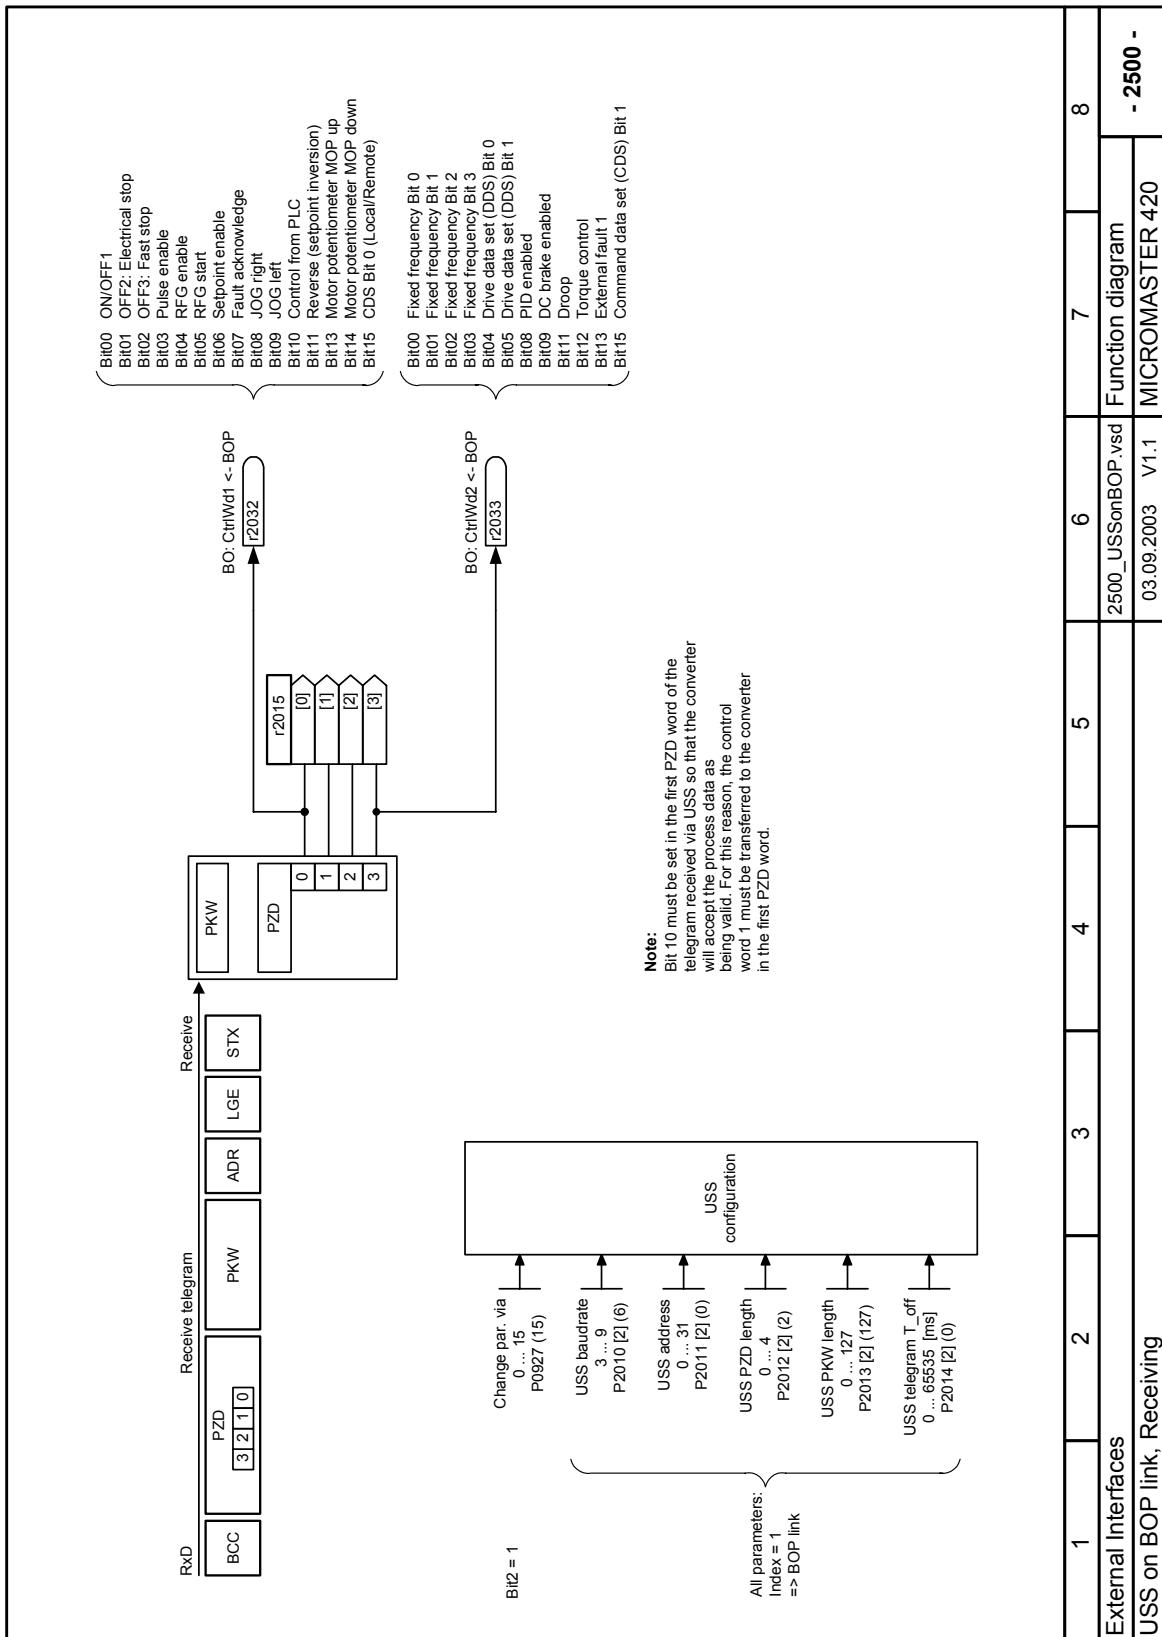


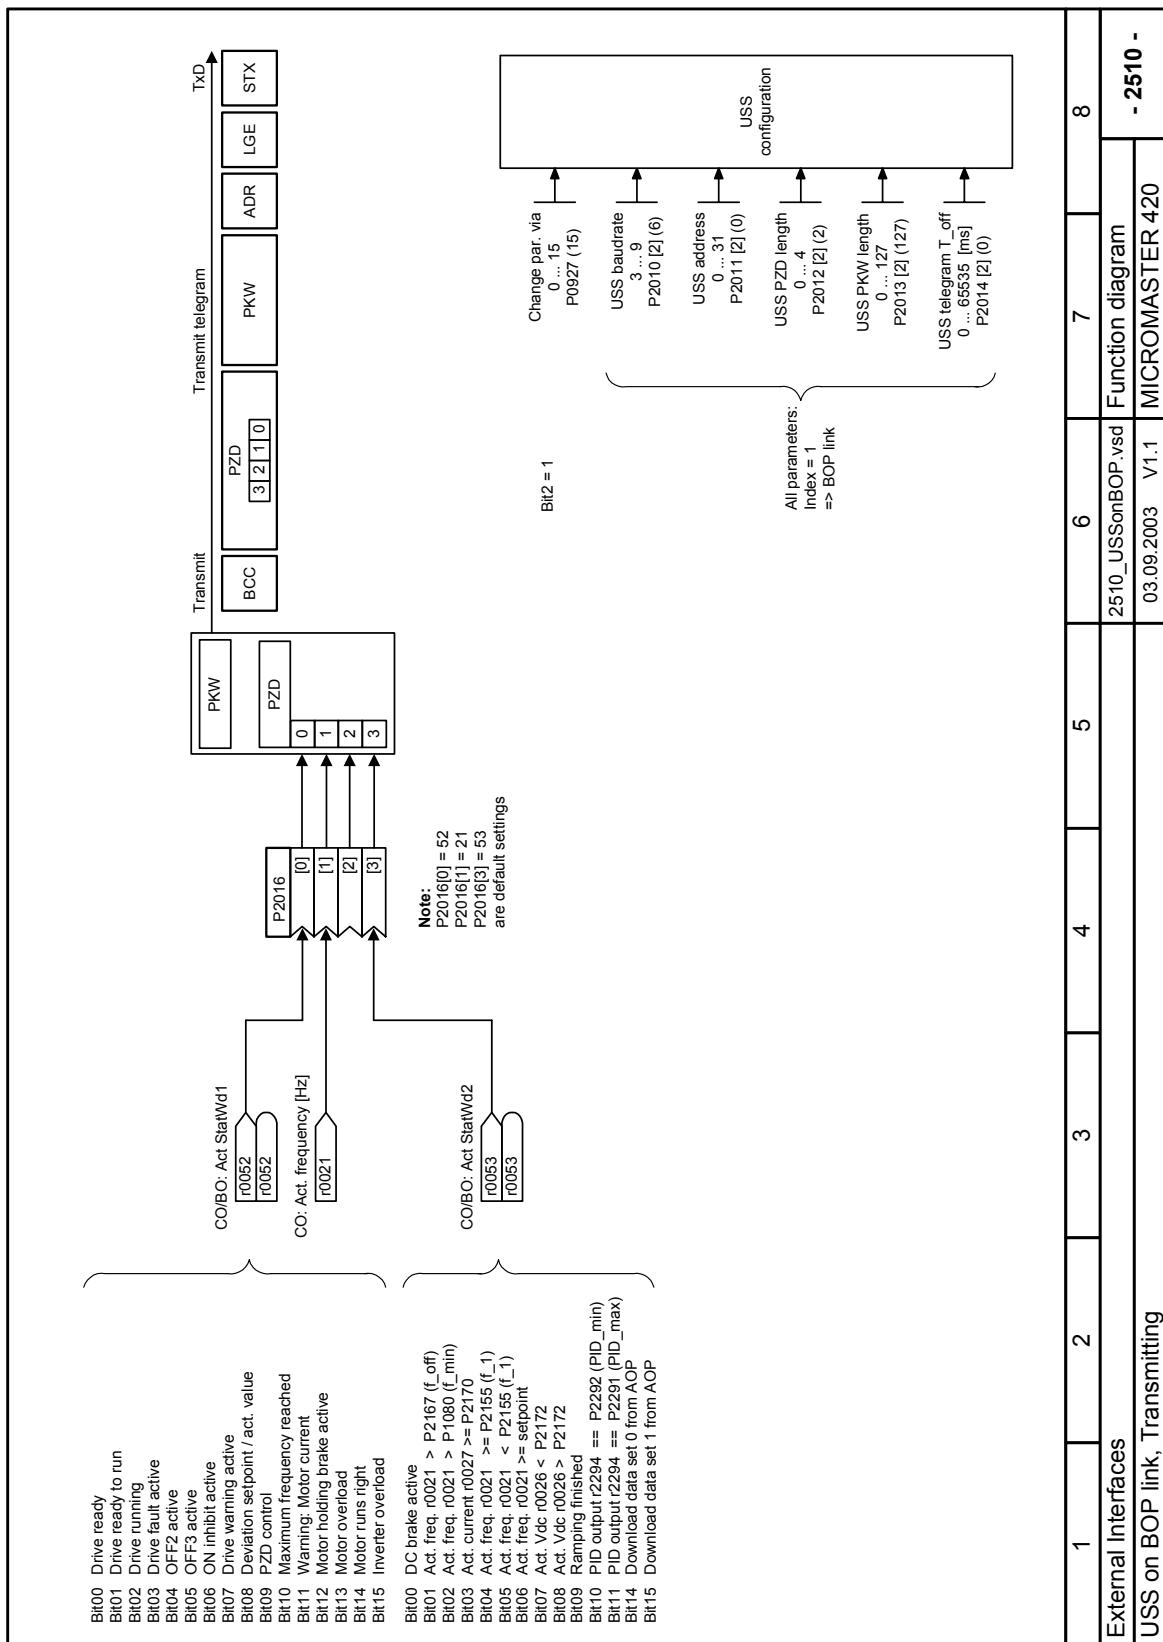


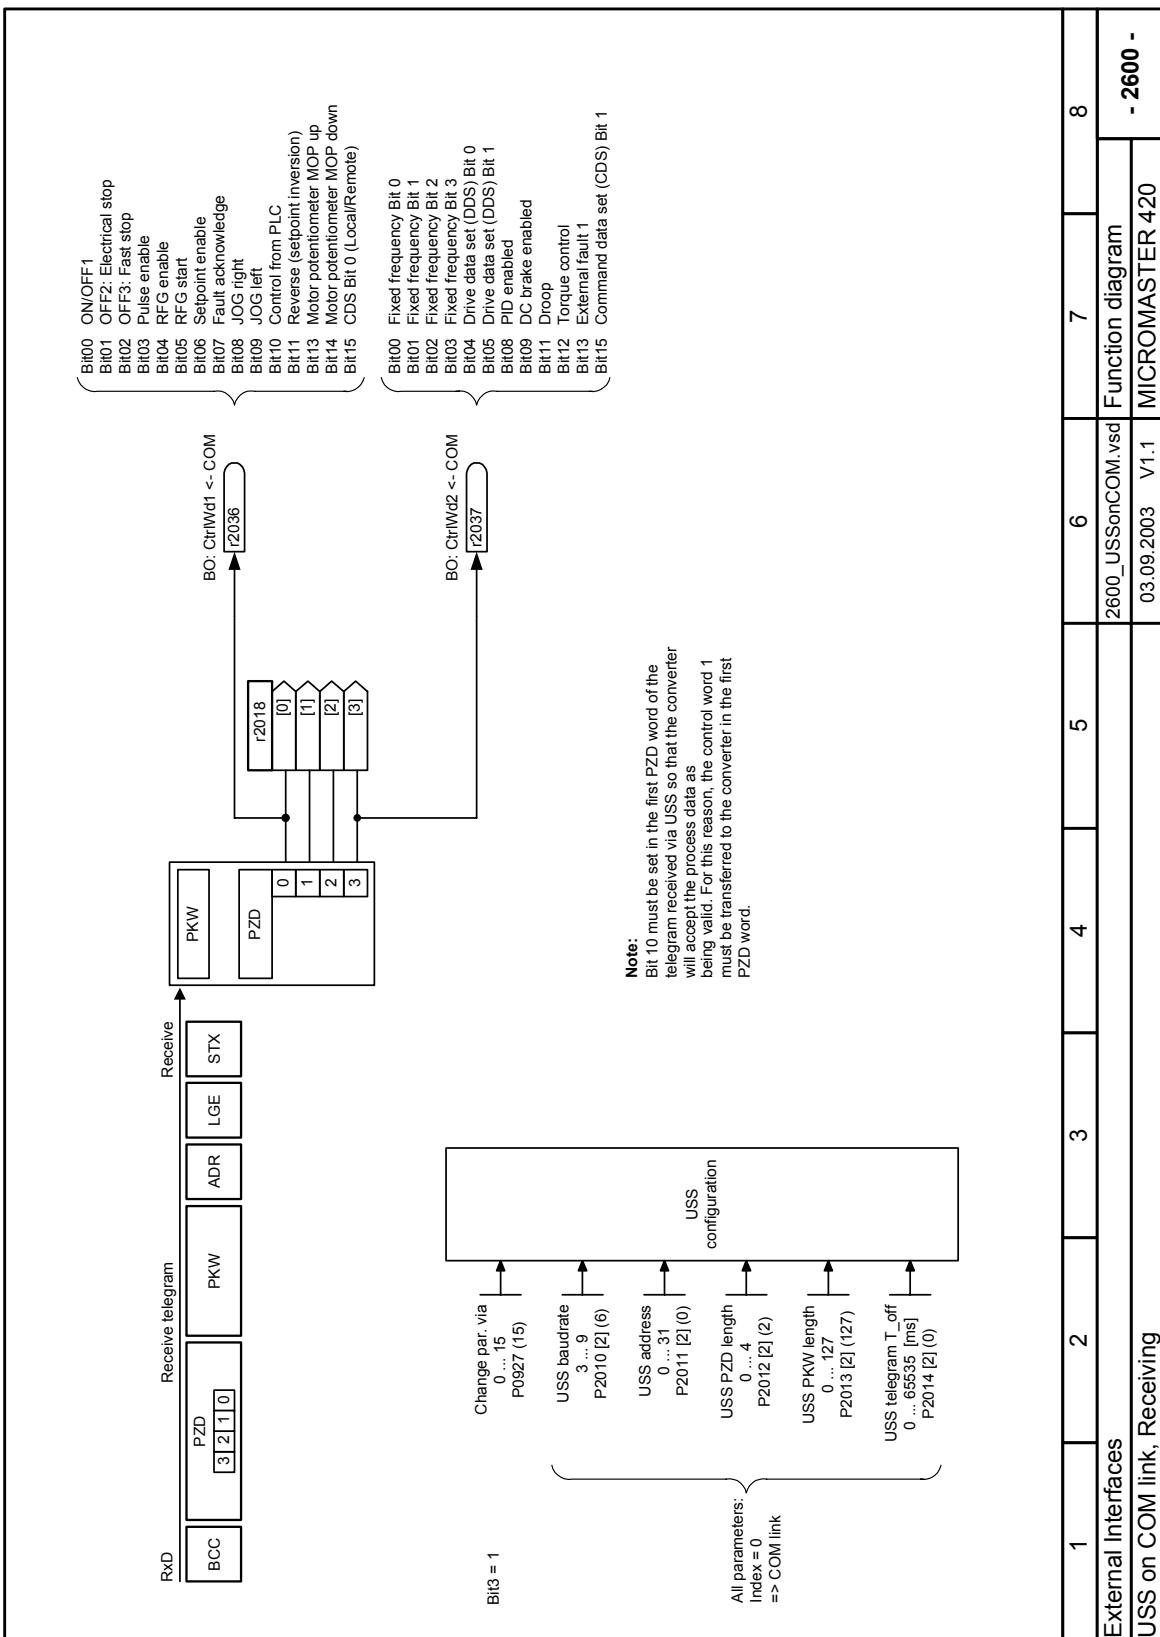


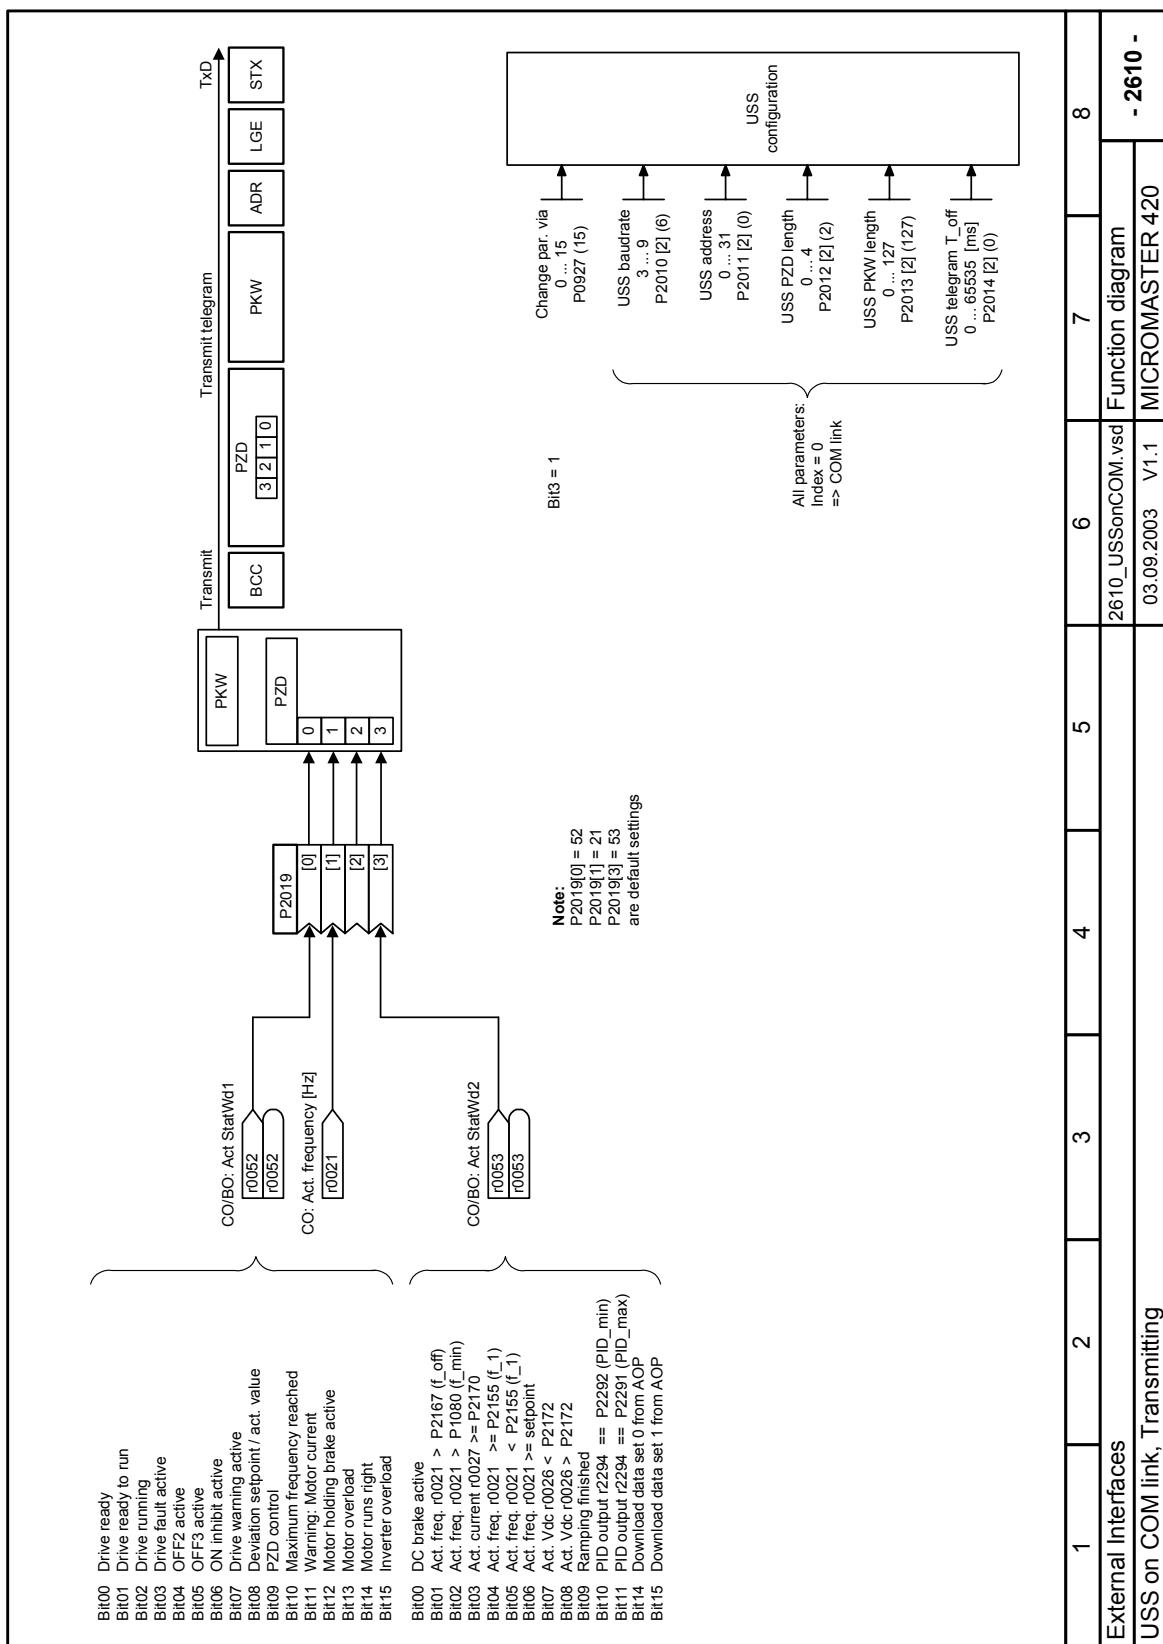


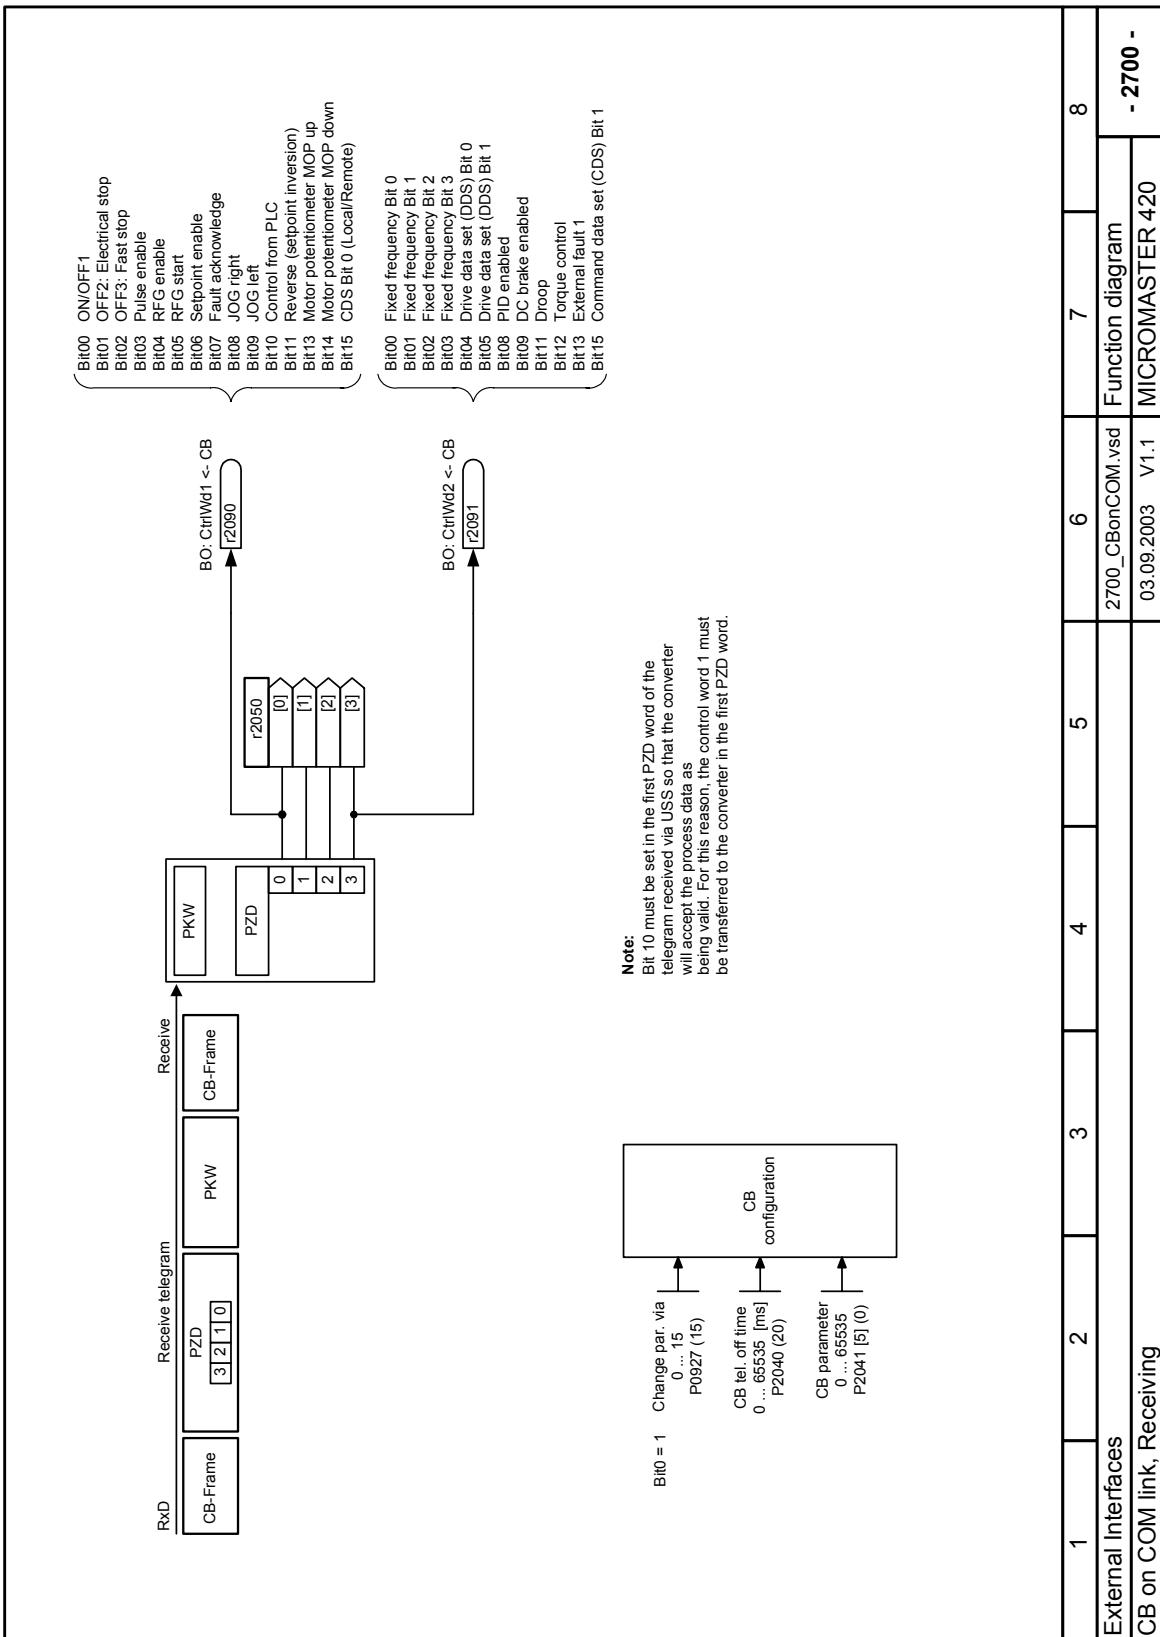


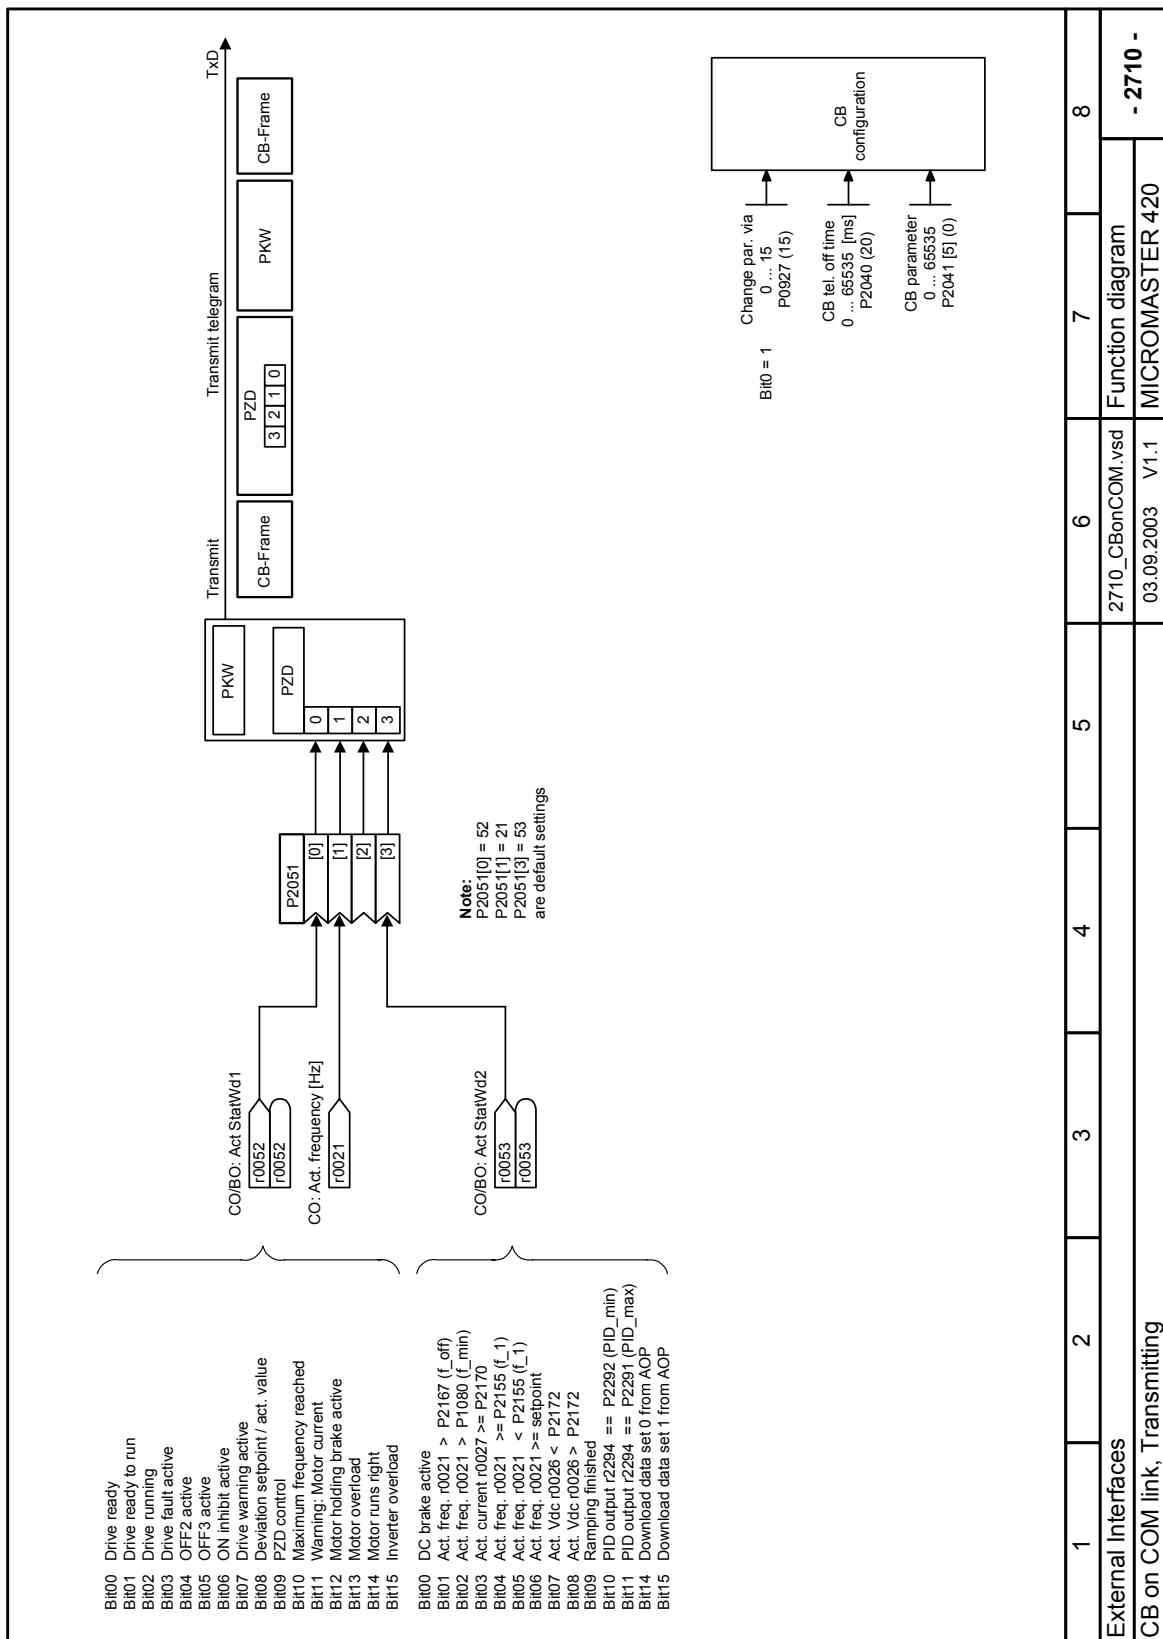


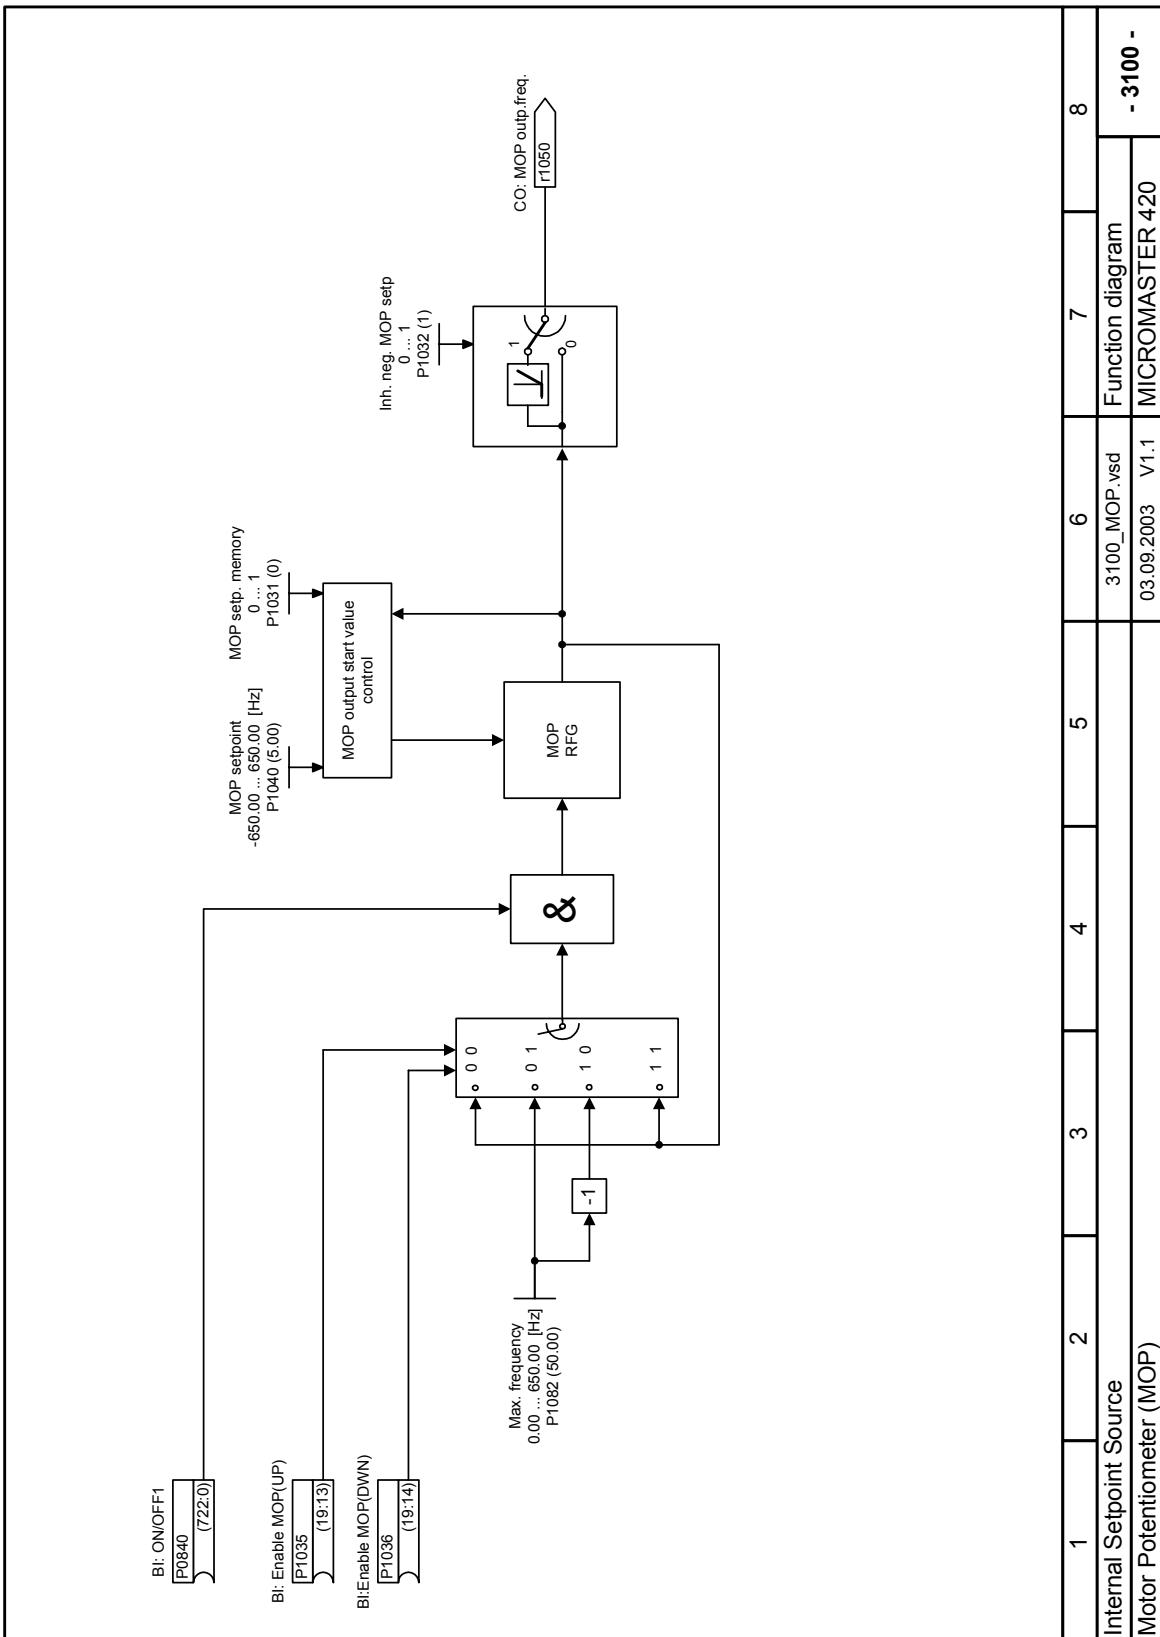


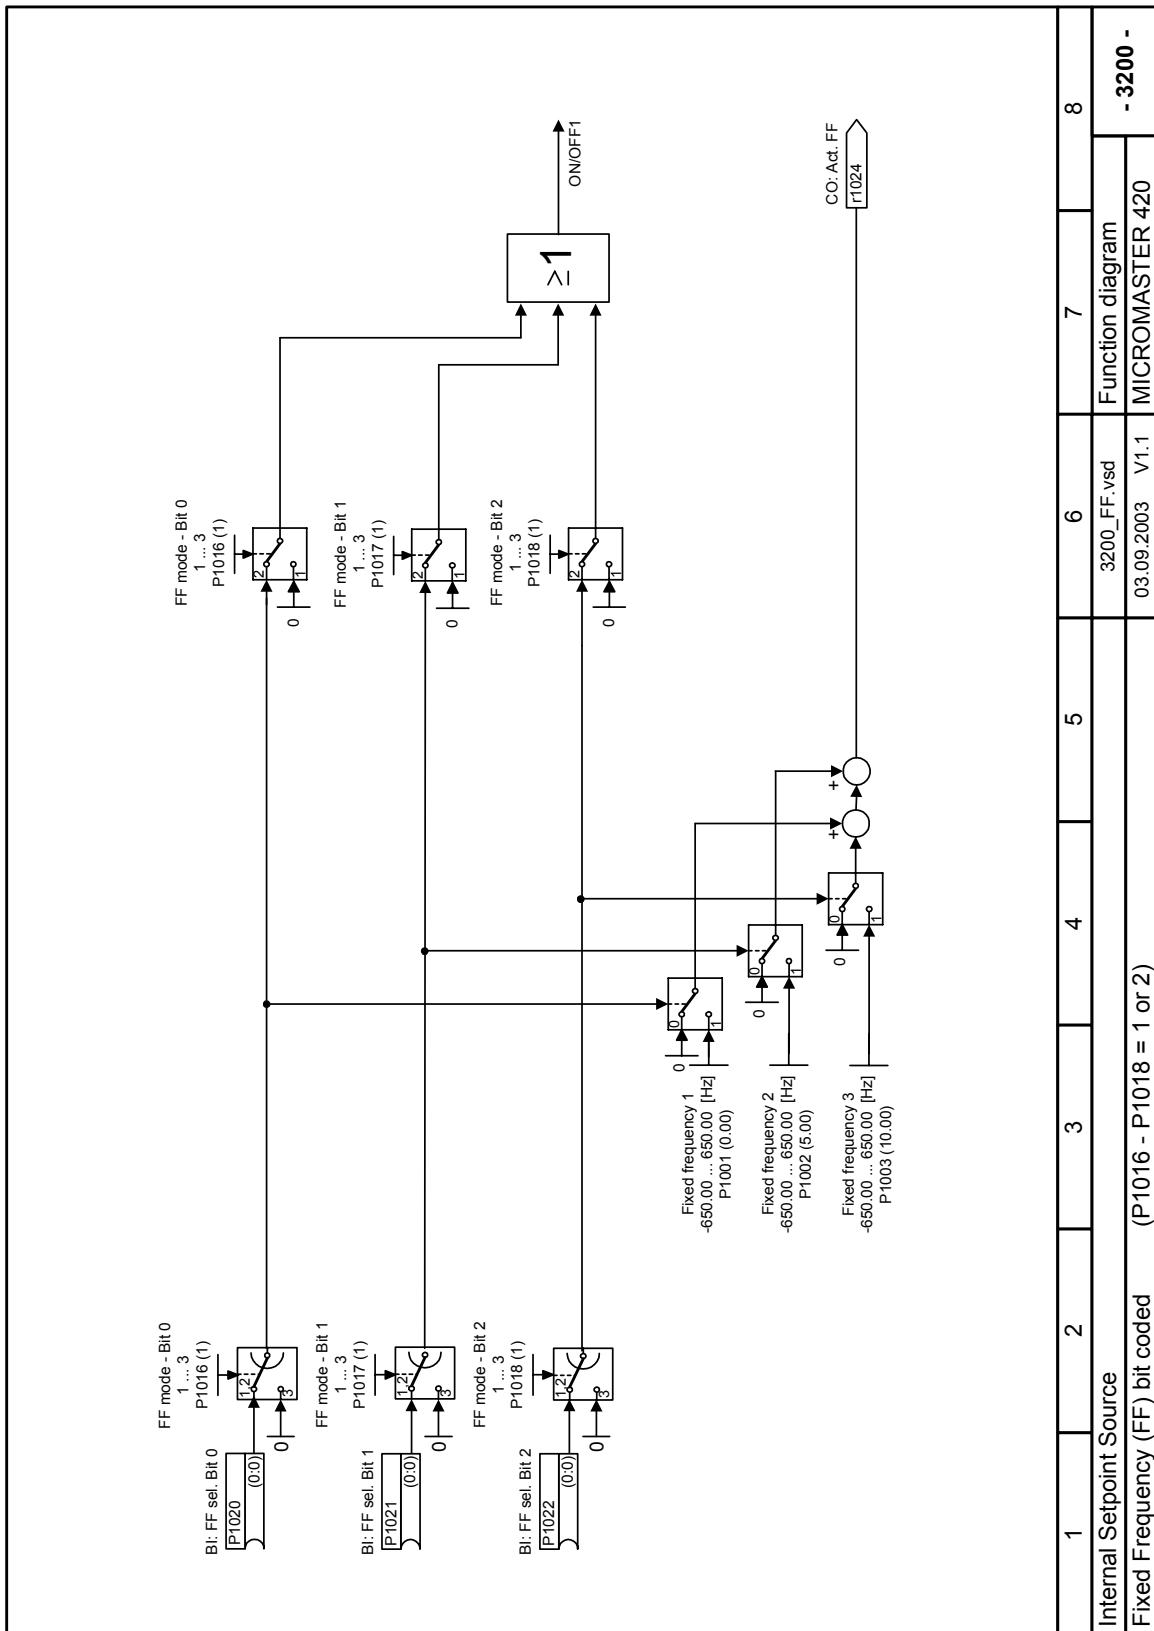


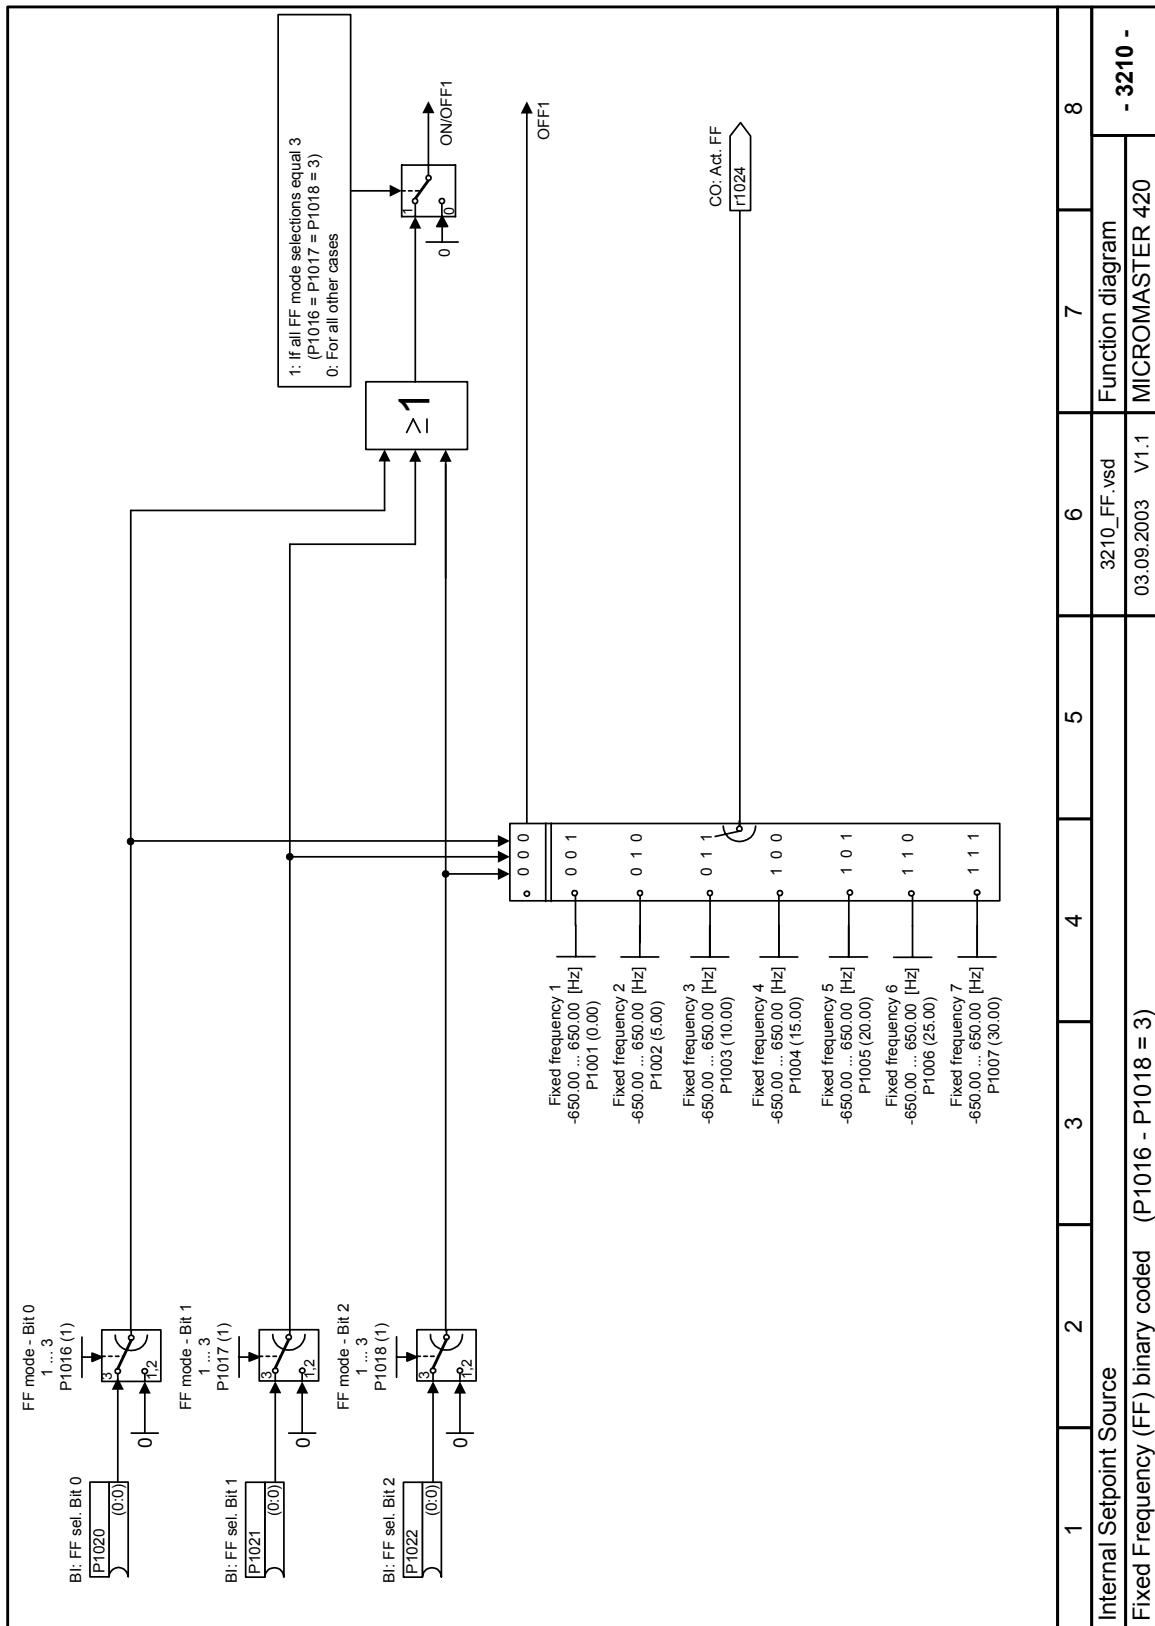


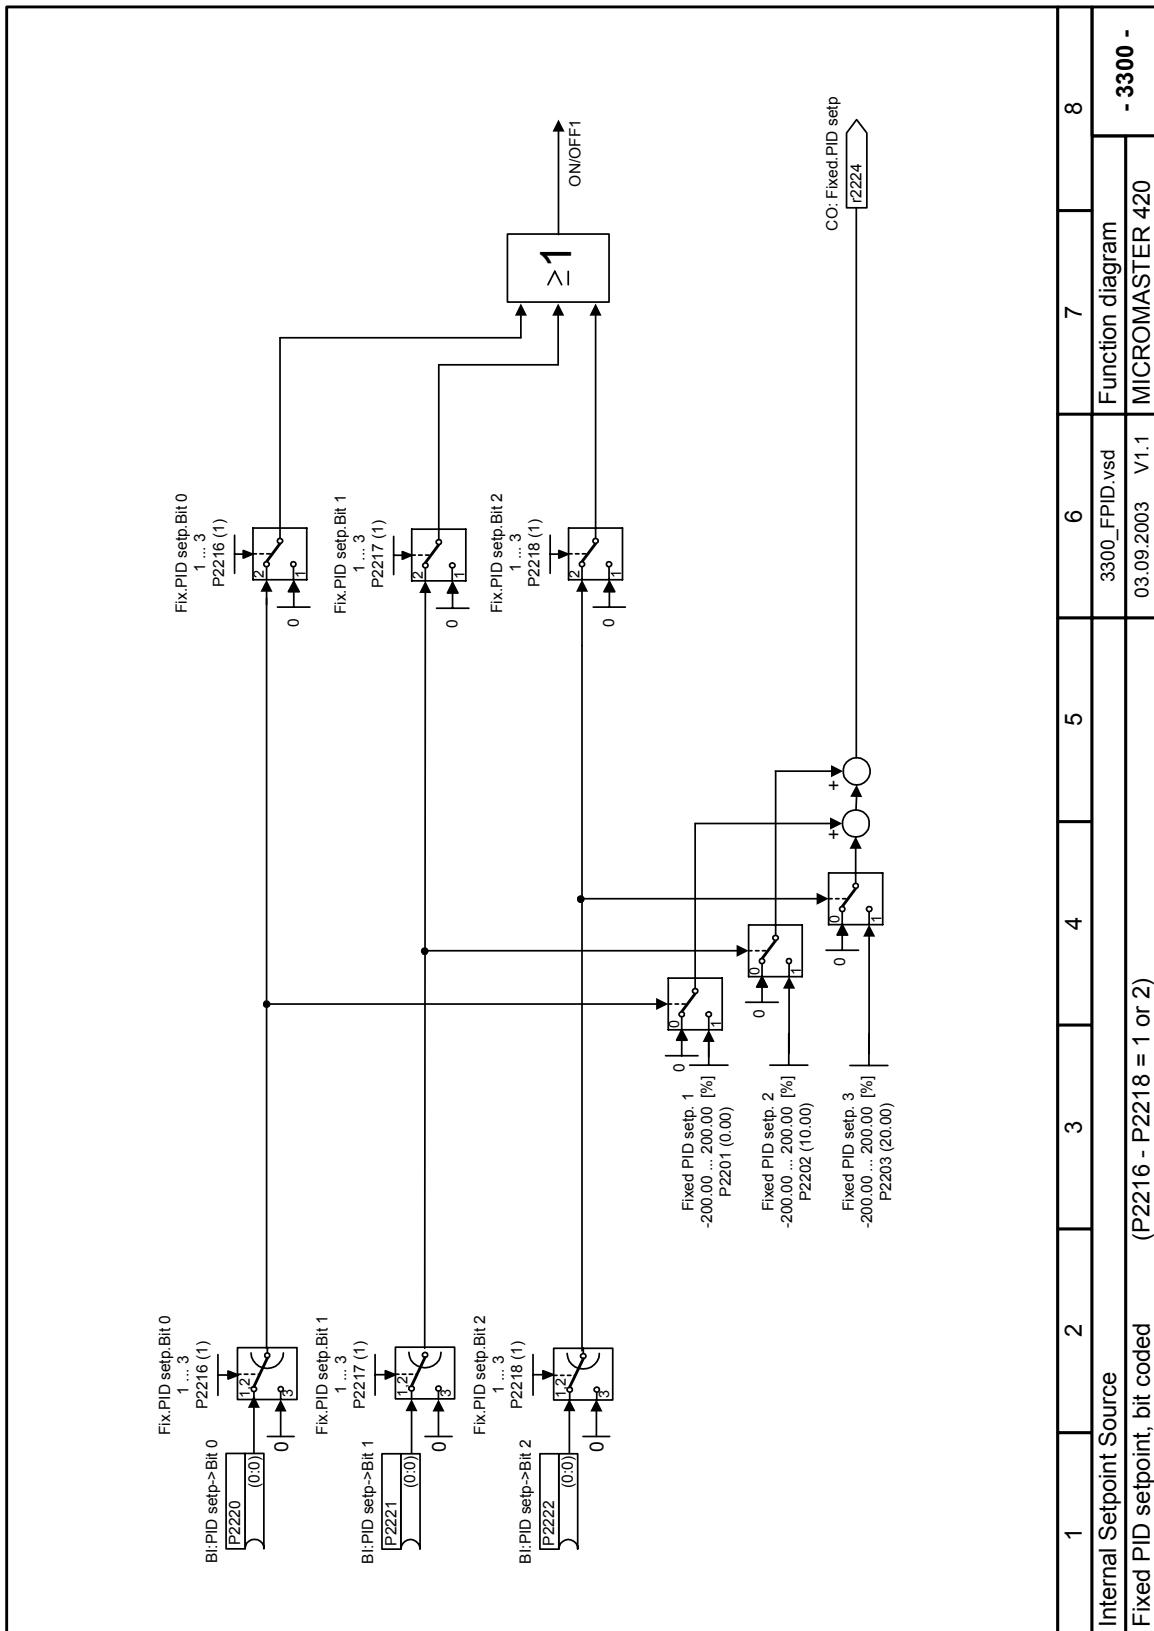


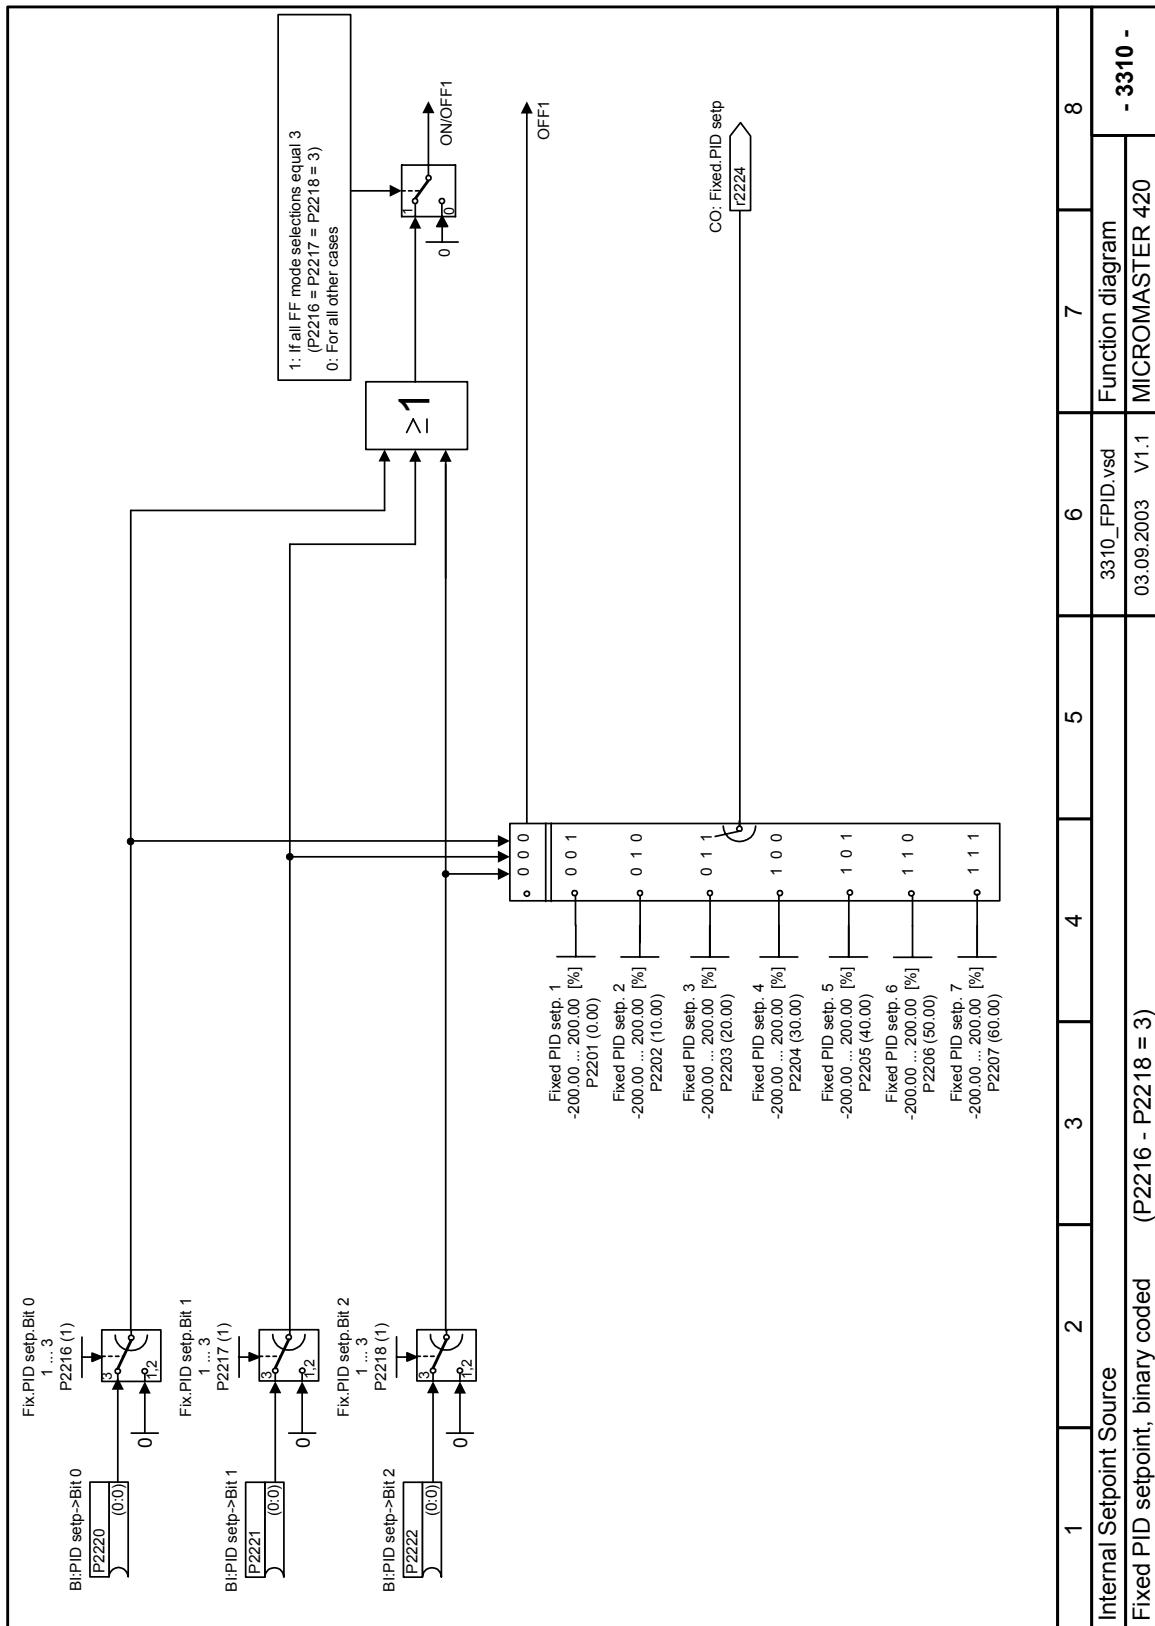


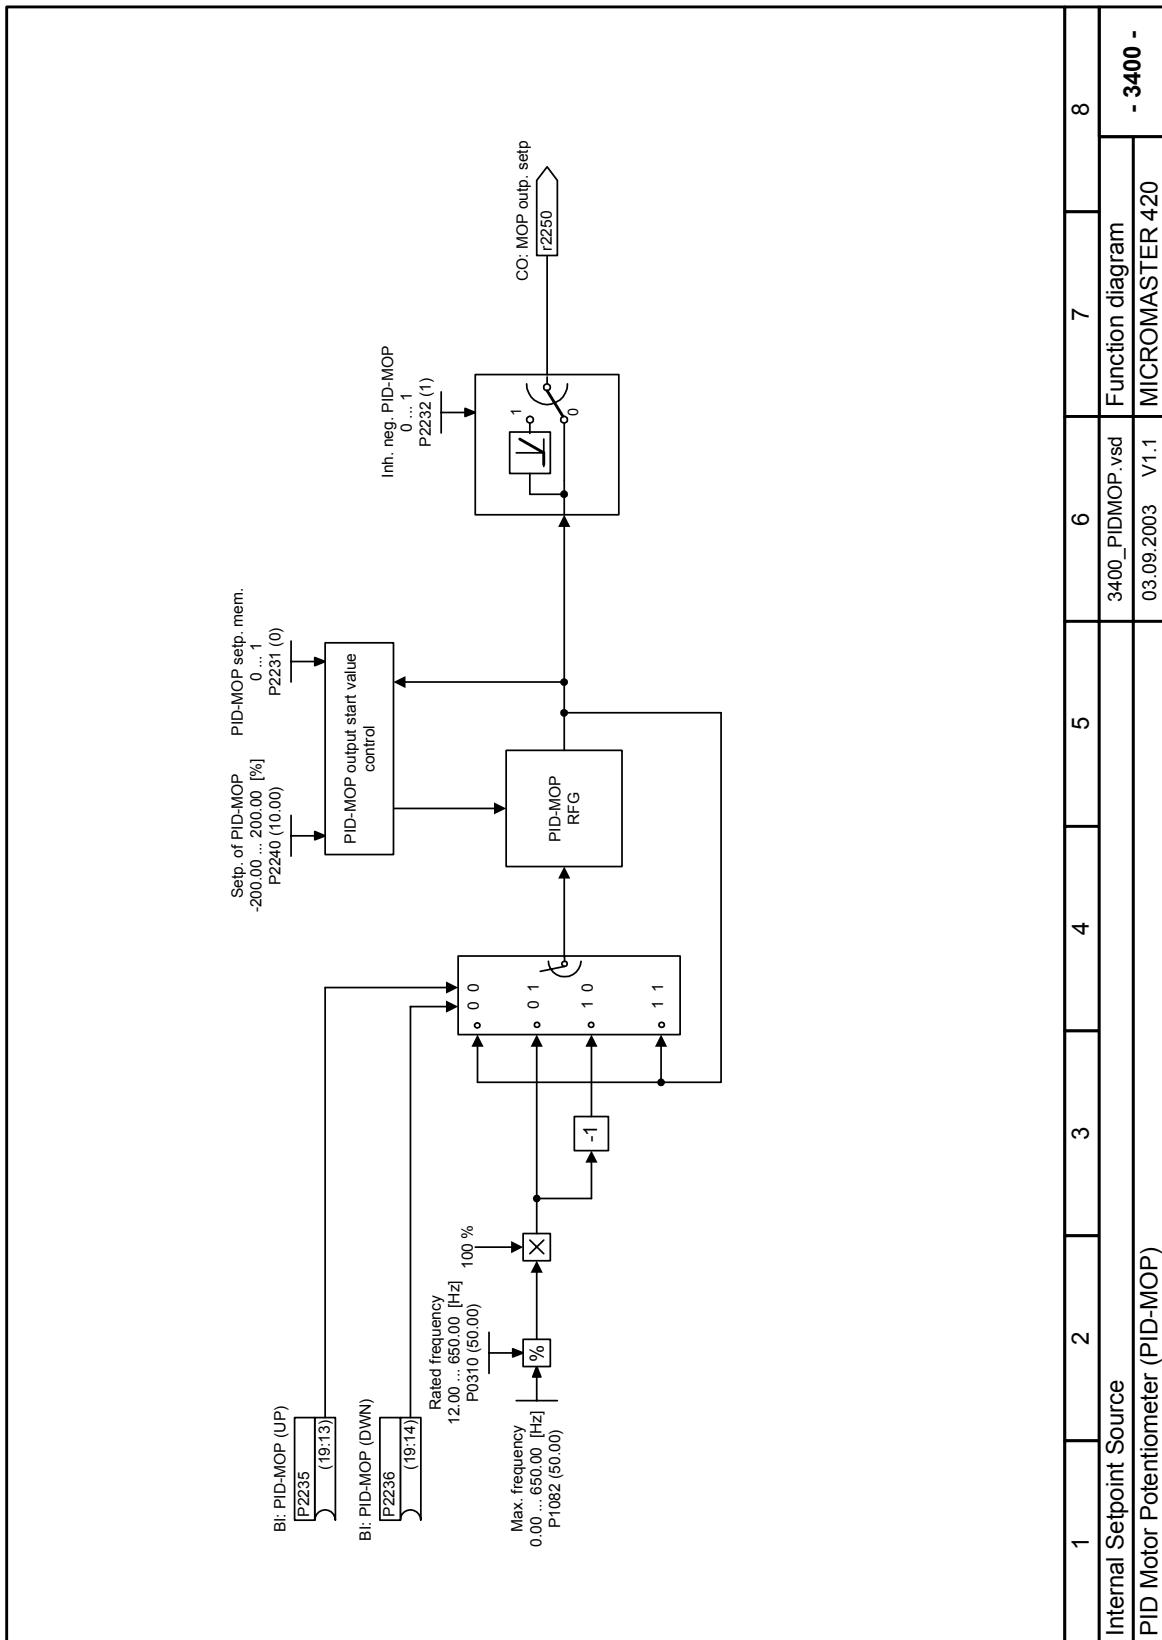


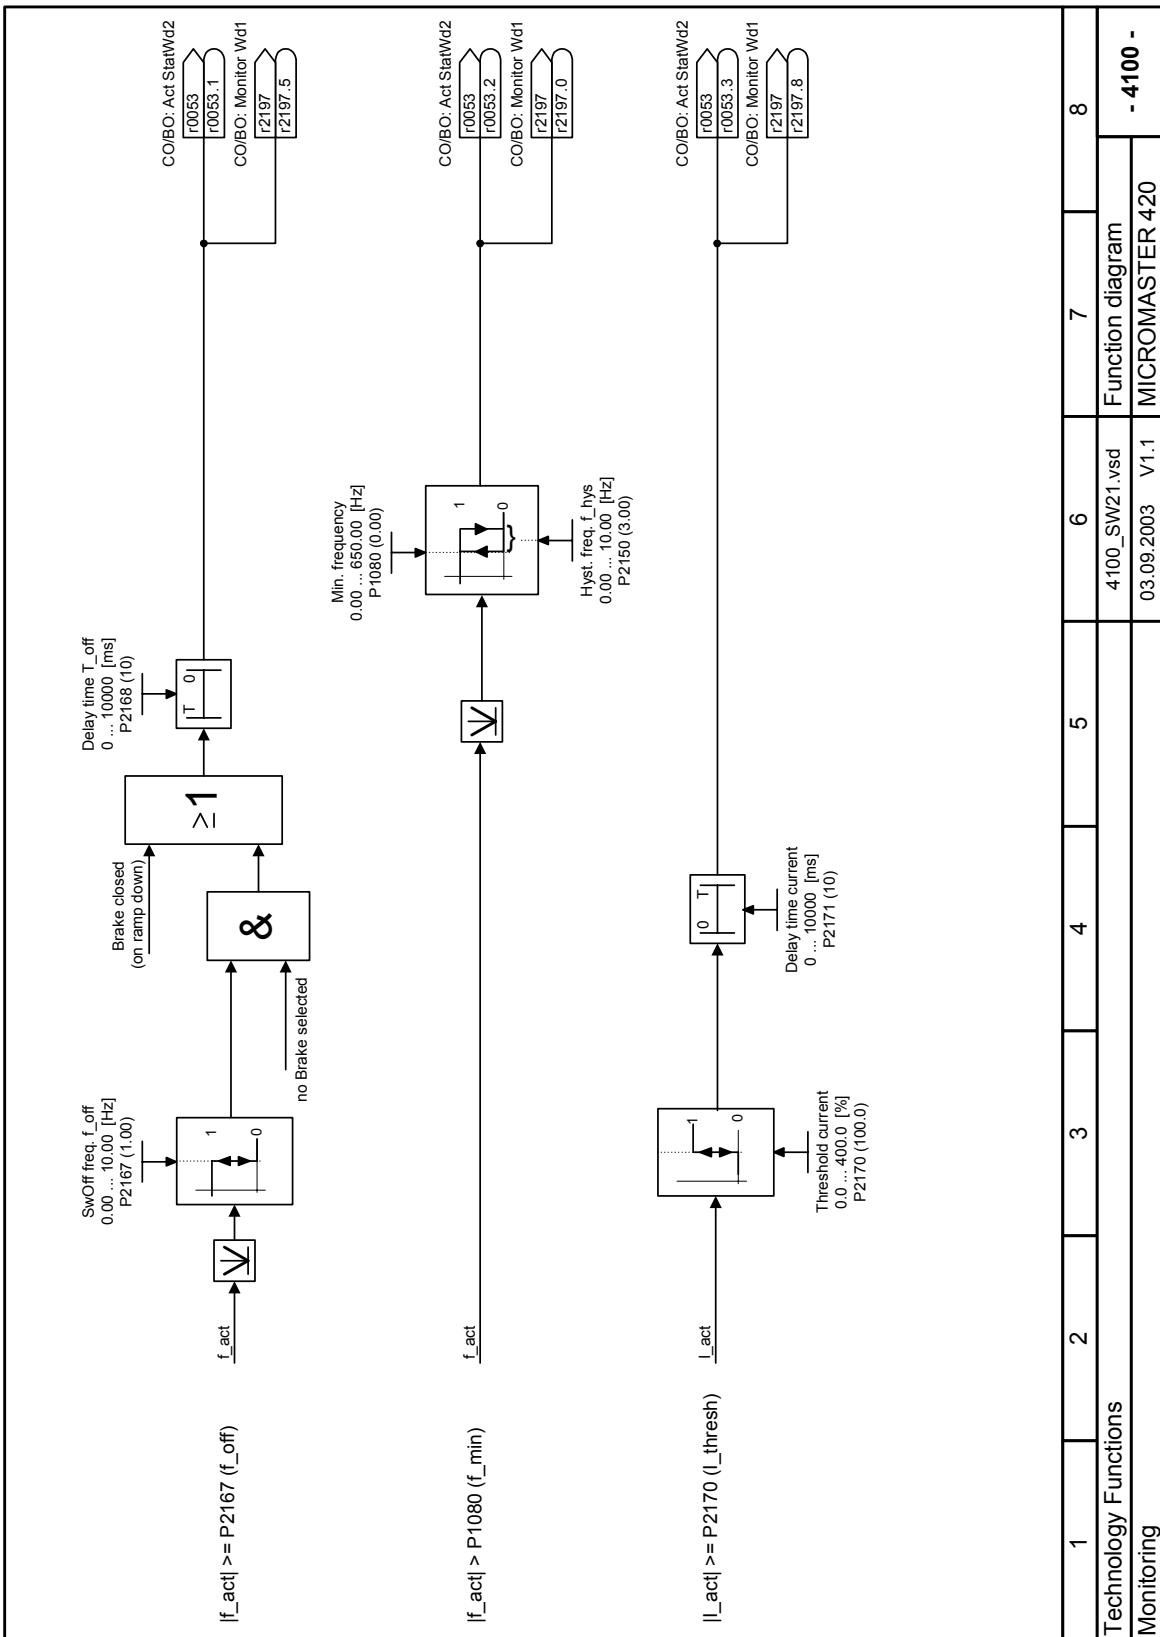


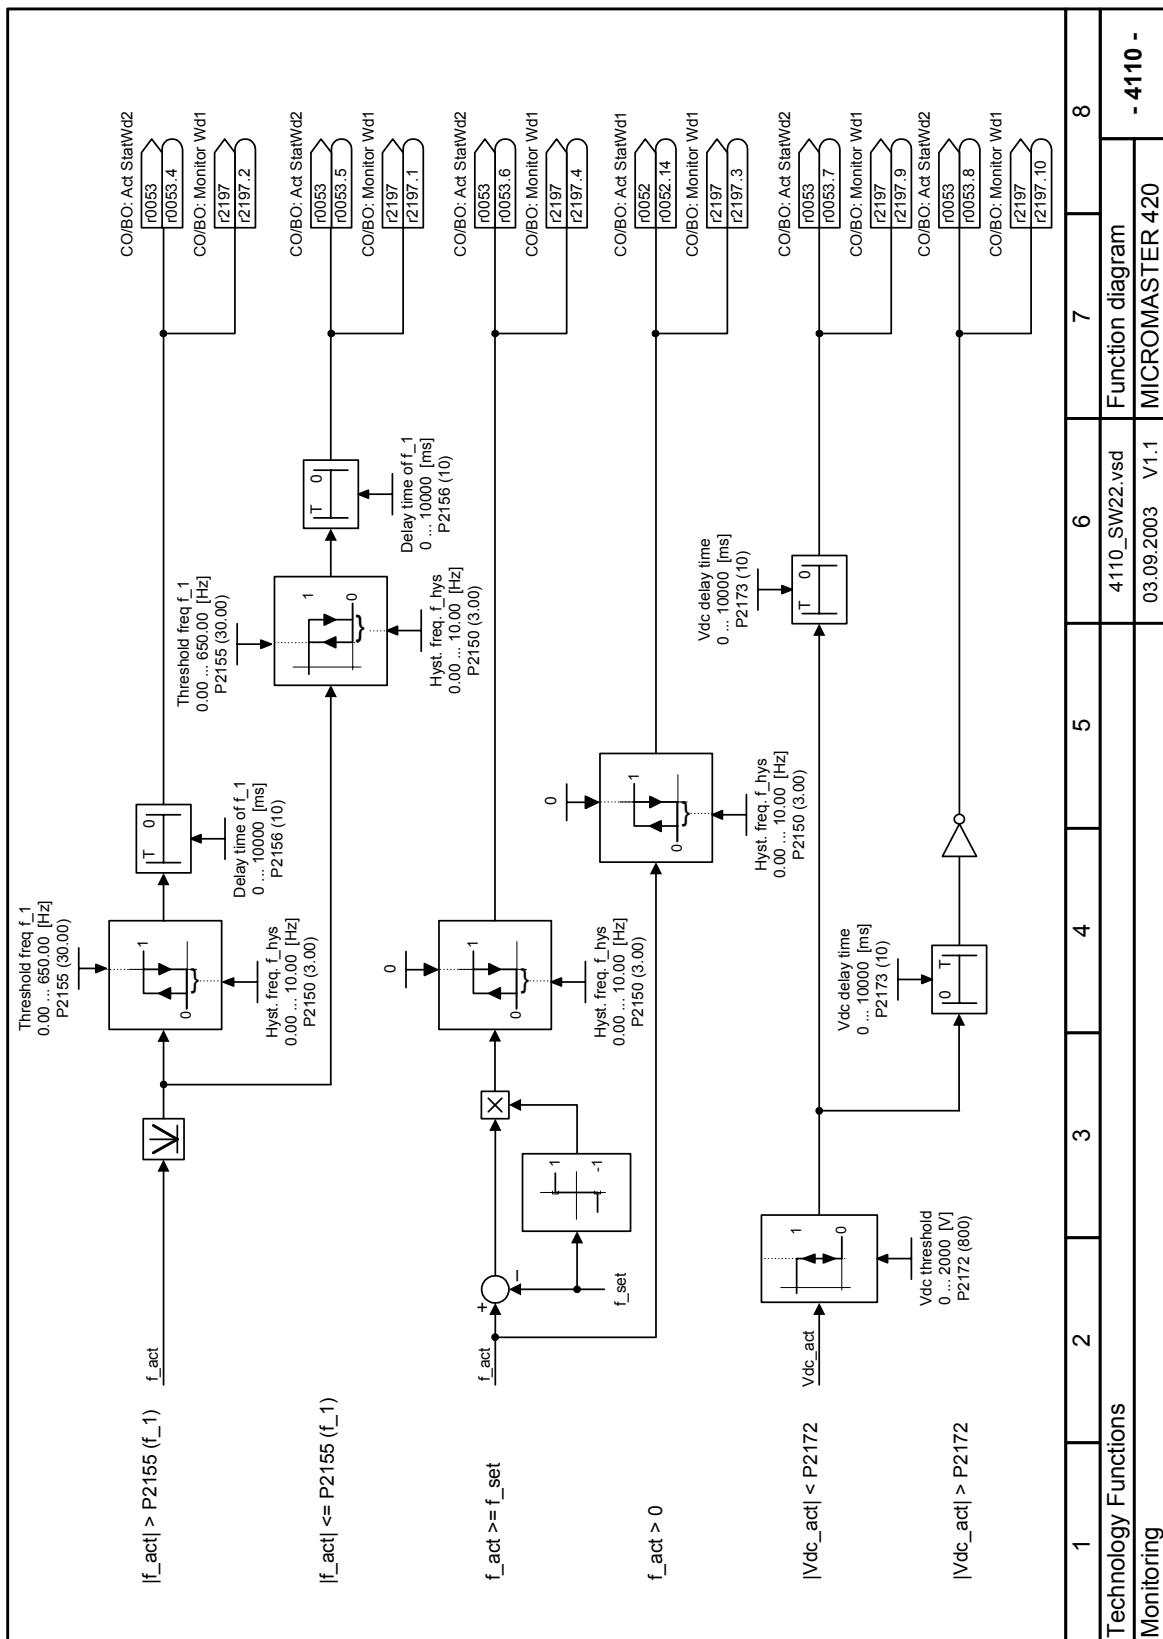


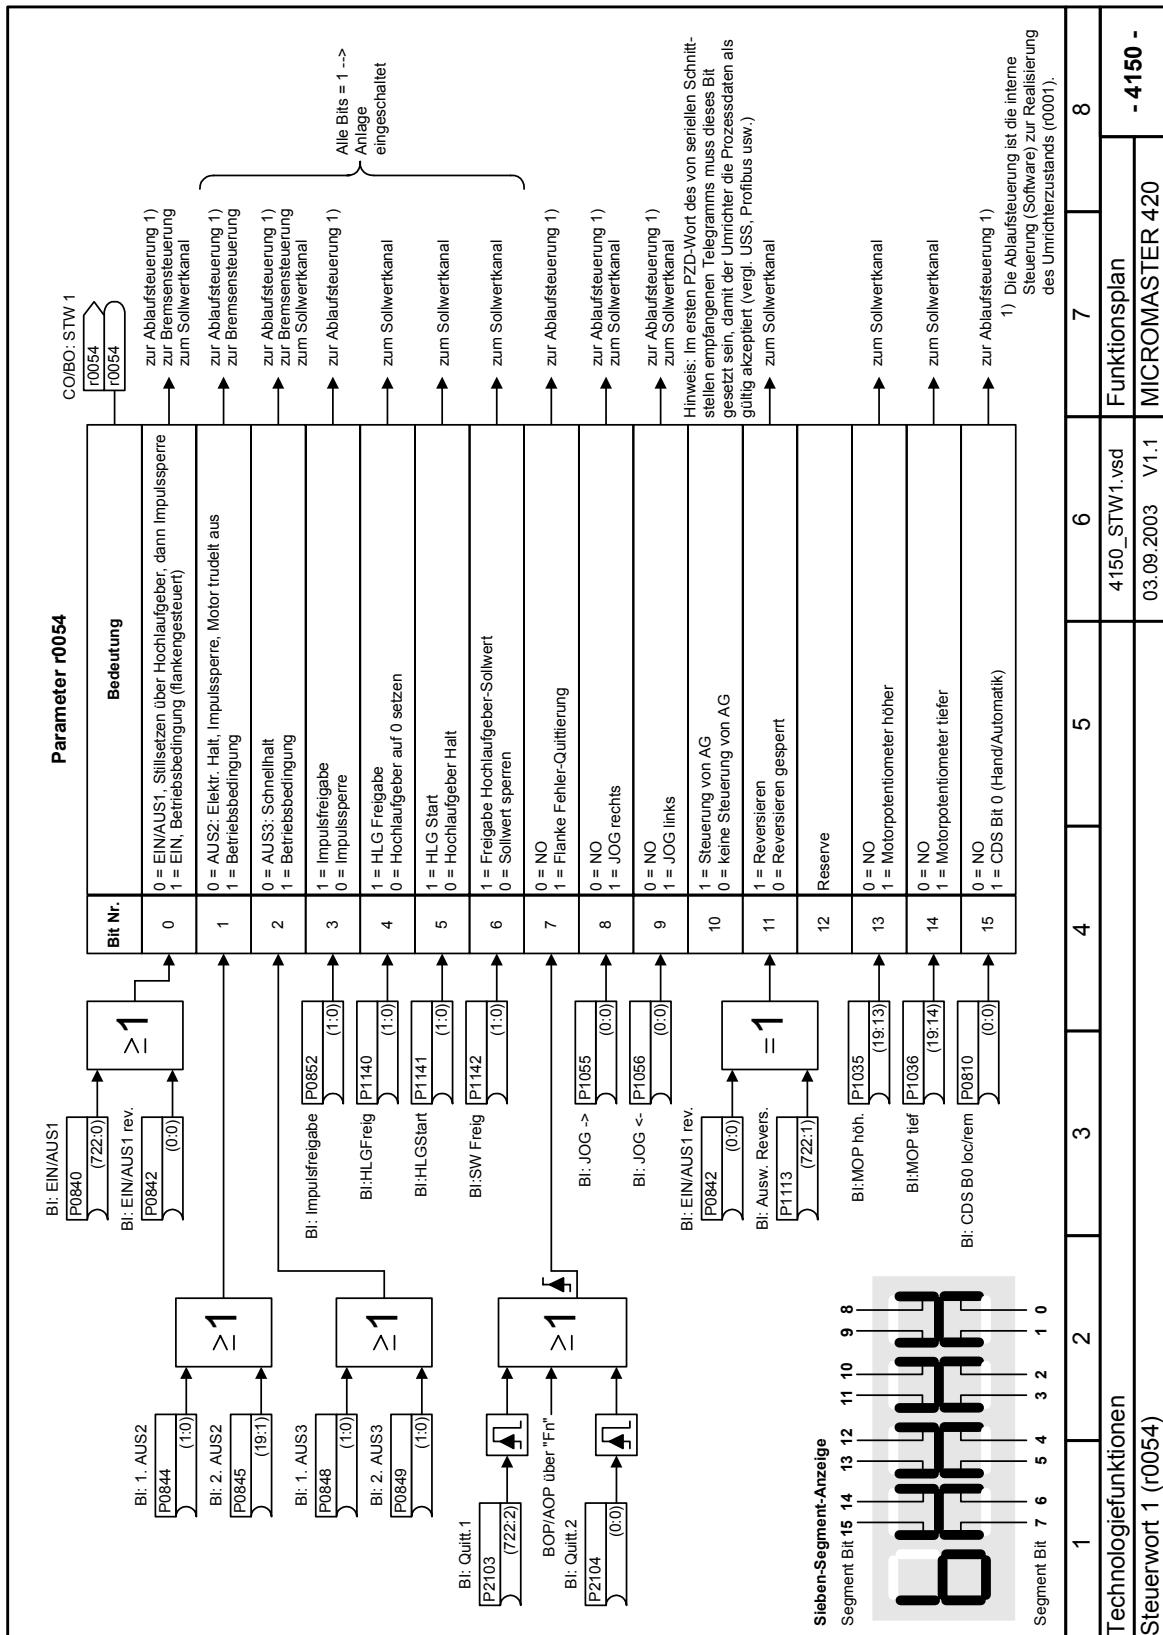


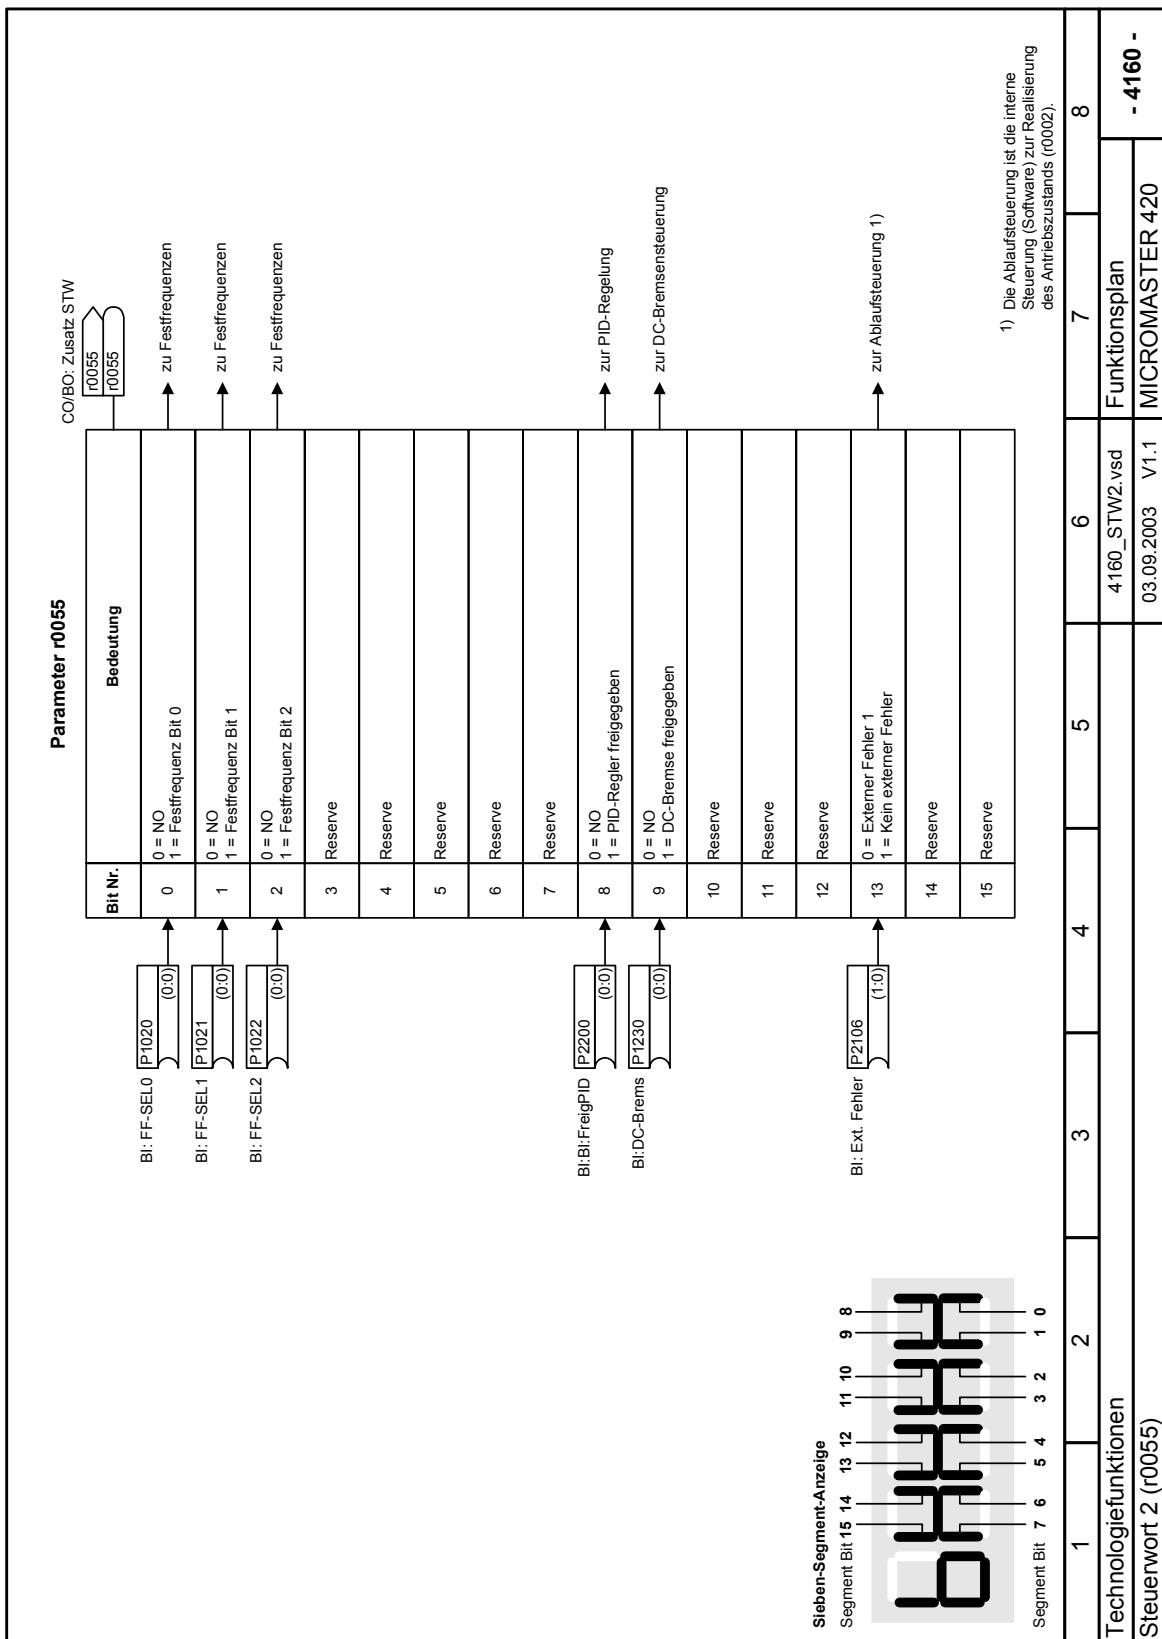


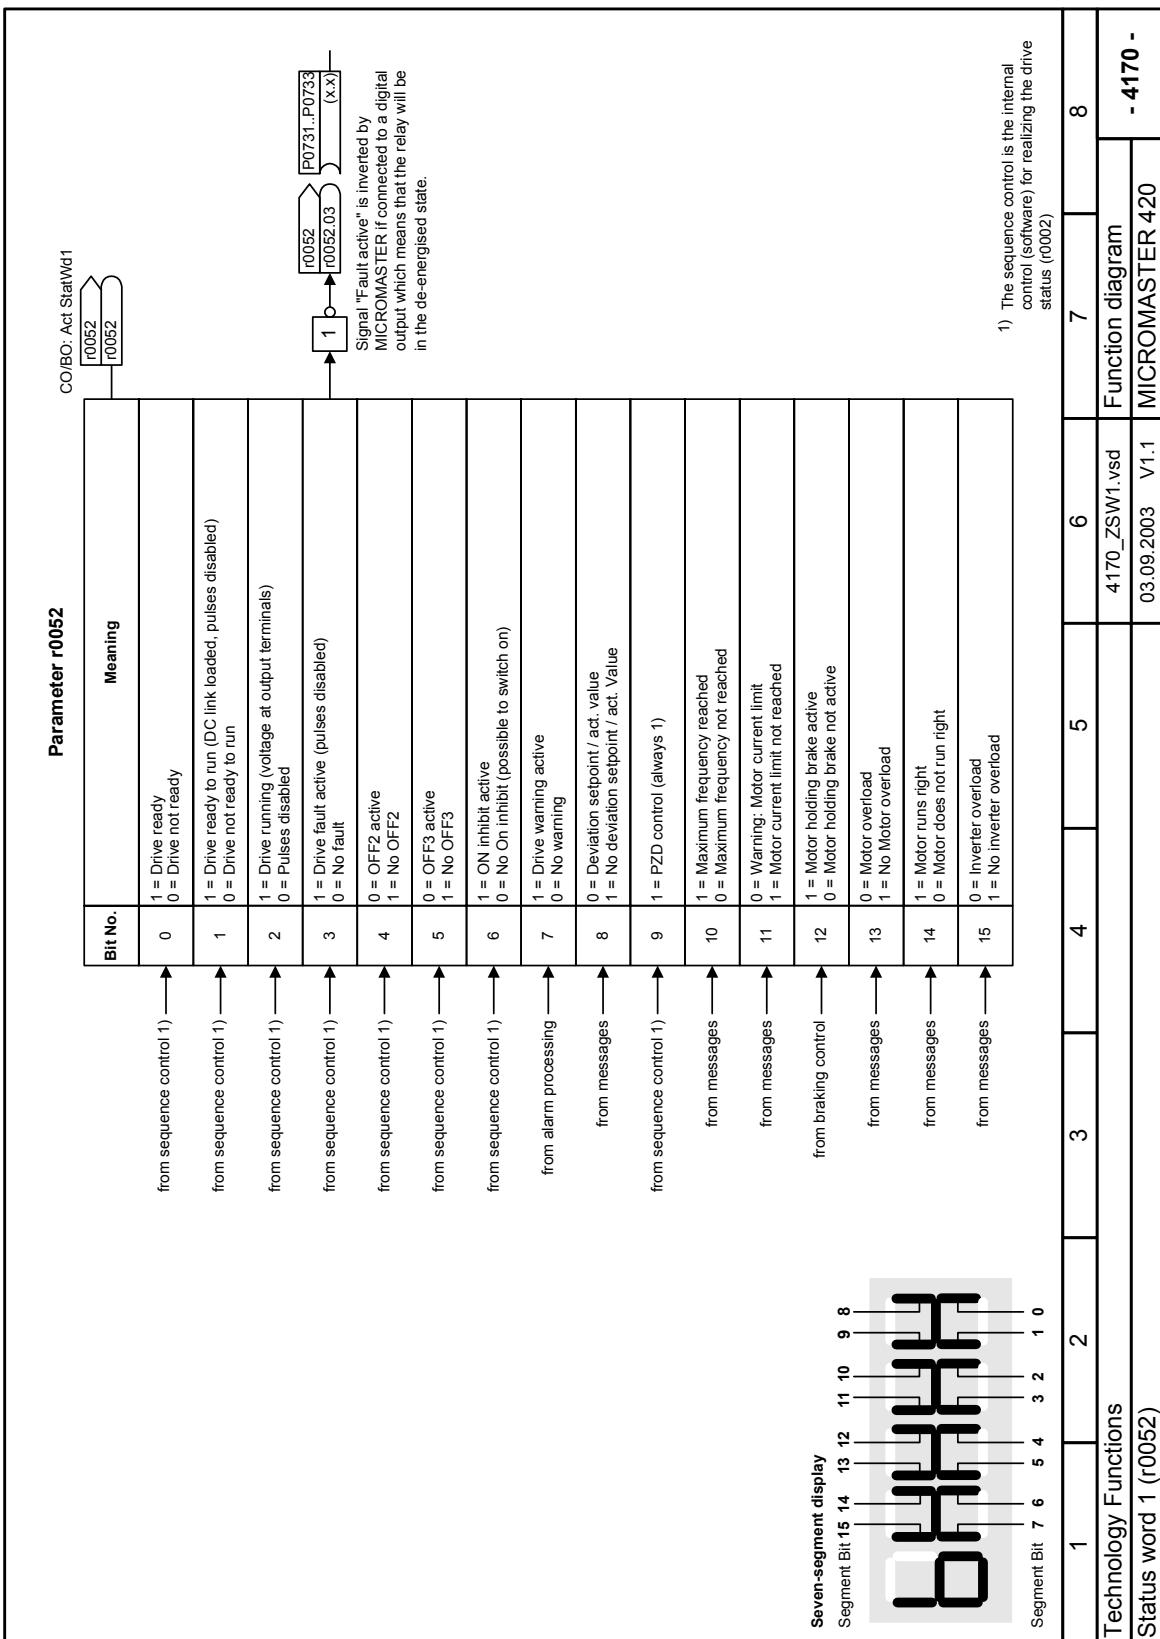


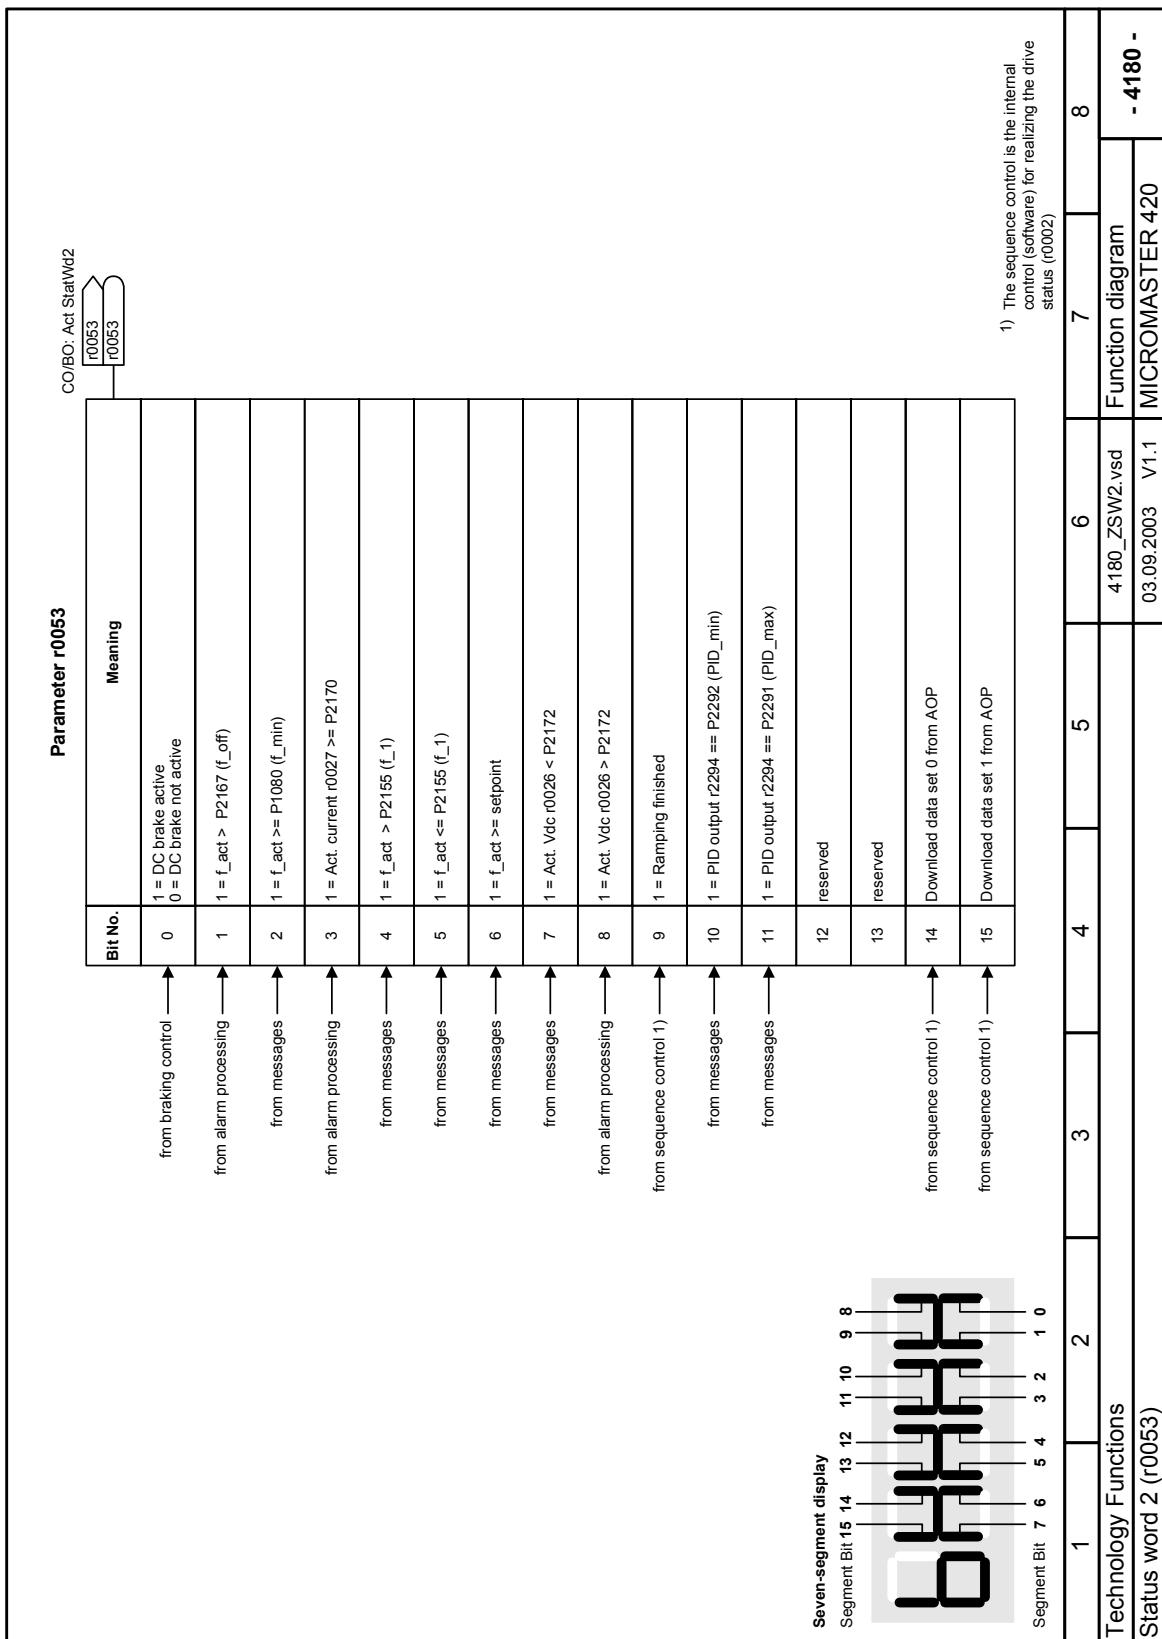


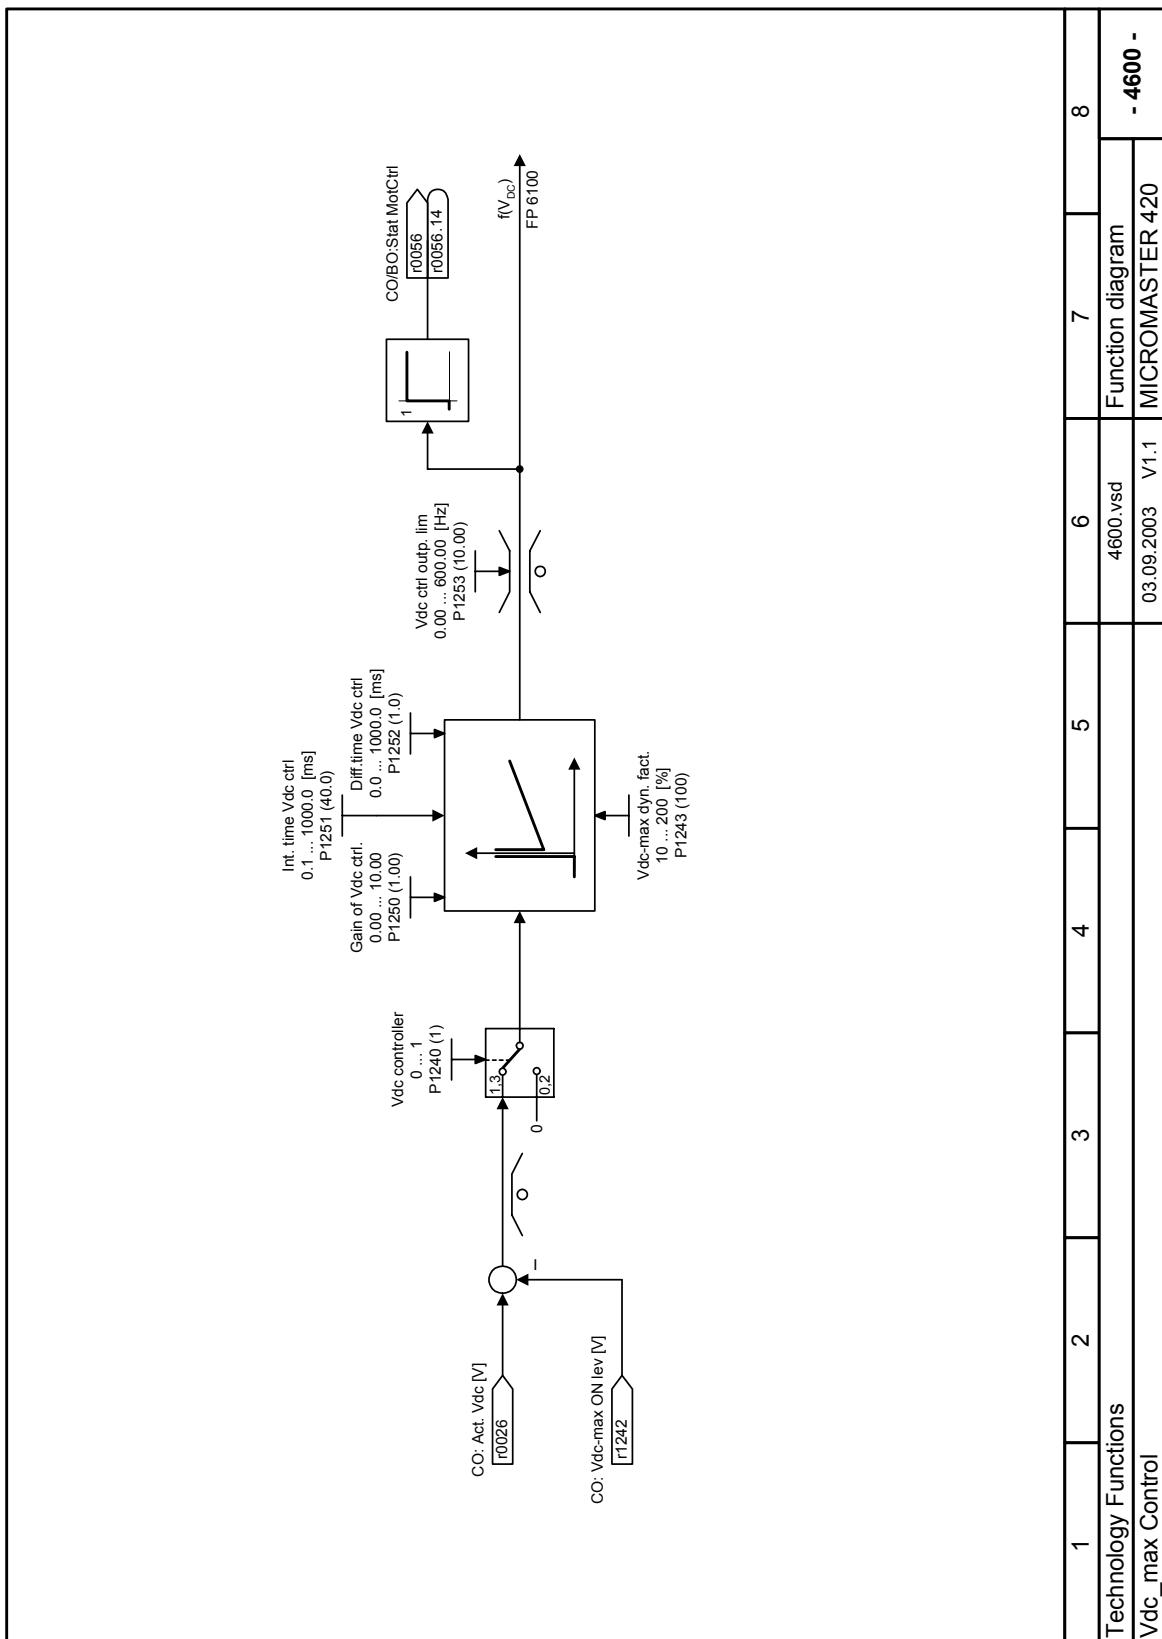


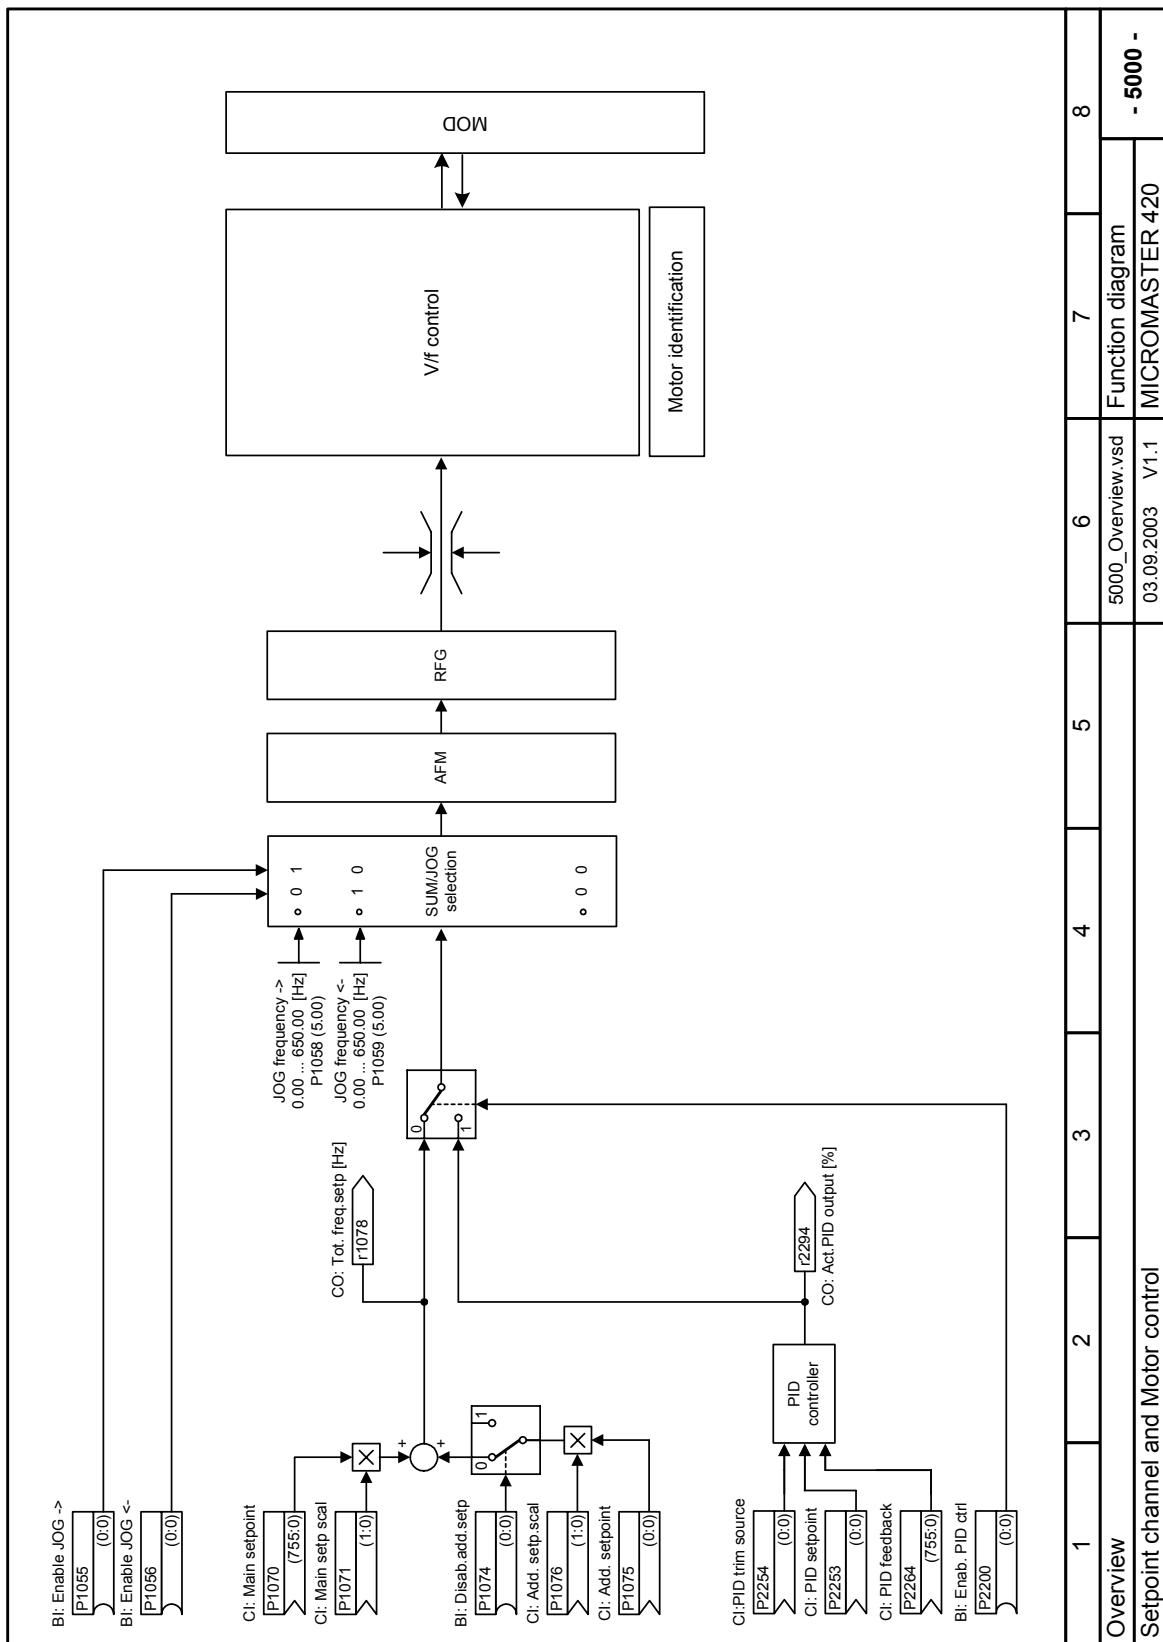


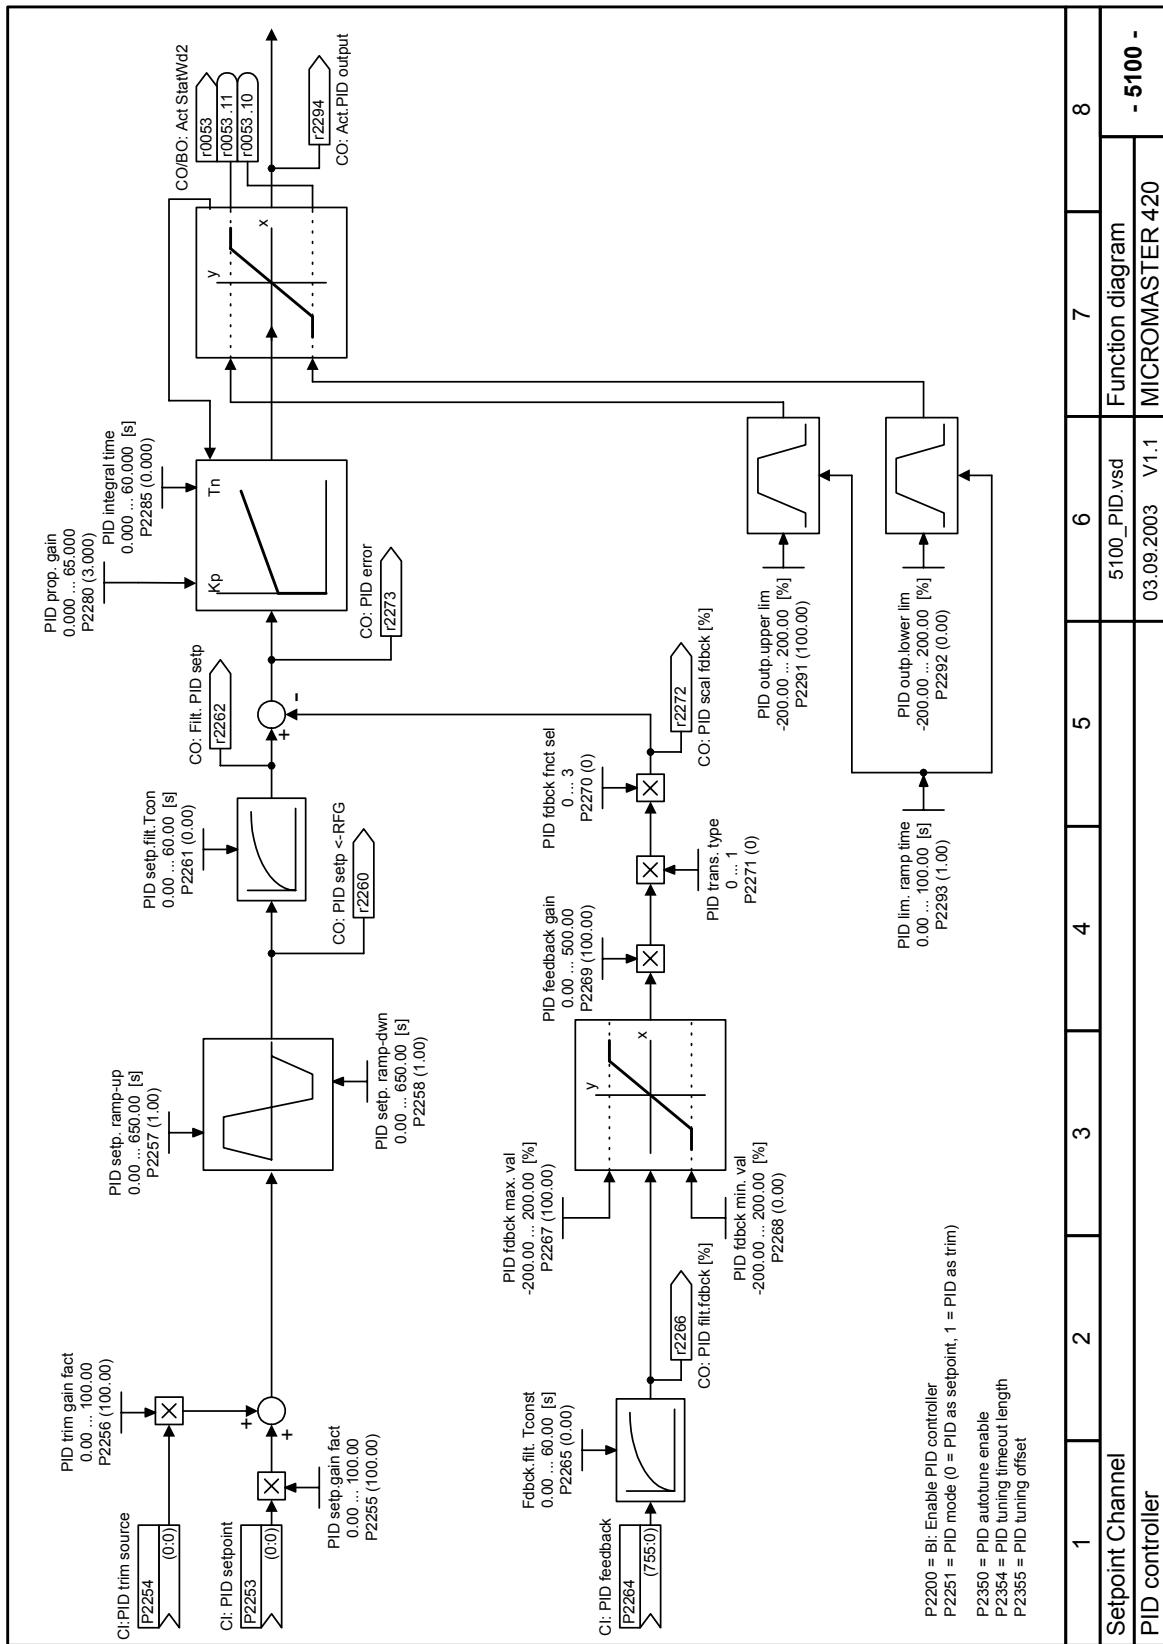

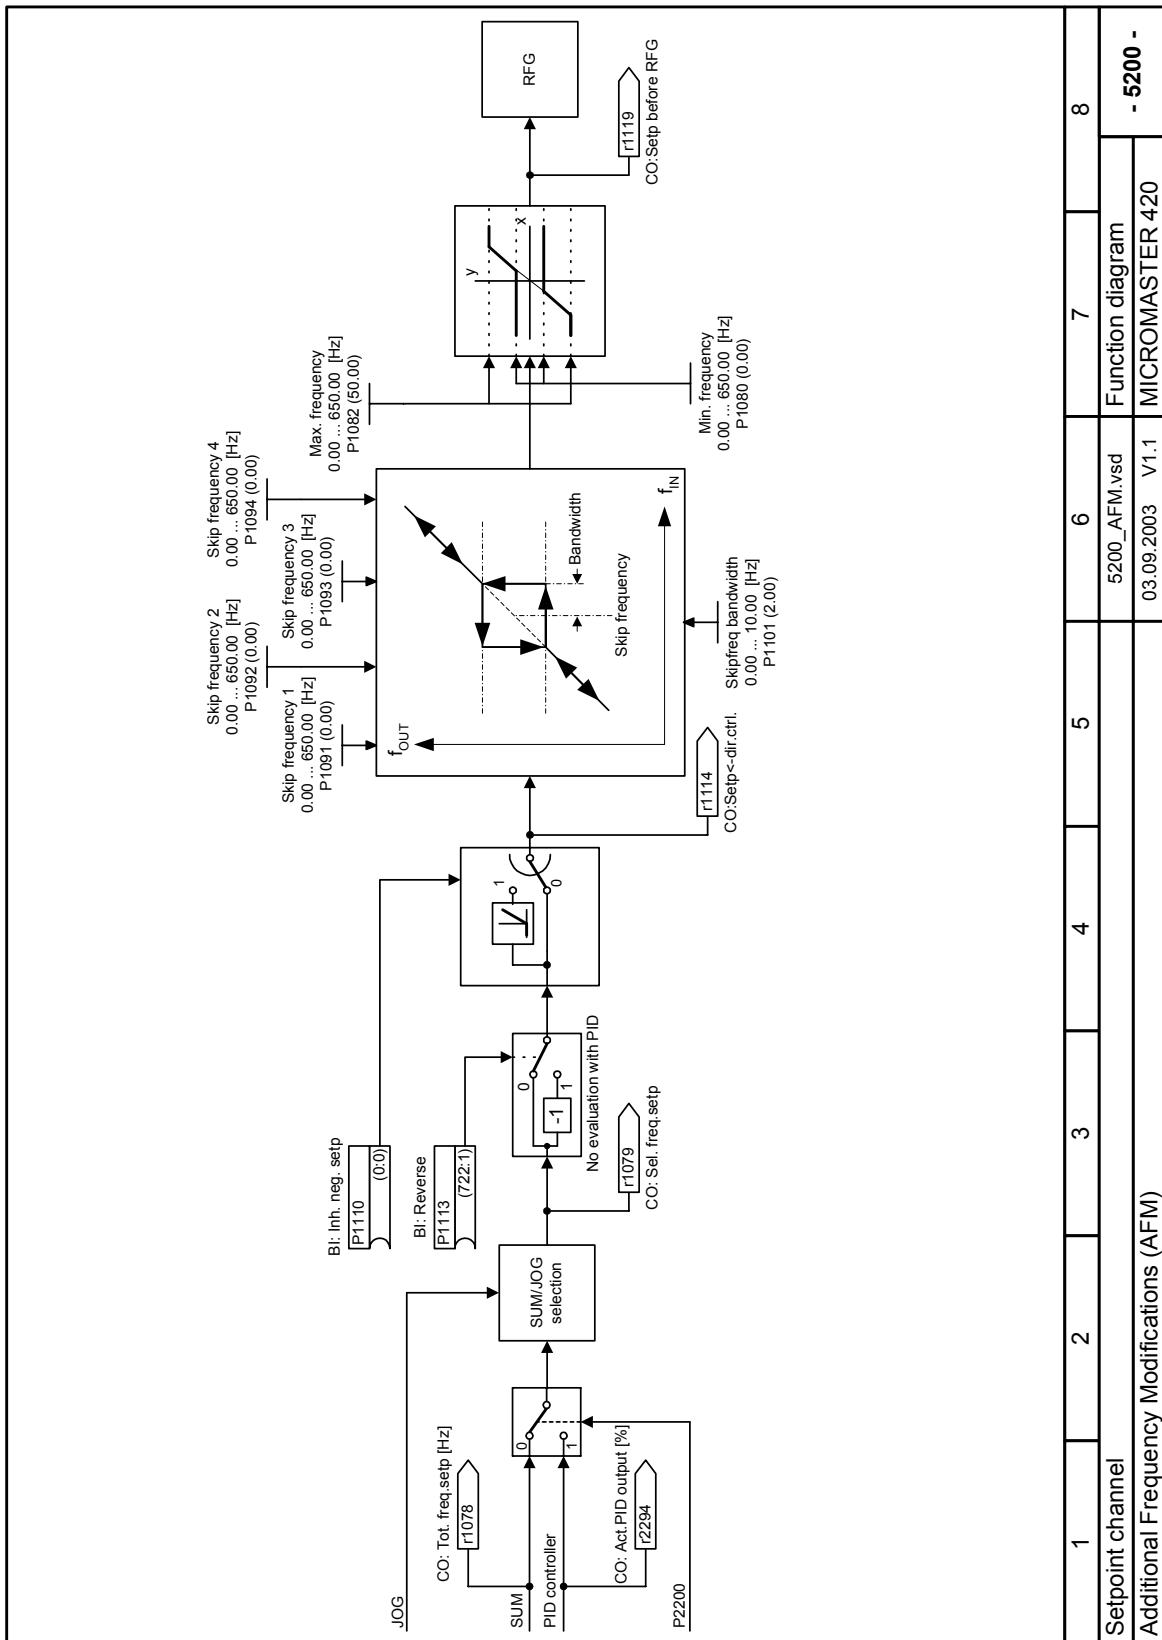

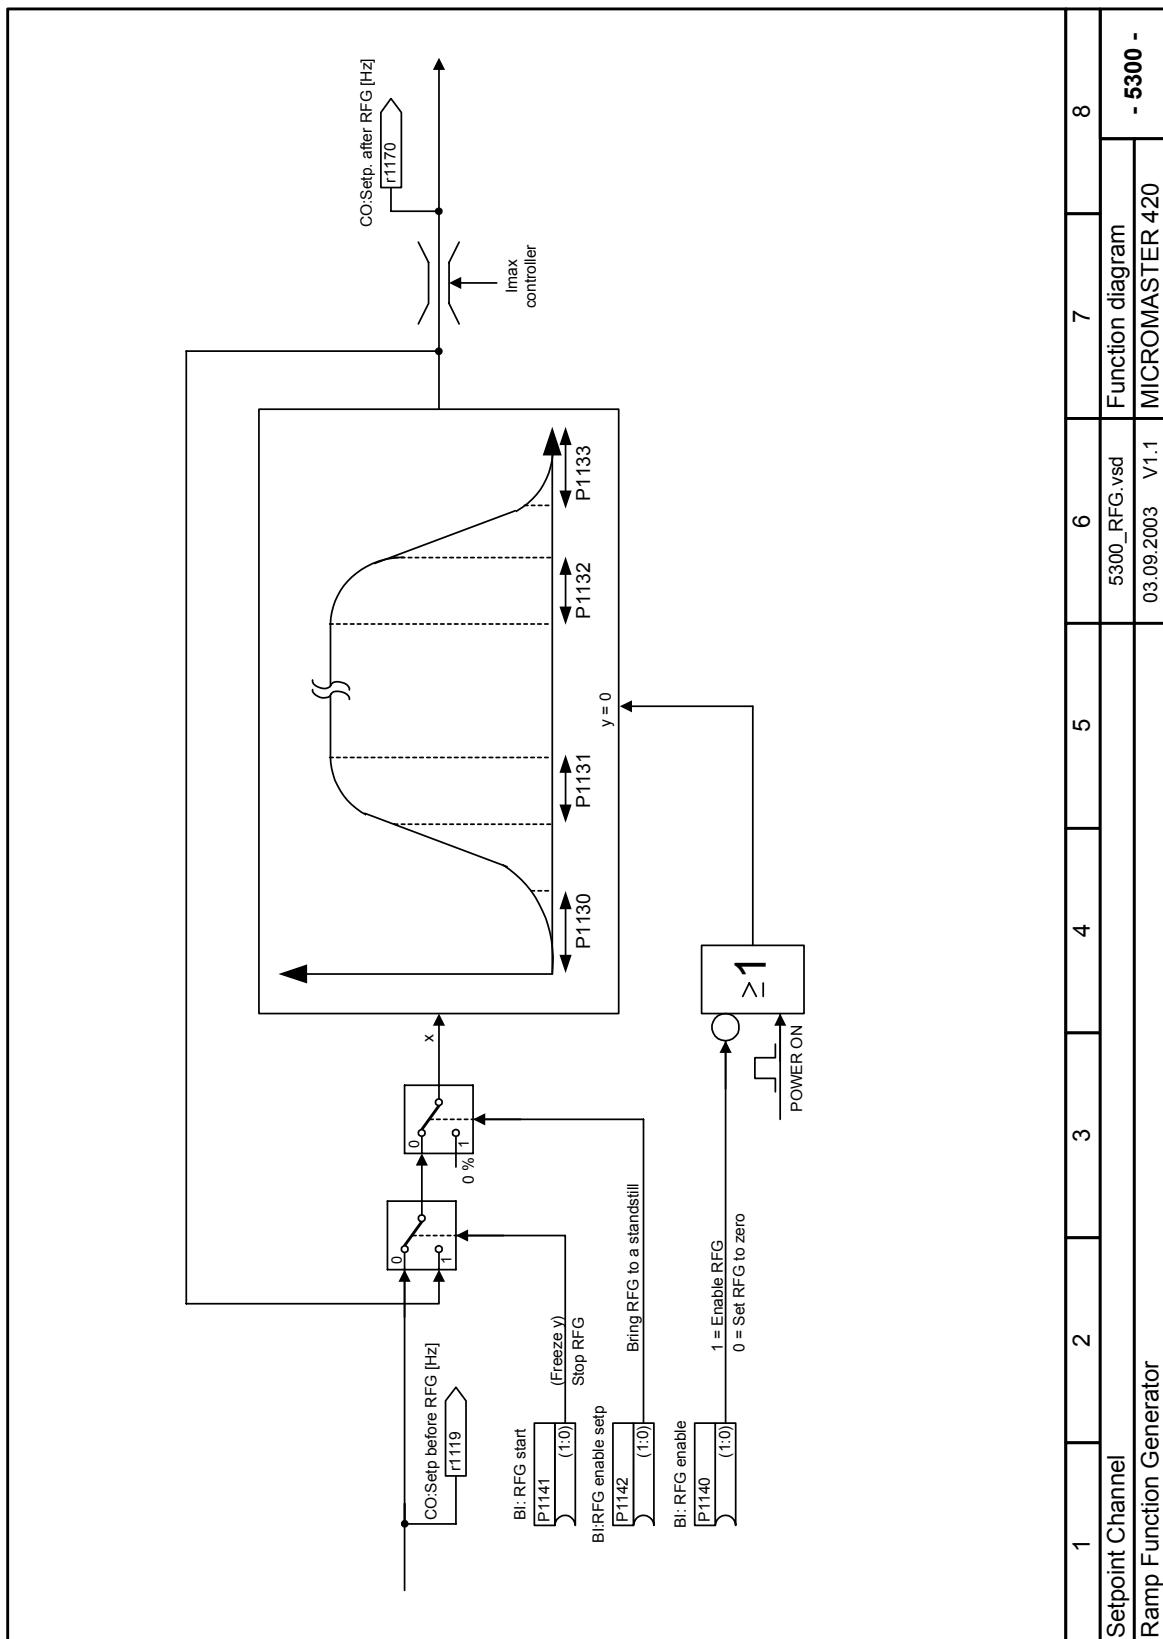

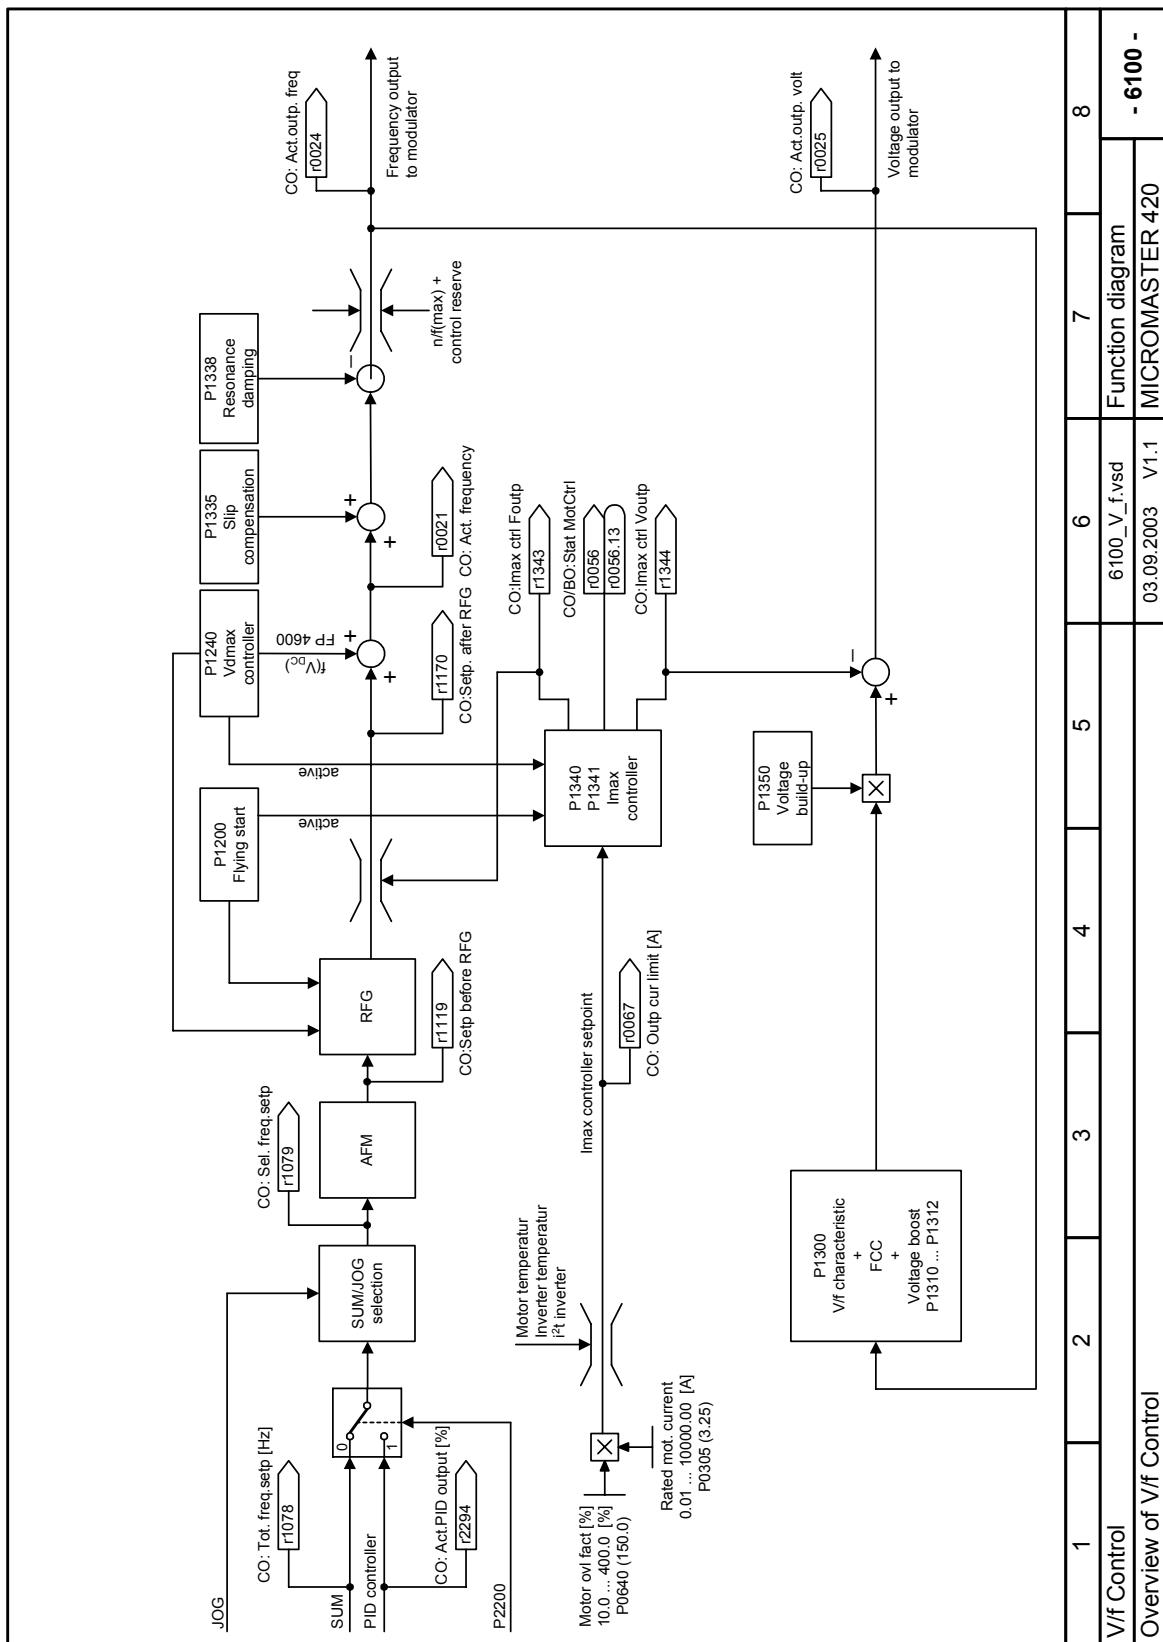

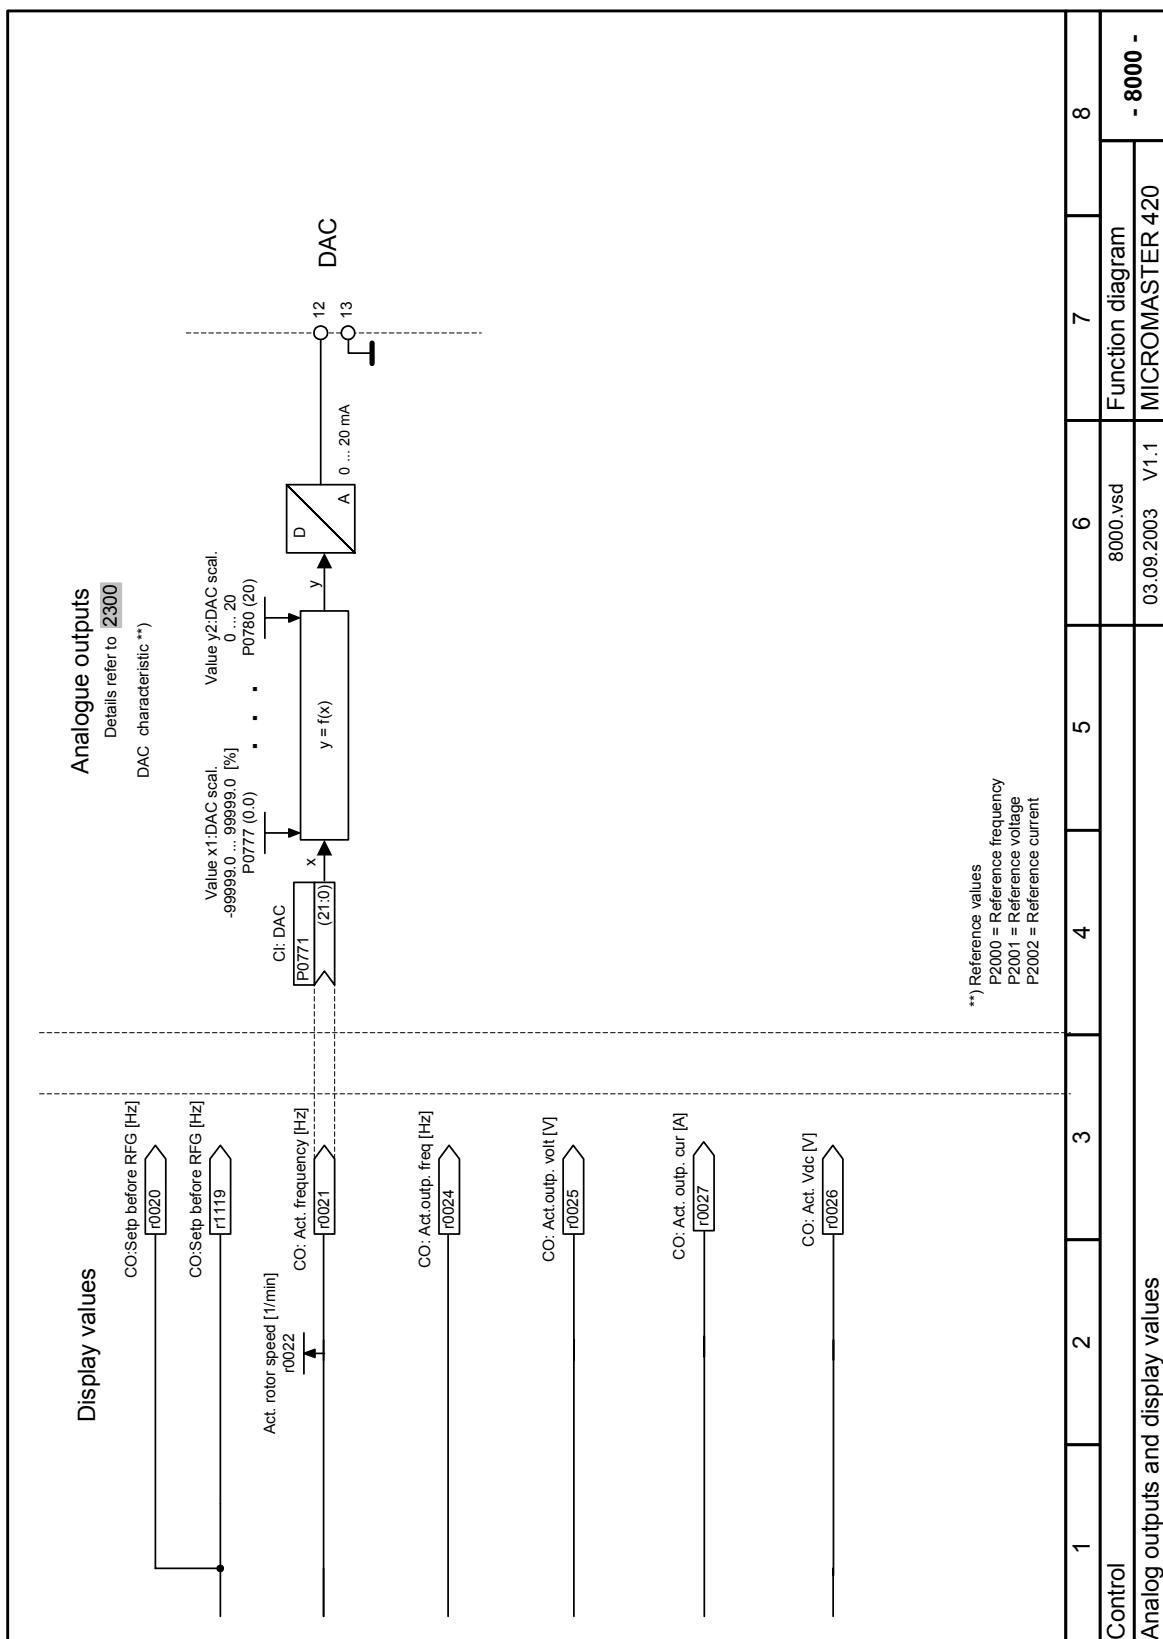

3 Faults and Alarms

3.1 Fault messages

In the event of a failure, the inverter switches off and a fault code appears on the display.

NOTE

To reset the fault code, one of three methods listed below can be used:

1. Cycle the power to the drive.
2. Press the  button on the BOP or AOP.
3. Via Digital Input 3 (default setting)

Fault messages are stored in parameter r0947 under their code number (e.g. F0003 = 3). The associated error value is found in parameter r0949. The value 0 is entered if a fault has no error value. It is furthermore possible to read out the point in time that a fault occurred (r0948) and the number of fault messages (P0952) stored in Parameter r0947.

F0001 OverCurrent **STOP II**

Cause

- Motor power (P0307) does not correspond to the inverter power (r0206)
- Motor lead short circuit
 - Earth faults

Diagnosis & Remedy

Check the following:

- Motor power (P0307) must correspond to inverter power (r0206).
- Cable length limits must not be exceeded.
- Motor cable and motor must have no short-circuits or earth faults
- Motor parameters must match the motor in use
- Value of stator resistance (P0350) must be correct
- Motor must not be obstructed or overloaded
- Increase the ramp time
- Reduce the boost level

F0002 OverVoltage **STOP II**

Cause

- DC-link voltage (r0026) exceeds trip level (P2172)

NOTE

Overvoltage can be caused either by too high main supply voltage or if motor is in regenerative mode. Regenerative mode can be cause by fast ramp downs or if the motor is driven from an active load.

Diagnosis & Remedy

Check the following:

- Supply voltage (P0210) must lie within limits indicated on rating plate .
- DC-link voltage controller must be enabled (P1240) and parameterized properly.
- Ramp-down time (P1121) must match inertia of load.
- Required braking power must lie within specified limits.

NOTE

Higher inertia requires longer ramp times; otherwise, apply braking resistor.

F0003	UnderVoltage	STOP II
	<p>Cause</p> <ul style="list-style-type: none"> - Main supply failed. - Shock load outside specified limits. <p>Diagnosis & Remedy</p> <p>Check the following:</p> <ul style="list-style-type: none"> - Supply voltage (P0210) must lie within limits indicated on rating plate. - Supply must not be susceptible to temporary failures or voltage reductions. 	
F0004	Inverter Over Temperature	STOP II
	<p>Cause</p> <ul style="list-style-type: none"> - Ventilation inadequate - Ambient temperature is too high. <p>Diagnosis & Remedy</p> <p>Check the following:</p> <ul style="list-style-type: none"> - Fan must turn when inverter is running - Pulse frequency must be set to default value - Ambient temperature could be higher than specified for the inverter <p>Additional meaning for Mega Master:</p> <ul style="list-style-type: none"> - P949 = 1: Rectifier overtemperature - P949 = 2: Ambient overtemperature - P949 = 3: EBOX overtemperature 	
F0005	Inverter I2T	STOP II
	<p>Cause</p> <ul style="list-style-type: none"> - Inverter overloaded. - Duty cycle too demanding. - Motor power (P0307) exceeds inverter power capability (r0206). <p>Diagnosis & Remedy</p> <p>Check the following:</p> <ul style="list-style-type: none"> - Load duty cycle must lie within specified limits. - Motor power (P0307) must match inverter power (r0206) 	
F0011	Motor Over Temperature I2T	STOP II
	<p>Cause</p> <p>Motor overloaded</p> <p>Diagnosis & Remedy</p> <p>Check the following:</p> <ul style="list-style-type: none"> - Load duty cycle must be correct - Motor thermal time constant (P0611) must be correct - Motor I2t warning level must match 	
F0041	Motor Data Identification Failure	STOP II
	<p>Cause</p> <p>Motor data identification failed.</p> <p>Alarm value = 0: Load missing</p> <p>Alarm value = 1: Current limit level reached during identification.</p> <p>Alarm value = 2: Identified stator resistance less than 0.1% or greater than 100%.</p> <p>Alarm value = 30: Current controller at voltage limit</p> <p>Alarm value = 40: Inconsistency of identified data set, at least one identification failed</p> <p>Percentage values based on the impedance $Z_b = V_{mot,nom} / \sqrt{3} / I_{mot,nom}$</p> <p>Diagnosis & Remedy</p> <p>Check the following:</p> <ul style="list-style-type: none"> - 0: Check that the motor is connected to the inverter. - 1-40: Check if motor data in P0304 P0311 are correct. - Check what type of motor wiring is required (star, delta). 	
F0051	Parameter EEPROM Fault	STOP II
	<p>Cause</p> <p>Read or write failure while saving non-volatile parameter.</p> <p>Diagnosis & Remedy</p> <ul style="list-style-type: none"> - Factory Reset and new parameterization - Change drive 	

F0052	power stack Fault	STOP II
	<p>Cause Read failure for power stack information or invalid data.</p> <p>Diagnosis & Remedy Change drive</p>	
F0060	Asic Timeout	STOP II
	<p>Cause Internal communications failure</p> <p>Diagnosis & Remedy</p> <ul style="list-style-type: none"> - If fault persists, change inverter - Contact Service Department 	
F0070	CB setpoint fault	STOP II
	<p>Cause No setpoint values from CB (communication board) during telegram off time</p> <p>Diagnosis & Remedy Check CB and communication partner</p>	
F0071	USS (BOP-link) setpoint fault	STOP II
	<p>Cause No setpoint values from USS during telegram off time</p> <p>Diagnosis & Remedy Check USS master</p>	
F0072	USS (COMM link) setpoint fault	STOP II
	<p>Cause No setpoint values from USS during telegram off time</p> <p>Diagnosis & Remedy Check USS master</p>	
F0080	ADC lost input signal	STOP II
	<p>Cause</p> <ul style="list-style-type: none"> - Broken wire - Signal out of limits 	
F0085	External Fault	STOP II
	<p>Cause External fault triggered via terminal inputs</p> <p>Diagnosis & Remedy Disable terminal input for fault trigger.</p>	
F0101	Stack Overflow	STOP II
	<p>Cause Software error or processor failure</p> <p>Diagnosis & Remedy Run self test routines</p>	
F0221	PID Feedback below min. value	STOP II
	<p>Cause PID Feedback below min. value P2268.</p> <p>Diagnosis & Remedy</p> <ul style="list-style-type: none"> - Change value of P2268. - Adjust feedback gain. 	

F0222	PID Feedback above max. value	STOP II
Cause	PID feedback above max. value P2267.	
Diagnosis & Remedy	<ul style="list-style-type: none">- Change value of P2267.- Adjust feedback gain.	
F0450	BIST Tests Failure	STOP II
Cause	Fault value: 1. Some power section tests have failed 2. Some control board tests have failed 4. Some functional tests have failed 8. Some IO module tests have failed. (MM 420 only) 16. Internal RAM failed on power-up check	
Diagnosis & Remedy	Drive may run but some features will not work properly. Replace drive.	
F0452	Belt Failure Detected	STOP II
Cause	Load conditions on motor indicate belt failure or mechanical fault.	
Diagnosis & Remedy	<p>Check the following:</p> <ul style="list-style-type: none">1. No breakage, seizure or obstruction of drive train.2. If using an external speed sensor, check for correct function. Check parameters:<ul style="list-style-type: none">- P2192 (delay time for permitted deviation)3. If using the torque envelope, check parameters:<ul style="list-style-type: none">- P2182 (threshold frequency f1)- P2183 (threshold frequency f2)- P2184 (threshold frequency f3)- P2185 (upper torque threshold 1)- P2186 (lower torque threshold 1)- P2187 (upper torque threshold 2)- P2188 (lower torque threshold 2)- P2189 (upper torque threshold 3)- P2190 (lower torque threshold 3)- P2192 (delay time for permitted deviation)4. Apply lubrication if required.	

3.2 Alarm Messages

Alarm messages are stored in parameter r2110 under their code number (e.g. A0503 = 503) and can be read out from there.

A0501 Current Limit

Cause

- Motor power does not correspond to the inverter power
- Motor leads are too long
- Earth faults

Diagnosis & Remedy

Check the following:

- Motor power (P0307) must correspond to inverter power (r0206).
- Cable length limits must not be exceeded.
- Motor cable and motor must have no short-circuits or earth faults
- Motor parameters must match the motor in use
- Value of stator resistance (P0350) must be correct
- Motor must not be obstructed or overloaded
- Increase the ramp-up-time.
- Reduce the boost.

A0502 Overvoltage limit

Cause

Overvoltage limit is reached.

This warning is generated,

- if the dc-link controller is disabled (P1240 = 0).
- if pulses are enabled
- if actual dc voltage r0026 > r1242.

Diagnosis & Remedy

If this warning is displayed permanently, check drive input voltage .

A0503 UnderVoltage Limit

Cause

- Main supply failed
- Main supply (P0210) and consequently DC-link voltage (R0026) below specified limit (P2172).

Diagnosis & Remedy

Check main supply voltage (P0210).

A0504 Inverter OverTemperature

Cause

Warning level of inverter heat-sink temperature (P0614) is exceeded, resulting in pulse frequency reduction and/or output frequency reduction (depending on parameterization in P0610)

Diagnosis & Remedy

Check the following:

- Ambient temperature must lie within specified limits
- Load conditions and duty cycle must be appropriate

A0505 Inverter I2T

Cause

Warning level exceeded, current will be reduced if parameterized (P0610 = 1)

Diagnosis & Remedy

Check that duty cycle lies within specified limits

A0511 Motor Over Temperature I2T**Cause**

- Motor overloaded.
- Load duty cycle too high.

Diagnosis & Remedy

Check the following:

- P0611 (motor I2t time constant) should be set to appropriate value
- P0614 (Motor I2t overload warning level) should be set to suitable level

A0535 Braking Resistor Hot**A0541 Motor Data Identification Active****Cause**

Motor data identification (P1910) selected or running

A0600 RTOS Overrun Warning**A0700 CB warning 1 see CB manual for details.****A0701 CB warning 2 see CB manual for details.****A0702 CB warning 3 see CB manual for details.****A0703 CB warning 4 see CB manual for details.****A0704 CB warning 5 see CB manual for details.****A0705 CB warning 6 see CB manual for details.****A0706 CB warning 7 see CB manual for details.****A0707 CB warning 8 see CB manual for details.****A0708 CB warning 9 see CB manual for details.****A0709 CB warning 10 see CB manual for details.****A0710 CB communication error****Cause**

Communication with CB (communication board) is lost

Diagnosis & Remedy

Check CB hardware

A0711 CB configuration error**Cause**

CB (communication board) reports a configuration error.

Diagnosis & Remedy

Check CB parameters

A0910 Vdc-max controller de-activated**Cause**

Vdc max controller has been de-activated, since controller is not capable of keeping DC-link voltage (r0026) within limits (P2172).

- Occurs if main supply voltage (P0210) is permanently too high.
- Occurs if motor is driven by an active load, causing motor to goes into regenerative mode.
- Occurs at very high load inertias, when ramping down.

Diagnosis & Remedy

Check the following:

- Input voltage (P0210) must lie within range.
- Load must be match.

A0911 Vdc-max controller active**Cause**

Vdc max controller is active; so ramp-down times will be increased automatically to keep DC-link voltage (r0026) within limits (P2172).

A0912 Vdc-min controller active**Cause**

- Vdc min controller will be activated if DC-link voltage (r0026) falls below minimum level (P2172).
- The kinetic energy of the motor is used to buffer the DC-link voltage, thus causing deceleration of the drive!
- So short mains failures do not necessarily lead to an undervoltage trip.

A0920 ADC parameters not set properly.**Cause**

ADC parameters should not be set to identical values, since this would produce illogical results.

- Index 0: Parameter settings for output identical
- Index 1: Parameter settings for input identical
- Index 2: Parameter settings for input do not correspond to ADC type

A0921 DAC parameters not set properly.**Cause**

DAC parameters should not be set to identical values, since this would produce illogical results.

- Index 0: Parameter settings for output identical
- Index 1: Parameter settings for input identical
- Index 2: Parameter settings for output do not correspond to DAC type

A0922 No load applied to inverter**Cause**

No Load is applied to the inverter.

As a result, some functions may not work as under normal load conditions.

A0923 Both JOG Left and JOG Right are requested**Cause**

Both JOG right and JOG left (P1055/P1056) have been requested. This freezes the RFG output frequency at its current value.

A0952 Belt Failure Detected

Cause

Load conditions on motor indicate belt failure or mechanical fault.

Diagnosis & Remedy

Check the following:

1. No breakage, seizure or obstruction of drive train.
2. If using an external speed sensor, check for correct function. Check parameters:
 - P0409 (pulse per min at rated speed).
 - P2191 (Belt failure speed tolerance).
 - P2192 (delay time for permitted deviation)
3. If using the torque envelope, check parameters:
 - P2182 (threshold frequency f1)
 - P2183 (threshold frequency f2)
 - P2184 (threshold frequency f3)
 - P2185 (upper torque threshold 1)
 - P2186 (lower torque threshold 1)
 - P2187 (upper torque threshold 2)
 - P2188 (lower torque threshold 2)
 - P2189 (upper torque threshold 3)
 - P2190 (lower torque threshold 3)
 - P2192 (delay time for permitted deviation)
4. Apply lubrication if required.

4 Abbreviations

AC	Alternating current
AD	Analog digital converter
ADC	Analog digital converter
ADR	Address
AFM	Additional frequency modification
AG	Automation unit
AIN	Analog input
AOP	Advanced operator panel
AOUT	Analog output
ASIC	Application-specific integrated circuit
ASP	Analog setpoint
ASVM	Asymmetric space vector modulation
BCC	Block check character
BCD	Binary-coded decimal code
BI	Binector input
BICO	Binector / connector
BO	Binector output
BOP	Basic operator panel
C	Commissioning
CB	Communication board
CCW	Counter-clockwise
CDS	Command data set
CI	Connector input
CM	Configuration management
CMD	Commando
CMM	Combimaster
CO	Connector output
CO/BO	Connector output / Binector output
COM	Common (terminal that is connected to NO or NC)
COM-Link	Communication link
CT	Commissining, ready to run
CT	Constant torque
CUT	Commissining, run, ready to run
CW	Clockwise
DA	Digital analog converter
DAC	Digital analog converter
DC	Direct current
DDS	Drive data set
DIN	Digital input
DIP	DIP switch
DOUT	Digital output
DS	Drive state
EEC	European Economic Community
EEPROM	Electrical erasable programmable read-only memory
ELCB	Earth leakage circuit breaker

EMC	Electro-magnetic compatibility
EMF	Electromotive force
EMI	Electro-magnetic interference
ESB	Equivalent circuit
FAQ	Frequently asked questions
FB	Function block
FCC	Flux current control
FCL	Fast current limit
FF	Fixed frequency
FFB	Free function block
FOC	Field orientated control
FSA	Frame size A
GSG	Getting started guide
GUI ID	Global unique identifier
HIW	Main actual value
HSW	Main setpoint
HTL	High-threshold logic
I/O	Input and output
IBN	Commissioning
IGBT	Insulated gate bipolar transistor
IND	Sub-index
JOG	Jog
KIB	Kinetic buffering
LCD	Liquid crystal display
LED	Light emitting diode
LGE	Length
MHB	Motor holding brake
MM4	MICROMASTER 4th. Generation
MOP	Motor potentiometer
NC	Normally closed
NO	Normally open
NPN	Negative positive negative
OPI	Operating instructions
PDS	Power drive system
PID	PID controller (proportional, integral, derivative)
PKE	Parameter ID
PKW	Parameter ID value
PLC	Programmable logic controller
PLI	Parameter list
PNP	Positive negative positive
POT	Potentiometer
PPO	Parameter process data object
PTC	Positive temperature coefficient
PWE	Parameter value
PWM	Pulse-width modulation
PX	Power extension
PZD	Process data
QC	Quick commissioning
RAM	Random-access memory

RCCB	Residual current circuit breaker
RCD	Residual current device
RFG	Ramp function generator
RFI	Radio-frequency interference
RPM	Revolutions per minute
SCL	Scaling
SDP	Status display panel
SLVC	Sensorless vector control
STW	Control word
STX	Start of text
SVM	Space vector modulation
TTL	Transistor-transistor logic
USS	Universal serial interface
VC	Vector control
Vdc	DC-link voltage
VT	Variable torque
ZSW	Status word
ZUSW	Additional setpoint

Suggestions and/or Corrections

To
Siemens AG
Automation & Drives Group
SD VM 4
P.O. Box 3269

D-91050 Erlangen
Federal Republic of Germany

Email:
documentation.sd@siemens.com

Suggestions Corrections

For Publication/Manual:
MICROMASTER 420
Parameter List

User Documentation

From

Name:

Company/Service Department

Address: _____

Phone: _____ / _____

Fax: _____ / _____

Order number: 6SE6400-5BA00-0BP0
Date of Issue: 10/03

Should you come across any printing errors when reading this publication, please notify us on this sheet.

Suggestions for improvement are also welcome.

Siemens AG
Automation and Drives Group (A&D)
Standard Drives (SD) Division
Postfach 3269, D-91050 Erlangen
Federal Republic of Germany

© Siemens AG, 2001, 2002, 2003
Subject to change without prior notice

Siemens Aktiengesellschaft

Order No.: 6SE6400-5BA00-0BP0

