



System Multiplexer / Permissive Module

(Cat 2030-MLXxxx-SYSx)



ATTENTION: Hazardous Voltage or other forms of energy could be present.

To avoid serious injury or death:

Prior to beginning the installation and wiring process, ensure that all forms of energy to the installation site have been properly turned OFF and locked out. Follow NFPA 70E requirements.



ATTENTION: This device is a component in a safety system. Do not defeat, tamper with, bypass or alter. Severe injury to personnel could result.

Only qualified service technicians must perform service or maintenance. Resealing of the device is the responsibility of the person or organization performing the service or maintenance.

Specifications

Description	Specification	
Open Style Dimensions H x W x D	4-Port	10.56in x 23in x 6.69in (271.39 x 584.2 x 169.93)
Degree of Protection (By enclosure type designator)	C = NEMA Type 4X	J = NEMA Type 12
<i>Consult local Allen-Bradley distributor for information regarding dimensions of enclosed type Expansion Modules</i>	F = NEMA Type 4	N = OPEN STYLE
	H = IP54	W = IP65
	Input Voltage Rating	
LED Status Indicator Terminal Blocks	24V LED	
Connector Plugs - Wire Size - Torque	#18 -14 AWG	0.8 -2.1 mm ²
	4 - 5 lb-in.	0.5 - .6 Nm
Operating Ambient Temperature	0...+40° C (+32...+104° F)	
Storage Ambient Temperature	-10...+60° C (+14...+140° F)	
Storage Relative Humidity	5...95%, non-condensing	
Weight	4-Port	28 lb (12.7 kg)
Agency Certification	UL, cUL, TUV EN954-1 Category 4, TUV EN60204-1	
Input Frequency, PER1 (7-10)	10 - 200 Hz, 10 - 90% duty cycle	

Overview

The System Multiplexer / Permissive Module will allow a Remote Lockout Station (RLS) to control up to four ElectroGuard® systems simultaneously. If there is a need to control more than four ElectroGuard® systems the System Multiplexer / Permissive Module can be daisy chained. The System Multiplexer / Permissive Module will accept up to six RLS inputs. A maximum of 60 RLSs can be supported by using six 10 port Expansion Modules. The System Multiplexer / Permissive Module is also available with a "Permissive" option. The "Permissive" option allows the machine controlling the process or drive system to bring the machine or process to a predetermined stopping point prior to removal of power by the ElectroGuard® system. Once the ElectroGuard® system isolates the energy the machine control can not re-energize the ElectroGuard®.

Section 1.

Replacement of System Multiplexer / Permissive Module Installed In an Existing Enclosure

To replace an System Multiplexer / Permissive Module that is already installed in an enclosure, perform the following steps:

1. Verify the power to the ElectroGuard® has been turned OFF and locked out.
2. Open the enclosure that contains the System Multiplexer / Permissive Module.
3. Unplug all of the connector plugs attached to the System Multiplexer / Permissive Module. To remove a connector plug, grasp it firmly by its strain relief & pull straight down.

IMPORTANT: Before installing the replacement System Multiplexer / Permissive Module, remove all of the factory supplied connector plugs from the new module. They are not used when replacing a previously installed System Multiplexer / Permissive Module.

4. Loosen, but do not remove, the four bolts attaching the module to the enclosure mounting plate.

- 5A. To remove module mounted vertically -
 - Remove the two upper attachment bolts
 - Lift the module upward to clear the lower two bolts
 - Remove the module from the enclosure

- 5B. To remove module mounted horizontally -
 - Support the module
 - Remove the two right side attachment bolts
 - Slide the module to the right and remove it from the enclosure

- 6A. To Install replacement module vertically -
 - Lift module into enclosure, slide down onto the two lower bolts and hold it in place
 - Insert two upper attachment bolts
 - Torque the module attachment bolts to 50-60 lb-in. (5.6-6.8 Nm)

- 6B. To install replacement module horizontally -
 - Lift module into enclosure, slide it to the left and hold it in place
 - Insert the two right side attachment bolts
 - Torque the module attachment bolts to 50-60 lb-in. (5.6-6.8 Nm)

IMPORTANT: The Control Module and System Multiplexer / Permissive Module connector plugs and ports, with the exclusion of HV connector in the Control Module, are factory keyed. This is done to ensure correct plug installation after maintenance or servicing which may have required the removal of any of the connector plugs. Installing an RLS connector plug into a port with non-matching keying may damage the connector as well as the Control Module or System Multiplexer / Permissive Module port (see Fig. 2 for keying information).

7. Reattach the existing wired connector plugs to their mating keyed connector ports, ensure they are fully inserted into the System Multiplexer / Permissive Module connector ports.
8. Close the enclosure and turn ON the power to the ElectroGuard®.
9. Commission the unit per Chapter 3 (Revision 2030_UM003A_EN_P or later) of the ElectroGuard® User Manual.

Section 2 Installation of an Enclosed System Multiplexer / Permissive Module

To install a factory or customer enclosed System Multiplexer / Permissive Module, perform the following steps:

1. Determine a suitable location for mounting the System Multiplexer / Permissive Module enclosure.
2. Based on the enclosure selected, locate and mark the necessary mounting bolt hole locations on the mounting surface. Drill and tap as needed for mounting bolts suitable for the support of the enclosed System Multiplexer / Permissive Module.


IMPORTANT: Before mounting an enclosed System Multiplexer / Permissive Module and based upon installation requirements, the openings for conduit or cable fittings should be made to the enclosure.

If enclosure is customer supplied, conduit or cable fitting openings should be made before installing the open style System Multiplexer / Permissive Module in the enclosure. This should be done to avoid contaminating the module with fabricating debris.

If enclosure is factory supplied, the System Multiplexer / Permissive Module should be removed from the enclosure, prior to making any openings for conduit or cable fittings, to help avoid module contamination (see Section 1 for instructions on removing the System Multiplexer / Permissive Module from an enclosure).

3. Support the enclosure while aligning it with the mounting bolt holes.
4. Install enclosure mounting bolts and tighten to torque required for mounting bolt size selected.
5. Mount the System Multiplexer / Permissive Module inside the enclosure (see Section 1 for instructions on installing the System Multiplexer / Permissive in an enclosure).
6. Select which System Multiplexer / Permissive Module connector plugs will require wiring (see Table 1 and Figures 1 and 3).

**Figure 1
Connectors in
4 Port System Multiplexer /
Permissive Module**

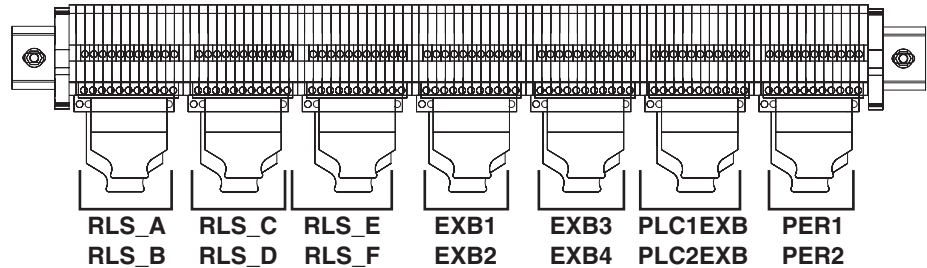


**Table 1
System Multiplexer / Permissive Module Connectors**

Connector	Description	Function
RLS S#_A thru RLS S#_F	System Multiplexer / Permissive Module Remote Lockout Station	Connects Remote Lockout Station to System Multiplexer / Permissive Module.
EXB1 THRU EXB4	System Multiplexer / Permissive Module Connectors to ElectroGuard® Systems (See Section 3)	Interconnects the System Multiplexer / Permissive Module to the Control Modules in ElectroGuard® Systems, or to series connected System Multiplexer / Permissive Module.
PLC1EXB	Remote Lockout Station status to customer remote PLC (See Section 5)	Connects RLS auxiliary signals to Remote PLC or optional Remote I/O or Communication Modules.
PER1	Permissive inputs from the PLC and safety relay output status	The permissive input allows the machine controlling the process or drive system to bring the machine or process to a predetermined stopping point prior to removal of power by the ElectroGuard® system. Output terminals provide the status of safety relays SR1 and SR7.

The connectors at System Multiplexer / Permissive Module are "Keyed" in order to uniquely identify each connector, in the event they are removed and re-inserted (See Figure 2).

**Figure 2
Keying of RLS Connectors at System Multiplexer / Permissive Module**

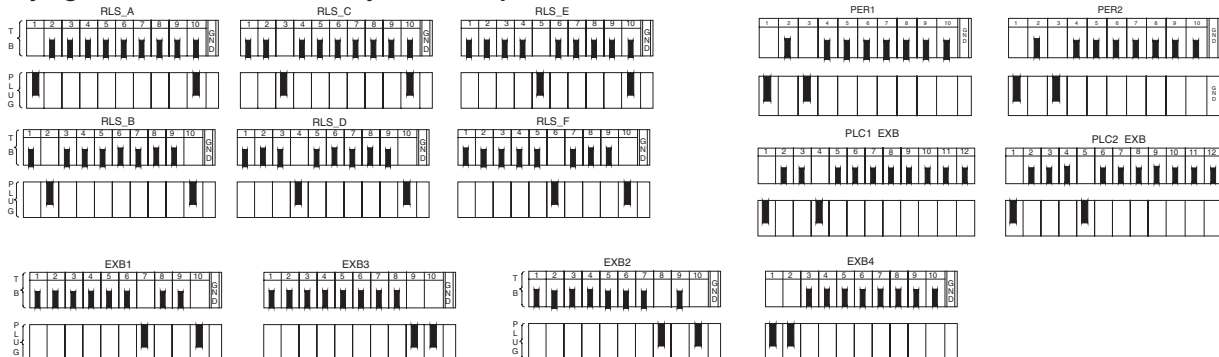

7. Follow the specified System Multiplexer / Permissive Module Connector's section (Table 1) to wire connectors.

Section 2 (Cont'd)

Installation of an System Multiplexer / Permissive Module

System Multiplexer / Permissive Module Cable Specifications

- IMPORTANT:**
- Cable must have copper conductors only.
 - Cable with 600V insulation is required.
 - Oil resistant cable is recommended.
 - Individual conductors within the cable should be color-coded or otherwise clearly marked (see Table 1).
 - Cable must have a shield with a drain wire.
 - Type of wire for EXB_ to RLS connector or similar:
 - ALPHA wire "XTRA-GUARD[®]2"
 - Part No. 25450/9 for #14 AWG, 0.64" O.D.
 - Part No. 25440/9 for #16 AWG, 0.61" O.D.
 - Part No. 25430/9 for #18 AWG, 0.55" O.D.
 - Type of wire for PLC1EXB connectors or similar:
 - ALPHA wire "XTRA-GUARD[®]2"
 - Part No. 25450/25 for #14 AWG, 0.98" O.D.
 - Part No. 25440/25 for #16 AWG, 0.93" O.D.
 - Part No. 25430/25 for #18 AWG, 0.80" O.D.

IMPORTANT: The maximum total cable length values shown in Table 2 must not be exceeded, as this may result in unreliable operation of the ElectroGuard[®]. Consider using an Expansion Module if cable lengths greater than those shown are needed (See APPENDIX C of the Manual for wiring examples).

Table 2
Maximum Allowable Cable Lengths for RLS Connected to System Multiplexer / Permissive Module

In North America		Outside of North America	
Wire Gauge	Maximum Total Cable Length	mm ²	Maximum Total Cable Length
14 AWG	20,000 ft	2.1	6,100 m
16 AWG	12,500 ft	1.3	3,800 m
18 AWG	7,750 ft	0.8	2,360 m

The EXB1 connector provides control power and allows the interface to the System Multiplexer / Permissive Module from the Control Module in the ElectroGuard[®] Power Panel. This is accomplished by wiring from the EXB1 connector at the System Multiplexer / Permissive Module to any one of the RLS ports on the Control Module. The EXB2 thru EXB4 connectors allow the interface of the System Multiplexer / Permissive Module to additional ElectroGuard[®] Power Panels. This is accomplished by wiring from the EXB2 thru EXB4 connectors at the System Multiplexer / Permissive Module to any one of the RLS ports on the Control Module in the other ElectroGuard[®] Power Panels. See Section 3.

The EXB2 thru EXB4 connectors also allow for the series connection of up to three System Multiplexer / Permissive Modules. This is accomplished by wiring from the EXB2 thru EXB4 connectors at the System Multiplexer / Permissive Module to the RLS_A connector of the series added System Multiplexer Module. See Figure 7, Section 3.

Table 3
Maximum Cable Length for System Multiplexer / Permissive Module to Control Module

In North America AWG	Outside of North America (mm ²)	Maximum Distance from Control Module	
14	2.1	1,200 ft	366 m
16	1.3	750 ft	229 m
18	0.8	475 ft	145 m

The cable lengths in Table 2 and Table 3 represent the total wire impedance allowed to help ensure proper operation of the safety monitoring relays used in the isolation system. Consult Rockwell Automation for cable lengths when series connecting System Multiplexer / Permissive Modules.

NOTE: When series connecting the System Multiplexer / Permissive Modules, two maximum cable lengths must be taken into consideration. One cable length is the maximum distance from the Control Module to the last series-connected System Multiplexer / Permissive Module. The other cable length is the RLS circuit length. See Appendix C of the Electro-Guard[®] User Manual regarding length calculation, conductor sizing and installation scenarios.

IMPORTANT: The System Multiplexer / Permissive Module can support a maximum of 60 RLSs by using six 10-port Expansion Modules.

IMPORTANT: Connector plugs provided on ElectroGuard[®] Control Modules and System Multiplexer / Permissive Modules are factory shipped with two jumper wires installed (see Figure 4). These two jumper wires must be removed and discarded when wiring is performed to connect a Remote Lockout Station to the connector plug. Failure to remove the two jumper wires prevents proper operation of the RLS "System Isolated" indicator light.

IMPORTANT: When routing the cables from the Remote Lockout Stations to the System Multiplexer / Permissive Module, care must be taken to protect the cables from physical damage and cable must be run in conduit when outside enclosed.

IMPORTANT: Cables to the System Multiplexer / Permissive Module must not run adjacent to power conductors or be run in a line voltage wireway.

Section 2 (Cont'd)

Installation of an System Multiplexer / Permissive Module

ATTENTION: Hazardous voltage may be present on the load terminals of the ElectroGuard® Power Panel when the System Isolated Light is illuminated under the following conditions:

- The System Multiplexer is in a Master - Slave (series) configuration.
- RLS(s) are connected to both the master and Slave System Multiplexers.

In this configuration clearly identify the power panel(s) that are being controlled by each RLS.

IMPORTANT: The EXB1 connector must be connected to the Control Module in one of ElectroGuard® Systems connected to the System Multiplexer / Permissive Module. The System Multiplexer / Permissive Module derives its control power through the EXB1 connector.

IMPORTANT: The System Multiplexer / Permissive Module can accommodate up to a maximum of 6 RLSs. If less than the maximum number of RLSs is needed for the installation, the unused RLS connectors must be jumpered out. The jumpers are necessary to simulate an RLS in the ON position. For example, if RLS S#_F is not needed:

- 1) Remove RLS Plug, firmly grip the strain relief pad holding the RLS S#_F.
- 2) Remove the connector by pulling it away from the System Multiplexer / Permissive Module.
- 3) Once the jumpers are installed, re-insert the connector plug into the System Multiplexer / Permissive Module.

Select the RLS port and connector plug on the System Multiplexer / Permissive Module to be dedicated to the RLS being installed. Remove these plugs by firmly grasping their strain relief tabs and pulling straight from the port. Wire each terminal block to its corresponding plug using appropriate cable (see Figure 3).

Figure 3
Remote Lockout Station Wiring at System Multiplexer / Permissive Module


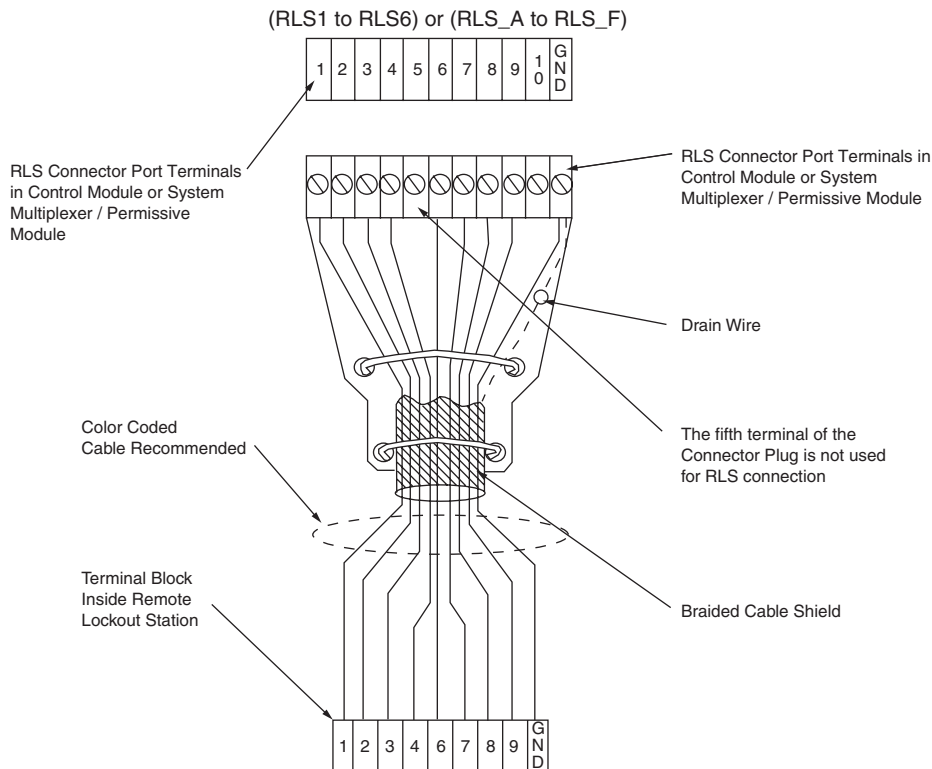


Figure 4
RLS Connector Plug Jumper Wire Locations



Section 3

Wiring the System Multiplexer / Permissive Module to the Control Module (EXB1 Connectors)

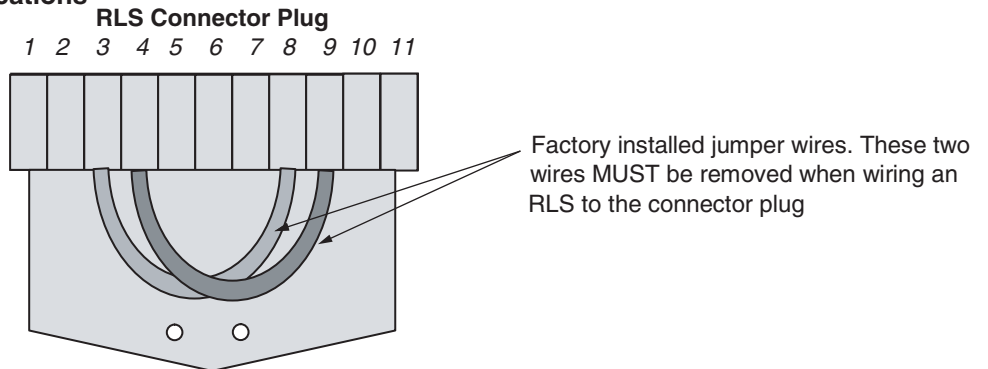

ATTENTION: Hazardous voltage may be present on the load terminals of the ElectroGuard® Power Panel when the System Isolated Light is illuminated if the jumper wires (see Figure 5) are not removed when multiple Power Panels are connected. The EXB2 thru EXB4 connector plugs provided on the System Multiplexer / Permissive Module are factory shipped with two jumper wires installed (see Figure 5). These two jumper wires must be removed and discarded when wiring is performed to connect an ElectroGuard® Power Panel. Failure to remove the two jumper wires will cause the System Multiplexer / Permissive Module not to receive the proper system isolated status signals from the Power Panels and the System Isolated light may illuminate when all power Panels have not gone to the isolated state.


IMPORTANT: The EXB1 connector must be connected to the Control Module in one of ElectroGuard® Systems connected to the System Multiplexer / Permissive Module. The System Multiplexer / Permissive Module derives its control power through the EXB1 connector.

Figure 5
EXB2-4 Connector Pug Jumper Wire Locations



1. Select wire size to connect the System Multiplexer / Permissive Module to the Control Module or to series connect an System Multiplexer Module based upon Table 3.
2. Install the interconnecting wiring between the EXB connector plug on the System Multiplexer / Permissive Module and the RLS connector plug selected for connection to the Control Module (see Figures 6). When series connecting the System Multiplexer Module, install the interconnecting wiring between the EXB2, 3 or 4 connector plug to the RLS_A connector plug on the series connected System Multiplexer Module.

Figure 6A
Wiring the System Multiplexer / Permissive Module
EXB1 Connector Plug to the Control Module

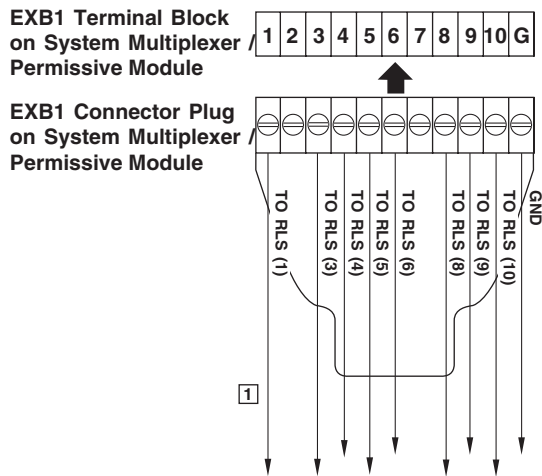

1 Indicates Connection Point on Connection Plug



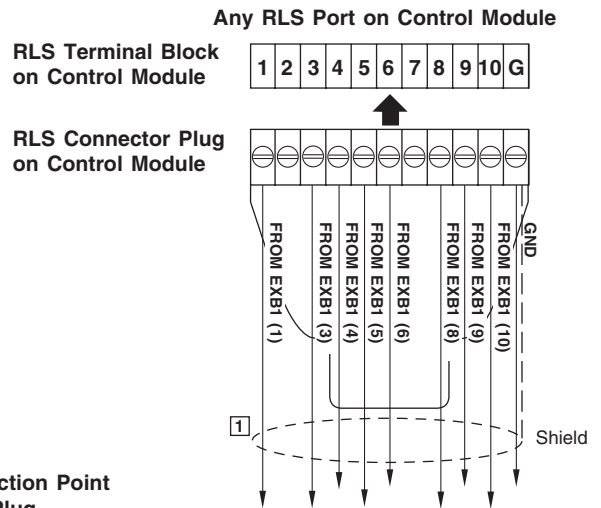


Figure 6B
Wiring the System Multiplexer / Permissive Module
EXB2 thru EXB4 Connector Plug to the Control Module

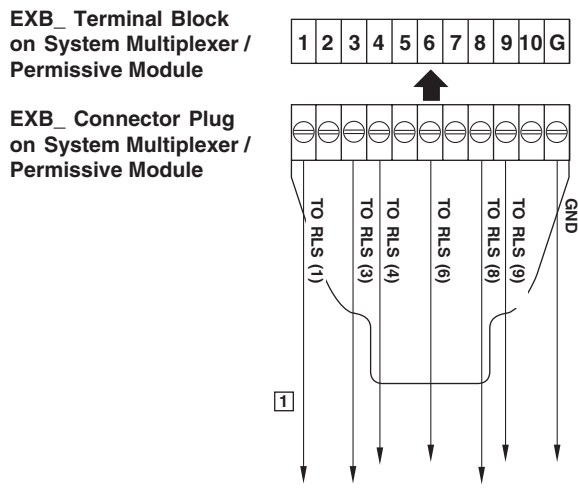


1 Indicates Connection Point on Connection Plug

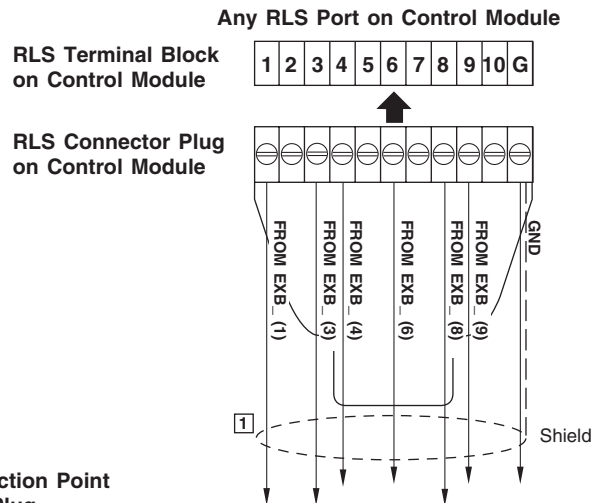


Section 3 (Cont'd)

Wiring the Series Connected System Multiplexer Module to the System Multiplexer / Permissive Module (EXB2-4 Connector)

Figure 7
Series Wiring the System Multiplexer Module

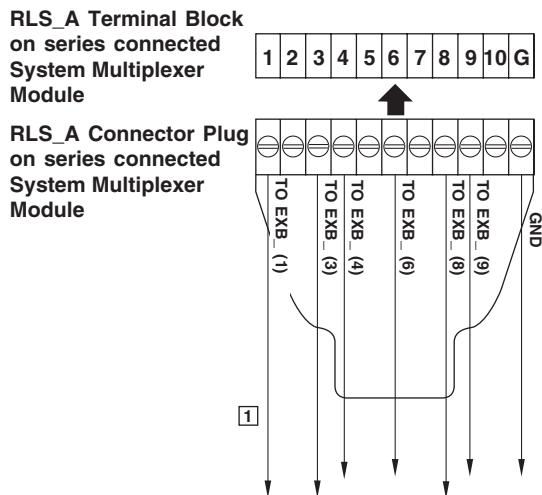

EXB2-4 terminal Block on System Multiplexer / Permissive Module

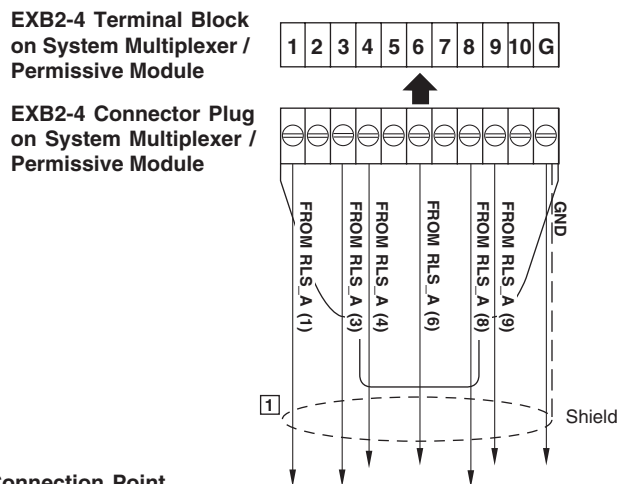

1 Indicates Connection Point on Connection Plug

3. Insert the RLS connector plug (wired to the end of the EXB interface cable) into the selected RLS port of the Control Module. Do not connect the EXB plug to the new System Multiplexer / Permissive Module until successfully completing the following continuity check of the cable.

4. Check cable continuity at connection points on the EXB connector plug as listed in Table 5.

- Note all RLS are turned ON except the one that is switched ON or OFF for testing.
- If continuity check is unsatisfactory, review wiring done in step 2 for errors and then re-check continuity.

Table 5
EXB Cable Continuity
Check Table

Remote Lockout Station Status	EXB Connector Plug Connection Point Numbers	Continuity
ON	1 & 6	Yes ❶
ON	3 & 8	Yes
ON	4 & 9	Yes
ON	5 & 10	No
ON	10 & GND	Yes
OFF	1 & 6	Yes ❷
OFF	3 & 8	No
OFF	4 & 9	No
OFF	5 & 10	No
OFF	10 & GND	Yes

- ❶ The "ML" pilot light in the Control Module has an impedance of about 60 to 70 Ohms.
- ❷ With 23-85A Control Module, check with positive meter lead (+) on connection point 5 and negative meter lead (-) on connection point 10, the impedance should be about 110K Ohms. With 110-1200A Control Module, open fuse covers on 14FU & 16FU fuse holders before checking continuity. Impedance should be about 900K Ohms.
- ❸ The "System Isolated" light on the front of the RLS has an impedance of about 2K Ohms.

5. When continuity check is successfully completed, insert the EXB connector plug into the EXB port on the new System Multiplexer / Permissive Module. If RLS status output signals are not required, close and secure the cover of the System Multiplexer / Permissive Module enclosure.

IMPORTANT: If RLS status signals are required, proceed to Section 5 for instructions on wiring of the PLC1EXB connector plug on the System Multiplexer / Permissive Module before performing Step 6. If using the Permissive option, proceed to Section 4 for instructions on wiring the System Multiplexer / Permissive Module to the PLC before performing Step 6.

6. Commission the unit per Chapter 3 of the ElectroGuard User Manual Revision 2030_UM003A_EN_P or later.

Section 4 Wiring the Permissive Option to the PLC (PER1)



ATTENTION: Hazardous Voltage; Voltage from sources other than the ElectroGuard® may be present on the PER1.

Sequence of events for System Multiplexer / Permissive Module option:

1. The PLC outputs are connected to the System Multiplexer / Permissive Module terminals PER1 (7) and (8) and PER1 (9) and (10), see Figure 8. The outputs must be pulsed at a rate of 10 - 200Hz with a duty cycle of 10 - 90%. This signal is used by the System Multiplexer / Permissive Module as a "heart beat" which holds the output of the System Multiplexer / permissive Module in the "ON" or closed state. Thus holding the ElectroGuard® system in the "ON" or Non-isolated state.
2. When a RLS is turned OFF, a signal is transmitted to the control system via a PLC connection on the RLS auxiliary contacts. Note that the outputs of the System Multiplexer / Permissive Module remain in the "ON" or closed state.
3. When the customer's control system is at a predetermined stopping point, the control system, via the PLC outputs are turned to an off state (no heart beat) and the outputs of the System Multiplexer / Permissive Module are then switched to the "OFF" or open state.
4. The system isolation function is then initiated on all of the ElectroGuard® systems simultaneously.
5. When all of the ElectroGuard® systems are in the isolated state, the System Multiplexer / Permissive Module sends the "Isolated" signal to the RLS and the RLS System Isolated pilot light on the RLS will be illuminated. The RLS now has control of the ElectroGuard® and the energy can only be restored to the machine or process by switching all of the RLSs connected to the multiplexers to the "on" state.

The output status of safety relay SR1 can be monitored on connector plug PER1 terminals 1 and 2 (see Figure 9). When the System Multiplexer / Permissive Module is instructing the ElectroGuard® systems to "Isolate", a set of contacts will open between terminals PER1 (1) and (2).

The output status of safety relay SR7 can be monitored on connector plug PER1 terminals 3 and 4 (see Figure 9). When the PLC is allowing the ElectroGuard® systems to "Isolate", a set of contacts will close between terminals PER1 (3) and (4).

Figure 8
Wiring the System Multiplexer / Permissive Module to the PLC


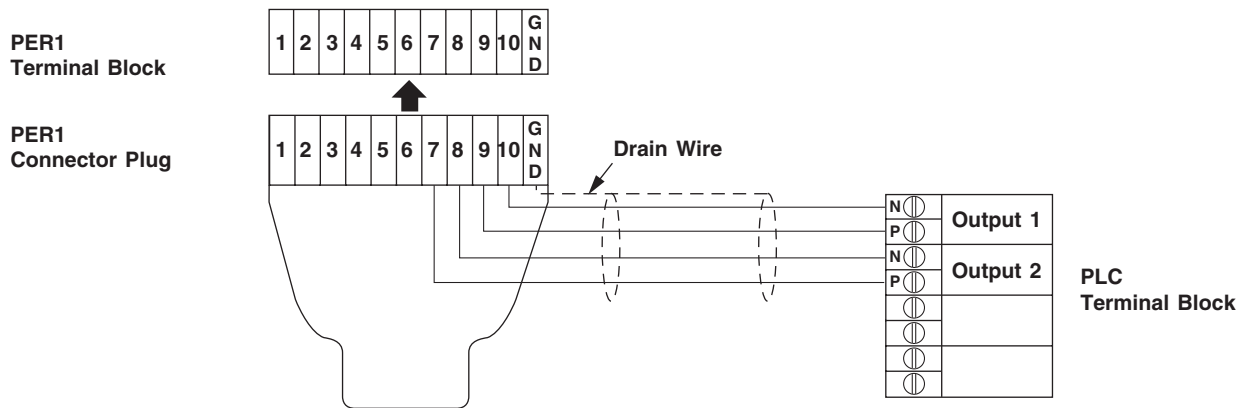


Figure 9
Wiring the System Multiplexer / Permissive Module to the PLC

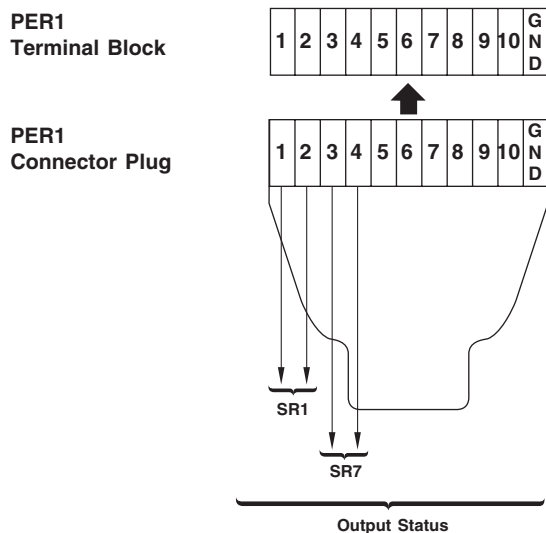

Section 5. Wiring for the RLS Status Signals from PLC1EXB Connector

The System Multiplexer / Permissive Modules can provide status signals for each Remote Lockout Station connected to them. These signals are provided via an auxiliary contact within the RLS. When the RLS is in the OFF position, the auxiliary contact will be open. Conversely, when the RLS is in the ON position, the auxiliary contact will be closed. These status signals can be wired to a customer supplied remote PLC, or to the optional Remote I/O or communication modules installed in the ElectroGuard power panel.

See Figure 10 for wiring of the PLC1EXB connector in the System Multiplexer / Permissive Module to provide RLS status output signals.

Figure 10
PLC1EXB Connections at System Multiplexer / System Module

