

mitsubishi

Mitsubishi Industrial Robot









CR1DA/CR2DA/CR3D Controller

INSTRUCTION MANUAL

Controller setup, basic operation, and maintenance

Safety Precautions

Always read the following precautions and the separate "Safety Manual" before starting use of the robot to learn the required measures to be taken.

-  **CAUTION** All teaching work must be carried out by an operator who has received special training. (This also applies to maintenance work with the power source turned ON.)
Enforcement of safety training
-  **CAUTION** For teaching work, prepare a work plan related to the methods and procedures of operating the robot, and to the measures to be taken when an error occurs or when restarting. Carry out work following this plan. (This also applies to maintenance work with the power source turned ON.)
Preparation of work plan
-  **WARNING** Prepare a device that allows operation to be stopped immediately during teaching work. (This also applies to maintenance work with the power source turned ON.)
Setting of emergency stop switch
-  **CAUTION** During teaching work, place a sign indicating that teaching work is in progress on the start switch, etc. (This also applies to maintenance work with the power source turned ON.)
Indication of teaching work in progress
-  **WARNING** Provide a fence or enclosure during operation to prevent contact of the operator and robot.
Installation of safety fence
-  **CAUTION** Establish a set signaling method to the related operators for starting work, and follow this method.
Signaling of operation start
-  **CAUTION** As a principle turn the power OFF during maintenance work. Place a sign indicating that maintenance work is in progress on the start switch, etc.
Indication of maintenance work in progress
-  **CAUTION** Before starting work, inspect the robot, emergency stop switch and other related devices, etc., and confirm that there are no errors.
Inspection before starting work

The points of the precautions given in the separate "Safety Manual" are given below. Refer to the actual "Safety Manual" for details.

-  **CAUTION** Use the robot within the environment given in the specifications. Failure to do so could lead to a drop or reliability or faults. (Temperature, humidity, atmosphere, noise environment, etc.)
-  **CAUTION** Transport the robot with the designated transportation posture. Transporting the robot in a non-designated posture could lead to personal injuries or faults from dropping.
-  **CAUTION** Always use the robot installed on a secure table. Use in an instable posture could lead to positional deviation and vibration.
-  **CAUTION** Wire the cable as far away from noise sources as possible. If placed near a noise source, positional deviation or malfunction could occur.
-  **CAUTION** Do not apply excessive force on the connector or excessively bend the cable. Failure to observe this could lead to contact defects or wire breakage.
-  **CAUTION** Make sure that the workpiece weight, including the hand, does not exceed the rated load or tolerable torque. Exceeding these values could lead to alarms or faults.
-  **WARNING** Securely install the hand and tool, and securely grasp the workpiece. Failure to observe this could lead to personal injuries or damage if the object comes off or flies off during operation.
-  **WARNING** Securely ground the robot and controller. Failure to observe this could lead to malfunctioning by noise or to electric shock accidents.
-  **CAUTION** Indicate the operation state during robot operation. Failure to indicate the state could lead to operators approaching the robot or to incorrect operation.
-  **WARNING** When carrying out teaching work in the robot's movement range, always secure the priority right for the robot control. Failure to observe this could lead to personal injuries or damage if the robot is started with external commands.
-  **CAUTION** Keep the jog speed as low as possible, and always watch the robot. Failure to do so could lead to interference with the workpiece or peripheral devices.
-  **CAUTION** After editing the program, always confirm the operation with step operation before starting automatic operation. Failure to do so could lead to interference with peripheral devices because of programming mistakes, etc.
-  **CAUTION** Make sure that if the safety fence entrance door is opened during automatic operation, the door is locked or that the robot will automatically stop. Failure to do so could lead to personal injuries.
-  **CAUTION** Never carry out modifications based on personal judgments, or use non-designated maintenance parts. Failure to observe this could lead to faults or failures.
-  **WARNING** When the robot arm has to be moved by hand from an external area, do not place hands or fingers in the openings. Failure to observe this could lead to hands or fingers catching depending on the posture.

⚠ CAUTION Do not stop the robot or apply emergency stop by turning the robot controller's main power OFF. If the robot controller main power is turned OFF during automatic operation, the robot accuracy could be adversely affected. Moreover, it may interfere with the peripheral device by drop or move by inertia of the arm.


⚠ CAUTION Do not turn off the main power to the robot controller while rewriting the internal information of the robot controller such as the program or parameters. If the main power to the robot controller is turned off while in automatic operation or rewriting the program or parameters, the internal information of the robot controller may be damaged.

⚠ CAUTION Use the network equipments (personal computer, USB hub, LAN hub, etc) confirmed by manufacturer. The thing unsuitable for the FA environment (related with conformity, temperature or noise) exists in the equipments connected to USB, RS-232 or LAN. When using network equipment, measures against the noise, such as measures against EMI and the addition of the ferrite core, may be necessary. Please fully confirm the operation by customer. Guarantee and maintenance of the equipment on the market (usual office automation equipment) cannot be performed.

C. Notes of the basic component are shown.

*SD series: CR1DA-700 series

⚠ CAUTION Please install the earth leakage breaker in the primary side supply power supply of the controller because of leakage protection.

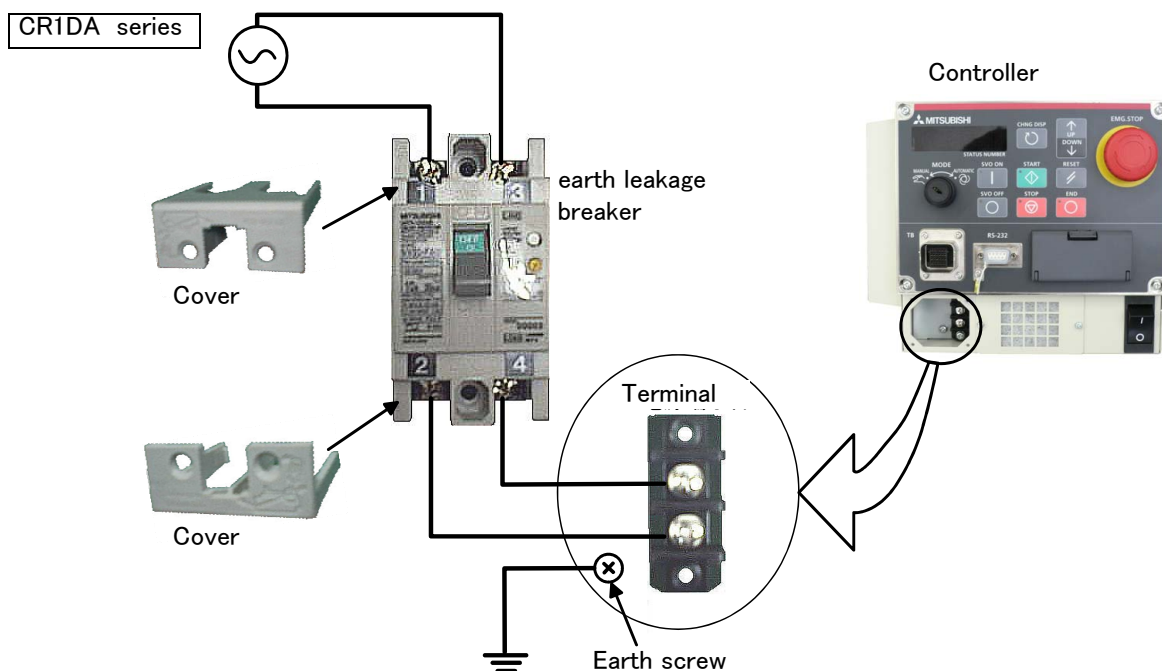

Revision history

Date of print	Specifications No.	Details of revisions
2008-05-09	BFP-A8660	• First print
2008-06-25	BFP-A8660-A	• The electric specification of magnet contactor control (AXMC) was changed • Change the power cable connection method (CR1D-700).
2008-11-18	BFP-A8660-B	• The Sink/Source setting method of the pneumatic hand interface was added. • Table 2-1: Standard configuration was changed. The filter was added. (All the series controllers) The line noise filter and Knob locking device were added. (CR2D and CR3D series controller)
2009-04-24	BFP-A8660-C	• The contact capacity of the emergency stop connector was added. • The example of wiring of the emergency stop was added. • The installation method of the interface was corrected. • The installation method of the memory cassette was corrected. • The emergency stop release method of T/B was added. • The enabling switch explanation of T/B was corrected. • The cursor was added to the serial number input screen. • It added that the sample program is the example in horizontal multiple-jointed type robot.
2009-06-08	BFP-A8660-D	• Expression was corrected. (2.3.4 Connecting the external emergency stop, 3.2 Installing and removing the Option Card, 3.3 Installing the extension memory cassette)
2009-09-11	BFP-A8660-E	• The examples of safety measures (Wiring example 3 ~ 5) were corrected.
2009-10-23	BFP-A8660-F	• The EC Declaration of Conformity was changed. (Correspond to the EMC directive; 2006/42/EC)
2009-12-24	BFP-A8660-G	• The ferrite core and the line noise filter quantity were divided by CE / non-CE specification • The wiring example 3 of safety measures was deleted.(same as wiring example 4)
2010-02-05	BFP-A8660-H	• The explanation of CR1DA-700 series was added.
2010-03-01	BFP-A8660-I	• The "power switch" of CR2 controller was corrected to the "earth leakage breaker". (Error in writing) • CE specification of the CR1DA controller was added.
2010-07-04	BFP-A8660-J	• The type of controller was changed. (CR1D to CR1DA, CR2D to CR2DA)
2011-01-12	BFP-A8660-K	• The installation position of the SINK/SOURCE setting pin of pneumatic hand interface was changed. (CR2DA controller)
2011-02-02	BFP-A8660-L	• The rear cover of the CR1DA controller was made unnecessary.
2011-05-09	BFP-A8660-M	• Fuse LM10 was added to the attachments of the CR1DA controller.
2011-07-01	BFP-A8660-N	• The note about the connection of the emergency stop was added.
2012-07-03	BFP-A8660-P	• The note about the connection of the emergency stop was added. • The notes about frequent installation and removal of TB and the dummy connector were added.

■ Introduction

Thank you for purchasing the Mitsubishi industrial robot.

This instruction manual explains the unpacking methods, installation, basic operation, maintenance and inspection of the controller.

The optional equipments and power supply voltage are different according to connecting robot type. Refer to separate "Standard Specifications Manual" for detail.

Always read through this manual before starting use to ensure correct usage of the robot.

The information contained in this document has been written to be accurate as much as possible. Please interpret that items not described in this document "cannot be performed."

Installation of the emergency stop switch

To be able to stop the robot immediately at the time of the abnormalities because of safety, please install the emergency stop switch in the position which is certainly easy to operate it, and connect with the controller. Refer to the [Page 15, "2.2.5 Connecting the external emergency stop"](#) for the connection method.

And, the connection method of the door switch or the enabling device is also indicated here. Please use it together with the emergency stop switch.

Synchronous connection of the addition axis servo power supply

It is building the circuit so that the output point of contact (the contactor control output for addition axes: AXMC) installed in the drive unit may be used in use of the addition axis function and the power supply of the servo amplifier for addition axes may be shut down by opening of this output, The servo ON/OFF state of the addition axis can be synchronized with the servo ON/OFF state of the robot arm. With reference to [Page 24, "2.2.7 Magnet contactor control connector output \(AXMC\) for addition axes"](#), I ask you to have synchronous connection made.

Notice

- *ONLY QUALIFIED SERVICE PERSONNEL MAY INSTALL OR SERVICE THE ROBOT SYSTEM.
- *ANY PERSON WHO PROGRAM, TEACHES, OPERATE, MAINTENANCE OR REPAIRS THE ROBOT SYSTEM IS TRAINED AND DEMONSTRATES COMPETENCE TO SAFELY PERFORM THE ASSIGNED TASK.
- *ENSURE COMPLIANCE WITH ALL LOCAL AND NATIONAL SAFETY AND ELECTRICAL CODES FOR THE INSTALLATION AND OPERATION OF THE ROBOT SYSTEM.

- No part of this manual may be reproduced by any means or in any form, without prior consent from Mitsubishi.
 - The details of this manual are subject to change without notice.
 - The information contained in this document has been written to be accurate as much as possible. Please interpret that items not described in this document "cannot be performed." or "alarm may occur".
- Please contact your nearest dealer if you find any doubtful, wrong or skipped point.
- This specifications is original.

Contents

	Page
1 Before starting use	1-1
1.1 Using the instruction manuals	1-1
1.1.1 The details of each instruction manuals	1-1
1.1.2 Symbols used in instruction manual	1-2
1.2 Safety Precautions	1-3
1.2.1 Precautions given in the separate Safety Manual	1-4
2 Unpacking to installation	2-6
2.1 Confirming the products	2-6
2.2 Installation	2-8
2.2.1 Unpacking procedures	2-8
2.2.2 Transportation procedures	2-8
(1) CR1DA-700 series	2-8
(2) CR2DA-700 series	2-8
(3) CR3D-700 series	2-8
2.2.3 Installation procedures	2-9
(1) CR1DA-700 series	2-9
(2) CR2DA-700 series	2-10
(3) CR3D-700 series	2-11
2.2.4 Connecting the power cable and grounding cable	2-12
(1) CR1DA-700 series	2-12
(2) CR2DA-700 series	2-13
(3) CR3D-700 series	2-14
2.2.5 Connecting the external emergency stop	2-15
2.2.6 Examples of safety measures	2-19
(1) External emergency stop connection [supplementary explanation]	2-23
2.2.7 Magnet contactor control connector output (AXMC) for addition axes	2-24
2.2.8 Connecting to the robot arm	2-24
2.3 Setting the origin	2-24
2.4 Confirming the operation	2-24
3 Installing the option devices	3-25
3.1 Installing the pneumatic hand interface	3-25
3.1.1 Installing	3-25
3.1.2 SINK/SOURCE setting	3-27
3.2 Installing and removing the Option Card	3-29
3.3 Installing the extension memory cassette	3-30
4 Basic operations	4-32
4.1 Handling the controller	4-33
4.1.1 Functions of each key	4-33
(1) Padlock specification(CR1DA-700)	4-35
4.2 Handling the T/B	4-38
4.2.1 Installing and removing the T/B	4-38
(1) Installing the T/B	4-38
(2) Removing the T/B	4-38
4.2.2 Functions of each key	4-39
4.3 Turning the power ON and OFF	4-40
4.3.1 Turning the control power ON	4-40
4.3.2 Input the serial number	4-42
4.3.3 Shutting OFF the control power	4-44
4.4 Turning the servo power ON/OFF	4-44
4.4.1 Turning the servo power ON (servo ON)	4-44
4.4.2 Shutting OFF the servo power (servo OFF)	4-44
4.5 Jog operation	4-45
4.6 Opening and closing the hand	4-45

Contents

	Page
4.7 Programming	4-46
(1) Creation procedures	4-46
(2) Robot work	4-46
4.7.1 Creating the program	4-47
(1) Deciding the operation order	4-47
(2) Deciding the operation position name	4-48
(3) Describing and creating the program	4-49
(4) Confirming the program	4-55
(5) Correcting the program	4-56
(6) Saving the program	4-59
(7) Start automatic operation.	4-60
5 Maintenance and Inspection	5-62
5.1 Maintenance and inspection interval	5-62
5.2 Inspection items	5-63
5.2.1 Daily inspection items	5-63
5.2.2 Periodic inspections	5-63
5.3 Maintenance and inspection procedures	5-64
5.3.1 Replacing the battery	5-65
(1) The battery exchange method of the controller	5-66
5.3.2 The check of the filter, cleaning, exchange	5-67
(1) CR1DA-700	5-67
(2) CR2DA-700	5-68
(3) CR3D-700	5-69
5.4 Maintenance parts	5-70

1 Before starting use

This chapter explains the details and usage methods of the instruction manuals, the basic terminology and the safety precautions.

1.1 Using the instruction manuals

1.1.1 The details of each instruction manuals

The contents and purposes of the documents enclosed with this product are shown below. Use these documents according to the application.




For special specifications, a separate instruction manual describing the special section may be enclosed.

Safety Manual	Explains the common precautions and safety measures to be taken for robot handling, system design and manufacture to ensure safety of the operators involved with the robot.
Standard Specifications or special Specifications	Explains the product's standard specifications, factory-set special specifications, option configuration and maintenance parts, etc. Precautions for safety and technology, when incorporating the robot, are also explained.
Robot Arm Setup & Maintenance	Explains the procedures required to operate the robot arm (unpacking, transportation, installation, confirmation of operation), and the maintenance and inspection procedures.
Controller Setup, Basic Operation and Maintenance	Explains the procedures required to operate the controller (unpacking, transportation, installation, confirmation of operation), basic operation from creating the program to automatic operation, and the maintenance and inspection procedures.
Detailed Explanation of Functions and Operations	Explains details on the functions and operations such as each function and operation, commands used in the program, connection with the external input/output device, and parameters, etc.
Troubleshooting	Explains the causes and remedies to be taken when an error occurs. Explanations are given for each error No.
Additional axis function	Explains the specifications, functions and operations of the additional axis control.
Tracking Function Manual	Explains the control function and specifications of conveyor tracking.

1.1.2 Symbols used in instruction manual

The symbols and expressions shown in [Table 1-1](#) are used throughout this instruction manual. Learn the meaning of these symbols before reading this instruction manual.

Table 1-1 : Symbols in instruction manual

Terminology	Item/Symbol	Meaning
Item	The "Robot controller" or the "Controller"	Indicates the controller which controls the robot arm. Indicates the box which arranged control parts, such as robot CPU, servo amplifier, and the safety circuit.
Symbol	 DANGER	Precaution indicating cases where there is a risk of operator fatality or serious injury if handling is mistaken. Always observe these precautions to safely use the robot.
	 WARNING	Precaution indicating cases where the operator could be subject to fatalities or serious injuries if handling is mistaken. Always observe these precautions to safely use the robot.
	 CAUTION	Precaution indicating cases where operator could be subject to injury or physical damage could occur if handling is mistaken. Always observe these precautions to safely use the robot.
	[JOG]	If a word is enclosed in brackets or a box in the text, this refers to a key on the teaching pendant.
	[RESET] + [EXE] (A) (B)	This indicates to press the (B) key while holding down the (A) key. In this example, the [RESET] key is pressed while holding down the [+EXE] key.
	T/B	This indicates the teaching pendant.
	O/P	This indicates the operating panel on the front of the controller.

1.2 Safety Precautions

Always read the following precautions and the separate "Safety Manual" before starting use of the robot to learn the required measures to be taken.

CAUTION

All teaching work must be carried out by an operator who has received special training. (This also applies to maintenance work with the power source turned ON.)
Enforcement of safety training

CAUTION

For teaching work, prepare a work plan related to the methods and procedures of operating the robot, and to the measures to be taken when an error occurs or when restarting. Carry out work following this plan. (This also applies to maintenance work with the power source turned ON.)
Preparation of work plan

WARNING

Prepare a device that allows operation to be stopped immediately during teaching work. (This also applies to maintenance work with the power source turned ON.)
Setting of emergency stop switch

CAUTION

During teaching work, place a sign indicating that teaching work is in progress on the start switch, etc. (This also applies to maintenance work with the power source turned ON.)
Indication of teaching work in progress

DANGER

Provide a fence or enclosure during operation to prevent contact of the operator and robot.
Installation of safety fence

CAUTION

Establish a set signaling method to the related operators for starting work, and follow this method.
Signaling of operation start

CAUTION

As a principle turn the power OFF during maintenance work. Place a sign indicating that maintenance work is in progress on the start switch, etc.
Indication of maintenance work in progress

CAUTION

Before starting work, inspect the robot, emergency stop switch and other related devices, etc., and confirm that there are no errors.
Inspection before starting work

1.2.1 Precautions given in the separate Safety Manual

The points of the precautions given in the separate "Safety Manual" are given below.

Refer to the actual "Safety Manual" for details.

DANGER

If the automatic operation of the robot is operated by two or more control equipment, design the right management of operation of each equipment of the customer.

CAUTION

Use the robot within the environment given in the specifications. Failure to do so could lead to a drop or reliability or faults. (Temperature, humidity, atmosphere, noise environment, etc.)

CAUTION

Transport the robot with the designated transportation posture. Transporting the robot in a non-designated posture could lead to personal injuries or faults from dropping.

CAUTION

Always use the robot installed on a secure table. Use in an instable posture could lead to positional deviation and vibration.

CAUTION

Wire the cable as far away from noise sources as possible. If placed near a noise source, positional deviation or malfunction could occur.

CAUTION

Do not apply excessive force on the connector or excessively bend the cable. Failure to observe this could lead to contact defects or wire breakage.

CAUTION

Make sure that the workpiece weight, including the hand, does not exceed the rated load or tolerable torque. Exceeding these values could lead to alarms or faults.

WARNING

Securely install the hand and tool, and securely grasp the workpiece. Failure to observe this could lead to personal injuries or damage if the object comes off or flies off during operation.

WARNING

Securely ground the robot and controller. Failure to observe this could lead to malfunctioning by noise or to electric shock accidents.

CAUTION

Indicate the operation state during robot operation. Failure to indicate the state could lead to operators approaching the robot or to incorrect operation.

WARNING

When carrying out teaching work in the robot's movement range, always secure the priority right for the robot control. Failure to observe this could lead to personal injuries or damage if the robot is started with external commands.

CAUTION

Keep the jog speed as low as possible, and always watch the robot. Failure to do so could lead to interference with the workpiece or peripheral devices.

CAUTION

After editing the program, always confirm the operation with step operation before starting automatic operation. Failure to do so could lead to interference with peripheral devices because of programming mistakes, etc.
Make sure that if the safety fence entrance door is opened during automatic operation, the door is locked or that the robot will automatically stop. Failure to do so could lead to personal injuries.

CAUTION

Never carry out modifications based on personal judgments, or use non-designated maintenance parts.
Failure to observe this could lead to faults or failures.

WARNING

When the robot arm has to be moved by hand from an external area, do not place hands or fingers in the openings. Failure to observe this could lead to hands or fingers catching depending on the posture.

 CAUTION

Do not stop the robot or apply emergency stop by turning the robot controller's main power OFF.
If the robot controller main power is turned OFF during automatic operation, the robot accuracy could be adversely affected.

 CAUTION

Do not turn off the main power to the robot controller while rewriting the internal information of the robot controller such as the program or parameters. If the main power to the robot controller is turned off while in automatic operation or rewriting the program or parameters, the internal information of the robot controller may be damaged.

 DANGER

When the SSCNETIII cable is removed, install the cap in the connector.
If the cap is not installed, there is a possibility of malfunctioning by adhesion of the dust etc.

 DANGER

Don't remove the SSCNETIII cable, when the power supply of the robot controller is turned on. Don't face squarely the light emitted from the tip of the SSCNETIII connector or the cable. If light strikes the eyes, there is a possibility of feeling the sense of incongruity for the eyes. (The light source of SSCNETIII is equivalent to the class 1 specified to JISC6802 and IEC60825-1.)

2 Unpacking to installation

2.1 Confirming the products

Confirm that the parts shown in the standard configuration of the controller shown in [Table 2-1](#) are enclosed with the purchased product.

Users who have purchased options should refer to the separate "Standard Specifications". The primary power supply cable and grounding cable must be prepared by the customer.

Table 2-1 : Standard configuration

No.	Part name	Type	Qty.	Remarks
CR1DA-700 controller				
1	Controller	CR1DA-7xx	Each 1 unit	With machine cable
2	Safety Manual	BFP-A8682	1 copy	
3	CD-ROM (Instruction manual)	5S-D***-C**	1 pc.	
4	Dummy connector for T/B		1 pc.	Connect, when not using T/B.
5	Ferrite core ^{Note1)} (CR1DA-700 controller)		3 pc.	Non-CE specification: For wiring of emergency stop , tracking function
6			7 pc.	CE specification: For wiring of emergency stop, tracking function, remote I/O, ethernet, special input/output terminal
7	Fuse (reserves)	LM16	2 pc.	1.6A
8		LM10	1 pc.	For the fuse F3 on TZ801A card.
9	Earth leakage breaker	NV30FAU-2P-10A	1 pc.	The terminal cover, two fixing screw attachment
10	Cable clamp (CR1DA-700 controller)	AL3	1 pc.	For cable shield grounding
11		AL5	1 pc.	
12	Filter		1 pc.	46 x 41 For front filter reserves
13	Line noise filter ^{Note1)}	FR-BSF01	1 pc.	CE specification: For ethernet
14	Guarantee Card		1 copy	
CR2DA-700 controller				
1	Controller	CR2DA-7xx	1 unit	With machine cable
2	Safety Manual	BFP-A8682	1 copy	
3	CD-ROM (Instruction manual)	5S-D***-C**	1 pc.	
4	Dummy connector for T/B		1 pc.	Connect, when not using T/B.
5	Ferrite core ^{Note1)}		5 pc.	Non-CE specification: For wiring of emergency stop, tracking function, remote I/O
			6 pc.	CE specification: For wiring of emergency stop, tracking function, remote I/O, ethernet, special input/output terminal
6	Cable clamp	AL3	1 pc.	For cable shield grounding
7	Fuse (reserves)	LM16	2 pc.	1.6A
		LM32	1 pc.	3.2A
		MF60NRF-1.6A	1 pc.	For the hand 1.6A
8	Union band	T30R	2 pc.	For primary power cable fixing
9	Filter mat		1 pc.	356 x 32 For bottom filter reserves
10	Line noise filter ^{Note1)}	FR-BSF01	1 pc.	CE specification: For ethernet
11	Knob locking device	HL-05FA	1 pc.	For the lock of the power switch
12	Guarantee Card		1 copy	
CR3D-700 controller				
1	Controller	CR3D-7xxM/ CR3D-7xx/	Each 1 unit	With machine cable
2	Safety Manual	BFP-A8682	1 copy	
3	CD-ROM (Instruction manual)	5S-D***-C**	1 pc.	
4	Connector for power supply unit connecting cables and connector pin	2-178128-3 1-175218-5	1 pc 2 pc	For connection with the sequencer power supply unit
5	Dummy connector for T/B		1 pc.	Connect, when not using T/B.

No.	Part name	Type	Qty.	Remarks
6	Ferrite core ^{Note1)}		3 pc.	Non-CE specification: For wiring of emergency stop, tracking function
			4 pc.	CE specification: For wiring of emergency stop, tracking function, remote I/O, ethernet, special input/output terminal
7	Fuse (reserves)	LM16	2 pc.	
		LM32	1 pc.	
8	Filter mat		1 pc.	For the protection specification drive unit 337 x 57 For rear filter reserves
9	Line noise filter ^{Note1)}	FR-BSF01	1 pc.	CE specification: For ethernet
10	Guarantee Card		1 copy	

Note1) The attachments in which "CE specification" is written to the remarks column are attached to CE specification only.
"Non-CE specification" is attached only to non-CE specification in the same way.

2.2 Installation

2.2.1 Unpacking procedures

The controller is shipped from the factory packaged in cardboard.

2.2.2 Transportation procedures

The following shows how to transport the controller.

(1) CR1DA-700 series



Fig. 2-1 : Transporting the controller (CR1DA-700)

- 1) Insert, raise and transport the hand in the crevice between the lower of the controller side. Do not hold switch or connector.

(2) CR2DA-700 series

The controller must always be transported by two workers.



Fig. 2-2 : Transporting the controller (CR2DA-700)

(3) CR3D-700 series

Mass : Approx.60kg

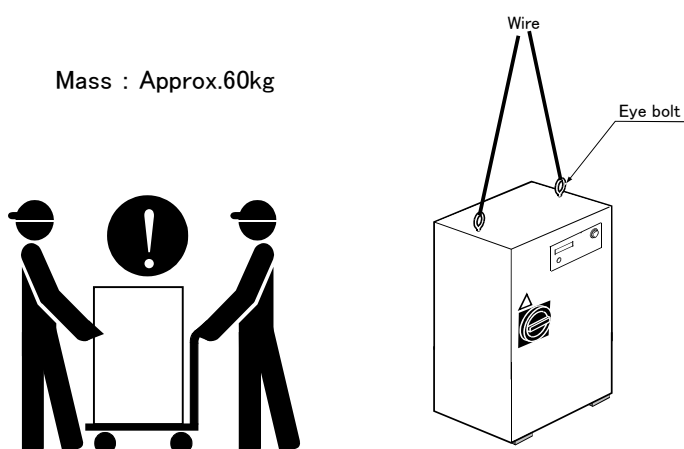


Fig. 2-3 : Transporting the controller (CR3D-700/700M)


- 1) Two workers must transport the controller using a crane or lifter.

2.2.3 Installation procedures

The installed size is shown as follows.

(1) CR1DA-700 series

CR1DA-700 series
Standard specification

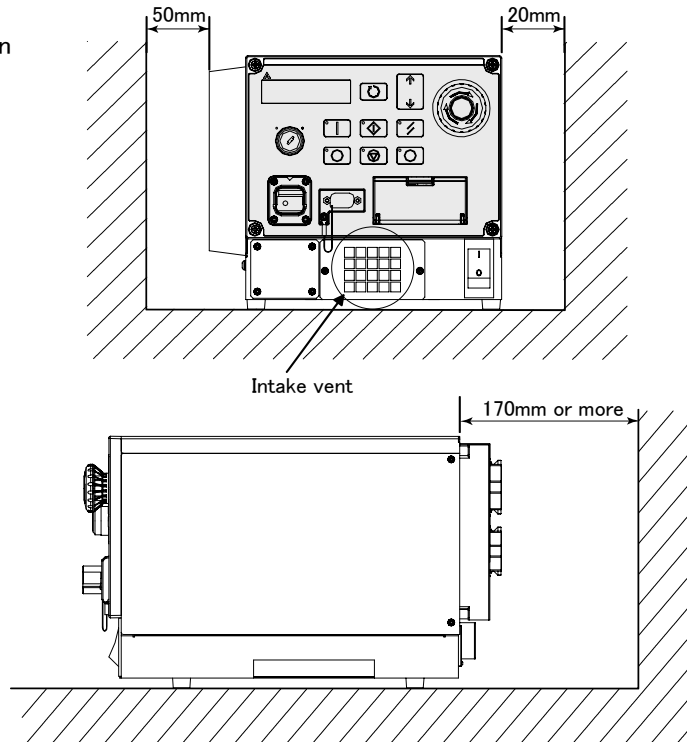

CR1DA-700 series
CE marking specification

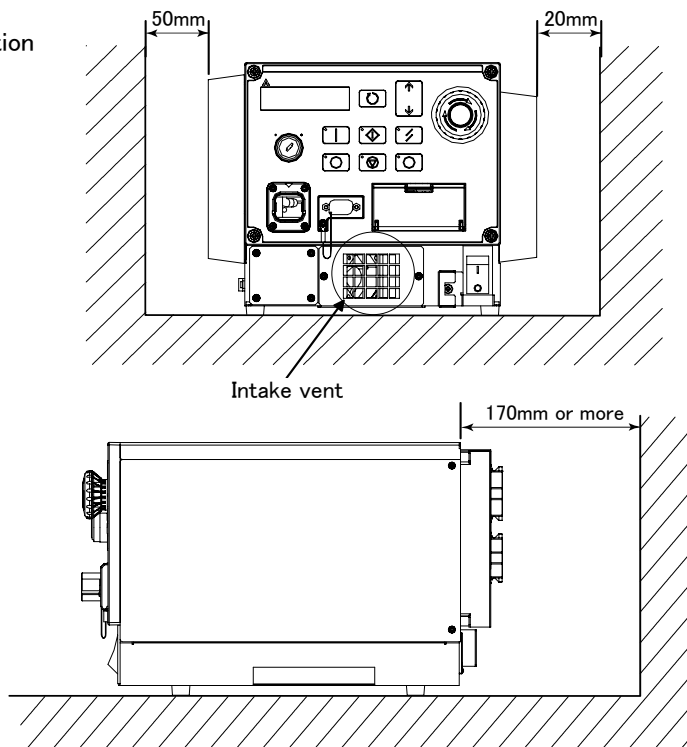
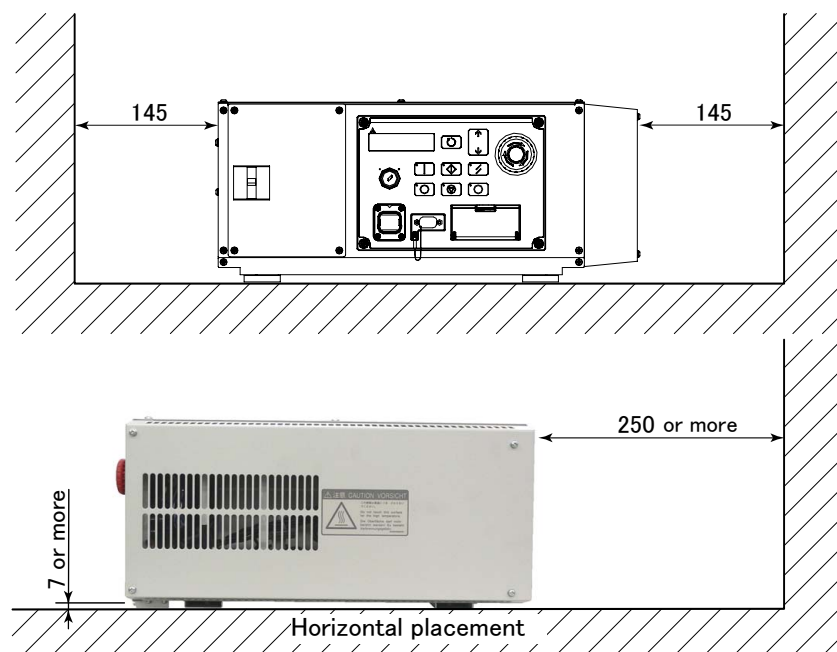



Fig. 2-4 : Installation dimensions (CR1DA-700 series)

[Caution] A suction port is installed on the bottom of the controller, so do not remove the rubber foot and install the controller flat on a surface.

(2) CR2DA-700 series

**CAUTION**

Use the rubber foot (4 positions) at the bottom of the controller as it is, or put the spacer, and leave the space between the installation side and the controller installation side more than 7mm when you fix the controller with the installation screw. In smaller than 7mm case, the air intake hole at the bottom of the controller is occupied, and temperature rises in the board, and causes the trouble.

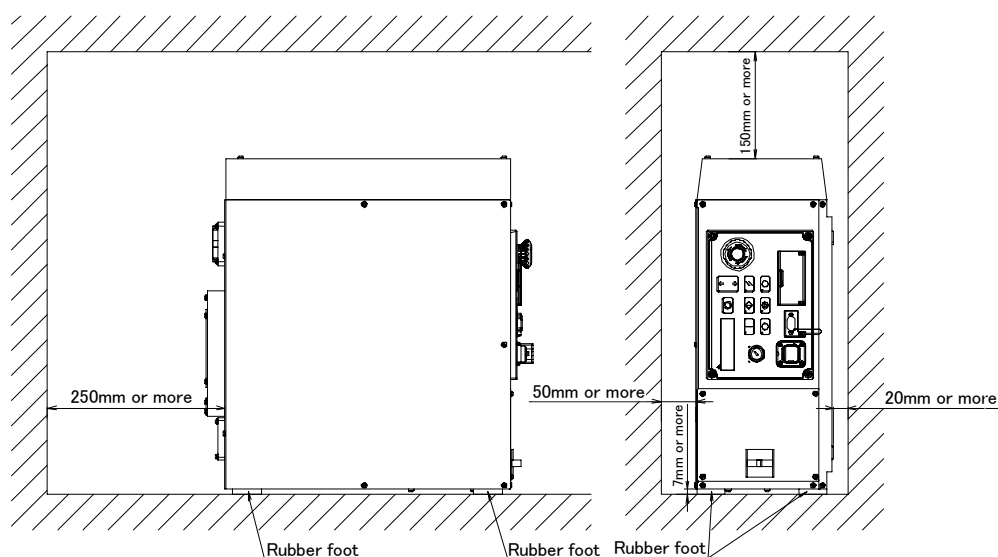**CAUTION**

The installation section needs to be fixed so that the controller may not fall. When fixing the controller with the bolt, please use the bolt of the length which does not protrude 5mm or more into the controller case.


- (1) Remove the rubber foot at the bottom of the controller (four places, M5 x 10 screws).
- (2) Remove the controller side white round seal (four places).
- (3) Use the rubber foot and the 5xM10 screw which were removed by above-mentioned (1), and fix the rubber foot to the screw hole of the seal pasting place of (2).

Fig. 2-5 : Installation dimensions (CR2DA-700)

CAUTION

When storing the controller in a cabinet, etc., take special care to the heat radiating properties and ventilation properties so that the ambient temperature remains within the specification values.

(3) CR3D-700 series

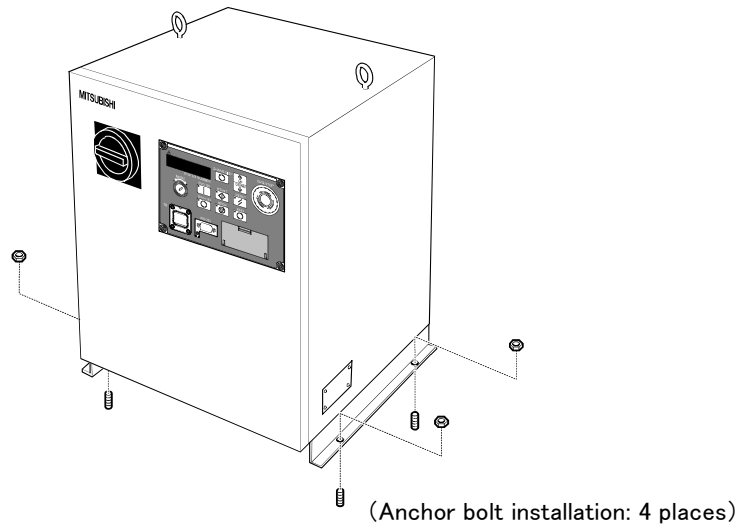

<CR3D-700M>

<CR3D-700>

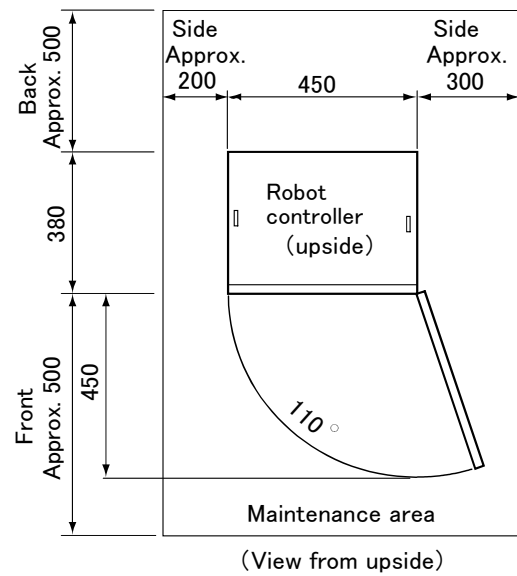
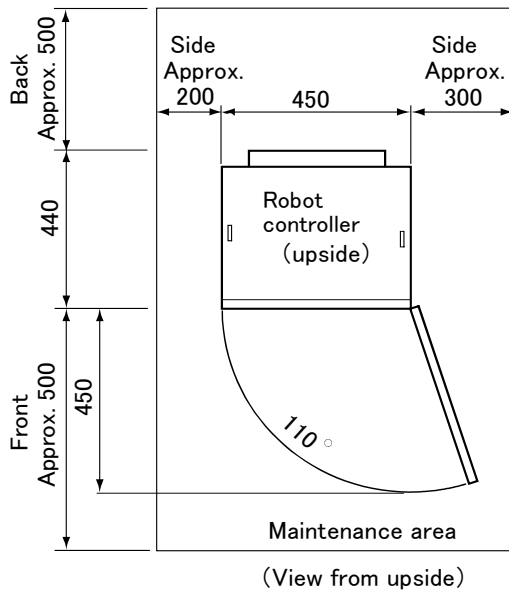


Fig. 2-6 : Installation dimensions (CR3D-700)

- 1) Install the controller so that it is level.
- 2) Do not block the ventilation holes on the side and rear surfaces of the controller.
- 3) When storing the controller in a cabinet, etc., take special care to the heat dissipation and ventilation properties so that the ambient temperature is within the specification values.

2.2.4 Connecting the power cable and grounding cable

The following shows how to connect the power cables and grounding cables.

(1) CR1DA-700 series



CAUTION Provide an earth leakage breaker in the primary power supply circuit of the controller to prevent short circuit. Failure to do so may result in electric shock.

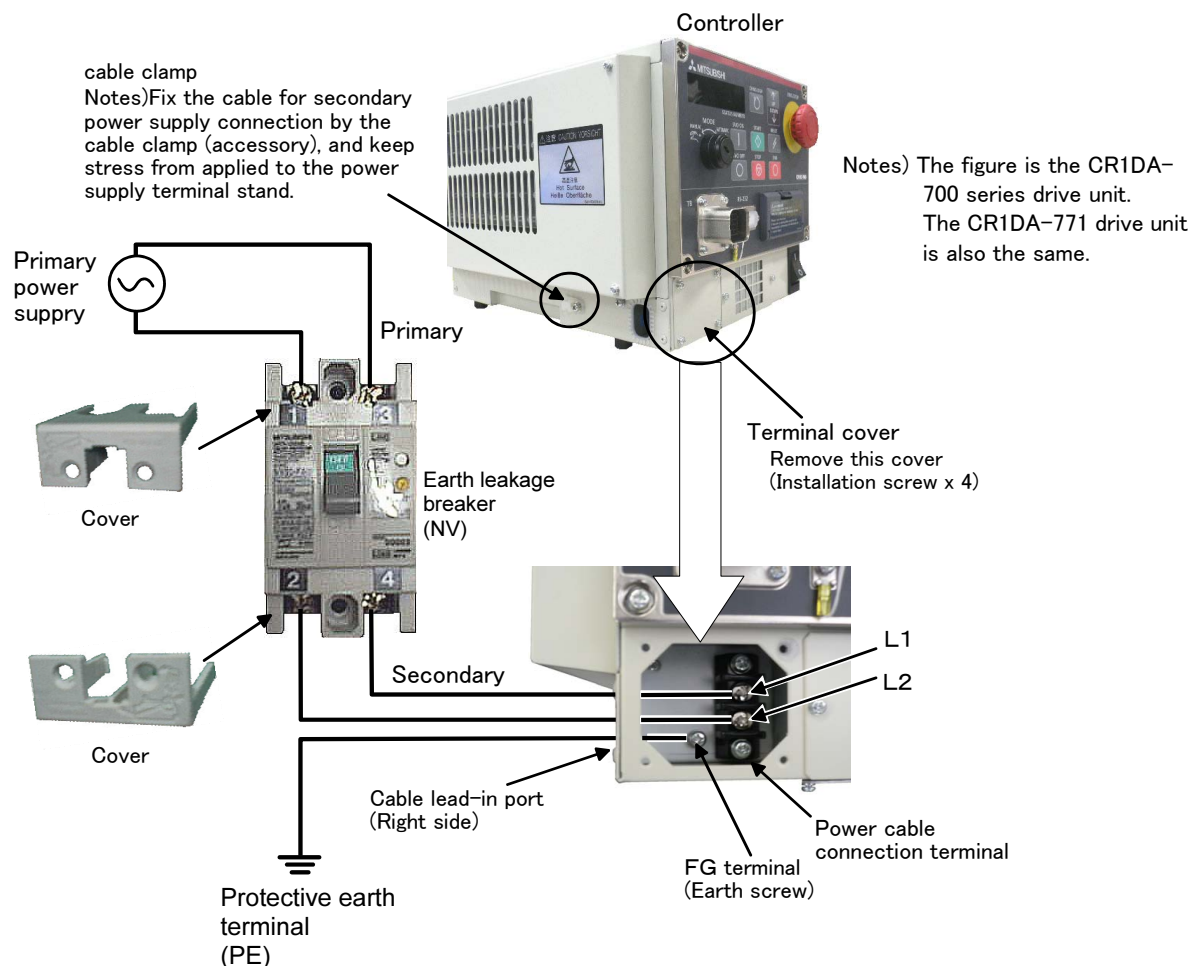


Fig. 2-7 : Connecting the power cable and grounding cable (CR1DA-700)

- 1) Prepare the power cable and grounding cable (both must be AWG#14 or more thickly).
- 2) Loosen the four screws fixing the terminal cover, and remove the cover.
- 3) Confirm that the primary power matches the specifications.
- 4) Confirm that the primary power is OFF and that the controller power switch is OFF.
- 5) Connect the secondary power cable to L1,L2 of controller terminal and earth leakage breaker.
- 6) Connect the grounding cable to the FG terminal.
- 7) Connect the cable for primary power supplies to the primary side terminal (upper terminal) of the earth leakage breaker.
- 8) Install the power terminal cover as before.

This completes the connection of the power and grounding cables.

[Note] Please do installation of the earth leakage breaker attached of the customer. The length of the power cable changes according to the distance for the setting position and the controller.

(2) CR2DA-700 series

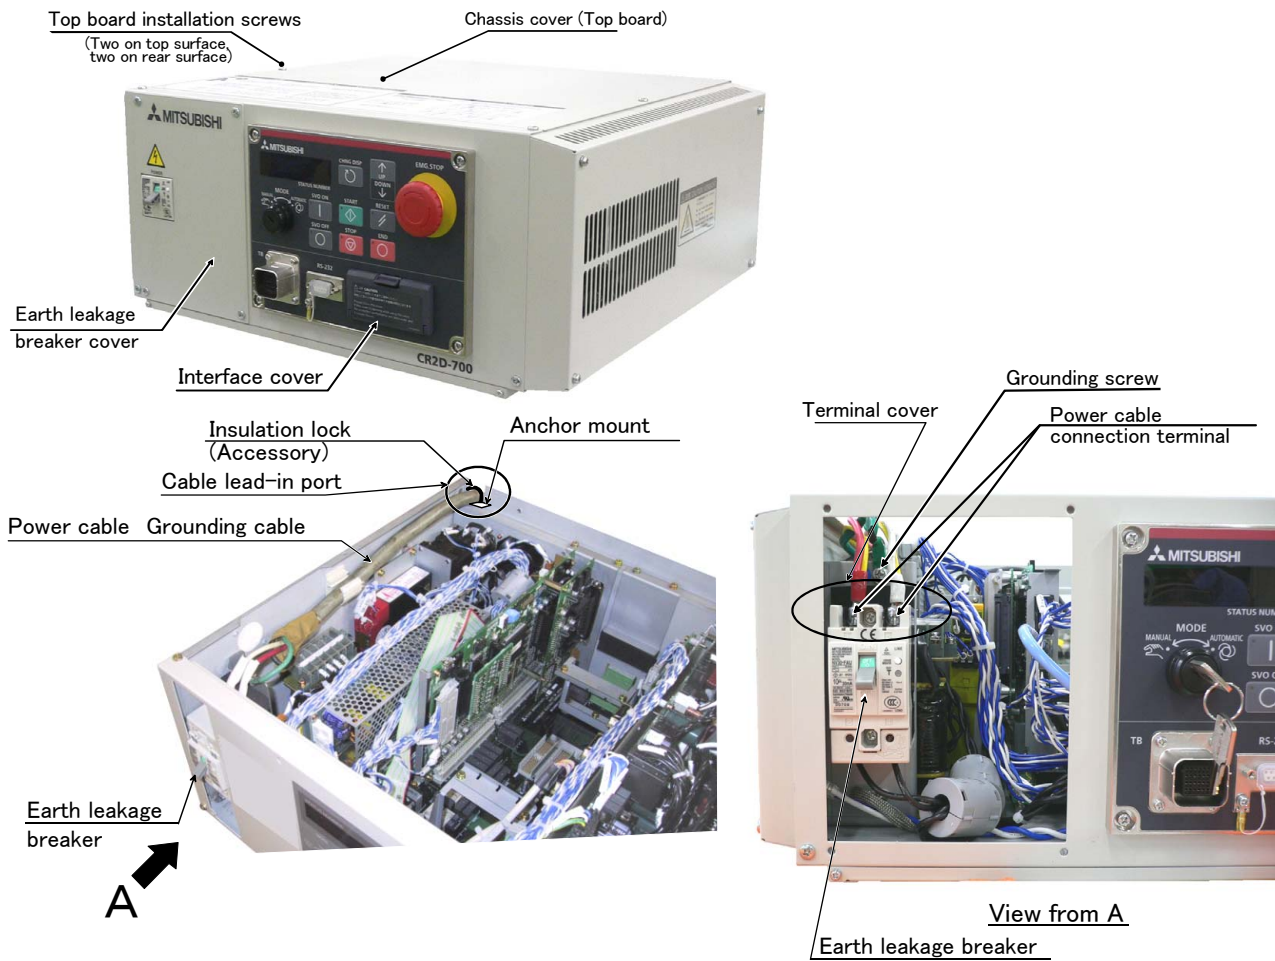


Fig. 2-8 : Connecting the power cable and grounding cable (CR2DA-700)

- 1) Prepare the power cable and grounding cable (both must be AWG#14 or more thickly).
- 2) Remove the controller chassis cover (top board) by removing the four installation screws. To remove the chassis cover, slide it to the rear and then lift it. Remove the four fixing screws which are fixing the earth leakage breaker cover, and remove that cover.
- 3) Confirm that the primary power supply matches the specifications.
- 4) Confirm that the primary power supply is OFF and that the earth leakage breaker on the controller is OFF.
- 5) Pull out the terminal cover of the earth leakage breaker.
- 6) Insert the power cable and grounding cable from the cable lead-in port on the side or rear of the controller.
- 7) Connect the power cable to the earth leakage breaker terminals (M5 screw).
- 8) Connect the grounding cable with the screw hole on the controller's chassis, located above the earth leakage breaker (PE marking).
- 9) Press in the earth leakage breaker terminal cover, until a "click" is heard.
- 10) Re-install both the controller's chassis and the earth leakage breaker cover back.

This completes the connection of the power and grounding cables of the CR2DA-700 series controller.

(3) CR3D-700 series

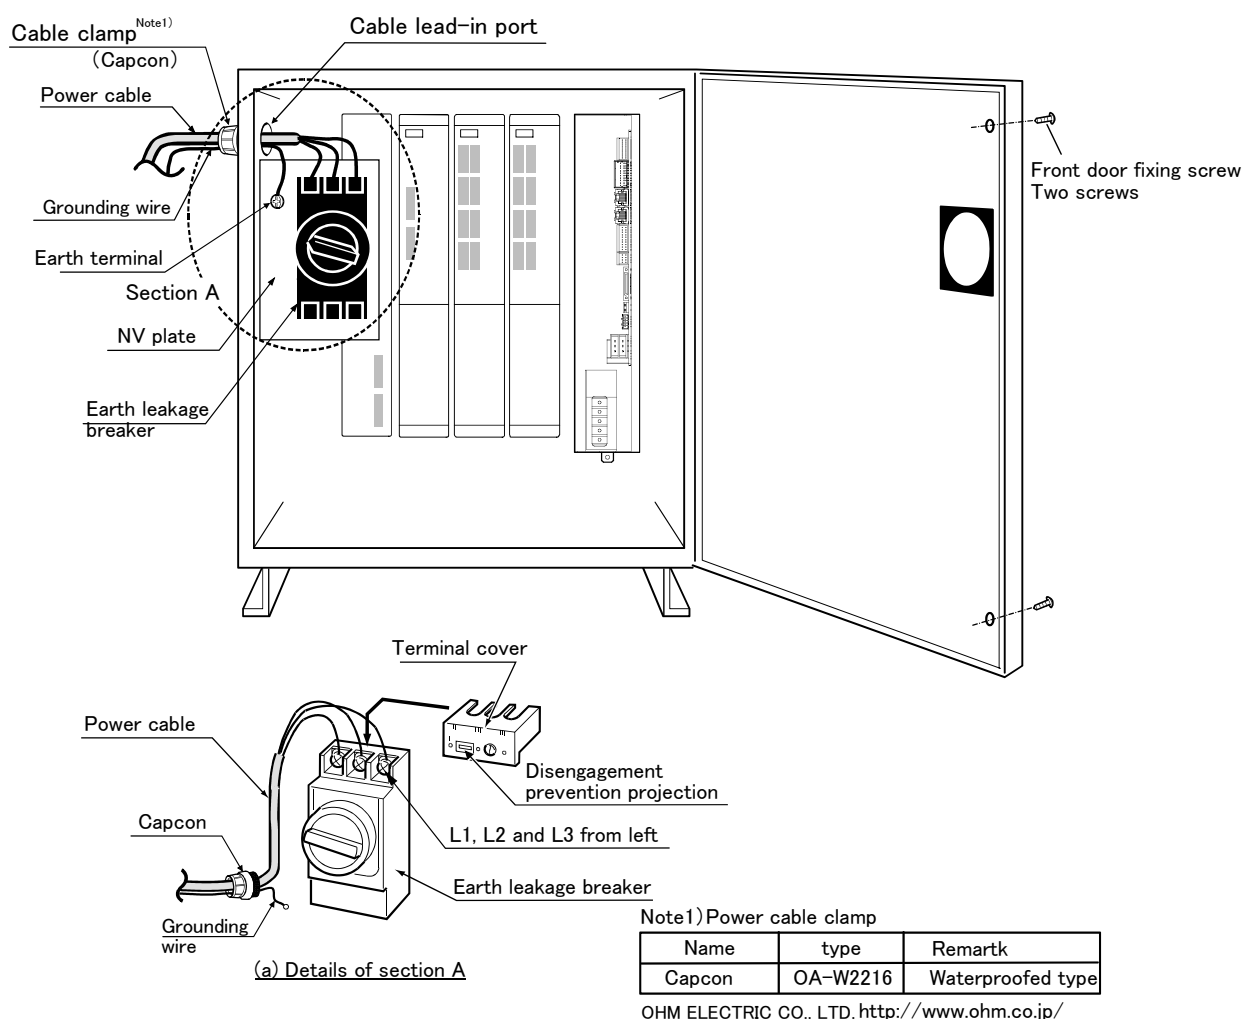


Fig. 2-9 : Connecting the power cable and grounding cable (CR3D-700)

- 1) Prepare the power cable and grounding cable (both must be AWG#14 or more for 3-phase).
- 2) Loosen the two screws fixing the controller front door, and open the front door.
- 3) Pull out the disengagement prevention projection on the terminal cover surface of the earth leakage breaker by disengaging it with your finger.
- 4) Confirm that the primary power matches the specifications.
- 5) Confirm that the primary power is OFF and that the controller power switch is OFF.
- 6) Insert both the power cable and ground cable from the cable inlet hole located on the side of the controller, and fix them using a power cable clamp (Capcon).
- 7) Connect the power cable to the earth leakage breaker terminal (M5 screw). (L1, L2 and L3 from left)
- 8) Connect the grounding cable to the NV plate terminal (M5 screw).
- 9) Insert the earth leakage breaker terminal cover removed in step (3) until a "click" is heard.
- 10) Close the controller front door, and fix with the fixing screws.

This completes the connection of the power and grounding cables of the CR3D-700 series controller.

⚠ CAUTION

Uses earth leakage breaker of corresponding to inverter products and working by leak current of the commercial frequency domain (50-60Hz). It will become the cause of malfunction if the thing sensitive to the high frequency ingredient is used.

2.2.5 Connecting the external emergency stop

The following shows how to connect the external emergency stop.

External emergency connection (Refer to [Fig. 2-10](#))

- a)CR1DA-700/CR2DA-700 : Rear side connector
- b)CR3D-700 : Safety unit

The external emergency stop input and door switch input and enabling device input are opened at shipment as shown in [Page 17 "Fig. 2-11 External emergency stop connection"](#). Please be sure to prepare the external emergency stop, the door switch, the enabling device, etc. of the customer, and to use the robot in the state where it connected. Below, the procedure of connection is shown.


[Caution] When wiring the emergency stop switch (double emergency line type), wire both contacts to the two terminal blocks on the controller.

- 1) Prepare the emergency stop switch and door switch and enabling device .
- 2) Securely connect the external emergency stop's contacts across 3A-4A, 3B-4B, and the door switch's contacts across 8A-9A, 8B-9B, and the enabling device switch's contacts across 10A-11A, 10B-11B, on the terminal block.


[Caution] When wiring the emergency stop switch (double emergency line type), wire both contacts to the two terminal blocks on the controller. If both contacts are wired to only one of the terminal blocks, errors cannot be cancelled.

[Caution] The cable uses the shielded cable and installs the ferrite core. Install the ferrite core in less than 30cm from the contact button.


<CR1DA-700 series>

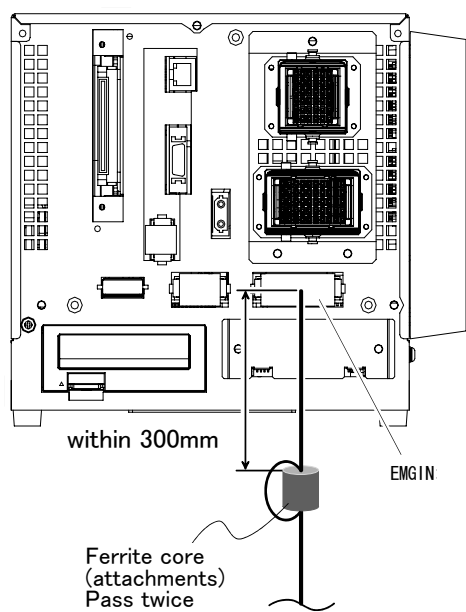


<CR1DA-771 series>

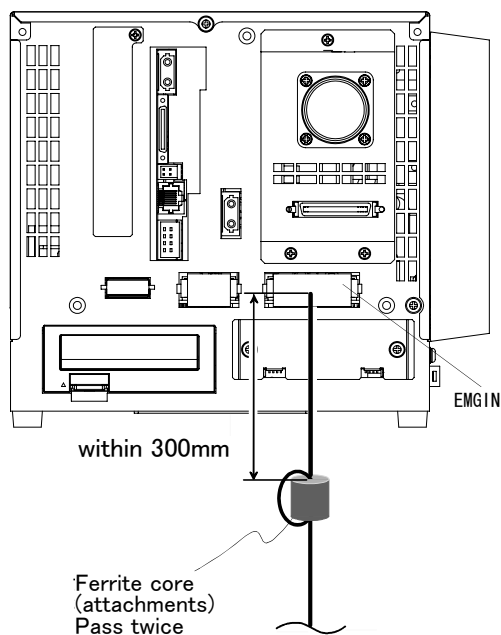

<CR2DA-700>

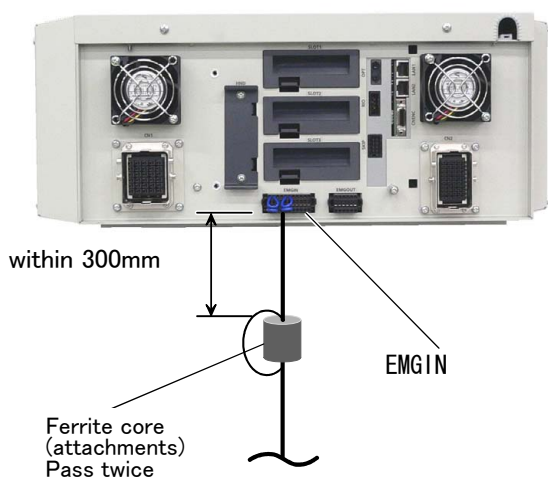

<CR3D-700>

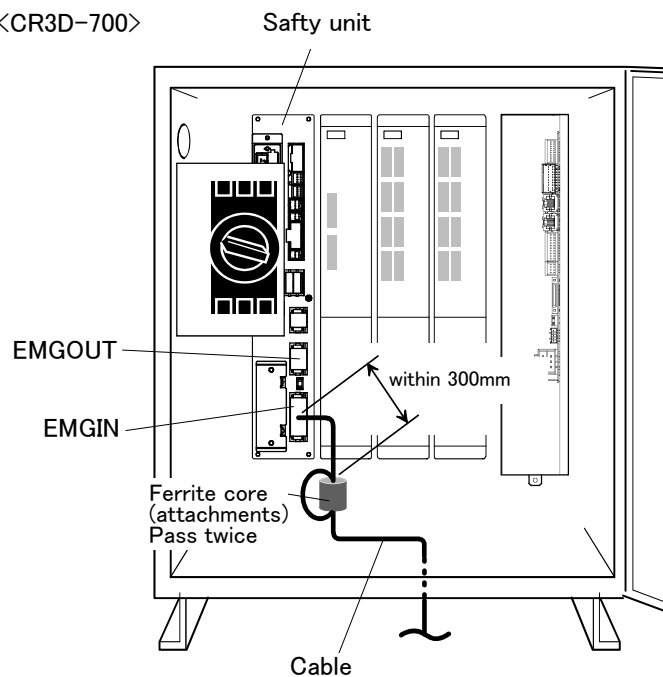

Pin allotment of EMGIN and the EMGOUT connector is shown in [Page 17, "Fig. 2-11 : External emergency stop connection"](#).

Fig. 2-10 : Emergency stop cable connection

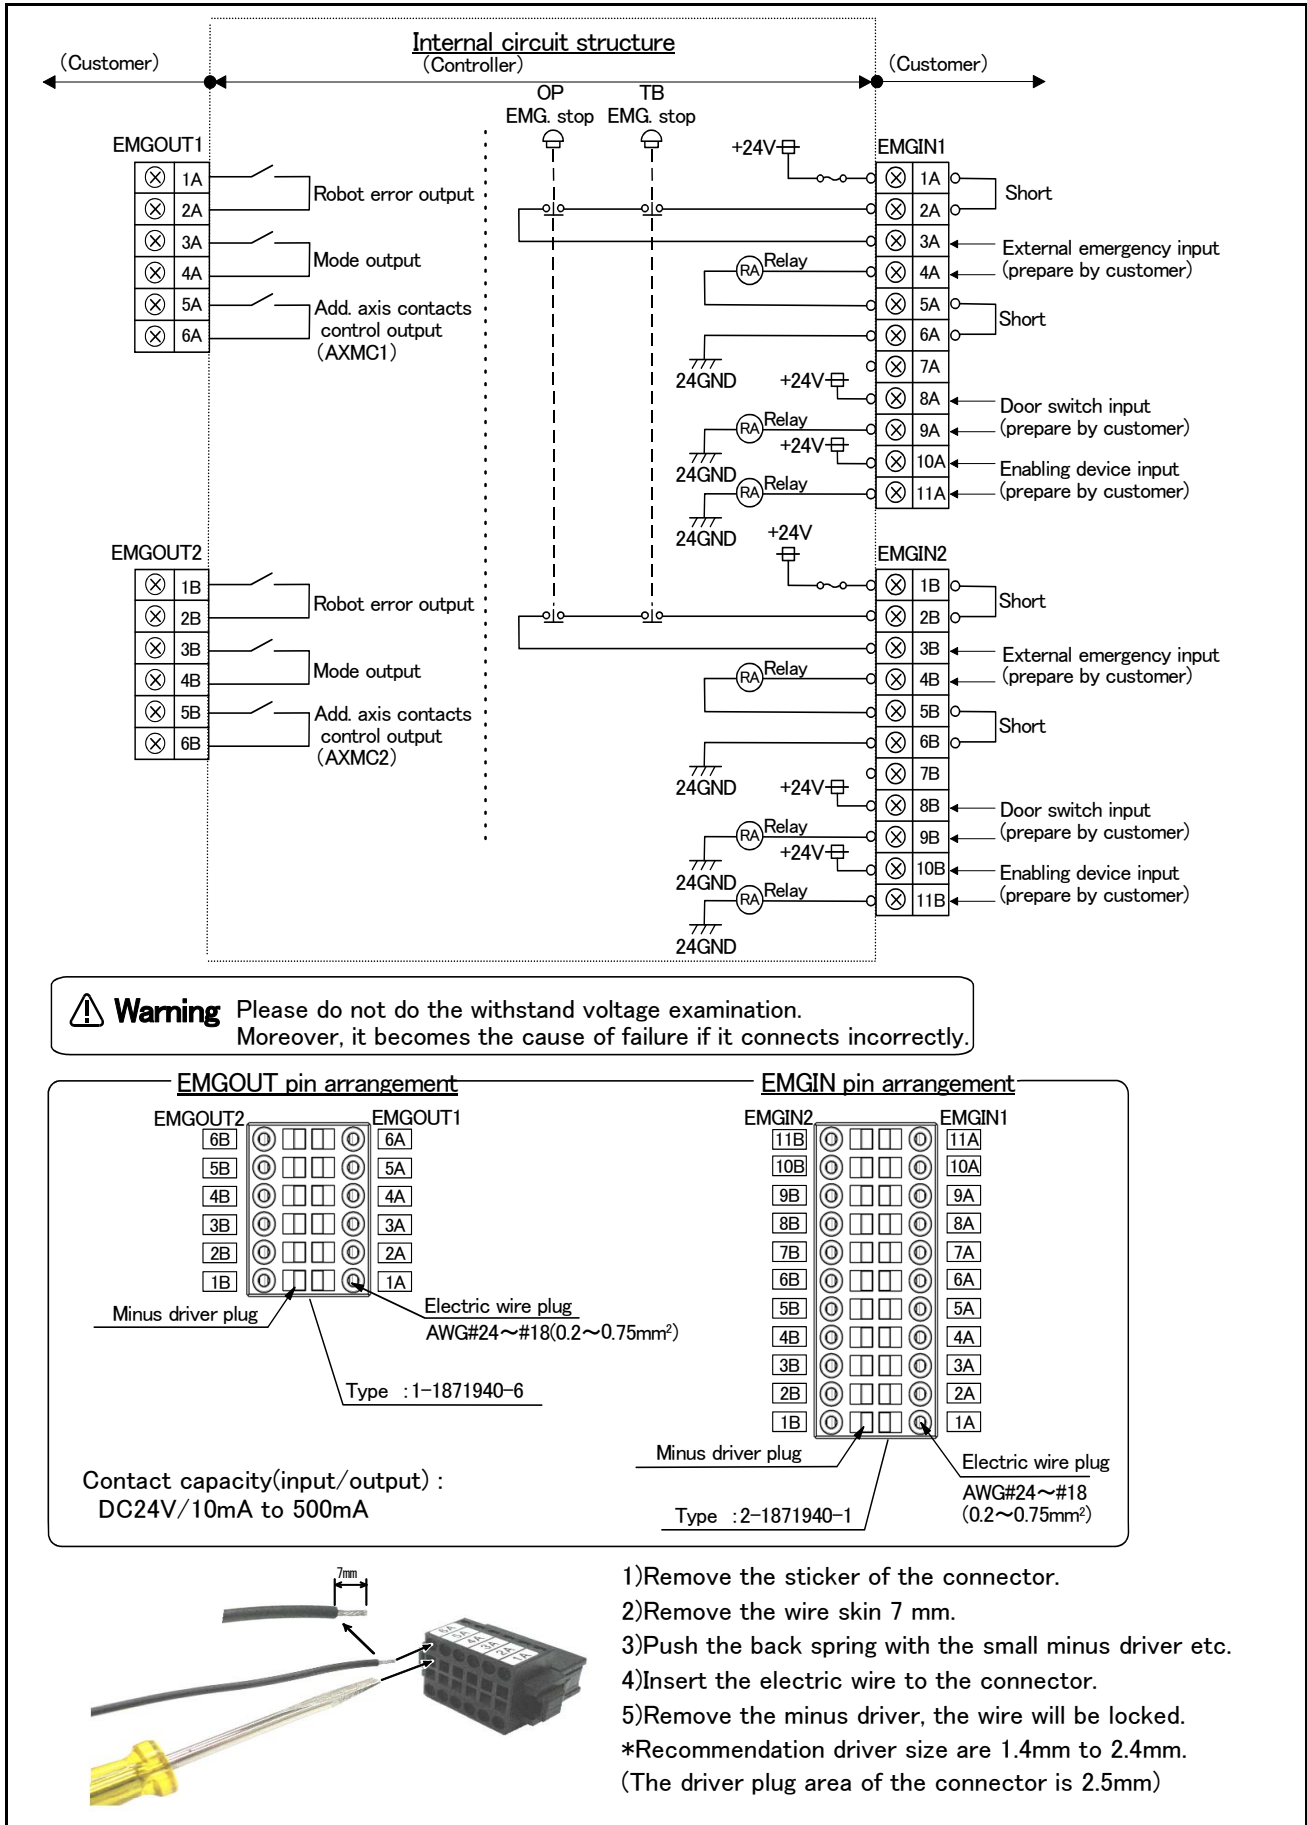


Fig. 2-11 : External emergency stop connection

 CAUTION

Please install the emergency stop switch in a accesable location where it is easy to operate.

 CAUTION

Be careful not to short circuit with the next terminal while connecting the wires to the EMGIN connector. The use of plated wires is not recommended.

The example of safety measures is shown in the following. Please refer to the figure and build safety measures.

2.2.6 Examples of safety measures

Two emergency-stop input circuits are prepared on the user wiring terminal block of the controller. Create a circuit as shown below for safety measures. In addition, the figure shows the normal state which is not in the emergency stop state.

[Caution] Since we have omitted the information in part because of explanation, there is the section different from the product. Also refer to Page 23, "(1) External emergency stop connection [supplementary explanation]" and Page 15, "2.2.5 Connecting the external emergency stop".

[Note] · In the emergency-stop related wiring by the customer, if the coil (is not the contact points) of the relay prepared by the customer is connected to the controller, please be sure to implement the measure against the noise by the customer in the coil section. And, please also take the lifetime of noise suppression parts into consideration.

- Electric specification of the emergency-stop-related output terminal: 100mA/24V or less.


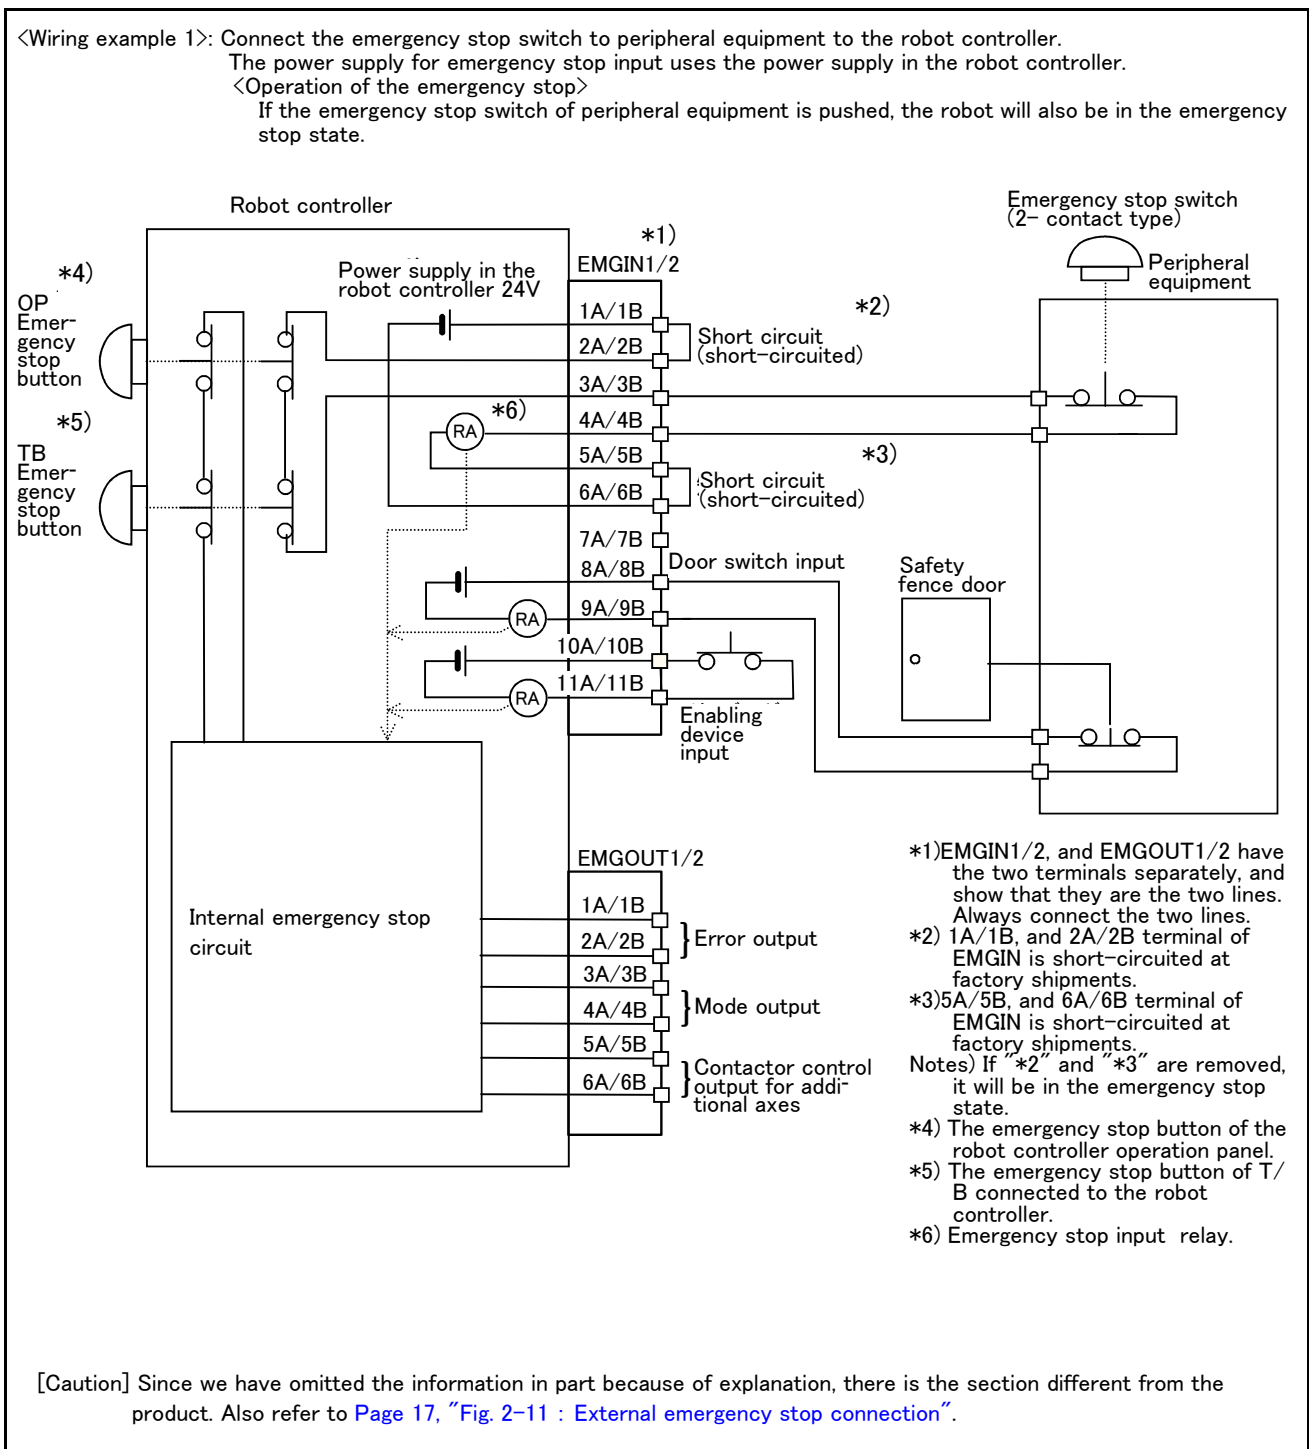


Fig.2-12 : Example of safety measures (Wiring example 1)

<Wiring example 2>: Connect the emergency stop switch to peripheral equipment to the robot controller.
 The power supply for emergency stop input uses the power supply of peripheral equipment.
 <Operation of the emergency stop>
 If the emergency stop switch of peripheral equipment is pushed, the robot will also be in the emergency stop state.

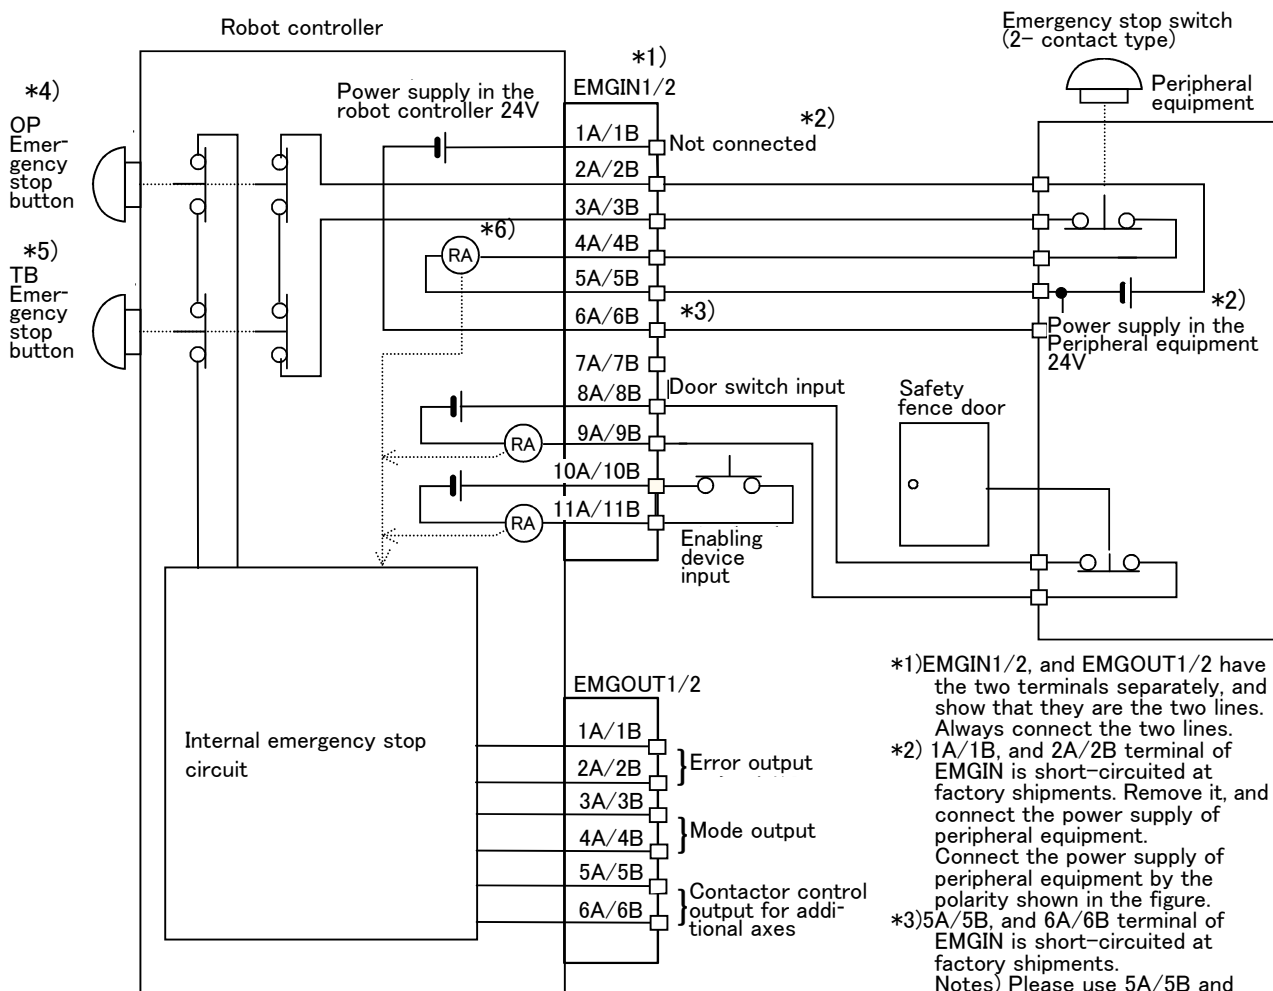

- *1) EMGIN1/2, and EMGOUT1/2 have the two terminals separately, and show that they are the two lines. Always connect the two lines.
- *2) 1A/1B, and 2A/2B terminal of EMGIN is short-circuited at factory shipments. Remove it, and connect the power supply of peripheral equipment. Connect the power supply of peripheral equipment by the polarity shown in the figure.
- *3) 5A/5B, and 6A/6B terminal of EMGIN is short-circuited at factory shipments. Notes) Please use 5A/5B and 6A/6B terminal, connected.
- *4) The emergency stop button of the robot controller operation panel.
- *5) The emergency stop button of T/B connected to the robot controller.
- *6) Emergency stop input relay.


[Caution] Since we have omitted the information in part because of explanation, there is the section different from the product. Also refer to Page 17, "Fig. 2-11 : External emergency stop connection".

Fig.2-13 : Example of safety measures (Wiring example 2)

<Wiring example 3>: Connect the emergency stop switch, door switch, and enabling device of peripheral equipment to the robot controller. The power supply for emergency stop input uses the power supply of peripheral equipment. Monitor the emergency stop state by the peripheral equipment side.

<Operation of the emergency stop>

If the emergency stop switch of peripheral equipment is pushed, the robot will also be in the emergency stop state. And, if the emergency stop switch of OP or T/B is pushed in the state of the power of robot controller OFF, peripheral equipment state can be the emergency stop also.

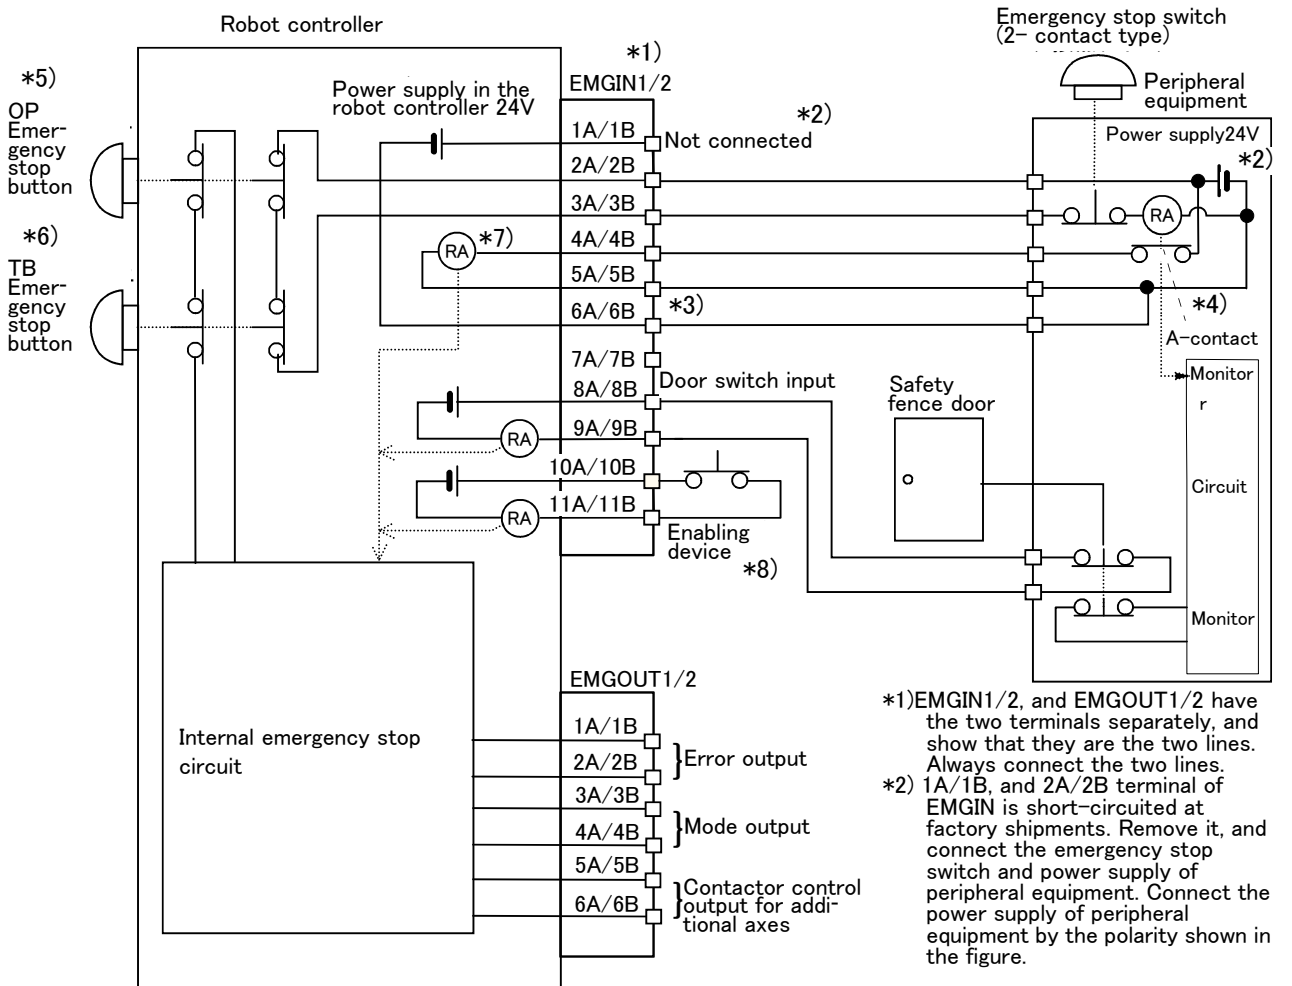

- *1) EMGIN1/2, and EMGO1/2 have the two terminals separately, and show that they are the two lines. Always connect the two lines.
- *2) 1A/1B, and 2A/2B terminal of EMGIN is short-circuited at factory shipments. Remove it, and connect the emergency stop switch and power supply of peripheral equipment. Connect the power supply of peripheral equipment by the polarity shown in the figure.

- *3) 5A/5B, and 6A/6B terminal of EMGIN is short-circuited at factory shipments. Remove it and connect with the power supply ground of peripheral equipment.
- *4) Please use a A contact type of the relay with the compulsive guide.
- *5) The emergency stop button of the robot controller operation panel.
- *6) The emergency stop button of T/B connected to the robot controller.
- *7) Emergency stop input relay.
- *8) Refer to the separate manual "Standard Specifications Manual" for the enabling device.


[Caution] Since we have omitted the information in part because of explanation, there is the section different from the product. Also refer to Page 17, "Fig. 2-11 : External emergency stop connection".

Fig.2-14 : Example of safety measures (Wiring example 3)

<Wiring example 4>: Connect the emergency stop switch of peripheral equipment, and the door switch to two robot controllers, and it interlocks. Connect the enabling device to the robot controller. The power supply for emergency stop input uses the power supply of peripheral equipment. Monitor the emergency stop state by the peripheral equipment side.

<Operation of the emergency stop>

If the emergency stop switch of peripheral equipment is pushed, the robot will also be in the emergency stop state. And, if the emergency stop switch of OP or T/B is pushed in the state of the power of robot controller OFF, peripheral equipment state can be the emergency stop also.

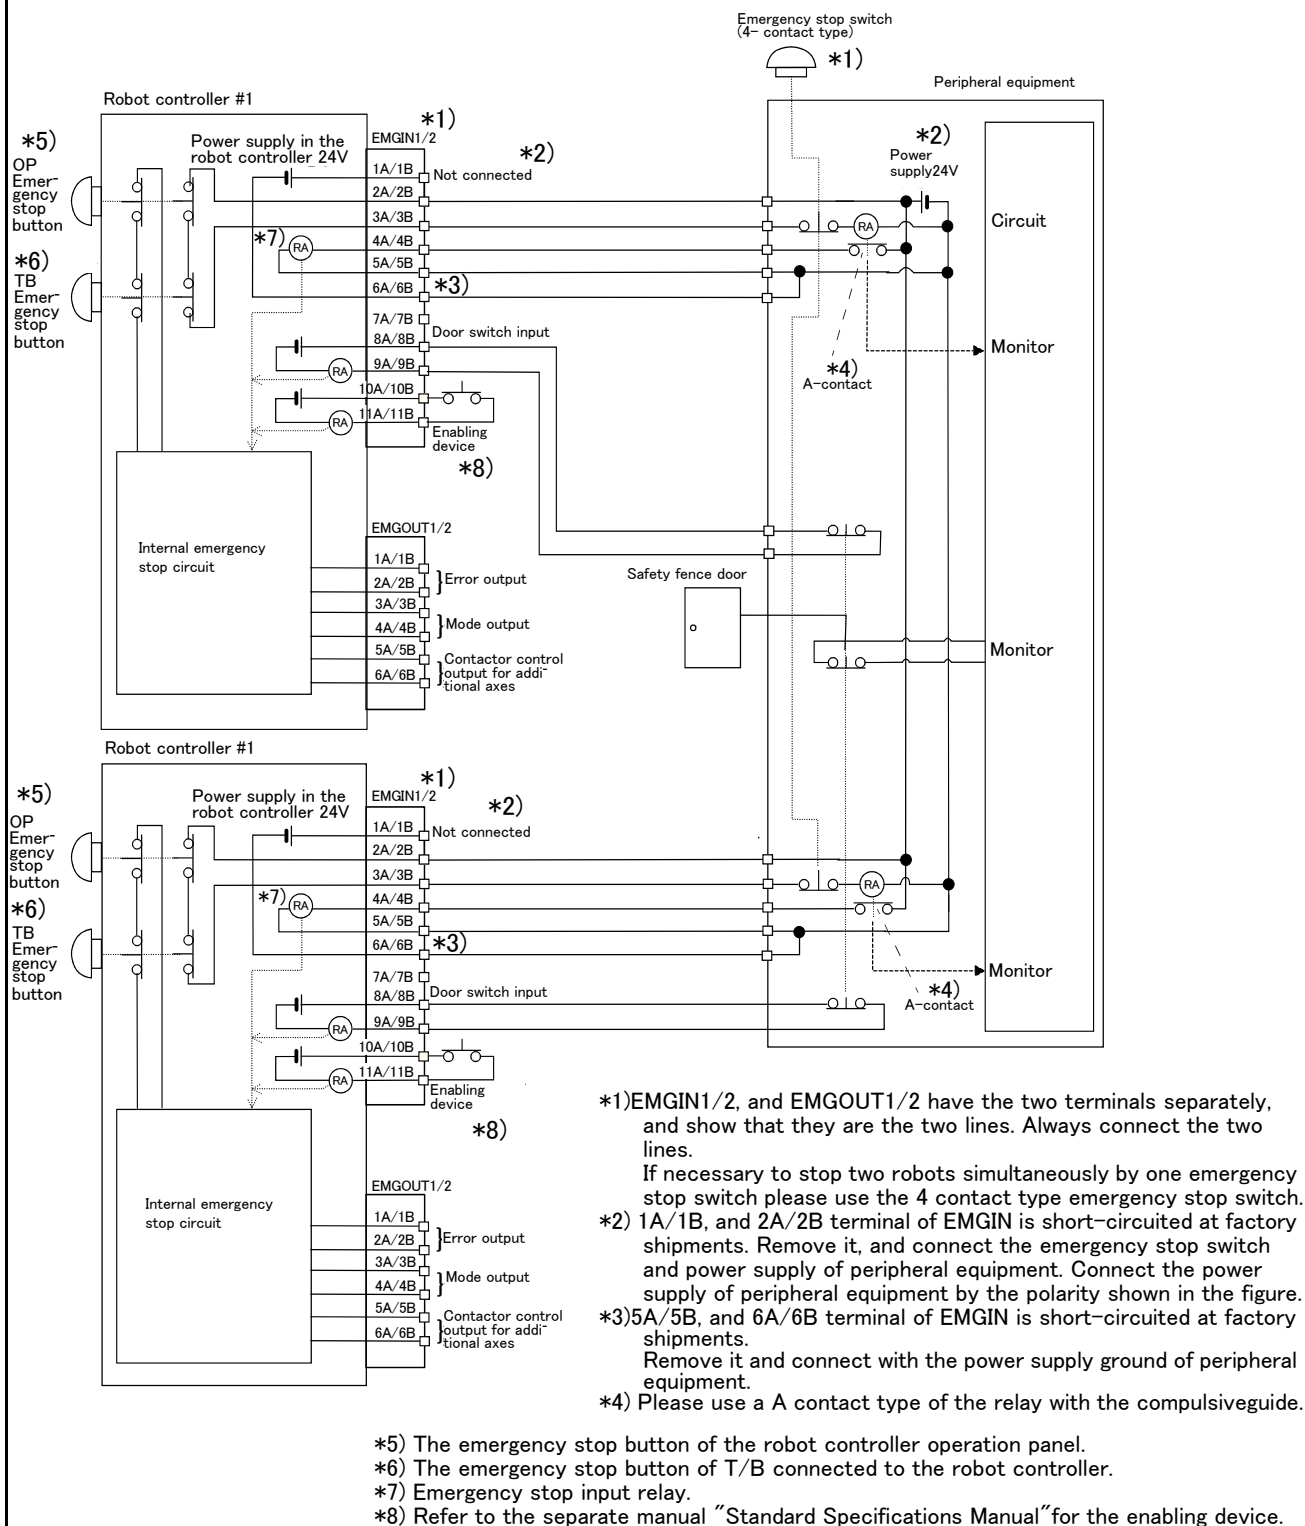

[Caution] Since we have omitted the information in part because of explanation, there is the section different from the product. Also refer to Page 17, "Fig. 2-11 : External emergency stop connection".

Fig.2-15 : Example of safety measures (Wiring example 4)

(1) External emergency stop connection [supplementary explanation]

- (1) Use a 2-contact type switch for all switches.
- (2) Install a limit switch on the safety fence's door. With a constantly open contact (a contact), wire to the door switch input terminal so that the switch turns ON (is conducted) when the door is closed, and turns OFF (is opened) when the door is open.
- (3) Use a manual-return type 2b-contact for the emergency stop button.
- (4) Classify the faults into minor faults (faults that are easily restored and that do not have a great effect) and major faults (faults that cause the entire system to stop immediately, and that require care in restoration), and wire accordingly.

[Caution] The emergency stop input (terminal block) on the user wiring in the controller can be used for safety measures as shown in Fig. 2-12 to Fig. 2-15. Note that there are limits to the No. of switch contacts, capacity and cable length, so refer to the following and install.

- Switch contact..... Prepare a 2-contact type. *1)
- Switch contact capacity..... Use a contact that operates with a switch contact capacity of approx. 1mA to 100mA/24V. *1)
- Cable length..... The length of the wire between the switch and terminal block must be max. 15m or less. Please use the shield line, in case of the cable may receive the noise etc. by other equipment, such as servo amplifier. And, since the ferrite core is attached as noise measures parts, please utilize.

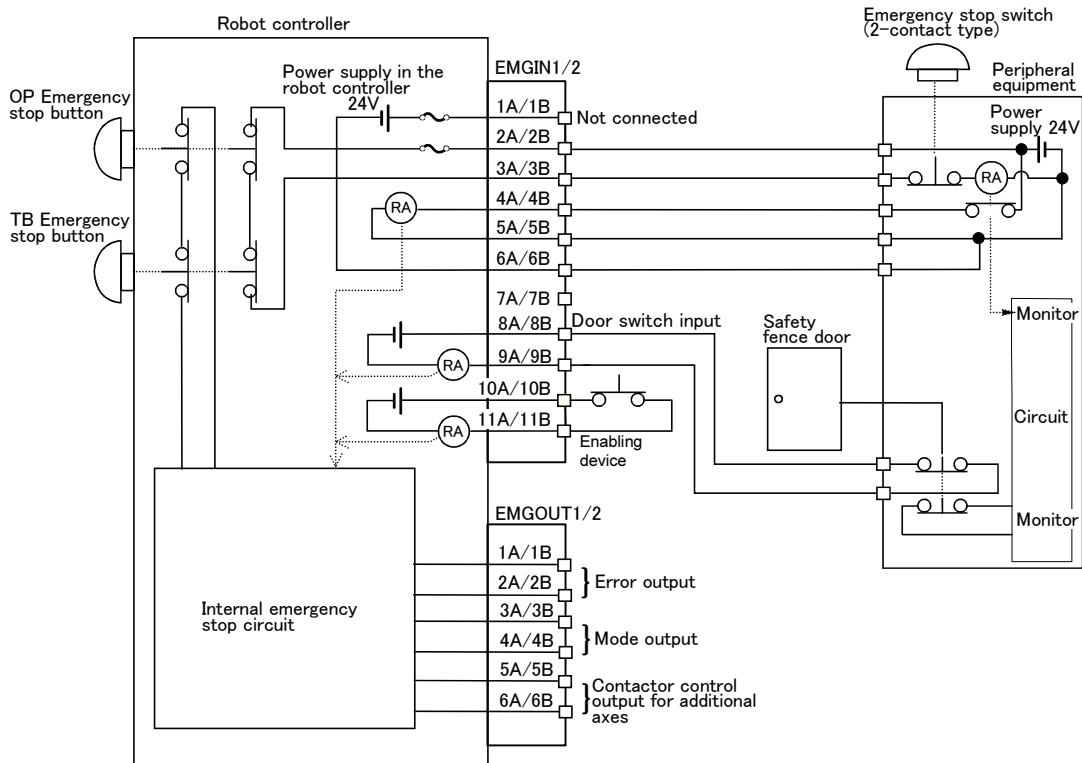


Fig. 2-16 : Limitations when connecting the relay etc.

CAUTION

Please be sure to check that each function operates normally for the prevention of malfunction. Surely check that the operation of the emergency stop of the robot controller, the emergency stop of the teaching pendant, the customer's emergency stop, etc are normally.

CAUTION

Be sufficiently careful and wiring so that two or more emergency stop switches work independently. Don't function only on AND conditions (Two or more emergency stop switch status are all ON).

CAUTION

You should always connect doubly connection of the emergency stop, the door switch, and the enabling switch. (Connect with both of side-A and side-B of the controller rear connector) In connection of only one side, if the relay of customer use should break down, it may not function correctly.

*1) The minimum load electric current of the switch is more than 5mA/24V.

2.2.7 Magnet contactor control connector output (AXMC) for addition axes

When an additional axis is used, the servo ON/OFF status of the additional axis can be synchronized with the servo ON/OFF status of the robot itself by using the output contact (AXMC) provided on the rear or inside of the controller and configuring a circuit so that the power to the servo amplifier for the additional axis can be turned off when this output is open. Fig. 2-17 shows an example of its circuit, and show the layout drawings of the output contact (AXMC1). When you are using an additional axis, please perform appropriate circuit connections by referring to these drawings.

Note1) you use the addition axis function as a user mechanism who became independent of the robot arm, please do not connect this output signal. Servo-on of the user mechanism

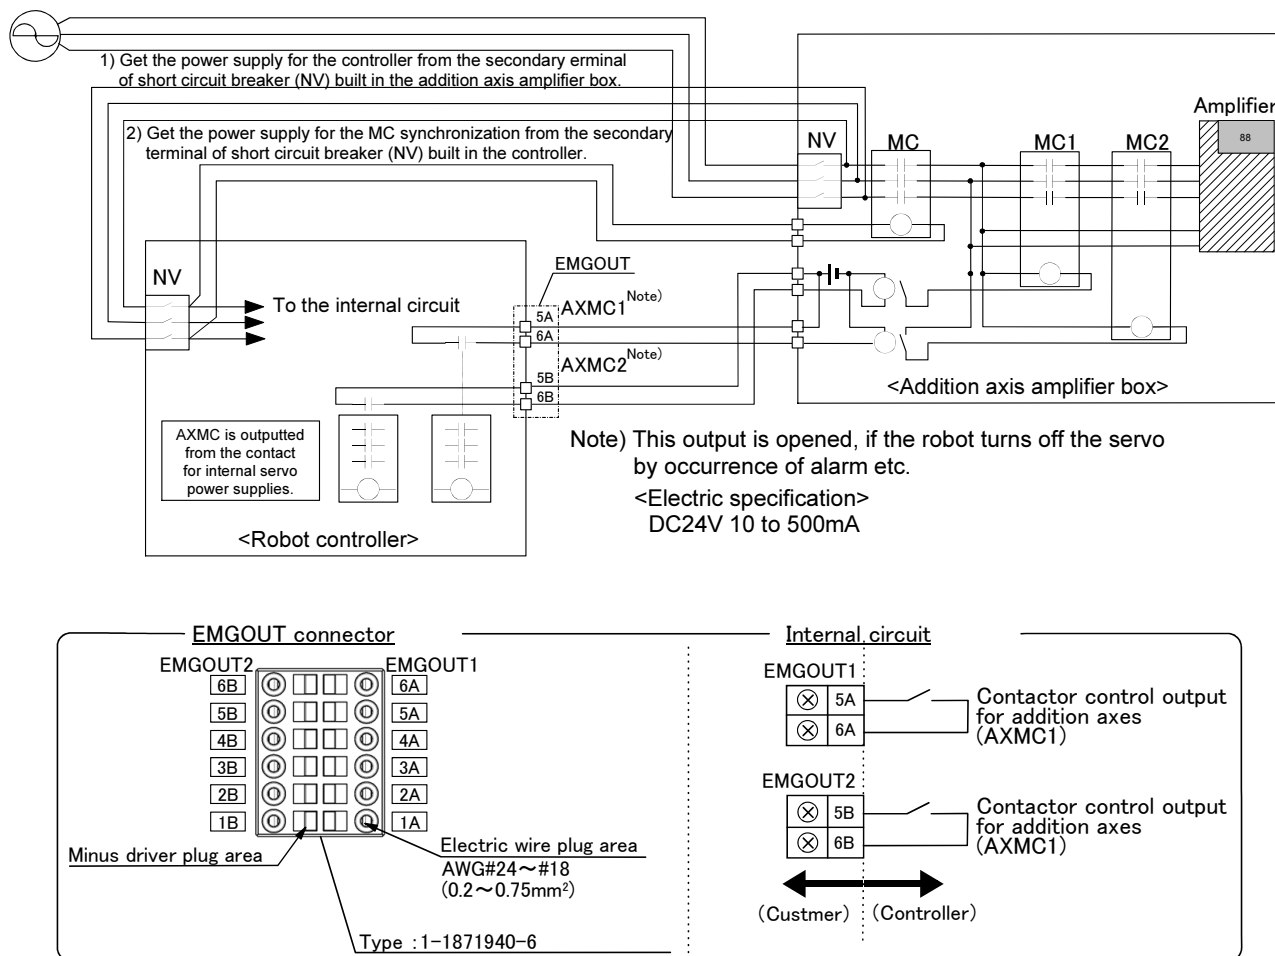


Fig. 2-17 : Example of circuit for addition axes of Magnet contactor control output

2.2.8 Connecting to the robot arm

Refer to the separate manual "Robot arm setup and maintenance", and connect the controller and robot arm with machine cables.

2.3 Setting the origin

Refer to the separate manual "Robot arm setup and maintenance", and set the origin.

2.4 Confirming the operation

Refer to the separate manual "Robot arm setup and maintenance", and confirm the robot operation with jog operation.

3 Installing the option devices

Refer to Page 38, "4.2.1 Installing and removing the T/B" for installing method of T/B. Refer to the separate "Standard Specifications" or each option's manual for the optional devices other than those described in this manual.

3.1 Installing the pneumatic hand interface

3.1.1 Installing

The following shows the installing procedure of pneumatic hand interface which is installed inside the controller.

CAUTION Confirm that the supplying power supply to the controller and the power switch of the controller are off before doing this work.

[Note] Confirm that the pneumatic hand interface is installed securely. If not installed certainly, opening and closing of the hand cannot be done.

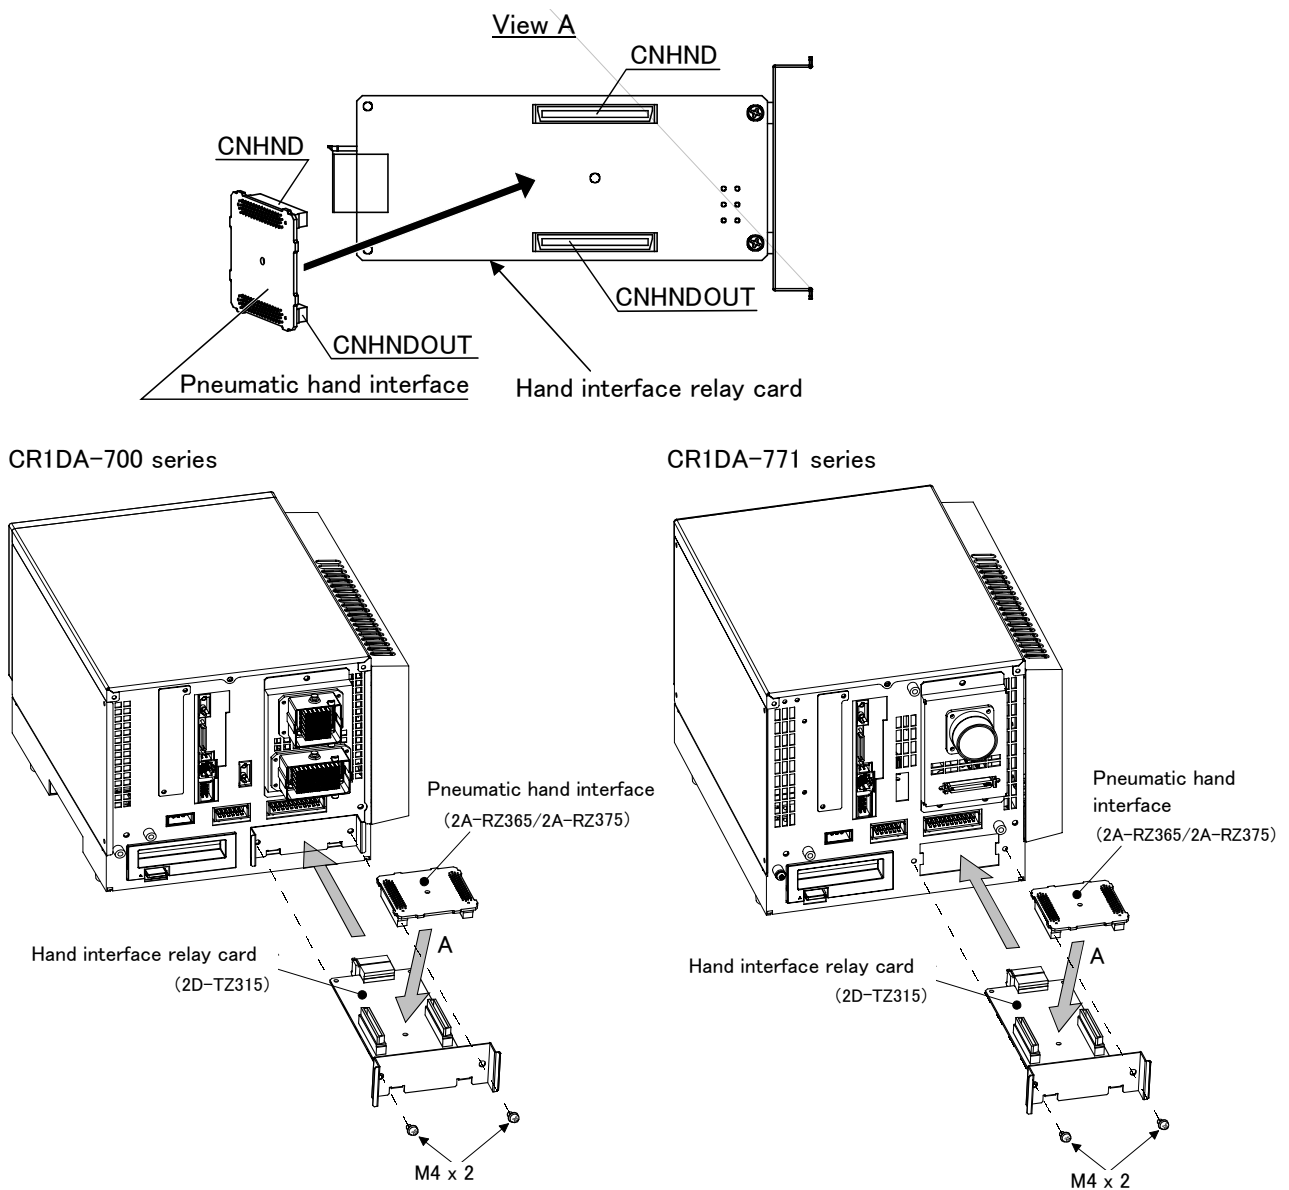


Fig. 3-1 : Installing the pneumatic hand interface (CR1DA-700)

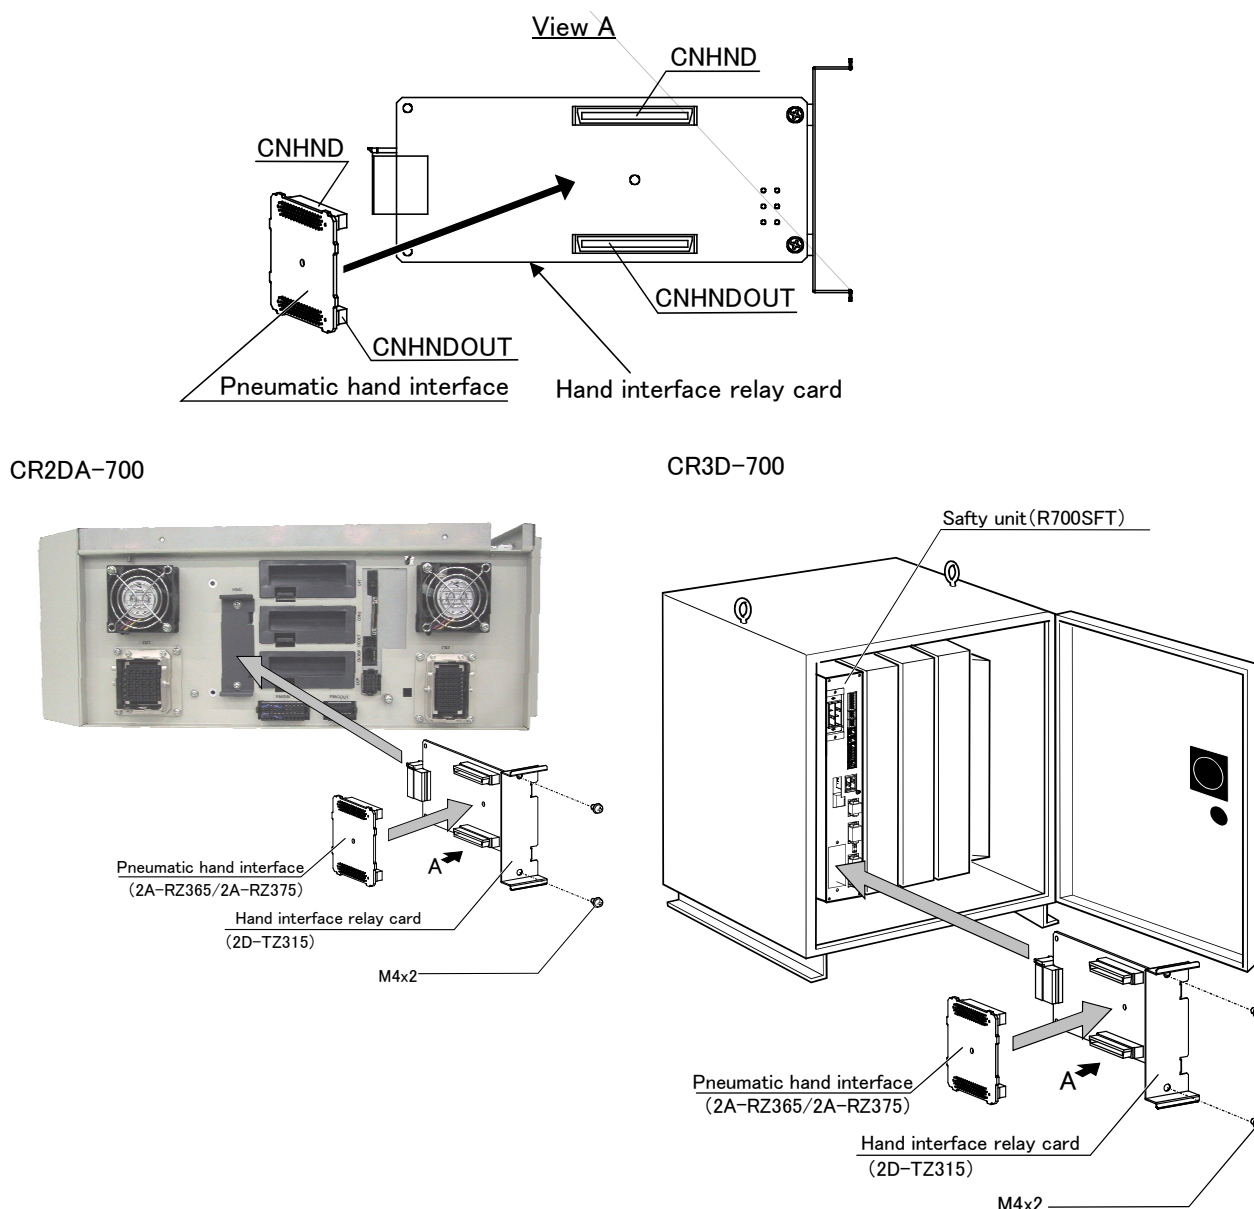


Fig. 3-2 : Installing the pneumatic hand interface (CR2DA-700/CR3D-700)


- 1) Shut off the power of the supply source.
- 2) Remove the M4 screw (two places) and pull out the hand interface relay card (2D-TZ315).
- 3) Install the pneumatic hand interface (2A-RZ365/2A-RZ375) in the hand interface relay card (2D-TZ315).
- 4) Insert the hand interface relay card (2D-TZ315) to the controller, and fix with M4 screw (two places).

3.1.2 SINK/SOURCE setting

Please switch the SINK/SOURCE setting switch or set pin according to the option specification when you use the option pneumatic interface. The following shows the procedure of setting the SINK/SOURCE switch or set pin

(1) CR1DA-700 series controller

- 1) Confirm that the primary power is OFF and that the controller power switch is OFF, please remove the controller's cover.
- 2) Please pick up the switch at the position shown in figure, and switch the SINK/SOURCE setting.
- 3) Please install the controller's cover as before.

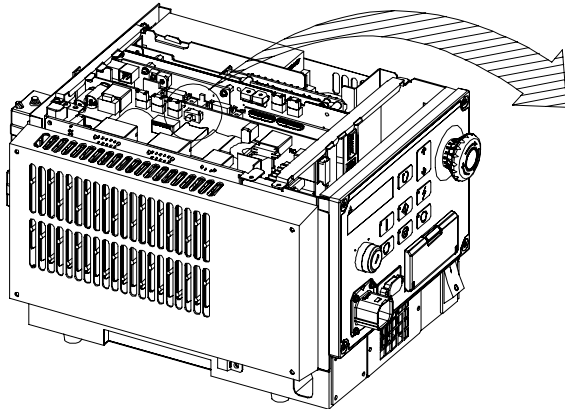

notes)The CR1DA-771 controller is also the same.


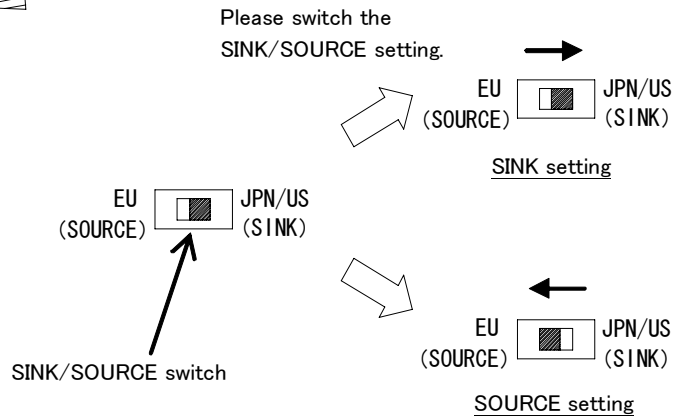



Fig. 3-3 : SINK/SOURCE setting(CR1DA)

(2) CR2DA-700 series controller

- 1) Confirm that the primary power is OFF and that the controller power switch is OFF, please remove the controller's cover.
- 2) Please pick up the set pin at the position shown in figure, and switch the SINK/SOURCE setting.
- 3) Please install the controller's cover as before.

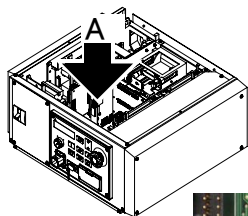

Base circuit board

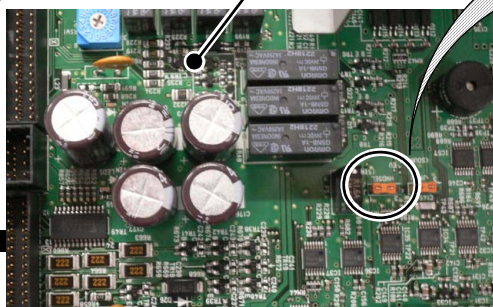

View A

Front of the controller

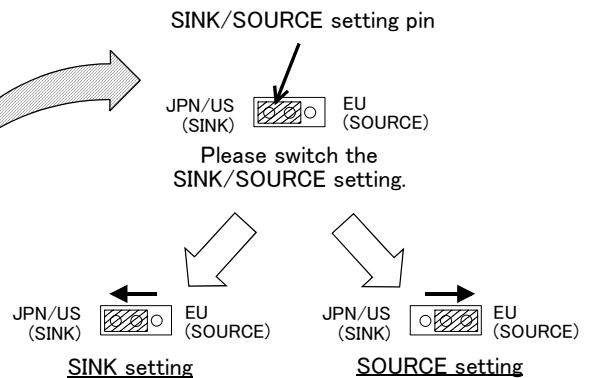


Fig. 3-4 : SINK/SOURCE setting(CR2DA)

(3) CR3D-700 series controller

- 1) Confirm that the primary power is OFF and that the controller power switch is OFF, please open the controller's door.
- 2) Please pick up the switch at the position shown in figure, and switch the SINK/SOURCE setting.
- 3) Please close the controller's door as before.

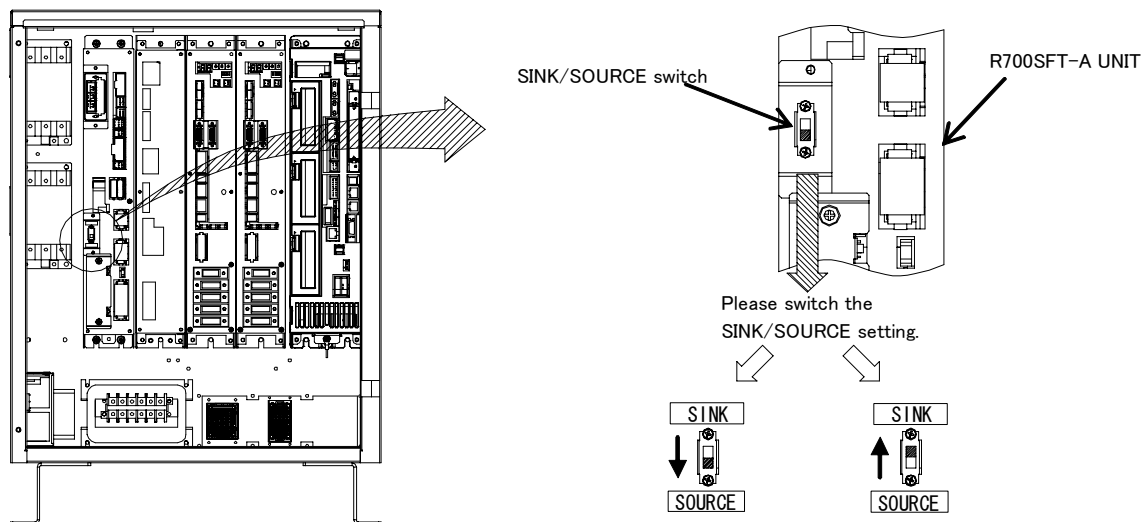



Fig. 3-5 : SINK/SOURCE setting(CR3D)

This completes the installation of the pneumatic hand interface.


3.2 Installing and removing the Option Card

The installation procedure of the interface card .



CR1DA-700 *1)

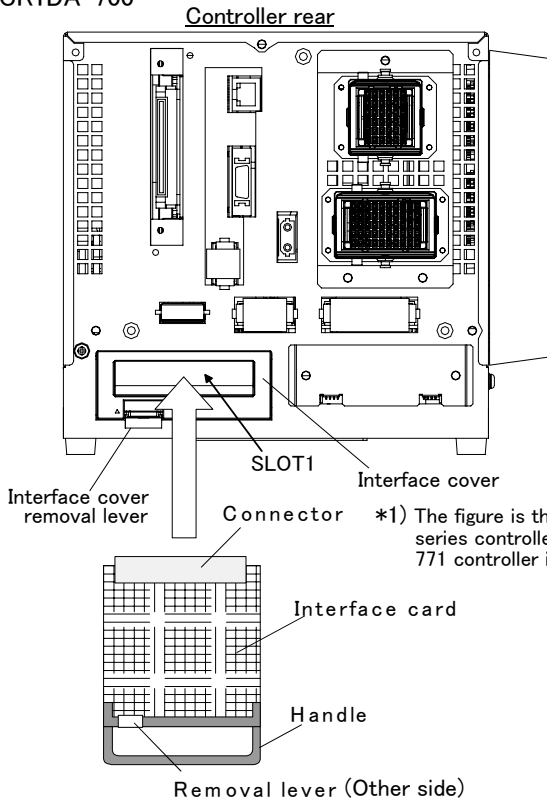

CR2DA-700

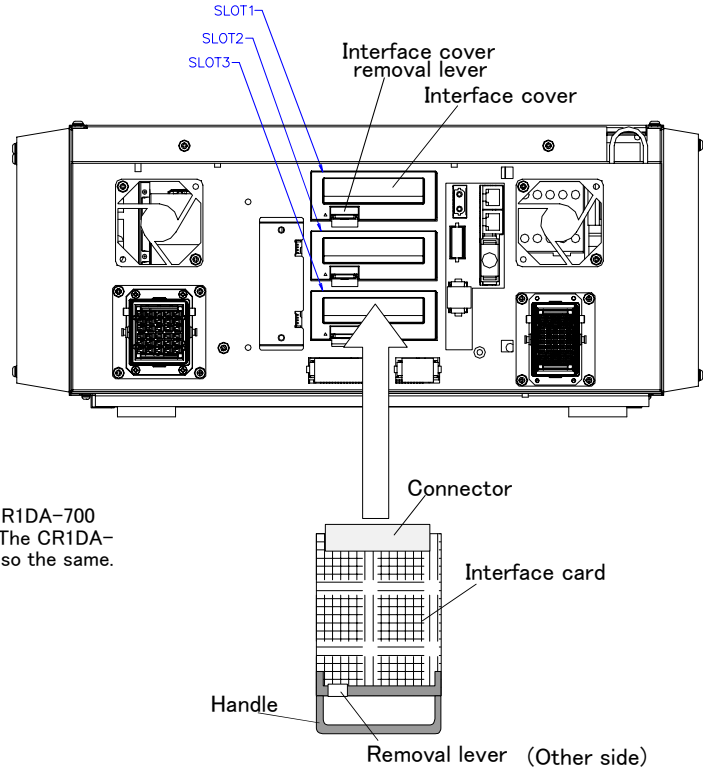

CR3D-700

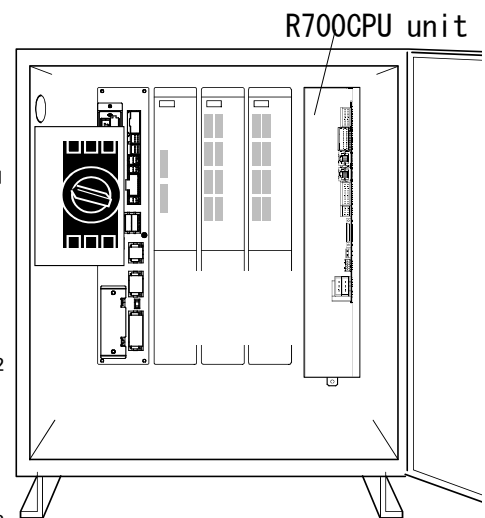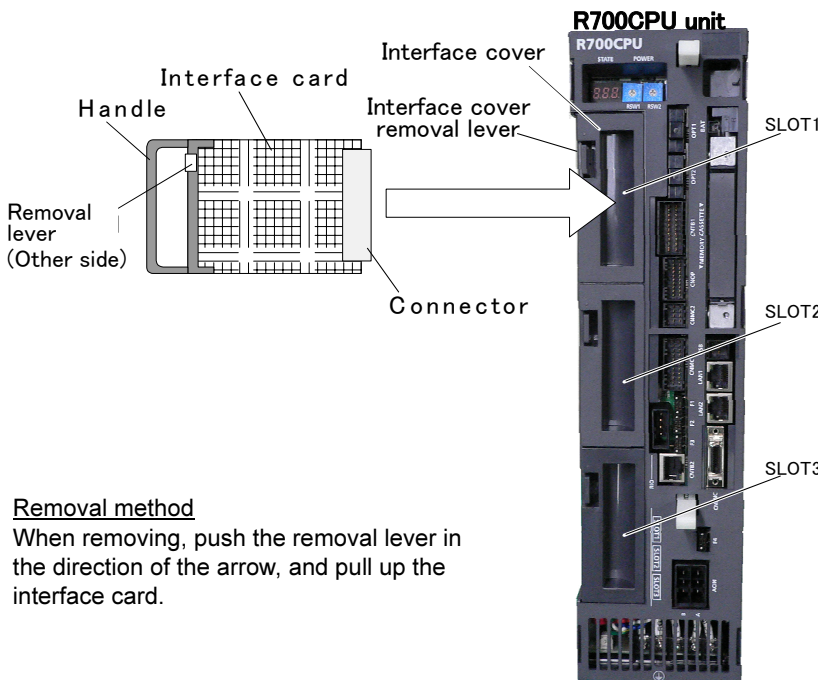

Removal method


When removing, push the removal lever in the direction of the arrow, and pull up the interface card.

Fig. 3-6 : Installation of the interface card


- 1) Turn off the power.
- 2) Pick the interface cover removal lever and pull up the interface cover.
- 3) Insert the interface card in SLOT1, SLOT2, or SLOT3.
Insert the card as both ends of the card may fit into the guide of slot(SLOT1, SLOT2, or SLOT3 showed in Fig. 3-5).
- 4) Insert the connection connector securely to the back until the removal lever is locked with the sound.
This completes the installation of the interface card.

3.3 Installing the extension memory cassette

CR1DA-700 *1)


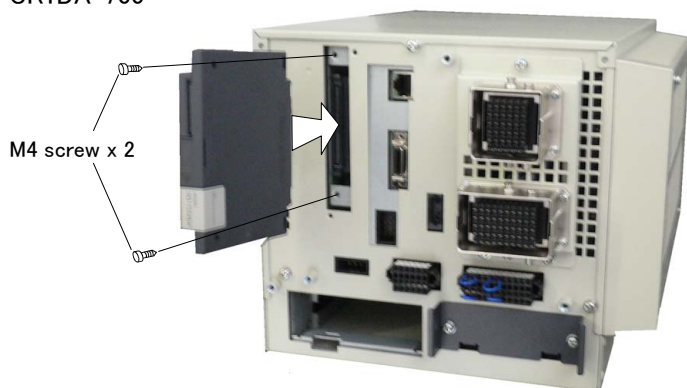


CR2DA-700

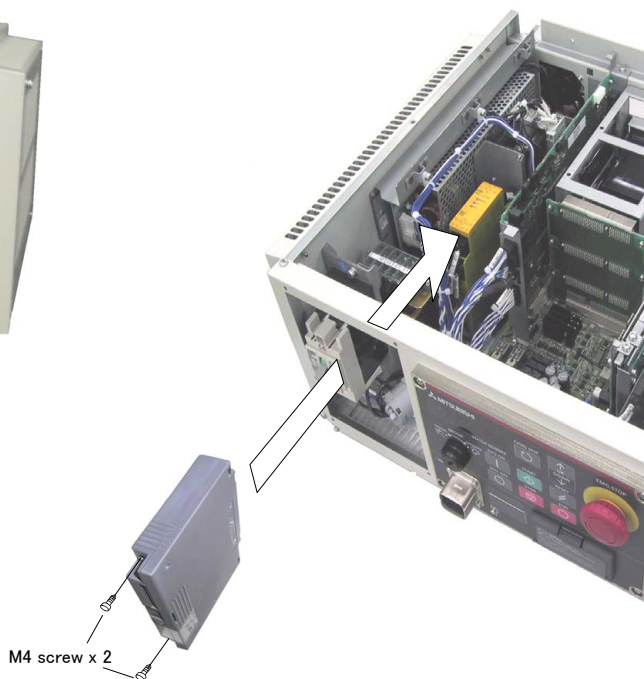

*1) The figure is the CR1DA-700 series controller. The CR1DA-771 controller is also the same.

CR3D-700

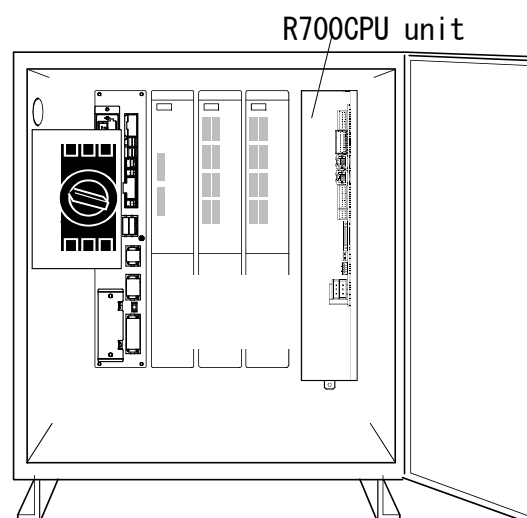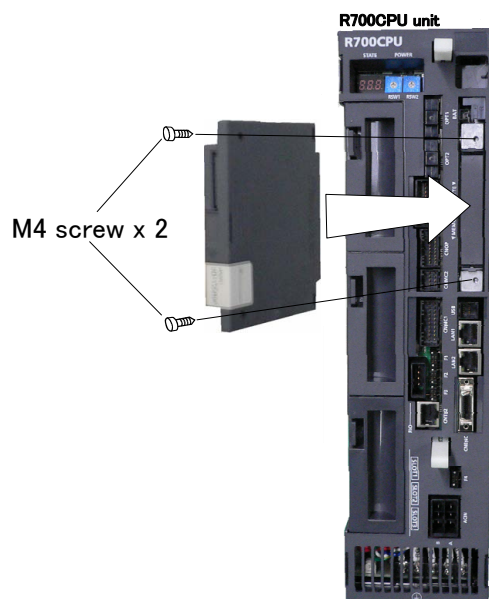

The "▲" is facing downward.

Fig. 3-7 : Installing the extension memory cassette

- 1) Completely back up the memory information in the robot controller by using the RT ToolBox 2. (This must be performed as a preventive measure in case the contents of the internal memory are destroyed while inserting a memory cassette.)
- 2) Turn off the controller power.

CAUTION

Also turn off the supplying source power switch at the controller.
If that is not right, there is danger of the electric shock.

- 3) Remove the power switch cover installed in the front of the controller with removing the four fixing screws.(CR2D-700 controller)
- 4) Remove the rear cover installed in the back side of the controller with removing the three fixing screws.(CR1DA-700 controller)
- 5) Open the front door of the controller. (CR3D-700 controller)
- 6) Install the memory cassette to the controller, and fix surely two screws attached.
- 7) Insert the memory cassette all the way to the back with the "arrow mark"(the surface which inserts screw has the mark) facing downward.
Note) Please keep in mind that the cassette will change if it fastens too much.
- 8) Install the removed cover as before.
- 9) Turn on the controller power.

This completes the installation of the extension memory cassette.

[CAUTION]

The programs that are stored in the control unit will be moved into the extension memory cassette; they will be deleted from the memory in the control unit.

Please be careful not to remove the memory cassette, since if you remove it, there will be no program information residing in the controller (the information is in the memory cassette).

Although the program information (***.mb5) is copied into the memory cassette, the parameter information (***.prm) is still stored in the control unit.

4 Basic operations

In this chapter, the following items will be explained regarding the basic operations for handling the robot.

Handling the controller

The functions of the various keys on the controller are explained.

Handling the teaching pendant

The methods of installing/removing the T/B, and the functions of the various keys are explained.

Turning the power ON/OFF

The items to confirm before turning on the controller power, and the methods of turning the power ON and OFF are explained.

Operating the robot with jog operation

The methods for manually operating the robot arm using the teaching pendant are explained. This is mainly used for teaching work.

Opening and closing the hand

The methods of opening and closing the hand using the teaching pendant are explained.

Program creation to automatic operation

The procedures of creating the program are explained in order.

4.1 Handling the controller

4.1.1 Functions of each key

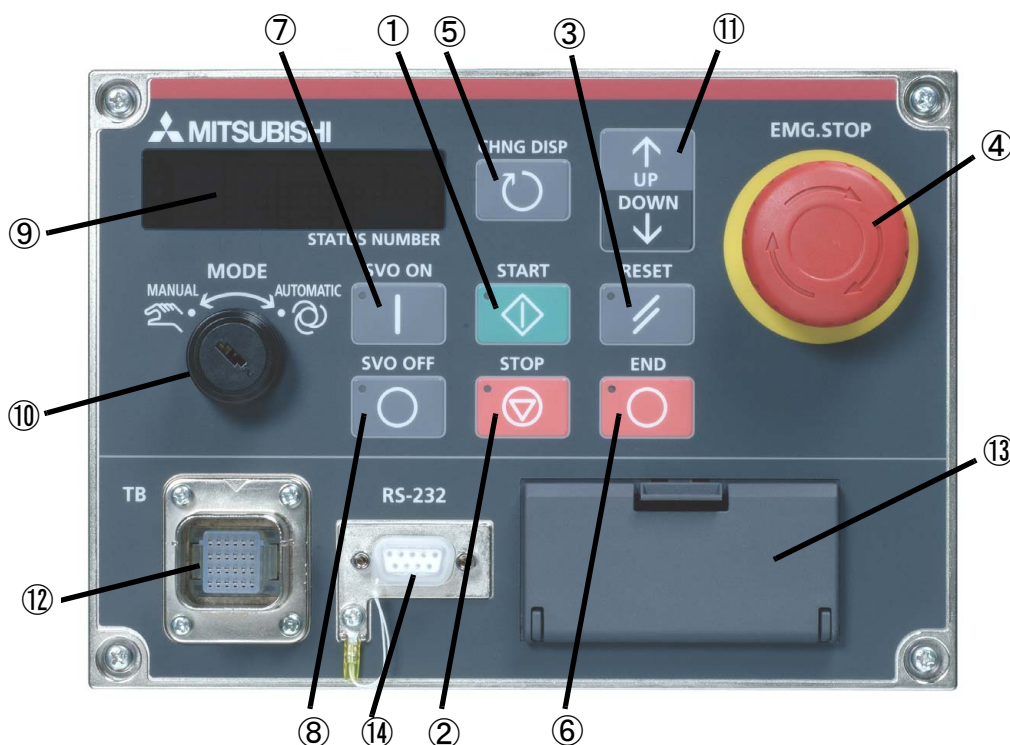


Fig. 4-1 : Operation panel

- ① START button..... This executes the program and operates the robot. The program is run continuously.
- ② STOP button..... This stops the robot immediately. The servo does not turn OFF.
- ③ RESET button..... This resets the error. This also resets the program's halted state and resets the program.
- ④ Emergency stop switch This stops the robot in an emergency state. The servo turns OFF.
- ⑤ CHNGDISP button..... This changes the details displayed on the display panel in the order of "Override" → "Program No." → "Line No.".
- ⑥ END button..... This stops the program being executed at the last line or END statement.
- ⑦ SVO.ON button..... This turns ON the servo power. (The servo turns ON.)
- ⑧ SVO.OFF button..... This turns OFF the servo power. (The servo turns OFF.)
- ⑨ STATUS NUMBER (display panel)..... The alarm No., program No., override value (%), etc., are displayed.
- ⑩ MODE key switch..... This changes the robot's operation mode.
 - AUTOMATIC.....operations from the controller or external equipment are valid. Operations for which the operation mode must be at the external device or T/B are not possible. It is necessary to set the parameter for the rights of operation to connection between the operation panel and external equipment. For details, please refer to "INSTRUCTION MANUAL/Detailed explanations of functions and operations" of the separate volume.
 - MANUAL.....When the T/B is valid, only operations from the T/B are valid. Operations for which the operation mode must be at the external device or controller are not possible.
- ⑪ UP/DOWN button..... This scrolls up or down the details displayed on the "STATUS. NUMBER" display panel.
- ⑫ T/B connection connector This is a dedicated connector for connecting the T/B. When not using T/B, connect the attached dummy connector.
- ⑬ Interface coverUSB interface and battery are mounted.
- ⑭ RS-232 connector This is an RS-232C specification connector for connecting the personal computer.

◆◆◆ What are the operation rights? ◆◆◆


Even when multiple devices, such as a T/B and personal computer, are connected to the controller, the operation at one time is limited to one device. This limited device (has the operation rights)

◆◆◆ What operations require the operation rights? ◆◆◆

Operations that start the robot, such as program start and alarm reset, and operations that can cause starting require the operation rights. Conversely, operation that stop the robot, such as stopping and servo OFF, can be used without the operation rights for safety purposes. Refer to the separate manual "Explanation of functions and operations" for details on the functions related to operation rights.

(1) Padlock specification(CR1DA-700)

If the robot is not used, the power switch can be locked with the padlock so that power supply ON cannot be done easily. The specification is shown in the following.

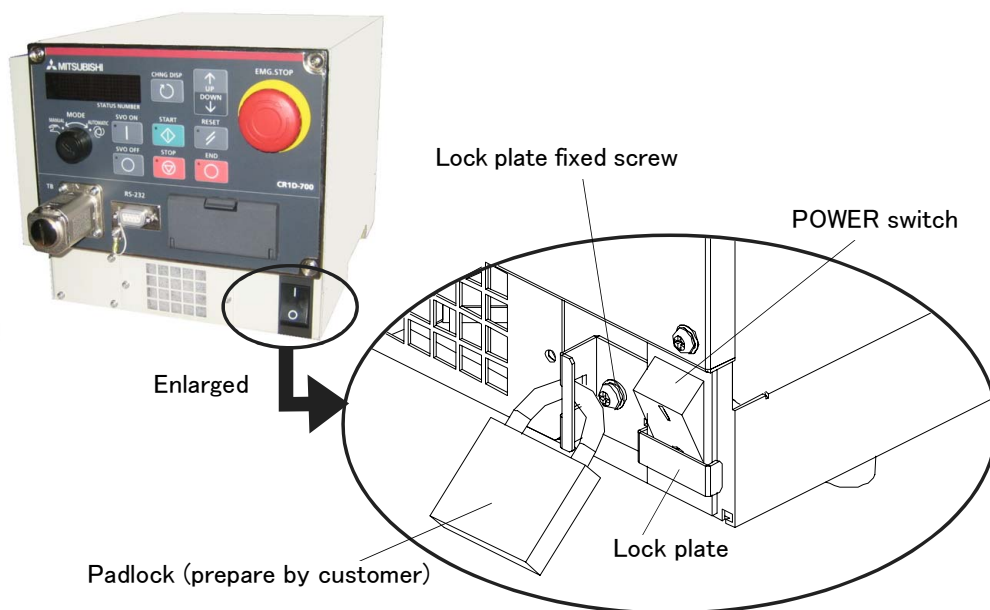

<The operation method>


(1) The lock method (power supply OFF)

- 1) Turn OFF the power switch.
 - 2) Loosen the lock plate fixing screw and make it slide upwards (cover the power switch). Tighten the fixing screw certainly in that position.
 - 3) Install the padlock (customer preparation) to the hole of the lock plate, and lock it.
- The lock is completion

(2) The release method (power supply ON)

- 1) Remove the padlock.
- 2) Loosen the lock plate fixing screw and make it slide downward (position which does not cover the power switch). Tighten the fixing screw certainly in that position.

The lock device which can be used

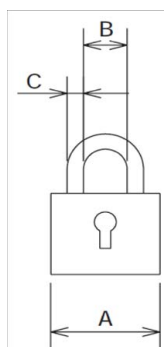


Dimension of the padlock

Dimension (mm)		
A	B	C
25	14	4mm or less

Fig. 4-2 : Operation lock of the power switch(CR1DA-700)

< CR2DA-700 >

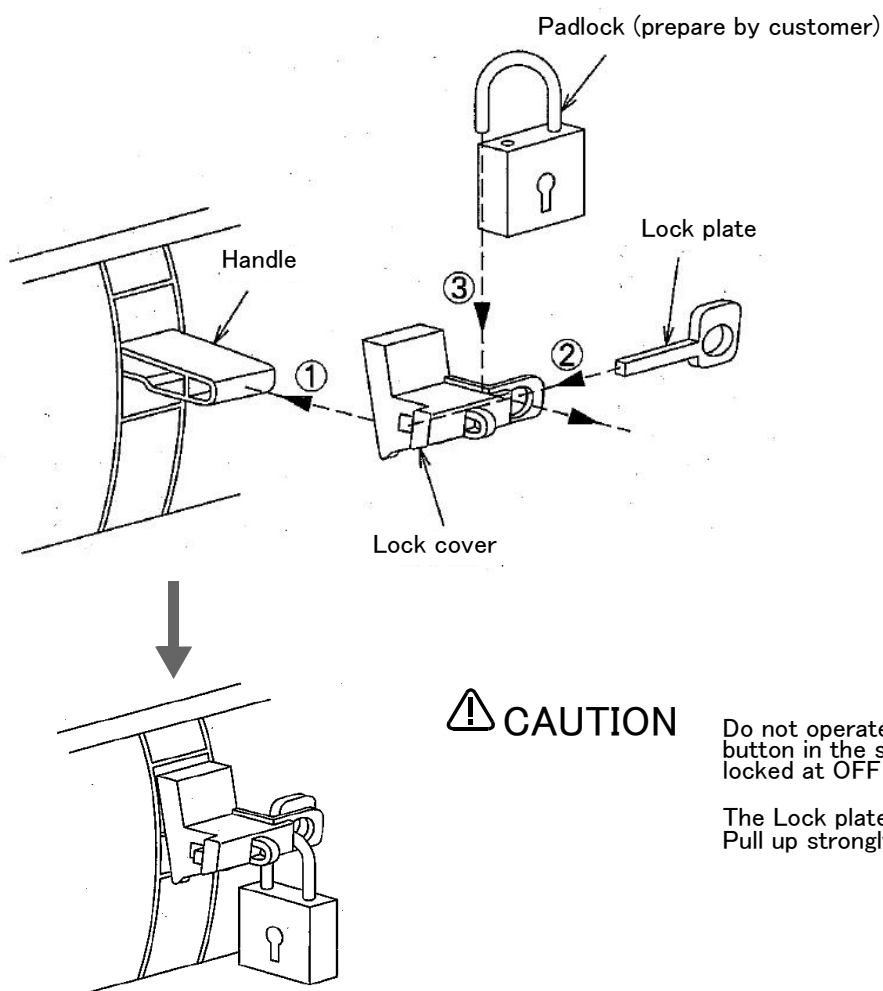


⚠ CAUTION

Do not operate the trip test by the trip button in the state of the power switch locked at OFF position.

The Lock plate is installed strongly. Pull up strongly and remove.

The lock device which can be used

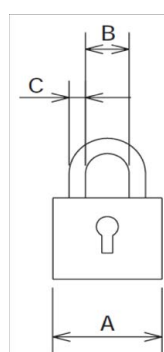


Dimension of the padlock

Dimension (mm)		
A	B	C
25	14	4mm or less

Fig.4-3 : operation lock of the power switch(CR2DA-700)


< CR3D-700 >

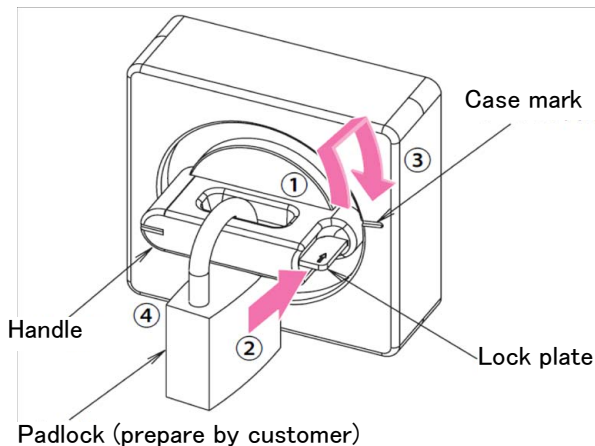

Usage of lock function

- ① Turn the handle to the reset direction until the mark of the lock plate and the case mark is in match.
- ② Push in the lock plate.
- ③ Return the handle to the OFF position, with pushing the lock plate.
- ④ Lock the handle with the padlock.

The lock device which can be used

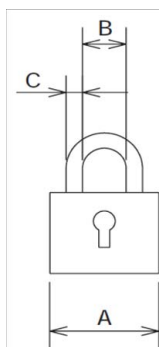

Dimension of the padlock

Dimension (mm)		
A	B	C
35(0.11)	19	5
40(0.13)	22 or 23	5.5

The maximum size of "C" which can be installed is 8mm.

Fig.4-4 : Operation lock of the power switch(CR3D-700)

4.2 Handling the T/B

4.2.1 Installing and removing the T/B

Installing and removing the T/B, with turning off the controller power. If T/B is Installed and removed in the state of control source ON, emergency stop alarm will be occurred.

If you use the robot wherein T/B is removed, install the dummy connector of attachment for the product instead of T/B. Take out and insert the dummy connector with the connector itself.



CAUTION

Please do not pull the cable of T/B strongly or do not bend it too much.

It becomes the breaking of a wire of the cable and the cause of breakage of the connector. Please installing and removing so that stress does not start the cable with the connector itself. The connector may be felt hard if installation and removal of the teaching pendant or the dummy plug is repeated to the frequent.

(1) Installing the T/B

Explain the installation method of T/B below.

- 1) Check that the POWER (power supply) switch of the robot controller is OFF.
- 2) Connects T/B connector to the robot controller. Use as the upper surface the lock lever shown in Fig. 4-5, and push in until there is sound.

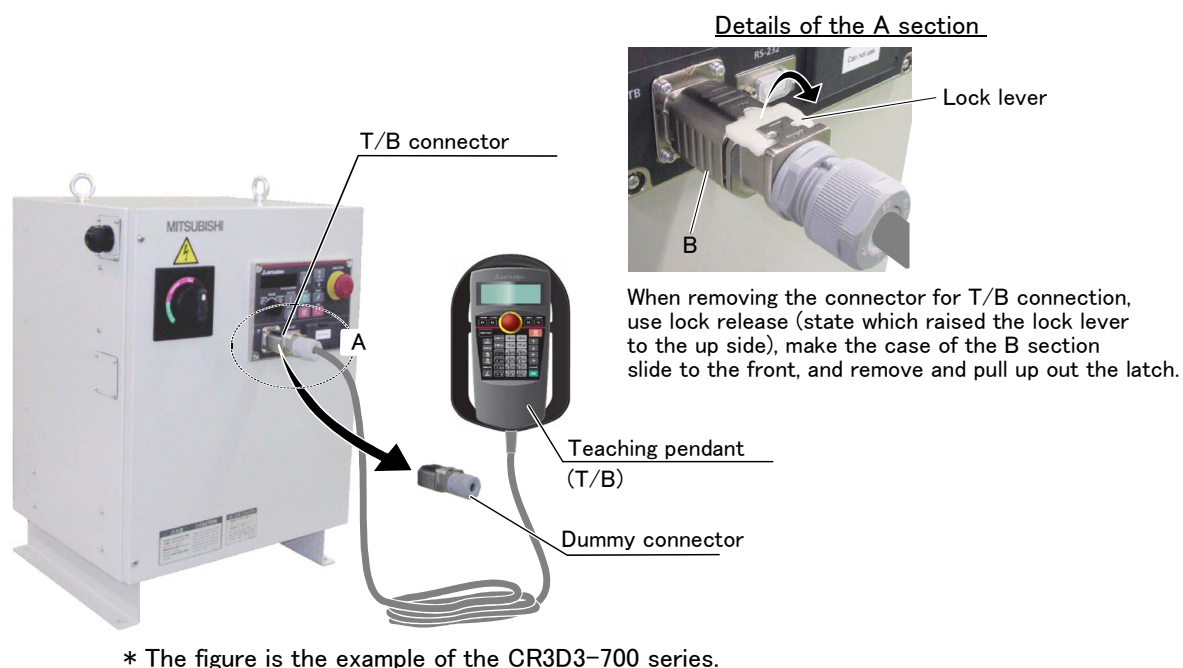


Fig. 4-5 : Installing and removing the T/B

The installation of T/B is finished.

(2) Removing the T/B

Explain the removing method of T/B below.

- 1) Check that the POWER (power supply) switch of the robot controller is OFF.
- 2) Raise up the lock lever in the connector upper part, and pull up the connector.
- 3) Please install the dummy connector, if you use the robot, without connecting T/B.

The removing of T/B is finished.

4.2.2 Functions of each key

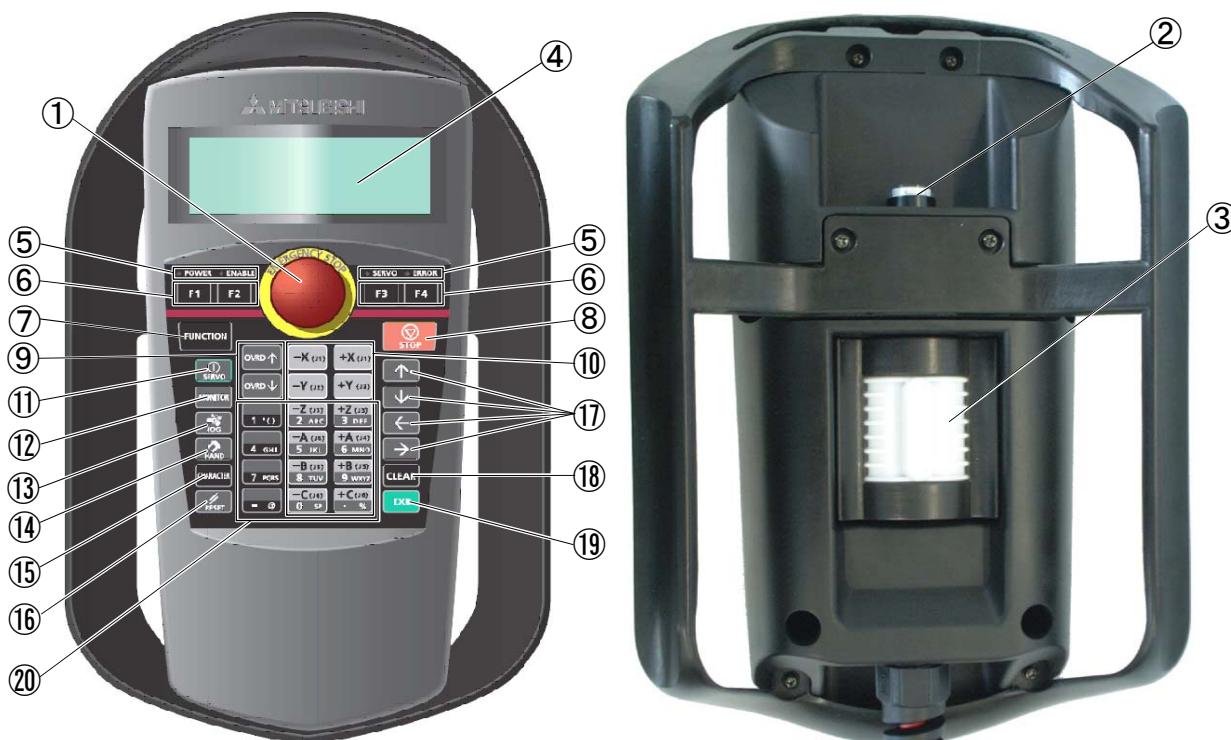


Fig. 4-6 : Teaching pendant (R32TB)

- 1) : [Emergency stop] switch.....The robot servo turns OFF and the operation stops immediately. The release of the emergency stop turns the switch to the right, or pulls it.
- 2) : [Enable/Disable] switchThis switch changes the T/B key operation between enable and disable.
- 3) : [Enable] switch.....When the [Enable/Disable] switch is available, the servo will be turned off, if this switch is release or it pushes strongly. And the robot will stop immediately.
- 4) : LCD display panelThe robot status and various menus are displayed.
- 5) : Status display lampDisplay the state of the robot or T/B.
- 6) : [F1], [F2], [F3], [F4].....Execute the function corresponding to each function currently displayed on LCD.
- 7) : [FUNCTION].....Change the function display of LCD.
- 8) : [STOP] key.....This stops the program and decelerates the robot to a stop.
- 9) : [OVRD ↑][OVRD ↓] keyChange moving speed. Speed goes up by [OVRD ↑] key. Speed goes down by [OVRD ↓] key
- 10) : JOG operation key.....Move the robot according to jog mode. And, input the numerical value.
- 11) : [SERVO] keyPress this key with holding AA key lightly, then servo power will turn on.
- 12) : [MONITOR] key.....It becomes monitor mode and display the monitor menu.
- 13) : [JOG] keyIt becomes jog mode and display the jog operation.
- 14) : [HAND] keyIt becomes hand mode and display the hand operation.
- 15) : [CHAR] keyThis changes the edit screen, and changes between numbers and alphabetic characters.
- 16) : [RESET] keyThis resets the error. The program reset will execute, if this key and the EXE key are pressed.
- 17) : [↑][↓][←][→] keyMoves the cursor each direction .
- 18) : [CLEAR] key.....Erase the one character on the cursor position .
- 19) : [EXE] keyInput operation is fixed. And, while pressing this key, the robot moves when direct mode.
- 20) : Number/Character keyErase the one character on the cursor position . And, inputs the number or character

◆◆◆ Remove the protection seal of the teaching pendant before using ◆◆◆
 Installed the protection seal on the teaching pendant to prevent the damage of the display LCD and the key seat when shipping. Remove the protection seal when using. The operation of the key and the confirmation of the display is possible without removing the protection seal, however the adhesive may be left on the teaching pendant as the time passes.

4.3 Turning the power ON and OFF

4.3.1 Turning the control power ON

⚠ CAUTION

Always confirm the following items before turning the controller power ON.

- 1) Make sure that there are no operators in the robot operation range.
- 2) Make sure that the controller and robot arm are securely connected with the machine cable.
- 3) Make sure that the external emergency stop switch is connected to the controller.
- 4) Make sure that the controller power cable and grounding cable are correctly connected.
- 5) Make sure that the grounding cable is connected to the robot arm.
- 6) Make sure that there are no obstacles, such as tools, in the robot operation range.

<CR1DA-700>




<CR2DA-700>



[POWER] switch

<CR3D-700>

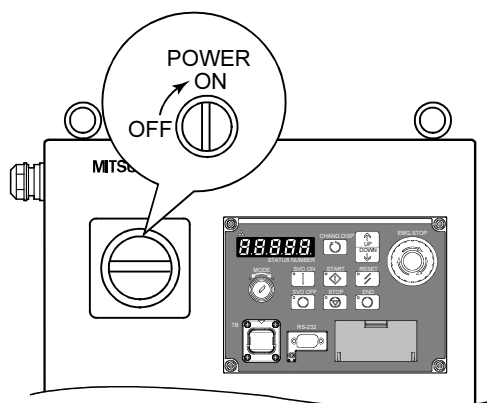

Turn the controller [POWER] switch ON.

"o. 100" will appear on the STATUS NUMBER display.

This completes the turning ON of the control power.

◆◆◆ What is the main power, control power and servo power? ◆◆◆

Main power ----- This supplies power to the controller. (Primary power)

Control power --- This supplies power to the control sections (PCB, etc.) in the controller.

Servo power ----- This supplies power to the motor that drives the robot.

When energized, this is called servo ON, and when shut off, this is called servo OFF.

◇◆◇ Error: It is if C0150 occurs. ◇◆◇

At the time of the first power supply on, error:C0150 (the serial number of the robot arm has not been set up) occur the robot after purchase.

Please input the serial number of the robot arm into Parameter: RB SERIAL. The input method is shown in next page.


4.3.2 Input the serial number

At the time of the first power supply on, error:C0150 (the serial number of the robot arm has not been set up) occur the robot after purchase.


Please input the serial number of the robot arm into Parameter: RBSERIAL.

The serial number is printed to the rating name board on the back of the robot arm.


- 1) Press the [RESET] key of T/B and cancel the error of T/B.
- 2) Press the [EXE] key of T/B and display the menu panel.

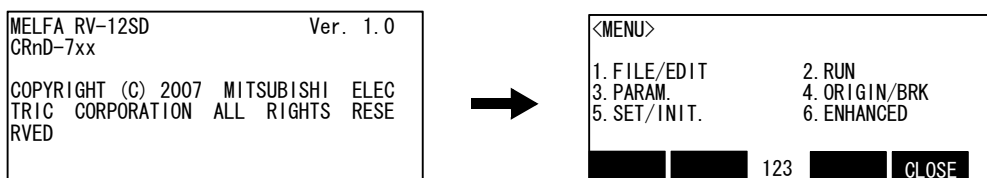


- 3) Press the [3] key of T/B and display the parameter.

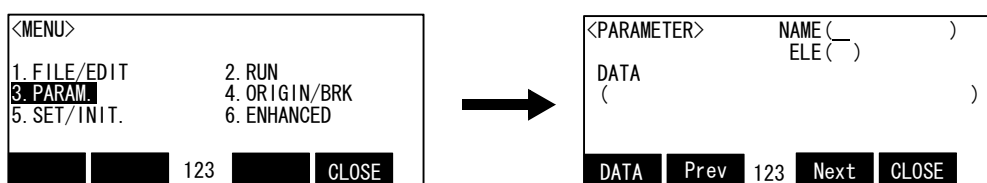

- 4) Input "RBSERIAL" into the name.

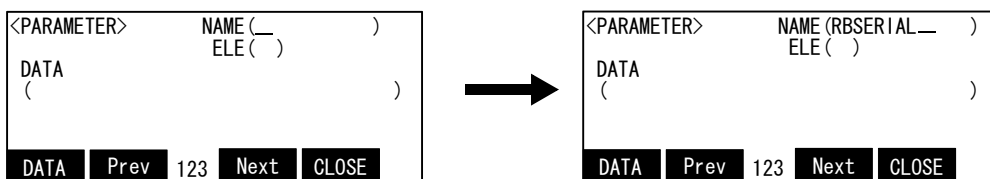

- 5) Press the function key ([F1]) corresponding to the "data", and input the serial number of the robot arm.

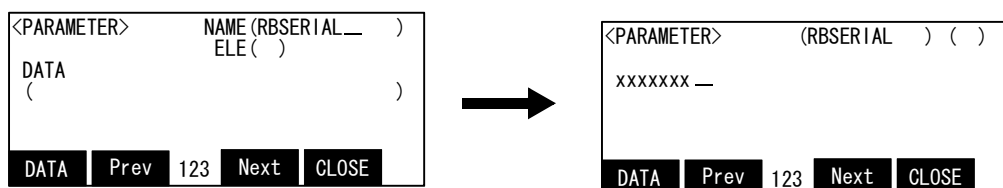


Press the [EXE] key, and fix the value with sound, and return to the parameter screen.

◆◆◆ The input of the number/character ◆◆◆

Each time the [CHARACTER] key is pressed, the number input mode and the character input mode change. The current input mode is displayed in the center under the screen, and the display of "123" shows that the number input mode and "ABC" is the character input mode.

For details, please refer to "INSTRUCTION MANUAL/ Detailed explanations of functions and operations" of the separate volume.


6) Press the function key ([F1]) corresponding to the "close", and return to the menu screen.

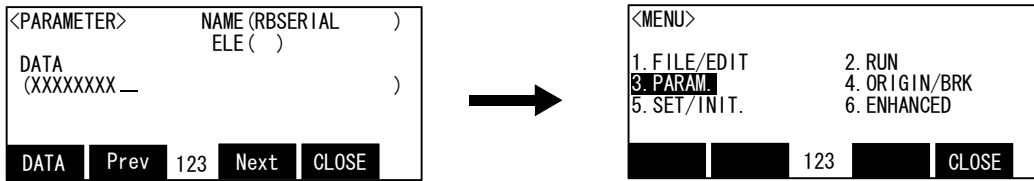

4.3.3 Shutting OFF the control power



1) If the robot is operating, press the controller [STOP] switch, and stop the robot.

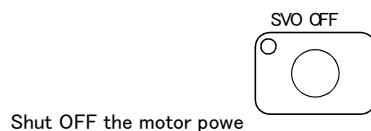


2) After the robot has stopped, press the controller [SVO OFF] switch, and turn the servo OFF.

3) Turn the controller [POWER] switch OFF.


The control power will be shut OFF.

4.4 Turning the servo power ON/OFF


4.4.1 Turning the servo power ON (servo ON)

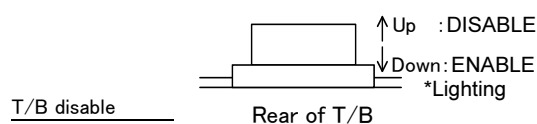

1) Confirm that the T/B [ENABLE] switch is set to "DISABLE".

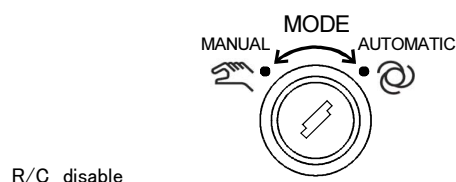

2) Confirm that the [MODE] switch on the front of the controller is set to "AUTOMATIC".

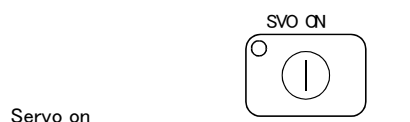

3) Press the [SVO ON] switch on the front of the controller.
The switch's lamp will light indicating that the servo is ON.

CAUTION

Make sure that there are not operators in the robot operation range before turning ON the servo.

4.4.2 Shutting OFF the servo power (servo OFF)



1) If the robot is operating, press the controller [STOP] switch on the front of the controller, and stop the robot.



2) After the robot has stopped, press the controller [SVO OFF] switch on the front of the controller, and turn the servo OFF. The switch's lamp will light indicating that the servo is OFF.

◆◆◆ Operation rights not required ◆◆◆

This operation does not require the operation rights, so the servo can be turned OFF at any time by pressing the [SVO OFF] switch.

4.5 Jog operation


Refer to the separate manual "Robot arm setup and maintenance" when carrying out jog operation. The following jog operation modes are available. Use these according to the purpose.

Table 4-1 : Jog modes


Jog mode	Main application	Explanation
JOINT JOG	<ul style="list-style-type: none"> Moves each joint. Moves the robot arm largely. Changes the robot posture. 	Separate manual "Robot arm setup and maintenance"
XYZ JOG	<ul style="list-style-type: none"> Accurately sets the teaching position. Moves the axis straight along the XYZ coordinate system. Moves the axis straight while maintaining the robot posture. Changes the posture while maintaining the hand position. 	
TOOL JOG	<ul style="list-style-type: none"> Accurately sets the teaching position. Moves the axis straight along the hand direction. Changes the posture while maintaining the hand position. Rotates the hand while maintaining the hand position. 	
3-AXIS XYZ JOG	<ul style="list-style-type: none"> When the axis cannot be moved with XYZ JOG that maintains the posture. When the tip is to be moved linearly but the posture is to be changed. 	
CYLINDER JOG	<ul style="list-style-type: none"> Moves in a cylindrical shape centering on the Z axis while maintaining the posture. Moves linearly in a radial shape centering on the Z axis while maintaining the posture. 	

4.6 Opening and closing the hand

Hands 1 to 6 can be opened and closed with the T/B.

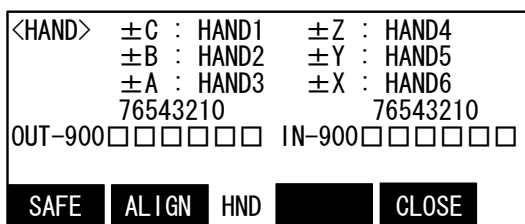

Press the [HAND] key, and display the hand screen.

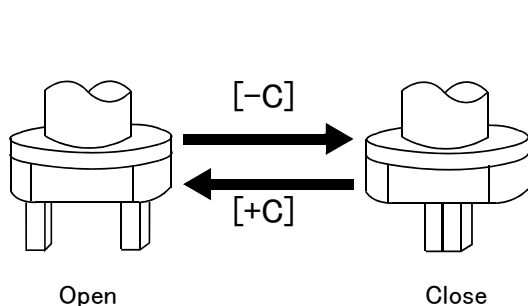

Opening and closing hand 1

Open: Press [+C] key
Close: Press [-C] key

Opening and closing hand 2

Open: Press [+B] key
Close: Press [-B] key

Opening and closing hand 3

Open: Press [+A] key
Close: Press [-A] key

Opening and closing hand 4

Open: Press [+Z] key
Close: Press [-Z] key

Opening and closing hand 5

Open: Press [+Y] key
Close: Press [-Y] key

Opening and closing hand 6

Open: Press [+X] key
Close: Press [-X] key

4.7 Programming

The procedures from creating the program to automatic operation are explained in order using a simple procedure as an example.

(1) Creation procedures

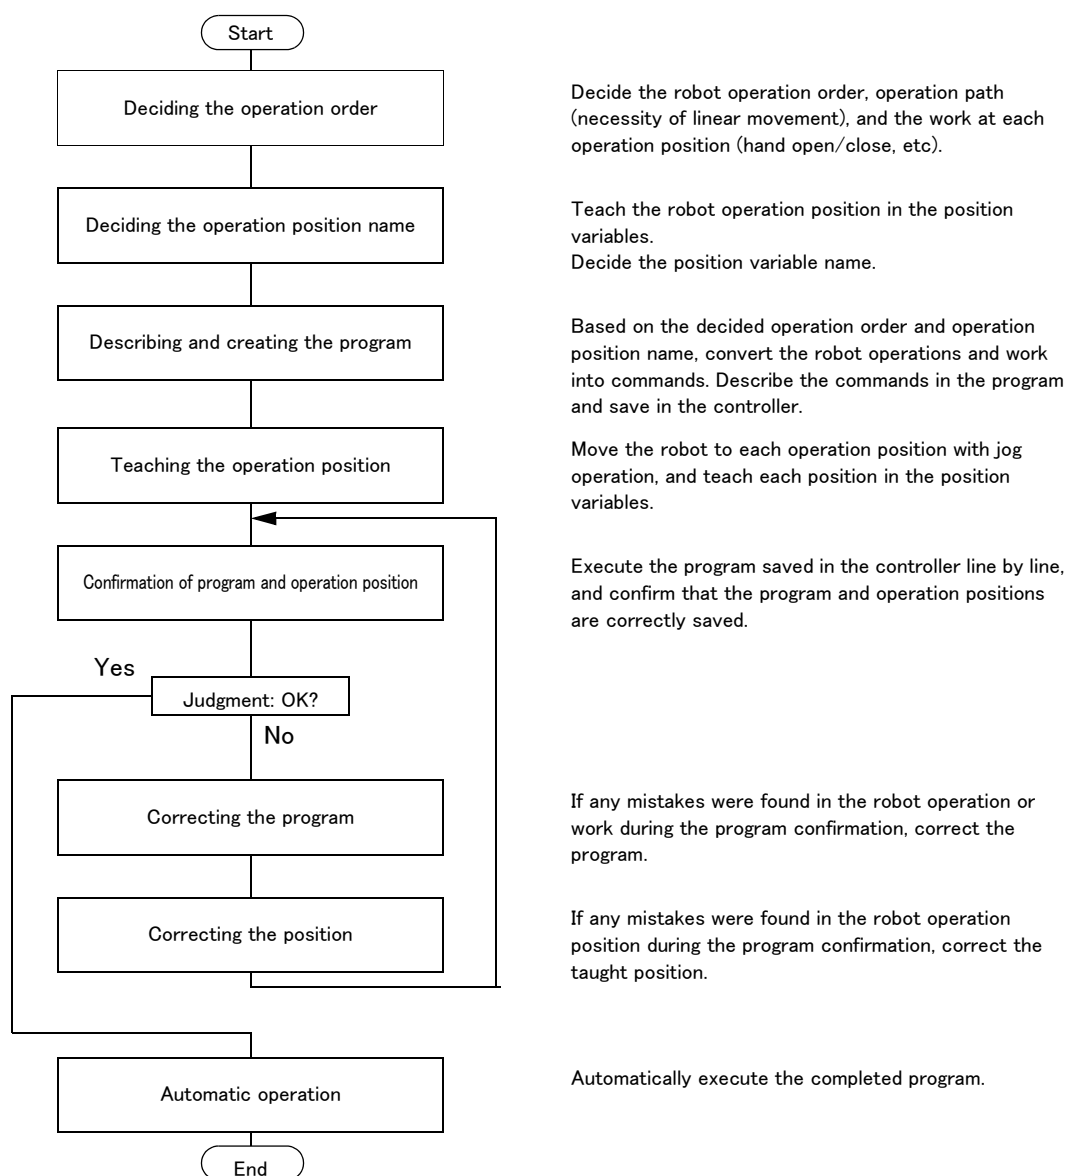


Fig.4-7 : Program creation procedures

(2) Robot work

Assume that the robot is going to carry the workpiece from the left to the right.


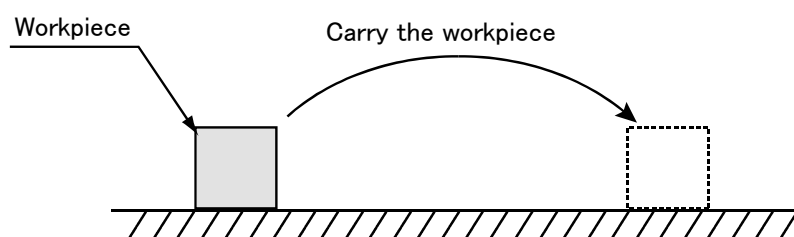


Fig.4-8 : Example of work

4.7.1 Creating the program

(1) Deciding the operation order

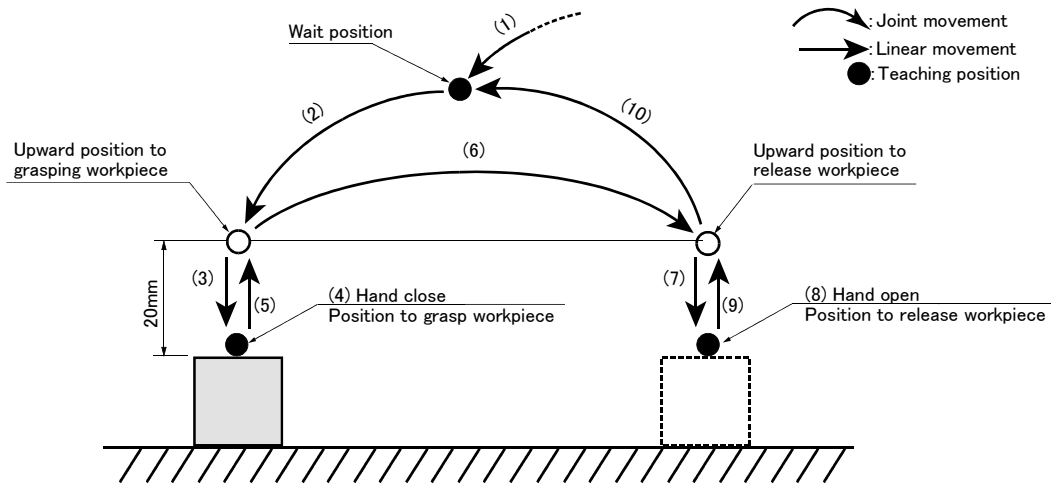

Start

- (1) Move to wait position (joint movement).
- (2) Move to 20mm upward workpiece (joint movement).
- (3) Move to position to grasp workpiece (linear movement).
- (4) Grasp workpiece (hand close).
- (5) Move 20mm upward (linear movement).
- (6) Move to 20mm upward position to release workpiece (joint movement).
- (7) Move to position to release workpiece (linear movement).
- (8) Release workpiece (hand open).
- (9) Move 20mm upward (linear movement).
- (10) Move to wait position (joint movement).


End

Fig.4-9 : Deciding the operation order

◆◆◆ Joint movement and linear movement ◆◆◆

The operation for which the robot movement path is not designated in particular is the "joint movement". The operation for which the movement path is designated as linear is "linear movement". If the robot could interfere with the peripheral devices, such as the workpiece, when moving to grasp or release the workpiece, designate "linear movement" to prevent any interference.

(2) Deciding the operation position name

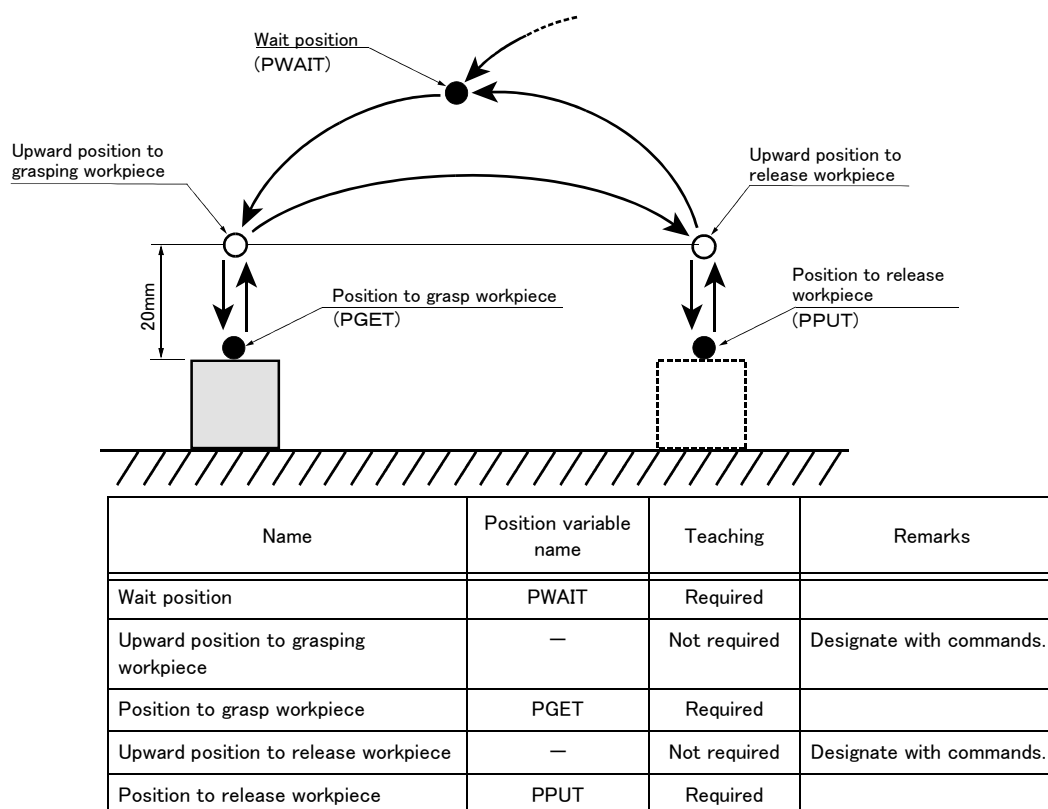

Position variable name ···· Designate a random character string starting with "P".
Up to eight characters can be designated.

Fig.4-10 : Deciding the operation position name

◆◆◆ Teaching the operation position ◆◆◆

The operation position does not necessarily need to be taught.

The positions shown with white circles in Fig. 4-10 can be designated with commands as "position 20mm away from target position". Refer to Page 49, "(3) Describing and creating the program".

CAUTION

The designation of the direction separated from the target position differs according to the robot type.

The position is along the Z axis of the TOOL coordinate system, and the direction is designated with the + and - signs.

Refer to the section on the TOOL JOG operation in the separate "Instruction Manual/ Robot arm setup and maintenance", and confirm the Z axis direction of the TOOL coordinate system. Then, designate the correct sign (direction) that matches the robot being used.

Designating the reverse direction could lead to interference with the peripheral devices and damage.

Generally (in the default state), the hand retract direction is the "-" sign with the vertical articulate type robot, and the "+" sign is the robot's upward direction with the other robots.

(3) Describing and creating the program


■ Convert the target robot operations and work into commands.

Refer to the separate manual "Instruction Manual: Detailed explanations of functions and operations" for details on the commands.

Table 4-2 : Commands used

Target operation and work	Command	Example of designation	
Joint movement	Mov	Move to position variable PWAIT	Mov PWAIT
		Move to 20mm upward position variable PGET	Mov PGET,+20 <small>Note)</small>
Linear movement	Mvs	Move to position variable PGET	Mvs PGET
		Move to 20mm upward position variable PGET	Mvs PGET,+20 <small>Note)</small>
Hand open	Hopen	Open hand 1	Hopen 1
Hand close	Hclose	Close hand 1	Hclose 1
Wait	Dly	Wait 1 second	Dly 1.0
End	End	End the program	End

■ Program the converted commands

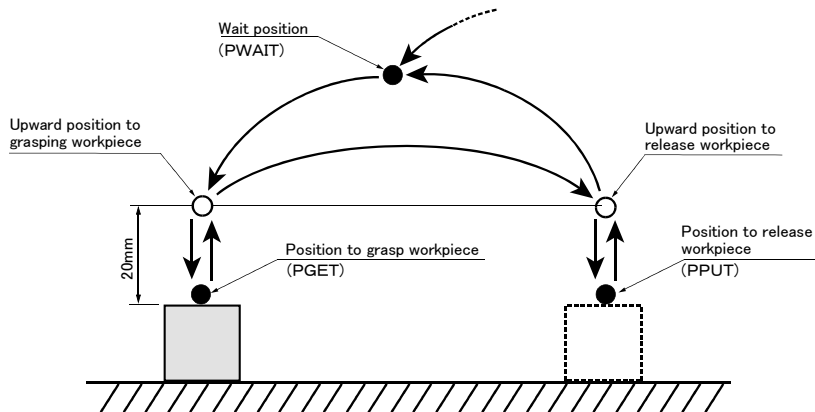

Start

- (1) Move to wait position (joint movement) 1 Mov PWAIT
- (2) Move to 20mm upward workpiece (joint movement)..... 2 Mov PGET,+20 Note)
- (3) Move to position to grasp workpiece (linear movement)..... 3 MVS PGET
- (4) Grasp workpiece (hand close)..... 4 HClose 1
- (5) Waits for 1 seconds 5 Dly 1.0
- (6) Move 20mm upward (linear movement)..... 6 MVS PGET,+20 Note)
- (7) Move to 20mm upward position to release workpiece (joint movement) ... 7 Mov PPUT,+20 Note)
- (8) Move to position to place workpiece (linear movement) 8 MVS PPUT
- (9) Release workpiece (hand open)..... 9 HOpen 1
- (10) Waits for 1 seconds 10 Dly 1.0
- (11) Move 20mm upward (linear movement) 11 MVS PPUT,+20 Note)
- (12) Move to wait position (joint movement)..... 12 Mov PWAIT
- End..... 13 End

Hand ···· Up to four hands can be installed. However, in the above program, the 1st hand connected to hand 1 is the target.

Fig. 4-11 : Describing the program

⚠ CAUTION

Note) Upward movement is designated at a position along the Z axis of the TOOL coordinate system, and the direction is designated with the + and - signs. Refer to the section on the TOOL JOG operation in the separate "Installation Manual/ Robot arm setup and maintenance", and confirm the Z axis direction of the TOOL coordinate system. Then, designate the correct sign (direction) that matches the robot being used.

Designating the reverse direction could lead to interference with the peripheral devices and damage.

Generally (in the default state), the hand retract direction is the "-" sign with the vertical articulate type robot, and the "+" sign is the robot's upward direction with the other robots. "+20" in the command line is a example in horizontal multiple-jointed type robot.

◆◆◆ Program format ◆◆◆

The program format is configured of the "step No. command parameter affixed to command" as shown in [Fig. 4-11](#).


Example) 1 Mov PWAIT

step No. Command Parameter affixed to command



The program is executed in order from the step No. with the smallest number.

- Input the described program into the controller.
The T/B is used for this operation.


Preparing the T/B

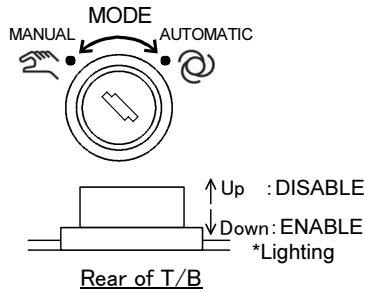



- Set the controller [MODE] switch to "MANUAL".
- Set the T/B [ENABLE] switch to "ENABLE".

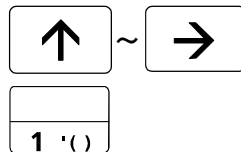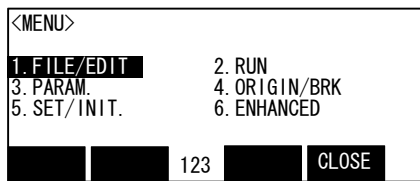

- In the <MENU> screen, press the arrow keys ("↑", "↓", "←", "→") and move the cursor to "1. Management and edit", and then press the [EXE] key. The <Management and edit> screen will appear.

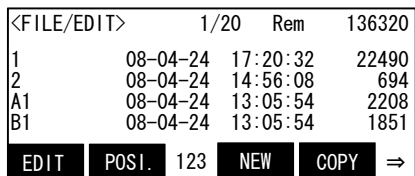

 - Press the [F3](New) key, and display the new program screen.

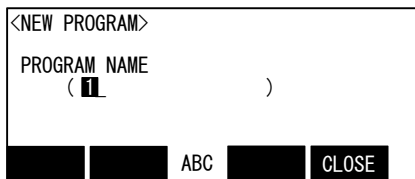

- Press [1], [EXE] key, and display the edit screen of program No1.



◆◆◆ Using the T/B ◆◆◆
Set the controller [MODE] switch to "MANUAL" and the T/B [ENABLE] switch to "ENABLE". Operations from the T/B are not possible unless the controller [MODE] switch is set to "MANUAL".

◆◆◆ Inputting numbers ◆◆◆
Each time the [CHARACTER] key is pressed, the number input mode and the character input mode change. The current input mode is displayed in the center under the screen, and the display of "123" shows that the number input mode. The number currently written to the lower left of each key in this state can be inputted.

◆◆◆ Correcting incorrect numbers ◆◆◆
Press the [CLREAR] key to delete the character, and then input it again. And, if the long pushing [CLEAR] key, all the data in the parenthesis can be deleted.
If the cursor is returned by pressing the [←] key, and a character is input, it will be inserted.



F3



1 '()



CHARACTER
-C (J6) +A (J4)
0 SPACE 6 MNO



→ +A (J4)
6 MNO



-B (J5)
8 TUV

6) Press the [F3] key three times.
The cursor will move to the command editing line.

7) Confirm that the number input mode and press the [1] key.
"1" of the step number is inputted.

8) Press the [CHARACTER] key, and set to the character input mode, then press [SP] , [MNO] key. Display the space and "M."

9) Press the [→] key, and the cursor is moved. Then press the [MNO] key 3 times, and input "o".

10) Press the [TUV] key 3 times, and input "v".

 

◆◆◆ Inputting characters and space ◆◆◆

Each time the [CHARACTER] key is pressed, the number input mode and the character input mode change. The current input mode is displayed in the center under the screen, and the display of "ABC" shows that the character input mode. The character currently written to the lower right of each key in this state can be inputted. When you continue and input the character in the same key, once press the [->] key and advance the cursor. The space is assigned to the [SP] key.


◆◆◆ The input method of the mark ◆◆◆

It comes out to input the character which is not displayed on the key. The character currently assigned to the key is shown below.



- a) [' ()] key ' → (→) → " → ^ → : → ; → ¥ → ?
- b) [@ =] key @ → = → + → - → * → / → < → >
- c) [, %] key , → % → # → \$ → ! → & → _ → .

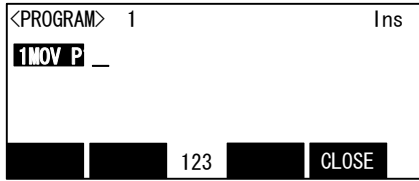

 
11) Press the [SP], [PQRS] key, and input the space and "P".



  
12) Press the [WXYZ] key, and input the space and "W".



13) Input "A", "I" and "T" in the same manner.

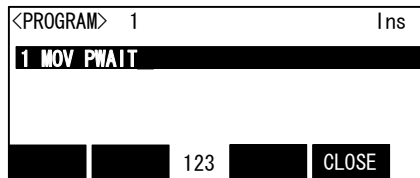

14) Press the [EXE] key.
"1 Mov PWAIT" will be set.

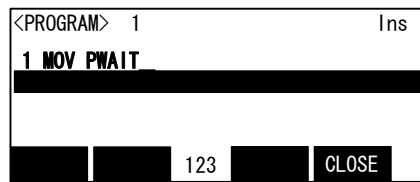

15) Input the program from step 2 to line 13 in the same manner.

This completes the inputting of the program.

◆◆◆ Displaying the previous and next command step ◆◆◆


Display the four lines on the screen of T/B. For moving the cursor to the front line, the [↑] key is pressed, for moving the cursor to the next line, press the [↓] key, and select.

◆◆◆ Displaying a specific line ◆◆◆

Press the [FUNCTION] key, and change the function display, and press the [F2] key. The display changes to the JUNP screen. The specification line can be displayed, if the step number to display in the parenthesis is inputted and the [EXE] key is pressed.

■ Teach the robot operation position.

Set the position with jog operation (Teaching PGET)

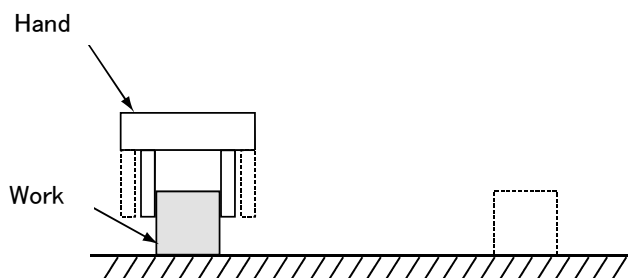

1) Move the robot with jog operation, and set the end of the hand to the position for grasping the workpiece. When the position has been set, open and close the hand to confirm that the workpiece can be grasped.

Refer to Page 45, "4.5 Jog operation" for details on the jog operation, and section Page 45, "4.6 Opening and closing the hand" for details on opening and closing the hand.

◆◆◆ Effective use of jog mode ◆◆◆

When the robot's current position is greatly separate from the target position, move the robot in axis units with the "JOINT JOG mode", to approach the position.

If the target position is nearby, move linearly with the "XYZ JOG mode", and finely adjust the position. The position can be set accurately by delaying the override (operation speed) at this time.

<PROGRAM> 1				Ins	
10	Dly	1.0			
11	Mvs	PPUT, +20			
12	Mov	PWAIT			
13	End				
EDIT	DELETE	123	INSERT	CLOSE	
FWD	JUMP	123		BWD	
DIRECT	CHANGE	123		CLOSE	

[FUNCTION] key

FUNCTION	F2
----------	----

<POS.>				JNT 100% PGET	
X:	+128.56	A:	+180.00		
Y:	+0.00	B:	+90.00		
Z:	+845.23	C:	-180.00		
L1:		L2:			
FL1:	7	FL2:	0		
MOVE	TEACH	123	Prev	Next	⇒

F3	F4
----	----

<PROGRAM> 1			
PGET			
RECORD CURRENT POSITION.			
OK?			
Yes		123	No

F1

<POS.>				JNT 100% PPUT	
X:	+128.56	A:	+180.00		
Y:	+0.00	B:	+90.00		
Z:	+845.23	C:	-180.00		
L1:		L2:			
FL1:	7	FL2:	0		
MOVE	TEACH	123	Prev	Next	⇒

2) In the program edit screen, press the [FUNCTION] key twice and change the function display. [F2](change) Press the key and display the position edit screen.

3) Press the [F3](Next) or the [F4](Prev) key, and display "PGET" on the screen upper right. The current registration coordinate value of the position variable name PGET is displayed.

4) Press the [F2] (teaching) key. The teaching confirmation screen is displayed.

5) Press the [F1] (being) key and register the position.

6) Teach PPUT (position to place workpiece) and PWAIT (wait position) in the same manner.

This completes teaching of the robot operation positions.

◆◆◆ Changing between the command editing screen and position editing screen. ◆◆◆


The commands are edited on the command editing screen, and the positions are edited on the position editing screen.

To change from the command editing screen to the position editing screen, press the [F3] (Change) keys.


To change from the position editing screen to the command editing screen, press the [F2] (Change) keys.

(4) Confirming the program

Using the T/B execute the program line by line (step operation), and confirm the operation.
 Following operations are operated with lightly pressing the enabling switch on the T/B.

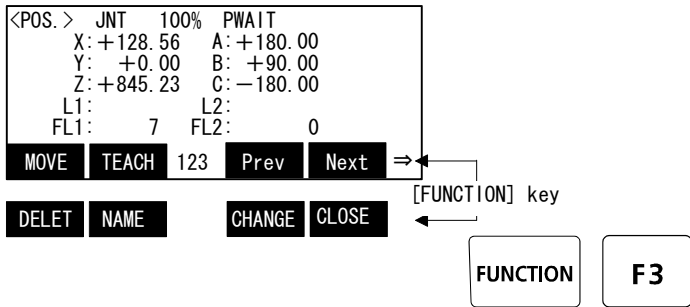


1) Press the [FUNCTION] key and change the function display. Press the [F3](change) and display the command edit screen.

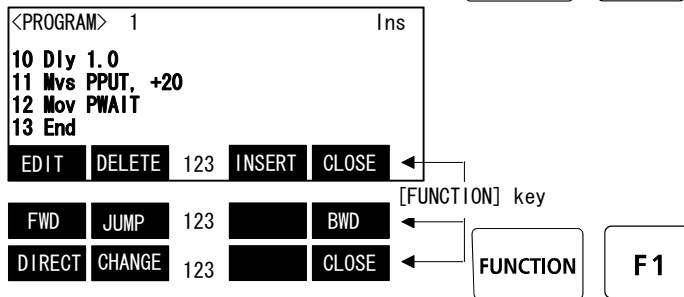

2) Press the [FUNCTION] key and change the function display. Pressing the [F1] (FWD) key is kept, and the robot will start moving.

When the execution of one line is completed, the robot will stop, and the next line will appear on the screen.

If [F1] (FWD) is released during this step, the robot will stop.

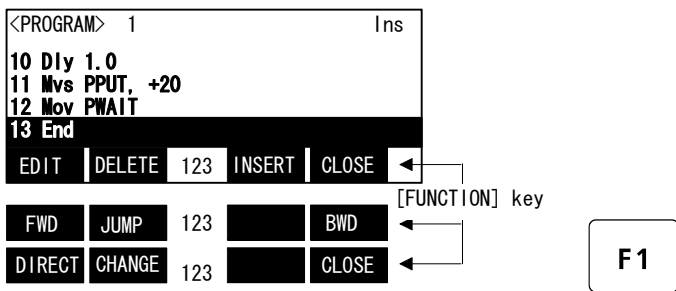

3) By the same operation as the above-mentioned, carry out step operation to the END command of the 13 lines, and confirm movement.

If movement of the robot and the position are wrong, correct with reference to the following operations.

CAUTION

Take special care to the robot movements during operation. If any abnormality occurs, such as interference with the peripheral devices, release the [F1] (FWD) key and stop the robot.

◆◆◆ Step operation ◆◆◆

“Step operation” executes the program line by line. The operation speed is slow, and the robot stops after each line, so the program and operation position can be confirmed.
 During execution, the lamp on the controller [START] switch will light.

◆◆◆ Immediately stopping the robot during operation ◆◆◆

- Press the [EMG.STOP] (emergency stop) switch.
 The servo will turn OFF, and the moving robot will immediately stop.
 To resume operation, reset the alarm, turn the servo ON, and start step operation.
- Release or forcibly press the “enable” switch.
 The servo will turn OFF, and the moving robot will immediately stop.
 To resume operation, lightly press the “enable” switch, and start step operation.
- Release the [F1] (FWD)key.
 The step execution will be stopped. The servo will not turn OFF.
 To resume operation, press the [F1] (FWD)key.

(5) Correcting the program

■ Correcting the commands

As an example, the joint movement at line No.7 will be changed to linear movement.

(Change 7 Mov PPUT, +20 to 7 Mvs PPUT, +20) ^{Note)}

1) Press the [FUNCTION] key and change the function display. Press the [F2](Jump) key and display the command edit screen.

2) Press the [7], [EXE] key and display the 7th step.

⚠ CAUTION


Note) Upward movement is designated at a position along the Z axis of the TOOL coordinate system, and the direction is designated with the + and - signs. Refer to the section on the TOOL JOG operation in the separate "Installation Manual/ Robot arm setup and maintenance", and confirm the Z axis direction of the TOOL coordinate system. Then, designate the correct sign (direction) that matches the robot being used. Designating the reverse direction could lead to interference with the peripheral devices and damage. Generally (in the default state), the hand retract direction is the "-" sign with the vertical articulate type robot, and the "+" sign is the robot's upward direction with the other robots.

◆◆◆ Displaying a specific line ◆◆◆

Press the [FUNCTION] key, and change the function display, and press the [F2] key. The display changes to the JUMP screen. The specification line can be displayed, if the step number to display in the parenthesis is inputted and the [EXE] key is pressed.


◆◆◆ Displaying the previous and next command step ◆◆◆

Display the four lines on the screen of T/B. For moving the cursor to the front line, the [↑] key is pressed, for moving the cursor to the next line, press the [↓] key, and select.

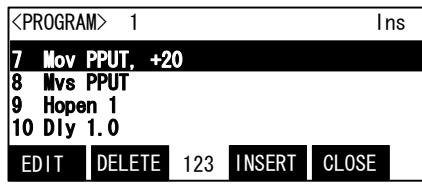


F1

3) Press the [F1] (Edit) key and display command edit screen.

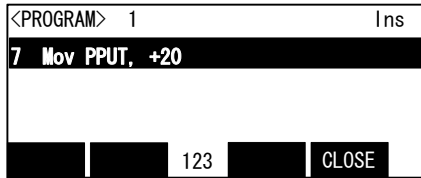


→

4) Press the [->] key 3 times. Move the cursor to "o."

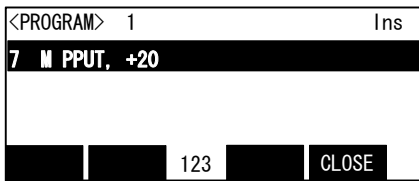

CLEAR


5) Press the [CLEAR] key twice and delete "ov". Leave "M."

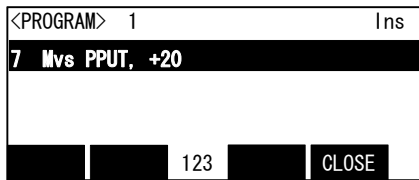

CHARACTER

-B (J5)
8 TUV 7 PQRS

6) Press the [CHARACTER] key and set to the character input mode. Press the [TUV] key 3 times (input "v"), the [->] key, the [PQRS] key 4 times (input "s").

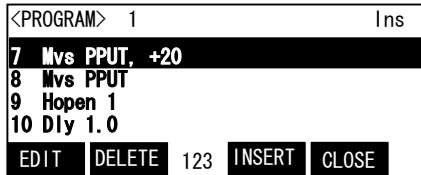

EXE

7) Press the [EXE] key and the 7th step is fixed. It returns to the program edit screen of the four-line display.

Step No. 7 has been changed to linear movement with the above operation.

◆◆◆ Correcting incorrect numbers ◆◆◆

Press the [CLREAR] key to delete the character, and then input it again. And, if the long pushing [CLEAR] key, all the data in the parenthesis can be deleted.
If the cursor is returned by pressing the [←] key, and a character is input, it will be inserted.

◆◆◆ After correcting a program ◆◆◆


After correcting the program, carry out step operation, and confirm that the program has been corrected.

◆◆◆ Inputting characters and space ◆◆◆

Each time the [CHARACTER] key is pressed, the number input mode and the character input mode change. The current input mode is displayed in the center under the screen, and the display of "ABC" shows that the character input mode. The character currently written to the lower right of each key in this state can be inputted. When you continue and input the character in the same key, once press the [->] key and advance the cursor. The space is assigned to the [SP] key.

■ Correcting the taught position

As an example, the wait position (PWAIT) will be corrected.

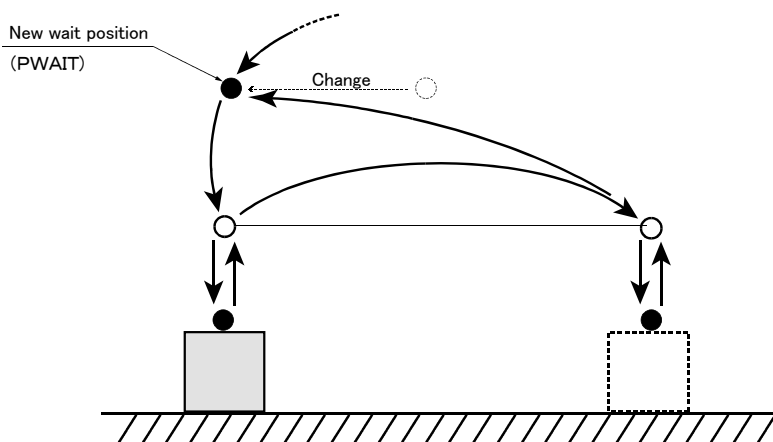

<PROGRAM> 1				Ins	
1 Mov pwait					
2 Mov PGET +20					
3 Mvs PGET					
4 Hclose 1					
EDIT	DELETE	123	INSERT	CLOSE	
[FUNCTION] key					
FWD	JUMP	123		BWD	
DIRECT	CHANGE	123		CLOSE	

FUNCTION

F2

1) In the program edit screen, press the [FUNCTION] key twice and change the function display. [F2](change) Press the key and display the position edit screen.

<POS.> XYZ 100% PWAIT			
X: +128.56	A: +180.00		
Y: +0.00	B: +90.00		
Z: +845.23	C: -180.00		
L1:	L2:		
FL1: 7	FL2: 0		
MOVE	TEACH	123	Prev Next =>

F3

F4

Press the [F3](Next) or the [F4](Prev) key, and display "PWAIT" on the screen upper right.

2) The current registration coordinate value of the position variable name PWAIT is displayed.

<POS.> XYZ 100% PWAIT			
X: +180.00	A: +180.00		
Y: +0.00	B: +90.00		
Z: +845.23	C: -180.00		
L1:	L2:		
FL1: 7	FL2: 0		
MOVE	TEACH	123	Prev Next =>

Move the robot to the new standby position by jog operation.

Refer to [Page 45, "4.5 Jog operation"](#) for details on the jog operation, and section [Page 45, "4.6 Opening and closing the hand"](#) for details on opening and closing the hand.

◆◆◆ Calling out a position variable ◆◆◆

The displayed position variable can be scrolled up or down by pressing the [F3] (Next) or [F4] (Prev) key.

```

<POS.> XYZ 100% PWAIT
X: +123.56 A: +180.00
Y: +0.00 B: +90.00
Z: +845.23 C: -180.00
L1: L2:
FL1: 7 FL2: 0
MOVE TEACH 123 Prev Next =>
    
```

F2

- 3) Press the [F2] (Teaching) key.
- 4) The teaching confirmation screen is displayed.

```

<POS. EDIT> 1
PWAIT
RECORD CURRENT POSITION.
OK?
Yes 123 No
    
```

F1

- 5) Press the [F1] (Yes) key and register the position.

```

<POS.> XYZ 100% PWAIT
X: +123.56 A: +180.00
Y: +0.00 B: +90.00
Z: +845.23 C: -180.00
L1: L2:
FL1: 7 FL2: 0
MOVE TEACH 123 Prev Next =>
    
```

This completes correction of the standby position.

◆◆◆ After correcting a program ◆◆◆

After correcting the program, carry out step operation, and confirm that the program has been corrected.

(6) Saving the program

If creation of the program or correction finishes, the program will certainly be saved.

If the [F4 (close)] key is pressed in the command edit screen or the position edit screen, the confirmation message "the program was saved" is displayed and the details of edit are saved.

◆◆◆ Attention about the edit save ◆◆◆

Please keep in mind that the details of edit including teaching data will be canceled if the power supply is shut down with the program edit screen.

(7) Start automatic operation.




CAUTION

Before starting automatic operation, always confirm the following item. Starting automatic operation without confirming these items could lead to property damage or physical injury.


- Make sure that there are no operators near the robot.
- Make sure that the safety fence is locked, and operators cannot enter unintentionally.
- Make sure that there are no unnecessary items, such as tools, inside the robot operation range.
- Make sure that the workpiece is correctly placed at the designated position.
- Confirm that the program operates correctly with step operation.

In the following explanation, automatic operation will be carried out with the controller.

Prepare the controller

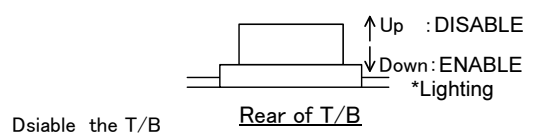


1) Set the T/B [ENABLE] switch to "DISABLE".

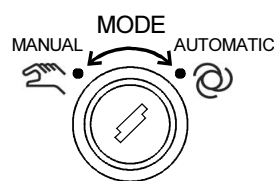

2) Set the controller [MODE] switch to "AUTOMATIC".

 
Set override



3) Press the controller [CHNG DISP] switch twice, and display the "OVERRIDE" on the STATUS NUMBER display panel. (A "o" will appear at the lower left.)

Press the [DOWN] key several times, and display "10".


The operation speed will be set to 10%.

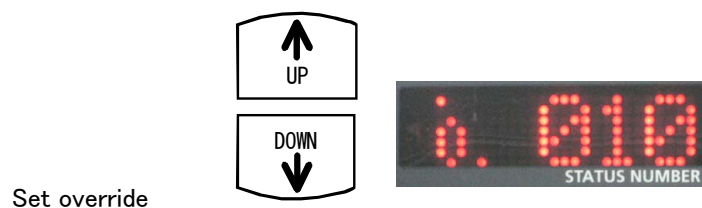


CAUTION

The servo will turn OFF when the controller [MODE] switch is changed. Note that axes not provided with brakes could drop with their own weight.

Select the program number

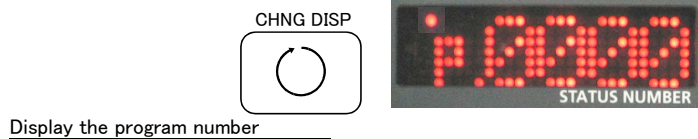

Display the program number

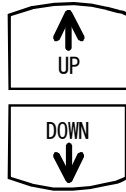

Select the program number

 


4) Press the [CHNG DISP] switch, and display the "program No." on the STATUS NUMBER display panel. (A "P" will appear at the head.)


Confirm that the program number targeted for automatic operation is displayed.

If the correct program number is not displayed, press the [UP] and [DOWN] keys to display the correct program No.

Start automatic operation



Servo on

 

Start

End with one cycle

5) Push the [SVO ON] switch of the controller, and servo power turn on.

6) After pressing the controller [START] switch, press the [END] switch.

7) The robot operation will start and will stop after one cycle.

CAUTION

When executing the work example given in Page 46, "Fig.4-8 : Example of work", always press the [END] switch and end the program after one cycle. If the [END] switch is not pressed, the hand will interfere with the existing workpiece when it goes to pale the workpiece in the second cycle.

CAUTION

Before starting automatic operation, always confirm that the target program No. is selected.

CAUTION

Take special care to the robot movements during automatic operation. If any abnormality occurs, press the [EMG. STOP] switch and immediately stop the robot.

◆◆◆ Operating from the controller ◆◆◆

Set the T/B [ENABLE] switch to "DISABLE" and the controller [MODE] switch to "AUTOMATIC". Operations from the controller are not possible unless the controller [MODE] switch is set to "AUTOMATIC".

◆◆◆ Operation speed ◆◆◆

The operation speed for automatic operation with the controller can be set.

When the override is displayed on the STATUS NUMBER display panel (with a "o" displayed on the lower left), the override display will increment or decrement each time the [UP] or [DOWN] key is pressed. The max. speed is 100%.

Initially set a low speed, and gradually increase it.


5 Maintenance and Inspection

The maintenance and inspection procedures to be carried out to use the robot for a long time without trouble are described in this chapter. The types and replacement methods of consumable parts are also explained.

5.1 Maintenance and inspection interval

Maintenance and inspection are divided into the inspections carried out daily, and the periodic inspections carry out at set intervals. Always carry these out to prevent unforeseen trouble, to maintain the product for a long time, and to secure safety.

(1) Inspection schedule

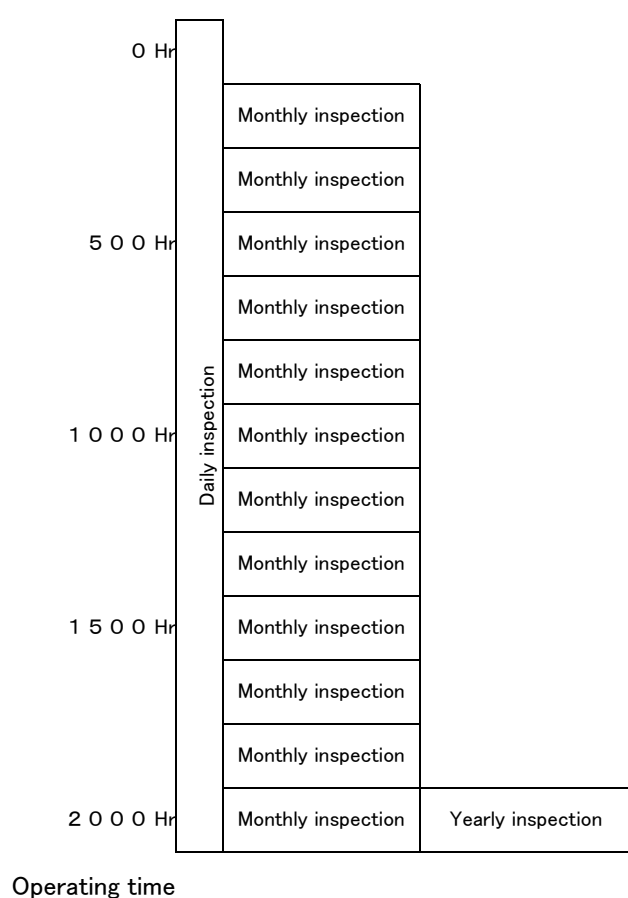

<Guideline for inspection period>

For one shift

8 Hr/day x 20 days/month x 12 months = approx. 1800 Hr

10 Hr/day x 20 days/month x 12 months = approx. 2400 Hr

For two shifts

15 Hr/day x 20 days/month x 12 months = approx. 3600 Hr

[Caution] According to the schedule on the above, when using the double shift, you should make the inspections at half the regular intervals.

Fig. 5-1 : Inspection schedule

5.2 Inspection items

The controller inspection items are shown below.

Refer to section "Maintenance and Inspection" in the separate manual "Robot arm setup and maintenance", and inspect the robot arm at the same time.

5.2.1 Daily inspection items

Carry out daily inspections following the procedures given in [Table 5-1](#).

Table 5-1 : Daily inspection items (details)

Procedure	Inspection items (details)	Remedies
Before turning the power ON (Check the following inspection items before turning the power ON.)		
1	Is the power cable securely connected? (Visual)	Securely connect.
2	Are the machine cables between the robot arm and controller securely connected? (Visual)	Securely connect.
3	Is the controller cover cracked, has any foreign matter adhered, or is there any interference?	Replace with a new part, or take remedial measures.
After turning the power ON (Turn the power ON while monitoring the robot.)		
1	Is there any abnormal movement or noise when the power was turned ON?	Refer to the Troubleshooting section and remedy.
During operation (Try moving with an original program.)		
1	Check that the operation point is not deviated. If deviated, check the following items. 1) Are any of the installation bolts loose? 2) Are the bolts at the hand installation section loose? 3) Is the position of the jigs, other than the robot, deviated? 4) If the positional deviation cannot be eliminated, refer to "Troubleshooting", and remedy.	Refer to the Troubleshooting section and remedy.
2	Is there any abnormal movement or noise? (Visual)	Refer to the Troubleshooting section and remedy.

5.2.2 Periodic inspections

Carry out periodic inspections following the procedures given in [Table 5-2](#).

Table 5-2 : Periodic inspection items (details)

Procedure	Inspection items (details)	Remedies
Monthly inspection items		
1	Are any of the connector fixing screws or terminal block terminal screws loose?	Securely tighten the screws.
2	Is the controller filter dirty? (Visual)	Clean or replace with a new part. Inspect, clean and replace the filter by refer to Page 67 , "5.3.2 The check of the filter, cleaning, exchange".
Yearly inspection items		
1	Replace the backup battery in the controller.	Exchange it referring to Page 65 , "5.3.1 Replacing the battery".

5.3 Maintenance and inspection procedures

The procedures for carrying out periodic maintenance and inspection are described below. Thoroughly comprehend the procedures, and follow the instructions. This work can be commissioned to the Mitsubishi Service Dept. for a fee. (Never disassemble, etc., any of the parts not described in this section.)

The maintenance parts required for the maintenance and inspection are shown in section "5.4 Maintenance parts" on page 40. Contact your dealer for these parts when required.

5.3.1 Replacing the battery

The batteries are installed when the robot is shipped from the factory, but as these are consumable parts, they must be replaced periodically by the customer.

The guideline for replacing the battery is one year, but this will differ according to the robot's usage state.

There are the kind of the errors about the battery shown in Table 5-3. If error 7500 occurs, please exchange the batteries of the robot arm and the robot controller simultaneously.

Table 5-3 : The error about the battery

Section	Error number	Description	Disposition
Controller	7520	The exhausting time is over.	Exchange the batteries.
	7510	Voltage is falling.	
	7500	Voltage fell.	Backup data cannot be secured.
Robot arm	7520	The exhausting time is over.	Exchange the batteries.
	133n ^{Note1)}	Voltage is falling.	
	112n	The absolute position data of the encoder disappeared.	Backup data cannot be secured.

Note1) "n" shows the axial number.



CAUTION

If error No. 7500 or 112n occurs, the program data and other data in the controller is lost and it becomes necessary to load the data again.



CAUTION

Replace the batteries for the controller and robot arm at the same time. Replace the controller battery within 3 minutes after removing the old battery. It is also recommended to save programs and position data on the personal computer side via the RT ToolBox 2 and so forth in advance.

(1) The battery exchange method of the controller

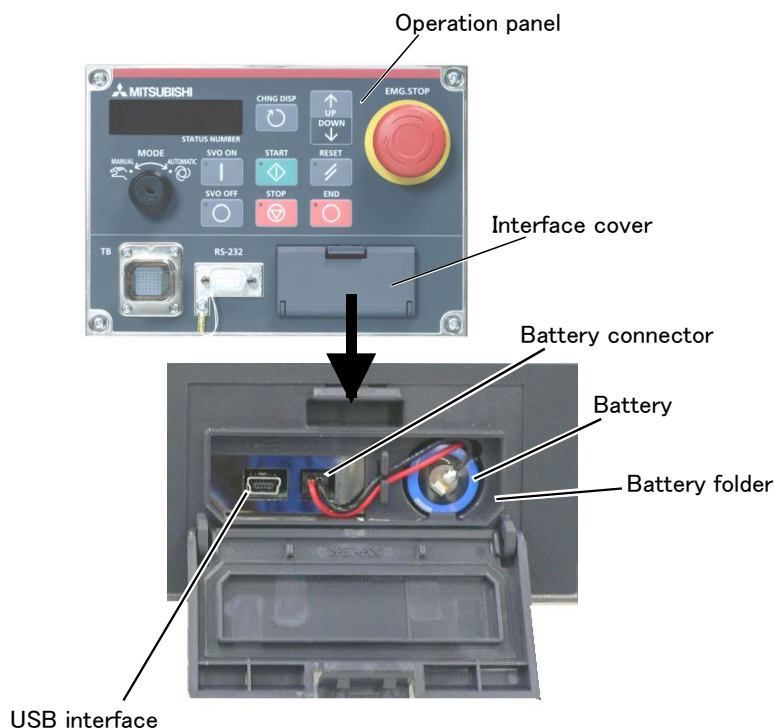


Fig. 5-2 : Exchange of the battery

- 1) Turn the controller power ON once. (For approx. one minute.)
- 2) Turn OFF the power supply of the controller and open the interface cover of the operation panel. The battery is in the interface cover.
- 3) Pick and pull up the connector of the old battery and remove from battery holder.
- 4) Fix the new battery into the battery holder. Install so that the lead may come out to the front.
- 5) Connect the connector of the new battery cable. Connect so that the red lead may become left-hand side. Complete the work within 3 minutes after removing the old battery.
- 6) Close the interface cover of the operation panel certainly.
- 7) Refer to the separate manual "Detailed Explanation of Functions and Operations", and reset the battery cumulative time over alarm.

[Caution]

If the old battery is replaced because it has been used up, it is necessary to set the origin again. Refer to the separate "Robot arm setup, basic operation, and maintenance" and reset the origin.

This completes the replacement of the controller battery.

5.3.2 The check of the filter, cleaning, exchange

The filter is installed in the controller.

The following shows the procedure for inspecting, cleaning and replacing the filter:

(1) CR1DA-700

- 1) Remove the filter cover in the bottom of the front side of the controller by unscrewing the M3 screws (2 pcs.).
- 2) Remove the filter from the controller, and then remove dust and particles accumulated on the filter.
*If the filter is heavily soiled, wash it using neutral a detergent diluted with water, dry it completely, and then mount it to the controller.
- 3) Attach the cleaned or new filter to the controller, and install the filter cover to controller with the M3 screws (2 pcs.).



Fig. 5-3 : Cleaning, exchanging the filter(CR1DA-700)

This completes the inspection, cleaning and replace of the filter for the controller.

(2) CR2DA-700

- 1) Remove the filter plate in the bottom of the front side of the controller by unscrewing the M3 screws (2 pcs.).
- 2) Remove the filter from the filter plate, and then remove dust and particles accumulated on the filter.
*If the filter is heavily soiled, wash it using neutral a detergent diluted with water, dry it completely, and then mount it to the controller.
- 3) Attach the cleaned or new filter to the filter plate, and install it to the controller with the M3 screws (2 pcs.).

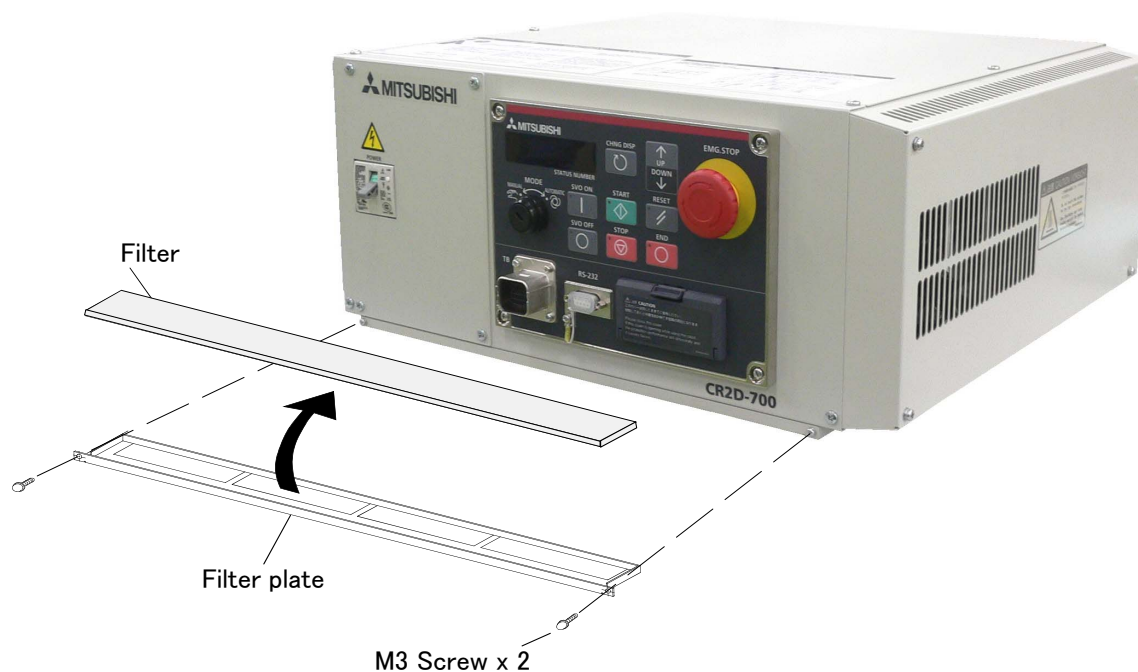


Fig. 5-4 : Cleaning, exchanging the filter(CR2DA-700)

This completes the inspection, cleaning and replace of the filter for the controller.

(3) CR3D-700

- 1) Remove the filter plate in the bottom of the rear cover of the controller by unscrewing the screws (2 pcs.).
- 2) Remove the filter from the filter plate, and then remove dust and particles accumulated on the filter.
*If the filter is heavily soiled, wash it using neutral a detergent diluted with water, dry it completely, and then mount it to the controller.
- 3) Attach the cleaned or new filter to the filter plate, and install it to the rear cover of controller with the screws (2 pcs.).

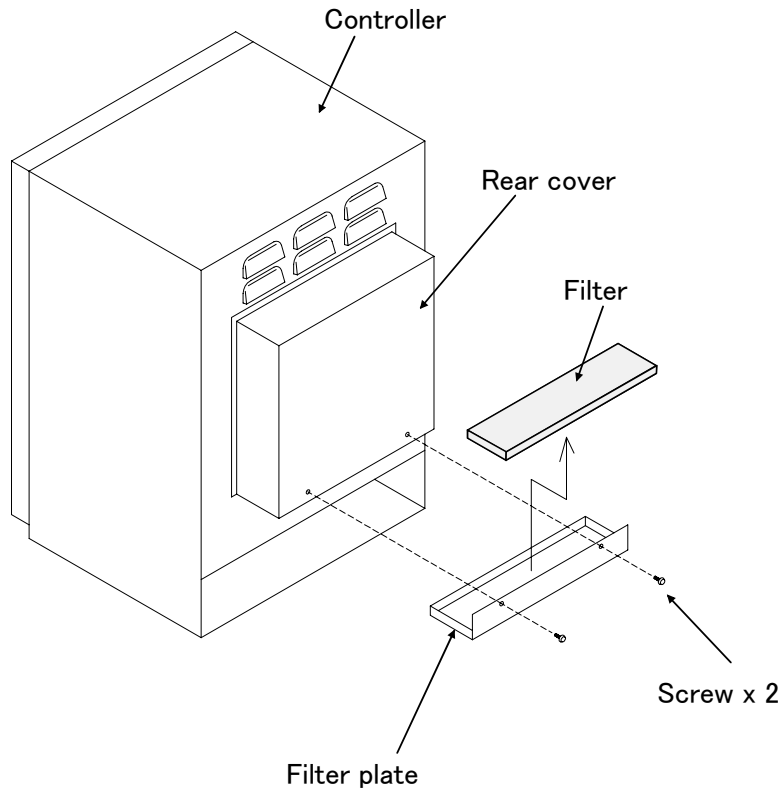


Fig. 5-5 : Cleaning, exchanging the filter(CR3D-700)

This completes the inspection, cleaning and replace of the filter for the controller.

5.4 Maintenance parts

The consumable parts that must be replaced periodically are shown in [Table 5-4](#), and spare parts that may be required during repairs are shown in [Table 5-5](#). Purchase these parts from the dealer when required. Some Mitsubishi-designated parts differ from the maker's standard parts. Thus, confirm the part name, robot arm and controller serial No. and purchase the parts from the dealer.

Table 5-4 : Controller consumable part list

No.	Part name	Type ^{Note1)}	Qty.	Usage section	Maker
All the controller commonness					
1	Lithium battery	Q6BAT	1	Inside of the interface cover of the operation panel	Mitsubishi Electric System & Service;Co.,Ltd.
CR1DA-700					
1	Filter		1	Front of the controller	Mitsubishi Electric System & Service;Co.,Ltd.
CR2DA-700					
1	Filter		1	Under the front of the controller	Mitsubishi Electric System & Service;Co.,Ltd.
CR3D-700					
1	Fan (40 square)		5	Amplifier unit Converter unit	Mitsubishi Electric System & Service;Co.,Ltd.
2	Filter		1	Rear of the controller	

Note1) Confirm the robot arm serial No., and contact the dealer or service branch of Mitsubishi Electric Co., for the type.

Table 5-5 : Controller spare part list

No.	Part name	Type ^{Note1)}	Qty.	Usage section	Maker
CR1DA-700					
1	Fuse	LM16	2		Mitsubishi Electric System & Service;Co.,Ltd.
CR2DA-700					
1	Fuse	LM32	1		Mitsubishi Electric System & Service;Co.,Ltd.
2		LM16	2		
3		MF60NRF-1.6A	1	Inside of the controller Glass tube fuse)	
CR3D-700					
1	Fuse	LM32	4	CPU unit (R700CPU)	Mitsubishi Electric System & Service;Co.,Ltd.
2		LM16	6	Safety unit (R700SFT)	
3		LM32	3	Amplifier unit	

Note1) Confirm the robot arm serial No., and contact the dealer or service branch of Mitsubishi Electric Co., for the type.

HEADQUARTERS

MITSUBISHI ELECTRIC EUROPE B.V. German Branch Gothaer Straße 8 D-40880 Ratingen Phone: +49 (0)2102 / 486-0 Fax: +49 (0)2102 / 486-1120	EUROPE
MITSUBISHI ELECTRIC EUROPE B.V.-org.sl. Czech Branch Avenir Business Park, Radlická 714/113a CZ-158 00 Praha 5 Phone: +420 (0)251-551 470 Fax: +420 (0)251-551-471	CZECH REP.
MITSUBISHI ELECTRIC EUROPE B.V. French Branch 25, Boulevard des Bouvets F-92741 Nanterre Cedex Phone: +33 (0)1 / 55 68 55 68 Fax: +33 (0)1 / 55 68 57 57	FRANCE
MITSUBISHI ELECTRIC EUROPE B.V. Irish Branch Westgate Business Park, Ballymount IRL-Dublin 24 Phone: +353 (0)1 4198800 Fax: +353 (0)1 4198890	IRELAND
MITSUBISHI ELECTRIC EUROPE B.V. Italian Branch Viale Colleoni 7 I-20041 Agrate Brianza (MB) Phone: +39 039 / 60 53 1 Fax: +39 039 / 60 53 312	ITALY
MITSUBISHI ELECTRIC EUROPE B.V. Poland Branch Krakowska 50 PL-32-083 Balice Phone: +48 (0)12 / 630 47 00 Fax: +48 (0)12 / 630 47 01	POLAND
MITSUBISHI ELECTRIC EUROPE B.V. 52, bid. 3 Kosmodamianskaya nab 8 floor RU-115054 Moscow Phone: +7 495 721-2070 Fax: +7 495 721-2071	RUSSIA
MITSUBISHI ELECTRIC EUROPE B.V. Spanish Branch Carretera de Rubí 76-80 E-08190 Sant Cugat del Vallés (Barcelona) Phone: 902 131121 // +34 935653131 Fax: +34 935891579	SPAIN
MITSUBISHI ELECTRIC EUROPE B.V. UK Branch Travellers Lane UK-Hatfield, Herts. AL10 8XB Phone: +44 (0)1707 / 27 61 00 Fax: +44 (0)1707 / 27 86 95	UK
MITSUBISHI ELECTRIC CORPORATION Office Tower "Z" 14 F 8-12,1 chome, Harumi Chuo-Ku Tokyo 104-6212 Phone: +81 3 622 160 60 Fax: +81 3 622 160 75	JAPAN
MITSUBISHI ELECTRIC AUTOMATION, Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60061 Phone: +1 847 478 21 00 Fax: +1 847 478 22 53	USA

EUROPEAN REPRESENTATIVES

GEVA Wiener Straße 89 AT-2500 Baden Phone: +43 (0)2252 / 85 55 20 Fax: +43 (0)2252 / 488 60	AUSTRIA
Koning & Hartman b.v. Woluwelaan 31 BE-1800 Vilvoorde Phone: +32 (0)2 / 257 02 40 Fax: +32 (0)2 / 257 02 49	BELGIUM
INEA RBT d.o.o. Aleja Lipa 56 BA-71000 Sarajevo Phone: +387 (0)33 / 921 164 Fax: +387 (0)33 / 524 539	BOSNIA AND HERZEGOVINA
AKHNATON 4, Andrei Ljapchev Blvd., PO Box 21 BG-1756 Sofia Phone: +359 (0)2 / 817 6000 Fax: +359 (0)2 / 97 44 06 1	BULGARIA
AutoCont C.S. s.r.o. Technologická 374/6 CZ-708 00 Ostrava-Pustkovec Phone: +420 595 691 150 Fax: +420 595 691 199	CZECH REPUBLIC
Beijer Electronics A/S Lykkegårdsvej 17 DK-4000 Roskilde Phone: +45 (0)46 / 75 76 66 Fax: +45 (0)46 / 75 56 26	DENMARK
Beijer Electronics OY Peltoie 37 FIN-28400 Ulvila Phone: +358 (0)207 / 463 540 Fax: +358 (0)207 / 463 541	FINLAND
UTEKO 5, Mavrogenous Str. GR-18542 Piraeus Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999	GREECE
AXICONT AUTOMATIKA Kft. (ROBOT CENTER) Reitter F. U. 132 HU-1131 Budapest Phone: +36 1 / 412-0882 Fax: +36 1 / 412-0883	HUNGARY
ALFATRADE Ltd. 99, Paola Hill Malta- Paola PLA 1702 Phone: +356 (0)21 / 697 816 Fax: +356 (0)21 / 697 817	MALTA
HIFLEX AUTOM. TECHNIK B.V. Wolweverstraat 22 NL-2984 CD Ridderkerk Phone: +31 (0)180 - 46 60 04 Fax: +31 (0)180 - 44 23 55	NETHERLANDS

EUROPEAN REPRESENTATIVES

Koning & Hartman b.v. Haarlerbergweg 21-23 NL-1101 CH Amsterdam Phone: +31 (0)20 / 587 76 00 Fax: +31 (0)20 / 587 76 05	NETHERLANDS
Beijer Electronics AS Postboks 487 NO-3002 Drammen Phone: +47 (0)32 / 24 30 00 Fax: +47 (0)32 / 84 85 77	NORWAY
Fonseca S.A. R. João Francisco do Casal 87/89 PT - 3801-997 Aveiro, Esigueira Phone: +351 (0)234 / 303 900 Fax: +351 (0)234 / 303 910	PORTUGAL
SIRIUS TRADING & SERVICES SRL Aleea Lacul Morii Nr. 3 RO-060841 Bucuresti, Sector 6 Phone: +40 (0)21 / 430 40 06 Fax: +40 (0)21 / 430 40 02	ROMANIA
INEA RBT d.o.o. Izletnicka 10 SER-113000 Smederevo Phone: +381 (0)26 / 615 401 Fax: +381 (0)26 / 615 401	SERBIA
SIMAP s.r.o. Jána Derku 1671 SK-911 01 Trenčín Phone: +421 (0)32 743 04 72 Fax: +421 (0)32 743 75 20	SLOVAKIA
PROCONT, spol. s r.o. Prešov Kúpeľná 1/A SK-080 01 Prešov Phone: +421 (0)51 7580 611 Fax: +421 (0)51 7580 650	SLOVAKIA
INEA RBT d.o.o. Stegne 11 SI-1000 Ljubljana Phone: +386 (0)1 / 513 8116 Fax: +386 (0)1 / 513 8170	SLOVENIA
Beijer Electronics Automation AB Box 426 SE-20124 Malmö Phone: +46 (0)40 / 35 86 00 Fax: +46 (0)40 / 93 23 01	SWEDEN
Robotronic AG Schlachthofstrasse 8 CH-8406 Winterthur Phone: +41 (0)52 / 267 02 00 Fax: +41 (0)52 / 267 02 01	SWITZERLAND
GTS Bayraktar Bulvari Nutuk Sok. No:5 TR-34775 Yukarı Dudullu-Ümraniye-İSTANBUL Phone: +90 (0)216 526 39 90 Fax: +90 (0)216 526 3995	TURKEY
CSC Automation Ltd. 4-B, M. Raskovoyi St. UA-02660 Kiev Phone: +380 (0)44 / 494 33 55 Fax: +380 (0)44 / 494-33-66	UKRAINE

MIDDLE EAST REPRESENTATIVE

I.C. SYSTEMS LTD. 23 Al-Saad-Al-Alee St. EG-Saray, Maadi, Cairo Phone: +20 (0) 2 / 235 98 548 Fax: +20 (0) 2 / 235 96 625	EGYPT
ILAN & GAVISH Ltd. 24 Shenkar St., Kiryat Arie IL-49001 Petah-Tiqva Phone: +972 (0)3 / 922 18 24 Fax: +972 (0)3 / 924 0761	ISRAEL

AFRICAN REPRESENTATIVE

CBI Ltd. Private Bag 2016 ZA-1600 Isando Phone: + 27 (0)11 / 977 0770 Fax: + 27 (0)11 / 977 0761	SOUTH AFRICA
--	---------------------