



REFRIGERATION AND
AIR CONDITIONING

Instructions




080R9326

System Manager AK-SM 810




RI8SD402

General mounting

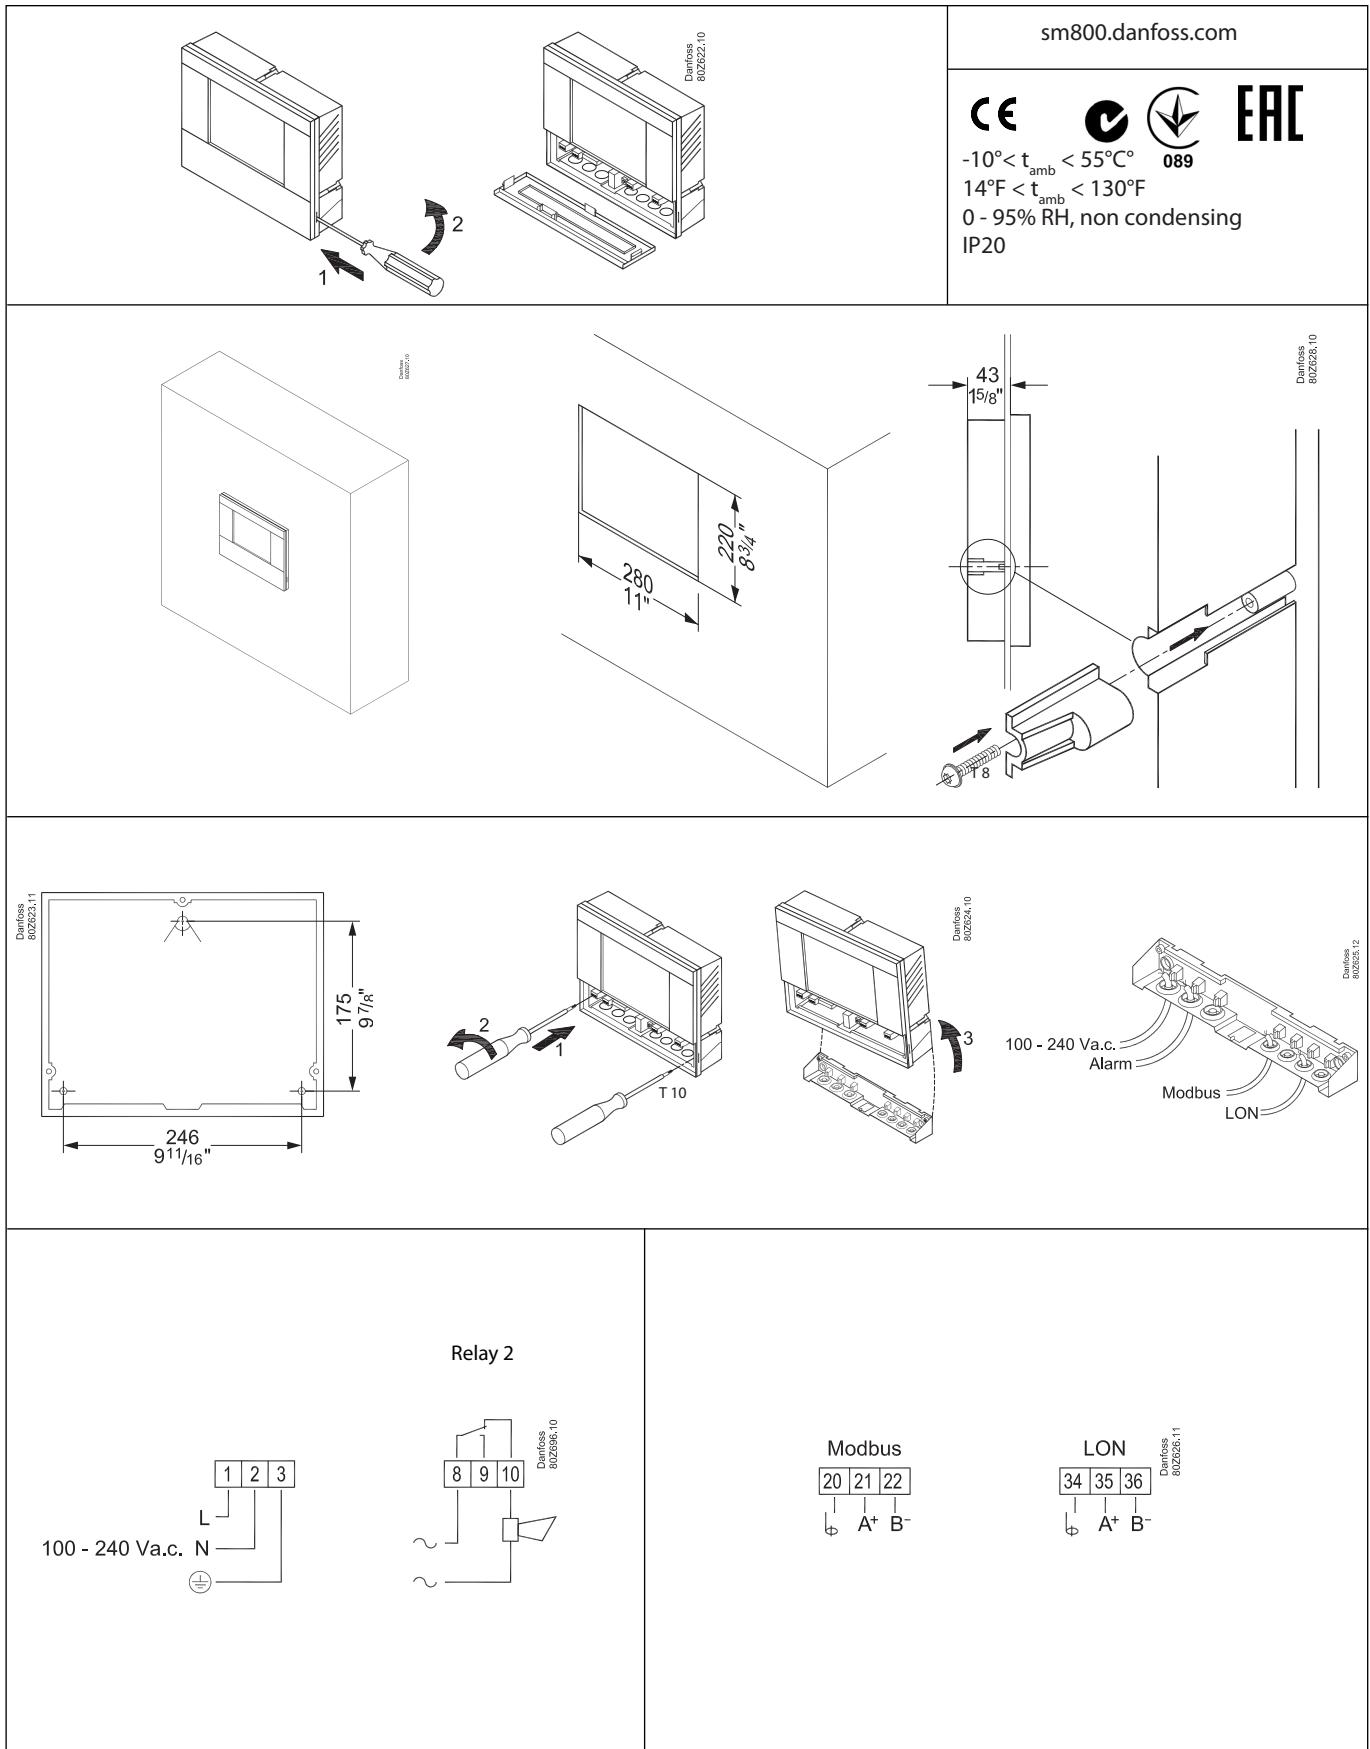

US mounting

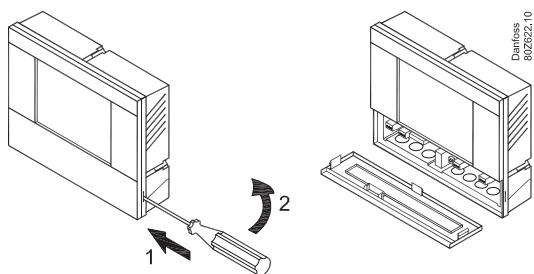

UL us Listed

UL file: E31024

61B5

Class 2 or LPS in accordance with NEC.

For supply connections, use 16 AWG or larger wires rated for at least 75°C (167°F).



Use copper conductors only.

$14^{\circ}\text{F} < t_{\text{amb}} < 130^{\circ}\text{F}$


0 - 95% RH, non condensing

IP20


Panel mounting

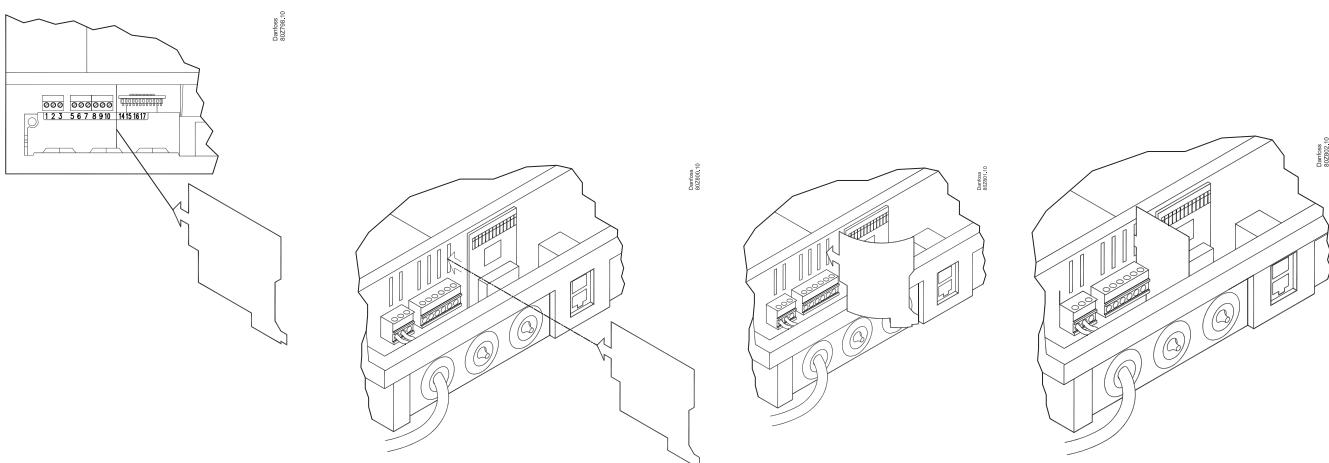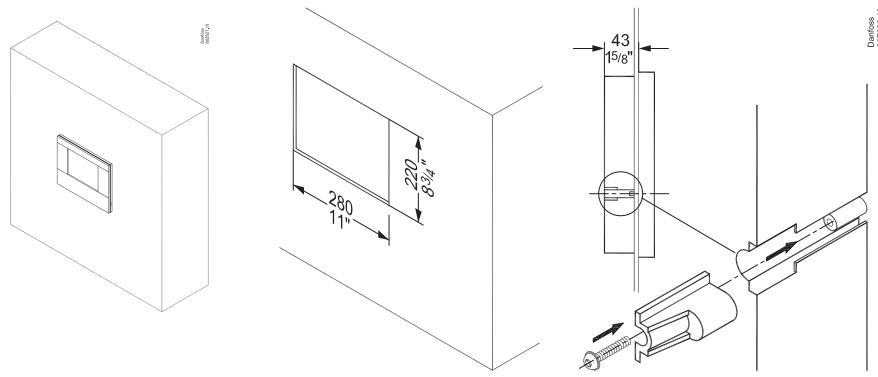



Supply

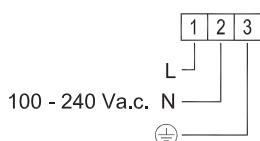

Relay 2

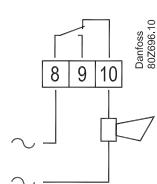

Modbus, Lon-version

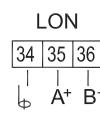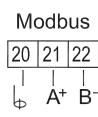

For safety reasons both supply voltage and relay voltage must be the same voltage.

Selve installationen af datakommunikationskablet skal overholde de krav, som er nævnt i dokumentet "Datakommunikation imellem ADAP-KOOL® Køleanlæggsstyringer". Litteraturnummer = RC8AC.

The actual installation of the data communication cable must comply with the requirements mentioned in the document "Data communication between ADAP-KOOL® Refrigeration controls". Literature sheet number = RC8AC.

Beim Verlegen des Datenkommunikationskabels sind die im Dokument „Datenkommunikation zwischen ADAP-KOOL® Kälteanlagenregelsysteme“ enthaltenen Anforderungen einzuhalten. Literaturnummer = RC8AC.

L'installation elle-même du câble de transmission de données doit respecter les contraintes citées dans le document «Transmission de données ADAP-KOOL® Commande d'installation frigorifiques». Référence documentaire = RC8AC.


La instalación práctica del cable de comunicación de datos debe cumplir con los requisitos mencionados en el documento "Comunicación de datos entre controles de refrigeración ADAP-KOOL®". Número de documento = RC8AC.

Terminering
Termination
Terminierung
Terminaison
Terminación

OFF ← → ON




OFF ← → ON

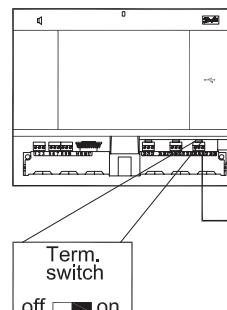

Repeater

If a repeater is used, make sure the terminators are used (included with repeater).


Use the included 120 Ohm terminator on last device.

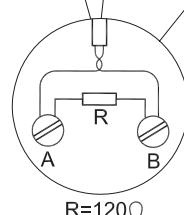

Danfoss
802724-10

TCP/IP

Danfoss
802631-10

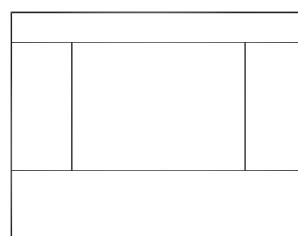

LAN
RJ 45 Use shielded ethernet cable

Initial settings



1. Check address setting = 9 (9 = Factory IP address = 192.168.1.161)

2. Download "StoreView Desktop" (sm800.danfoss.com) to PC

3. Run "StoreView Desktop"

4. Connect to 192.168.1.161

5. Set Engineering unit preferences

6. Set Users / Password

Default: User = Supervisor / Password = 12345

7. Set Communications



8. Set address setting = 0 (0 = master)

9. OK and Finish (reset)

Konfiguration
Configuration
Konfiguration
Configuración
Configuración

See manual: USCO.PI.R1.E9.--

The Product contains electrical components.
And may not be disposed together with domestic waste.
Equipment must be separate collected with Electrical and Electronic Waste. According to local and currently valid legislation.

