

# SIEMENS



Operating Instructions

# SINAMICS

## G150

Converter built-in units 1750 kW - 2700 kW

Edition

06/2020

[www.siemens.com/drives](http://www.siemens.com/drives)



# SIEMENS

## SINAMICS

### SINAMICS G150 Converter cabinet units

#### Operating Instructions

Firmware version V5.2 SP3

06/2020




A5E03347396A

Foreword	
Safety Notes	1
Device Overview	2
Mechanical installation	3
Electrical installation	4
Commissioning	5
Operation	6
Setpoint channel and closed-loop control	7
Output terminals	8
Functions, Monitoring, and Protective Functions	9
Diagnosis/faults and alarms	10
Maintenance and servicing	11
Technical specifications	12
Appendix	A

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 <b>DANGER</b>
indicates that death or severe personal injury <b>will</b> result if proper precautions are not taken.
 <b>WARNING</b>
indicates that death or severe personal injury <b>may</b> result if proper precautions are not taken.
 <b>CAUTION</b>
indicates that minor personal injury can result if proper precautions are not taken.
<b>NOTICE</b>
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

 <b>WARNING</b>
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Foreword

## Structure of this documentation

The customer documentation comprises general and individual documentation.

The general documentation describes the topics that apply to all cabinet units:

- **Operating Instructions**

The Operating Instructions consist of the following sections:

- Device description
- Mechanical installation
- Electrical installation
- Commissioning guide
- Description of function
- Maintenance instructions
- Technical data

- **Overview diagrams**

These provide a general overview of the functionality of the cabinet units.

- **List Manual**

The List Manual consists of the following sections:

- Parameter list
- Function diagrams
- Fault / warning list

- **Documentation for Drive Control Chart (DCC)**

- Programming and Operating Manual: DCC Editor description
- Function Manual: Description of the standard DCC blocks

The individual documentation describes precisely one customized cabinet unit and contains the following:

- **Dimension drawing**  
The dimension drawing documents the dimensions of the ordered cabinet unit.
- **Layout diagram**  
The components installed in the ordered cabinet units are shown in the layout diagram with the equipment and location codes.
- **Circuit diagram**  
The circuit diagram shows the electrical components installed in the ordered cabinet unit with the equipment and location codes, their interconnections and the customer interfaces.
- **Terminal diagram**  
The terminal diagram shows all the customer terminals in the ordered cabinet unit, and the associated internal wiring in the cabinet unit. This diagram documents the line-side target wiring.
- **Spare parts list**  
All of the available spare parts for the ordered cabinet units are listed in the spare parts list with the equipment and the location codes.
- **Additional operating instructions**  
The instructions for supplier components installed in the ordered cabinet unit are included as original documentation.

## Documentation in the Internet

The documentation on SINAMICS G150 can be found on the Internet under the following link (<https://support.industry.siemens.com/cs/ww/en/ps/13227/man>).

## Technical support

Time zone Europe/Africa	
Phone	+49 (0) 911 895 7222
Fax	+49 (0) 911 895 7223
Internet	Technical support ( <a href="https://support.industry.siemens.com/cs/ww/en/sc/4868">https://support.industry.siemens.com/cs/ww/en/sc/4868</a> )

Time zone America	
Phone	+1 423 262 2522
Fax	+1 423 262 2200
Internet	techsupport.sea@siemens.com

Time zone Asia/Pacific	
Phone	+86 1064 757 575
Fax	+86 1064 747 474
Internet	support.asia.automation@siemens.com

## Spare parts

Spare parts are available on the Internet at the following address  
(<https://support.industry.siemens.com/sc/de/en/sc/2110>).

The spare parts available for the ordered cabinet unit can be found in the spare parts list. These are provided on the customer DVD.

## Siemens Support for on the move



With the "Siemens Industry Online Support" App, you can access more than 300,000 documents for Siemens Industry products – any time and from anywhere. The App supports you in the following areas:

- Resolving problems when executing a project
- Troubleshooting when faults develop
- Expanding a system or planning a new system

Further, you have access to the Technical Forum and other articles that our experts have drawn-up:

- FAQs
- Application examples
- Manuals
- Certificates
- Product announcements and much more

The App "Siemens Industry Online Support" is available for Apple iOS and Android.

## Internet address

Information about SINAMICS can be found on the Internet at the following address:  
<http://www.siemens.com/sinamics>

## EMC limit values for South Korea

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.  
For sellers or other user, please keep in mind that this device is an A-grade electromagnetic wave device.  
This device is intended to be used in areas other than home.

The mandatory EMC limits for Korea correspond to the limits of EN 61800-3 (EMC product standard for adjustable speed electrical drive systems) for category C2 or to limit class A, Group 1 according to EN 55011.

Compliance with the limits according to category C2 or class A, group 1 is achieved with suitable additional measures. Furthermore, additional measures such as the use of an additional radio interference suppression filter (EMC filter) may be required.

In addition, measures for proper plant design to meet EMC requirements are described in detail in this manual and the "SINAMICS Low Voltage Configuration Manual".

## Certifications

The following certifications can be found on the Internet under the link SINAMICS G150 certificates (<https://support.industry.siemens.com/cs/de/en/ps/13227/cert>):

- EC declaration of conformity with reference to the EMC directive:
- EC declaration of conformity with reference to the machinery directive (safety)
- Manufacturers declaration in reference to Safety Integrated

## Web sites of third-party companies

This document includes hyperlinks to web sites of third-party companies Siemens accepts no responsibility for the content of these web sites, nor does it use these web sites and their content for its own use, as Siemens cannot check these web sites and is also not responsible for the content and information provided on them. The user uses these web sites at his own risk.

## Use of OpenSSL

This product contains software (<https://www.openssl.org/>) that has been developed by the OpenSSL project for use in the OpenSSL toolkit.

This product contains cryptographic software (<mailto:eay@cryptsoft.com>) created by Eric Young.

This product contains software (<mailto:eay@cryptsoft.com>) developed by Eric Young.

## Compliance with the General Data Protection Regulation

Siemens respects the principles of data protection, in particular the data minimization rules (privacy by design).

For this product, this means:

The product does not process or store any person-related data, only technical function data (e.g. time stamps). If the user links this data with other data (e.g. shift plans) or if he/she stores person-related data on the same data medium (e.g. hard disk), thus personalizing this data, he/she has to ensure compliance with the applicable data protection stipulations.



# Table of contents

	<b>Foreword</b> .....	<b>3</b>
<b>1</b>	<b>Safety Notes</b> .....	<b>17</b>
1.1	General safety instructions.....	17
1.2	Handling the AOP30 backup battery.....	22
1.3	Handling electrostatic sensitive devices (ESD).....	23
1.4	Industrial security .....	24
1.5	Residual risks of power drive systems .....	25
<b>2</b>	<b>Device Overview</b> .....	<b>27</b>
2.1	Chapter content.....	27
2.2	Application range and characteristics .....	27
2.2.1	Field of applications.....	27
2.2.2	Characteristics, quality, service.....	27
2.3	Design .....	29
2.3.1	General .....	29
2.3.2	Device overview .....	29
2.4	Wiring principle .....	31
2.5	Type plate.....	33
<b>3</b>	<b>Mechanical installation</b> .....	<b>39</b>
3.1	Chapter content.....	39
3.2	Transportation and storage.....	39
3.3	Mounting .....	41
3.3.1	Mechanical installation: checklist .....	42
3.3.2	Preparation.....	43
3.3.2.1	Requirements on the installation location.....	43
3.3.2.2	Requirements on the levelness of the floor.....	44
3.3.2.3	Shipping and handling monitors .....	45
3.3.2.4	Unpacking .....	47
3.3.2.5	Required tools .....	47
3.3.3	Installation .....	48
3.3.3.1	Lifting the cabinet off the transport pallet .....	48
3.3.3.2	Removing the crane transport aids .....	49
3.3.3.3	Connection to the foundation .....	51
3.3.4	Connecting separately shipped transport units .....	51
3.3.5	Fitting additional canopies (option M21) or hoods (option M23, M43, M54).....	54

<b>4</b>	<b>Electrical installation .....</b>	<b>61</b>
4.1	Chapter content.....	61
4.2	Checklist for electrical installation .....	61
4.3	Important safety precautions .....	67
4.4	Introduction to EMC.....	68
4.5	EMC-compliant design .....	70
4.6	Electrical connection.....	72
4.6.1	General .....	72
4.6.2	Connecting the PE busbars.....	73
4.6.3	Connecting the DC link connections .....	75
4.6.4	Connecting the power supply and the signal cables.....	78
4.6.5	The DRIVE-CLiQ node must be connected .....	78
4.7	Power connections .....	79
4.7.1	Cable lugs.....	79
4.7.2	Connection cross-sections and cable lengths .....	81
4.7.3	Connecting shielded three-phase current cables.....	82
4.7.4	Minimum cable lengths for motor connection to a motor with one-winding system.....	83
4.7.5	Connecting the motor and power cables .....	83
4.7.6	Adjusting the fan voltage (-T1-T10/-T20 and -T2-T10).....	85
4.7.7	Removing the connection clip to the basic interference suppression module for operation on an ungrounded line supply (IT system) .....	87
4.7.8	Setting the circuit-breaker.....	88
4.8	External supply of the auxiliary supply from a secure line.....	90
4.9	Signal connections.....	91
4.9.1	Control Unit CU320-2 DP.....	91
4.9.2	Customer terminal module TM31 (-A60) (option G60).....	107
4.10	Other connections .....	116
4.10.1	dV/dt filter compact plus Voltage Peak Limiter (Option L07).....	117
4.10.2	du/dt filter plus Voltage Peak Limiter (option L10) .....	119
4.10.3	Connection for External Auxiliary Equipment (Option L19) .....	121
4.10.4	Overvoltage limitation (option L21) .....	123
4.10.5	EMERGENCY OFF pushbutton installed in the cabinet door (option L45) .....	124
4.10.6	Cabinet illumination with service socket (option L50) .....	125
4.10.7	Cabinet anti-condensation heating (option L55).....	126
4.10.8	EMERGENCY OFF category 0; 230 V AC or 24 V DC (option L57).....	127
4.10.9	EMERGENCY STOP category 1; 230 V AC (option L59).....	128
4.10.10	EMERGENCY STOP category 1; 24 V DC (option L60).....	129
4.10.11	Braking unit 50 kW (option L62).....	130
4.10.11.1	Commissioning.....	133
4.10.11.2	Diagnosis and duty cycles .....	135
4.10.11.3	Threshold switch .....	135
4.10.12	Thermistor Motor Protection Unit (Option L83/L84).....	137
4.10.13	PT100 Evaluation Unit (Option L86) .....	138
4.10.14	Insulation Monitor (Option L87).....	139
4.10.15	CBC10 CAN Communication Board (option G20) .....	141
4.10.16	Communication Board Ethernet CBE20 (Option G33) .....	144
4.10.17	TM150 temperature sensor module (option G51).....	147

4.10.17.1	Description .....	147
4.10.17.2	Connecting .....	148
4.10.17.3	Connection examples .....	151
4.10.18	SMC30 Sensor Module Cabinet-Mounted (option K50) .....	153
4.10.18.1	Description .....	153
4.10.18.2	Connection .....	157
4.10.18.3	Connection examples .....	161
4.10.19	Voltage Sensing Module for determining the actual motor speed and the phase angle (option K51) .....	162
4.10.20	Additional SMC30 Sensor Module (option K52) .....	163
4.10.21	Customer terminal block (option G60) .....	163
4.10.22	Additional customer terminal block TM31 (option G61) .....	164
4.10.23	Terminal Board TB30 (option G62) .....	164
4.10.24	Safety license for 1 axis (option K01) .....	171
4.10.25	Auxiliary power supply, 230 V AC (option K74) .....	172
4.10.26	Terminal module for activation of "Safe Torque Off" and "Safe STOP 1" (option K82) .....	173
4.10.27	Terminal Module TM54F (option K87) .....	174
4.10.28	Safe Brake Adapter SBA 230 V AC (option K88) .....	176
4.10.29	Control Unit CU320-2 PN (option K95) .....	178
4.10.30	NAMUR terminal block (option B00) .....	190
4.10.31	Separate 24 V DC power supply for NAMUR (option B02) .....	192
4.10.32	Outgoing section for external auxiliary equipment for NAMUR (option B03) .....	192
<b>5</b>	<b>Commissioning .....</b>	<b>193</b>
5.1	Chapter content .....	193
5.2	STARTER commissioning tool .....	194
5.2.1	Installing the STARTER commissioning tool .....	196
5.2.2	Layout of the STARTER user interface .....	196
5.3	Procedure for commissioning with STARTER .....	197
5.3.1	Creating the project .....	197
5.3.2	Configure the drive unit .....	205
5.3.3	Additional settings required .....	229
5.3.4	Transferring the drive project .....	230
5.3.5	Commissioning with STARTER via Ethernet .....	232
5.4	The AOP30 operator panel .....	238
5.5	First commissioning with the AOP30 .....	239
5.5.1	Initial ramp-up .....	239
5.5.2	Basic commissioning .....	241
5.6	Status after commissioning .....	250
5.7	Commissioning an encoder with gear factor .....	251
5.8	Parameter reset to factory settings .....	251
<b>6</b>	<b>Operation .....</b>	<b>253</b>
6.1	Chapter content .....	253
6.2	General information about command and setpoint sources .....	254
6.3	Basic information about the drive system .....	255
6.3.1	Parameters .....	255
6.3.2	Drive objects .....	258

6.3.3	Data Sets .....	259
6.3.4	BICO technology: interconnecting signals.....	265
6.3.5	Propagation of faults .....	271
6.4	Command sources .....	272
6.4.1	"PROFIdrive" default setting.....	272
6.4.2	"TM31 terminals" default setting .....	274
6.4.3	"NAMUR" default setting .....	276
6.4.4	"PROFIdrive NAMUR" default setting .....	278
6.5	Setpoint sources .....	280
6.5.1	Analog inputs .....	280
6.5.2	Motorized potentiometer .....	282
6.5.3	Fixed speed setpoints .....	283
6.6	Control via the operator panel.....	285
6.6.1	Operator panel (AOP30) overview and menu structure.....	285
6.6.2	Menu: Operation screen .....	287
6.6.3	Parameterization menu.....	288
6.6.4	Menu: Fault/alarm memory.....	289
6.6.5	Menu commissioning / service .....	290
6.6.5.1	Drive commissioning .....	290
6.6.5.2	Device commissioning .....	291
6.6.5.3	Drive diagnostics .....	291
6.6.5.4	AOP settings .....	293
6.6.5.5	AOP diagnostics.....	300
6.6.6	Sprachauswahl/Language selection.....	302
6.6.7	Operation via the operator panel (LOCAL mode) .....	303
6.6.7.1	LOCAL/REMOTE key .....	303
6.6.7.2	ON key / OFF key .....	304
6.6.7.3	Switching between clockwise and counter-clockwise rotation .....	304
6.6.7.4	Jog .....	305
6.6.7.5	Increase setpoint / decrease setpoint.....	305
6.6.7.6	AOP setpoint .....	305
6.6.7.7	Lock AOP LOCAL mode.....	306
6.6.7.8	Acknowledge error from the AOP.....	306
6.6.7.9	CDS setting via AOP .....	307
6.6.7.10	Operator input inhibit / parameterization inhibit.....	307
6.6.8	Faults and alarms.....	308
6.6.9	Saving the parameters permanently.....	310
6.6.10	Parameterization errors.....	310
6.7	Communication according to PROFIdrive.....	311
6.7.1	General information .....	311
6.7.2	Application classes.....	313
6.7.3	Cyclic communication.....	315
6.7.3.1	Telegrams and process data .....	316
6.7.3.2	Structure of the telegrams .....	318
6.7.3.3	Overview of control words and setpoints.....	318
6.7.3.4	Overview of status words and actual values .....	319
6.7.4	Acyclic communication .....	319
6.7.4.1	Structure of requests and responses.....	321
6.7.4.2	Determining the drive object numbers .....	327
6.7.4.3	Example 1: Reading parameters .....	327

6.7.4.4	Example 2: Writing parameters (multi-parameter request).....	329
6.7.5	Diagnostics channels .....	333
6.7.5.1	Diagnostics via PROFINET .....	334
6.7.5.2	Diagnostics via PROFIBUS .....	336
6.7.6	Further information about PROFIdrive communication .....	340
6.8	Communication via PROFIBUS DP .....	341
6.8.1	PROFIBUS connection.....	341
6.8.2	General information about PROFIBUS DP .....	345
6.8.2.1	General information about PROFIBUS DP for SINAMICS .....	345
6.8.2.2	Sequence of DOs in the telegram .....	347
6.8.3	Control via PROFIBUS .....	348
6.8.4	Monitoring: Telegram failure.....	350
6.8.5	Further information about communication via PROFIBUS DP.....	351
6.9	Communication via PROFINET IO .....	352
6.9.1	Activating online operation: STARTER via PROFINET IO .....	352
6.9.2	General information about PROFINET IO .....	356
6.9.2.1	General information about PROFINET IO for SINAMICS.....	356
6.9.2.2	Real-time (RT) and isochronous real-time (IRT) communication.....	357
6.9.2.3	Addresses .....	358
6.9.2.4	Dynamic IP address assignment .....	361
6.9.2.5	DCP flashing .....	362
6.9.2.6	Data transmission .....	363
6.9.2.7	Communication channels .....	364
6.9.3	Communication with CBE20.....	365
6.9.3.1	Selecting the CBE20 firmware .....	365
6.9.3.2	EtherNet/IP .....	366
6.9.4	PROFINET media redundancy .....	366
6.9.5	PROFINET system redundancy .....	367
6.9.5.1	Overview .....	367
6.9.5.2	Design, configuring and diagnostics.....	368
6.9.5.3	Faults, alarms and parameters .....	369
6.9.6	PROFInergy .....	370
6.9.6.1	Description .....	370
6.9.6.2	Tasks of PROFInergy .....	371
6.9.6.3	PROFInergy commands .....	372
6.9.6.4	PROFInergy measured values .....	374
6.9.6.5	PROFInergy energy-saving mode .....	374
6.9.6.6	PROFInergy inhibit and pause time .....	375
6.9.6.7	Function diagrams and parameters .....	375
6.9.7	Support of I&M data sets 1...4 .....	376
6.9.8	Further information about communication via PROFINET IO .....	377
6.10	Communication via SINAMICS Link.....	378
6.10.1	Basic principles of SINAMICS Link .....	378
6.10.2	Topology .....	380
6.10.3	Configuring and commissioning.....	381
6.10.4	Example .....	386
6.10.5	Communication failure when booting or in cyclic operation.....	388
6.10.6	Transmission times for SINAMICS Link.....	389
6.10.7	Function diagrams and parameters .....	390
6.11	Communication via EtherNet/IP.....	391

6.11.1	Overview.....	391
6.11.2	Connect drive device to Ethernet/IP.....	391
6.11.3	Configuring communication.....	393
6.11.4	Supported objects.....	394
6.11.5	Integrate the drive device into the Ethernet network via DHCP.....	404
6.11.6	Parameters, faults and alarms.....	405
6.12	Communication via MODBUS TCP.....	407
6.12.1	Overview.....	407
6.12.2	Configuring Modbus TCP via interface X150.....	408
6.12.3	Configuring Modbus TCP via interface X1400.....	409
6.12.4	Mapping tables.....	410
6.12.5	Write and read access using function codes.....	413
6.12.6	Communication via data set 47.....	415
6.12.6.1	Communication details.....	416
6.12.6.2	Examples: Read parameters.....	417
6.12.6.3	Examples: Write parameter.....	418
6.12.7	Communication procedure.....	419
6.12.8	Parameters, faults and alarms.....	420
6.13	Communication services and used port numbers.....	421
6.14	Parallel operation of communication interfaces.....	423
6.15	Engineering Software Drive Control Chart (DCC).....	427
<b>7</b>	<b>Setpoint channel and closed-loop control.....</b>	<b>429</b>
7.1	Chapter content.....	429
7.2	Setpoint channel.....	430
7.2.1	Setpoint addition.....	430
7.2.2	Direction reversal.....	431
7.2.3	Skip frequency bands and minimum speed.....	432
7.2.4	Speed limitation.....	433
7.2.5	Ramp-function generator.....	434
7.3	V/f control.....	438
7.3.1	Voltage Boost.....	441
7.3.2	Resonance damping.....	444
7.3.3	Slip compensation.....	445
7.4	Vector speed/torque control with/without encoder.....	447
7.4.1	Vector control without encoder.....	448
7.4.2	Vector control with encoder.....	455
7.4.3	Actual speed value filter.....	456
7.4.4	Speed controller.....	457
7.4.4.1	Speed controller pre-control (integrated pre-control with balancing).....	460
7.4.4.2	Reference model.....	463
7.4.4.3	Speed controller adaptation.....	464
7.4.4.4	Droop Function.....	466
7.4.4.5	Open actual speed value.....	468
7.4.5	Closed-loop torque control.....	470
7.4.6	Torque limiting.....	472
7.4.7	Current setpoint filters.....	474
7.4.8	Current controller adaptation.....	475
7.4.9	Permanent-magnet synchronous motors.....	476

<b>8</b>	<b>Output terminals .....</b>	<b>479</b>
8.1	Chapter content.....	479
8.2	Analog outputs .....	480
8.2.1	List of signals for the analog signals .....	481
8.3	Digital outputs.....	483
<b>9</b>	<b>Functions, Monitoring, and Protective Functions .....</b>	<b>485</b>
9.1	Chapter content.....	485
9.2	Drive Functions.....	486
9.2.1	Motor data identification and automatic speed controller optimization .....	486
9.2.1.1	Motor data identification .....	487
9.2.1.2	Rotating measurement and speed controller optimization .....	491
9.2.1.3	Shortened rotating measurement .....	493
9.2.1.4	Parameters .....	494
9.2.2	Efficiency optimization.....	494
9.2.2.1	Description .....	494
9.2.2.2	Simple efficiency optimization (method 1) .....	495
9.2.2.3	Advanced efficiency optimization (method 2) .....	496
9.2.2.4	Function diagrams, parameters.....	496
9.2.3	Fast magnetization for induction motors .....	497
9.2.4	Vdc control .....	500
9.2.5	Automatic restart function .....	505
9.2.6	Flying restart .....	508
9.2.6.1	Flying restart without encoder .....	510
9.2.6.2	Flying restart with encoder .....	513
9.2.6.3	Parameters .....	514
9.2.7	Checking for a short-circuit/ground fault at a motor.....	515
9.2.8	Motor changeover/selection.....	516
9.2.8.1	Description .....	516
9.2.8.2	Example of changing over between two motors.....	516
9.2.8.3	Function diagram .....	518
9.2.8.4	Parameters .....	518
9.2.9	Friction characteristic curve .....	519
9.2.10	Armature short-circuit braking, DC brake .....	521
9.2.10.1	General .....	521
9.2.10.2	External armature short-circuit braking .....	521
9.2.10.3	Internal armature short-circuit braking .....	523
9.2.10.4	DC braking.....	524
9.2.11	Increasing the output frequency .....	527
9.2.11.1	Description .....	527
9.2.11.2	Default pulse frequencies.....	528
9.2.11.3	Increasing the pulse frequency.....	528
9.2.11.4	Maximum output frequency achieved by increasing the pulse frequency .....	529
9.2.11.5	Parameters .....	529
9.2.12	Derating behavior at increased pulse frequency.....	530
9.2.13	Pulse frequency wobbling .....	531
9.2.14	Runtime (operating hours counter) .....	533
9.2.15	Simulation operation .....	534
9.2.16	Direction reversal.....	536
9.2.17	Unit changeover .....	537

9.2.18	Simple brake control .....	539
9.2.19	Synchronization .....	542
9.2.20	Energy saving indicator for pumps, fans, and compressors .....	543
9.2.21	Write protection .....	546
9.2.22	Know-how protection .....	548
9.2.22.1	Description .....	548
9.2.22.2	Activating know-how protection .....	551
9.2.22.3	Deactivating know-how protection .....	552
9.2.22.4	Changing the know-how protection password.....	553
9.2.22.5	OEM exception list.....	553
9.2.22.6	Loading data with know-how protection into the file system .....	554
9.2.22.7	Overview of important parameters.....	557
9.2.23	Essential service mode.....	557
9.2.24	Web server .....	561
9.2.24.1	Description .....	561
9.2.24.2	Starting the web server.....	571
9.2.24.3	Web server configuration.....	575
9.2.24.4	Additional information.....	577
9.3	Extended functions.....	578
9.3.1	Technology controller .....	578
9.3.2	Bypass function .....	580
9.3.2.1	Bypass with synchronizer with degree of overlapping (p1260 = 1).....	582
9.3.2.2	Bypass with synchronizer without degree of overlapping (p1260 = 2).....	585
9.3.2.3	Bypass without synchronizer (p1260 = 3).....	588
9.3.2.4	Function diagram .....	590
9.3.2.5	Parameters .....	590
9.3.3	Extended brake control.....	591
9.3.4	Extended monitoring functions.....	596
9.3.5	Moment of inertia estimator .....	598
9.4	Monitoring and protective functions .....	604
9.4.1	Protecting power components .....	604
9.4.2	Thermal monitoring and overload responses .....	605
9.4.3	Block protection.....	608
9.4.4	Stall protection (only for vector control).....	609
9.4.5	Thermal motor protection.....	610
9.4.5.1	Description.....	610
9.4.5.2	Temperature sensor connection to customer terminal module TM31 (option G60) .....	610
9.4.5.3	Temperature sensor connection at a Sensor Module (option K50).....	611
9.4.5.4	Temperature sensor connection directly to the Control Interface Module.....	612
9.4.5.5	Temperature sensor evaluation .....	613
9.4.5.6	Thermal motor models.....	614
9.4.5.7	Function diagram .....	618
9.4.5.8	Parameters .....	618
9.4.6	Temperature measurement via TM150 (option G51) .....	619
9.4.6.1	Description .....	619
9.4.6.2	Measurement with up to 6 channels .....	621
9.4.6.3	Measurement with up to 12 channels .....	621
9.4.6.4	Forming groups of temperature sensors.....	622
9.4.6.5	Evaluating temperature channels.....	623
9.4.6.6	Function diagram .....	624
9.4.6.7	Parameter.....	625



<b>10</b>	<b>Diagnosis/faults and alarms .....</b>	<b>627</b>
10.1	Chapter content.....	627
10.2	Diagnosis.....	628
10.2.1	Diagnostics using LEDs.....	628
10.2.2	Diagnostics via parameters .....	636
10.2.3	Indicating and rectifying faults.....	640
10.3	Overview of warnings and faults .....	641
10.3.1	"External alarm 1" .....	641
10.3.2	"External fault 1" .....	642
10.3.3	"External fault 2" .....	643
10.3.4	"External fault 3" .....	643
<b>11</b>	<b>Maintenance and servicing .....</b>	<b>645</b>
11.1	Chapter content.....	645
11.2	Maintenance .....	646
11.2.1	Cleaning .....	646
11.3	Maintenance .....	646
11.3.1	Installation device.....	648
11.3.2	Using crane lifting lugs to transport power blocks.....	649
11.4	Replacing components.....	651
11.4.1	Replacing the filter mats .....	651
11.4.2	Replacing the Control Interface Module, frame size GB, GD.....	652
11.4.3	Replacing the Control Interface Module, frame size JX .....	654
11.4.4	Replacing the power block, frame sizes GB, GD.....	656
11.4.5	Replacing the power block, frame size JX .....	659
11.4.6	Replacing the fan, frame sizes GB, GD .....	661
11.4.7	Replacing the fan, frame size JX .....	663
11.4.8	Replacing the DC fuses in the Motor Module .....	665
11.4.9	Replacing cylindrical fuses.....	667
11.4.10	Replacing the LV HRC fuses .....	668
11.4.11	Replacing the cabinet operator panel .....	670
11.4.12	Replacing the Backup Battery for the Cabinet Operator Panel .....	670
11.5	Forming the DC link capacitors.....	672
11.6	Messages after replacing DRIVE-CLiQ components.....	673
11.7	Upgrading the cabinet unit firmware.....	674
11.8	Load the new operator panel firmware from the PC.....	675
<b>12</b>	<b>Technical specifications.....</b>	<b>677</b>
12.1	Chapter content.....	677
12.2	General data .....	678
12.2.1	Derating data.....	680
12.2.1.1	Current derating as a function of the ambient temperature .....	680
12.2.1.2	Installation altitudes between 2000 m and 5000 m above sea level .....	680
12.2.1.3	Current derating as a function of the pulse frequency.....	682
12.2.2	Overload capability .....	683
12.2.3	Data regarding the power loss in partial load operation .....	684

12.3	Technical data .....	685
12.3.1	Cabinet devices version A, 660 V - 690 V 3 AC .....	686
<b>A</b>	<b>Appendix .....</b>	<b>691</b>
A.1	Environmental compatibility .....	691
A.2	List of abbreviations.....	691
A.3	Parameter macros.....	700
	<b>Index.....</b>	<b>711</b>

# Safety Notes

## 1.1 General safety instructions



### WARNING

#### **Electric shock and danger to life due to other energy sources**

Touching live components can result in death or serious injury.

- Only work on electrical equipment if you are appropriately qualified.
- Always observe the country-specific safety rules for all work.

Generally, the following steps apply when establishing safety:

1. Prepare for disconnection. Notify all those who will be affected by the procedure.
2. Isolate the drive system from the power supply and take measures to prevent it being switched back on again.
3. Wait until the discharge time specified on the warning labels has elapsed.
4. Check that there is no voltage between any of the power connections, and between any of the power connections and the protective conductor connection.
5. Check that every auxiliary circuit is de-energized.
6. Ensure that the motors cannot move.
7. Identify all other dangerous energy sources, e.g. compressed air, hydraulic systems or water. Switch the energy sources to a safe state.
8. Check that the correct drive system is completely locked.

After you have completed the work, restore the operational readiness by following the above steps in the reverse order.



### WARNING

#### **Electric shock if there is no ground connection**

For missing or incorrectly implemented protective conductor connection for devices with protection class I, high voltages can be present at open, exposed parts, which when touched, can result in death or severe injury.

- Ground the device in compliance with the applicable regulations.



**! WARNING**

**Electric shock due to connection to an unsuitable power supply**

When equipment is connected to an unsuitable power supply, exposed components may carry a hazardous voltage that might result in serious injury or death.

- Only use power supplies that provide SELV (Safety Extra Low Voltage) or PELV (Protective Extra Low Voltage) output voltages for all connections and terminals of the electronics modules.



**! WARNING**

**Electric shock due to equipment damage**

Improper handling may cause damage to equipment. For damaged devices, hazardous voltages can be present at the enclosure or at exposed components; if touched, this can result in death or severe injury.

- Ensure compliance with the limit values specified in the technical data during transport, storage and operation.
- Do not use any damaged devices.



**! WARNING**

**Electric shock due to unconnected cable shield**

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

- Connect cable shields and unused conductors of power cables (e.g. brake conductors) at least on one side to the grounded housing potential.



**! WARNING**

**Arcing when a plug connection is opened during operation**

Opening a plug connection when a system is in operation can result in arcing that may cause serious injury or death.

- Only open plug connections when the equipment is in a voltage-free state, unless it has been explicitly stated that they can be opened in operation.



**! WARNING**

**Electric shock due to residual charges in power components**

Because of the capacitors, a hazardous voltage is present for up to 5 minutes after the power supply has been switched off. Contact with live parts can result in death or serious injury.

- Wait for 5 minutes before you check that the unit really is in a no-voltage condition and start work.

**NOTICE****Damage to equipment due to unsuitable tightening tools.**

Unsuitable tightening tools or fastening methods can damage the screws of the equipment.

- Be sure to only use screwdrivers which exactly match the heads of the screws.
- Tighten the screws with the torque specified in the technical documentation.
- Use a torque wrench or a mechanical precision nut runner with a dynamic torque sensor and speed limitation system.

**NOTICE****Property damage due to loose power connections**

Insufficient tightening torques or vibration can result in loose power connections. This can result in damage due to fire, device defects or malfunctions.

- Tighten all power connections to the prescribed torque.
- Check all power connections at regular intervals, particularly after equipment has been transported.

**WARNING****Spread of fire from built-in devices**

In the event of fire outbreak, the enclosures of built-in devices cannot prevent the escape of fire and smoke. This can result in serious personal injury or property damage.

- Install built-in units in a suitable metal cabinet in such a way that personnel are protected against fire and smoke, or take other appropriate measures to protect personnel.
- Ensure that smoke can only escape via controlled and monitored paths.

**WARNING****Active implant malfunctions due to electromagnetic fields**

Converters generate electromagnetic fields (EMF) during operation. Electromagnetic fields may interfere with active implants, e.g. pacemakers. People with active implants in the immediate vicinity of systems are at risk.

- As the operator of an EMF-emitting installation, assess the individual risks of persons with active implants.
- Observe the data on EMF emission provided in the product documentation.

 **WARNING****Unexpected movement of machines caused by radio devices or mobile phones**

Using radio devices or mobile telephones in the immediate vicinity of the components can result in equipment malfunction. Malfunctions may impair the functional safety of machines and can therefore put people in danger or lead to property damage.

- Therefore, if you move closer than 20 cm to the components, be sure to switch off radio devices or mobile telephones.
- Use the "SIEMENS Industry Online Support App" only on equipment that has already been switched off.

 **WARNING****Damage to motor insulation due to excessive voltages**

When operated on systems with grounded line conductor or in the event of a ground fault in the IT line system, the motor insulation can be damaged by the higher voltage to ground. If you use motors that have insulation that is not designed for operation with grounded line conductors, you must perform the following measures:

- IT system: Use a ground fault monitor and eliminate the fault as quickly as possible.
- TN or TT systems with grounded line conductor: Use an isolating transformer on the line side.

 **WARNING****Fire due to inadequate ventilation clearances**

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

- Ensure compliance with the specified minimum clearance as ventilation clearance for the respective component.

 **WARNING****Unrecognized dangers due to missing or illegible warning labels**

Dangers might not be recognized if warning labels are missing or illegible. Unrecognized dangers may cause accidents resulting in serious injury or death.

- Check that the warning labels are complete based on the documentation.
- Attach any missing warning labels to the components, where necessary in the national language.
- Replace illegible warning labels.

**NOTICE****Device damage caused by incorrect voltage/insulation tests**

Incorrect voltage/insulation tests can damage the device.

- Before carrying out a voltage/insulation check of the system/machine, disconnect the devices as all converters and motors have been subject to a high-voltage test by the manufacturer, and therefore it is not necessary to perform an additional test within the system/machine.

**CAUTION****Injuries at places that are difficult to access**

There is risk of injury when working at locations that are difficult to access. For example, sharp edges and splinters can cause injuries to the head and skin.

- Use suitable personal protective equipment, for example gloves.

**CAUTION****Hot component surfaces**

Certain components (e.g. the heat sink and reactor) can become very hot during operation. These components can remain hot for a long time after operation. Contact can result in serious injury, such as skin burns.

- Do not touch hot components, even after you have switched off the device.

**WARNING****Unexpected movement of machines caused by inactive safety functions**

Inactive or non-adapted safety functions can trigger unexpected machine movements that may result in serious injury or death.

- Observe the information in the appropriate product documentation before commissioning.
- Carry out a safety inspection for functions relevant to safety on the entire system, including all safety-related components.
- Ensure that the safety functions used in your drives and automation tasks are adjusted and activated through appropriate parameterizing.
- Perform a function test.
- Only put your plant into live operation once you have absolutely guaranteed that the functions relevant to safety are operating correctly.

**Note****Important safety notices for Safety Integrated functions**

If you want to use Safety Integrated functions, you must observe the safety notices in the Safety Integrated manuals.

## 1.2 Handling the AOP30 backup battery



### **WARNING**

#### **Risk of explosion and release of harmful substances**

Improper handling of lithium batteries can result in an explosion of the batteries.

Explosion of the batteries and the released pollutants can cause severe physical injury.

Note the following points when handling lithium batteries:

- Replace used batteries in good time; see the chapter "Replacing the backup battery".
- Only replace the lithium battery with an identical battery or with a type recommended by the manufacturer.
- Do not throw lithium batteries into a fire, do not recharge, do not open, do not short-circuit, do not reverse the polarity, do not heat above 100 °C and protect from direct sunlight, moisture and condensation.



## 1.3 Handling electrostatic sensitive devices (ESD)

Electrostatic sensitive devices (ESD) are individual components, integrated circuits, modules or devices that may be damaged by either electric fields or electrostatic discharge.



### NOTICE

#### Damage through electric fields or electrostatic discharge

Electric fields or electrostatic discharge can cause malfunctions through damaged individual components, integrated circuits, modules or devices.

- Only pack, store, transport and send electronic components, modules or devices in their original packaging or in other suitable materials, e.g. conductive foam rubber or aluminum foil.
- Only touch components, modules and devices when you are grounded by one of the following methods:
  - Wearing an ESD wrist strap
  - Wearing ESD shoes or ESD grounding straps in ESD areas with conductive flooring
- Only place electronic components, modules or devices on conductive surfaces (table with ESD surface, conductive ESD foam, ESD packaging, ESD transport container).

The necessary ESD protective measures are clearly illustrated in the following diagram:

- a = conductive floor surface
- b = ESD table
- c = ESD shoes
- d = ESD overall
- e = ESD wristband
- f = cabinet ground connection
- g = contact with conductive flooring

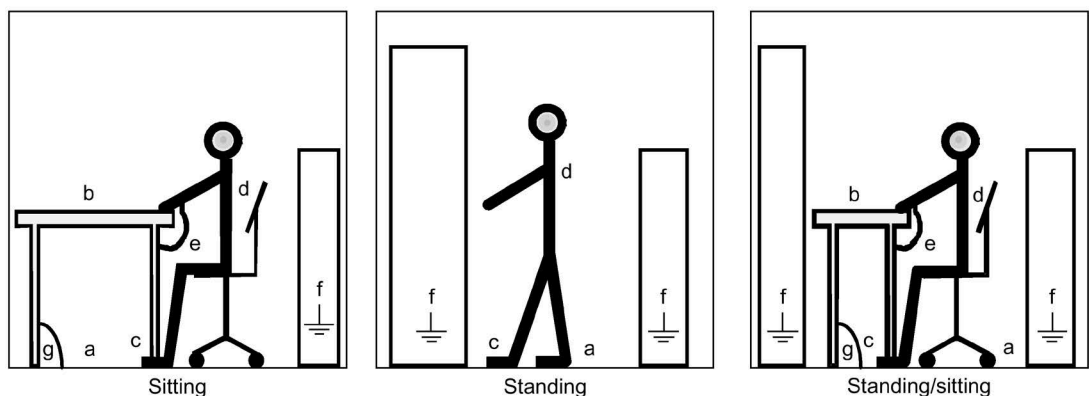


Figure 1-1 ESD protective measures

## 1.4 Industrial security

Siemens provides products and solutions with Industrial Security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art Industrial Security concept. Siemens products and solutions form part of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the Internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. using firewalls and/or network segmentation) are in place.

For additional information on Industrial Security measures that can be implemented, please visit:

Industrial Security (<http://www.siemens.com/industrialsecurity>).

Siemens' products and solutions undergo continuous development to make them more secure. Siemens expressly recommends that product updates be applied as soon as they become available, and that only the latest product versions be used. Use of product versions that are no longer supported, and failure to apply latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed at:

Siemens Industrial Security RSS feed

(<https://new.siemens.com/global/en/products/services/cert.html#Subscriptions>).

Additional information is provided on the Internet:

Industrial security Configuration Manual

(<https://support.industry.siemens.com/cs/ww/en/view/108862708>)

### WARNING

#### Unsafe operating states resulting from software manipulation

Software manipulations, e.g. viruses, Trojans, or worms, can cause unsafe operating states in your system that may lead to death, serious injury, and property damage.

- Keep the software up to date.
- Incorporate the automation and drive components into a holistic, state-of-the-art industrial security concept for the installation or machine.
- Make sure that you include all installed products into the holistic industrial security concept.
- Protect files stored on exchangeable storage media from malicious software by applying suitable protection measures, e.g. virus scanners.
- Carefully check all security-related settings once commissioning has been completed.

## 1.5 Residual risks of power drive systems

When assessing the machine or system-related risk in accordance with the respective local regulations (e.g. EC Machinery Directive), the machine manufacturer or system installer must take into account the following residual risks emanating from the control and drive components of a drive system:

1. Unintentional movements of the driven machine or system components during commissioning, operation, maintenance, and repairs caused by, for example:
  - Hardware and/or software errors in the sensors, control system, actuators and connection system
  - Response times of the controller and drive
  - Operation and/or environmental conditions outside the specifications
  - Condensation/conductive pollution
  - Parameterization, programming, cabling, and installation errors
  - Use of wireless devices/mobile phones in the immediate vicinity of electronic components
  - External influences/damage
  - X-ray, ionizing radiation and cosmic radiation
2. Unusually high temperatures, including open flames, as well as the emission of light, noise, particles, gases, etc., can occur inside and outside the components under fault conditions caused by, for example:
  - Component malfunctions
  - Software errors
  - Operation and/or environmental conditions outside the specifications
  - External influences/damage
3. Hazardous shock voltages caused by, for example:
  - Component malfunctions
  - Influence of electrostatic charging
  - Induction of voltages in moving motors
  - Operation and/or environmental conditions outside the specifications
  - Condensation/conductive pollution
  - External influences/damage
4. Electrical, magnetic and electromagnetic fields generated in operation that can pose a risk to people with a pacemaker, implants or metal replacement joints, etc., if they are too close
5. Release of environmental pollutants or emissions as a result of improper operation of the system and/or failure to dispose of components safely and correctly
6. Influence of network-connected communication systems, e.g. ripple-control transmitters or data communication via the network.

For more information about residual risks of the components in a drive system, see the relevant sections in the technical user documentation.

*1.5 Residual risks of power drive systems*

# Device Overview

## 2.1 Chapter content

This chapter provides information on the following:

- Introduction to the cabinet units
- The main components and features of the cabinet unit
- The cabinet unit wiring
- Explanation of the type plate

## 2.2 Application range and characteristics

### 2.2.1 Field of applications

SINAMICS G150 drive converter cabinet units are specially designed to meet the requirements of drives with a quadratic and constant load characteristic, medium performance requirements, and no regenerative feedback. Applications include:

- Pumps and fans
- Compressors
- Extruders and mixers
- Mills

### 2.2.2 Characteristics, quality, service

#### Features

The accuracy of sensorless vector control ensures that the system can be used for a wide variety of applications and, as a result, an additional speed sensor is not required.

Optionally, applications with system-specific requirements for an encoder can use an encoder evaluator.

SINAMICS G150 takes this into account and, as a result, offers a low-cost drive solution tailored to actual requirements.

In addition, factors have been considered to ensure easy handling of the drive from the planning and design phase through to operation. These factors include:

- Compact, modular, service-friendly design
- Straightforward planning/design and commissioning thanks to the SIZER and STARTER tools.
- Ready to connect to facilitate the installation process
- Quick, menu-driven commissioning with no complex parameterization
- Clear and convenient drive monitoring/diagnostics, commissioning and operation via a user-friendly graphical operator panel with measured values displayed in plain text or in a quasi-analog bar display.
- SINAMICS is an integral part of Totally Integrated Automation (TIA). The TIA concept offers an optimized range of products for automation and drive technology. This concept is characterized by planning / design, communication, and data management procedures that are consistent throughout the product range. SINAMICS is fully integrated in the TIA concept.  
Separate S7/PCS7 blocks and faceplates for WinCC are available.
- Integration in SIMATIC H systems is possible via a Y link.
- Drive Control Chart (DCC)  
Drive Control Chart (DCC) expands the possibility of very simply configuring technological functions for the SINAMICS drive system.  
The block library encompasses a large selection of closed-loop, arithmetic and logic function blocks, as well as more comprehensive open-loop and closed-loop control functions. The user-friendly DCC editor enables easy graphical configuration and a clear representation of control loop structures as well as a high degree of reusability of existing diagrams. DCC is an add-on to the STARTER commissioning tool.

## Quality

The SINAMICS G150 drive converter cabinet units are manufactured to meet high standards of quality and exacting demands.

This results in a high level of reliability, availability, and functionality for our products.

The development, design, and manufacturing processes, as well as order processing and the logistics supply center have been certified to DIN ISO 9001 by an independent authority.

## Service

Our worldwide sales and service network offers our customers consulting services tailored to their needs, provides support with planning and design, and offers a range of training courses.

Contact information and the current link to our website can be found in the preface.

## 2.3 Design

### 2.3.1 General

The SINAMICS G150 cabinet units are characterized by their compact, modular, and service-friendly design.

A wide range of electrical and mechanical components enable the drive system to be optimized for the appropriate requirements.

### 2.3.2 Device overview

A SINAMICS G150 drive line-up in the power range 1750 to 2700 kW comprises two Line Connection Modules, two Basic Line Modules and, depending on the output, two or three Motor Modules.

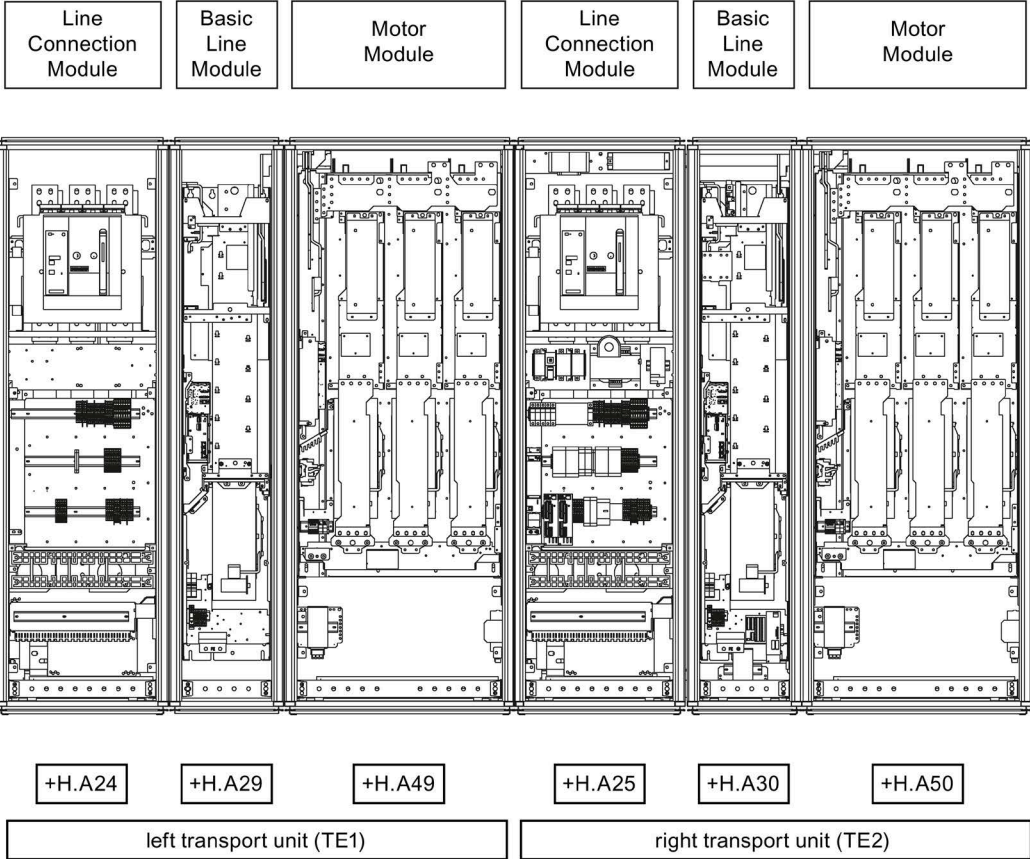


Figure 2-1 G150 overview (example 1950 kW)

2.3 Design

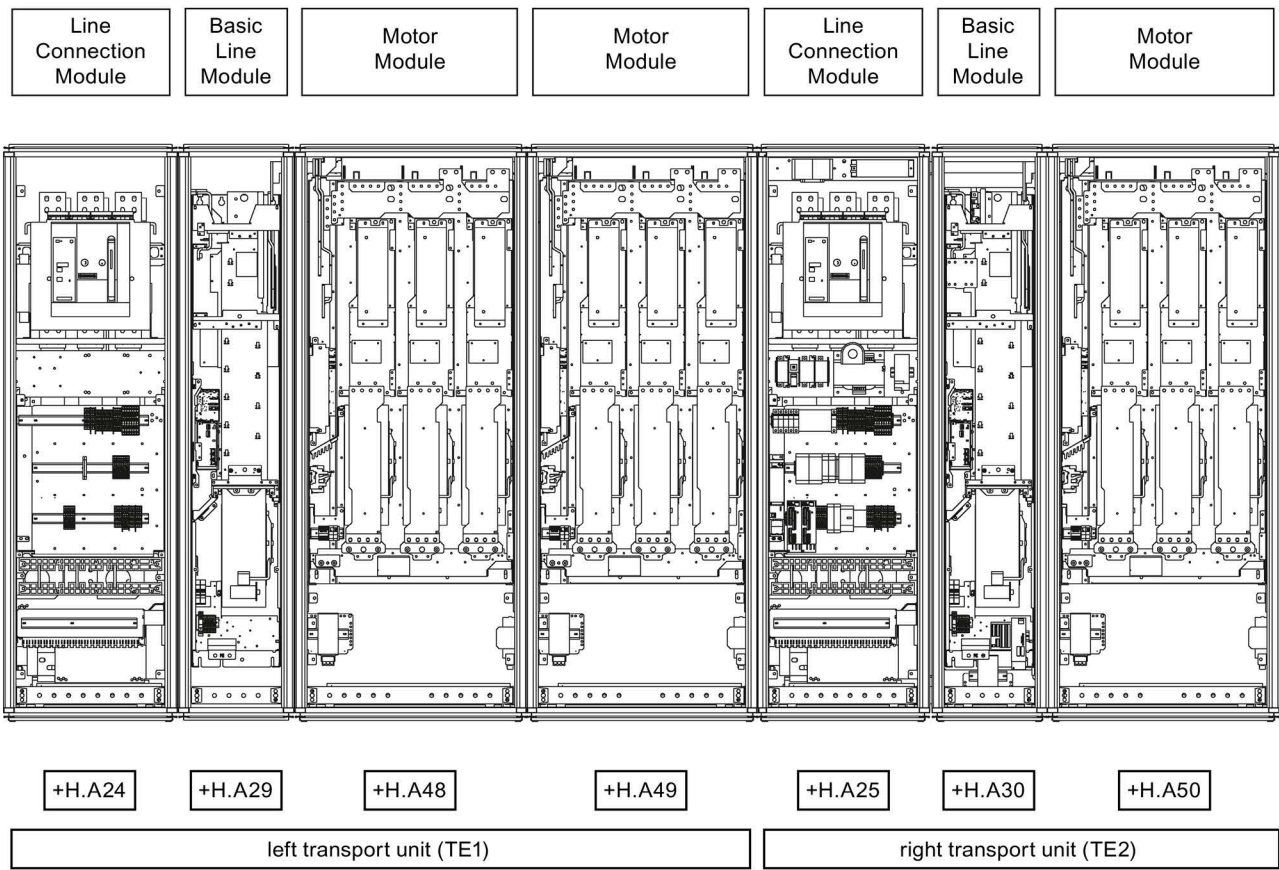


Figure 2-2 G150 overview (example 2700 kW)



## 2.4 Wiring principle

Wiring principle for G150 cabinet unit connected in parallel with 6-pulse or 12-pulse infeed, motor with one, two or three winding system

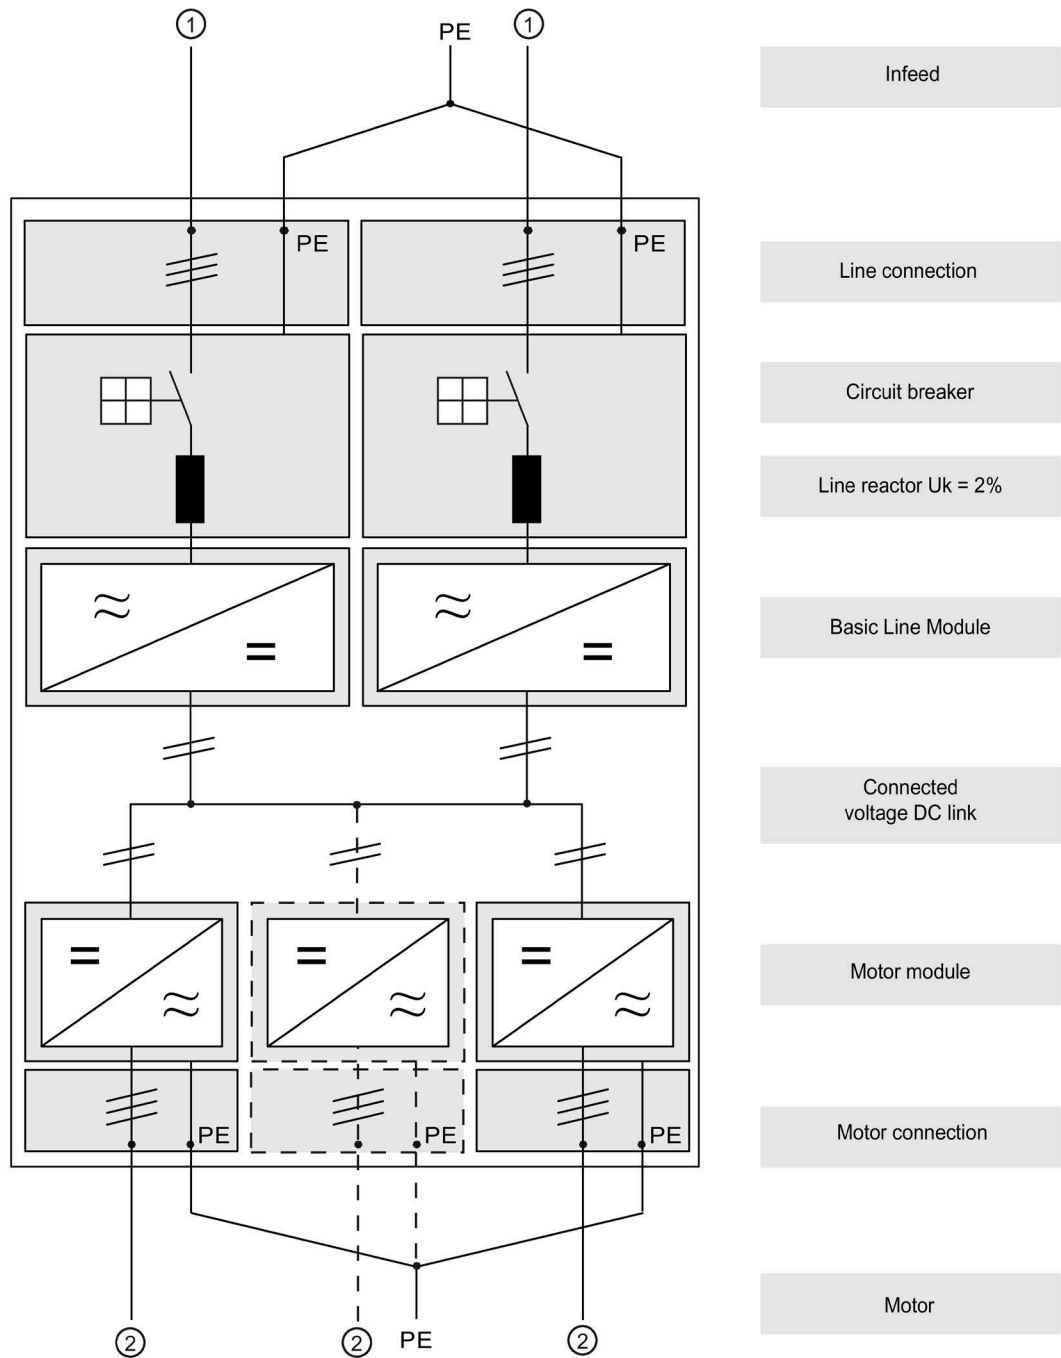


Figure 2-3 Wiring principle for G150

## 2.4 Wiring principle

- ① The line infeed can be either 6-pulse or 12-pulse.
  - ② Up to a rated power of 2400 kW, motors can be connected to a single winding system or to a double winding system. Up to a rated power of 2700 kW, motors can be connected to a single winding system or to a triple winding system.
- 

### **Note**

#### **Motors with multiple winding systems**

Motors with multiple winding systems can also be operated as a single winding system by connecting the motor windings in parallel at the terminal box and setting the parameter p7003 during commissioning.

→ See "Commissioning"

---

### **Note**

#### **PE connection of the motor**

The PE connection at the motor must be fed back directly to the cabinet unit.




---




## 2.5 Type plate

### Specifications on the type plate

# SIEMENS

Vogelweiherstr. 1-15, DE-90441 Nuernberg Made in Germany

<b>AC DRIVE / FREQUENZUMRICHTER</b>		
<b>SINAMICS G150</b>		
①	<b>Input:</b> Eingang:	<b>3AC</b> 50-60 Hz 660 - 690 <b>V</b> 2245 <b>A</b>
②	<b>Output:</b> Ausgang:	<b>3AC</b> 0-550 Hz 0 - 690 <b>V</b> 2158 <b>A</b>
③	<b>Temperature range:</b> Temperaturbereich:	+ 0 - + 40 °C <b>Duty class:</b> Bel. - Klasse: I
④	<b>Degree of protection:</b> Schutzart:	IP21 <b>Cooling method:</b> Kühlart: AF
⑤	<b>Short-Circuit Current Rating:</b> Bemessungskurzschlussstrom:	2x85 <b>kA</b> <b>Nominal Power:</b> Nennleistung: 2150 <b>kW</b>
	<b>Customer order:</b> Kundenauftrag: 0001111111	<b>Position:</b> Position: 000010 <b>Weight:</b> Gewicht: 2910 <b>kg</b>
	<b>Version:</b> Version: 2PE A	  
	<b>Catalog number (MLFB):</b> 1P 6SL3710-2GH42-2EA3-Z	
	Artikelnummer (MLFB): D02+D14+G60+L23+M06+M21+M70+M90	
	<b>Serial number:</b> Fabrik - Nummer: N-H31473800000001	

refer to user manual  
<https://support.industry.siemens.com>

Figure 2-4 Type plate for the cabinet unit (example)

## Type plate specifications (from type plate above)

Position	Specification	Value	Explanation
①	Input	3 AC 50 - 60 Hz 660 - 690 V 2245 A	Three-phase current connection Line frequency Rated input voltage Rated input current
②	Output	3 AC 0 - 550 Hz 0 - 690 V 2158 A	Three-phase current connection Output frequency Rated output voltage Rated output current
③	Temperature range	+0 - +40 °C	Ambient temperature range within which the enclosed drive can operate under 100 % load
④	Degree of protection	IP21	Degree of protection
⑤	Short-circuit current rating	2x85 kA	Rated short-circuit current
⑥	Duty class load class	I	I: Duty class I to EN 60146-1-1 = 100 % (continuously) (with the specified current values, the cabinet unit can operate continuously under 100 % load)
⑦	Cooling method	AF	A: Cooling medium: air F: Circulation method: forced cooling, drive unit (fan) in the device
⑧	Nominal power	2150 kW	Rated power
⑨	Weight	2910 kg	Weight of the enclosed drive

## Data matrix code

The data matrix code contains the specific data of the device. This code can be read-in with any Smartphone, and technical information for the appropriate device can be displayed via the "Industry Online Support" Mobile App.

Additional information on the "Industry Online Support" App is available in the Foreword (Page 3).

## Date of manufacture

The date of manufacture can be determined as follows:

Table 2- 1 Production year and month

Letter/number	Year of manufacture	Letter/number	Month of manufacture
A	2010	1 ... 9	January to September
B	2011	O	October
C	2012	N	November
D	2013	D	December
E	2014		
F	2015		
H	2016		
J	2017		
K	2018		
L	2019		
M	2020		
N	2021		
P	2022		
R	2023		

## Explanation of the option short codes

Table 2- 2 Explanation of the option short codes

Line-side options	
L00	Line filter for use in the first environment according to EN 61800-3, category C2 (TN/TT systems with grounded neutral point)
L21	Surge suppression
L23	Line reactor $u_k = 2\%$
Motor-side options	
L07	dv/dt filter compact plus Voltage Peak Limiter
L08	Motor reactor
L10	dv/dt filter plus Voltage Peak Limiter
Line-side and motor-side options	
M70	EMC shield bus
Motor protection and safety functions	
L45	EMERGENCY OFF pushbutton installed in the cabinet door
L57	EMERGENCY OFF category 0, 230 VAC or 24 VDC
L59	EMERGENCY STOP category 1, 230 VAC
L60	EMERGENCY STOP category 1, 24 VDC
L83	Thermistor motor protection unit (alarm)
L84	Thermistor motor protection unit (shutdown)
L86	PT100 evaluation unit
L87	Insulation monitoring

## 2.5 Type plate

<b>Increase in degree of protection</b>	
M21	Degree of protection IP21
M23	Degree of protection IP23
M43	Degree of protection IP43
M54	Degree of protection IP54
<b>Mechanical options</b>	
M06	Base 100 mm high, RAL 9005
M07	Cable compartment 200 mm high, RAL 7035
M90	Crane transport assembly (top-mounted)
<b>Safety Integrated</b>	
K01	Safety license for 1 axis
K52	Additional SMC30 Sensor Module
K82	Terminal Module for controlling the "Safe Torque Off" and "Safe Stop 1" safety functions
K87	TM54F Terminal Module
K88	SBA Safe Brake Adapter 230 VAC
<b>Other options</b>	
G20	CBC10 Communication Board
G33	CBE20 Communication Board
G51	TM150 Temperature Sensor Module
G60	TM31 customer terminal block
G61	Additional TM31 customer terminal block
G62	TB30 Terminal Board
K50	SMC30 Sensor Module Cabinet-Mounted
K51	VSM10 Voltage Sensing Module Cabinet-Mounted
K74	Auxiliary power supply, 230 VAC
K95	CU320-2 PN Control Unit
L19	Connection for external auxiliary equipment
L50	Cabinet lighting with service socket
L55	Cabinet anti-condensation heating
L62	Braking unit 50 kW / 250 kW
Y09	Special paint finish for cabinet
<b>Documentation (standard: English / German)</b>	
D02	Customer documentation (circuit diagram, terminal diagram, layout diagram) in DXF format
D04	Customer documentation as hard copy
D14	Draft of customer documentation
D56	Documentation in Russian
D58	Documentation in: English / French
D60	Documentation in: English / Spanish
D72	Documentation in Italian
D74	Documentation in: English/German
D76	Documentation in English
D77	Documentation in French
D78	Documentation in Spanish
D80	Documentation in: English / Italian
D84	Documentation in Chinese
D91	Documentation in: English / Chinese
D93	Documentation in: English / Portuguese (Brazil)
D94	Documentation in: English / Russian

<b>Languages (standard: English / German)</b>	
T58	Type plate data in English / French
T60	Type plate data in English / Spanish
T80	Type plate data in English / Italian
T83	Type plate data in English / Portuguese (Brazil)
T85	Type plate data in English / Russian
T91	Type plate data in English / Chinese
<b>Industry-specific options (chemicals)</b>	
B00	NAMUR terminal block
B02	Protective separation for 24 V supply (PELV)
B03	Outgoing section for external auxiliary equipment (uncontrolled)
<b>Options specific to the shipbuilding industry</b>	
M66	Marine version
E21	Individual certificate from Lloyds Register (LR)
E31	Individual certificate from Bureau Veritas (BV)
E51	Individual certificate from DNV GL
E61	Individual certificate from American Bureau of Shipping (ABS)
E71	Individual certificate from China Classification Society (CCS)
<b>Converter acceptances (not shown on the type plate)</b>	
F03	Visual acceptance
F71	Function test with no motor connected (with the customer present)
F72	Function test with no motor connected (without the customer present)
F74	Function test with test bay motor (without the customer present)
F75	Function test with test bay motor (with the customer present)
F76	Insulation test (without the customer present)
F77	Insulation test (with the customer present)
F97	Customer-specific acceptance inspections (on request)





## Mechanical installation

### 3.1 Chapter content

This chapter provides information on the following:

- The conditions for transporting, storing, and installing the cabinet unit
- Preparing and installing the cabinet unit

### 3.2 Transportation and storage

#### Transport

 **WARNING**

**Incorrectly transporting the device**

The unit can tip over if you transport it incorrectly – or if you use transport equipment that is not permitted for the purpose. Death, serious injury, or material damage can result.

- Ensure that only trained personnel transport the device with approved transport equipment and lifting tools.
- Observe the center of gravity specifications. A label or stamp is attached to each transportation unit and precisely shows the center of gravity of the cabinet.
- Transport the unit only in the original marked upright position. Do not tilt the device or allow it to fall.
- The forks of the truck must protrude at the rear of the transport pallet. The floor panels of the transport units cannot be loaded or stressed.

 **WARNING**

**Using forklift trucks that are not approved**

If the forks are too short, this can cause the transport unit/cabinet to tip over resulting in death, serious injury or damage to the cabinet.

- The forks of the truck must protrude at the rear of the transport pallet. The floor panels of the transport units cannot be loaded or stressed.
- Only use fork-lift trucks approved for this purpose to transport the units.

---

**Note**

**Notes regarding transportation**

- The devices are packaged by the manufacturer in accordance with the climatic conditions and stress encountered during transit and in the recipient country.
  - The notes on the packaging for transportation, storage, and proper handling must be observed.
  - For transportation using forklifts, the devices must be set down on a wooden pallet.
  - When the devices are unpacked, they can be transported using the optional transport eyebolts (option M90) or rails on the cabinet unit. The load must be distributed evenly. Heavy blows or impacts must be avoided during transit and when the devices are being set down, for example.
  - Shock / tilt indicators are affixed to the packaging to detect unacceptable impact or tilting of the cabinet unit during transport (see Chapter "Transport Indicators").
  - Permissible ambient temperatures:  
Air cooling: -25 to +70 °C, Class 2K3 acc. to EN 60721-3-2:1997  
Briefly up to -40 °C for max. 24 hours
- 

---

**Note**

**Notes regarding damage in transit**

- Carry out a thorough visual inspection of the device before accepting the delivery from the transportation company. Pay special attention to transport damage that is not readily apparent but indicated by the tilt and shock indicators.
  - Ensure that you have received all the items specified on the delivery note.
  - Notify the transportation company immediately of any missing components or damage.
  - If you identify any hidden defects or damage, contact the transportation company immediately and ask them to examine the device.
  - If you fail to contact them immediately, you may lose your right to claim compensation for the defects and damage.
  - If necessary, you can request the support of your local Siemens office.
-

## Storage

The devices must be stored in clean, dry rooms. Temperatures between  $-25^{\circ}\text{C}$  and  $+55^{\circ}\text{C}$  are permissible (class 1K4 according to EN 60721-3-1:1997). Temperature variations greater than 20 K per hour are not permitted.

If the cabinet unit is stored for a prolonged period once it has been unpacked, cover it or take other appropriate measures to ensure that it does not become dirty and that it is protected against environmental influences. If such measures are not taken, the warranty becomes invalid in the event of a claim for damages.

### NOTICE

#### Material damage to the canopies caused by impermissible mechanical loading

The separately delivered canopies may be damaged if they are subjected to mechanical loads before being installed on the cabinets.

- Do not apply any mechanical loads to the canopies.

## 3.3 Mounting

### WARNING

#### Failure to observe general safety instructions and residual risks

If the general safety instructions and remaining risks are not observed, accidents can occur involving severe injuries or death.

- Observe the general safety instructions.
- When assessing the risk, take into account residual risks.

### Protection against the spread of fire

The device may be operated only in closed housings or in control cabinets with protective covers that are closed, and when all of the protective devices are used. The installation of the device in a metal control cabinet or the protection with another equivalent measure must prevent the spread of fire and emissions outside the control cabinet.

### Protection against condensation or electrically conductive contamination

Protect the device, e.g. by installing it in a control cabinet with degree of protection IP54 according to IEC 60529 or NEMA 12. Further measures may be necessary for particularly critical operating conditions.

If condensation or conductive pollution can be excluded at the installation site, a lower degree of control cabinet protection is permitted.

### 3.3.1 Mechanical installation: checklist

Use the following checklist to guide you through the mechanical installation procedure for the cabinet unit. Read the "Safety instructions" section at the start of these Operating Instructions before you start working on the device.

**Note**

**Checking the checklist**

Check the boxes accordingly in the right-hand column if the activity applies to the cabinet unit in your scope of supply. In the same way, check the boxes once you have finished the installation procedure to confirm that the activities are complete.

Item	Activity	Yes	Completed
1	Check the shipping and handling monitors prior to assembly. Refer to "Mechanical installation/Assembly/Preparatory steps/Shipping and handling monitors".	<input type="checkbox"/>	<input type="checkbox"/>
2	The ambient conditions must be permissible. See "Technical data/General technical data". The enclosed units must be firmly attached using the anchor points provided (see "Mechanical Installation/Assembly"). The cooling air can flow unobstructed.	<input type="checkbox"/>	<input type="checkbox"/>
3	The minimum ceiling height (for unhindered air outlet) specified in the Operating Instructions must be observed. The cooling air supply must be not be obstructed (refer to "Mechanical installation/Preparatory steps").	<input type="checkbox"/>	<input type="checkbox"/>
4	Transport units separately shipped must be connected to one another (refer to "Mechanical installation/Mechanical connection of transport units that are shipped separately").	<input type="checkbox"/>	<input type="checkbox"/>
5	Components that are supplied separately for transport reasons (drip plate or hood) must be fitted (see "Mechanical installation/Fitting additional drip plates (option M21) or hoods (option M23, M43, M54)").	<input type="checkbox"/>	<input type="checkbox"/>
6	The clearance around an open door (escape route) specified in the applicable accident prevention guidelines must be observed.	<input type="checkbox"/>	<input type="checkbox"/>

## 3.3.2 Preparation

### 3.3.2.1 Requirements on the installation location

The cabinet units are designed for installation in closed, electrical operating areas in compliance with EN 61800-5-1. A closed electrical operating area is a room or area containing electrical equipment that can be accessed by trained personnel only. Access is controlled by a door or other form of barrier that can be opened only by means of a key or other tool. The room or area is also clearly marked with appropriate warning notices.

The operating areas must be dry and free of dust. The air supplied must not contain any electrically conductive gas, vapors, or dust, which could impair operation. It may be necessary to filter the air supplied to the room where the equipment is installed. If the air contains dust, filter mats (option M54) can be installed in front of the ventilation grills of the cabinet doors and also in front of the optional canopies. Option M54 offers additional protection against water sprayed against the housing from any direction and corresponds to degree of protection IP54.

The permissible values for climatic ambient conditions must be taken into account.

At temperatures > 40 °C (104 °F) or altitudes > 2000 m, derating is required.

The basic version of the cabinet units complies with the IP20 degree of protection in accordance with EN 60529.

Installation is realized in accordance with the dimension drawings supplied. The clearance between the top of the cabinet and the ceiling is also specified in the dimension drawings.

The cooling air for the power unit is drawn in from the front through the ventilation grills in the lower part of the cabinet doors. The hot air is discharged through the perforated top cover or the ventilation grilles in the top cover (with option M13/M23/M43/M54/M78). Cooling air can also be supplied from below through intermediate floors, air ducts, etc. To allow this, openings must be made in the 3-section bottom panel or individual bottom panels must be removed.

According to EN 61800-3, the cabinet units are not intended for use in low-voltage public line supplies that supply residential buildings. High-frequency interference can be expected if it is used in this type of line supply.

Additional measures (e.g. line filter, option L00) can be fitted for use in the first environment according to EN 61800-3 Category C2.

---

#### Note

#### Radio service interference due to high frequency (radio frequency) disturbances

The converter can cause high frequency disturbances, which may make interference suppression measures necessary.

This device is not designed for general use in the first environment (residential area) and must not be used there without appropriate radio interference suppression measures.

- Have the installation and commissioning with appropriate radio interference suppression measures preformed by qualified personnel.
-

### 3.3.2.2 Requirements on the levelness of the floor

The foundation at the installation location must be horizontal and level, to ensure proper functioning of the cabinet units.

- Care must be taken to ensure that the doors can be opened and closed and that the locking systems work properly.
- Flat sections (such as doors, side panels and canopies) must be sealed correctly to ensure compliance with the specified degree of protection.
- When cabinets are connected (e.g. transport units), air must be prevented from entering through the gaps.

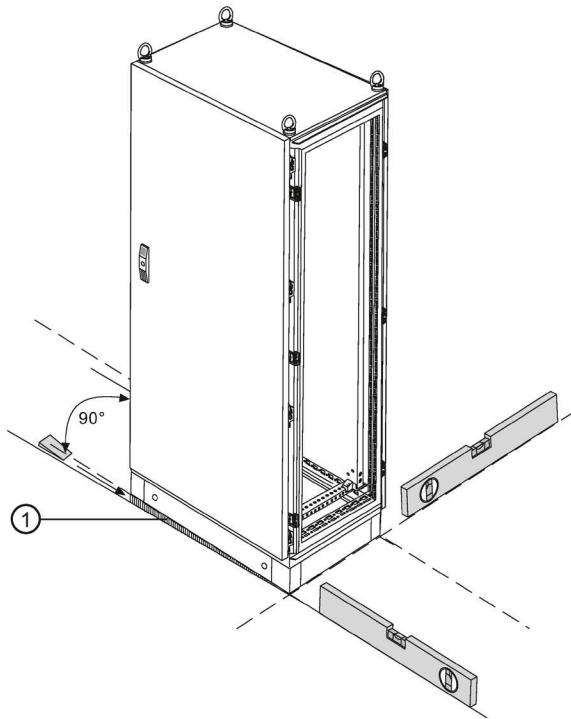


Figure 3-1 Requirements on the levelness of the floor

The following requirements must be met to ensure the full functionality of the cabinet units:

- The foundation must be level and horizontal.
- Irregularities must be leveled out.
- Gaps where air can enter, created when aligning (e.g.: ① in the diagram) must be closed.

### 3.3.2.3 Shipping and handling monitors

The cabinet units are equipped with tilt and shock indicators to monitor for damage during transit.



Figure 3-2 Tilt indicator



Figure 3-3 Shock indicator

### Position of the shipping and handling monitors

The tilt indicators are affixed to the top of the cabinet unit inside the doors.

The shock indicators are affixed to the bottom of the cabinet unit inside the doors.

### Checking the shipping and handling monitors prior to commissioning

It is essential to check the shipping and handling monitors prior to commissioning the converter.

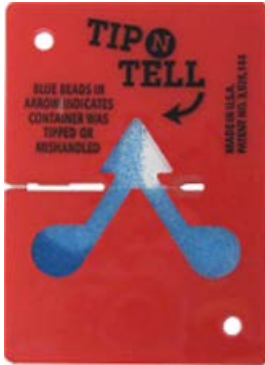


Figure 3-4 Tilt indicator tripped

The tilt indicator provides immediate visible evidence of whether the cabinet units have been handled and stored upright. Blue-colored quartz sand begins to flow into the arrow-shaped indicator area. The tilt indicator has tripped when the blue color extends beyond the middle line of the arrowhead.



Figure 3-5 Shock indicator tripped

The shock indicator shows if an acceleration has exceeded  $98.1 \text{ m/s}^2$  ( $10 \times g$ ) and indicates the direction of acceleration. The black color of the arrows indicates that an impermissible shock load has occurred in the direction of the arrow.

<b>⚠ WARNING</b>
<b>Damage to the device when shock or tilt indicators are tripped</b>
If a shock or tilt indicator has tripped, safe operation of the device cannot be guaranteed. Death, serious injury, or material damage can result.
<ul style="list-style-type: none"><li>• Terminate the commissioning if one of the shock or tilt indicators has tripped.</li><li>• Contact Technical Support immediately for clarification.</li></ul>



## Removing the shipping and handling monitors prior to commissioning

**NOTICE****Material damage caused by transport indicators remaining in the device during operation**

If transport indicators remain in the device during operation, material damage can result from falling off or through temperature damage.

- Remove the transport indicators before commissioning the converter.

Ethyl alcohol can be used to remove any remains of adhesive after removing the transport indicators from the control cabinet.

### 3.3.2.4 Unpacking

Check the delivery against the delivery note to ensure that all the items have been delivered. Check that the cabinet is intact and has not been damaged.

The packaging material must be disposed of in accordance with the applicable country-specific guidelines and rules.

### 3.3.2.5 Required tools

You require the following tools for installation:

- Standard set of tools with screwdrivers, screw wrenches, socket wrenches, etc.
- Torque wrenches 1.5 Nm to 100 Nm
- 600 mm extension for socket wrenches

### 3.3.3 Installation

#### 3.3.3.1 Lifting the cabinet off the transport pallet

##### Lifting the cabinet off the transport pallet

The applicable local guidelines regarding the transportation of the cabinet from the transport pallet to the installation location must be observed.

A crane transport assembly (option M90) can also be fitted on the top of the cabinet.

The fixing screws of the transport pallets can be removed without having to lift the cabinet unit. The positions of the fixing screws are indicated by red markings on the outside of the pallets.

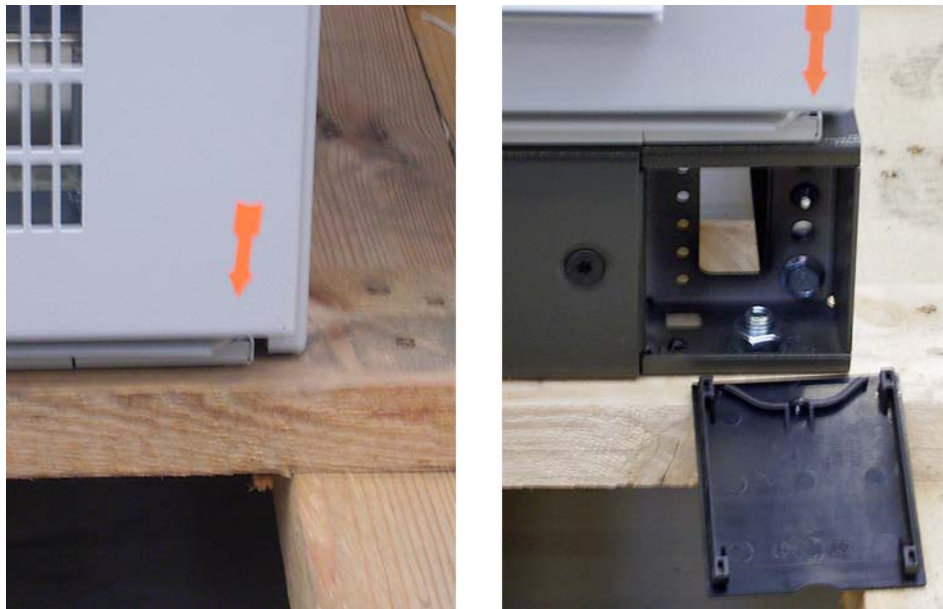


Figure 3-6 Lifting from the transport pallet (left: without base; right: with base)

For cabinet units without base (in the figure on the left), the fixing screws of the transport pallets must be removed from the underside of the pallet.

For cabinet units with base (in the figure on the right), the fixing screws of the transport pallet are accessible only after the cover is opened. They can then be loosened and removed directly from the front.

#### **⚠ WARNING**

##### **Failure to observe the weight and the center of gravity**

The non-observance of restrictions concerning the weight and the center of gravity can cause death or severe injury during lifting and transport activities.

- The weight specified on the packaging and the designated center of gravity must always be taken into account when the cabinet is lifted and transported.
- This potential hazard must be taken into account particularly once you have unscrewed the cabinet units from the transport pallet.

### Center of gravity of the cabinet

The diagram below shows the center of gravity of the cabinet (for all sizes), which must always be taken into account when lifting and installing the cabinet.

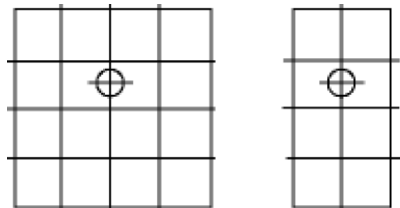


Figure 3-7 Center of gravity of the cabinet

---

#### Note

#### Center of gravity of the cabinet

A label with the precise position of the center of gravity of the cabinet is attached to each cabinet or each transport unit.

---

### 3.3.3.2 Removing the crane transport aids

With option M90 (crane transport aids), the cabinet units are equipped with either transport eyebolts or beams.



Figure 3-8 Option M90, transport beams

## Removal

The transport eyebolts can be unscrewed and removed. Depending on the length of the cabinet or transport unit, the support rails can have a varying number of fastening screws. These must be unscrewed and removed before the rails can be removed.

**⚠ WARNING**

**Incorrect handling of the mounting rails**

The improper handling of heavy carrying rails during disassembly can cause injuries or material damage.

- Ensure careful handling of the carrying rails during disassembly.
- Prevent screws from falling into the unit during disassembly and so causing damage during operation.

## Original roof screws



Figure 3-9 Original roof screws, accessory kit

After removing the crane transport aids, the removed transport eyebolts or the fixing screws of the transport beam must be replaced by the original roof screws from the accessories pack supplied in order to ensure compliance with the degree of protection and proper grounding of the cabinet.

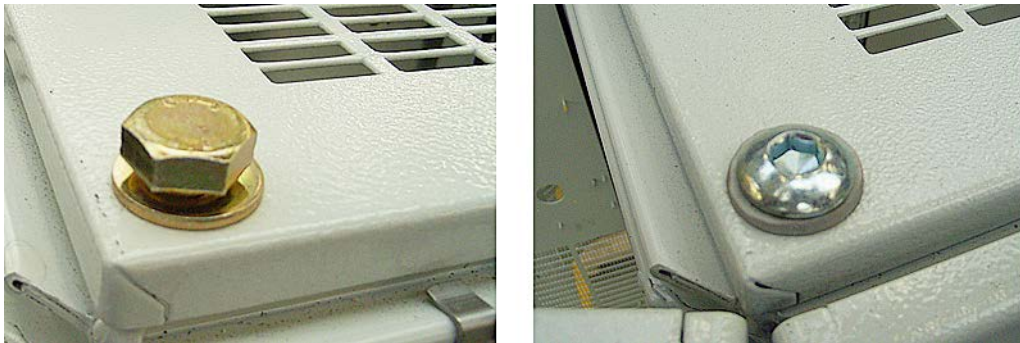


Figure 3-10 Delivery state (left), original roof screws (right)

### 3.3.3.3 Connection to the foundation

#### Connection to the foundation

Four holes for M12 screws are provided on each cabinet panel to secure the cabinet to the foundation. The fixing dimensions are specified in the dimension drawings.

Every cabinet panel must be attached to the ground using at least two opposing attachment points (1 screw each in the front and rear part of the cabinet panel).

If this is not possible for reasons of accessibility, then the attachment points of the adjacent cabinet panels must be correspondingly raised.



Generally, as many attachment points as possible should be used.

### 3.3.4 Connecting separately shipped transport units

#### Description

An accessories kit is provided with each transport unit for mechanically connecting the sub-cabinet units. The table below shows the content of this accessories kit for connecting the cabinet units.

Table 3- 1 Content of the accessories kit for connecting the cabinet units

Quantity	Material	Fig.	Notes
1 x	Sealing strip		The sealing strip must be attached to the cabinets before connecting them together.
3 x	Outer cabinet connectors including Mounting material		The cabinet connector is fitted and screwed on from the outside. Tightening torque: 9 Nm
3 x	Inner cabinet connectors including Mounting material		The cabinet connector is fastened with 4 screws. Tightening torque: 5 Nm

### Mounting

1. Attach the sealing strip to the cabinet frames of the cabinets to be connected.
2. Push the cabinets together, they must completely come together at the front and the rear sides. The distance between the cabinets must be approximately 3 mm.
3. Mount the cabinet connectors at the outside and inside corresponding to the following drawing.
4. If necessary, reattach the protective covers and doors. The ground connections must also be attached to the doors.

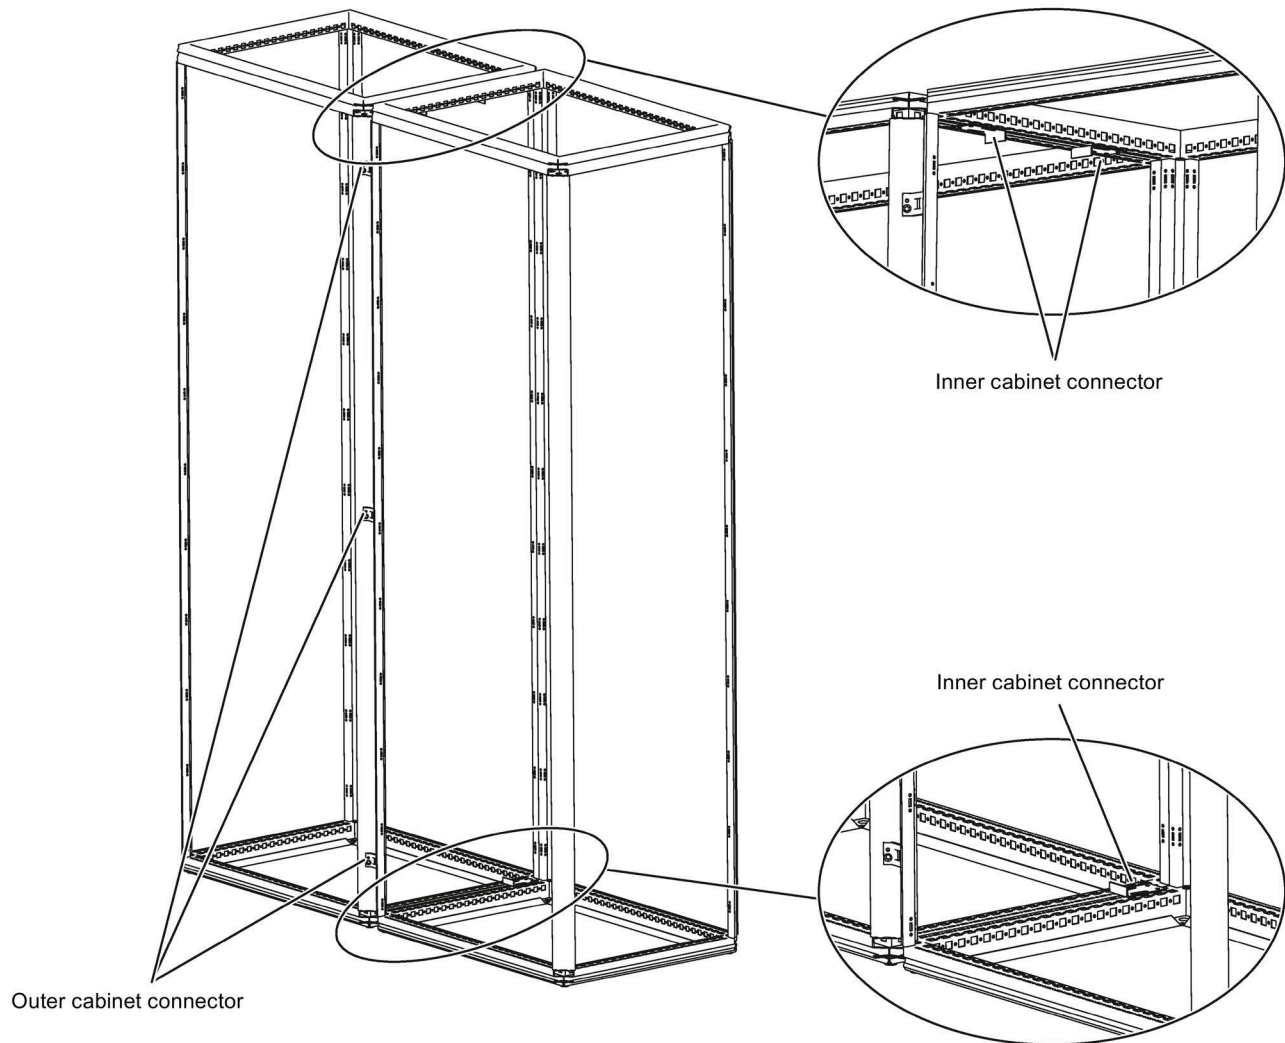


Figure 3-11 Positions of the cabinet connectors

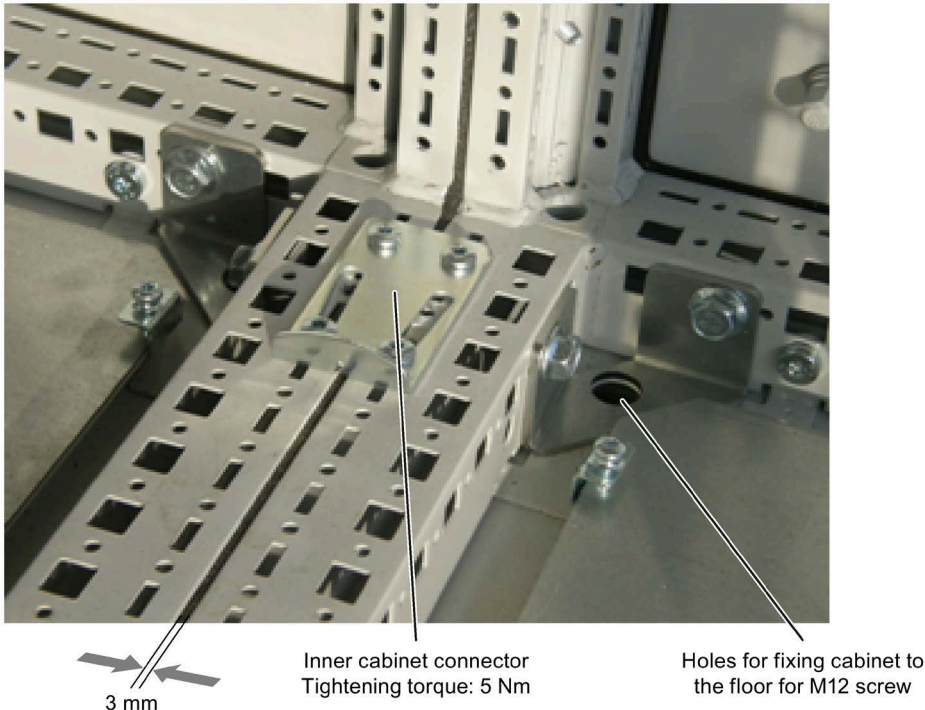


Figure 3-12 Cabinet connectors at the inside at the lower cabinet frame

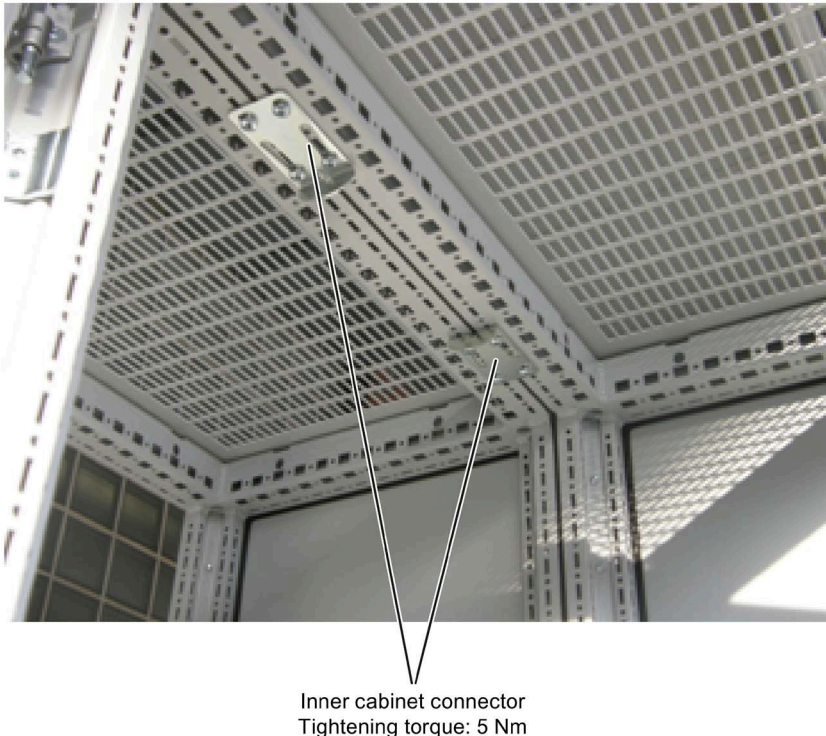


Figure 3-13 Cabinet connectors at the inside at the upper cabinet frame



Outer cabinet connector  
Tightening torque: 9 Nm

Figure 3-14 Outer cabinet connector

### 3.3.5 Fitting additional canopies (option M21) or hoods (option M23, M43, M54)

To increase the degree of protection of the cabinets from IP20 (standard) to IP21, IP23, IP43, or IP54, additional canopies or hoods are supplied. These must be fitted once the cabinets have been installed.

#### Description

##### Degree of protection IP21

The degree of protection can be increased to IP21 by fitting an additional canopy. The canopy is mounted protruding above the cabinet on spacers, 250 mm above the top cover of the cabinet. Fitting a canopy increases the height of all cabinets by 250 mm.



**Degree of protection IP23**

Cabinet units with degree of protection IP23 are supplied with additional hoods, as well as plastic ventilation grilles and braided plastic in the air inlet (doors) and outlet (hoods). The hoods are flush with the cabinets at the side and front and have a recess at the rear so that air can escape even if the cabinet is wall mounted. Air escapes from the front and back. The hood is secured via the four crane hook holes in the cabinet. Hoods increase the height of the cabinet by 400 mm.

**Degree of protection IP43**

Cabinet units with degree of protection IP43 are supplied with additional hoods, as well as plastic ventilation grilles and close-meshed braided plastic in the air inlet (doors) and outlet (hoods). The hoods are flush with the cabinets at the side and front and have a recess at the rear so that air can escape even if the cabinet is wall mounted. Air escapes from the front and back. The hood is secured via the four crane hook holes in the cabinet. Attaching the hoods increases the height of the cabinet units by 400 mm.

Compliance with degree of protection IP43 requires an intact filter medium, which must be serviced at regular intervals depending on the prevailing ambient conditions.

**Degree of protection IP54**

Cabinet units with degree of protection IP54 are supplied with additional hoods, plastic ventilation grilles, and a filter medium in the air inlet (doors) and outlet (hoods). The hoods are flush with the cabinets at the side and front and have a recess at the rear so that air can escape even if the cabinet is wall mounted. Air escapes from the front and back. The hood is secured via the four crane hook holes in the cabinet. Hoods increase the height of the cabinet by 400 mm.

Compliance with degree of protection IP54 requires an intact filter medium, which must be replaced at regular intervals depending on the prevailing ambient conditions. Filters can be fitted and replaced from outside the cabinet relatively easily.

---

**Note****Early mounting of the canopy or hood!**

It is recommended to attach the canopy or hood at an early stage to prevent foreign matter entering the cabinet devices.

---

**Attaching a canopy to increase the degree of protection to IP21 (option M21)**

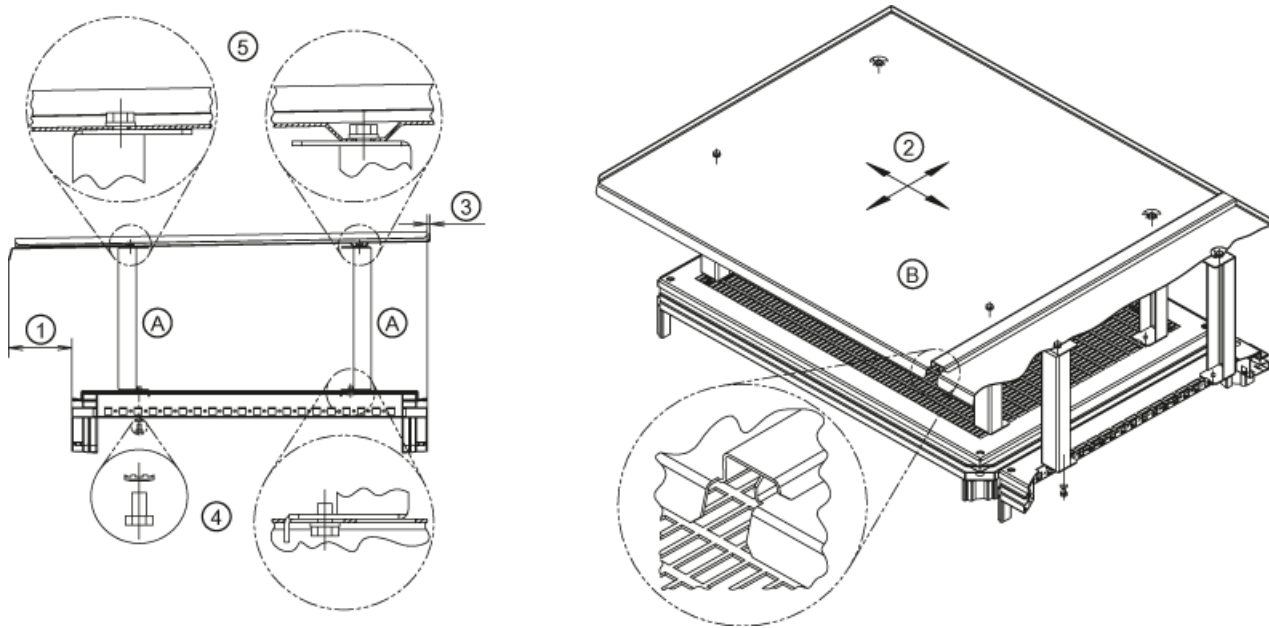


Figure 3-15 Fitting a canopy

The canopy ② can be installed variably in both directions (on the side and to the front or back) on the top of the cabinet.

The arrangement can be adapted to the various installation conditions for the cabinets. This produces an adjustable protrusion of the canopy at the front ① and rear ③.

In this way, it is possible to have a circumferential protrusion of the canopy, or direct contact with the wall or between the canopies in back-to-back installation. If necessary, the contact point with the wall or back-to-back installation must be sealed.

- Remove any existing crane transport assemblies.
- Attach the spacers (A) to the roof of the cabinet at the positions specified. Tighten the screws ④ with contact discs applied from the bottom through the protective guard (tightening torque: 13 Nm for M6).

---

**Note**

**Mounting the protective guard**

The protective guard is fastened to the cabinet unit from the top using four screws. To facilitate assembly, it may be necessary to remove the protective guard, which must be reattached on completion of assembly work.

---

- Mount the drip plate (B) on the spacers. Attach the screw ⑤ with contact washer from above through the drip plate (tightening torque: 13 Nm for M6).

**Note****Installing the canopies with cabinets connected in series**

There are overlaps on the sides of the canopies to prevent water dripping into the spaces between cabinets connected in series. When fitting the canopies, make sure these overlaps engage.


**Fitting a hood to increase the degree of protection to IP23/IP43/IP54 (option M23/M43/M54)**

Figure 3-16 Attaching a hood

1. Remove the crane transport assembly (if fitted).
2. Make sure that a perforated top cover is not fitted on the top of the cabinet (depending on production requirements, this can be fitted at a later stage). If a top cover is installed, it must be removed.

3.3 Mounting

- Options M43 and M54 only:  
Use the sealing tape provided to attach the contact surfaces of the hood to the top of the cabinet.

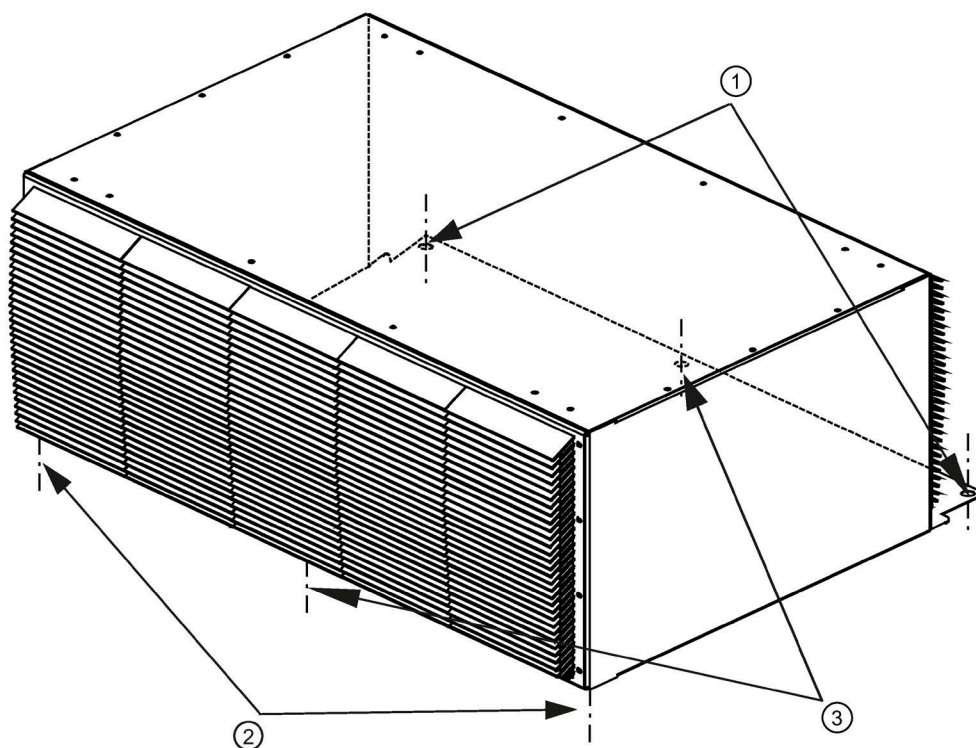

Figure 3-17 Hood with attached sealing tape

- Place the washers of the original roof screws between the cabinet upper side and the hood at the contact points of the cabinet front side. This prevents the hood from being pressed down too far when the screws are tightened and so the opening of the doors blocked.



Figure 3-18 Attaching the washers

5. Attach the hood to the cabinet roof at the specified positions.
6. Attach the original M12 ① roof screws from above at the rear side.
7. Attach the M6 screws and washers at the front side (sequence: screw, spring-lock element, small washer, large washer) ② from below.
8. If the hood is very wide, insert additional screws in the center of the hood (front and rear) ③.



Figure 3-19 View with opened cabinet door



Figure 3-20 View with closed cabinet door

# Electrical installation

## 4.1 Chapter content

This chapter provides information on the following:

- Establishing the electrical connections for the cabinet unit
- Adjusting the fan voltage and the internal power supply to local conditions (supply voltage)
- The customer terminal block and its interfaces
- The interfaces for additional options

## 4.2 Checklist for electrical installation

The following checklist guides you through the electrical installation procedure for the cabinet unit. Read the "Safety instructions" section at the start of these Operating Instructions before you start working on the device.

---

### Note

#### Checking the checklist

Check the boxes accordingly in the right-hand column if the activity applies to the cabinet unit in your scope of supply. In the same way, check the boxes once you have finished the installation procedure to confirm that the activities are complete.

---

4.2 Checklist for electrical installation

Item	Activity	Yes	Completed
<b>Power connections</b>			
1	The electrical connections of the transport units must be established (see "Electrical installation / Power connections / Electrical connection of separately shipped transport units").	<input type="checkbox"/>	<input type="checkbox"/>
2	<p>The line-side and motor-side power cables must be dimensioned and routed in accordance with the ambient and routing conditions. The maximum permissible cable lengths between the converter and motor must be observed depending on the type of cable used (see "Electrical installation / Power connections / Connection cross-sections and cable lengths").</p> <p>The converter outputs connected in parallel must be connected to the motor with the same phases.</p> <p>The minimum cable lengths must be observed between the converter cabinet and a motor with only one winding system brought out (see Section "Power connections," Subsection "Minimum cable lengths for motor connection to a motor with single winding system").</p> <p>It must be ensured that the cables between the individual converters and a motor with only one winding system brought out are identical in length.</p> <p>The PE ground at the motor must be fed back directly to the cabinet unit.</p> <p>The cables must be properly connected to the cabinet unit terminals and tightened with a torque of 50 Nm. The cables for the motor and low-voltage switchgear must also be connected and tightened with the required torques.</p>	<input type="checkbox"/>	<input type="checkbox"/>
3	The DC link of the transport units must be connected (see "Electrical installation / Power connections / Connection of DC link connectors").	<input type="checkbox"/>	<input type="checkbox"/>
4	The cables between the low-voltage switchgear and the cabinet unit must be protected with line fuses to provide adequate conductor protection (DIN VDE 100, Part 430 and/or IEC 60364-4-43). See "Technical data" for the appropriate fuses.	<input type="checkbox"/>	<input type="checkbox"/>
5	For strain relief, the cables must be clamped on the cable propping bar (C-type mounting bar).	<input type="checkbox"/>	<input type="checkbox"/>
6	When EMC-shielded cables are used, screwed glands that connect the shield to ground with the greatest possible surface area must be provided on the motor terminal box. On the cabinet, the cables must be grounded over the greatest possible surface area using the clips supplied with the EMC shield bus (Shielding bus supplied with option L00 or can be ordered separately with option M70) (See chapter "Electrical installation/EMC-compliant installation").	<input type="checkbox"/>	<input type="checkbox"/>
7	The cable shields must be properly applied and the cabinet properly grounded at the points designated for that purpose (see "Electrical installation/EMC-compliant installation").	<input type="checkbox"/>	<input type="checkbox"/>
8	The voltages of the fan transformers (-T1-T10/-T20) must be adapted to the supply voltage for the cabinet unit. The voltage must be adapted in both transport units (see section "Electrical installation / Power connections / Adjusting the fan voltage (-T1-T10/-T20)").	<input type="checkbox"/>	<input type="checkbox"/>
9	<p>A yellow warning label is attached to the basic interference suppression module at each connection clip.</p> <ul style="list-style-type: none"> <li>The warning label must be removed from the connection clip (by pulling it off) if the connection clip is to remain in the unit (operation on a grounded line supply).</li> <li>The warning label must be removed together with the connection clip if the unit is operated on a non-grounded line supply (IT system).</li> </ul> <p>(See "Electrical installation/Power connections/Removing the connection clip to the basic interference suppression module for operation on a non-grounded line supply (IT system)").</p>	<input type="checkbox"/>	<input type="checkbox"/>



## 4.2 Checklist for electrical installation

Item	Activity	Yes	Completed	
10	The type plate allows you to ascertain the date of manufacture. If the period from the date of manufacture to initial commissioning or the cabinet unit downtime is less than two years, the DC-link capacitors do not have to be formed. If the unit has been non-operational for longer than two years, forming must be carried out (see "Maintenance and Servicing / forming of DC-Link Capacitors").	<input type="checkbox"/>	<input type="checkbox"/>	
11	The circuit breaker settings must be checked. The feedback contact of the circuit breaker is wired to terminal block -X50 (see Chapter "Electrical Installation/Power connections/Setting the circuit breaker").	<input type="checkbox"/>	<input type="checkbox"/>	
12	With an external auxiliary supply, the cable for the 230 VAC supply must be connected to terminal -X40 (see "Electrical installation / Power connections / External supply of the auxiliary supply from a secure line").	<input type="checkbox"/>	<input type="checkbox"/>	
13	Option L07 dv/dt filter compact plus Voltage Peak Limiter	During commissioning, the filter must be selected via STARTER or AOP30. You are advised to check the selection by ensuring that p0230 is set to 2. The required parameters are set automatically (see "Electrical installation / Other connections / dv/dt filter compact plus Voltage Peak Limiter (option L07)").	<input type="checkbox"/>	<input type="checkbox"/>
14	Option L10 dv/dt filter plus Voltage Peak Limiter	During commissioning, the filter must be selected via STARTER or AOP30. You are advised to check the selection by ensuring that p0230 is set to 2. The required parameters are set automatically (see "Electrical installation / Other connections / dv/dt filter plus Voltage Peak Limiter (option L10)").	<input type="checkbox"/>	<input type="checkbox"/>
15	Option L19 Connection for external auxiliary equipment	To supply auxiliary equipment (e.g. separately-driven fan for motor), the drive must be properly connected to terminals -X155:1 (L1) to -X155:3 (L3). The supply voltage of the auxiliary equipment must match the input voltage of the cabinet unit. The load current must not exceed 10 A and must be set at -Q155 in accordance with the load connected (see "Electrical installation / Other connections / Connection for external auxiliary equipment (option L19)").	<input type="checkbox"/>  Set value: _____	<input type="checkbox"/>
16	Option L21 Surge suppression	The monitoring of the surge arresters and the upstream fuses must be connected to terminal -X700 (see "Electrical installation / other connections / overvoltage limitation (option L21)"). Point 9 must also be observed: "Before the drive is operated on a non-grounded line supply (IT system), the connecting clip to the basic interference suppression module must be removed" (see "Electrical installation/Power connections/Removing the connection clip to the basic interference suppression module for operation on non-grounded line supplies (IT systems)").	<input type="checkbox"/>	<input type="checkbox"/>
17	Option L50 Cabinet lighting with service socket	The 230 V auxiliary supply for the cabinet lighting with an integrated service socket must be connected to terminal -X390 and protected with a fuse (max. 10 A) on site (see "Electrical installation / Other connections / Cabinet lighting with service socket (option L50)").	<input type="checkbox"/>	<input type="checkbox"/>
18	Option L55 Cabinet anti-condensation heating	The 230 V auxiliary supply for the anti-condensation heating for the cabinet (230 V / 50 Hz, 100 W / or 230 V / 50 Hz 2 x 100 W for cabinets with a width of 800 ... 1200 mm) must be connected to terminals -X240: 1 to 3 connected and protected with fuses (max. 16 A) (see "Electrical installation/Other connections/Cabinet anti-condensation heater (option L55)").	<input type="checkbox"/>	<input type="checkbox"/>
19	Option K74 Auxiliary power supply, 230 V AC	The voltage of the auxiliary power supply (-T10) must be adapted to the supply voltage of the cabinet unit (see "Electrical installation/additional connections/auxiliary power supply, 230 VAC (option K74)").	<input type="checkbox"/>	<input type="checkbox"/>

4.2 Checklist for electrical installation

Item	Activity	Yes	Completed
<b>Signal connections</b>			
20	Cabinet unit operation by higher-level controller / control room. The control cables must be connected in accordance with the interface assignment and the shield applied. Taking into account electrical interference and the distance from power cables, the digital and analog signals must be routed with separate cables.	<input type="checkbox"/>	<input type="checkbox"/>
21	<p>Option G60 TM31 customer terminal block</p> <p>The TM31 Terminal Module extends the customer terminals. This provides the following additional interfaces:</p> <ul style="list-style-type: none"> <li>• 8 digital inputs</li> <li>• 4 bidirectional digital inputs/outputs</li> <li>• 2 relay outputs with changeover contact</li> <li>• 2 analog inputs</li> <li>• 2 analog outputs</li> <li>• 1 temperature sensor input (KTY84-130/PTC)</li> </ul> <p>Integration of the interfaces takes place via pre-interconnections prepared in the factory, which can be selected during commissioning.</p> <p>When the analog inputs on the TM31 are used as current or voltage inputs, selectors S5.0 and S5.1 must be set accordingly (see "Electrical installation / Signal connections / Customer terminal module (-A60)").</p>	<input type="checkbox"/>	<input type="checkbox"/>
22	<p>Option K50 SMC30 Sensor Module Cabinet-Mounted</p> <p>The SMC30 Sensor Module determines the actual motor speed. In conjunction with SINAMICS G150, the following encoders are supported by the SMC30 Sensor Module:</p> <ul style="list-style-type: none"> <li>• TTL encoder</li> <li>• HTL encoder</li> </ul> <p>The motor temperature can also be detected using KTY84-130 or PTC thermistors.</p> <p>In the factory setting, an HTL encoder is bipolar with 1024 pulses per revolution (see "Electrical installation / Other connections / SMC30 Sensor Module Cabinet-Mounted (option K50)").</p>	<input type="checkbox"/>	<input type="checkbox"/>
23	<p>Option K52 Additional SMC30 Sensor Module</p> <p>For reliable actual value acquisition when using the Safety Integrated Extended Functions, the additional SMC30 Sensor Module is used (see "Electrical installation/Other connections/Additional SMC30 Sensor Module (option K52)").</p>	<input type="checkbox"/>	<input type="checkbox"/>
<b>Connecting protection and monitoring devices</b>			
24	<p>Option G51 TM150 temperature sensor module</p> <p>The TM150 Terminal Module can be connected to a maximum of 12 temperature sensors (PT100, PT1000, KTY84, PTC, bimetallic NC contact) (see "Electrical installation/Other connections/TM150 Temperature Module (option G51)").</p>	<input type="checkbox"/>	<input type="checkbox"/>
25	<p>Option L45 EMERGENCY OFF pushbutton installed in the cabinet door</p> <p>The contacts for the EMERGENCY OFF pushbutton are available at terminal -X120 and can be picked off so that they can be integrated in an on-site higher-level protection concept (see "Electrical installation / Other connections / EMERGENCY OFF pushbutton, integrated in the door of the cabinet unit (option L45)").</p>	<input type="checkbox"/>	<input type="checkbox"/>

4.2 Checklist for electrical installation

Item	Activity		Yes	Completed
26	Option L57 EMERGENCY OFF category 0, 230 VAC or 24 VDC	EMERGENCY OFF category 0 stops the drive in an uncontrolled manner. No additional wiring is necessary when implemented in conjunction with option L45. If the cabinet unit is integrated in an external safety circuit, however, the contact must be looped in via terminal block -X120 (see "Electrical installation/Other connections/EMERGENCY OFF category 0, 230 VAC / 24 VDC (option L57)").	<input type="checkbox"/>	<input type="checkbox"/>
27	Option L59 EMERGENCY STOP category 1, 230 VAC	EMERGENCY STOP category 1 stops the drive in a controlled manner. It may be necessary to use braking units because of the load characteristic and the required shutdown times. No additional wiring is necessary when implemented in conjunction with option L45. If the cabinet unit is integrated in an external safety circuit, however, the contact must be looped in via terminal block -X120. The timer relay at -K121 must be adapted to match system requirements (see "Electrical installation / Other connections / EMERGENCY STOP category 1, 230 VAC (option L59)").	<input type="checkbox"/>	<input type="checkbox"/>
28	Option L60 EMERGENCY STOP category 1, 24 VDC	EMERGENCY STOP category 1 stops the drive in a controlled manner. It may be necessary to use braking units because of the load characteristic and the required shutdown times. No additional wiring is necessary when implemented in conjunction with option L45. If the cabinet unit is integrated in an external safety circuit, however, the contact must be looped in via terminal block -X120. The timer relay at -K120 must be adapted to match system requirements (see "Electrical installation / Other connections / EMERGENCY STOP category 1, 24 VDC (option L60)").	<input type="checkbox"/>	<input type="checkbox"/>
29	Option L62 Braking unit 50 kW/250 kW	The connecting cables and ground for the braking resistor must be connected to terminal block -X5: 1/2. The braking resistor thermostatic switch and customer terminal block -A60 or the Control Unit must be connected. When commissioning via AOP30, the settings for evaluating "external fault 3" must be made. The settings for evaluating the thermostatic switch as "external fault 2" must be made (see "Electrical installation / Further connections / Braking unit 50 kW (option L62)").	<input type="checkbox"/>	<input type="checkbox"/>
30	Option L83 Thermistor motor protection device (alarm)	The PTC thermistor sensors (PTC resistor type A) must be connected to the thermistor motor protection unit -F127 at terminals T1 and T2 for alarms (see "Electrical installation / Other connections / Thermistor motor protection device (option L83/L84)").	<input type="checkbox"/>	<input type="checkbox"/>
31	Option L84 Thermistor motor protection device (shutdown)	The PTC thermistor sensors (PTC resistor type A) must be connected to the thermistor motor protection unit -F125 at terminals T1 and T2 for shutdown (see "Electrical installation / Other connections / Thermistor motor protection device (option L83/L84)").	<input type="checkbox"/>	<input type="checkbox"/>
32	Option L86 PT100 evaluation unit	The resistor thermometers must be connected to evaluation units -B140, -B141 for the PT100 evaluation. A two-wire or three-wire system can be implemented here to connect the PT100 sensors. The sensors are divided into two groups (see "Electrical installation / Other connections / PT100 evaluation unit (option L86)"). This must be taken into account for the evaluation (factory setting).	<input type="checkbox"/>	<input type="checkbox"/>

4.2 Checklist for electrical installation

Item	Activity		Yes	Completed
33	Option L87 Insulation monitoring	The insulation monitor can only be operated on a non-grounded line supply (IT system). Only one insulation monitor can be deployed in an electrically-connected network. For in-plant control, the signaling relays must be connected accordingly or, with individual drives (the cabinet unit is fed via a converter transformer assigned to the cabinet unit), integrated in the cabinet unit alarm chain (see "Electrical installation / Other connections / Insulation monitoring (option L87)").  Point 9 must also be observed: "Before the drive is operated on a non-grounded line supply (IT system), the connecting clip to the basic interference suppression module must be removed" (see "Electrical installation/Power connections/Removing the connection clip to the basic interference suppression module for operation on non-grounded line supplies (IT systems)").	<input type="checkbox"/>	<input type="checkbox"/>
<b>Safety Integrated</b>				
34	Option K01 Safety license for 1 axis	A license is required for each axis with safety functions in the case of Safety Integrated Extended Functions. With Option K01, the safety license for 1 axis is contained in and activated on the compact flash card (see "Electrical installation / Other connections / Safety license for 1 axis (option K01)").	<input type="checkbox"/>	<input type="checkbox"/>
35	Option K82 "Safe Torque Off" and "Safe Stop 1" safety functions	The terminal block -X41 must be connected on site, the safety functions must be activated prior to use via parameter assignment, in addition an acceptance test must be performed and an acceptance report must be drawn up (see "Electrical installation / Other connections / Terminal module for activating "Safe Torque Off" and "Safe Stop 1" (option K82)").	<input type="checkbox"/>	<input type="checkbox"/>
36	Option K87 TM54F Terminal Module	The terminal blocks of TM54F Terminal Module must be connected line-side; the Safety Integrated Extended Functions must be activated prior to use via parameter assignment; in addition an acceptance test must be performed and an acceptance report must be drawn up (see "Electrical installation / Other connections / TM54F Terminal Module (option K87)").	<input type="checkbox"/>	<input type="checkbox"/>
37	Option K88 Safe Brake Adapter 230 VAC	To control the brake, a connection must be established between -X14 on the Safe Brake Adapter and the holding brake (see "Electrical installation/Other connections/Safe Brake Adapter SBA 230 V AC (option K88)").	<input type="checkbox"/>	<input type="checkbox"/>

**Required tools**

You require the following tools for the electrical installation:

- Standard set of tools with screwdrivers, screw wrenches, socket wrenches, etc.
- Torque wrenches 1.5 Nm up to 100 Nm
- 600 mm extension for socket wrenches

## 4.3 Important safety precautions

 **WARNING**
**Failure to observe general safety instructions and residual risks**

If the general safety instructions and remaining risks are not observed, accidents can occur involving severe injuries or death.

- Observe the general safety instructions.
- When assessing the risk, take into account residual risks.


 **WARNING**
**Electric shock when using unsuitable fuses**

If unsuitable fuses are used, an electric shock can cause severe injury or death.

- Use only fuses recommended in the technical data.
- Observe the necessary minimum short circuit current for the relevant fuse.


 **WARNING**
**Electric shock due to the residual charge of the DC link capacitors**

Because of the DC-link capacitors, a hazardous voltage is still present for a period of time after the power supply has been switched off.

If live components are touched then this can result in severe injury or death.

- Open the unit only after the time specified on the warning label has elapsed.
- Before starting work, check the absence of voltage by measuring all poles/phases, also to ground.

**NOTICE**
**Material damage resulting from switching on the device without forming the DC-link capacitors**

After a storage time exceeding two years, switching on the device without forming the DC-link capacitors can damage it.

- Before switching on the device, it should be formed after a storage time exceeding two years, see "Maintenance and servicing".

**Note**
**Touch protection**

When the cabinet door is opened, cabinet units have touch protection in compliance with DGUV Regulation 3 according to EN 50274.

These protective covers may need to be removed during installation and connection procedures. Once work has been completed, the protective covers must be properly refitted.

## 4.4 Introduction to EMC

### What is meant by EMC?

Electromagnetic compatibility (EMC) describes the capability of an electrical device to function satisfactorily in an electromagnetic environment without itself causing interference unacceptable for other devices in the environment.

EMC therefore represents a quality feature for the

- Internal noise immunity: Resistance to internal electrical disturbances
- External noise immunity: resistance against external electromagnetic disturbances
- Noise emission level: environmental effects caused by electromagnetic emissions

To ensure that the cabinet unit functions satisfactorily in the system, the environment subject to interference must not be neglected. For this reason, special requirements exist regarding the structure and the EMC of the system.

### Operational reliability and noise immunity

In order to achieve the greatest possible operational reliability and immunity to noise of a complete system (converter, automation, drive machines etc.), measures must be taken by the converter manufacturer and the user. Only when all these measures are fulfilled can the faultless functioning of the inverter be guaranteed and the specified legal requirements (2014/30/EU) be met.

## Noise emissions

Product standard EN 61800–3 describes the EMC requirements placed on "Variable-speed drive systems". It specifies requirements for inverters with operating voltages of less than 1000 V. Different environments and categories are defined depending on where the drive system is installed.

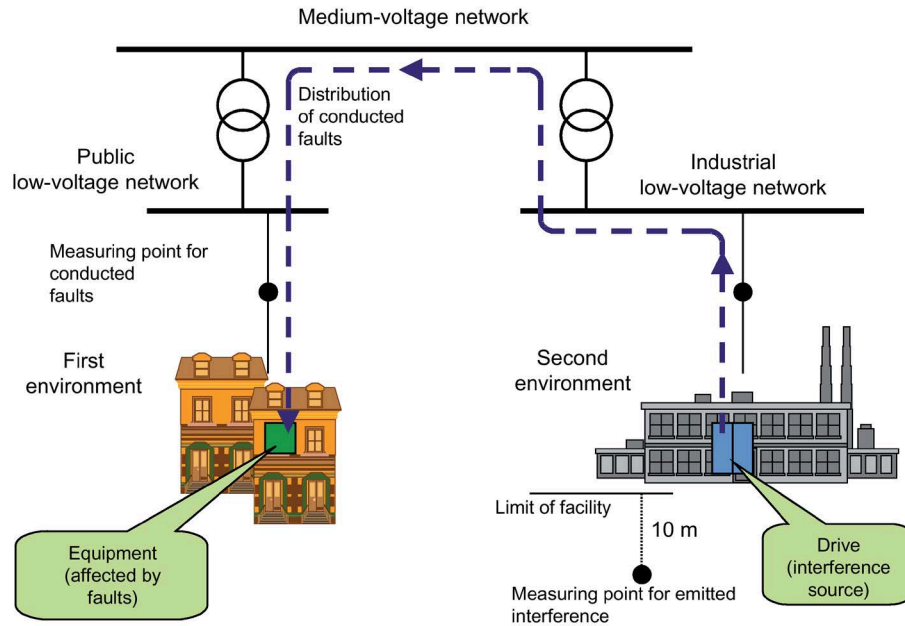


Figure 4-1 Definition of the first and second environments

First environment	C1	Second environment
	C2	
	C3	
	C4	

Figure 4-2 Definition of categories C1 to C4

Table 4- 1 Definition of the first and second environments

Definition of the first and second environments	
First environment	Residential buildings or locations at which the drive system is connected to a public low-voltage supply network without a transformer.
Second environment	Industrial locations supplied by a medium-voltage network via a separate transformer.

Table 4-2 Definition of categories C1 ... C4

Definition of categories C1 ... C4	
Category C1	Rated voltage <1000 V; unrestricted use in the first environment.
Category C2	Rated voltage for stationary drive systems <1000 V; for use in the second environment. For use in the first environment only when sold and installed by skilled personnel.
Category C3	Rated voltage <1000 V; use in the second environment only.
Category C4	Rated voltage $\geq$ 1000 V or for rated currents $\geq$ 400 A in complex systems in the second environment.

## 4.5 EMC-compliant design

The following section provides some basic information and guidelines that will help you comply with the EMC and CE guidelines.

### cabinet assembly

- Connect painted or anodized metal components using toothed self-locking screws or remove the insulating layer.
- Use unpainted, de-oiled mounting plates.
- Establish a central connection between ground and the protective conductor system (ground).

### Shield gaps

- Bridge shield gaps (at terminals, circuit breakers, contactors, and so on) with minimum impedance and the greatest possible surface area.

### Using large cross-sections

- Use underground and grounding cables with large cross-sections or, better still, with litz wires or flexible cables.

### Laying the motor supply cable separately

- The distance between the motor cable and signal cable should be > 20 cm. Do not lay signal cables and motor cables in parallel to each other.

### Laying the equipotential bonding cable

- It is recommended to lay the equipotential bonding cable parallel to the control lines with a minimum cross-section of 16 mm<sup>2</sup>.

### Use anti-interference elements

- If relays, contactors, and inductive or capacitive loads are connected, the switching relays or contactors must be provided with anti-interference elements.



## Cable installation

- Cables that are subject to or sensitive to interference should be laid as far apart from each other as possible.
- All cables are to be laid as close as possible to grounded enclosure parts such as mounting plates or cabinet frames. This reduces both noise radiation and interference injection.
- Reserve cores of signal and data cables must be grounded at both ends to achieve an additional shielding effect.
- Long cables should be shortened or laid in noise resistant areas to avoid additional connecting points.
- If it is impossible to avoid crossing cables, conductors or cables that carry signals of different classes must cross at right angles, especially if they carry sensitive signals that are subject to interference.
  - Class 1:  
unshielded cables for  $\leq 60$  V DC  
unshielded cables for  $\leq 25$  V AC  
shielded analog signal cables  
shielded bus and data cables  
operator panel interfaces, incremental/absolute encoder lines
  - Class 2:  
unshielded cables for  $> 60$  VDC and  $\leq 230$  VDC  
unshielded cables for  $> 25$  VAC and  $\leq 230$  VAC
  - Class 3:  
unshielded cables for  $> 230$  VAC/VDC and  $\leq 1000$  VAC/VDC

## Shield connection

- Shields must not be used to conduct electricity. In other words, they must not simultaneously act as neutral or PE conductors.
- Apply the shield so that it covers the greatest possible surface area. You can use ground clamps, ground terminals, or ground screw connections.
- Avoid extending the shield to the grounding point using a wire (pigtail) because this will reduce the effectiveness of the shield by up to 90%.
- Attach the shield to a shield bar directly after the line inlet into the cabinet. Insulate the entire shielded cable and route the shield up to the device connection, but do not connect it again.

## I/O interfacing

- Create a low-impedance ground connection for additional cabinets, system components, and distributed devices with the largest possible cross-section (at least  $16 \text{ mm}^2$ ).
- Ground unused lines at one end in the cabinet.

- Select the highest possible distance between the power and signal cables, with a minimum of 20 cm at the very least. The greater the distance over which the cables are routed in parallel, the greater the clearance must be. If a sufficient clearance cannot be maintained, you must install additional shields.
- Avoid unnecessarily long cable loops.

### Filtering cables

- Line supply cables and power supply cables for devices and modules may have to be filtered in the cabinet to reduce incoming or outgoing disturbances.
- To reduce emissions, the device is equipped with a radio interference suppression filter as standard (in accordance with the limit values defined in category C3). Optional filters can be fitted for use in the first environment (category C2).

### Protective ground conductors

- According to EN 61800-5-1, Section. 6.3.6.7, the minimum cross-section of the protective ground conductor must conform to the local safety regulations for protective ground conductors for equipment with a high leakage current.

## 4.6 Electrical connection

### 4.6.1 General

#### Description

After the mechanical installation has been completed, the following electrical connections must be established between the right-hand and left-hand sub-cabinets for G150 transport units:

- Connecting the PE busbars
- Connecting the DC link connections
- The 230 V AC power supply and signal cables must be connected
- The DRIVE-CLiQ node must be connected



#### **WARNING**

#### **Electric shock from live parts and components for devices connected in parallel**

Touching live components of sub-cabinets associated with devices connected in parallel can result in death or severe injury.

- When connecting, installing and repairing, electrically disconnect both partial cabinets from the line supply.

## 4.6.2 Connecting the PE busbars

### Description

Each cabinet contains a PE busbar for grounding the components installed in each cabinet unit. For all cabinet units, the busbar is a 60 x 10 mm nickel-plated bar. It is located at the bottom of the cabinet and is secured on the left and right to the ground straps in the cabinet.

### Note

#### Close the cabinet doors

When connecting the ground connections to the PE busbar, make sure that the cabinet doors can still close. Additional wiring in the cabinets is not required.

A connection jumper for the PE busbar is supplied with every cabinet.



Figure 4-3 Connecting the PE busbars

### Establishing the connection

1. Release the 1 x M12 nut of the PE busbar at the 1st cabinet
2. Remove the nut, washer ① and screw ③
3. Release the 1 x M12 nut of the PE busbar at the 2nd cabinet
4. Remove the nut, washer, and screw.
5. Locate the connecting clip ② at the rear of the PE busbars of the cabinets to be connected.
6. Insert the screws in the ground straps for the PE busbars from the front.
7. Reattach the washers and nuts.
8. Tighten the nut (tightening torque: 50 Nm).

### Connecting to the central ground of the overall system

 **WARNING**

**Touching live parts and there is no grounding**

If there is no connection to the central grounding of the complete plant, the cabinet unit may be at a dangerous voltage level in a fault situation. This means that when touched, this can result in death or severe injury

- After you have established the connection to the PE busbar in the cabinet and/or established the connections to the PE busbar across more than one cabinet unit, you must also establish a connection to the central ground of the entire system.

### Connecting external cables to the PE busbar

**Note**

**Close the cabinet doors**

When laying cables that are to be connected to the PE busbar from outside the cabinet, make sure that the cabinet doors close properly.

**Establishing the connection**

1. Insert the screw from the front.
2. Attach the cable lug from behind.
3. Attach the nut and, if necessary, the washers and tighten (tightening torque: 50 Nm)

### 4.6.3 Connecting the DC link connections

Pre-assembled busbars are provided for connecting the DC links of the two transport units (sub-cabinets); these are located in the right transport unit (right sub-cabinet) and are fastened using cable ties (in figure ①). The screws for fastening the DC link connection are provided in the accessories kit.

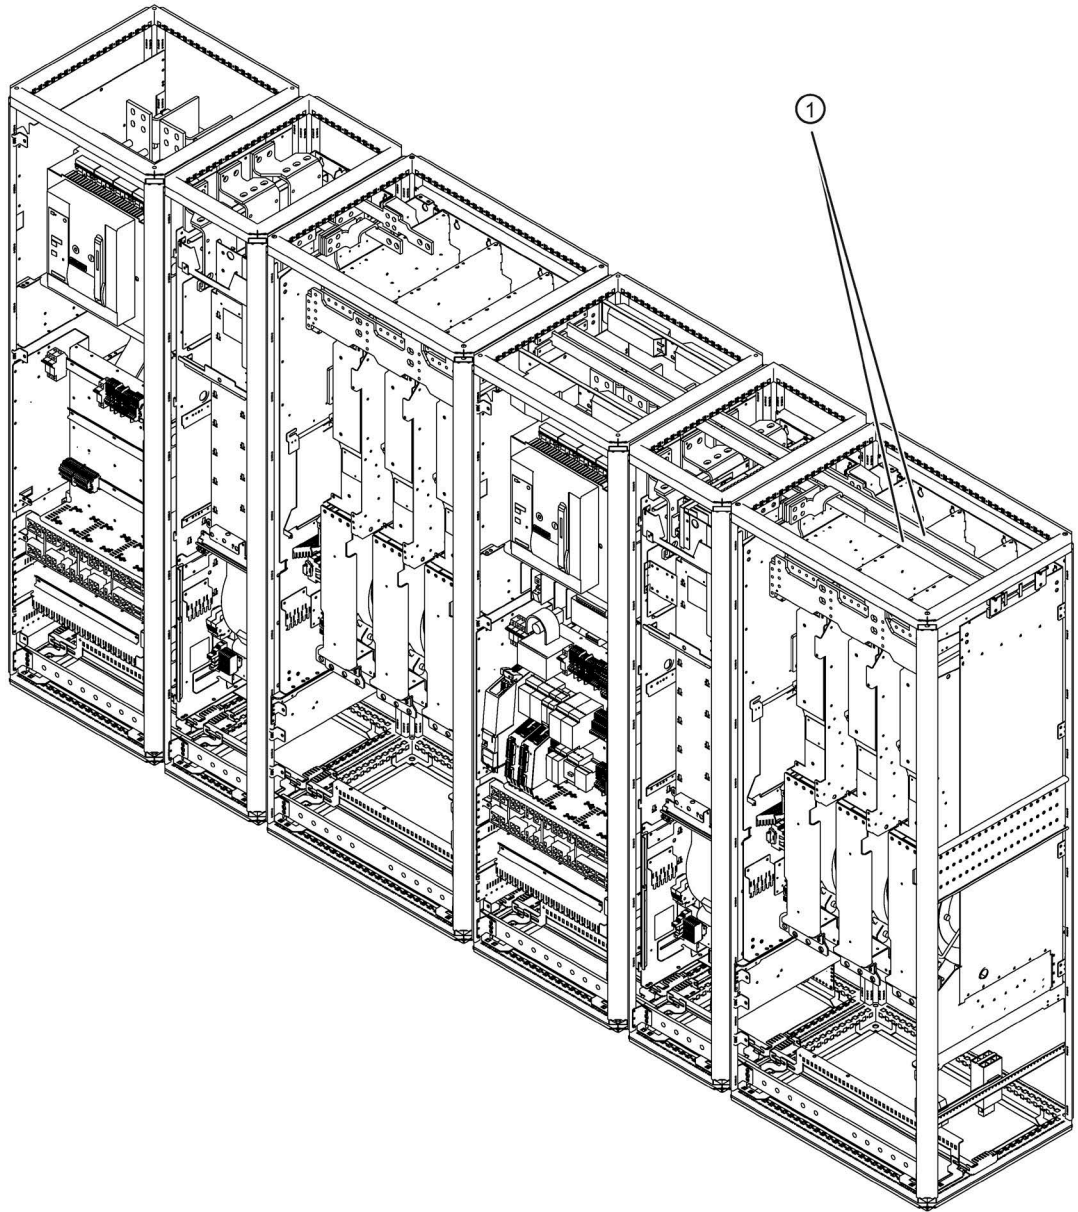


Figure 4-4 Non-connected DC link (DC busbar):

The busbars must be loosened and moved to the left (in figure ②) until the connection bars can be fastened to the left and right connection points respectively.

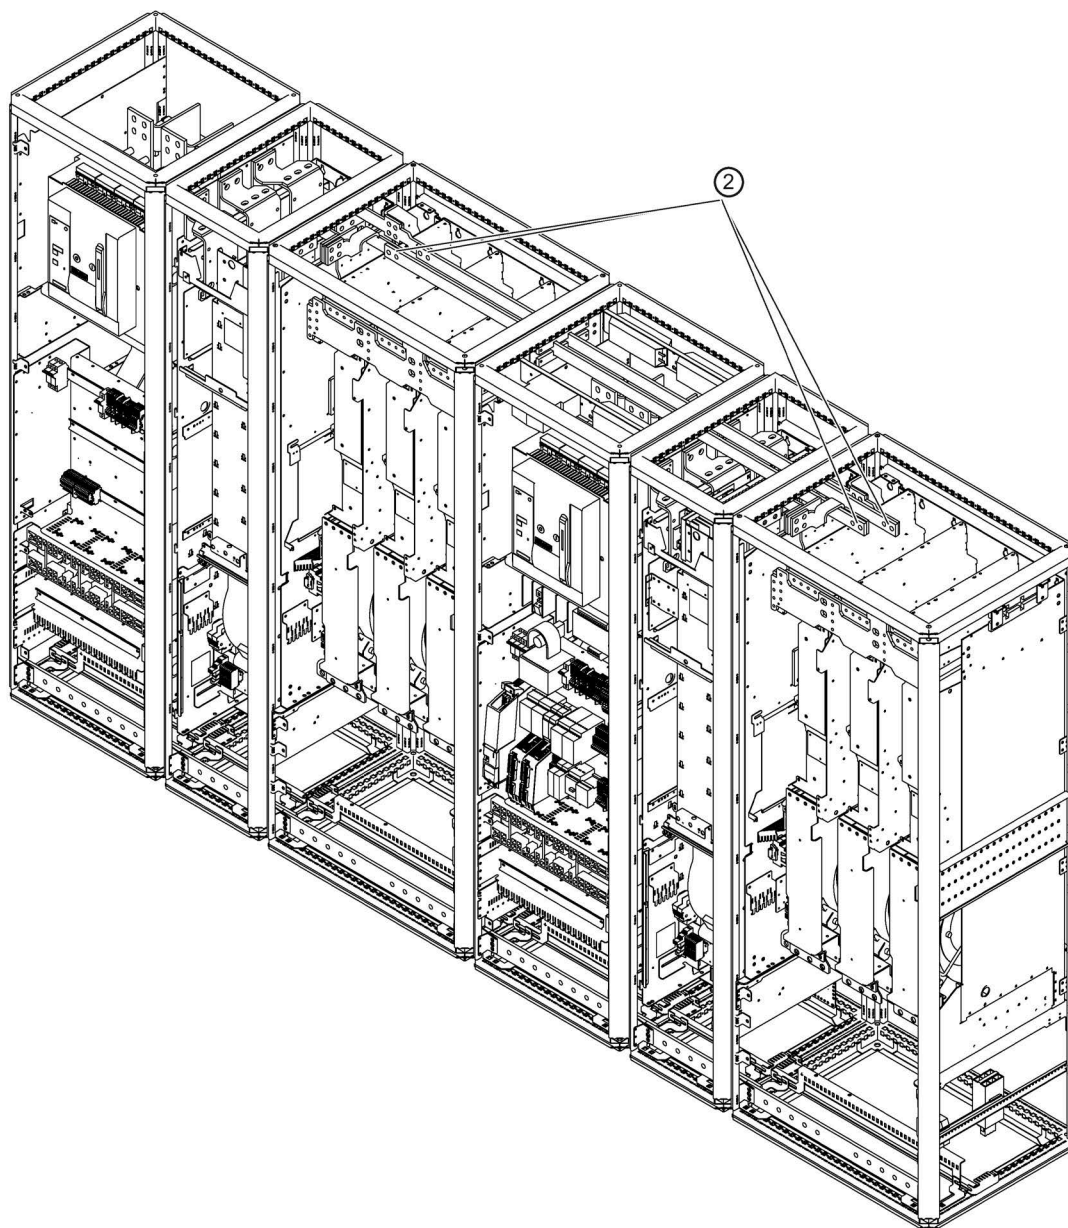


Figure 4-5 Connected DC link (DC busbar):

The figures below show the left (in figure ③) and right (in figure ④) connections points for the DC link connection.

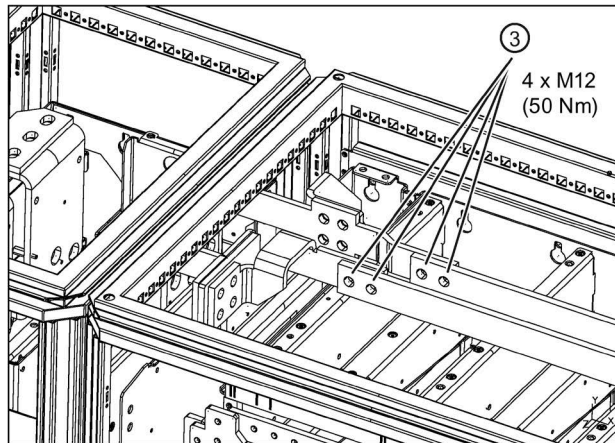


Figure 4-6 Connecting the DC link connections (left side)

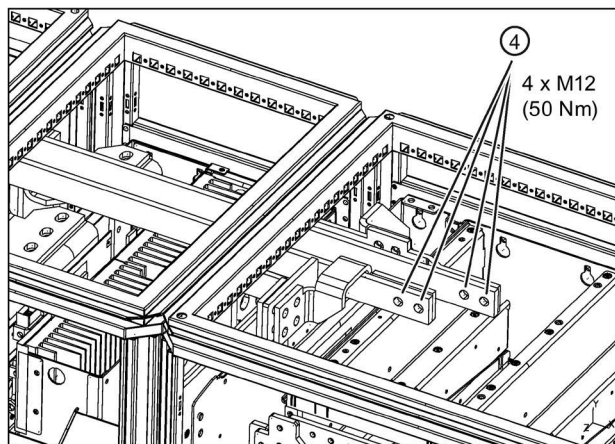


Figure 4-7 Connecting the DC link connections (right side)

**⚠ WARNING**

**Electric shock caused by interchanging or short-circuiting the device connections**

Interchanging or short-circuiting the DC link connections will damage the device that can cause severe injuries or even death.

- Ensure that the DCPS / DCNS connections in the right-hand sub-cabinet are correctly connected with the DCPS / DCNS connections in the left-hand sub-cabinet.

### 4.6.4 Connecting the power supply and the signal cables

The connecting cables for 24 V DC and 230 V AC to supply the left-hand sub-cabinet with power and for the signal cables must be connected. Depending on the installed options, this will involve up to 3 connecting cables that must be connected from the right-hand sub-cabinet (cabinet panel +H.A25) to the lower connector sections in the left-hand sub-cabinet (cabinet panel +H.A24):

1. Connecting cable with the connector designation –X97 in the lower connector section –X97.
2. Connecting cable with the connector designation –X98 in the lower connector section –X98.
3. Connecting cable with the connector designation –X99 in the lower connector section –X99.

The cables must be routed so that power cables cannot interfere with data and signals that are being transferred along the connecting cables.

### 4.6.5 The DRIVE-CLiQ node must be connected

Two DRIVE-CLiQ connections must be established:

- from the Basic Line Module (+H.A30) in the right transport unit to Basic Line Module (+H.A29) in the left transport unit
- from the Motor Module (+H.A50) in the right transport unit to Motor Module (+H.A49) in the left transport unit

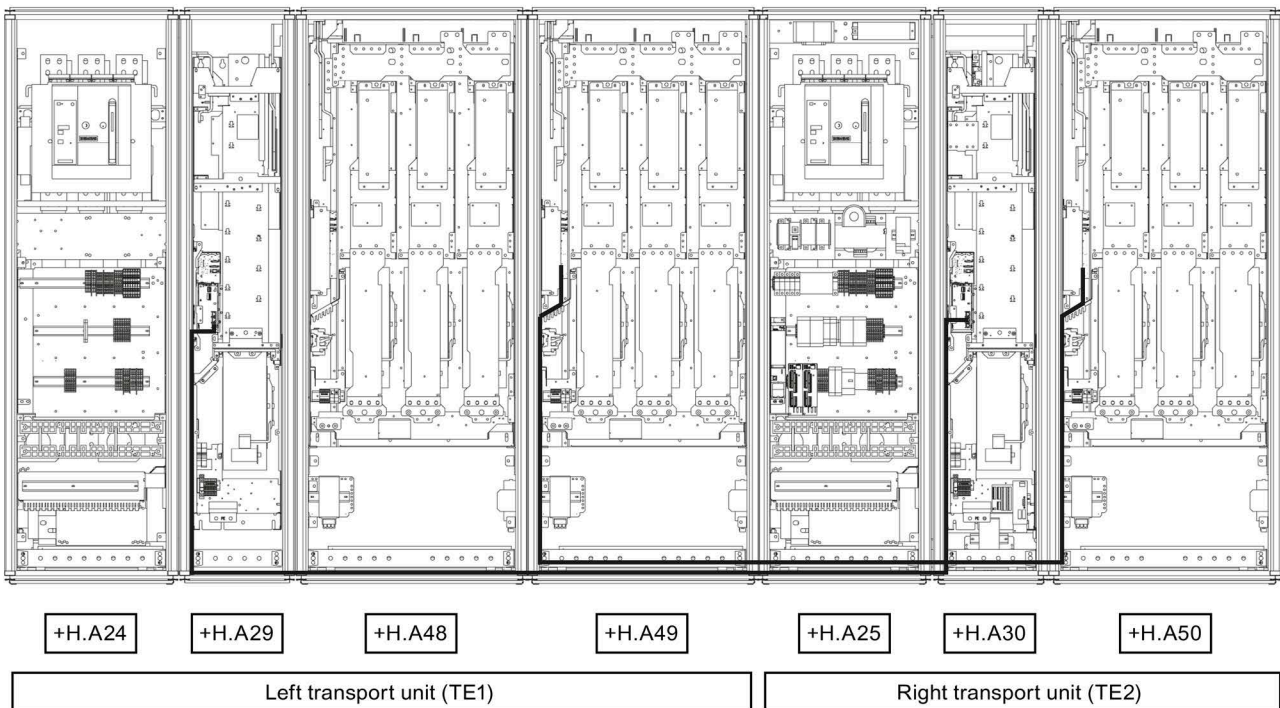


Figure 4-8 DRIVE-CLiQ cable routing



## Connecting the DRIVE-CLiQ cables

The connecting cables are located in the Line Connection Module (+H.A25) in the right transport unit. They must be connected to the appropriate DRIVE-CLiQ socket –X400 of the Motor Modules (+H.A49) in the left transport unit or to DRIVE-CLiQ socket –X400 of the Basic Line Modules (+H.A29) in the left transport unit as marked on the DRIVE-CLiQ cables. The cables must be routed so that power cables cannot cause interference on the DRIVE-CLiQ connection.

## 4.7 Power connections

### WARNING

#### **Electric shock caused by interchanging or short-circuiting the device connections**

Interchanging the line connections and motor connections or short-circuiting the DC-link connections will damage the device that can cause death or severe injuries.

- Do not interchange input and output terminals of the device.
- Do not interchange or short-circuit the DC-link terminals.

### **Note**

#### **Ground-fault circuit interrupter**

The device must not be operated via a ground-fault circuit interrupter (EN 61800-5-1).

### 4.7.1 Cable lugs

#### Cable lugs

The cable connections on the devices are designed for cable lugs according to DIN 46234 or DIN 46235.

For connection of alternative cable lugs, the maximum dimensions are listed in the table below.

These cable lugs are not to exceed these dimensions, as mechanical fastening and adherence to the voltage distances is not guaranteed otherwise.

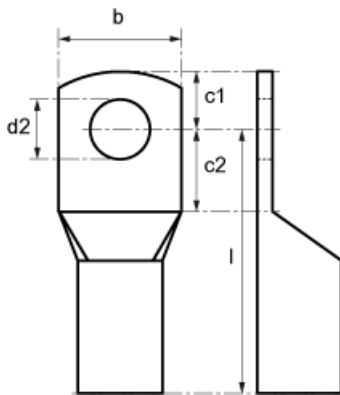


Figure 4-9 Dimensions of the cable lugs

Table 4- 3 Dimensions of the cable lugs

Screw / bolts	Connection cross-section [mm <sup>2</sup> ]	d2 [mm]	b [mm]	l [mm]	c1 [mm]	c2 [mm]
M8	70	8.4	24	55	13	10
M10	185	10.5	37	82	15	12
M10	240	13	42	92	16	13
M12	95	13	28	65	16	13
M12	185	13	37	82	16	13
M12	240	13	42	92	16	13
M16	240	17	42	92	19	16

### Attaching 2 cable lugs per phase

The cable lugs can be attached as shown in the following diagram if, at one connection per phase, 2 cable lugs can be connected.

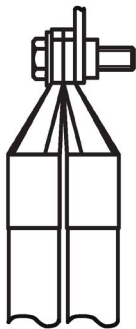


Figure 4-10 2 cable lugs per connection

## 4.7.2 Connection cross-sections and cable lengths

### Connection cross-sections

The connection cross-sections for the line connection, motor connection, and ground connection for your device are specified in the tables provided in the "Technical specifications" section.

### Cable lengths

The maximum permissible cable lengths are specified for standard cable types or cable types recommended by SIEMENS. Longer cables can only be used after consultation.

The listed cable length represents the actual distance between the converter and the motor, taking account factors such as parallel laying, current-carrying capacity, and the laying factor.

- Unshielded cable (e.g. Protodur NYY): max. 450 m
- Shielded cable (e.g., Protodur NYCWY, Prototflex EMV 3 Plus): max. 300 m.

---

#### Note

##### Cable lengths

The cable lengths specified are also valid if a motor choke is in use (option L08).

---

#### Note

##### Shielded cables

The PROTOFLEX-EMV-3 PLUS shielded cable recommended by Siemens is the protective conductor and comprises three symmetrically-arranged protective conductors. The individual protective conductors must each be provided with cable eyes and be connected to ground. The cable also has a concentric flexible braided copper shield. To comply with EN 61800-3 regarding radio interference suppression, the shield must be grounded at both ends with the greatest possible surface area.

On the motor side, cable glands that contact the shield with the greatest possible surface area are recommended for the terminal boxes.

---

### 4.7.3 Connecting shielded three-phase current cables

A good shield connection is achieved by connecting the shields in the converter cabinet through a large surface area to the EMC shield rail using EMC shield clamps (PUK shield clamps). EMC shield clamps (PUK shield clamps) are provided in the accessories pack to connect to the shield rail.

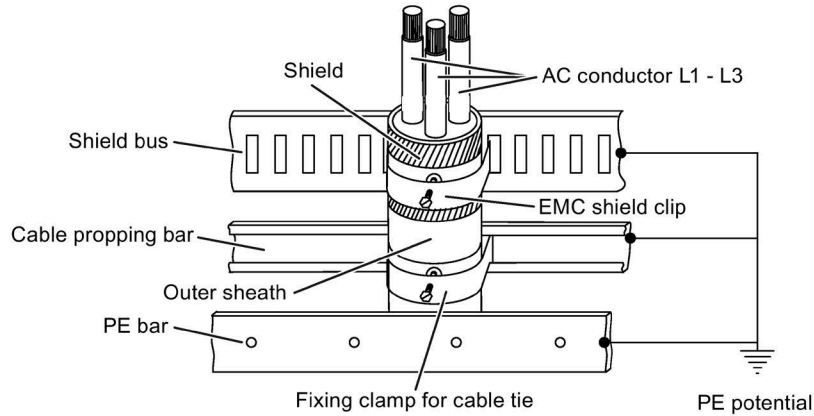


Figure 4-11 Connecting shields in the converter at the EMC shield rail using EMC shield clamps (PUK shield clamps)

#### Note

Detailed engineering information for connected shielded three-phase cables with concentrically arranged shields is provided in the "SINAMICS Low Voltage Configuration Manual" on the customer DVD supplied with the equipment.

#### 4.7.4 Minimum cable lengths for motor connection to a motor with one-winding system

##### Minimum cable lengths for motor connection to a motor with one-winding system for units connected in parallel

For units connected in parallel for connection to a motor with one-winding system, the following minimum cable lengths must be adhered to, if a motor reactor (option L08) is not being used. It must also be ensured that the cables are of the same length.

Table 4- 4 Minimum cable lengths

Article number	Unit rating [kW]	Minimum cable length [m]
<b>3 AC 660 ... 690 V</b>		
6SL3710-2GH42-8EA3	1750	12
6SL3710-2GH42-0EA3	1950	10
6SL3710-2GH42-2EA3	2150	8
6SL3710-2GH42-4EA3	2400	8
6SL3710-2GH42-7EA3	2700	10

#### 4.7.5 Connecting the motor and power cables

##### Connecting the motor and power cables on the cabinet unit

---

###### Note

###### Position of the connections

For the location of the connections, see the layout diagrams.

---

1. Open the cabinet, remove the covers (if necessary) in front of the connection panel for motor cables (terminals U2/T1, V2/T2, W2/T3; X2) and power cables (terminals U1/L1, V1/L2, W1/L3; X1).
2. Move or remove the bottom plate below the connection panel through which the motor cables are fed.
3. Screw the protective earth (PE) into the appropriate terminal (with earth symbol) (50 Nm for M12) at the points provided in the cabinet.
4. Connect the motor cables to the connections.  
Make sure that you connect the conductors in the correct sequence: U2/T1, V2/T2, W2/T3 and U1/L1, V1/L2, W1/L3!

<p><b>NOTICE</b></p> <p><b>Material damage due to loose power connections</b></p> <p>Insufficient tightening torques or vibration can result in faulty electrical connections. This can result in damage due to fire or malfunctions.</p> <ul style="list-style-type: none"> <li>• Tighten all power connections with the specified tightening torques, e.g. line supply connection, motor connection, DC link connections.</li> <li>• Regularly check all power connections by retightening them with the specified tightening torque. This applies in particular after transport.</li> </ul>
--

**Note**  
**PE connection of the motor**

The PE connection on the motor must be guided back directly to the cabinet unit and connected there.

**Direction of motor rotation**

EN 60034-7 defines the two ends of an electric motor as follows:

- DE (Drive End): usually the drive end of the motor
- NDE (Non-Drive End): usually the non-drive end of the motor

An electric motor will rotate clockwise if the shaft is turning clockwise when looking at the DE side.

For electric motors with 2 shaft ends, the direction of rotation must be determined based on the shaft end specified as the drive end.

For clockwise rotation, the electric motor must be connected according to the following table.

Table 4- 5 Cabinet unit and motor connection terminals

Cabinet unit (connection terminals)	Motor (connection terminals)
U2/T1	U
V2/T2	V
W2/T3	W

In contrast to the connection for the clockwise phase sequence, two phases have to be reversed with a counter-clockwise phase sequence (looking at the drive shaft).

---

**Note**

**Information on the phase sequence**

If an incorrect phase sequence was connected when the motor was connected, p1821 (phase sequence direction reversal) can be used to correct the incorrect phase sequence without physically changing it over (see "Functions, monitoring and protective functions/direction reversal").

The correct phase sequence must be observed in both sub-cabinets when connecting cabinet units in parallel, since it is not possible to use converter functions to correct different connection sequences in the two sub-cabinets at a later stage.

With motors that can be star-connected or delta-connected, it must be ensured that the windings are interconnected consistent with the operating voltage indicated on the rating plate or in the motor documentation. Make sure that the winding insulation of the connected motor has sufficient insulation strength to meet the requirements for converter operation.

---

#### 4.7.6 Adjusting the fan voltage (-T1-T10/-T20 and -T2-T10)

The power supply for the device fans (230 V 1 AC) in the Basic Line Modules (-T2-T10) and in the Motor Modules (-T1-T10 and -T1-T20) is taken from the main supply system using three transformers.

The particular mounting positions of the transformers are indicated in the layout diagrams supplied.

The transformers are fitted with primary taps so that they can be fine-tuned to the line voltage.

If necessary, the connection on the transformers fitted in the factory, shown with a dashed line, must be reconnected to match the actual line voltage.

---

**Note**

**Modules with two transformers**

Two transformers (-T1, -T10, and -T1-T20) are installed in the Motor Modules. The two primary terminals on these devices must be set together.

---

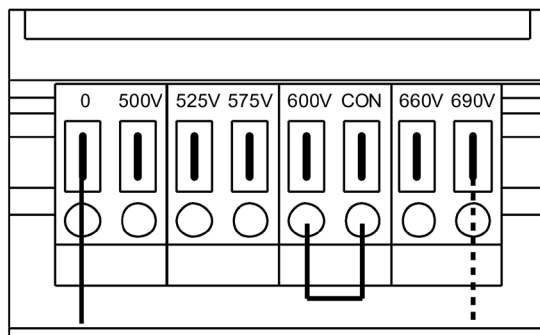


Figure 4-12 Setting terminals for the fan transformer (500 to 690 V 3 AC)

The line voltage assignments to appropriately set the fan transformer are listed in the following table.

**Note**

**Fan transformer for 660 to 690 V 3 AC**

With the 500 V to 690 V 3 AC fan transformer, a jumper is inserted between the "600 V" terminal and "CON" terminal. The "600V" and "CON" terminals are for internal use.

 **WARNING**

**Danger of fire due to overheating resulting from insufficient device fan voltage**

If the terminals are not reconnected to correspond with the actual line voltage, overheating and risks to personnel due to smoke and fire may result.

This can also cause the fan fuses to rupture due to overload.

- Set the terminals in accordance with the actual line voltage.

**Note**

**Article numbers for fan fuses**

The article numbers for fan fuses that have blown can be found in the spare parts list.

Table 4- 6 Line voltage assignment for the setting at the fan transformer (500 ... 690 V 3 AC)

Line voltage	Taps of the fan transformer (-T1-T10/-T20, -T2-T10)
660 V ± 10%	660 V
690 V ± 10%	690 V



### 4.7.7 Removing the connection clip to the basic interference suppression module for operation on an ungrounded line supply (IT system)

If the cabinet unit is operated on an ungrounded line supply (IT system), the connection brackets for the basic interference suppression modules in the Basic Line Modules (+H.A29 and +H.A30) must be removed.

---

#### Note

##### Warning label on the connection clip

A yellow warning label is attached to each connection clip so that it is easier to find.

- The warning label must be removed from the connection clip (by pulling it off) if the connection clip is to remain in the unit (operation on a grounded line supply).
- The warning label must be removed together with the connection clip if the unit is operated on a non-grounded line supply (IT system).



Figure 4-13 Warning label on the connection clip

NOTICE
<p><b>Damage to the device through not removing the connection clip with a non-grounded line supply</b></p> <p>Failure to remove the connection clip to the basic interference suppression module on a non-grounded line supply (IT system) can cause significant damage to the device.</p> <ul style="list-style-type: none"><li>• With a non-grounded line supply (IT system), remove the connection clip to the basic interference suppression module.</li></ul>

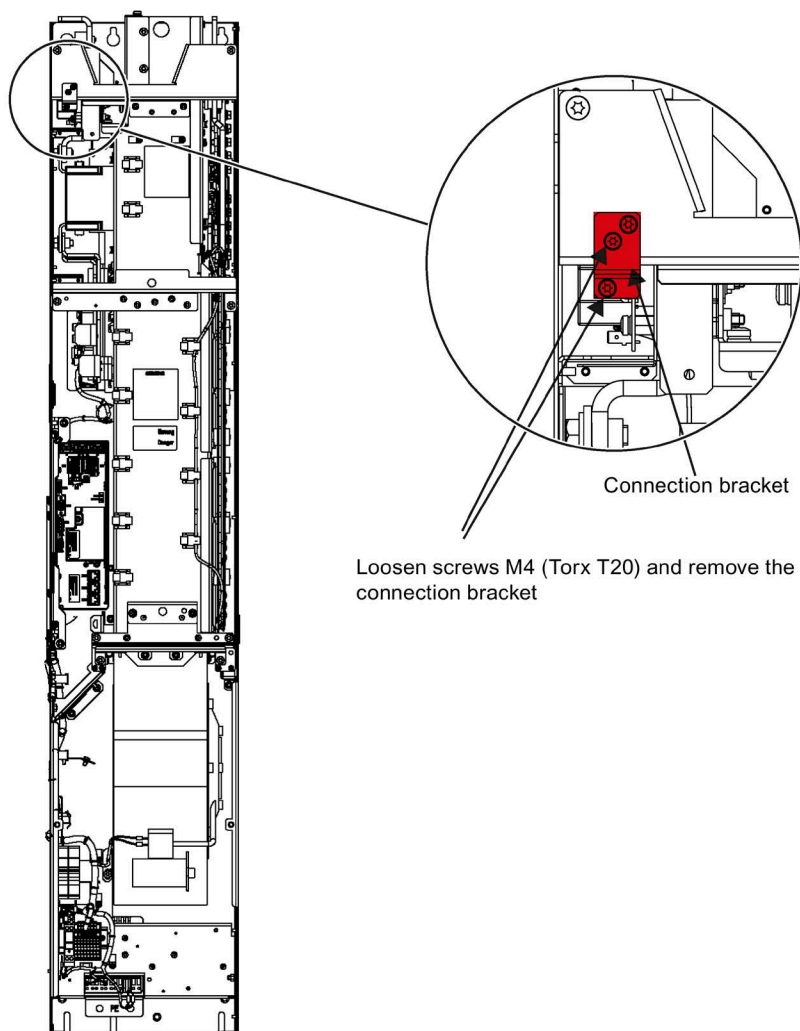


Figure 4-14 Removing the connection bar to the basic interference suppression module in the Basic Line Module

### 4.7.8 Setting the circuit-breaker

#### Description

The standard circuit breaker is used to disconnect the voltage and provide overload and short-circuit protection. The circuit breaker is controlled and supplied within the converter.

<b>NOTICE</b>
<b>Material damage caused by switching on too frequently</b>
The cabinet unit can be damaged if it is switched on too frequently.
<ul style="list-style-type: none"><li>Do not switch on the cabinet unit more frequently than every 3 minutes.</li></ul>


## Connecting

Table 4- 7 Terminal block X50 – "Circuit breaker closed" checkback contact

Terminal	Designation <sup>1)</sup>	Technical data
1	NO	Max. load current: 10 A Max. switching voltage: 250 V AC Max. contact rating: 250 VA Required minimum load: $\geq 1$ mA
2	NC	
3	COM	
Max. connectable cross-section: 4 mm <sup>2</sup>		

<sup>1)</sup> NO: normally-open contact, NC: normally-closed contact, COM: mid-position contact



 WARNING
<p><b>Dangerous voltage as a result of external auxiliary supply</b></p> <p>When the external auxiliary supply is connected, dangerous voltages are present in the cabinet unit even when the motor starter protector is switched off. Death or serious injury can result when live parts are touched.</p> <ul style="list-style-type: none"> <li>Observe the general safety rules when working on the device.</li> </ul>


## Setting the circuit breaker

With the factory setting, the circuit breakers are set to the incoming rated current of the cabinet unit, and as a consequence, the device is adequately protected.

The circuit breaker is set as follows in the factory:

Table 4- 8 Factory setting of the circuit breaker

Article No.	Output current	Overcurrent trip (L)	Short-circuit trip, non-delayed (I)
6SL3710-2GH41-8EA3	1729	0.9 (both switches)	2 (both switches)
6SL3710-2GH42-0EA3	1948	1.0 (both switches)	2 (both switches)
6SL3710-2GH42-2EA3	2158	0.9 (both switches)	2 (both switches)
6SL3710-2GH42-4EA3	2413	1.0 (both switches)	2 (both switches)
6SL3710-2GH42-7EA3	2752	0.9 (both switches)	2 (both switches)

 WARNING
<p><b>Incorrect circuit breaker setting</b></p> <p>An incorrect setting can cause unwanted or delayed tripping of the circuit breaker and result in damage to the cabinet unit and can therefore result in death or severe injury.</p> <ul style="list-style-type: none"> <li>Check the settings described above, and if required, adapt the circuit breaker settings corresponding to the factory setting.</li> </ul>

## Diagnostics

Messages output during operation and in the event of faults are described in the Operating Instructions in the customer DVD supplied with the device.

## 4.8 External supply of the auxiliary supply from a secure line

### Description

An external auxiliary supply is always recommended if communication and closed-loop control are to be independent of the supply system. An external auxiliary supply is particularly recommended for low-power lines susceptible to short-time voltage dips or power failures.

With an external supply independent of the main supply, warnings and fault messages may still be displayed on the operator panel and internal protection and monitoring devices if the main supply fails.



#### **WARNING**

##### **Dangerous voltage as a result of external auxiliary supply**

When the external auxiliary supply is connected, dangerous voltages are present in the cabinet unit even when the main switch is open. Death or serious injury can result when live parts are touched.

- Observe the general safety rules when working on the device.

#### **Note**

##### **External auxiliary supply for automatic restart**

An external auxiliary supply (infeed) must always be used if the automatic restart (WEA) function is to be used with integrated EMERGENCY OFF option (L57) or EMERGENCY STOP option (L59, L60).

Otherwise, the automatic restart function does not function.

### 230 V AC auxiliary supply

The fuse must not exceed 16 A.

The connection is protected inside the cabinet with 3 A or 5 A.

### Connecting

- On terminal block -X40, remove the jumpers between terminals 1 and 2 as well as 5 and 6.
- Connect the external 230 V AC supply to terminals 2 (L1) and 6 (N).

## 4.9 Signal connections

### 4.9.1 Control Unit CU320-2 DP

In the standard version, the cabinet unit contains a CU320-2 DP control unit, which handles the communication and open-loop/closed-loop control functions.

A PROFIBUS interface is available for higher-level communication.

#### Connection overview

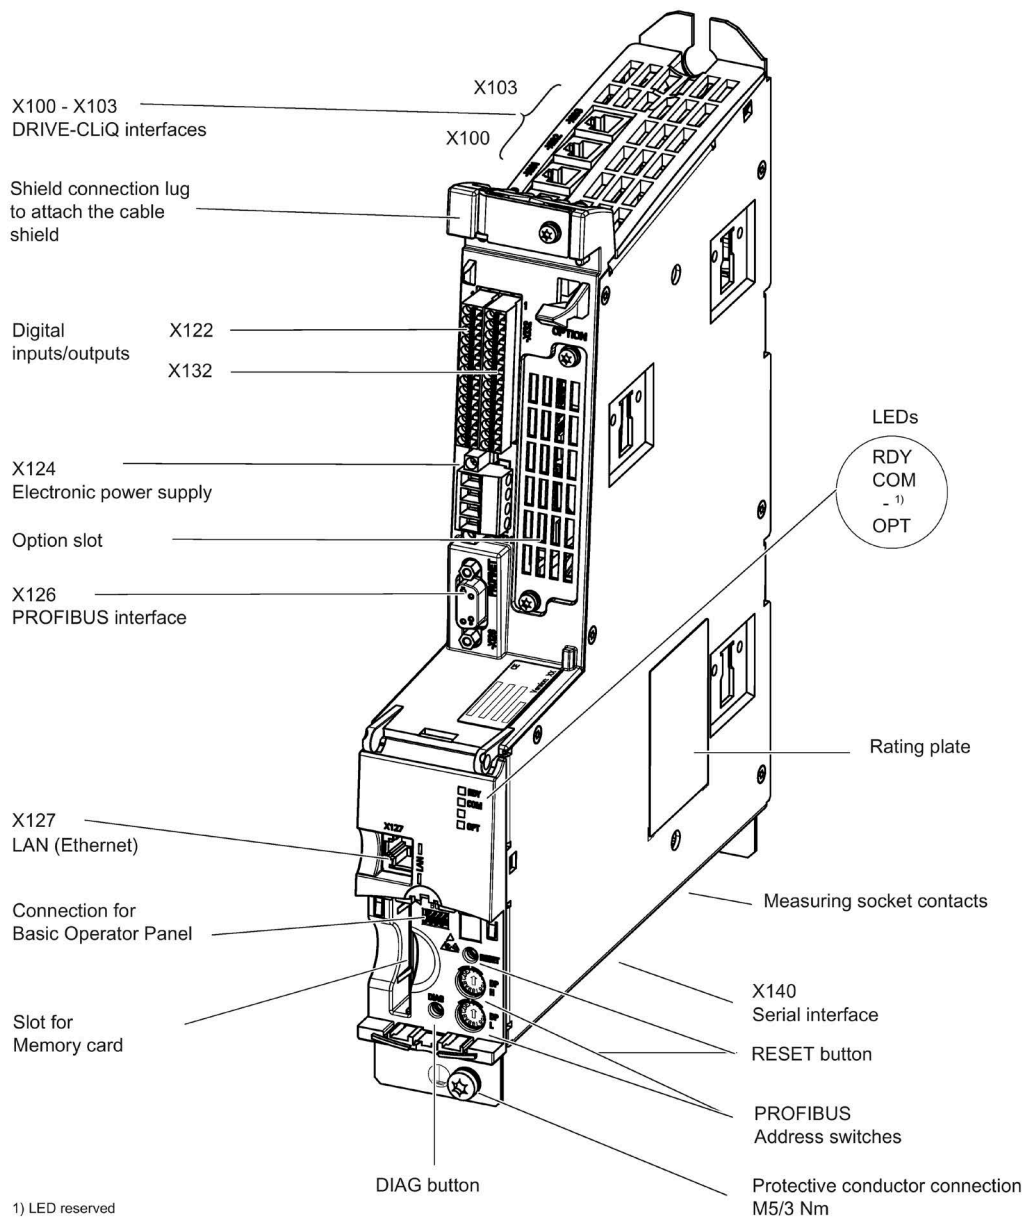


Figure 4-15 Connection overview of the CU320-2 DP Control Unit (without cover)

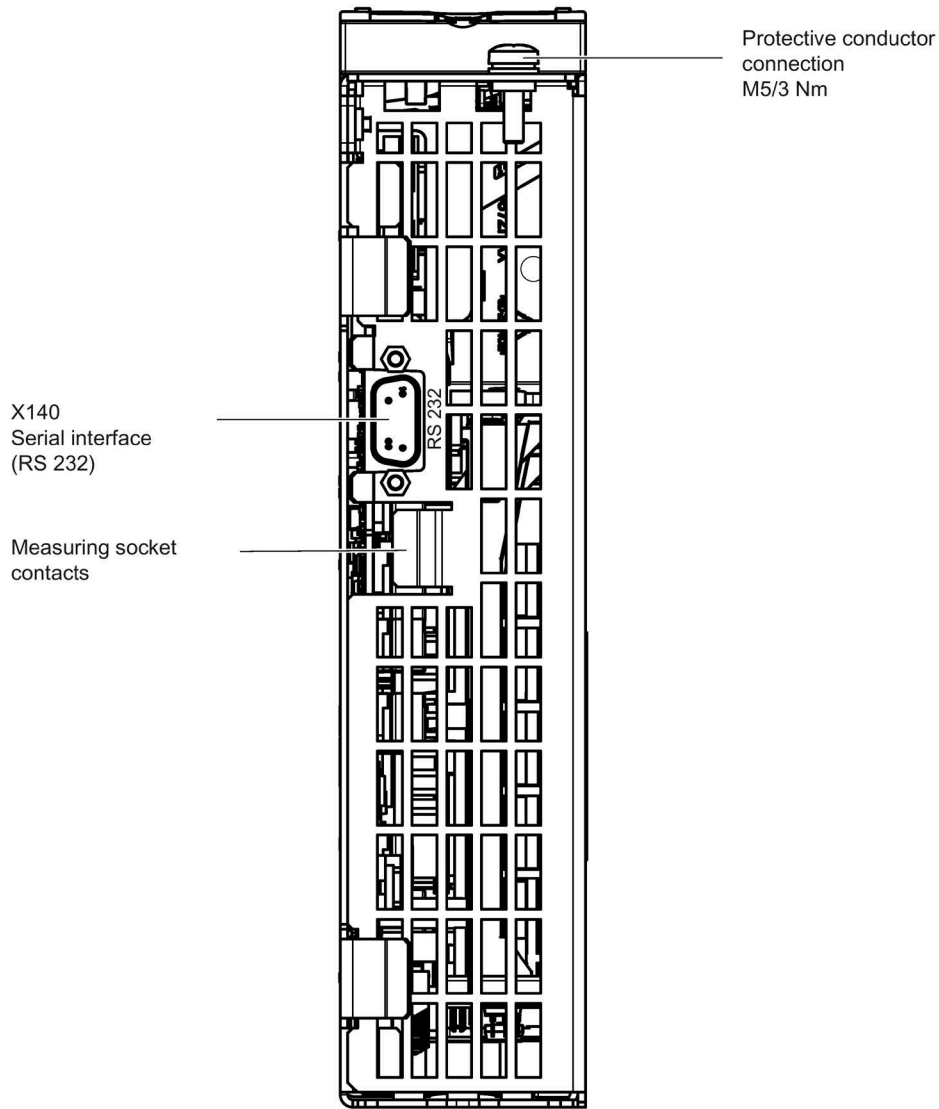


Figure 4-16 Interface X140 and measuring sockets T0 to T2 - CU320-2 DP (view from below)

**NOTICE**

**Malfunctions or damage to the option board by inserting and withdrawing in operation**

Withdrawing and inserting the option board in operation can damage it or cause it to malfunction.

- Only withdraw or insert the Option Board when the Control Unit is in a no-current condition.

Connection example


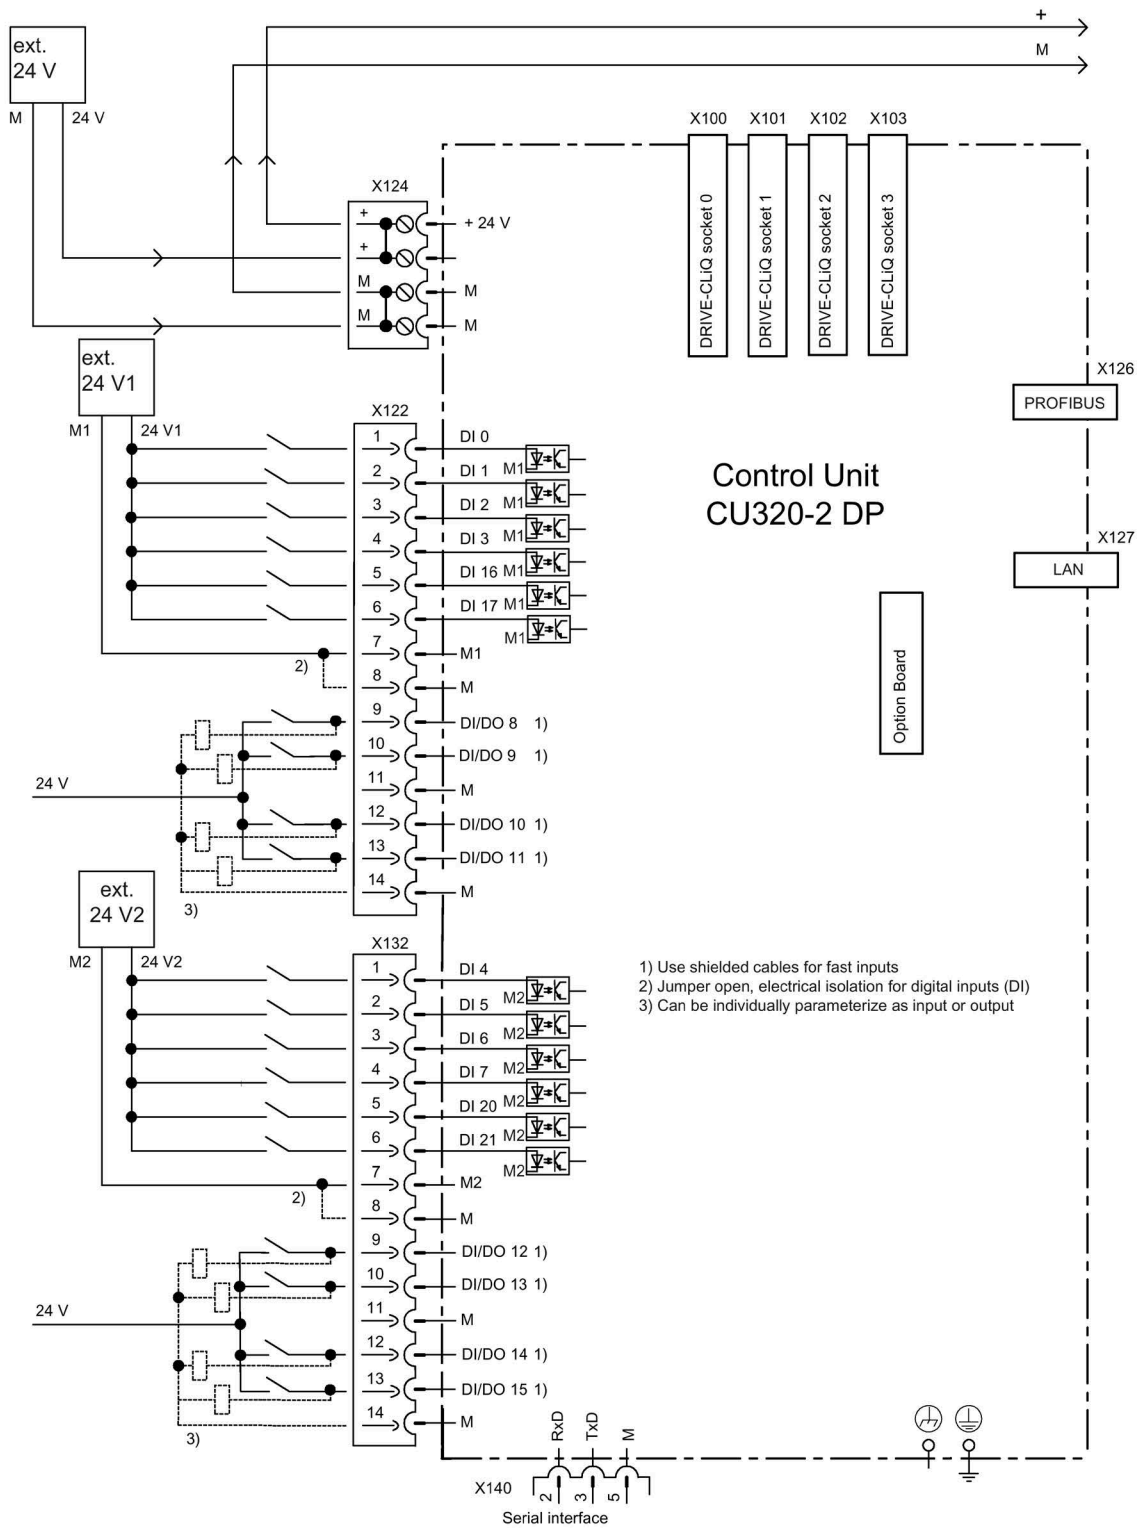


Figure 4-17 Connection example of CU320-2 DP

### X100 to X103: DRIVE-CLiQ interface

Table 4- 9 DRIVE-CLiQ interface X100 – X103

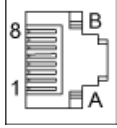Connector	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type: RJ45 socket Blanking plate for DRIVE-CLiQ interfaces (50 pcs.) Article number: 6SL3066-4CA00-0AA0			



## X122: Digital inputs/outputs

Table 4- 10 Terminal block X122

Connector	Pin	Designation <sup>1)</sup>	Technical data
	1	DI 0	Voltage (max.): -3 ... +30 V DC Typical power consumption: 9 mA at 24 V Electrical isolation: reference potential is terminal M1 Level (with ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay (typ.): For "0" → "1": 50 μs For "1" → "0": 150 μs
	2	DI 1	
	3	DI 2	
	4	DI 3	
	5	DI 16	
	6	DI 17	
	7	M1	Reference potential for terminal 1 ... 6
	8	M	Electronics ground
	9	DI/DO 8	<b>As input:</b> Voltage: -3 ... +30 VDC Current consumption, typical: 9 mA at 24 V Level (with ripple) High level: 15 ... 30 V Low level: -3 ... +5 V DI/DO 8, 9, 10, and 11 are "high-speed inputs" <sup>2)</sup> Input delay (typ.): For "0" → "1": 5 μs For "1" → "0": 50 μs <b>As output:</b> Voltage: 24 V DC Max. load current per output: 500 mA Continuous short-circuit proof Output delay (typ./max.): <sup>3)</sup> For "0" → "1": 150 μs / 400 μs For "1" → "0": 75 μs / 100 μs Switching frequency: For resistive load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	10	DI/DO 9	
	11	M	
	12	DI/DO 10	
	13	DI/DO 11	
	14	M	

Max. connectable cross-section: 1.5 mm<sup>2</sup>

<sup>1)</sup> DI: digital input; DI/DO: bidirectional digital input/output; M: Electronics ground M1: reference potential

<sup>2)</sup> The rapid inputs can be used as probe inputs or as inputs for the external zero mark.

<sup>3)</sup> Data for:  $V_{CC} = 24\text{ V}$ ; load 48 Ω; high ("1") = 90%  $V_{out}$ ; low ("0") = 10%  $V_{out}$

The maximum cable length that can be connected is 30 m.

---

**Note**

**Ensuring the function of digital inputs**

An open input is interpreted as "low".

Terminal M1 must be connected so that the digital inputs (DI) can function.

This is achieved through one of the following measures:

1. Also route the reference ground of the digital inputs.
  2. A jumper to terminal M. (**Note:** This removes the electrical isolation for these digital inputs.)
- 


**Note**

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

---

## X132: Digital inputs/outputs

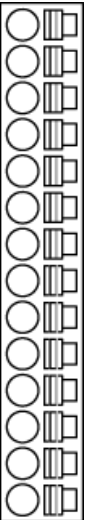Table 4- 11 Terminal block X132

Connector	Pin	Designation <sup>1)</sup>	Technical data
	1	DI 4	Voltage (max.): -3 ... +30 VDC Current consumption, typical: 9 mA at 24 V Electrical isolation: The reference potential is terminal M2 Level (including ripple) High level: 15 ... 30 V Low-level: -3 ... +5 V Input delay (typ.): For "0" → "1": 50 μs For "1" → "0": 150 μs
	2	DI 5	
	3	DI 6	
	4	DI 7	
	5	DI 20	
	6	DI 21	
	7	M2	Reference potential for terminal 1 ... 6
	8	M	Electronics ground
	9	DI/DO 12	<b>As input:</b> Voltage: -3 ... +30 VDC Current consumption, typical: 9 mA at 24 V Level (including ripple) High level: 15 ... 30 V Low-level: -3 ... +5 V DI/DO 12, 13, 14, and 15 are "high-speed inputs" <sup>2)</sup> Input delay (typ.): For "0" → "1": 5 μs For "1" → "0": 50 μs <b>As output:</b> Voltage: 24 V DC Max. load current per output: 500 mA Continuous short-circuit proof Output delay (typ./max.): <sup>3)</sup> For "0" → "1": 150 μs / 400 μs For "1" → "0": 75 μs / 100 μs Switching frequency: For resistive load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	10	DI/DO 13	
	11	M	
	12	DI/DO 14	
	13	DI/DO 15	
	14	M	

Max. connectable cross-section: 1.5 mm<sup>2</sup>

<sup>1)</sup> DI: digital input; DI/DO: bidirectional digital input/output; M: Electronics ground; M2: reference potential

<sup>2)</sup> The rapid inputs can be used as probe inputs or as inputs for the external zero mark

<sup>3)</sup> Data for:  $V_{CC} = 24\text{ V}$ ; load 48 Ω; high ("1") = 90%  $V_{out}$ ; low ("0") = 10%  $V_{out}$

The maximum cable length that can be connected is 30 m.

---

**Note**

**Ensuring the function of digital inputs**

An open input is interpreted as "low".

To enable the digital inputs (DI) to function, terminal M2 must be connected.

This is achieved through one of the following measures:

1. Also route the reference ground of the digital inputs.
  2. A jumper to terminal M. (**Note:** This removes the electrical isolation for these digital inputs.)
- 

**Note**


If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

---

## X126: PROFIBUS connection

The PROFIBUS is connected by means of a 9-pin SUB D socket (X126). The connections are electrically isolated.

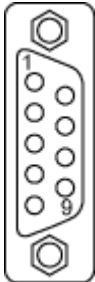Table 4- 12 PROFIBUS interface X126

Connector	Pin	Signal name	Meaning	Range
	1	-	Not assigned	
	2	M24_SERV	Power supply for teleservice, ground	0 V
	3	RxD/TxD-P	Receive/transmit data P (B)	RS485
	4	CNTR-P	Control signal	TTL
	5	DGND	PROFIBUS data reference potential	
	6	VP	Supply voltage plus	5 V ± 10%
	7	P24_SERV	Power supply for teleservice, + (24 V)	24 V (20.4 ... 28.8 V)
	8	RxD/TxD-N	Receive/transmit data N (A)	RS485
	9	-	Not assigned	

A teleservice adapter can be connected to the PROFIBUS interface for remote diagnostics. The power supply for the teleservice (terminals 2 and 7) can have a load of up to 150 mA.

### NOTICE

#### Damage to the Control Unit or other PROFIBUS nodes due to high leakage currents

Significant leakage currents can flow along the PROFIBUS cable if a suitable equipotential bonding conductor is not used and destroy the Control Unit or other PROFIBUS nodes.

- An equipotential bonding conductor with a cross-section of at least 25 mm<sup>2</sup> must be used between components in a system that are located at a distance from each other.

### NOTICE

#### Damage to the Control Unit or other CAN bus nodes due to the connection of a CAN cable

If a CAN cable is connected to the X126 interface, this can destroy the Control Unit or other CAN bus nodes.

- Do not connect any CAN cables to the X126 interface.

### PROFIBUS connector

For the first and last participants in a bus line, the terminating resistors must be switched in, otherwise, data transmission will not function correctly.

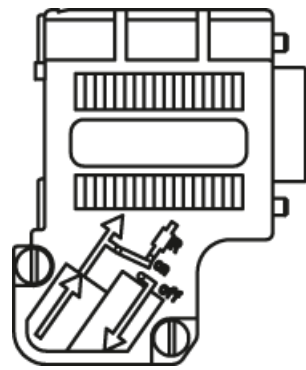
The terminating resistors are activated in the connector.

The cable shield must be connected at both ends and over a large surface area.


### Connectors

The cables must be connected via PROFIBUS connectors as they contain the necessary terminating resistors.

The figure below shows suitable PROFIBUS connectors with/without a PG/PC connector.



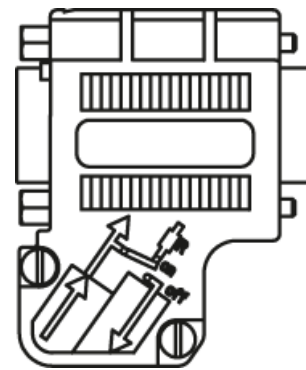PROFIBUS connector  
without PG/PC connection  
6ES7972-0BA42-0XA0



PROFIBUS connector  
with PG/PC connection  
6ES7972-0BB42-0XA0

### Bus terminating resistor

The bus terminating resistor must be switched on or off depending on its position in the bus, otherwise the data will not be transmitted properly.

The terminating resistors for the first and last nodes in a line must be switched on; the resistors must be switched off at all other connectors.

The cable shield must be connected at both ends over large-surface area contacts.

---

#### Note

##### Connector type

Depending on the connector type, the correct assignment of the connector must be ensured (IN/OUT) in conjunction with the terminating resistor.

---

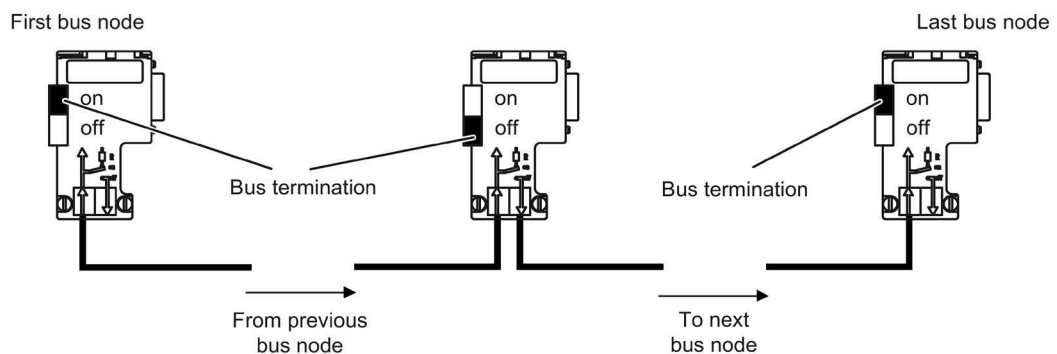
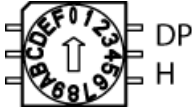
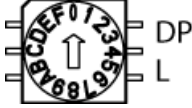


Figure 4-18 Position of the bus terminating resistors

## PROFIBUS address switches

The PROFIBUS address is set as a hexadecimal value via two rotary coding switches. Values between  $0_{\text{dec}}$  ( $00_{\text{hex}}$ ) and  $127_{\text{dec}}$  ( $7F_{\text{hex}}$ ) can be set as the address. The upper rotary coding switch (H) is used to set the hexadecimal value for  $16^1$  and the lower rotary coding switch (L) is used to set the hexadecimal value for  $16^0$ .

Table 4- 13 PROFIBUS address switches

Rotary coding switches	Significance	Examples		
		$21_{\text{dec}}$	$35_{\text{dec}}$	$126_{\text{dec}}$
		$15_{\text{hex}}$	$23_{\text{hex}}$	$7E_{\text{hex}}$
	$16^1 = 16$	1	2	7
	$16^0 = 1$	5	3	E

## Setting the PROFIBUS address

The factory setting for the rotary coding switches is  $0_{\text{dec}}$  ( $00_{\text{hex}}$ ).

There are two ways to set the PROFIBUS address:

1. Via p0918
  - To set the bus address for a PROFIBUS node using STARTER, first set the rotary code switches to  $0_{\text{dec}}$  ( $00_{\text{hex}}$ ) and  $127_{\text{dec}}$  ( $7F_{\text{hex}}$ ).
  - Then use parameter p0918 to set the address to a value between 1 and 126.
2. Via the PROFIBUS address switches on the Control Unit
  - The address is set manually to values between 1 and 126 using the rotary coding switches. In this case, p0918 is only used to read the address.

---

### Note

The rotary coding switches used to set the PROFIBUS address are located beneath the cover.

---

**Note**

Address 126 is used for commissioning. Permitted PROFIBUS addresses are 1 ... 126.

When several Control Units are connected to a PROFIBUS line, you set the addresses differently than for the factory setting. Each PROFIBUS address in a PROFIBUS line can only be assigned once. Either set the PROFIBUS address in absolute terms using the rotary coding switches – or selectively in parameter p0918. Each change made to the bus address is not effective until POWER ON.

The currently set address of the rotary coding switch is displayed in parameter r2057.

**X127: LAN (Ethernet)**

**Note**

**Use**


Ethernet interface X127 is intended for commissioning and diagnostics, which means that it must always be accessible (e.g. for service).

Further, the following restrictions apply to X127:

- Only local access is possible
- No networking - or only local networking in a closed and locked electrical cabinet permissible

If it is necessary to remotely access the electrical cabinet, then additional security measures must be applied so that misuse through sabotage, unqualified data manipulation and intercepting confidential data is completely ruled out (also see Chapter "Industrial Security (Page 24)").

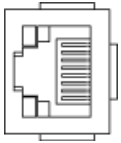Table 4- 14 X127 LAN (Ethernet)

Connector	Pin	Designation	Technical data
	1	TXP	Ethernet transmit data +
	2	TXN	Ethernet transmit data -
	3	RXP	Ethernet receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Ethernet receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
Connector type: RJ45 socket			



**Note**

The LAN (Ethernet) interface does not support Auto MDI(X). If the LAN interface of the communication partner also cannot handle auto-MDI(X), then a crossover cable must be used to establish the connection.

For diagnostic purposes, the X127 LAN interface features a green and a yellow LED. These LEDs indicate the following status information:


Table 4- 15 LED statuses for the X127 LAN interface

LED	Color	State	Description
Link port	-	Off	Missing or faulty link
	Green	Continuous light	10 or 100 Mbit link available
Activity port	-	Off	No activity
	Yellow	Flashing light	Sending or receiving

**X140: serial interface (RS232)**

The AOP30 operator panel for operating/parameterizing the device can be connected via the serial interface. The interface is located on the underside of the Control Unit.

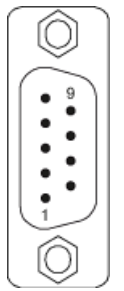Table 4- 16 Serial interface (RS232) X140

Connector	Pin	Designation	Technical data
	2	RxD	Receive data
	3	TxD	Transmit data
	5	Ground	Ground reference
Connector type: 9-pin SUB D connector			


**Note**

**Connecting cable to the AOP30**

The connection cable to AOP30 may only contain the three contacts which are shown in the drawing; a completely allocated cable may not be used.

### T0, T1, T2: Measuring socket contacts

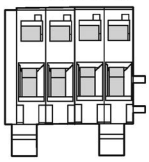Table 4- 17 Measuring socket contacts T0, T1, T2

Connector	Socket	Function	Technical data
	M	Ground	Voltage: 0... 5 V Resolution: 8 bits Load current: max. 3 mA Continuous short-circuit proof The reference potential is terminal M
	T0	Measuring socket contact 0	
	T1	Measuring socket contact 1	
	T2	Measuring socket contact 2	
PCB plug connector from Phoenix Contact, type: ZEC 1.0/ 4-ST-3.5 C1 R1.4, order number: 1893708			

#### Note

##### Cable cross section

The measuring socket contacts are only suitable for cable cross-sections of 0.2 mm<sup>2</sup> to 1 mm<sup>2</sup>.

#### Note

##### Using the measuring socket contacts

The measuring socket contacts support commissioning and diagnostic functions. It must not be connected for normal operation.

### DIAG button

The DIAG pushbutton is reserved for service functions.

## Slot for the memory card



Figure 4-19 Slot for the memory card

---

### Note

#### Plant standstill by withdrawing or inserting the memory card during operation

If the memory card is withdrawn or inserted during operation, then data can be lost, possibly resulting in a plant standstill.

- Only withdraw and insert the memory card when the Control Unit is in a no-voltage condition.

---

### Note

#### Insertion direction for the memory card

Only insert the memory card as shown in the photo above (arrow at top right).



### NOTICE

#### Memory card damage caused by electric fields or electrostatic discharge

Electrical fields or electrostatic discharge may result in the memory card being damaged and so cause malfunctions.

- When removing and inserting the memory card, always observe the ESD regulations.

---

**Note**

**Data loss when the Control Unit with memory card is returned**

When returning a defective Control Unit for repair or testing, the data on the memory card (parameters, firmware, licenses, etc.) could be lost.

- Do not return the memory card as well, but rather keep it in a safe place so that it can be inserted in the replacement unit.
- 

**Note**

Please note that only SIEMENS memory cards can be used to operate the Control Unit.

---

## 4.9.2 Customer terminal module TM31 (-A60) (option G60)

---

### Note

#### Preassignment and position of the customer terminal block

The factory setting and description of the customer terminal blocks can be found in the circuit diagrams.

The location of the customer terminal block in the cabinet unit is indicated in the layout diagram.

---

### Shield support

The shield connection of shielded control cables on the customer terminal block –A60 is established in the immediate vicinity of the terminal block. For this purpose, the customer terminal block –A60 and the mounting plates have cut-out sections which are used to snap the enclosed shield springs into place. The shields of incoming and outgoing cables must be applied directly to these shield connections. It is important here to establish the greatest possible area of contact and a good conductive connection.

---

### Note

#### Shield springs

These shield springs can be used for all control cables in the cabinet unit because all the shield connections are identical in design.

---

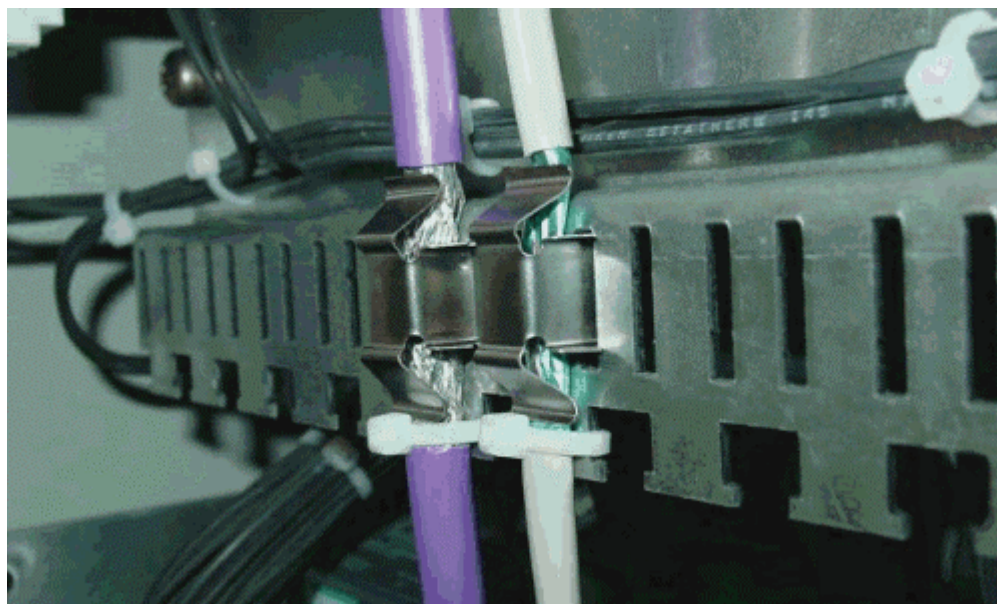


Figure 4-20 Shield support

Overview

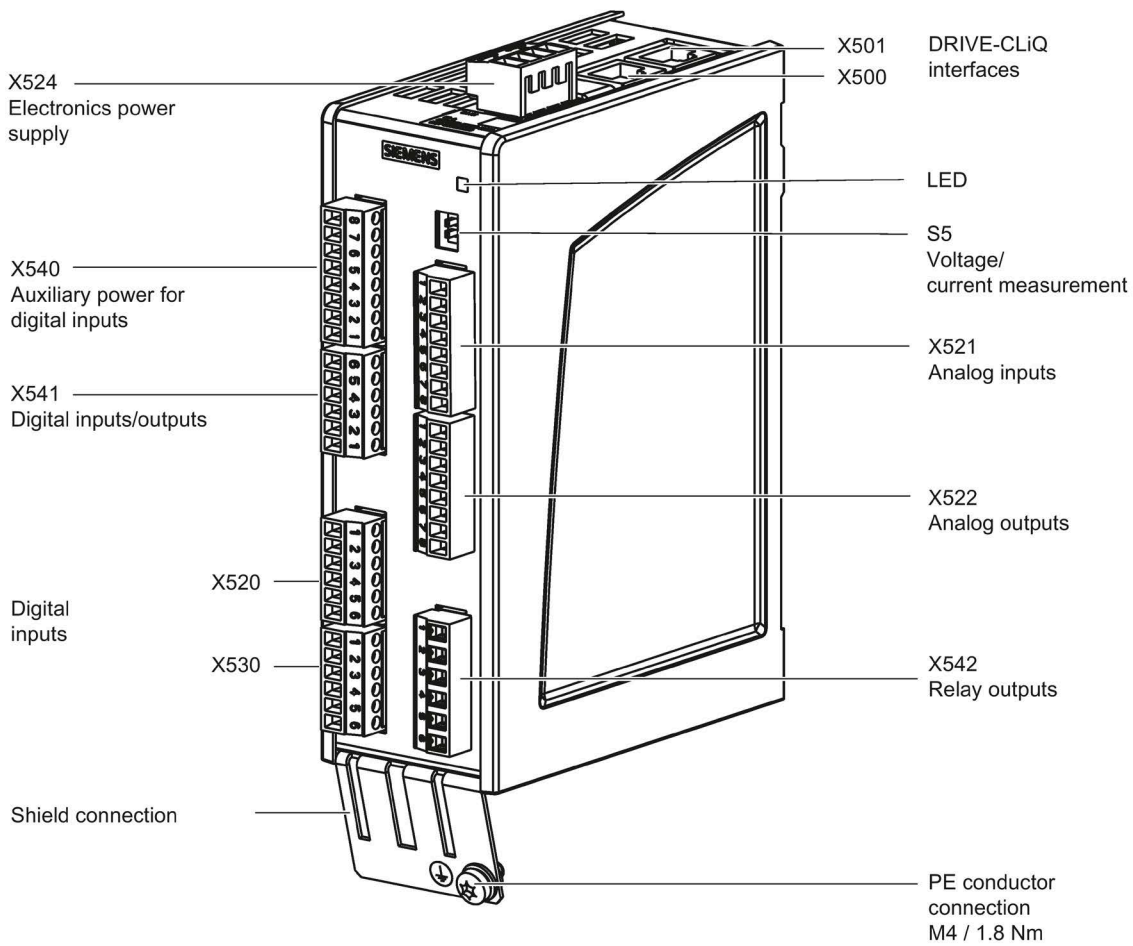


Figure 4-21 TM31 customer terminal block

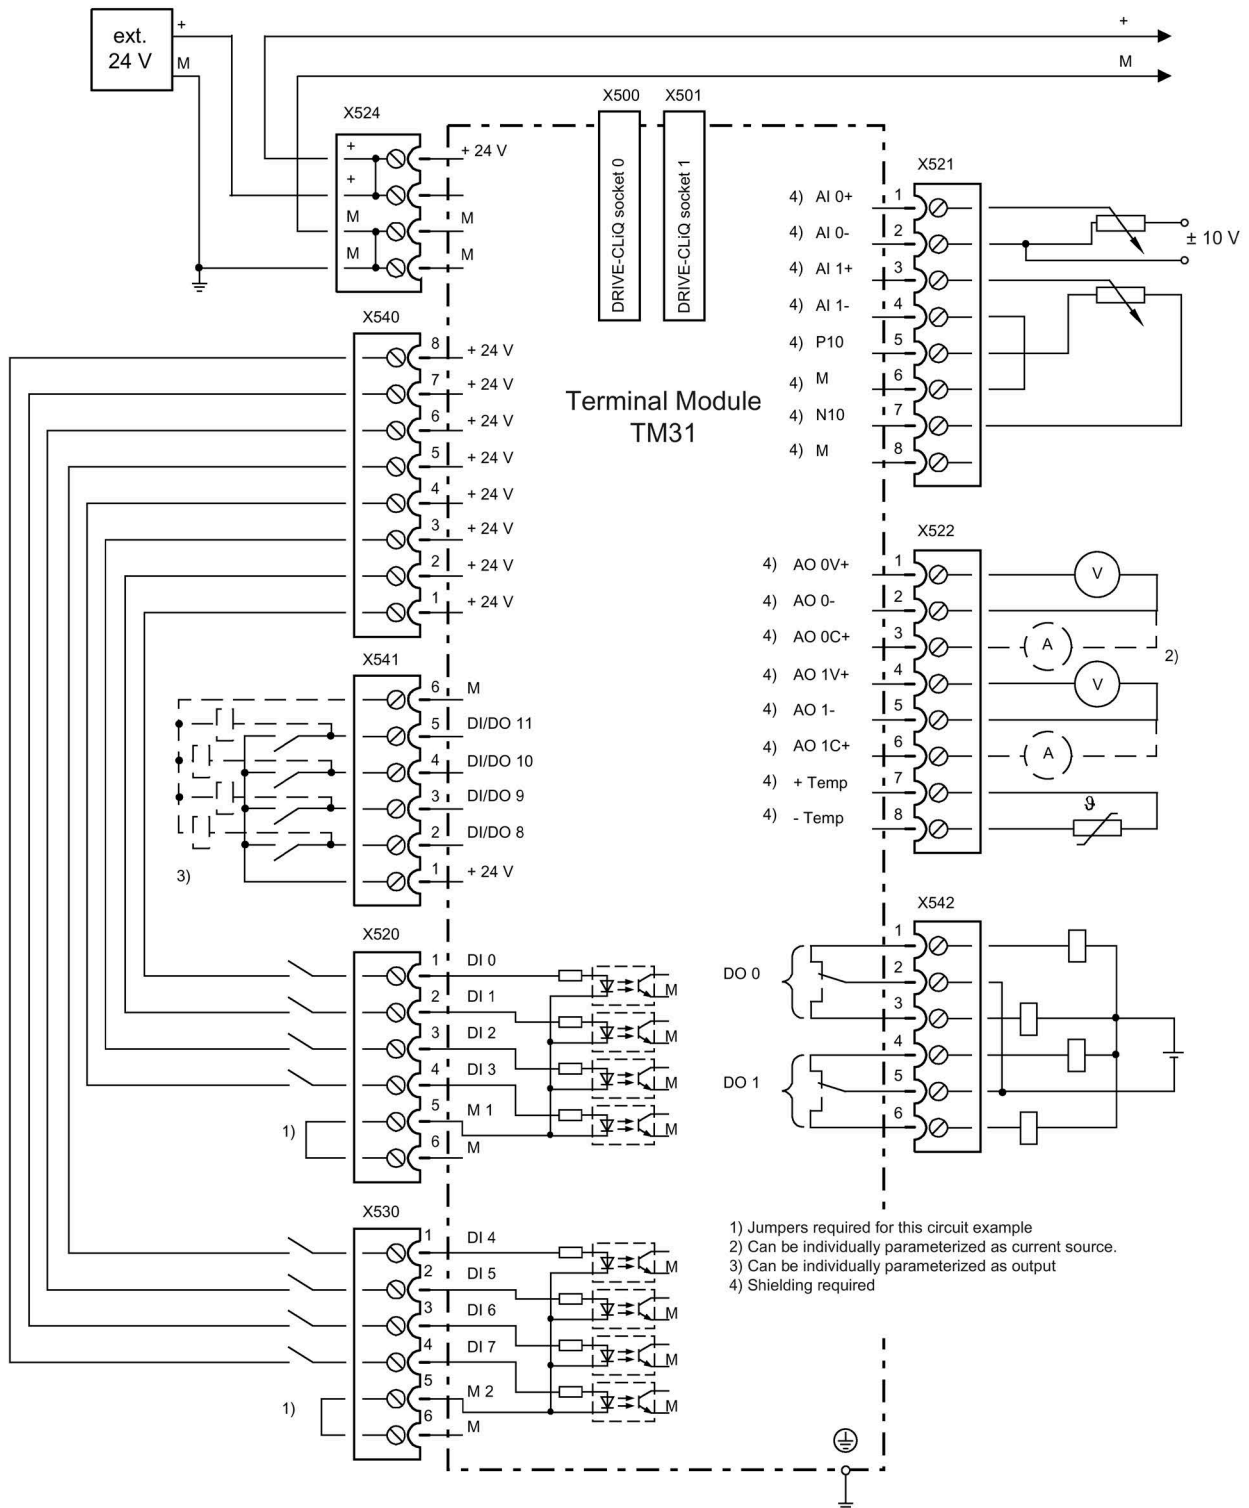
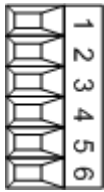


Figure 4-22 Connection overview of TM31 customer terminal block

## X520: 4 digital inputs

Table 4- 18 Terminal block X520

Connector	Terminal	Designation <sup>1)</sup>	Technical data
	1	DI 0	<b>Voltage:</b> - 3 ... +30 V <b>Current consumption</b> typical: 10 mA at 24 V DC <b>Input delay:</b> for "0" to "1": Typ. 50 µs max. 100 µs for "1" to "0": Typ. 130 µs, max. 150 µs
	2	DI 1	
	3	DI 2	
	4	DI 3	
	5	M1	<b>Electrical isolation:</b> Reference potential is terminal M1 <b>Signal level</b> (including ripple) High level: 15 ... 30 V Low level: -3 ... +5 V
	6	M	
Max. connectable cross-section: 1.5 mm <sup>2</sup>			

<sup>1)</sup> DI: digital input; M1: ground reference; M: Electronics ground

### Note

#### Ensuring the function of digital inputs

An open input is interpreted as "low".

Terminal M1 must be connected so that the digital inputs (DI) can function.


This is achieved through one of the following measures:

1. Also route the reference ground of the digital inputs.
2. A jumper to terminal M. (**Note:** This removes the electrical isolation for these digital inputs.)



## X530: 4 digital inputs

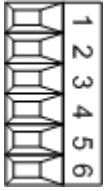Table 4- 19 Terminal block X530

Connector	Terminal	Designation <sup>1)</sup>	Technical data
	1	DI 4	<b>Voltage:</b> - 3 ... +30 V <b>Current consumption</b> typical: 10 mA at 24 V DC <b>Input delay:</b> For "0" to "1": Typ. 50 µs max. 100 µs for "1" to "0": Typ. 130 µs, max. 150 µs <b>Electrical isolation:</b> Reference potential is terminal M2 <b>Signal level</b> (including ripple) High level: 15 ... 30 V Low-level: -3 ... +5 V
	2	DI 5	
	3	DI 6	
	4	DI 7	
	5	M2	
	6	M	
Max. connectable cross-section: 1.5 mm <sup>2</sup>			

<sup>1)</sup> DI: digital input; M2: ground reference; M: Electronics ground

### Note

#### Ensuring the function of digital inputs

An open input is interpreted as "low".


To enable the digital inputs (DI) to function, terminal M2 must be connected.

This is achieved through one of the following measures:

1. Also route the reference ground of the digital inputs.
2. A jumper to terminal M. (**Note:** This removes the electrical isolation for these digital inputs.)

### X521: 2 analog inputs (differential inputs)

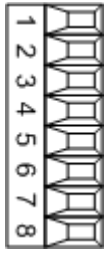Table 4- 20 Terminal block X521

Connector	Terminal	Designation <sup>1)</sup>	Technical data
	1	AI 0+	The analog inputs can be toggled between current and voltage input using switches S5.0 and S5.1. <b>As voltage input:</b> -10 ... +10 V; R <sub>i</sub> > 100 kΩ Resolution: 11 bits + sign <b>As current input:</b> -20 ... +20 mA; R <sub>i</sub> = 250 kΩ Resolution: 10 bits + sign
	2	AI 0-	
	3	AI 1+	
	4	AI 1-	
	5	P10	<b>Auxiliary voltage:</b> P10 = 10 V N10 = -10 V Continuously short-circuit proof
	6	M	
	7	N10	
	8	M	
Max. connectable cross-section: 1.5 mm <sup>2</sup>			

<sup>1)</sup> AI: analog input; P10/N10: auxiliary voltage, M: Ground reference

#### NOTICE

##### Damage or malfunctions through impermissible voltage values

If a current exceeding ±35 mA flows through the analog current input, then the component could be destroyed.

The common mode range must not be violated in order to avoid incorrect analog-digital conversion results.


- The input voltage may only be in the range between -30 V and +30 V (destruction limit).
- The common mode voltage may only be in the range between -10 V and +10 V (error limit).
- The back EMF at the auxiliary voltage connections may only be in the range between -15 V and +15 V.

#### Note

The power supply for the analog inputs can be taken internally or from an external power supply unit.

## S5: Selector for voltage/current AI0, AI1

Table 4- 21 Selector for voltage/current S5

	Switch	Function
	S5.0	Selector voltage (V) / current (I) AI0
	S5.1	Selector voltage (V) / current (I) AI1


### Note

#### Delivery condition

When delivered, both switches are set to current measurement (switch set to "I").

## X522: 2 analog outputs, temperature sensor connection

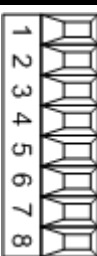Table 4- 22 Terminal block X522

Connector	Terminal	Designation <sup>1)</sup>	Technical data
	1	AO 0V+	You can set the following output signals using parameters: <b>Voltage:</b> -10 ... +10 V (max. 3 mA) <b>Current 1:</b> 4 ... 20 mA (max. load resistance ≤ 500 Ω) <b>Current 2:</b> -20 ... +20 mA (max. load resistance ≤ 500 Ω) <b>Current 3:</b> 0 ... 20 mA (max. load resistance ≤ 500 Ω) Resolution: 11 bits + sign Continuously short-circuit proof
	2	AO 0-	
	3	AO 0C+	
	4	AO 1V+	
	5	AO 1-	
	6	AO 1C+	
	7	+Temp <sup>2)</sup>	Temperature sensor KTY84-1C130/PT1000/PTC Measuring current via temperature sensor connection: 2 mA
	8	-Temp <sup>2)</sup>	
Max. connectable cross-section: 1.5 mm <sup>2</sup>			

<sup>1)</sup> AO xV: analog output voltage; AO xC: Analog output current

<sup>2)</sup> Accuracy of the temperature measurement:

- KTY: ±7 °C (including evaluation)
- PT1000: ±5 °C (PT1000 tolerance class B according to EN 60751 including evaluation)
- PTC: ±5 °C (including evaluation)



### WARNING

#### Electric shock in the event of voltage flashovers at the temperature sensor

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.


- Use temperature sensors that fully comply with the specifications of the safety isolation.

<b>NOTICE</b>
<b>Damage or malfunctions through impermissible voltage values</b>
If the back EMF is impermissible then damage and malfunctions may occur on the components.
<ul style="list-style-type: none"> <li>The back EMF at the outputs may only be in the range between -15 V and +15 V.</li> </ul>

<b>NOTICE</b>
<b>Damage to motor in the event of incorrectly connected KTY temperature sensor</b>
If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.
<ul style="list-style-type: none"> <li>Connect a KTY temperature sensor with the correct polarity.</li> </ul>

**X540: Joint auxiliary voltage for the digital inputs**

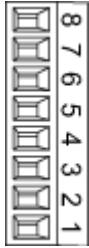Table 4- 23 Terminal block X540

Connector	Terminal	Designation	Technical data
	8	+24 V	Voltage: +24 V DC Max. total load current of +24 V auxiliary voltage for terminals X540 and X541 combined: 150 mA Continuously short-circuit proof
	7	+24 V	
	6	+24 V	
	5	+24 V	
	4	+24 V	
	3	+24 V	
	2	+24 V	
	1	+24 V	
Max. connectable cross-section: 1.5 mm <sup>2</sup>			


**Note**

**Use of the power supply**

This voltage supply is only for powering the digital inputs.

## X541: 4 non-floating digital inputs/outputs

Table 4- 24 Terminal block X541

Connector	Terminal	Designation <sup>1)</sup>	Technical data
	6	M	<b>Auxiliary voltage:</b> Voltage: +24 V DC Max. total load current of +24 V auxiliary voltage for terminals X540 and X541 combined: 150 mA  <b>As input:</b> Voltage: -3 ... 30 V Power consumption, typical: 10 mA at 24 V DC Input delay: - for "0" to "1": Typ. 50 µs - For "1" to "0": Typ. 100 µs  <b>As output:</b> Voltage: 24 V DC Max. load current per output: 500 mA Max. total current of outputs (including currents to the inputs): 100 mA / 1 A (can be parameterized) Continuously short-circuit proof  <b>Output delay:</b> - For "0" to "1": Typ. 150 µs at 0.5 A resistive load (500 µs maximum) - For "1" to "0": Typically 50 µs at 0.5 A resistive load  <b>Switching frequency:</b> - For resistive load: Max. 100 Hz - For inductive load: Max. 0.5 Hz - For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	5	DI/DO 11	
	4	DI/DO 10	
	3	DI/DO 9	
	2	DI/DO 8	
	1	+24 V	
Max. connectable cross-section: 1.5 mm <sup>2</sup>			

<sup>1)</sup> DI/DO: Digital input/output: M: Electronics ground

### Note

#### Open input


An open input is interpreted as "low".

### Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

**X542: 2 relay outputs (two-way contact)**

Table 4- 25 Terminal block X542

Connector	Terminal	Designation <sup>1)</sup>	Technical data
	1	DO 0.NC	Contact type: Changeover contact max. load current: 8 A Max. switching voltage: 250 V <sub>AC</sub> , 30 V <sub>DC</sub> Max. Switching capacity at 250 V <sub>AC</sub> : 2000 VA (cosφ = 1) Max. Switching capacity at 250 V <sub>AC</sub> : 750 VA (cosφ = 0.4) Max. Switching capacity at 30 V <sub>DC</sub> : 240 W (resistive load) Required minimum current: 100 mA Output delay: ≤ 20 ms <sup>2)</sup> Overvoltage category: Class II acc. to EN 60664-1
	2	DO 0.COM	
	3	DO 0.NO	
	4	DO 1.NC	
	5	DO 1.COM	
	6	DO 1.NO	
Max. connectable cross-section: 2.5 mm <sup>2</sup>			

<sup>1)</sup> DO: digital output, NO: normally-open contact, NC: normally-closed contact, COM: mid-position contact

<sup>2)</sup> Depending on the parameterization and the supply voltage (P24) of the TM31

**Note****Additional protective conductor**

If 230 V AC is applied to the relay outputs, the Terminal Module must also be grounded via a 6 mm<sup>2</sup> protective conductor.

**4.10 Other connections**

Depending on the options installed, further connections have to be established, for example, dV/dt filter plus Voltage Peak Limiter, connection for external auxiliary equipment, EMERGENCY OFF button, cabinet illumination with service socket, anti-condensation heating for cabinet, contactor combination (EMERGENCY OFF / EMERGENCY STOP), thermistor motor protection unit, braking unit, PT100 evaluation unit, insulation monitor, communication modules, encoder evaluator, and NAMUR option.

Detailed information on connecting individual options with interfaces can be found on the customer DVD supplied with the device.

## 4.10.1 dv/dt filter compact plus Voltage Peak Limiter (Option L07)

### Description

The dv/dt filter compact plus Voltage Peak Limiter comprises two components: the dv/dt reactor and the voltage-limiting network (Voltage Peak Limiter), which cuts off the voltage peaks and feeds back the energy into the DC link. The dv/dt filter compact plus Voltage Peak Limiter is designed for motors for which the voltage strength of the insulation system is unknown or insufficient.

dv/dt filters compact plus Voltage Peak Limiters limit the voltage rate of rise dv/dt to values < 1600 V/ $\mu$ s - and the typical voltage peaks to the following values according to limit value curve A acc. to IEC 60034-25:2007:

- < 1400 V at 660 V <  $U_{line}$  < 690 V.

### Restrictions

The following constraints should be noted when a dv/dt filter compact plus Voltage Peak Limiter is deployed:

- The output frequency is limited to no more than 150 Hz.
- Maximum permissible motor cable lengths:
  - Shielded cable: max. 100 m
  - Unshielded cable: max. 150 m

#### NOTICE

##### Damage to the dv/dt filter compact by exceeding the maximum output frequency

The maximum permissible output frequency when a dv/dt filter compact is used is 150 Hz. The dv/dt filter compact can be damaged if the output frequency is exceeded.

- Operate the dv/dt filter compact with a maximum output frequency of 150 Hz.

#### NOTICE

##### Damage to the dv/dt filter compact during continuous operation with low output frequencies

Uninterrupted duty at an output frequency less than 10 Hz can result in thermal overload and destroy the dv/dt filter.

- When using a dv/dt filter compact plus voltage peak limiter do not operate the drive continuously with an output frequency less than 10 Hz.
- You may operate the drive for a maximum load duration of 5 minutes at an output frequency less than 10 Hz, provided that you then select an operation with an output frequency higher than 10 Hz for a period of 5 minutes.

**NOTICE**

**Damage to the dv/dt filter compact by exceeding the maximum pulse frequency**

The maximum permissible pulse frequency when using a dv/dt filter compact is 2.5 kHz. The dv/dt filter compact can be damaged if the pulse frequency is exceeded.

- When using the dv/dt filter compact, operate the Motor Module with a maximum pulse frequency of 2.5 kHz.

**NOTICE**

**Damage to the dv/dt filter compact if it is not activated during commissioning**

The dv/dt filter compact may be damaged if it is not activated during commissioning.

- Activate the dv/dt filter compact during commissioning using parameter p0230 = 2.

**NOTICE**

**Damage to the dv/dt filter compact if a motor is not connected**

dv/dt filters compact which are operated without a motor being connected can be damaged or destroyed.

- Never operate a dv/dt filter compact connected to the Motor Module without a connected motor.

**Note**

**Setting pulse frequencies**

It is permissible to set pulse frequencies in the range between the rated pulse frequency and the relevant maximum pulse frequency when a dv/dt filter compact plus Voltage Peak Limiter is deployed. "Current derating as a function of the pulse frequency" of the converter must be observed here (refer to the Technical data).

## Commissioning

During commissioning, the dv/dt filter compact plus Voltage Peak Limiter must be logged on using STARTER or the AOP30 operator panel (p0230 = 2).

**Note**

**Reset when establishing the factory setting**

When the factory settings are restored, parameter p0230 is reset. The parameter must be reset if the system is commissioned again.



## 4.10.2 du/dt filter plus Voltage Peak Limiter (option L10)

### Description

The du/dt filter plus Voltage Peak Limiter comprises two components: the du/dt reactor and the Voltage Peak Limiter, which cuts off the voltage peaks and returns the energy to the DC link.

The du/dt filters plus Voltage Peak Limiter must be used for motors for which the proof voltage of the insulation system is unknown or insufficient. Standard motors of the 1LA5, 1LA6 and 1LA8 series only require them at supply voltages  $> 500 \text{ V} + 10\%$ .

The dv/dt filter plus Voltage Peak Limiter limits the rate of voltage rise to values  $< 500 \text{ V}/\mu\text{s}$  and the typical voltage peaks to the values below (with motor cable lengths of  $< 150 \text{ m}$ ):

- $< 1250 \text{ V}$  at  $660 \text{ V} < U_{\text{line}} < 690 \text{ V}$ .

When using option L10, for each Motor Module, an additional cabinet is required with a width of 600 mm.

### Restrictions

The following restrictions should be noted when a du/dt filter plus Voltage Peak Limiter is used:

- The output frequency is limited to a maximum of 150 Hz.
- Maximum permissible motor cable lengths:
  - Shielded cable: max. 300 m
  - Unshielded cable: max. 450 m

#### NOTICE

##### Damage to the du/dt filter by exceeding the maximum output frequency

The maximum permissible output frequency when using a du/dt filter is 150 Hz. The du/dt filter can be damaged if the output frequency is exceeded.

- Operate the dv/dt filter with a maximum output frequency of 150 Hz.

#### NOTICE

##### Damage to the du/dt filter by exceeding the maximum pulse frequency

The maximum permissible pulse frequency when using a du/dt filter is 2.5 kHz. The du/dt filter can be damaged if the pulse frequency is exceeded.

- When using the dv/dt filter, operate the Power Module with a maximum pulse frequency of 2.5 kHz.

**NOTICE**

**Damage to the du/dt filter if it is not activated during commissioning**

The du/dt filter may be damaged if it is not activated during commissioning.

- Activate the du/dt filter during commissioning using parameter p0230 = 2.

**NOTICE**

**Damage to the du/dt filter if a motor is not connected**

du/dt filters which are operated without a motor being connected can be damaged or destroyed.

- Never operate a du/dt filter connected to the Power Module without a connected motor.

**Note**

**Setting pulse frequencies**

It is permissible to set pulse frequencies in the range between the rated pulse frequency and the maximum pulse frequency when a du/dt filter plus Voltage Peak Limiter is used. When so doing, take into account the "Current derating as a function of the pulse frequency; see Technical data.

## Commissioning

During commissioning, the dv/dt filter plus Voltage Peak Limiter must be logged on using STARTER or the AOP30 operator panel (p0230 = 2).

**Note**

**Reset when establishing the factory setting**

When the factory settings are restored, parameter p0230 is reset. The parameter must be reset if the system is commissioned again.

### 4.10.3 Connection for External Auxiliary Equipment (Option L19)

#### Description

This option includes an outgoing circuit fused at max. 10 A for external auxiliary equipment (e.g. separately-driven fan for motor). The voltage is tapped at the converter input upstream of the main contactor/circuit-breaker and, therefore, has the same level as the supply voltage. The outgoing circuit can be switched within the converter or externally.

#### Connecting

Table 4- 26 Terminal block X155 - Connection for external auxiliary equipment

Terminal	Designation <sup>1)</sup>	Technical data
1	L1	3 AC 660 ... 690 V
2	L2	
3	L3	
11	Contactor control	230 V AC
12		
13	NO: Checkback motor circuit breaker	230 V AC / 0.5 A
14		24 V DC / 2 A
15	NO: Checkback from contactor	240 V AC / 6 A
16		
PE	PE	PE
Max. connectable cross-section: 4 mm <sup>2</sup>		

<sup>1)</sup> NO: NO contact

#### Note

##### Protection setting

The connection for external auxiliary equipment must be set in accordance with the connected consumer (-Q155).

#### Circuit proposal for controlling the auxiliary contactor from within the converter

##### Circuit proposal as standard

A free digital output of the Control Unit can be used to control the auxiliary contactor; it uses a line-side relay to control auxiliary contactor -K155.

Signal r0899.11 (pulses enabled) must also be interconnected to the selected digital output of the Control Unit.

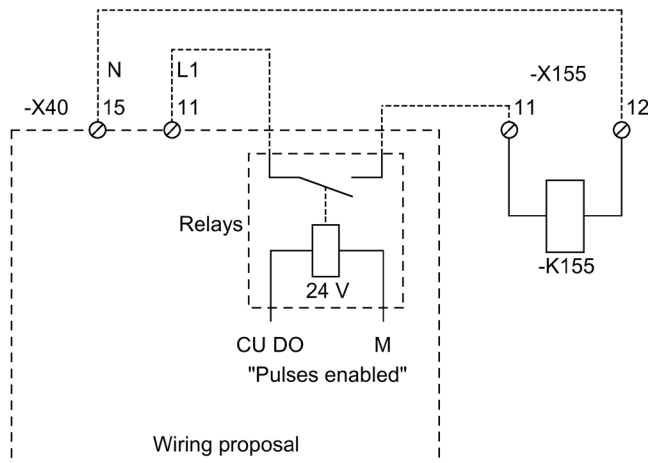


Figure 4-23 Circuit proposal for control via the Control Unit

**Circuit proposal with customer terminal module TM31 (option G60)**

The following circuit proposal can be used to control the auxiliary contactor for example. The "Pulses enabled" signal at terminal-X542 of the TM31 is then no longer available for other purposes.

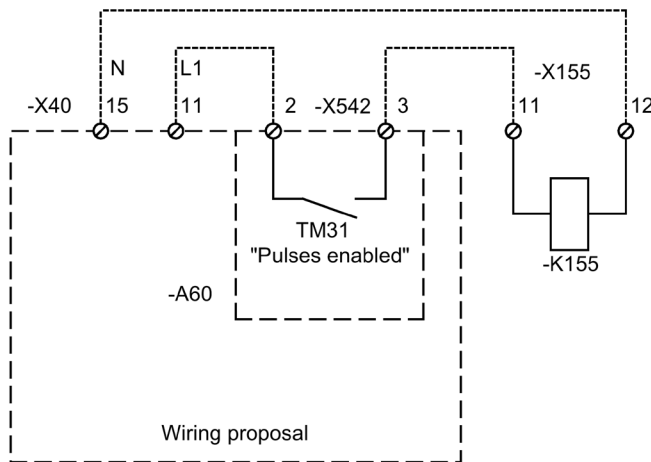


Figure 4-24 Circuit proposal for control via the TM31

**Note**

**Additional protective conductor**

If 230 V AC is applied to the relay outputs, the TM31 must also be grounded via a 6 mm<sup>2</sup> protective conductor.

## 4.10.4 Overvoltage limitation (option L21)

### Description

The option includes the installation of surge arresters and upstream fuses for each line phase. The signaling contacts of the surge arresters are connected in series for monitoring purposes and routed to a customer interface.

### Safety instruction

#### Note

**Remove the connection clip for the interference-suppression capacitor for operation on an IT supply**

For operation on an IT supply, the connection clip for the interference suppression capacitor must be removed (see "Electrical installation / removing the connection clip for the interference suppression capacitor for operation on a non-grounded supply system (IT supply)").

## X700 - monitoring the surge arresters

Table 4- 27 Terminal block X700 Monitoring the surge arresters

Terminal	Designation <sup>1)</sup>	Technical data
1	NC	Max. load current: - at 24 V DC: 1 A - At 230 VAC: 0.5 A
4	NC	
Max. connectable cross-section: 2.5 mm <sup>2</sup>		

<sup>1)</sup> NC: normally-closed contact

### Reason why the monitoring responded

After the monitoring function responds at terminal block X700:1/4, the cause must be identified:

- Surge arresters (-A703, -A704-, A705) have a display showing the operating state.
- The upstream fuses (-Q700) are monitored using phase failure monitoring (-B700), which has an LED status display. In the event of a fault as a result of a defective fuse, the fuses (-Q700) must be checked, and if required, replaced after removing the fault.

### Replacement of the surge arresters

In the event of a fault, the surge arresters must be replaced.

### 4.10.5 EMERGENCY OFF pushbutton installed in the cabinet door (option L45)

#### Description

The EMERGENCY OFF pushbutton with protective collar is integrated in the door of the cabinet unit. The contacts of the pushbutton are connected to terminal block –X120. In conjunction with options L57, L59, and L60, EMERGENCY OFF of category 0 and EMERGENCY STOP of category 1 can be activated.

A braking unit may be necessary to achieve the required shutdown times.

#### Note

##### Pressing the EMERGENCY OFF button

When the EMERGENCY OFF pushbutton is pressed, the motor coasts to a standstill and the main motor voltage is disconnected (to EN 60204-1 (VDE 0113)) in conjunction with options L57, L59 and L60. Auxiliary voltages (e.g. for separately-driven fans or anti-condensation heating) may still be present. Certain sections of the converter (e.g., the closed-loop controller or any auxiliary equipment) may also remain live. If all the voltages have to be completely disconnected, the EMERGENCY OFF pushbutton must be integrated in a protection concept, which must be implemented on the line side. For this purpose, an NC contact is installed at terminal block -X120.

#### Connecting

Table 4- 28 Terminal block X120 –checkback contact "EMERGENCY OFF pushbutton in the cabinet door"

Terminal	Designation <sup>1)</sup>	Technical data
1	NC 1	Checkback contacts of EMERGENCY OFF pushbutton in cabinet door Max. load current: 10 A Max. switching voltage: 250 V AC Max. switching capacity: 250 VA Required minimum load: ≥ 1 mA
2		
3	NC 2 <sup>2)</sup>	
4		
Max. connectable cross-section: 4 mm <sup>2</sup>		

1) NC: Normally-closed contact

2) Factory setting in converter for options L57, L59, and L60

## 4.10.6 Cabinet illumination with service socket (option L50)

### Description

With option L50, cabinet lighting and an additional service socket outlet is included for grounding plug (connector type F) according to CEE 7/4. The power supply for the cabinet lighting and the service socket is external and must be fuse-protected for max. 10 A.

The cabinet lighting consists of an LED hand lamp with On/Off switch and with magnetic fasteners on an approx. 3 m long connecting cable. In the as-delivered condition, the flashlight is already positioned at the defined marks in the cabinet door and the connecting cable is wound on the holder.

---

### Note

During operation of the cabinet unit, the cabinet lighting must remain attached in its position on the cabinet door. The position on the cabinet door is marked by an adhesive label. The connecting cable must be wound on its holder.

---

### Connection

Table 4- 29 Terminal block X390 – connection for cabinet lighting with service socket

Terminal	Designation	Technical data
1	L1	230 V AC power supply
2	N	
3	PE	Protective conductor
Max. connectable cross-section: 4 mm <sup>2</sup>		

### 4.10.7 Cabinet anti-condensation heating (option L55)

#### Description

The anti-condensation heating is used at low ambient temperatures and high levels of humidity to prevent condensation forming.

One 100 W heater is installed for a 400 mm and 600 mm cabinet panel, and two 100 W heaters for an 800/1000 and 1200 mm cabinet panel. The power supply (110 to 230 V AC) must be provided externally and protected with a fuse of up to 16 A.



**! WARNING**

**Dangerous voltage as a result of external auxiliary supply**

When the external supply voltage for the cabinet anti-condensation heating is connected, dangerous voltages are present in the cabinet unit even when the main switch is open. Death or serious injury can result when live parts are touched.

- Observe the general safety rules when working on the device.



**! CAUTION**

**Burns caused by hot cabinet anti-condensation heating surfaces**

In operation, the cabinet anti-condensation heating can reach high temperatures, which can cause burns if touched.

- Allow the cabinet anti-condensation heating to cool down before starting any work.
- Use the appropriate personnel protection equipment, e.g. gloves.

**Note**

**Provide a temperature controlled supply voltage**

The supply voltage can be provided using a temperature control to avoid unnecessarily operating the anti-condensation heating for higher ambient temperatures.

#### Connecting

Table 4- 30 Terminal block X240 – connection for cabinet anti-condensation heating

Terminal	Designation	Technical data
1	L1	110 to 230 V AC Power supply
2	N	
3	PE	Protective conductor
Max. connectable cross-section: 4 mm <sup>2</sup>		



## 4.10.8 EMERGENCY OFF category 0; 230 V AC or 24 V DC (option L57)

### Description

EMERGENCY OFF category 0 for uncontrolled stop to EN 60204-1. This function disconnects the cabinet unit from the power supply via the line contactor, while bypassing the electronics by means of a safety combination according to EN 60204-1. The motor coasts down. To prevent the main contactor from switching under load, an OFF2 is triggered simultaneously.

No additional wiring is needed when using the EMERGENCY OFF pushbutton.

The operational status is indicated by means of three LEDs (-K120).

When delivered, the type with 230 V AC pushbutton circuit is set.

### Note

#### Pressing the EMERGENCY OFF button

When the EMERGENCY OFF pushbutton is pressed, an uncontrolled stop of the motor takes place and the main motor voltage is disconnected in accordance with EN 60204-1. Auxiliary voltages (e.g. for separately-driven fans or anti-condensation heating) may still be present. Certain sections of the converter (e.g., the closed-loop controller or any auxiliary equipment) also remain live. If all the voltages have to be completely disconnected, the EMERGENCY OFF pushbutton must be integrated in a protection concept, which must be implemented on the line side. For this purpose, an NC contact is installed at terminal -X120.

### Connecting

Table 4- 31 Terminal block X120 – connection for EMERGENCY OFF category 0, 230 V AC and 24 V DC

Terminal	230 V AC and 24 V DC button circuit
4	Jumper wired in the factory
5	
7	Loop in EMERGENCY OFF button from line side, remove jumpers 7-8 and connect button
8	
9	Jumper wired in the factory
10	
11	Jumper wired in the factory
14	
12	Jumper wired in the factory
13	
15	"On" for monitored start: Remove jumpers 15–16 and connect button
16	
17	NO <sup>1)</sup> : Checkback "trip safety combination"
18	
Max. connectable cross-section: 4 mm <sup>2</sup>	

<sup>1)</sup> NO: NO contact

### Reconnection to the 24 V DC Button Circuit

When using the 24 V DC pushbutton circuit, you must remove the following jumpers at terminal block -X120:

- 4-5, 9-10, and 11-14

You must also insert the following jumpers at terminal block -X120:

- 4-11, 5-10, and 9-14

### Diagnostics

Messages output during operation and in the event of faults (meaning of LEDs on -K120) are described in the "Additional Operating Instructions" of the Operating Instructions.

## 4.10.9 EMERGENCY STOP category 1; 230 V AC (option L59)

### Description

EMERGENCY STOP category 1 for controlled stop according to EN 60204-1. The function includes rapid shutdown of the drive via fast stop at a ramp-down ramp to be parameterized. Then the cabinet unit is disconnected from the power supply via the line contactor, while bypassing the electronics by means of a safety combination according to EN 60204-1. The operational status and function are indicated by a total of eight LEDs (-K120, -K121).

### Connecting

Table 4- 32 Terminal block X120 – connection for EMERGENCY STOP category 1 (230 V AC)

Terminal	Technical data
4	Jumper wired in the factory
5	
7	Loop in EMERGENCY OFF button from line side, remove jumpers 7-8 and connect button
8	
9	Jumper wired in the factory
10	
11	Jumper wired in the factory
14	
12	Jumper wired in the factory
13	
15	"On" for monitored start: Remove jumpers 15–16 and connect button.
16	
17	NO <sup>1)</sup> : Checkback "trip safety combination"
18	
Max. connectable cross-section: 4 mm <sup>2</sup>	

<sup>1)</sup> NO: NO contact

## Setting

The time (0.5 to 30 s) set for the contactor safety combination (-K121) should be longer than (or at least equal to) the time that the drive requires to reach a standstill via the quick stop (OFF3 ramp-down time, p1135), as the converter is disconnected from the power supply when the time expires (at -K121).

## Diagnostics

Messages output during operation and in the event of faults (meaning of LEDs on -K120, -K121) are described in the "Additional Operating Instructions" of the Operating Instructions.

### 4.10.10 EMERGENCY STOP category 1; 24 V DC (option L60)

#### Description

EMERGENCY STOP category 1 for controlled stop according to EN 60204-1. The function includes rapid shutdown of the drive via fast stop at a ramp-down ramp to be parameterized. Then the cabinet unit is disconnected from the power supply via the line contactor, while bypassing the electronics by means of a safety combination according to EN 60204-1. The operational status and function are indicated by five LEDs (-K120).

#### Connecting

Table 4- 33 Terminal block X120 – connection for EMERGENCY STOP category 1 (24 V DC)

Terminal	Technical data
4	Jumper wired in the factory
11	
5	Jumper wired in the factory
10	
7	Loop in EMERGENCY OFF button from line side, remove jumpers 7-8 and connect button
8	
9	Jumper wired in the factory
14	
12	Jumper wired in the factory
13	
15	"On" for monitored start: Remove jumpers 15–16 and connect button.
16	
17	NO <sup>1)</sup> : Checkback "trip safety combination"
18	
Max. connectable cross-section: 4 mm <sup>2</sup>	

<sup>1)</sup> NO: NO contact

## Setting

The time (0.5 to 30 s) set for the contactor safety combination (-K120) should be longer than (or at least equal to) the time that the drive requires to reach a standstill via the quick stop (OFF3 ramp-down time, p1135), as the converter is disconnected from the power supply when the time expires (at -K120).

## Diagnostics

Messages output during operation and in the event of faults (meaning of LEDs on -K120) are described in the "Additional Operating Instructions" of the Operating Instructions.

### 4.10.11 Braking unit 50 kW (option L62)

#### Description

Braking units are used when regenerative energy occurs occasionally and briefly, for example when the brake is applied to the drive (EMERGENCY STOP). The braking units comprise a chopper power unit and a load resistor, which must be attached externally. To monitor the braking resistor, it has an integrated thermostatic switch, which is included in the shutdown circuit of the cabinet unit.

Table 4- 34 Load data for the braking unit

Line voltage	Continuous chopper power P <sub>DB</sub>	Peak chopper output P <sub>15</sub>	Chopper P <sub>20</sub> output P <sub>20</sub>	Chopper P <sub>40</sub> output P <sub>40</sub>	Braking resistor R <sub>B</sub>	Max. current
660 V ... 690 V	50 kW	250 kW	200 kW	100 kW	4.9 Ω ± 7.5%	255 A

#### Installing the braking resistor

The braking resistor should not be installed in the vicinity of the converter. The installation location must fulfill the following conditions:

- The braking resistors are only suitable for floor mounting.
- The maximum cable length between the cabinet unit and braking resistor is 100 m.
- Sufficient space must be available for dissipating the energy converted by the braking resistor.
- A sufficient distance from flammable objects must be maintained.
- The braking resistor must be installed as a free-standing unit.
- Objects must not be placed on or anywhere above the braking resistor.
- The braking resistor should not be installed underneath fire detection systems, since these could be triggered by the resulting heat.
- For outdoor installation, a hood must be provided to protect the braking resistor from precipitation (in accordance with degree of protection IP20).

**! WARNING**

**Fire as a result of inadequate installation**

If incorrectly installed (non-observance of the cooling clearances or inadequate clearances to flammable objects), there is the danger of fire damage with death or severe injury.

- It is essential that you maintain a cooling clearance of 200 mm on all sides of the braking resistor with ventilation grills.
- Maintain sufficient clearance to objects that can burn.



**! CAUTION**

**Burns caused by hot braking resistor surfaces**

In operation, the braking resistor can reach high temperatures, which can cause burns if touched.

- Allow the braking resistor to cool down before starting any work.
- Use the appropriate personnel protection equipment, e.g. gloves.

Table 4- 35 Dimensions of the braking resistors

	Unit	50 kW resistor (option L62)
Width	mm	810
Height	mm	1325
Depth	mm	485

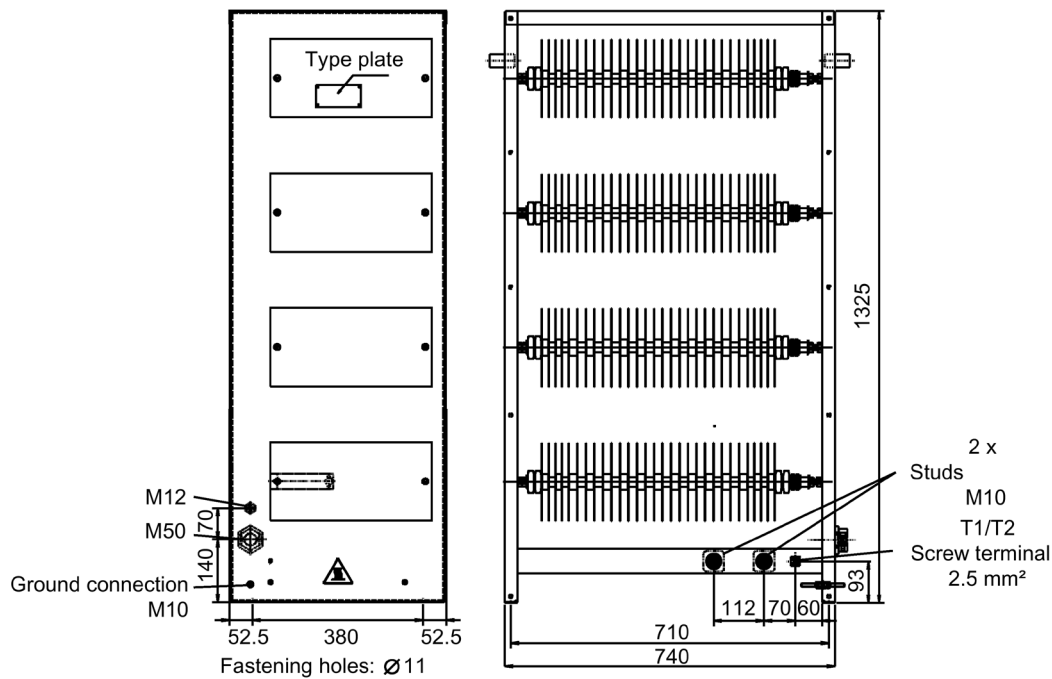



Figure 4-25 Dimension drawing for braking resistor (50 kW)

## Connecting the braking resistor

 <b>WARNING</b>
<b>Fire caused by ground fault / short-circuit for non-protected connections to the braking resistor</b>
<p>Non-protected connections to the braking resistor can cause fire with smoke in the event of a short-circuit or ground fault that can cause severe injuries or death.</p> <ul style="list-style-type: none"> <li>• Route the cables to the braking resistor so that a ground fault or short-circuit can be ruled out.</li> <li>• Comply with local installation regulations that enable this fault to be ruled out.</li> <li>• Protect the cables from mechanical damage.</li> <li>• Apply one of the following measures: <ul style="list-style-type: none"> <li>– Use cables with double insulation.</li> <li>– Observe adequate clearances, e.g. through the use of spacers.</li> <li>– Route the cables in separate cable ducts or pipes.</li> </ul> </li> </ul>

<b>NOTICE</b>
<b>Material damage when exceeding the maximum permitted cable length</b>
<p>Exceeding the maximum permitted cable length to the braking resistor can cause material damage in the event of component failure.</p> <ul style="list-style-type: none"> <li>• Observe the maximum cable length between the cabinet unit and the braking resistor of 100 m.</li> </ul>

The -X5 terminal block for connection of the external braking resistor is located in the left Basic Line Module (+H.A29).

Table 4- 36 Terminal block -X5 – connection for external braking resistor

Terminal	Description of function
1	Braking resistor connection
2	Braking resistor connection
Max. connectable cross-section: 70 mm <sup>2</sup>	

Recommended connection cross-section: 50 mm<sup>2</sup>.


## Connecting the thermostatic switch

Table 4- 37 Installing the thermostatic switch for the external braking resistor in the monitoring circuit of the cabinet unit by connecting to the Control Unit (without option G60)

Terminal	Description of function
T1	Thermostatic switch connection: connection with terminal X132:9 (DO12)
T2	Thermostatic switch connection: connection with terminal X122:5 (DI16)
Max. connectable cross-section (due to CU320-2): 1.5 mm <sup>2</sup>	

Table 4- 38 Installing the thermostatic switch for the external braking resistor in the monitoring circuit of the cabinet unit by connecting to the TM31 (with option G60)

Terminal	Description of function
T1	Thermostatic switch connection: connection with terminal X541:1 (P24 V)
T2	Thermostatic switch connection: connection with terminal X541:5 (DI11)
Max. connectable cross-section (due to TM31): 1.5 mm <sup>2</sup>	

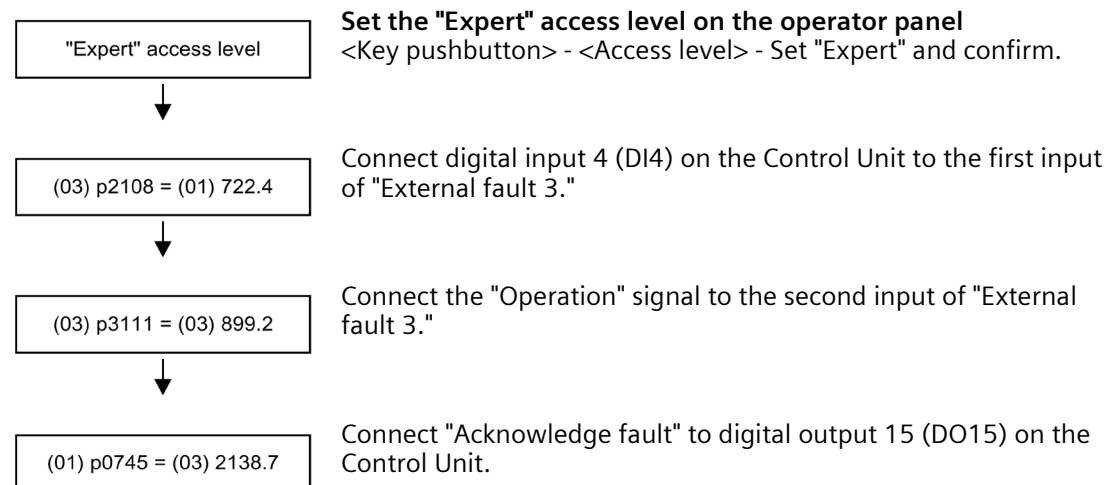
<p> <b>WARNING</b></p> <p><b>Fire when the thermostatic switch is not evaluated</b></p> <p>If the thermostatic switch is not evaluated, then there is the danger of fire damage with death or severe injury.</p> <ul style="list-style-type: none"> <li>Evaluate the thermostatic switch using the Control Unit or a higher-level control system; a shutdown must be carried out if necessary.</li> </ul>
--

#### 4.10.11.1 Commissioning

##### Commissioning

When commissioning via STARTER, parameters are assigned to "external fault 3" and acknowledged automatically when option L62 is selected.

When commissioning via AOP30, the parameter entries required have to be set subsequently.



If, during operation, an "Acknowledge fault" signal is initiated without there being a fault in the Braking Module, then this initiates an external fault 3.

You can prevent this response with the following measures:

- Link the "Acknowledge fault" signal with status bit 3 "Fault active" of status word ZSW1 (r2139.3).
- If a fault is not active, then do not initiate an "Acknowledge fault" signal.

### Cabinet unit settings

If the thermostatic switch for the braking resistor is connected, appropriate settings have to be made so that the drive is brought to a standstill if a fault occurs.

Once the device has been successfully commissioned, you have to make the following changes:

#### Connect the thermostatic switch of the braking resistor to DI 16 of the Control Unit

"Expert" access level

**Set the "Expert" access level on the operator panel**  
<Key pushbutton> - <Access level> - Set "Expert" and confirm.



(03) p2107 = (01) 0722.16

Interconnect external fault 2 to DI 16 of the Control Unit.



p1240 = 0

#### Disabling the Vdc-max controller

When the brake chopper is used, the Vdc-max controller must be switched off.

#### Connect the thermostatic switch of the braking resistor to DI 11 of the TM31 (option G60)

"Expert" access level

**Set the "Expert" access level on the operator panel**  
<Key pushbutton> - <Access level> - Set "Expert" and confirm.



(03) p2107 = (04) 4022.11

Interconnect external fault 2 to DI 11 of the TM31.



p1240 = 0

#### Disabling the Vdc-max controller

When the brake chopper is used, the Vdc-max controller must be switched off.



### 4.10.11.2 Diagnosis and duty cycles

#### Diagnosis

If the thermostat is opened due to a thermal overload on the braking resistor, fault F7861 ("External Fault 2") is triggered and the drive is switched off with OFF2.

If the brake chopper triggers a fault, fault F7862 "External fault 3" is triggered in the drive.

You can acknowledge malfunctions in the braking unit by pressing the "Acknowledge" button on the operator panel when the DC link voltage is present).

#### Duty cycles

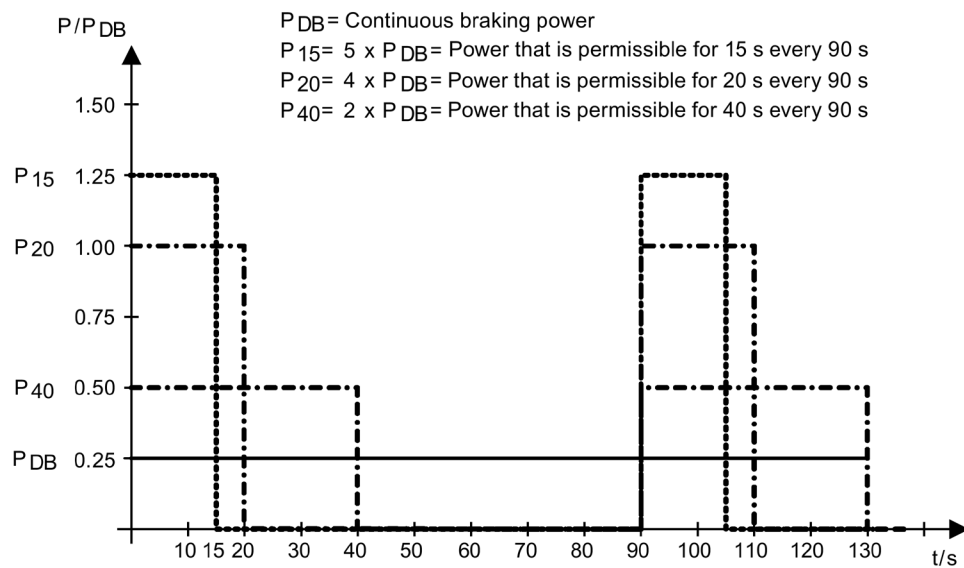


Figure 4-26 Duty cycles for the braking resistors

### 4.10.11.3 Threshold switch

The response threshold at which the braking unit is activated and the DC link voltage generated during braking are specified in the following table.


 <b>WARNING</b>
<p><b>Electric shock when operating the threshold switch</b></p> <p>Operating the threshold switch when a voltage is present can cause death or serious injury.</p> <ul style="list-style-type: none"> <li>• Only operate the threshold switch when the cabinet unit is switched off and the DC link capacitors are discharged.</li> </ul>

Table 4- 39 Response thresholds of the braking units

Rated voltage	Response threshold	Switch position	Comment
3 AC 660 ... 690 V	1070 V	1	1158 V is the default factory setting. With a supply voltage of 660 V 3 AC, the response threshold can be set to 1070 V to reduce the voltage stress on the motor and converter. This does, however, reduce the possible braking power with the square of the voltage $(1070/1158)^2 = 0.85$ . Therefore, the maximum possible braking power is 85 %.
	1158 V	2	

**Position of the threshold switch**

The Braking Module is located in the top section of the cabinet unit in the discharge air duct of the Motor Module. The position of the threshold switch can be taken from the figure below.

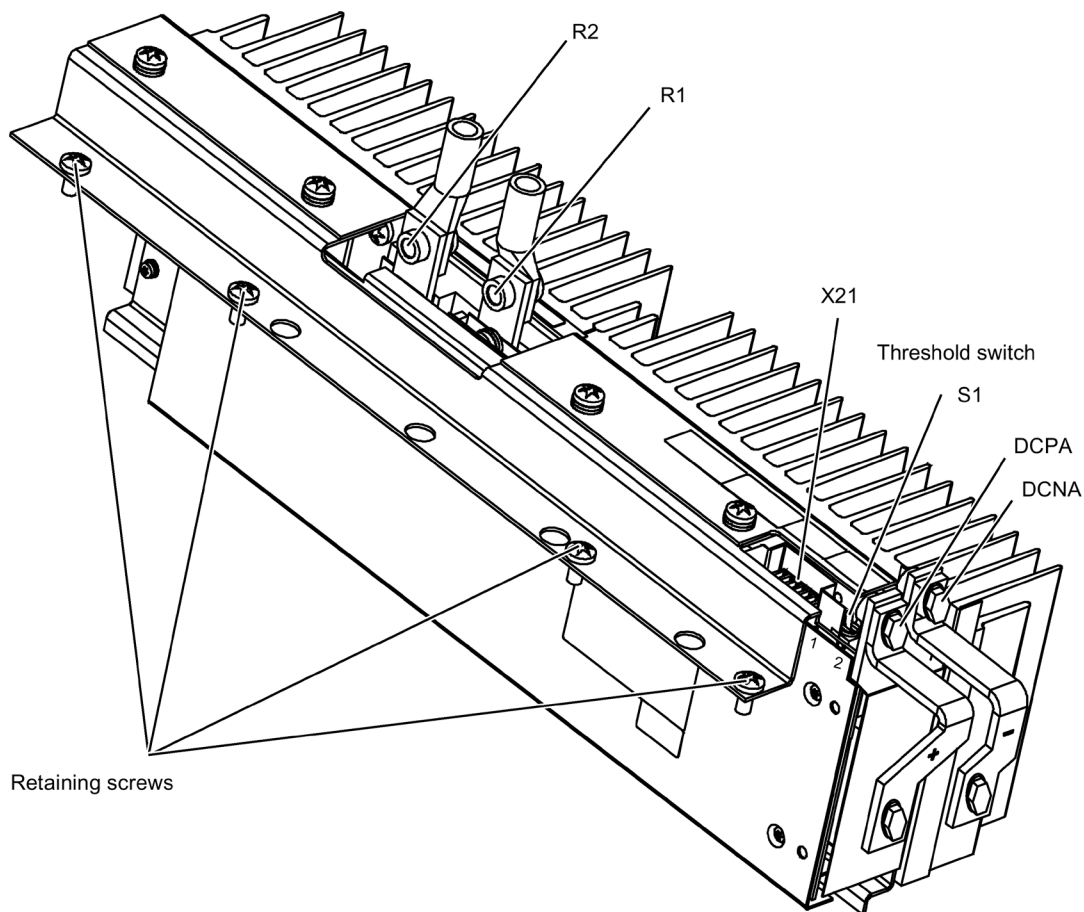


Figure 4-27 Braking Modules for frame size JX

## Position of the threshold switch

### Note

#### Switch positions

The threshold switches for the Braking Modules are positioned on the panel as follows:

- Braking Modules for frame size JX: position "1" is back; position "2" is front

## 4.10.12 Thermistor Motor Protection Unit (Option L83/L84)

### Description

This option includes the thermistor motor protection unit (with PTB approval) for PTC thermistor sensors (PTC resistor type A) for warning and shutdown. The power supply for the thermistor motor protection unit is provided inside the converter where the evaluation is also performed.

Option L83 triggers the "external alarm 1" (A7850) if a fault occurs.

Option L84 triggers the "external fault 1" (F7860) if a fault occurs.

### Connection

Table 4- 40 -B127/B125 – connection for thermistor motor protection device

Equipment designation	Description of function
-B127: T1, T2	Thermistor motor protection (alarm)
-B125: T1, T2	Thermistor motor protection (shutdown)

The PTC thermistor sensors are connected directly to terminals T1 and T2 of the evaluation unit.

Table 4- 41 Maximum cable length for the sensor circuit

Line cross-section in mm <sup>2</sup>	Line length in m
2.5	2 x 2800
1.5	2 x 1500
0.5	2 x 500

### Diagnostics

Messages output during operation and in the event of faults (meaning of LEDs on -B125, B127) are described in the Operating Instructions in the customer DVD supplied with the equipment.

### 4.10.13 PT100 Evaluation Unit (Option L86)

#### Description

---

##### Note

##### Additional operating instructions

The PT100 evaluation unit and the parameters for the measurement channels are described in the "Additional Operating Instructions".

---

The PT100 evaluation unit can monitor up to six sensors. The sensors can be connected in a two or three-wire system. With the two-wire system, inputs xT1 and xT3 must be assigned. With the three-wire system, input xT2 must also be connected to -B140, -B141 (x = 1, 2, 3). The limit values can be freely programmed for each channel. Shielded signal cables are recommended. If this is not possible, the sensor cables should at least have twisted-pair wires.

In the delivery condition, the measurement channels are divided into two groups of 3 channels each. With motors, for example, this means that three PT100s in the stator windings and two PT100s in the motor bearings can be monitored. Unused channels can be suppressed via parameters.

The output relays are integrated in the internal fault and alarm train of the cabinet unit. The power for the PT100 evaluation unit is supplied and the evaluation itself executed within the converter.

When the temperature set for "alarm" is exceeded, "external alarm 1" (A7850) is triggered. When the temperature set for "fault" is exceeded, "external fault 1" (F7860) is triggered.

#### Connecting

Table 4- 42 Terminals -B140, -B141 – connection for PT100 evaluation unit

Terminal	Technical data
-B140: 1T1-1T3	24 ... 240 V AC/DC; PT100; sensor 1; group 1
-B140: 2T1-2T3	24 ... 240 V AC/DC; PT100; sensor 2; group 1
-B140: 3T1-3T3	24 ... 240 V AC/DC; PT100; sensor 3; group 1
-B141: 1T1-1T3	24 ... 240 V AC/DC; PT100; sensor 1; group 2
-B141: 2T1-2T3	24 ... 240 V AC/DC; PT100; sensor 2; group 2
-B141: 3T1-3T3	24 ... 240 V AC/DC; PT100; sensor 3; group 2
Max. connectable cross-section: 2.5 mm <sup>2</sup>	

#### Diagnostics

Messages output during operation and in the event of faults (meaning of LEDs on -B140, B141) are described in the Operating Instructions in the customer DVD supplied with the device.

## 4.10.14 Insulation Monitor (Option L87)

### Description

In non-grounded systems (IT systems), the insulation monitor checks the entire electrically-connected circuit for insulation faults. The insulation resistance as well as all the insulation faults from the line supply to the motor in the cabinet unit are detected. Two response values (between 1 k $\Omega$  and 10 M $\Omega$ ) can be set. If a response value is undershot, an alarm is output to the terminal. A system fault is output via the signaling relay system.

When the cabinet unit is delivered, the plant configuration (one or several loads in one electrically-connected network) and the protection philosophy (immediate shutdown in the event of an insulation fault or restricted continued motion) can vary. This means that the signaling relays of the insulation monitor must be integrated by the customer in the fault and warning sequence.

### Safety information

---

#### Note

##### Number of insulation monitors

Only one insulation monitor can be used within the same electrically-connected network.

---

#### Note

##### The connection clip to the basic interference suppression module is removed in the factory

When using the insulation monitoring option, the connecting clip to the basic interference suppression module is removed in the factory and placed in the cabinet unit (see Chapter "Electrical installation/removing the connecting clip to the basic interference suppression module when connected to ungrounded line supplies (IT line system)").

---

### Controls and displays on the insulation monitor

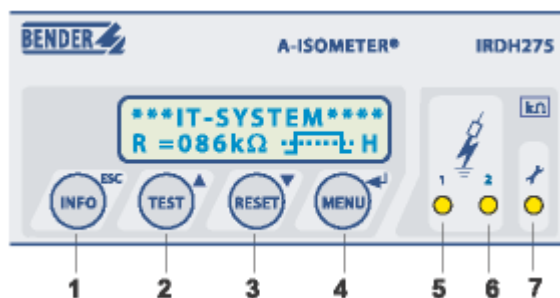


Figure 4-28 Controls and displays on the insulation monitor

Table 4- 43 Meaning of the controls and displays on the insulation monitor

Position	Meaning
1	INFO key: To request standard information/ ESC key: Back menu function
2	TEST key: Call up self-test Arrow key up: Parameter change, scroll
3	RESET button: Delete insulation and fault messages Arrow key down: Parameter change, scroll
4	Menu key: Call up menu system Enter key: Confirm parameter change
5	Alarm LED 1 lights up: Insulation fault, first alarm threshold reached
6	Alarm LED 2 lights up: Insulation fault, second alarm threshold reached
7	LED lights up: System error present

## Connecting

Table 4- 44 Connections on insulation monitor

Terminal	Technical data
A1	Supply voltage via 6 A melting fuse: 88 to 264 V AC, 77 to 286 V DC
A2	
L1	Connection of the 3 AC system to be monitored
L2	
AK	Connection to coupling device
KE	PE connection
T1	External test button
T2	External test button
R1	External reset key (NC contact or wire jumper otherwise the fault code is not stored)
R2	External reset key (NC contact or wire jumper)
F1	STANDBY with aid of F1, F2 function input:
F2	
M+	External kΩ display, analog output (0 ... 400 μA)
M-	External kΩ display, analog output (0 ... 400 μA)
A	Serial interface RS 485 (termination by means of 120 ohm resistor)
B	
11	Signaling relay ALARM 1 (mid-position contact)
12	Signaling relay ALARM 1 (NC contact)
14	Signaling relay ALARM 1 (NO contact)
21	Signaling relay ALARM 2 (mid-position contact)
22	Signaling relay ALARM 2 (NC contact)
24	Signaling relay ALARM 2 (NO contact)
Max. connectable cross-section: 2.5 mm <sup>2</sup>	

## Diagnostics

For a description of messages output during operation and in the event of faults (meaning of LEDs on -B101), consult the Operating Instructions in the customer DVD supplied with the device.

### 4.10.15 CBC10 CAN Communication Board (option G20)

#### Description

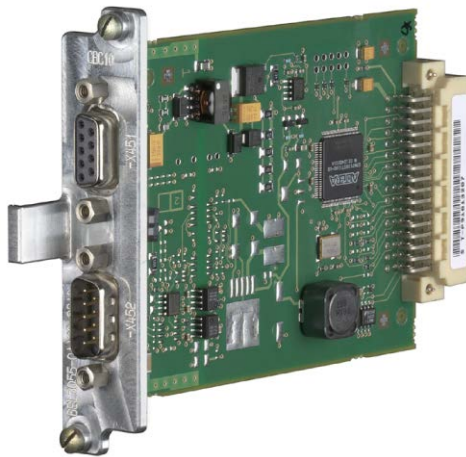


Figure 4-29 CAN CBC10 Communication Board

The CBC10 CANopen communication board (CAN Communication Board) is used to connect drives in the SINAMICS drive system to higher-level automation systems with a CAN bus.

The CANopen Option Board uses two 9-pin SUB D connectors for the connection to the CAN bus system.

The connectors can be used as inputs or outputs. Unused pins are plated through.

Among others, the following transmission rates are supported: 10, 20, 50, 125, 250, 500, 800 kBaud, and 1 Mbaud.

#### NOTICE

##### **Damage or malfunctions to the Option Board by inserting and withdrawing in operation**

Withdrawing and inserting Option Boards during operation can damage them or cause the Option Boards to malfunction.

- Only withdraw or insert Option Boards when the Control Unit is in a no voltage state.

The module is inserted in the option slot of the Control Unit at the factory.

### Interface overview


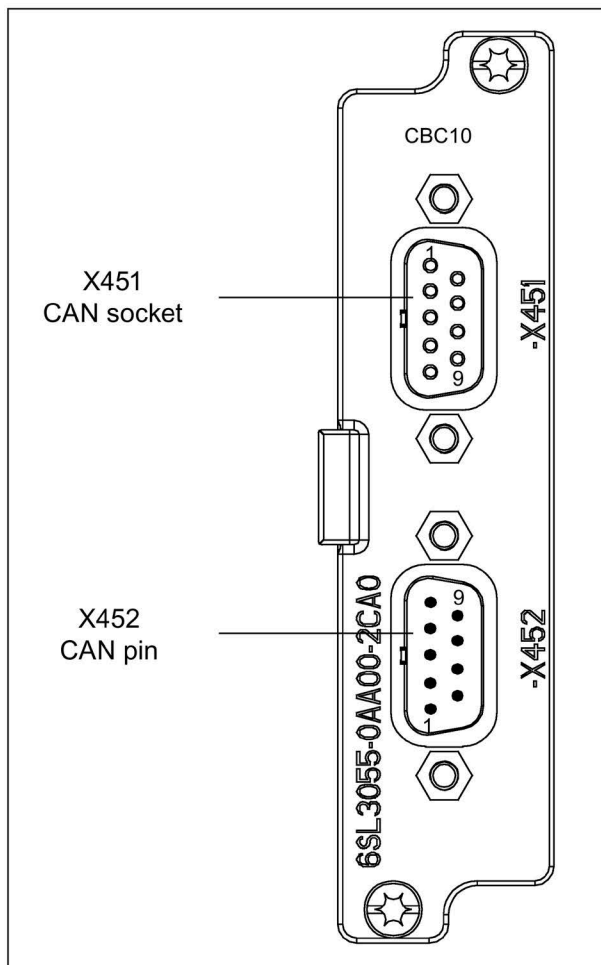


Figure 4-30 CAN CBC10 Communication Board

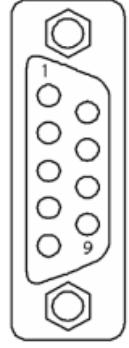

## CAN bus interface -X451

Table 4- 45 CAN bus interface -X451

Connector	Pin	Designation	Technical data
	1	Reserved, do not use	
	2	CAN_L	CAN signal (dominant low)
	3	CAN_GND	CAN ground
	4	Reserved, do not use	
	5	CAN_SHLD	Optional shield
	6	GND	CAN ground
	7	CAN_H	CAN signal
	8	Reserved, do not use	
	9	Reserved, do not use	

Connector type: 9-pin Sub-D socket

### NOTICE


#### Destruction of the CAN interface due to the wrong connector

If PROFIBUS connectors are connected to CAN bus interfaces during operation, this may lead to the CAN interfaces being destroyed.

- Do not connect PROFIBUS connectors to CAN bus interfaces.

## CAN bus interface -X452

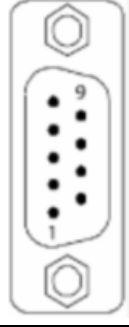Table 4- 46 CAN bus interface -X452

Connector	Pin	Designation	Technical data
	1	Reserved, do not use	
	2	CAN_L	CAN signal (dominant low)
	3	CAN_GND	CAN ground
	4	Reserved, do not use	
	5	CAN_SHLD	Optional shield
	6	GND	CAN ground
	7	CAN_H	CAN signal
	8	Reserved, do not use	
	9	Reserved, do not use	

Connector type: 9-pin SUB D connector (pins)

## Further information about communication via CAN bus

---

### Note

#### Further information

Detailed and comprehensive instructions and information for the CANopen interface can be found in the accompanying Function Manual. This manual is available as additional documentation on the accompanying customer DVD.

---

### 4.10.16 Communication Board Ethernet CBE20 (Option G33)

#### Description

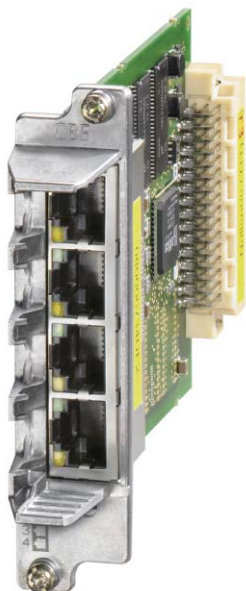


Figure 4-31 Communication Board Ethernet CBE20

The CBE20 interface module is used for communication via PROFINET / SINAMICS Link / Ethernet/IP.

The module is inserted in the option slot of the Control Unit at the factory.

4 Ethernet interfaces are available on the module. Diagnosis of the function mode and communication are possible via LEDs.

## Interface overview

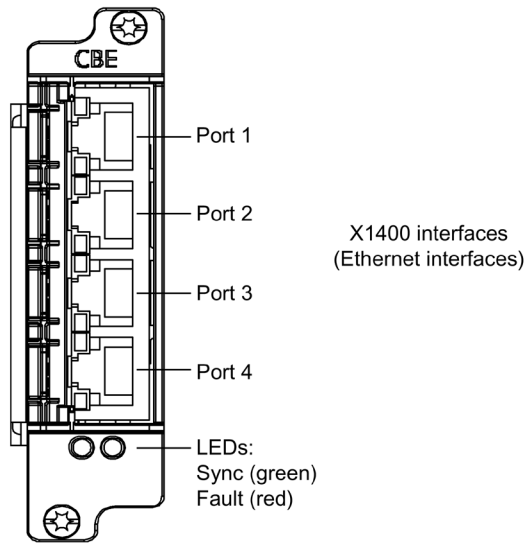


Figure 4-32 Communication Board Ethernet CBE20

## MAC address

The MAC address of the Ethernet interfaces is indicated on the upper side of the CBE20. The plate is not visible when the module is installed.

### Note

#### Note the MAC address

Remove the module from the option slot of the Control Unit and note down the MAC address so that it is available during subsequent commissioning.

## Removal/installation

### NOTICE

#### Damage or malfunctions to the Option Board by inserting and withdrawing in operation

Withdrawing and inserting Option Boards during operation can damage them or cause the Option Boards to malfunction.

- Only withdraw or insert Option Boards when the Control Unit is in a no voltage state.

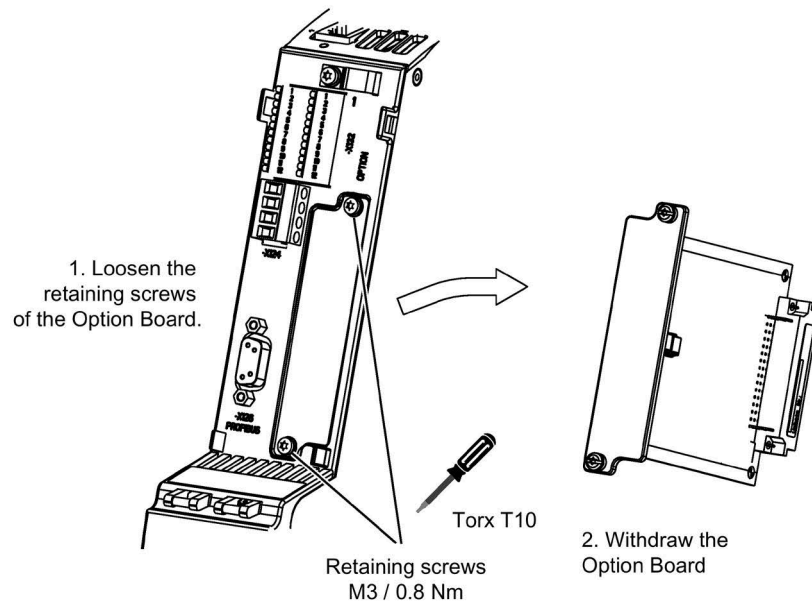
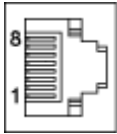


Figure 4-33 Removing the CBE20 from the option slot on the Control Unit

### X1400 Ethernet interface

Table 4- 47 Connector X1400, port 1 - 4

Connector	Pin	Signal name	Technical data
	1	RX+	Receive data +
	2	RX-	Receive data -
	3	TX+	Transmit data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	TX-	Transmit data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	Screened backshell	M_EXT	Screen, permanently connected
Connector type: RJ45 socket			

## 4.10.17 TM150 temperature sensor module (option G51)

### 4.10.17.1 Description

Terminal Module TM150 is used for sensing and evaluating several temperature sensors. The temperature is measured in a temperature range from -99 °C to +250 °C for the following temperature sensors:

- PT100 (with monitoring for wire breakage and short-circuit)
- PT1000 (with monitoring for wire breakage and short-circuit)
- KTY84 (with monitoring for wire breakage and short-circuit)
- PTC (with short-circuit monitoring)
- Bimetallic NC contact (without monitoring)

For the temperature sensor inputs, for each terminal block the evaluation can be parameterized for 1x2-wire, 2x2-wire, 3-wire or 4-wire. There is no galvanic isolation in the TM150.

A maximum of 12 temperature sensors can be connected at the TM150 Terminal Module.

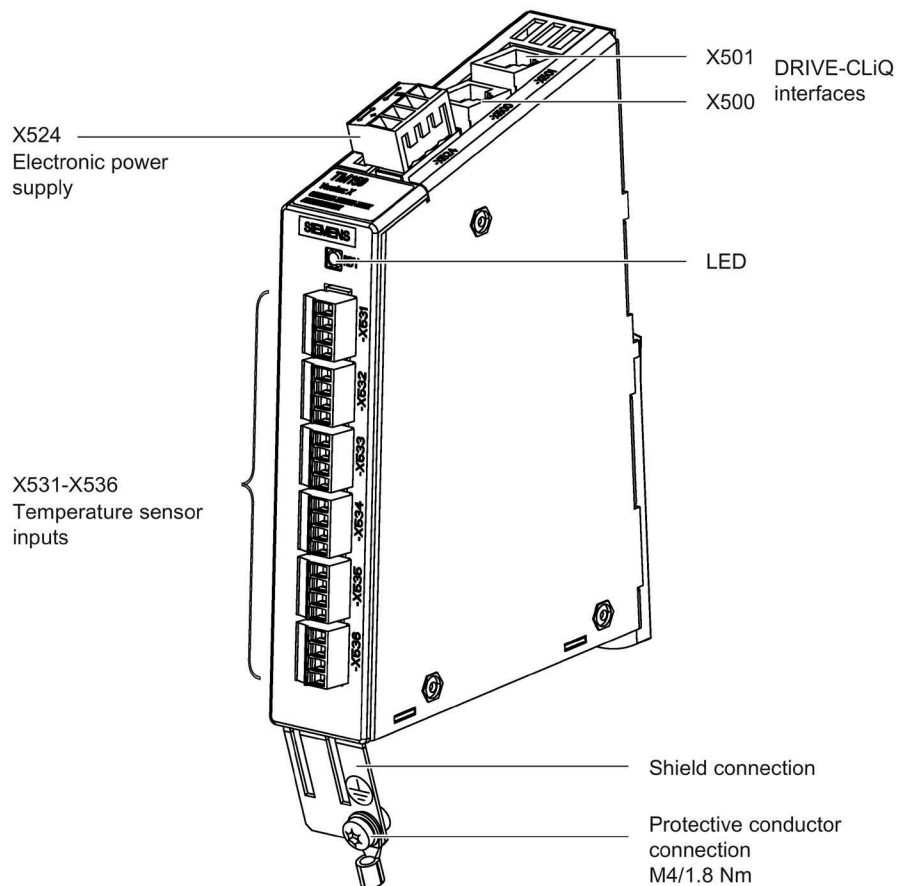
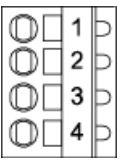


Figure 4-34 Terminal Module TM150

### 4.10.17.2 Connecting

#### Temperature sensor connections

Table 4- 48 X531-X536 temperature sensor inputs

Connector	Terminal	Function 1x2-/2x2-wire	Function 3 and 4-wire	Technical data
	1	+Temp (channel x)	+ (Channel x)	Temperature sensor connection for sensors with 1x2 wires Connection of the 2nd measurement cable for sensors with 4 wires
	2	-Temp (channel x)	- (Channel x)	Temperature sensor connection for sensors with 1x2 wires Connection of the 1st measurement cable for sensors with 3 and 4 wires
	3	+Temp (channel y)	+ I <sub>c</sub> (constant current, positive channel x)	Temperature sensor connection for sensors with 2x2, 3 and 4-wires
	4	-Temp (channel y)	- I <sub>c</sub> (constant current, negative channel x)	
Max. connectable cross-section: 1.5 mm <sup>2</sup>				

Measuring current via temperature sensor connection: approx. 0.83 mA

When connecting temperature sensors with 3 wires, a jumper must be inserted between X53x.2 and X53x.4.

Table 4- 49 Channel assignment

Terminal	Channel number [x] for 1x2, 3 and 4-wires	Channel number [y] for 2x2 wires
X531	0	6
X532	1	7
X533	2	8
X534	3	9
X535	4	10
X536	5	11



**⚠ WARNING**

**Electric shock in the event of voltage flashovers at the temperature sensor**

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Use temperature sensors that fully comply with the specifications of the safety isolation.

**NOTICE**

**Damage to the motor in the event of incorrectly connected KTY temperature sensor**

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

**NOTICE**

**Overheating of the motor through jumpering the temperature sensor connections**

Jumpering of the temperature sensor connections "+Temp" and "- Temp" results in incorrect measured results. Damage to the motor can result if the overheating is not detected.

- When using several temperature sensors, separately connect the individual sensors to "+Temp" and "-Temp".

**NOTICE**

**Device failure as a result of unshielded or incorrectly routed cables to temperature sensors**

Unshielded or incorrectly routed cables to temperature sensors can result in interference being coupled into the signal processing electronics from the power side. This can result in significant disturbance of all signals (fault messages) up to failure of individual components (destruction of the devices).

- Only use shielded cables as temperature sensor cables.
- If temperature sensor cables are routed together with the motor cable, use separately shielded cables twisted in pairs.
- Connect the cable shield to ground potential through a large surface area.

**Note**


**Incorrect temperature measured values as a result of cables with an excessively high resistance**

An excessively long cable length or an excessively small cable cross-section can falsify the temperature measurement (for a PT100, 10  $\Omega$  cable resistance can falsify the measurement result by 10%). As a consequence, excessively high measured values are output, which could lead to the motor being unnecessarily tripped prematurely.

- Use only cable lengths  $\leq 300$  m.
- For cable lengths  $>100$  m, use cables with a cross-section of  $\geq 1$  mm<sup>2</sup>.
- Align the cable resistances (software function in the TM150).

### Protective conductor connection and shield support

The following diagram shows a typical Weidmüller shield connection clamp for the shield supports.

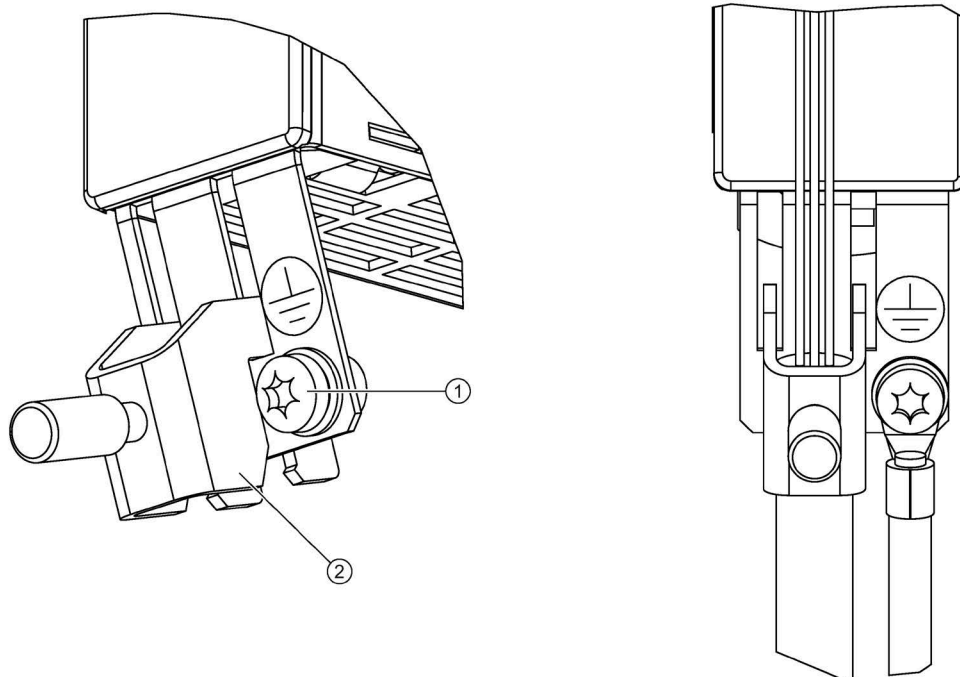

- ① Protective conductor connection M4/1.8 Nm
- ② Shield connection terminal, Weidmüller company, type: KLBÜ CO1, order number: 1753311001

Figure 4-35 Shield support and protective conductor connection of the TM150



### 4.10.17.3 Connection examples

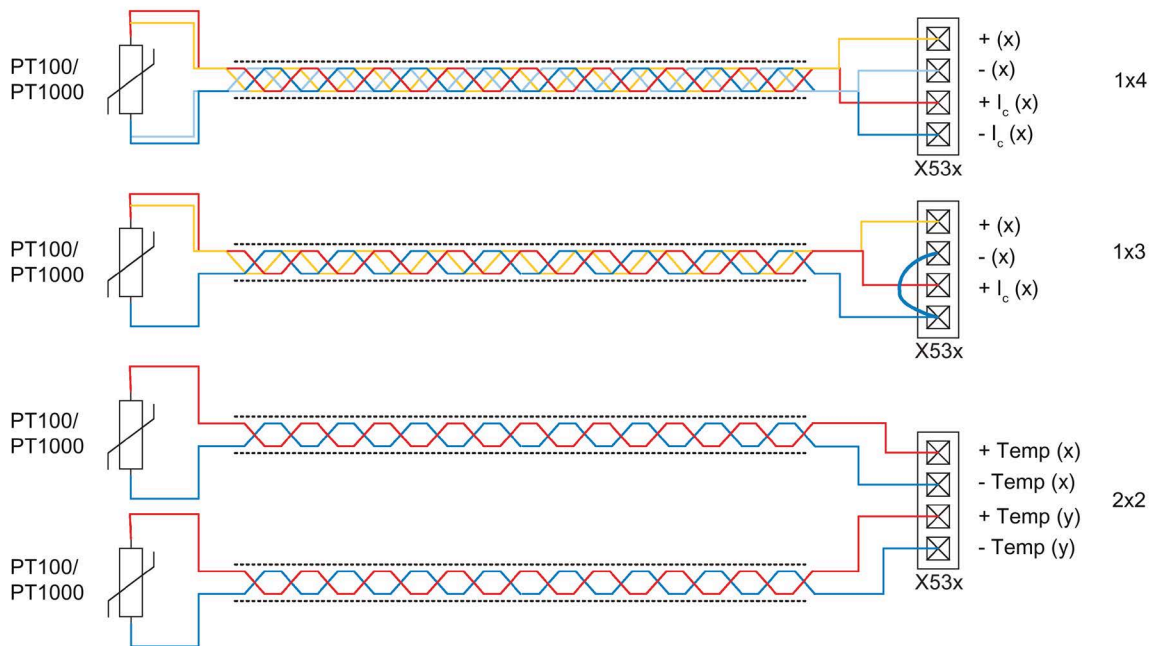


Figure 4-36 Connecting a PT100/PT1000 with 2x2, 3 and 4-wires to the temperature sensor inputs X53x of Terminal Module TM150

4.10 Other connections

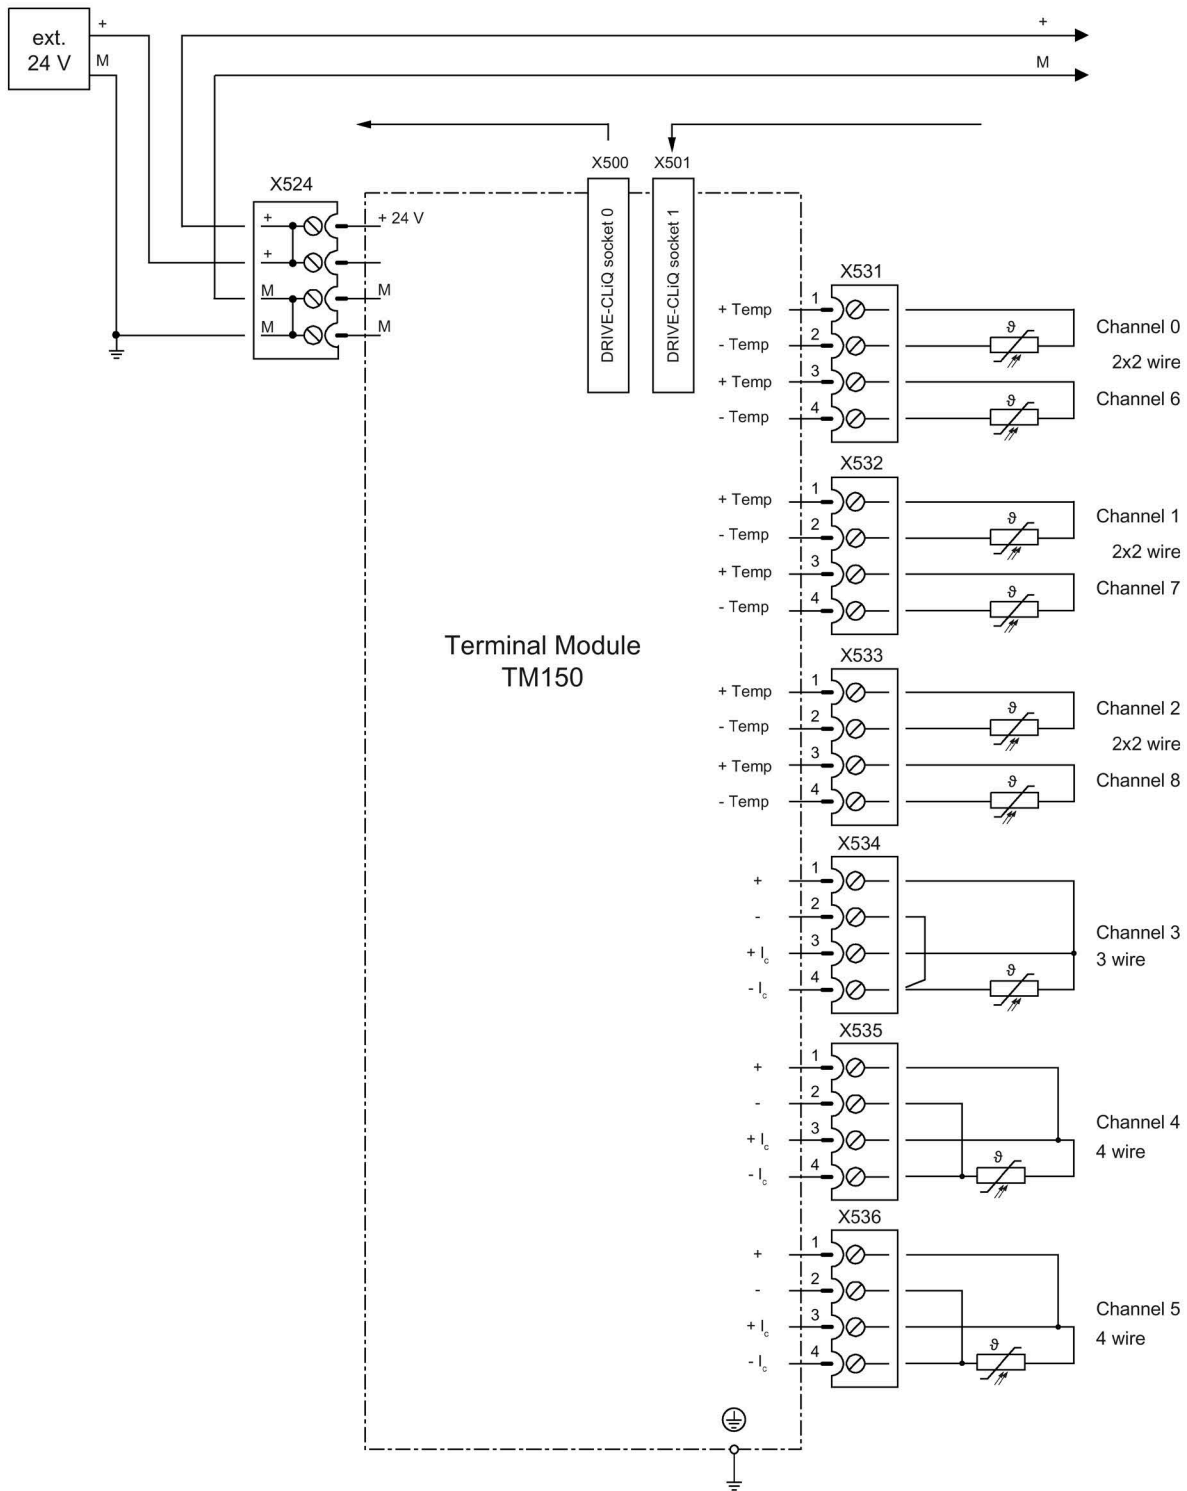


Figure 4-37 Connection example for a Terminal Module TM150

## 4.10.18 SMC30 Sensor Module Cabinet-Mounted (option K50)

### 4.10.18.1 Description

The SMC30 Sensor Module is used for determining the actual motor speed. The signals emitted by the rotary pulse encoder are converted here and made available to the closed-loop controller via the DRIVE-CLiQ interface for evaluation purposes.

In conjunction with SINAMICS G150 the following encoders can be connected to the SMC30 Sensor Module:

- TTL encoder
- HTL encoder
- KTY, PT1000 or PTC temperature sensor

Table 4- 50 Connectable encoders with supply voltage

Encoder type	X520 (SUB-D)	X521 (terminal)	X531 (terminal)	Open-circuit monitoring	Remote sense
HTL bipolar 24 V	Yes	Yes	Yes	Yes	No
HTL unipolar 24 V	Yes	Yes	Yes	No	No
TTL bipolar 24 V	Yes	Yes	Yes	Yes	No
TTL bipolar 5 V	Yes	Yes	Yes	Yes	To X520
TTL unipolar	No	No	No	No	No

Table 4- 51 Maximum signal cable lengths

Encoder type	Maximum signal cable length in m
TTL	100
HTL unipolar	100
HTL bipolar	300

---

#### Note

##### Prefer a bipolar connection

Because the physical transmission media is more robust, the bipolar connection should always be used for HTL encoders. The unipolar connection should only be used if the encoder type does not output push-pull signals.

---

#### Note

##### Only connect one encoder system

Only one encoder system may be connected to the encoder module, either at X520 or at X521/X531. The corresponding unused interface must not be used.

---

4.10 Other connections

Table 4- 52 Specification of measuring systems that can be connected

Parameters	Designation	Threshold <sup>4)</sup>	Min.	Max.	Unit
High signal level (TTL bipolar at X520 or X521/X531) <sup>1)</sup>	U <sub>Hdiff</sub>		2	5	V
Low signal level (TTL bipolar to X520 or X521/X531) <sup>1)</sup>	U <sub>Ldiff</sub>		-5	-2	V
High signal level (HTL unipolar)	U <sub>H</sub> <sup>4)</sup>	High	17	V <sub>CC</sub>	V
		Low	10	V <sub>CC</sub>	V
Low signal level (HTL unipolar)	U <sub>L</sub> <sup>4)</sup>	High	0	7	V
		Low	0	2	V
High signal level (HTL bipolar) <sup>2)</sup>	U <sub>Hdiff</sub>		3	V <sub>CC</sub>	V
Low signal level (HTL bipolar) <sup>2)</sup>	U <sub>Ldiff</sub>		-V <sub>CC</sub>	-3	V
Signal frequency	f <sub>s</sub>		-	300	kHz
Edge spacing	t <sub>min</sub>		100	-	ns
Zero pulse inactive time (before and after A=B=high)	t <sub>Lo</sub>		640	(t <sub>ALo-BHi</sub> - t <sub>Hi</sub> )/2 <sup>3)</sup>	ns
Zero pulse active time (while A=B=high and beyond)	t <sub>Hi</sub>		640	t <sub>ALo-BHi</sub> - 2 x t <sub>Lo</sub> <sup>3)</sup>	ns

- 1) Other signal levels according to the RS 422 standard.
- 2) The absolute level of the individual signals varies between 0 V and V<sub>CC</sub> of the measuring system.
- 3) t<sub>ALo-BHi</sub> is not a specified value, but is the time between the falling edge of track A and the next but one rising edge of track B.
- 4) The threshold can be set via p0405.04 (switching threshold); the setting on delivery is "Low."

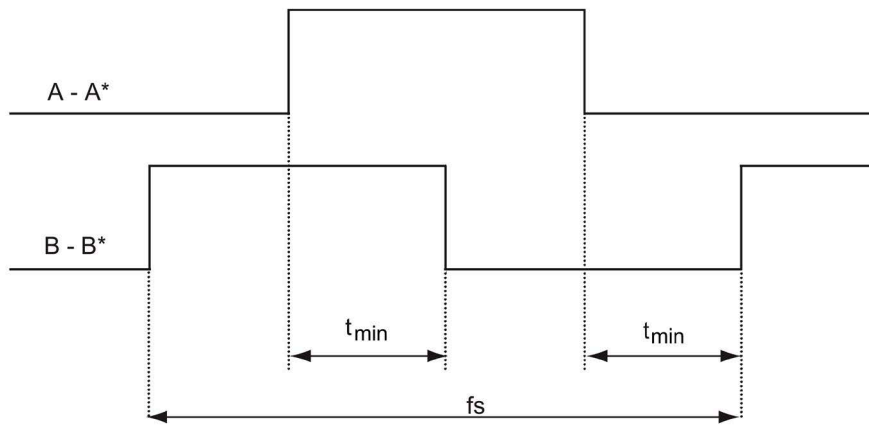


Figure 4-38 Signal characteristic of the A and B track between two edges: time between two edges with pulse encoders

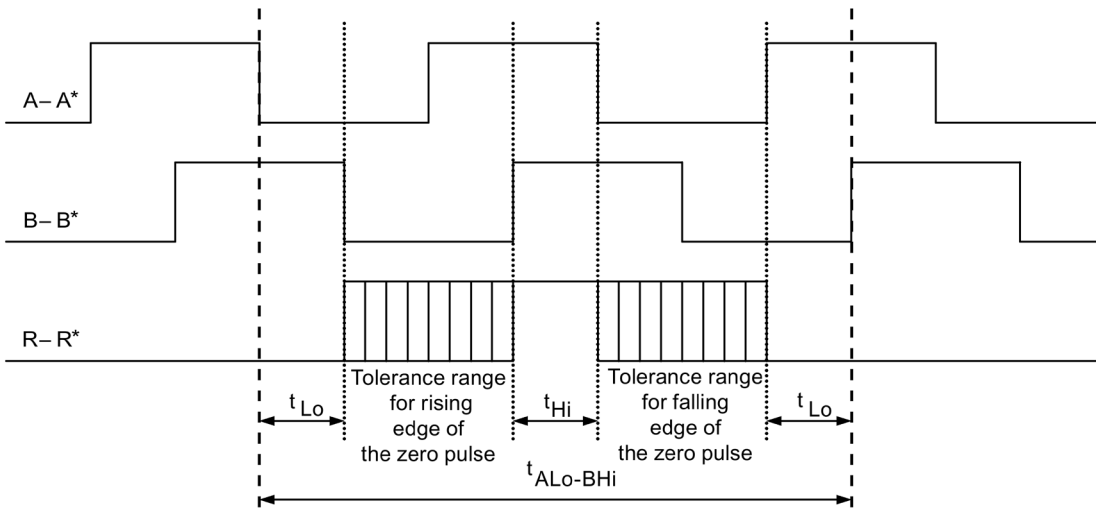


Figure 4-39 Position of the zero pulse to the track signals

For encoders with a 5-V supply at X521/X531, the cable length is dependent on the encoder current (this applies cable cross-sections of 0.5 mm<sup>2</sup>):

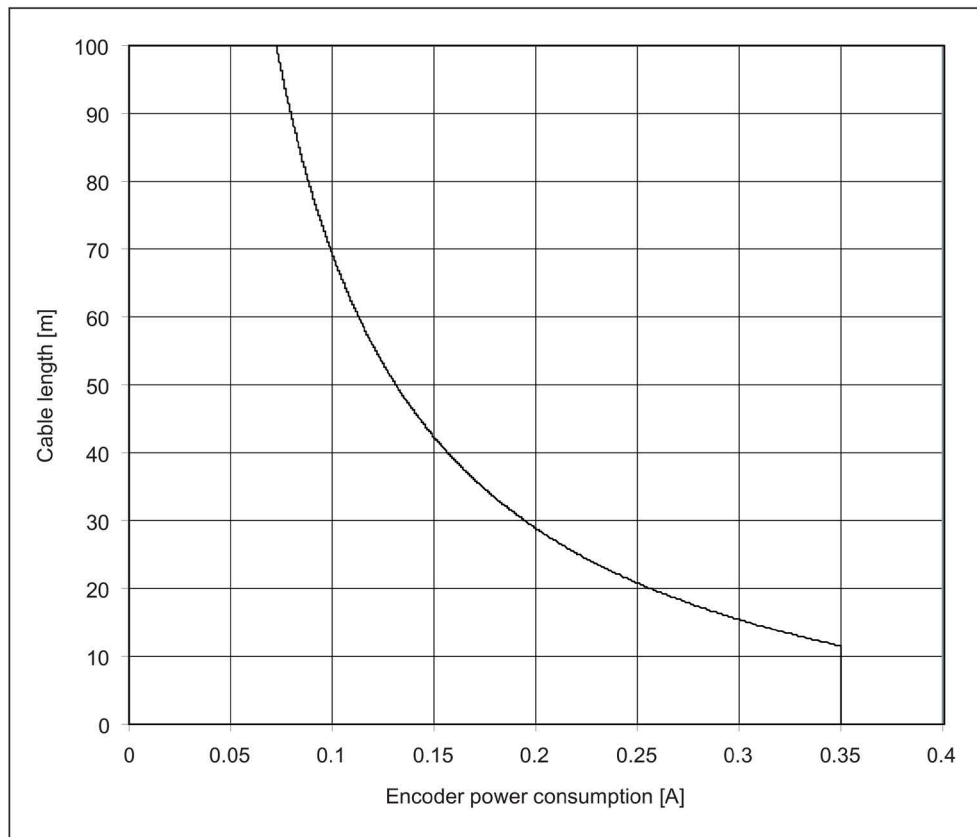


Figure 4-40 Signal cable length as a function of the encoder current consumption

For encoders without Remote Sense the permissible cable length is restricted to 100 m (reason: the voltage drop depends on the cable length and the encoder current).

4.10 Other connections

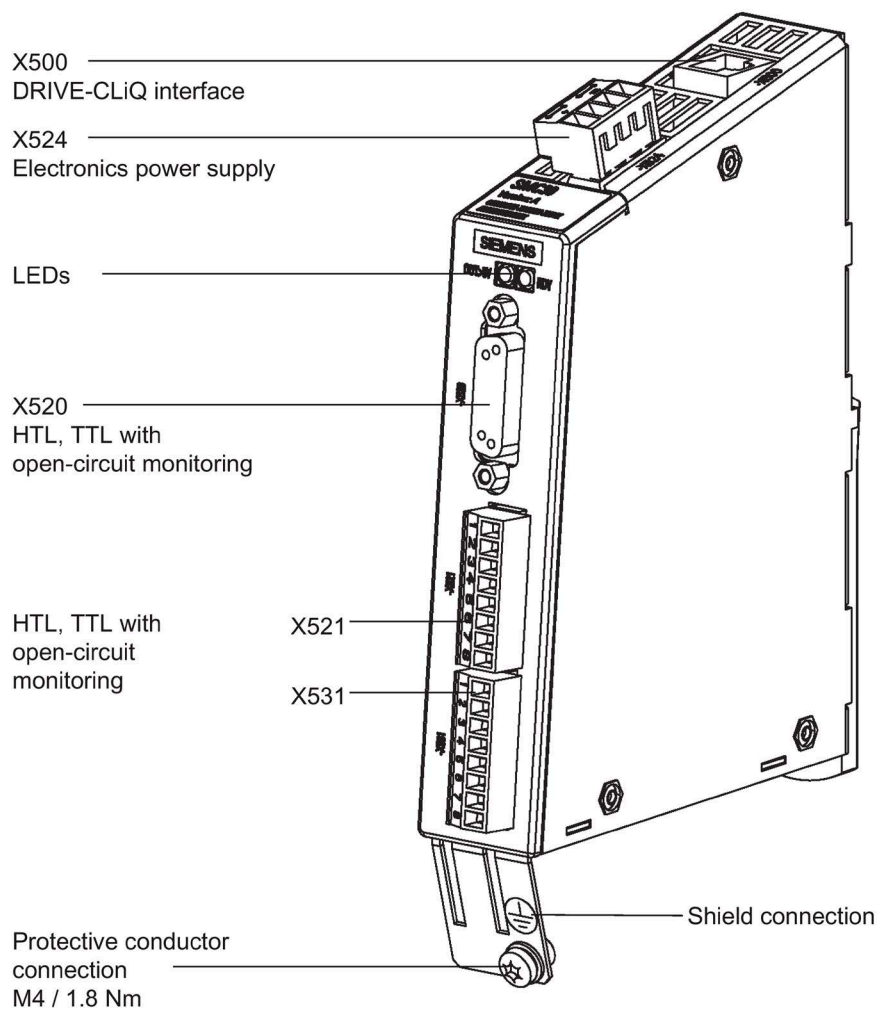
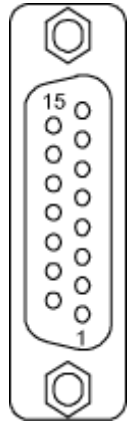


Figure 4-41 SMC30 Sensor Module

#### 4.10.18.2 Connection

#### X520: Encoder connection 1 for HTL/TTL encoder with open-circuit monitoring

Table 4- 53 Encoder connection X520

Connector	Pin	Signal name	Technical data
	1	+Temp <sup>1)</sup>	Temperature sensor connection KTY84-1C130 / PT1000 / PTC
	2	Reserved, do not use	
	3	Reserved, do not use	
	4	P encoder 5 V/24 V	Encoder supply
	5	P encoder 5 V/24 V	Encoder supply
	6	P sense	Sense input encoder power supply
	7	M encoder (M)	Ground for encoder power supply
	8	-Temp <sup>1)</sup>	Temperature sensor connection KTY84-1C130 / PT1000 / PTC
	9	M sense	Ground sense input
	10	R	Reference signal R
	11	R*	Inverse reference signal R
	12	B*	Inverse incremental signal B
	13	B	Incremental signal B
	14	A*	Inverse incremental signal A
	15	A	Incremental signal A
Connector type: 15-pin Sub-D socket			
Measuring current via temperature sensor connection: 2 mA			

- <sup>1)</sup> Accuracy of the temperature measurement:
- KTY:  $\pm 7$  °C (including evaluation)
  - PT1000:  $\pm 5$  °C (PT1000 tolerance class B according to EN 60751 including evaluation)
  - PTC:  $\pm 5$  °C (including evaluation)



**! WARNING**

**Electric shock in the event of voltage flashovers at the temperature sensor**

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Only use temperature sensors that fully comply with the specifications of the safety isolation.

**NOTICE**

**Device failure as a result of unshielded or incorrectly routed cables to temperature sensors**

Unshielded or incorrectly routed cables to temperature sensors can result in interference being coupled into the signal processing electronics from the power side. This can result in significant disturbance of all signals (fault messages) up to failure of individual components (destruction of the devices).

- Only use shielded cables as temperature sensor cables.
- If temperature sensor cables are routed together with the motor cable, use separately shielded cables twisted in pairs.
- Connect the cable shield to ground potential through a large surface area.

**NOTICE**

**Damage to the motor in the event of incorrectly connected KTY temperature sensor**

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

**NOTICE**

**Damage to the encoder due to incorrect supply voltage**


The encoder power supply can be parameterized to 5 V or 24 V. The encoder may be damaged for an incorrect parameterization.

- Select the appropriate supply voltage.



**X521 / X531: Encoder connection 2 for HTL/TTL encoder with open-circuit monitoring**

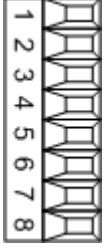
Table 4- 54 Encoder connection X521

Connector	Terminal	Signal name	Technical data
	1	A	Incremental signal A
	2	A*	Inverse incremental signal A
	3	B	Incremental signal B
	4	B*	Inverse incremental signal B
	5	R	Reference signal R
	6	R*	Inverse reference signal R
	7	CTRL	Control signal
	8	M	Ground via inductivity
Max. connectable cross-section: 1.5 mm <sup>2</sup>			

**Note****Operation of unipolar HTL encoders**

When unipolar HTL encoders are used, A\*, B\*, and R\* on the terminal block must be jumpered with M\_Encoder (X531).

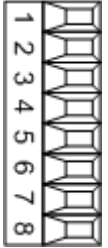Table 4- 55 Encoder connection X531

Connector	Terminal	Signal name	Technical data
	1	P encoder 5 V/24 V	Encoder supply
	2	M encoder	Ground for encoder power supply
	3	-Temp <sup>1)</sup>	Temperature sensor KTY84-1C130 / PT1000 / PTC
	4	+Temp <sup>1)</sup>	Temperature sensor KTY84-1C130 / PT1000 / PTC
	5	Reserved, do not use	
	6	Reserved, do not use	
	7	Reserved, do not use	
	8	Reserved, do not use	
Max. connectable cross-section: 1.5 mm <sup>2</sup>			
Measuring current via temperature sensor connection: 2 mA			

<sup>1)</sup> Accuracy of the temperature measurement:

- KTY: ±7 °C (including evaluation)
- PT1000: ±5 °C (PT1000 tolerance class B according to EN 60751 including evaluation)
- PTC: ±5 °C (including evaluation)



**! WARNING**

**Electric shock in the event of voltage flashovers at the temperature sensor**

Voltage flashovers in the signal electronics can occur in motors without safe electrical separation of the temperature sensors.

- Only use temperature sensors that fully comply with the specifications of the safety isolation.

**NOTICE**

**Device failure as a result of unshielded or incorrectly routed cables to temperature sensors**

Unshielded or incorrectly routed cables to temperature sensors can result in interference being coupled into the signal processing electronics from the power side. This can result in significant disturbance of all signals (fault messages) up to failure of individual components (destruction of the devices).

- Only use shielded cables as temperature sensor cables.
- If temperature sensor cables are routed together with the motor cable, use separately shielded cables twisted in pairs.
- Connect the cable shield to ground potential through a large surface area.

**NOTICE**

**Damage to the motor in the event of incorrectly connected KTY temperature sensor**

If a KTY temperature sensor is connected with incorrect polarity, it is not possible to detect when the motor overheats. Overheating can cause damage to the motor.

- Connect a KTY temperature sensor with the correct polarity.

**NOTICE**

**Damage to the encoder due to incorrect supply voltage**

The encoder power supply can be parameterized to 5 V or 24 V. The encoder may be damaged for an incorrect parameterization.

- Select the appropriate supply voltage.

**Note**

**Cable shield for the encoder connection via terminals**

Note that when the encoder is connected via terminals, the cable shield must be applied to the module.

### 4.10.18.3 Connection examples

#### Connection example 1: HTL encoder, bipolar, without zero marker -> p0405 = 9 (hex)

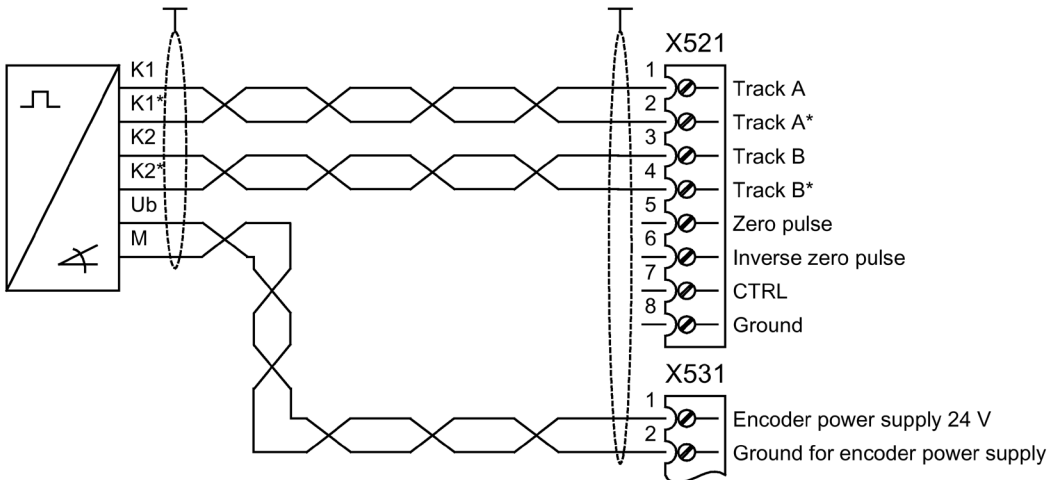


Figure 4-42 Connection example 1: HTL encoder, bipolar, without zero marker

#### Connection example 2: TTL encoder, unipolar, without zero marker -> p0405 = A (hex)

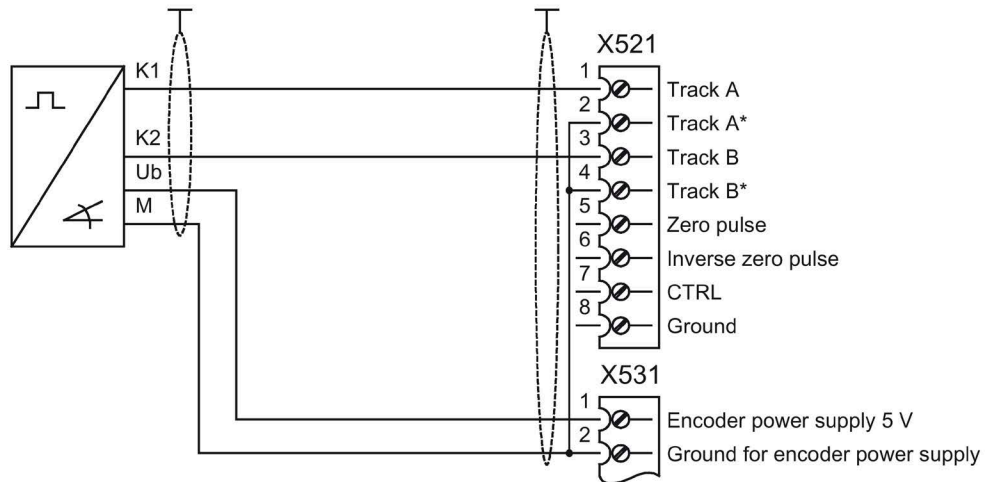


Figure 4-43 Connection example 2: TTL encoder, unipolar, without zero marker

### 4.10.19 Voltage Sensing Module for determining the actual motor speed and the phase angle (option K51)

#### Description

The VSM10 Voltage Sensing Module is used for acquiring the voltage characteristic on the motor side, so that the following functions can be implemented:

- Operation of a permanent-magnet synchronous motor without encoder with the requirement to be able to connect to a motor that is already rotating ("flying restart" function).
- Fast flying restart of large induction motors: The time for the demagnetization of the motor is eliminated as a result of the voltage sensing.

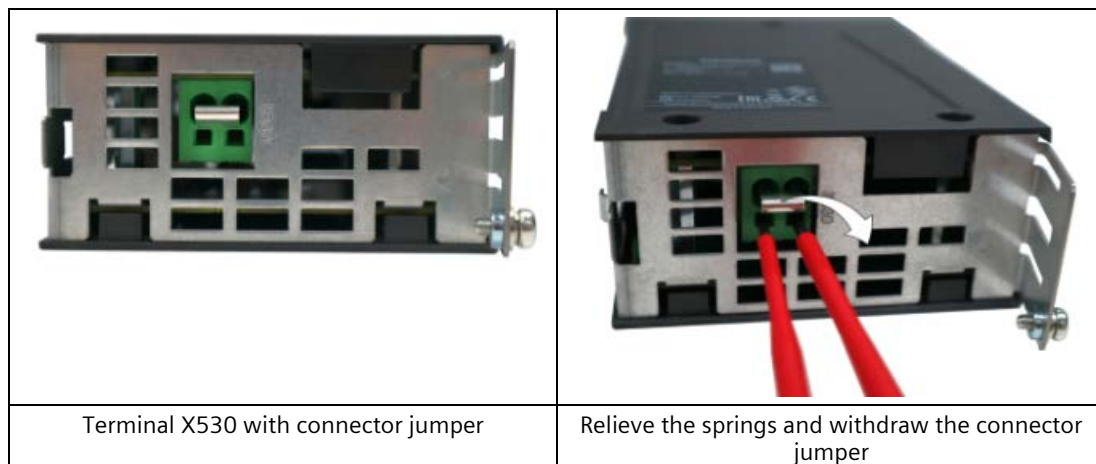
The terminals on the Voltage Sensing Module (-B51) are pre-assigned in the factory and must not be changed by the customer.

When operating a permanent-magnet synchronous motor without encoder, the "Flying restart" function must be activated with p1200.

#### Removing the connector jumper in the VSM10 Voltage Sensing Module

The connector jumper in terminal X530 on the lowerside of the component must be removed if you are using the cabinet unit on a non-grounded line supply (IT system) on the Voltage Sensing Module (VSM10).

Use two screwdrivers or a suitable tool in order to relieve the holding springs in the terminal and then withdraw the connector jumper.



#### Note

#### False tripping caused by not removing the connection clip with a non-grounded line supply

Failure to remove the connection clip to the basic interference suppression module on a non-grounded line supply (IT system) can cause false tripping for a sensitive IT system monitoring.

- Remove the connection kit for a non-grounded line supply (IT system).

#### 4.10.20 Additional SMC30 Sensor Module (option K52)

##### Description

With option K50, an SMC30 Sensor Module is included in the cabinet unit. The additional SMC30 Sensor Module enables reliable actual value acquisition when using Safety Integrated Extended Functions (requires a license: Option K01).

---

##### Note

##### Safety Integrated Function Manual

A detailed description of the full functionality and handling of the Safety Integrated functions can be found in the accompanying Function Manual. This manual is available as additional documentation on the customer DVD supplied with the device.

---

#### 4.10.21 Customer terminal block (option G60)

##### Description

With option G60, a TM31 interface module (customer terminal block –A60) is already installed in the cabinet unit. This provides the following interfaces:

- 8 digital inputs
- 4 bidirectional digital inputs/outputs
- 2 relay outputs with changeover contact
- 2 analog inputs
- 2 analog outputs
- 1 temperature sensor input (KTY84-130/PTC)

The description of the interfaces is given in the Chapter "Electrical Installation/Signal connections"

Integration of the interfaces takes place using pre-interconnections prepared in the factory, which can be selected during commissioning.

### 4.10.22 Additional customer terminal block TM31 (option G61)

#### Description

With option G60, a TM31 interface module (customer terminal block –A60) is already installed in the cabinet unit. A second module (–A61) provides the following additional digital and analog inputs/outputs in the drive system:

- 8 digital inputs
- 4 bidirectional digital inputs/outputs
- 2 relay outputs with changeover contact
- 2 analog inputs
- 2 analog outputs
- 1 temperature sensor input (KTY84-130/PTC)

The second TM31 must be installed on the system side. Default settings are not provided.

### 4.10.23 Terminal Board TB30 (option G62)

#### Description

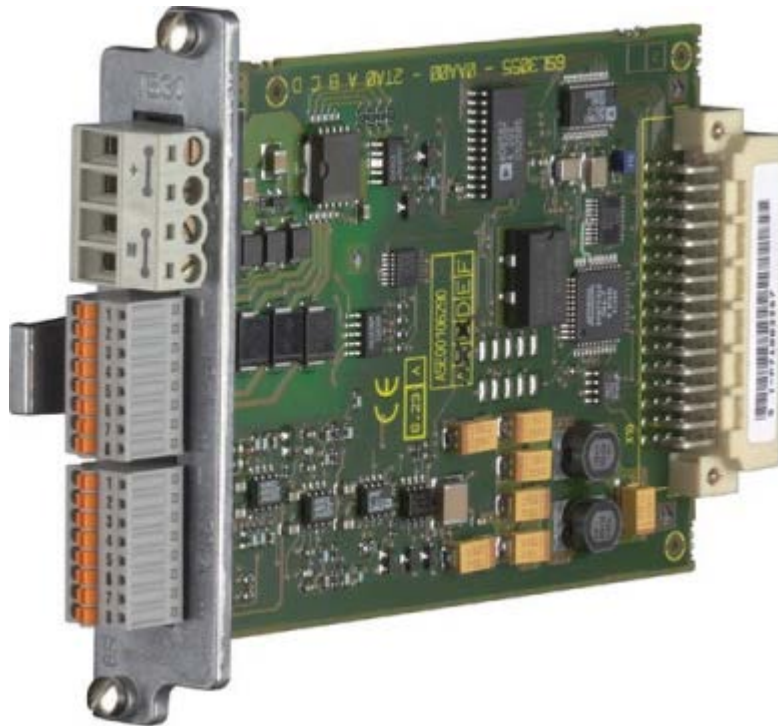


Figure 4-44 TB30 Terminal Board

The TB30 Terminal Board supports the addition of digital inputs/digital outputs and analog inputs/analog outputs to the Control Unit.

The following are located on the TB30 Terminal Board:

- Power supply for digital inputs/digital outputs
- 4 digital inputs
- 4 digital outputs
- 2 analog inputs
- 2 analog outputs

The TB30 Terminal Board plugs into the option slot on the Control Unit.

A shield connection for the signal cable shield is located on the Control Unit.

**NOTICE**

**Damage or malfunctions to the Option Board by inserting and withdrawing in operation**

Withdrawing and inserting Option Boards during operation can damage them or cause the Option Boards to malfunction.

- Only withdraw or insert Option Boards when the Control Unit is in a no voltage state.

The module is inserted in the option slot of the Control Unit at the factory.

**Interface overview**

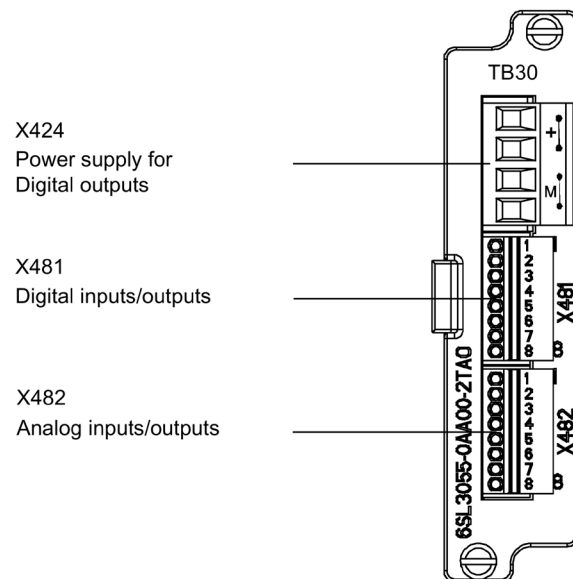


Figure 4-45 TB30 Terminal Board interface overview

Connection overview


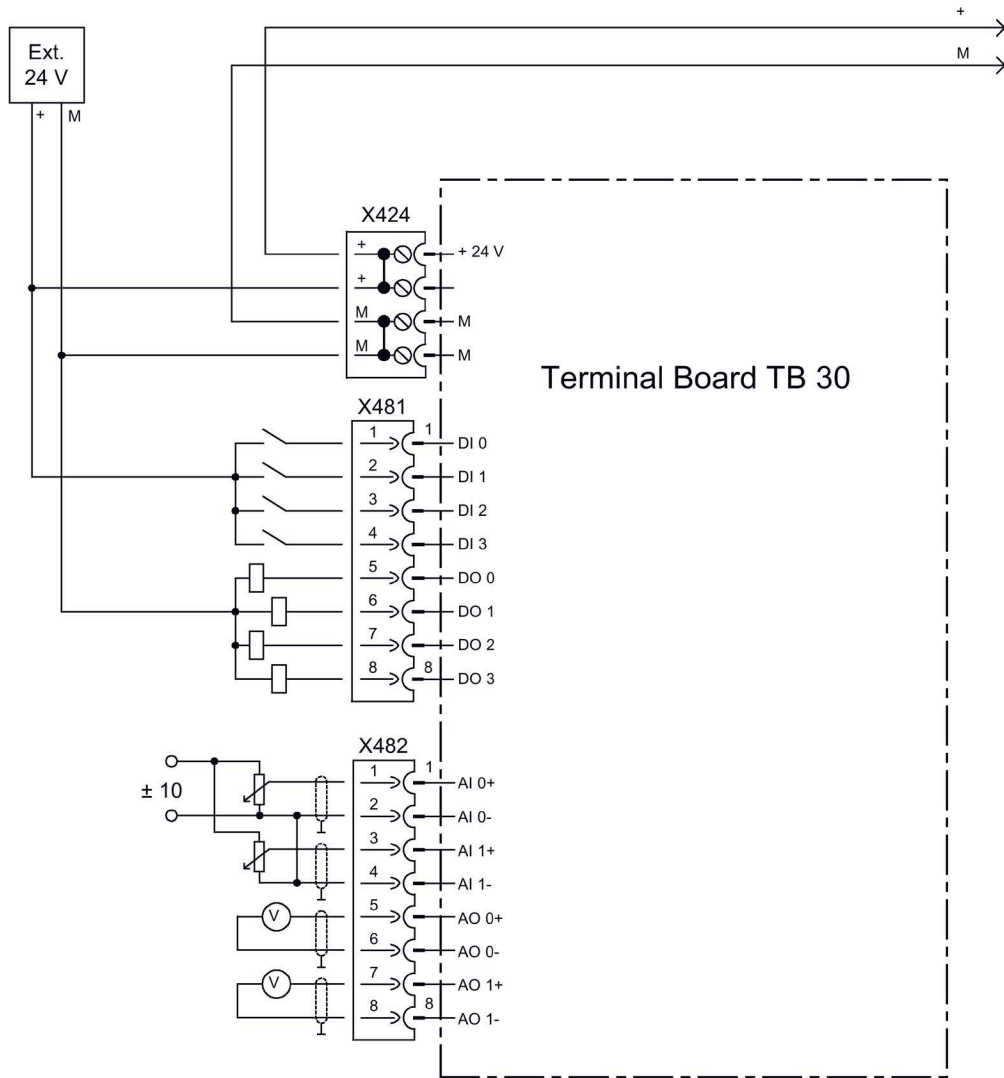


Figure 4-46 Connection overview TB30 Terminal Board

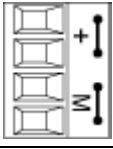

## X424 power supply, digital outputs

Table 4- 56 Terminal block X424

Connector	Terminal	Function	Technical data
	+	Power supply	Voltage: 24 V DC (20.4 ... 28.8 V) Current consumption: Max. 4 A (per digital output max. 0.5 A) Max. current via jumper in connector: 20 A (15 A according to UL/CSA)
	+	Power supply	
	M	Ground	
	M	Ground	
Max. connectable cross-section: 2.5 mm <sup>2</sup>			

The maximum cable length that can be connected is 10 m.

### Note

The two "+" and "M" terminals are jumpered in the connector. This ensures that the supply voltage is looped through.

This power supply is required for the digital outputs only.

The electronics power supply and the power supply for the analog inputs/outputs are taken from the option slot of the Control Unit.

### Note


The power supply of the digital outputs and the electronic power supply of the Control Unit are isolated.

### Note

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

**X481 Digital inputs/outputs**

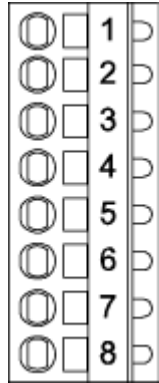Table 4- 57 Terminal block X481

Connector	Terminal	Designation <sup>1)</sup>	Technical data
	1	DI 0	Voltage: - 3 ... 30 V Current drain, typical: 10 mA at 24 V DC Ground reference: X424.M Input delay: - For "0" to "1": 20 µs - for "1" to "0": 100 µs Level (incl. ripple) High level: 15 ... 30 V Low level: -3 ... 5 V
	2	DI 1	
	3	DI 2	
	4	DI 3	
	5	DO 0	Voltage: 24 V DC Max. load current per output: 500 mA Ground reference: X424.M Continued-short-circuit-proof Output delay: - for "0" to "1": Typ. 150 µs at 0.5 A resistive load (500 µs maximum) - For "1" to "0": Typically 50 µs at 0.5 A resistive load Switching frequency: - For resistive load: Max. 100 Hz - For inductive load: Max. 0.5 Hz - For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	6	DO 1	
	7	DO 2	
	8	DO 3	
Max. connectable cross-section: 0.5 mm <sup>2</sup>			

<sup>1)</sup> DI: digital input, DO: Digital output

**Note**

**Open input**

An open input is interpreted as "low".

The power supply and the digital inputs/outputs are isolated from the Control Unit.


**Note**

**Transient voltage interruptions**

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

## X482 Analog inputs/outputs

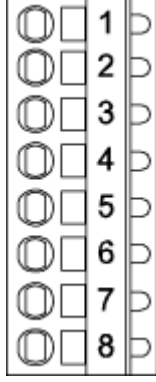Table 4- 58 Terminal block X482

Connector	Terminal	Designation <sup>1)</sup>	Technical data
	1	AI 0+	Analog inputs (AI) <b>Voltage:</b> -10 ... +10 V; R <sub>i</sub> : 65 kΩ <b>Common mode range:</b> ±30 V <b>Resolution:</b> 13 bits + sign
	2	AI 0-	
	3	AI 1+	
	4	AI 1-	
	5	AO 0+	Analog outputs (AO) <b>Voltage range:</b> -10 ... +10 V <b>Load current:</b> max. -3 ... +3 mA <b>Resolution:</b> 11 bit + signed Continuous short-circuit proof
	6	AO 0-	
	7	AO 1+	
	8	AO 1-	
Max. connectable cross-section: 0.5 mm <sup>2</sup>			

<sup>1)</sup> AI: analog input, AO: Analog output

### Note

#### Permissible voltage values

In order to avoid incorrect results of the analog-digital conversion, the analog differential voltage signals can have a maximum offset voltage of +/-30 V with respect to ground potential.

### Note

#### Open input

An open input is interpreted as approximately "0 V".

The power supply of the analog inputs/outputs is drawn via the option slot of the Control Unit and not via X424.

The shield is connected to the Control Unit.

### Shield connection of the TB30 on the Control Unit

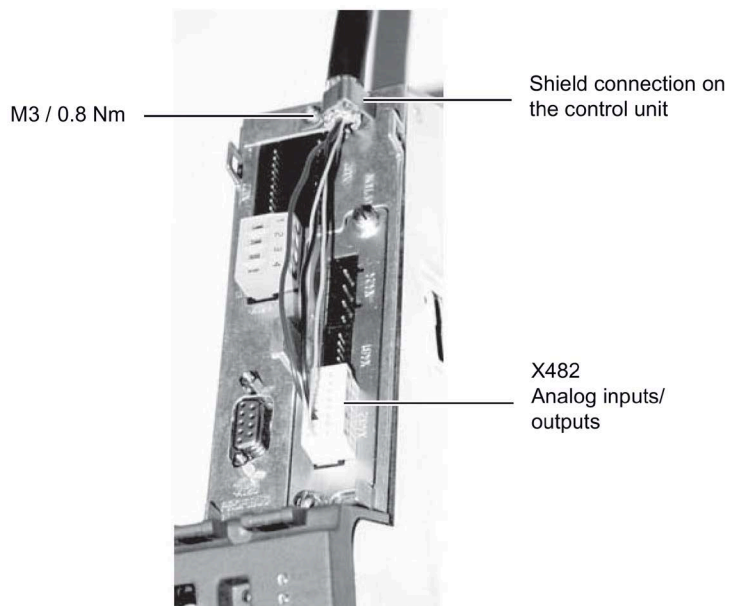


Figure 4-47 TB30 shield connection

The permissible bending radii for the cables must not be exceeded when the cables are being installed.

#### 4.10.24 Safety license for 1 axis (option K01)

##### Description

The Safety Integrated Basic functions do not require a license. A license is, however, required for each axis with safety functions in the case of Safety Integrated Extended functions. It is irrelevant which safety functions are used and how many.

With option K01, the Safety license for 1 axis is included on the CompactFlash Card and activated.

##### Licenses

The required license can optionally be ordered with the CompactFlash card.

Subsequent licensing is realized in the Internet using the "WEB License Manager" by generating a license key:

<http://www.siemens.com/automation/license>

##### Activation

The associated license key is entered into parameter p9920 in the ASCII code. The license key is activated using parameter p9921 = 1.

##### Diagnostics

An insufficient license is indicated via the following alarm and LED:

- Alarm A13000 → License not sufficient
- LED READY → Flashes green/red at 0.5 Hz

---

##### Note

##### Safety Integrated Function Manual

Detailed and comprehensive instructions and information for the Safety Integrated functions can be found in the accompanying Function Manual. This manual is available as additional documentation on the customer DVD supplied with the device.

---

### 4.10.25 Auxiliary power supply, 230 V AC (option K74)

#### Description

The auxiliary power supply provides the auxiliary voltages required for external control circuits of the cabinet unit on the plant side.

#### Adapting the auxiliary power supply (-T10)

A transformer is installed in the Line Connection Module (-T10) to produce the auxiliary voltages of the cabinet unit. The location of the transformer is indicated in the layout diagrams supplied.

When delivered, the taps are always set to the highest level. The line-side terminals of the transformer may need to be reconnected according to the existing line voltage.

The tables below show the appropriate transformer setting for the control power supply based on the existing line voltage.

Table 4- 59 Line voltage assignment for the internal power supply (660 to 690 V AC, 3 phase)

Line voltage range	Tap	Adaptation transformer taps (-T10) LH1 – LH2
591 ... 630 V	600 V	1 – 12
631 ... 680 V	660 V	1 – 14, terminals 12 and 13 are jumpered
681 ... 759 V	690 V	1 – 15, terminals 12 and 13 are jumpered

Once the jumpers have been set, the secondary voltage should be 230 VAC.

#### NOTICE

##### Material damage when the voltage is set too high

If the terminals are not reconnected corresponding to the actual line voltage, this can damage the device if the voltage is set too high.

- Set the terminals in accordance with the actual line voltage.

## 4.10.26 Terminal module for activation of "Safe Torque Off" and "Safe STOP 1" (option K82)

### Description

Option K82 (Terminal Module for activating "Safe Torque Off" and "Safe Stop 1") is for isolated activation via a variable control-voltage range of the safety functions already present in the standard version, which can also be deployed without option K82.

Option K82 is for activating the following Safety Integrated functions (terminology according to draft IEC 61800-5-2):

- Safe torque off (STO)
- Safe Stop 1 (SS1, time-controlled)

---

### Note

#### Standards requirements

The integrated safety functions, starting from the Safety Integrated (SI) input terminals of the SINAMICS components (Control Unit, Motor Module), satisfy the requirements according to EN 61800-5-2, EN 60204-1, EN ISO 13849-1 category 3 (formerly EN 954-1) for Performance Level (PL) d and EN 61508 SIL 2.

In combination with option K82, the requirements specified in EN 61800-5-2, EN 60204-1 as well as in EN ISO 13849-1 Category 3 (formerly EN 954-1) are satisfied for Performance Level (PL) d and EN 61508 SIL 2.

---

### Note

#### Safety Integrated Function Manual

Detailed and comprehensive instructions and information for the Safety Integrated functions can be found in the accompanying Function Manual. This manual is available as additional documentation on the customer DVD supplied with the device.

---

### 4.10.27 Terminal Module TM54F (option K87)

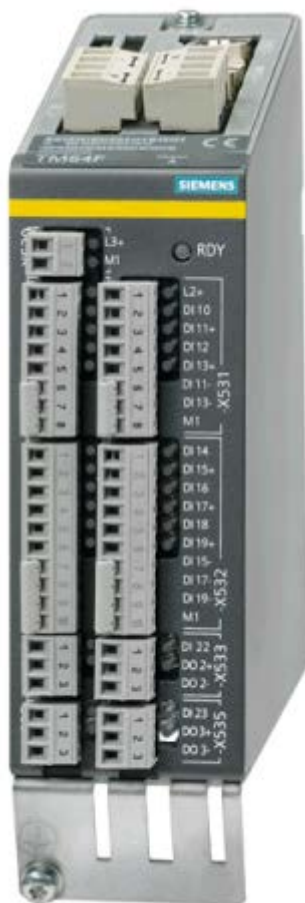


Figure 4-48 TM54F Terminal Module (option K87)



## Description

The TM54F Terminal Module is a terminal expansion module with safe digital inputs and outputs for controlling the Safety Integrated Extended functions of SINAMICS.

The TM54F is directly connected to a Control Unit via DRIVE-CLiQ.

TM54F features the following interfaces:

Table 4- 60 Overview of the TM54F interfaces

Type	Quantity
Fail-safe digital outputs (F-DO)	4
Fail-safe digital inputs (F-DI)	10
Sensor <sup>1)</sup> power supplies, dynamic response supported <sup>2)</sup>	2
Sensor <sup>1)</sup> power supply, no dynamic response	1
Digital inputs to check F_DO for a test stop	4

<sup>1)</sup> Sensors: Fail-safe devices to issue commands and sense, for example, emergency stop pushbuttons and safety locks, position switches and light arrays/light curtains.

<sup>2)</sup> Dynamic response: The sensor power supply is switched on and off by the TM54F when the forced dormant error detection is active for the sensors, cable routing, and the evaluation electronics.

The TM54F provides 4 fail-safe digital outputs and 10 fail-safe digital inputs. A fail-safe digital output consists of a 24 VDC switching output, a ground switching output, and a digital input for checking the switching state. A fail-safe digital input comprises two digital inputs.

---

### Note

#### Rated values of the F-DO

The rated values of the F-DO meet the requirements of EN 61131-2 for digital DC outputs with 0.5 A rated current.

The operating ranges of the F-DI meet the requirements of EN 61131-2 for Type 1 digital inputs.

---

### Note

#### Shielding cables

Please note that the F-DIs must take the form of shielded cables if they are > 30 m in length.

---

### Note

#### Safety Integrated Function Manual

A detailed description of the full functionality and handling of the Safety Integrated functions can be found in the accompanying Function Manual. This manual is available as additional documentation on the customer DVD supplied with the device.

---

### 4.10.28 Safe Brake Adapter SBA 230 V AC (option K88)

#### Description

Safe Brake Control (SBC) is a safety function that is used in safety-related applications. In the no-current state, the brake acts on the motor of the drive using spring force. The brake is released (opened) when current flows through it (=low active).

The Safe Brake Adapter 230 VAC is installed in the cabinet unit in the factory. An infeed is connected to terminal -X12 on the Safe Brake Adapter for the power supply. For control, a connection is established between the Safe Brake Adapter and the Control Interface Module via a cable harness installed in the factory.

For controlling the brake, a connection must be established on-site between terminal -X14 on the Safe Brake Adapter and the rectifier of the brake. Direct connection of AC brakes is not permissible.

#### NOTICE

##### Device failure caused by connecting a 24 VDC brake

When a 24 VDC brake is connected to option K88 (Safe Brake Adapter 230 VAC) this can damage the Safe Brake Adapter and cause the device to fail (when the brake closes this is not displayed on an LED, the fuses can then rupture, the relay contact service life is reduced).

- Do not connect a 24 VDC brake to the 230 VAC Safe Brake Adapter.

#### Note

##### Maximum cable length of the brake control

The maximum permissible cable length of 300 m between the Safe Brake Adapter 230 VAC and the brake must be observed. To accurately calculate the maximum cable length, see the SINAMICS Low Voltage Configuration Manual on the customer DVD supplied with the device.

#### Fast de-energization

Some brake rectifier types are equipped with two additional connections for switching the brake load on the DC side. This allows the brake coil to be quickly de-energized, i.e. braking starts earlier.

The Safe Brake Adapter supports such fast de-energizing using the two additional connections -X15:1 and -X15:2. This function does not belong to safe brake control.

## Notes

---

### Note

#### Replacement fuses

The article numbers for spare fuses can be taken from the spare parts list supplied.

---

### Note

#### Standards requirements

The integrated safety functions, starting from the Safety Integrated (SI) input terminals of the SINAMICS components (Control Unit, Motor Module), satisfy the requirements according to EN 61800-5-2, EN 60204-1, DIN EN ISO 13849-1 Category 3 (formerly EN 954-1) for Performance Level (PL) d and IEC 61508 SIL2.

With the Safe Brake Adapter (option K88), the requirements specified in EN 61800-5-2, EN 60204-1, DIN EN ISO 13849-1 Category 3 (formerly EN954-1) as well as for Performance Level (PL) d and IEC 61508 SIL 2 are fulfilled.

---

### Note

#### Safety Integrated Function Manual

A detailed description of the full functionality and handling of the Safety Integrated functions can be found in the accompanying Function Manual. This manual is available as additional documentation on the customer DVD supplied with the device.

---

### 4.10.29 Control Unit CU320-2 PN (option K95)

With Option K95, the cabinet unit contains a CU320-2 PN control unit, which handles the communication and open-loop/closed-loop control functions.

A PROFINET interface is available for higher-level communication.

#### Connection overview

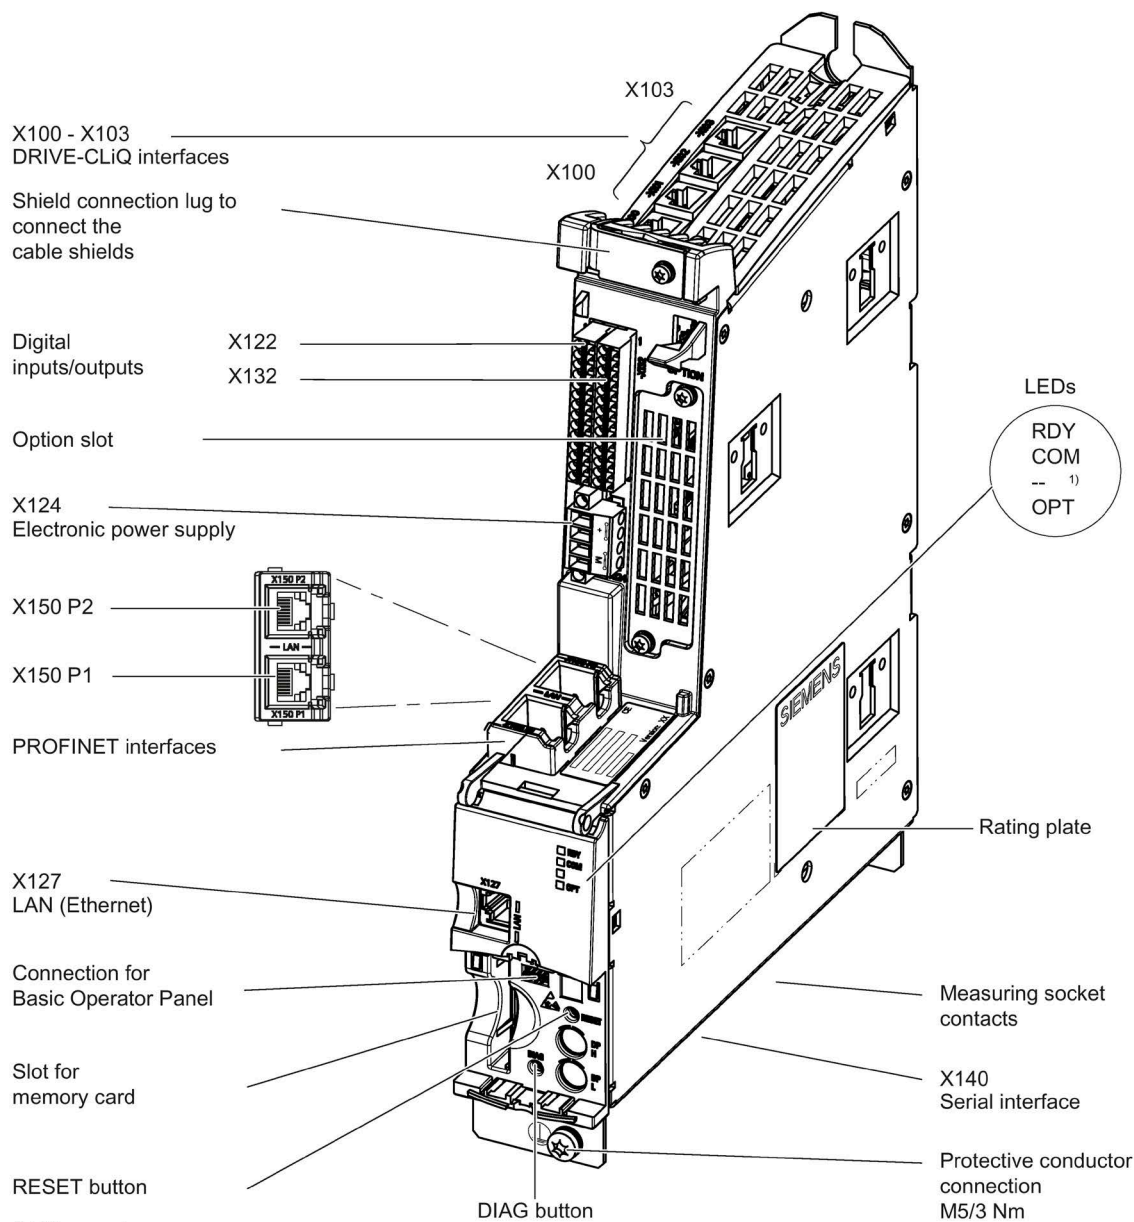


Figure 4-49 Connection overview of CU320-2 PN Control Unit (without cover)

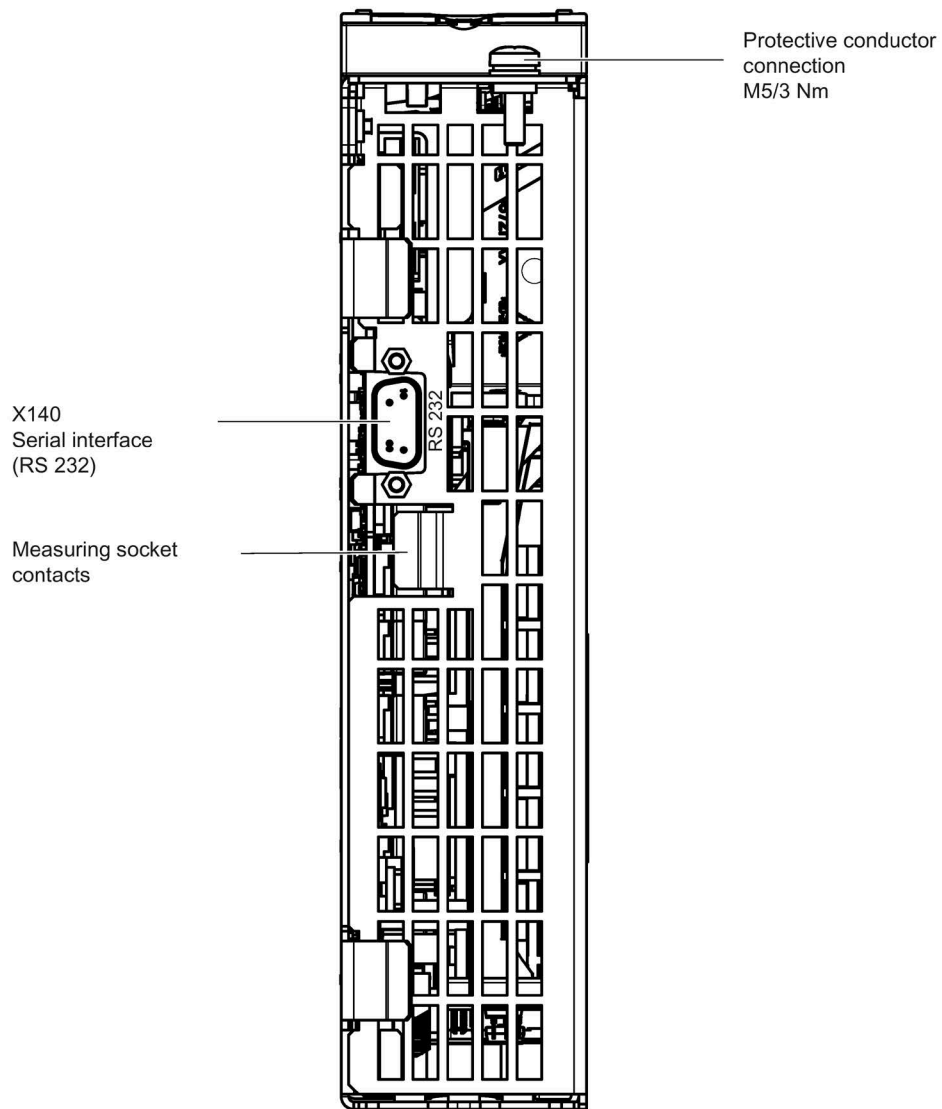


Figure 4-50 Interface X140 and measuring sockets T0 to T2 - CU320-2 PN (view from below)

**NOTICE**

**Malfunctions or damage to the option board by inserting and withdrawing in operation**

Withdrawing and inserting the option board in operation can damage it or cause it to malfunction.

- Only withdraw or insert the Option Board when the Control Unit is in a no-current condition.

Connection example

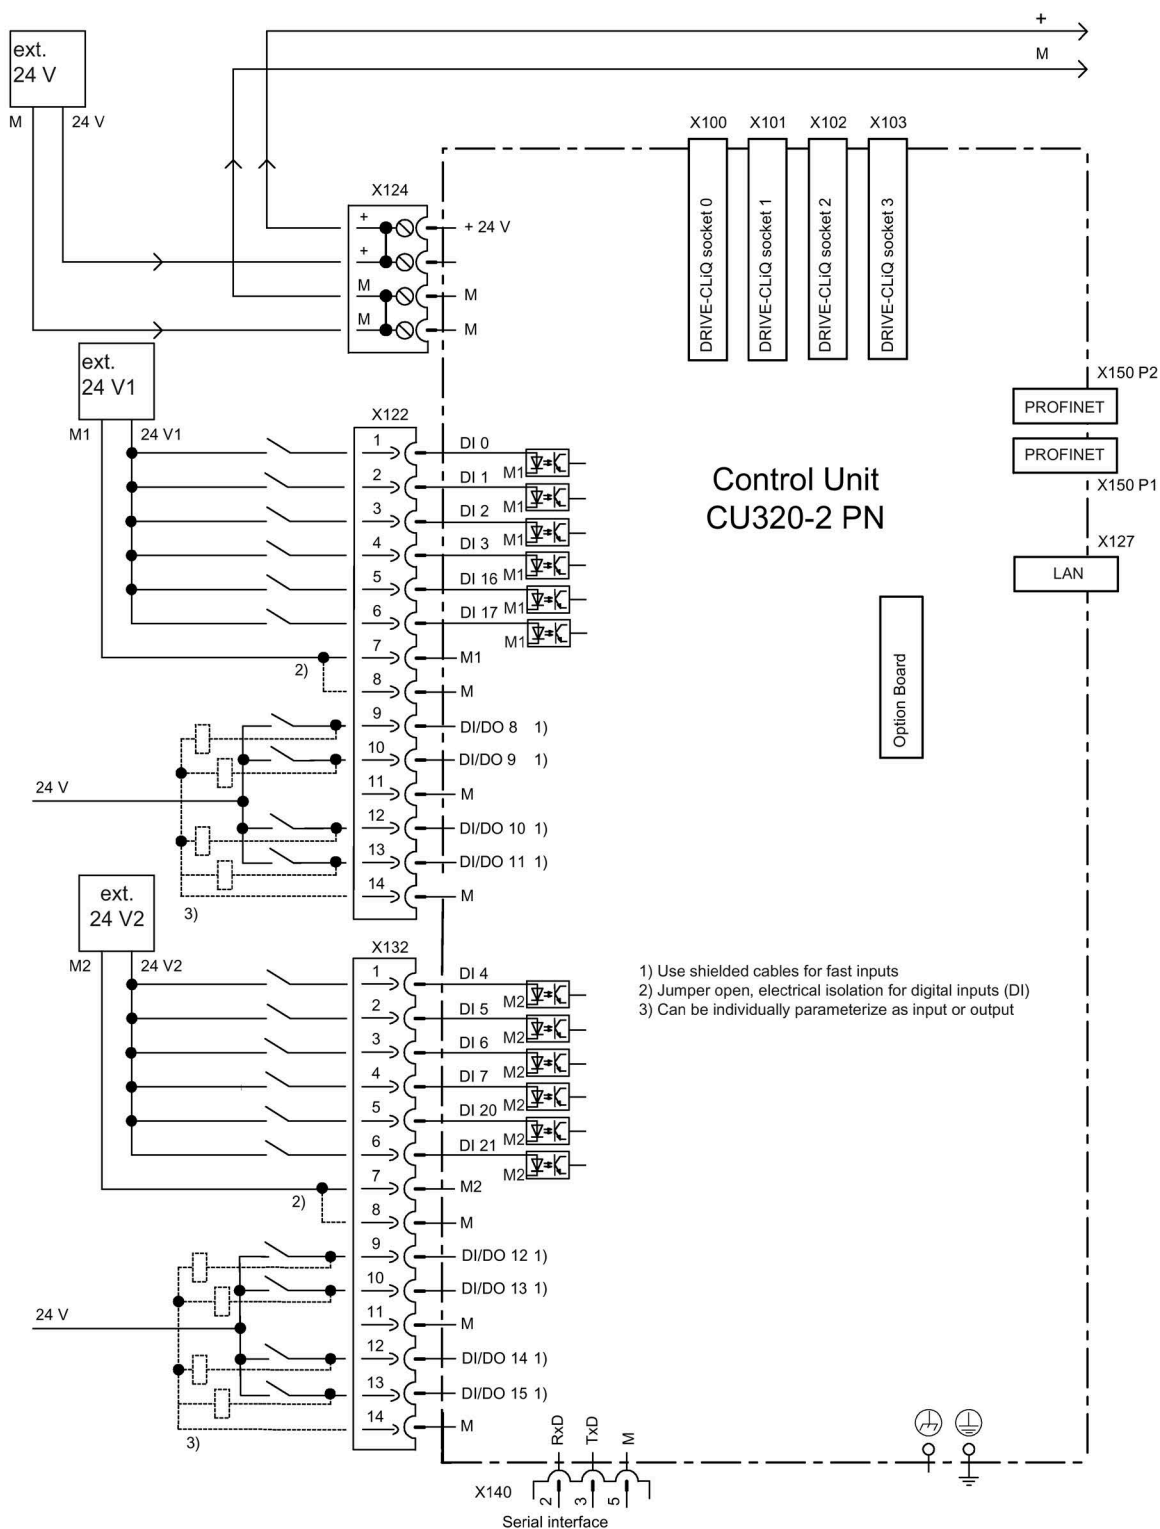
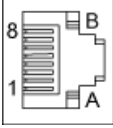


Figure 4-51 Connection example, CU320-2 PN


## X100 to X103: DRIVE-CLiQ interface

Table 4- 61 DRIVE-CLiQ interface X100 – X103

Connector	Pin	Signal name	Technical data
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
	A	+ (24 V)	Power supply
	B	M (0 V)	Electronics ground
Connector type: RJ45 socket Blanking plate for DRIVE-CLiQ interfaces (50 pcs.) Article number: 6SL3066-4CA00-0AA0			

**X122: Digital inputs/outputs**

Table 4- 62 Terminal block X122

Connector	Pin	Designation <sup>1)</sup>	Technical data
	1	DI 0	Voltage (max.): -3 ... +30 V DC Typical power consumption: 9 mA at 24 V Electrical isolation: reference potential is terminal M1 Level (with ripple) High level: 15 ... 30 V Low level: -3 ... +5 V Input delay (typ.): For "0" → "1": 50 µs For "1" → "0": 150 µs
	2	DI 1	
	3	DI 2	
	4	DI 3	
	5	DI 16	
	6	DI 17	
	7	M1	Reference potential for terminal 1 ... 6
	8	M	Electronics ground
	9	DI/DO 8	<b>As input:</b> Voltage: -3 ... +30 VDC Current consumption, typical: 9 mA at 24 V Level (with ripple) High level: 15 ... 30 V Low level: -3 ... +5 V DI/DO 8, 9, 10, and 11 are "high-speed inputs" <sup>2)</sup> Input delay (typ.): For "0" → "1": 5 µs For "1" → "0": 50 µs <b>As output:</b> Voltage: 24 V DC Max. load current per output: 500 mA Continuous short-circuit proof Output delay (typ./max.): <sup>3)</sup> For "0" → "1": 150 µs / 400 µs For "1" → "0": 75 µs / 100 µs Switching frequency: For resistive load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	10	DI/DO 9	
	11	M	
	12	DI/DO 10	
	13	DI/DO 11	
14	M		

Max. connectable cross-section: 1.5 mm<sup>2</sup>

- 1) DI: digital input; DI/DO: bidirectional digital input/output; M: Electronics ground M1: reference potential
- 2) The rapid inputs can be used as probe inputs or as inputs for the external zero mark.
- 3) Data for: V<sub>cc</sub> = 24 V; load 48 Ω; high ("1") = 90% V<sub>out</sub>; low ("0") = 10% V<sub>out</sub>

The maximum cable length that can be connected is 30 m.



---

**Note**

**Ensuring the function of digital inputs**

An open input is interpreted as "low".

Terminal M1 must be connected so that the digital inputs (DI) can function.

This is achieved through one of the following measures:

1. Also route the reference ground of the digital inputs.
2. A jumper to terminal M. (**Note:** This removes the electrical isolation for these digital inputs.)

---


**Note**

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

---

**X132: Digital inputs/outputs**

Table 4- 63 Terminal block X132

Connector	Pin	Designation <sup>1)</sup>	Technical data
	1	DI 4	Voltage (max.): -3 ... +30 VDC Current consumption, typical: 9 mA at 24 V Electrical isolation: The reference potential is terminal M2 Level (including ripple) High level: 15 ... 30 V Low-level: -3 ... +5 V Input delay (typ.): For "0" → "1": 50 μs For "1" → "0": 150 μs
	2	DI 5	
	3	DI 6	
	4	DI 7	
	5	DI 20	
	6	DI 21	
	7	M2	Reference potential for terminal 1 ... 6
	8	M	Electronics ground
	9	DI/DO 12	<b>As input:</b> Voltage: -3 ... +30 VDC Current consumption, typical: 9 mA at 24 V Level (including ripple) High level: 15 ... 30 V Low-level: -3 ... +5 V DI/DO 12, 13, 14, and 15 are "high-speed inputs" <sup>2)</sup> Input delay (typ.): For "0" → "1": 5 μs For "1" → "0": 50 μs <b>As output:</b> Voltage: 24 V DC Max. load current per output: 500 mA Continuous short-circuit proof Output delay (typ./max.): <sup>3)</sup> For "0" → "1": 150 μs / 400 μs For "1" → "0": 75 μs / 100 μs Switching frequency: For resistive load: Max. 100 Hz For inductive load: Max. 0.5 Hz For lamp load: Max. 10 Hz Maximum lamp load: 5 W
	10	DI/DO 13	
	11	M	
	12	DI/DO 14	
	13	DI/DO 15	
14	M		

Max. connectable cross-section: 1.5 mm<sup>2</sup>

- 1) DI: digital input; DI/DO: bidirectional digital input/output; M: Electronics ground; M2: reference potential
- 2) The rapid inputs can be used as probe inputs or as inputs for the external zero mark
- 3) Data for: V<sub>cc</sub> = 24 V; load 48 Ω; high ("1") = 90% V<sub>out</sub>; low ("0") = 10% V<sub>out</sub>

The maximum cable length that can be connected is 30 m.

---

**Note**

**Ensuring the function of digital inputs**

An open input is interpreted as "low".

To enable the digital inputs (DI) to function, terminal M2 must be connected.

This is achieved through one of the following measures:

1. Also route the reference ground of the digital inputs.
  2. A jumper to terminal M. (**Note:** This removes the electrical isolation for these digital inputs.)
- 

**Note**

If the 24 V supply is briefly interrupted, then the digital outputs are deactivated during this time.

---

## X127: LAN (Ethernet)

---

**Note**

**Use**


Ethernet interface X127 is intended for commissioning and diagnostics, which means that it must always be accessible (e.g. for service).

Further, the following restrictions apply to X127:

- Only local access is possible
  - No networking - or only local networking in a closed and locked electrical cabinet permissible
- 

If it is necessary to remotely access the electrical cabinet, then additional security measures must be applied so that misuse through sabotage, unqualified data manipulation and intercepting confidential data is completely ruled out (also see Chapter "Industrial Security (Page 24)").

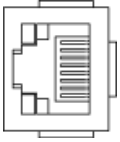Table 4- 64 X127 LAN (Ethernet)

Connector	Pin	Designation	Technical data
	1	TXP	Ethernet transmit data +
	2	TXN	Ethernet transmit data -
	3	RXP	Ethernet receive data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	RXN	Ethernet receive data -
	7	Reserved, do not use	
	8	Reserved, do not use	
Connector type: RJ45 socket			

**Note**

The LAN (Ethernet) interface does not support Auto MDI(X). If the LAN interface of the communication partner also cannot handle auto-MDI(X), then a crossover cable must be used to establish the connection.

For diagnostic purposes, the X127 LAN interface features a green and a yellow LED. These LEDs indicate the following status information:


Table 4- 65 LED statuses for the X127 LAN interface

LED	Color	State	Description
Link port	-	Off	Missing or faulty link
	Green	Continuous light	10 or 100 Mbit link available
Activity port	-	Off	No activity
	Yellow	Flashing light	Sending or receiving

**X140: serial interface (RS232)**

The AOP30 operator panel for operating/parameterizing the device can be connected via the serial interface. The interface is located on the underside of the Control Unit.

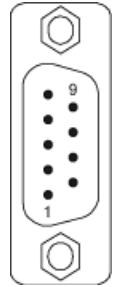Table 4- 66 Serial interface (RS232) X140

Connector	Pin	Designation	Technical data
	2	RxD	Receive data
	3	TxD	Transmit data
	5	Ground	Ground reference
Connector type: 9-pin SUB D connector			


**Note**

**Connecting cable to the AOP30**

The connection cable to AOP30 may only contain the three contacts which are shown in the drawing; a completely allocated cable may not be used.

**X150 P1/P2 PROFINET interface**

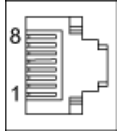Table 4- 67 X150 P1 and X150 P2 PROFINET

Connector	Pin	Signal name	Technical data
	1	RXP	Receive data +
	2	RXN	Receive data -
	3	TXP	Transmit data +
	4	Reserved, do not use	
	5	Reserved, do not use	
	6	TXN	Transmit data -
	7	Reserved, do not use	
	8	Reserved, do not use	
Connector type: RJ45 socket Cable type: PROFINET			

**Note**

**Connection cables**

The PROFINET interfaces support Auto MDI(X). It is therefore possible to use both crossover and non-crossover cables to connect the devices.

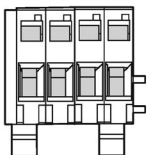
For diagnostic purposes, the two PROFINET interfaces are each equipped with a green and a yellow LED. These LEDs indicate the following status information:

Table 4- 68 LED states on the X150 P1/P2 PROFINET interface

LED	Color	State	Description
Link port	-	Off	Missing or faulty link
	Green	Continuous light	10 or 100 Mbit link available
Activity port	-	Off	No activity
	Yellow	Flashing light	Data is being received or sent at port x

### T0, T1, T2: Measuring socket contacts

Table 4- 69 Measuring socket contacts T0, T1, T2

Connector	Socket	Function	Technical data
	M	Ground	Voltage: 0... 5 V Resolution: 8 bits Load current: max. 3 mA Continuous short-circuit proof The reference potential is terminal M
	T0	Measuring socket contact 0	
	T1	Measuring socket contact 1	
	T2	Measuring socket contact 2	
PCB plug connector from Phoenix Contact, type: ZEC 1.0/ 4-ST-3.5 C1 R1.4, order number: 1893708			

**Note**

**Cable cross section**

The measuring socket contacts are only suitable for cable cross-sections of 0.2 mm<sup>2</sup> to 1 mm<sup>2</sup>.

**Note**

**Using the measuring socket contacts**

The measuring socket contacts support commissioning and diagnostic functions. It must not be connected for normal operation.

### DIAG button

The DIAG pushbutton is reserved for service functions.

## Slot for the memory card



Figure 4-52 Slot for the memory card

---

### Note

#### Plant standstill by withdrawing or inserting the memory card during operation

If the memory card is withdrawn or inserted during operation, then data can be lost, possibly resulting in a plant standstill.

- Only withdraw and insert the memory card when the Control Unit is in a no-voltage condition.

---

### Note

#### Insertion direction for the memory card

Only insert the memory card as shown in the photo above (arrow at top right).



---

### NOTICE

#### Memory card damage caused by electric fields or electrostatic discharge

Electrical fields or electrostatic discharge may result in the memory card being damaged and so cause malfunctions.

- When removing and inserting the memory card, always observe the ESD regulations.

---

**Note**

**Data loss when the Control Unit with memory card is returned**

When returning a defective Control Unit for repair or testing, the data on the memory card (parameters, firmware, licenses, etc.) could be lost.

- Do not return the memory card as well, but rather keep it in a safe place so that it can be inserted in the replacement unit.
- 

**Note**

Please note that only SIEMENS memory cards can be used to operate the Control Unit.

---

### 4.10.30 NAMUR terminal block (option B00)

#### Description

The terminal block is designed in accordance with the requirements and guidelines defined by the standards association for measurement and control systems in the chemical industry (NAMUR – recommendation NE37), that is, certain device functions are assigned to fixed terminals. The inputs and outputs assigned to the terminals fulfill PELV ("protective extra-low voltage and protective separation") requirements.

The terminal block only contains the necessary functions. Unlike the NAMUR recommendation, optional terminals are not available.

The 24 V DC supply is provided on site via terminals -X2:1-3 (fuse-protected for 1 A in the converter). You must ensure that the PELV safety requirements (protective extra-low voltage with protective separation) are fulfilled.

To monitor the temperature of explosion-proof motors, option B00 features a PTC thermistor release mechanism with PTB approval. Shutdown if limit value is exceeded. The associated PTC sensor is connected to terminal -X3:90, 91.

The terminal block is divided into three sections:

- -X1; -X2: for the power connections
- -X2: for signal cables, which must fulfill PELV requirements with electrical separation.
- -X3: for connecting the motor PTC thermistor detector



## Connection

Table 4- 70 Terminal block -X2 – connection 24 V supply

Terminal	Designation	Default	Comment
1	M	Reference conductor	
2	P24 V	24 V DC infeed	Protected internally with fuse (1 A)
3	P24 V	24 V DC outgoing circuit	
Max. connectable cross-section: 2.5 mm <sup>2</sup>			

Table 4- 71 Terminal block -X2 – connection NAMUR control terminal block

Terminal	Designation	Default	Comment
10	DI	ON/OFF (dynamic)/ ON/OFF (static)	Effective operation can be coded by a wire jumper on terminal -X400:9;10 (delivery condition: jumper inserted): jumper inserted: ON/OFF (dynamic)/ jumper removed: ON/OFF (static)
11	DI	OFF (dynamic)	
12	DI	Faster	Motorized potentiometer
13	DI	Slower	Motorized potentiometer
14	DI	RESET	Acknowledge error
15	DI	Interlock	OFF2
16	DI	Counterclockwise	"0" signal: CW phase sequence "1" signal: CCW phase sequence
17	DI	Power Disconnection	EMERGENCY OFF circuit
18			"0" signal: Power disconnection "1" signal: No power disconnection
30	DO (COM)	Ready for operation	Relay output (NO contact)
31	DO (NO)		
32	DO (COM)	Motor turning	Relay output (NO contact)
33	DO (NO)		
34	DO (NO)	Fault	Relay output (two-way contact)
35	DO (COM)		
36	DO (NC)		
50/51	AI 0/4-20 mA	Speed setpoint	Default: 4 ... 20 mA
60/61	AO 0/4-20 mA	Motor frequency	Default: 4 ... 20 mA (preallocated with motor frequency, can be reparameterized for other variables)
62/63	AO 0/4-20 mA	Motor current	Default: 4 ... 20 mA (preallocated with motor current, can be reparameterized for other variables)
Max. connectable cross-section: 2.5 mm <sup>2</sup>			

Table 4- 72 Terminal block -X3 – connection for the motor PTC thermistor sensor

Terminal	Designation	Default	Comment
90/91	AI	Connection for a PTC thermistor	Shutdown if limit value is exceeded.
Max. connectable cross-section: 2.5 mm <sup>2</sup>			

### Adapting the analog inputs and outputs

If the setting ranges of the analog inputs and outputs are to be changed, the associated interface converters (-T401 / -T402 / -T403) must be set. The corresponding interface converter must be removed for this purpose and the rotary switch on the side ("S1") turned to the corresponding position.

Table 4- 73 Terminal block -X2 – Adaptation of analog inputs and outputs

Terminal	Designation	Item code of interface converter	Settings on rotary switch S1
50/51	AI	T401	2: 0 ... 20 mA 4: 4 ... 20 mA (default)
60/61	AO	T402	1: 0 ... 20 mA 2: 4 ... 20 mA (default)
62/63	AO	T403	1: 0 ... 20 mA 2: 4 ... 20 mA (default)

#### 4.10.31 Separate 24 V DC power supply for NAMUR (option B02)

##### Description

If the customer cannot provide a separate 24 V DC supply (PELV), this option enables a second power supply to be installed to provide the PELV (terminal assignment as option B00, 24 V infeed at terminal -X1:1,2,3 no longer needed).

#### 4.10.32 Outgoing section for external auxiliary equipment for NAMUR (option B03)

##### Description

If power is to be supplied to a motor fan on site, option B03 provides an uncontrolled fuse-protected (10 A) outgoing section. As soon as the supply voltage is present at the converter input, it is also present at these terminals. The voltage corresponds to the converter input voltage. You must take this into account when configuring the separately driven fan.

##### Connecting

Table 4- 74 Terminal block -X1 – uncontrolled power outlet (10 A) for supplying a separately driven motor fan

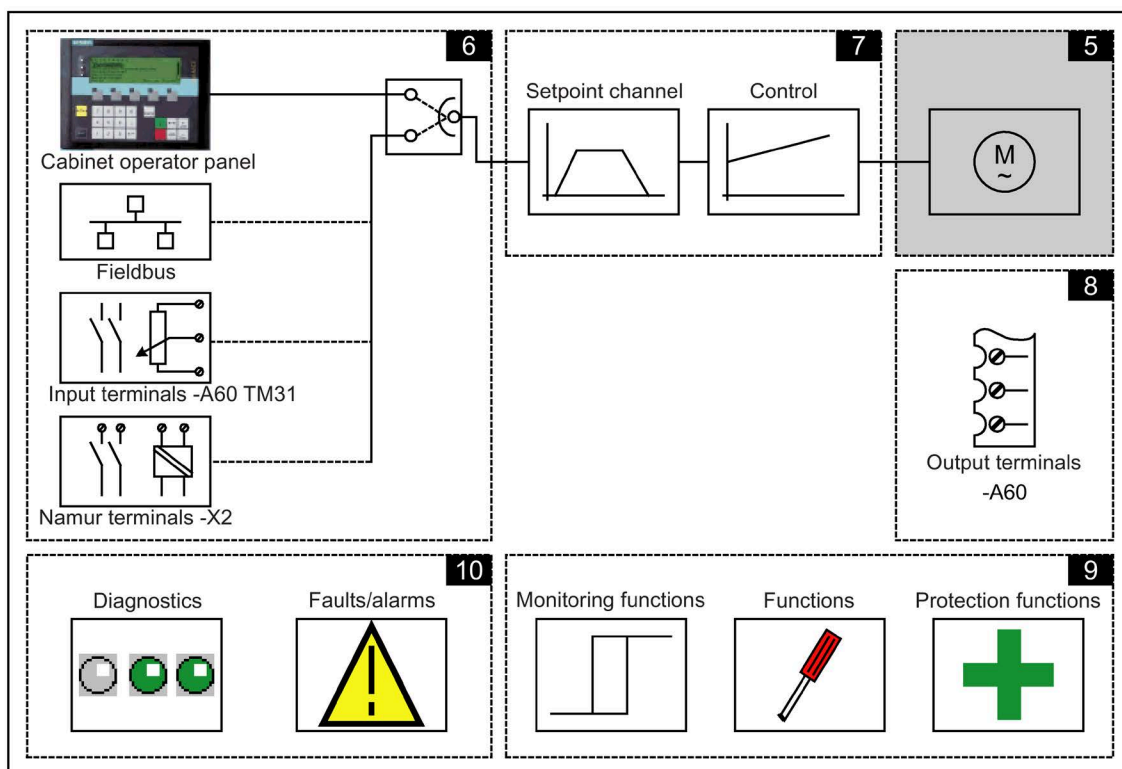
Terminal	Default	Comment
1, 2, 3, PE	Outgoing section for separately driven motor fan	U = U <sub>line</sub>
Max. connectable cross-section: 2.5 mm <sup>2</sup>		

# Commissioning

## 5.1 Chapter content

This section provides information on the following:

- An overview of the operator panel functions
- Initial commissioning of the cabinet unit (initialization) with STARTER and AOP30
  - Entering the motor data (drive commissioning)
  - Entering the most important parameters (basic commissioning), concluding with motor identification
- Data backup
- Parameter reset to factory settings



### Important information prior to commissioning

The cabinet unit offers a varying number of internal signal interconnections depending on the delivery condition and the options installed. For the converter control to be able to process the signals correctly, several software settings must be made.

During initial power-up of the Control Unit and during first commissioning, parameter macros are executed and the necessary settings made.  
The settings are documented in the Appendix.

After initial power-up, first commissioning, and also following a "Parameter reset to factory settings", individual parameter values deviate from the factory settings stated in the List Manual.

**WARNING****Malfunctions of the machine as a result of incorrect or changed parameter settings**

As a result of incorrect or changed parameterization, machines can malfunction, which in turn can lead to injuries or death.

- Protect the parameterization (parameter assignments) against unauthorized access.
- Respond to possible malfunctions by applying suitable measures (e.g. EMERGENCY STOP or EMERGENCY OFF).

## 5.2 STARTER commissioning tool

### Description

You can use the STARTER commissioning tool to configure and commission SINAMICS drives and drive systems. The drive can be configured using the STARTER drive configuration wizard.

---

**Note****STARTER online help**

This section shows you how to carry out commissioning using STARTER. STARTER features a comprehensive online help function, which provides detailed explanations of all the processes and available system settings.

For this reason, this section only describes the individual commissioning steps.

---

### Prerequisite: STARTER Version

The following STARTER version is required to commission the SINAMICS with firmware V5.2:

- STARTER V5.4 HF1

## Prerequisites for installing STARTER

### Hardware

The following minimum requirements must be complied with:

- PG or PC with Pentium III min. 1 GHz (recommended > 1 GHz)
- 2 GB work memory (4 GB recommended)
- Screen resolution 1024×768 pixels, 16-bit color depth
- Free hard disk space > 5 GB

### Software

The following minimum prerequisites must be observed when using STARTER without an existing STEP 7 installation:

64-bit operating systems:

- Microsoft Windows 7 Professional SP1
- Microsoft Windows 7 Ultimate SP1
- Microsoft Windows 7 Enterprise SP1 (standard installation)
- Microsoft Windows 10 Professional, from version 1709
- Microsoft Windows 10 Enterprise, from Version 1709
- Microsoft Windows 10 Enterprise 2016 LTSB (OS build 14393)
- Microsoft Windows Server 2016
- Microsoft Windows Server 2019

STARTER setup is possible with native Windows versions with Asian languages only if the Windows 7 software is an MUI version.

Acrobat Reader V9.4 or higher is required to open the function diagrams in the online help.

---

### Note

#### Requirements in conjunction with STEP7

If STARTER is used in combination with other STEP7 components, the prerequisites for the S7 components shall apply.

---

### 5.2.1 Installing the STARTER commissioning tool

STARTER is installed using the "setup" file on the customer DVD supplied. When you double-click the "Setup" file, the installation Wizard guides you through the process of installing STARTER.

**Note**

**Installation time**

The installation time depends on the computer performance and from where the software is installed (e.g. DVD, hard disk, network). We recommend that you install the software from a local data carrier.

### 5.2.2 Layout of the STARTER user interface

STARTER features four operating areas:

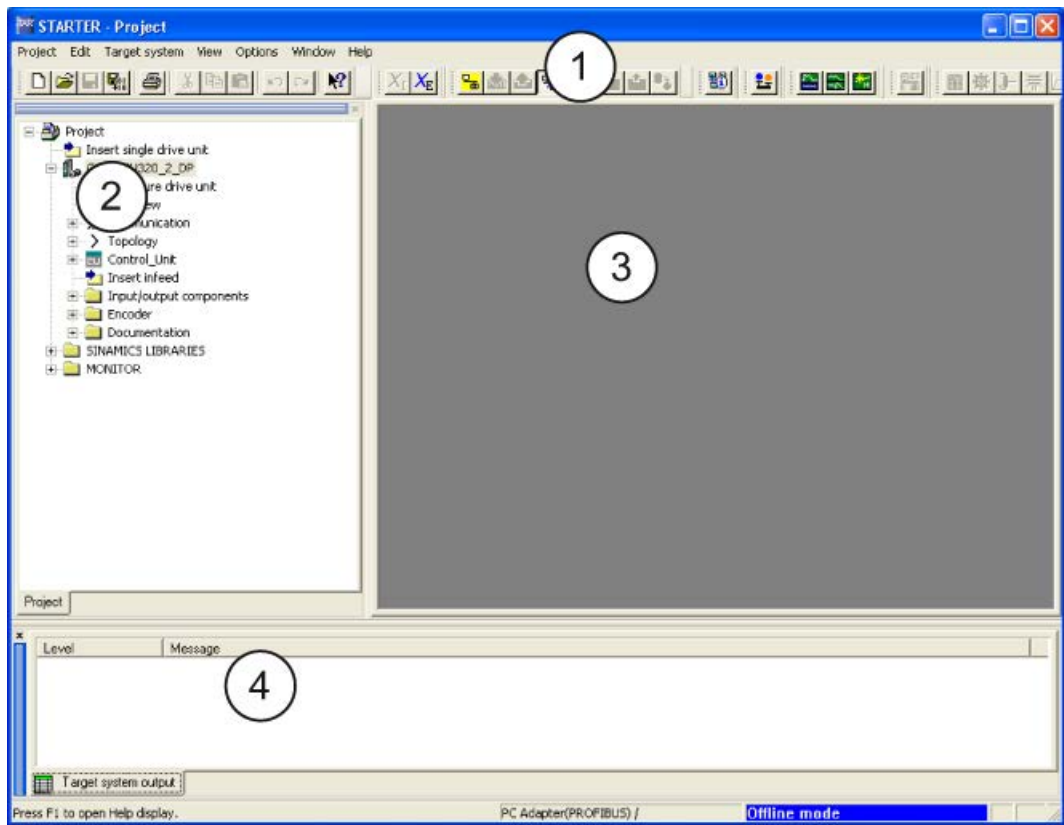


Figure 5-1 STARTER operating areas

Operating area	Explanation
1: Toolbars	In this area, you can access frequently used functions via the icons.
2: Project navigator	The elements and projects available in the project are displayed here.
3: Working area	In this area, you can change the settings for the drive units.
4: Detail view	Detailed information about faults and alarms, for example, is displayed this area.

## 5.3 Procedure for commissioning with STARTER

### Basic procedure using STARTER

STARTER uses a sequence of dialog screens for entering the required drive unit data.

---

#### Note

##### Default settings in dialog screens

These dialog screens contain default settings, which you may have to change according to your application and configuration.

This is intentional!

Objective: By taking time to consider what configuration data you enter, you can prevent inconsistencies between the project data and drive unit data (identifiable in online mode).

---

### 5.3.1 Creating the project

Click the STARTER icon on the desktop or select menu command Start > STARTER > STARTER in the Windows start menu to start the STARTER commissioning tool.

The first time you run the software, the main screen shown below appears with the dialog screen forms:

- STARTER Getting Started
- STARTER project wizard

The commissioning steps are listed below as a numbered step sequence.

## Accessing the STARTER project wizard

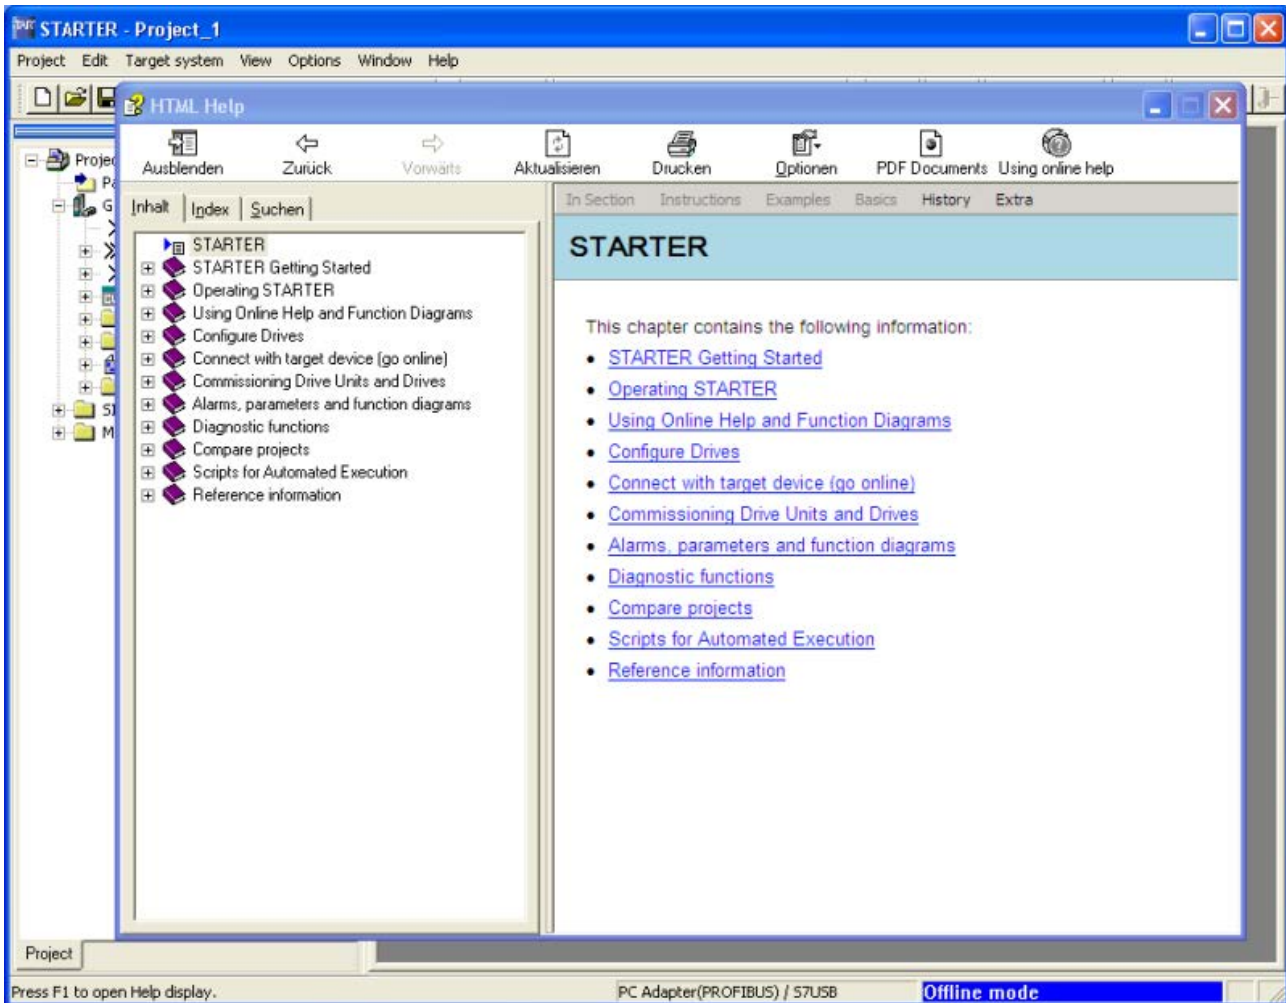


Figure 5-2 Main screen of the STARTER parameterization and commissioning tool

⇒ Hide STARTER Getting Started commissioning drive using **HTML Help > Close**  
 The online help can be permanently hidden by deselecting **Options > Settings > Workbench > Display "Getting Started" when starting**

---

### Note

#### Project wizard

When you deactivate the **Display wizard during start** checkbox, the project wizard is no longer displayed the next time you start STARTER.

You can call up the project wizard by choosing **Project > New with Wizard**.

The online help can be opened again at any time using **Tools > Settings > Workbench > Display "Getting Started" when starting**

STARTER features a detailed online help function.

---



## The STARTER project wizard

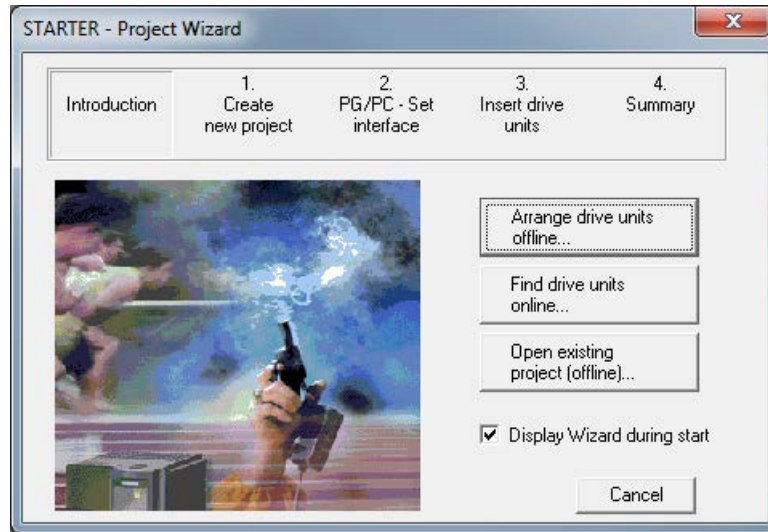


Figure 5-3 STARTER project wizard

⇒ click **Arrange drive units offline...** in the STARTER project wizard.

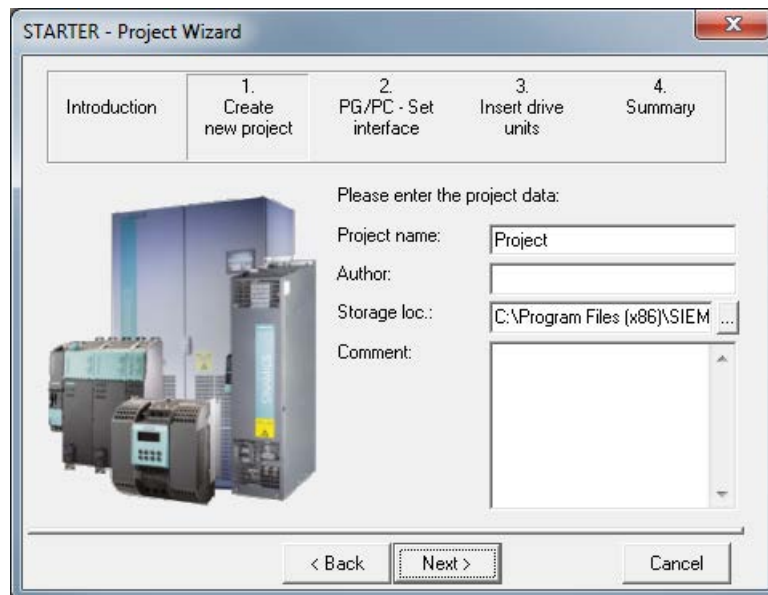


Figure 5-4 Create new project

⇒ Enter a **project name** and, if necessary, the **author**, **memory location** and a **comment**.

⇒ Click **Continue >** to set up the PG/PC interface.

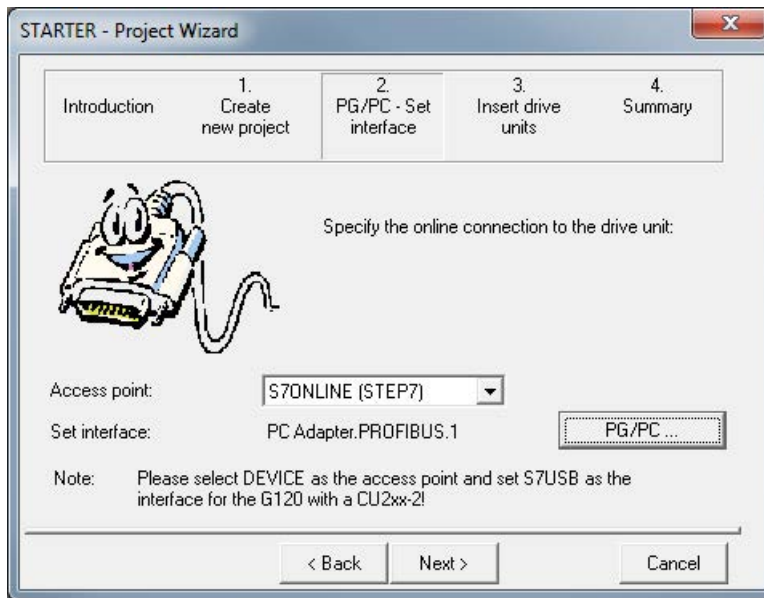


Figure 5-5 Set up interface

⇒ Under **Access point:** select the interface corresponding to your device configuration from:

- Select the S7ONLINE access (STEP7), if the connection to the drive unit is established via PROFINET or PROFIBUS.
- Select the DEVICE access, if the connection to the drive unit is established via the Ethernet interface.

⇒ Click **PG/PC ...** and set up the interface in accordance with your device configuration. The **Properties...**, **Copy...** and **Select...** pushbuttons are now active.

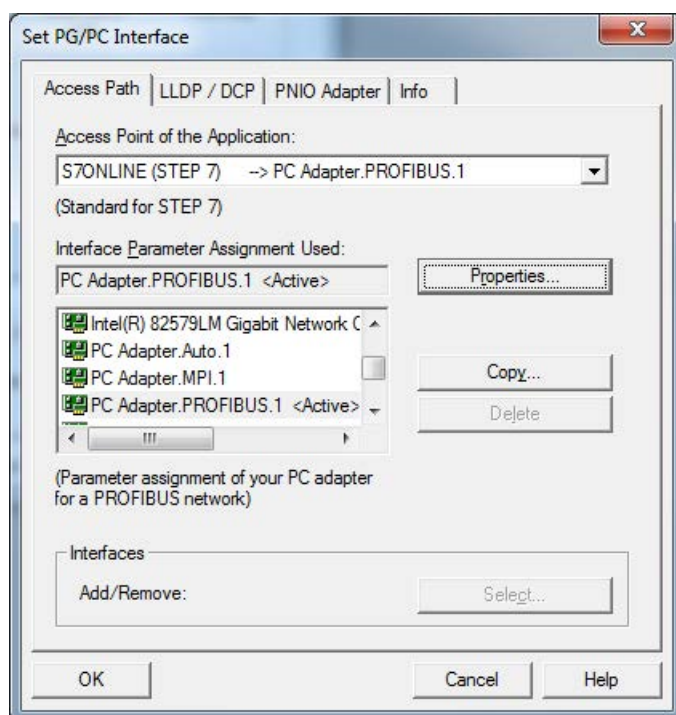


Figure 5-6 Setting the interface

---

**Note****Precondition**

To parameterize the interface, you must install the appropriate interface card (e.g., PC Adapter (PROFIBUS))

---

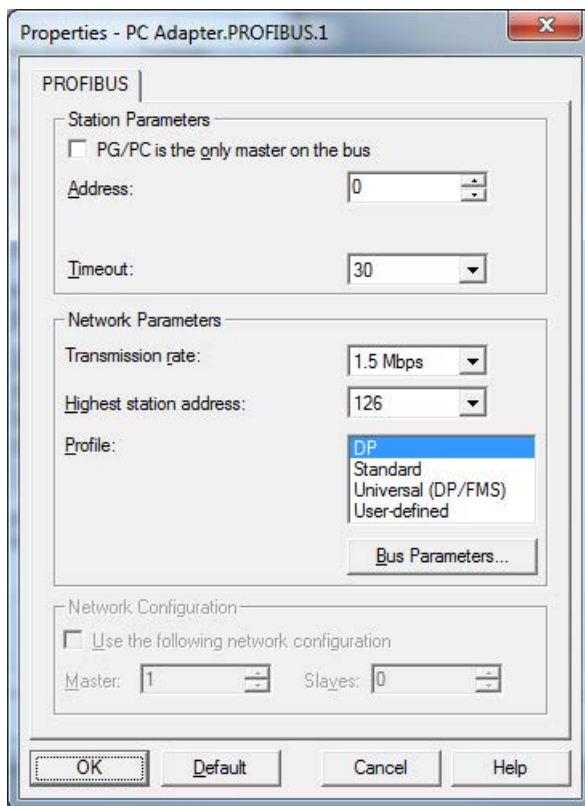


Figure 5-7 Setting the interface - properties

---

**Note****Activate PG/PC is the only master on the bus**

You must activate **PG/PC is the only master on bus** if no other master (PC, S7, etc.) is available on the bus.

---

**Note****Configure even without an interface**

Projects can be created and PROFIBUS addresses for the drive objects assigned even if a PROFIBUS interface has not been installed on the PC.

To prevent bus addresses from being assigned more than once, only the bus addresses available in the project are proposed.

When required, a manual address entry can also be used to enter an already assigned address.

---

⇒ After completion, click **OK** to confirm the settings and to return to the project wizard.

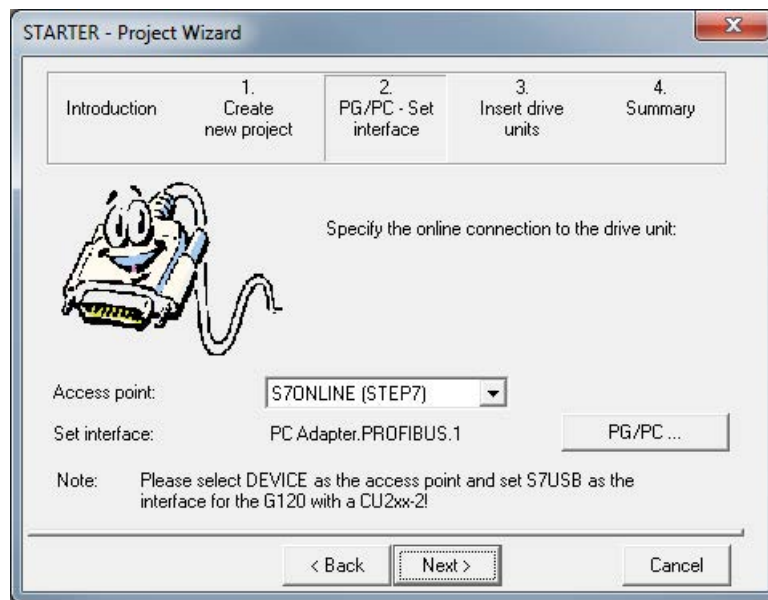


Figure 5-8 Complete setting the interface

⇒ Click **Continue >** to set up a drive unit in the project wizard.

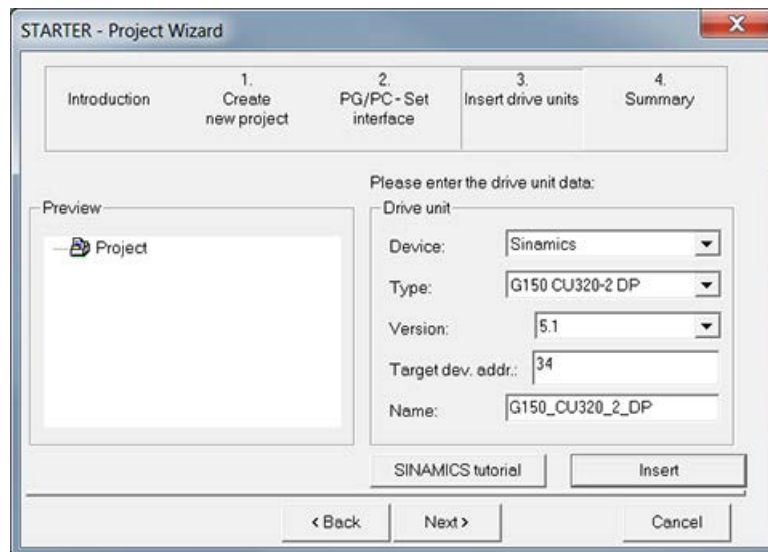


Figure 5-9 Inserting the drive unit

⇒ Choose the following data from the list fields:

**Device:** Sinamics

**Type:** G150 CU320-2 DP or G150 CU320-2 PN with option K95

**Version:** 5.2

**Address of the target device:** the corresponding bus address for the cabinet unit  
The entry in **Name:** can be freely selected.

⇒ Click **Insert**

The selected drive unit is displayed in a preview window in the project wizard.

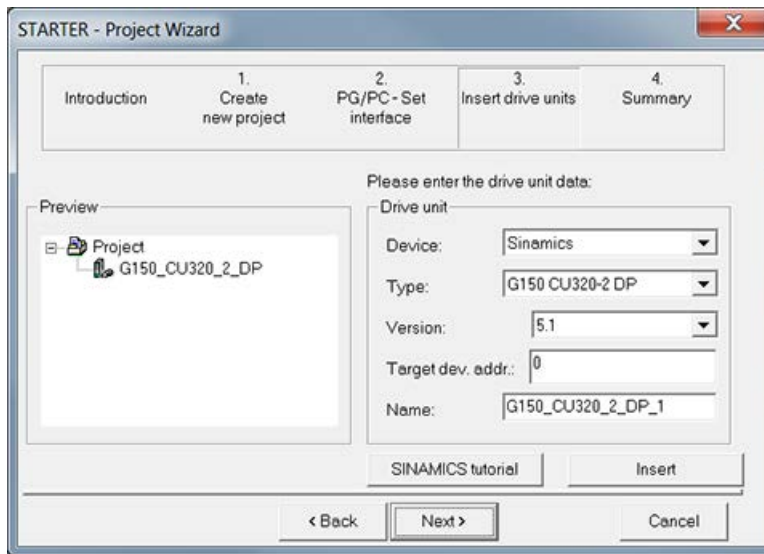


Figure 5-10 Drive unit inserted

⇒ Click **Continue >**  
A project summary is displayed.

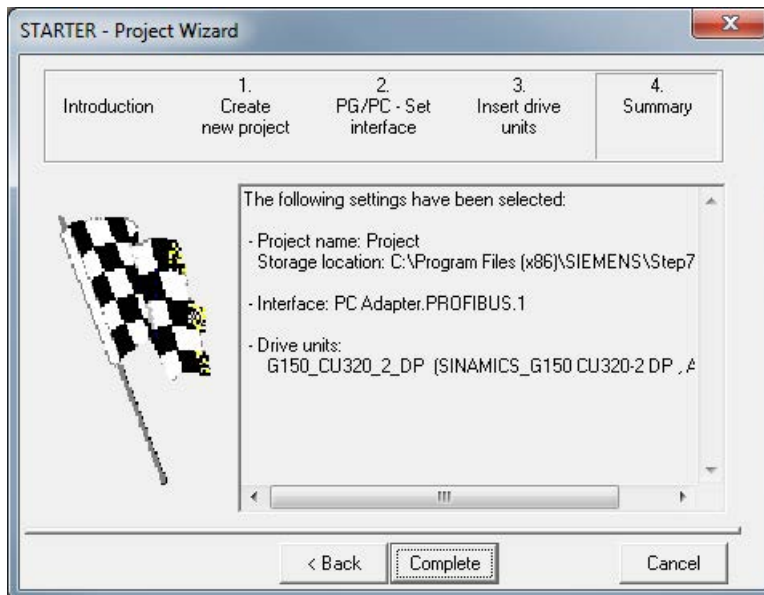


Figure 5-11 Summary

⇒ Click **Complete** to finish creating a new drive unit project.

### 5.3.2 Configure the drive unit

In the project navigator, open the component that contains your drive unit.

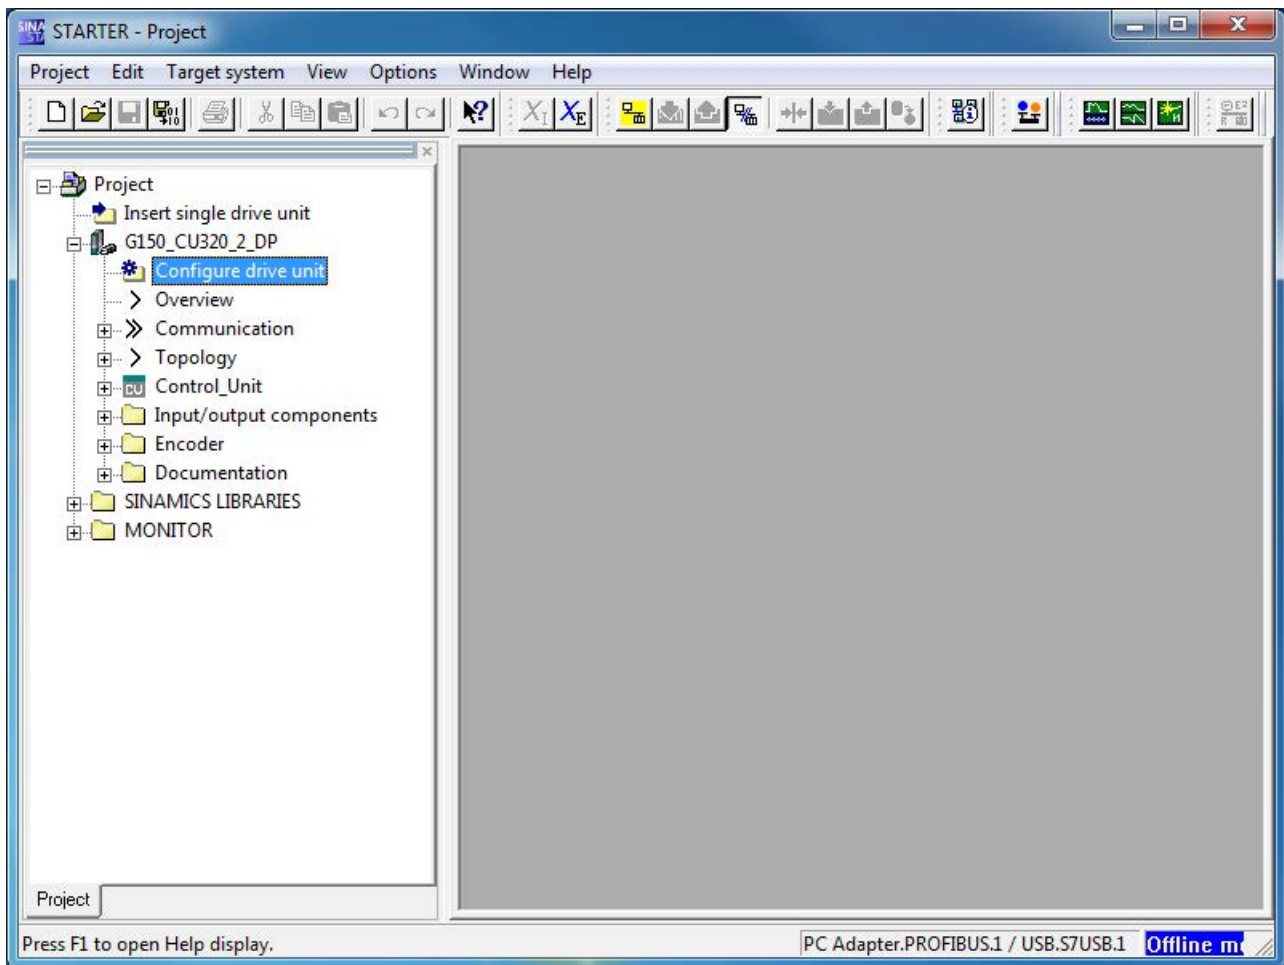


Figure 5-12 Project navigator – configuring the drive unit

⇒ In the project navigator, click the plus sign next to the drive unit that you want to configure. The plus sign becomes a minus sign and the drive unit configuration options are displayed as a tree below the drive unit.

⇒ Double-click **Configure the drive unit**.

## Configuring the drive unit

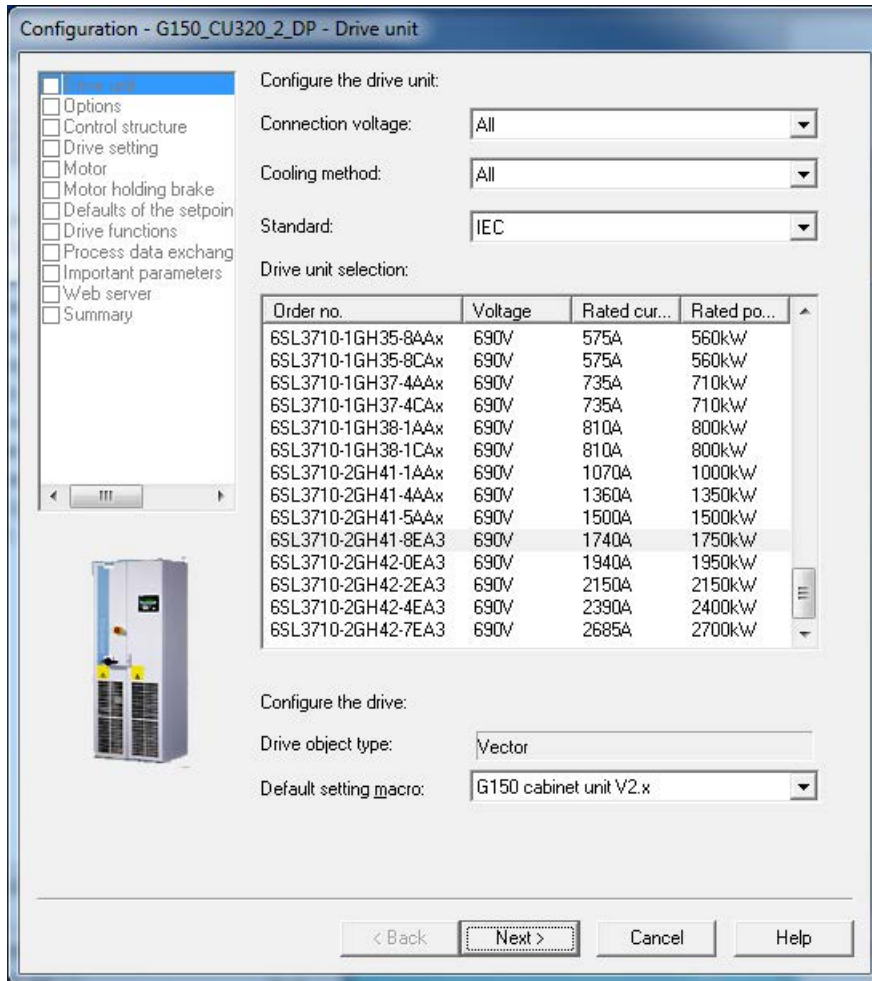


Figure 5-13 Configuring the drive unit

⇒ Under **Connection voltage**, choose the correct voltage. Under **Cooling method**: choose the correct cooling method for your drive unit.

⇒ Under **Standard**:, choose "IEC" to restrict the selection of drive units offered.

### Note

#### Make a pre-selection

In this step, you make a preliminary selection of the cabinet units. You do not define the line voltage and cooling method yet.

⇒ A list is now displayed under **Drive unit selection**:. Choose the corresponding drive unit according to type (article no.) (see rating plate).

⇒ Click **Continue** >



## Selecting options

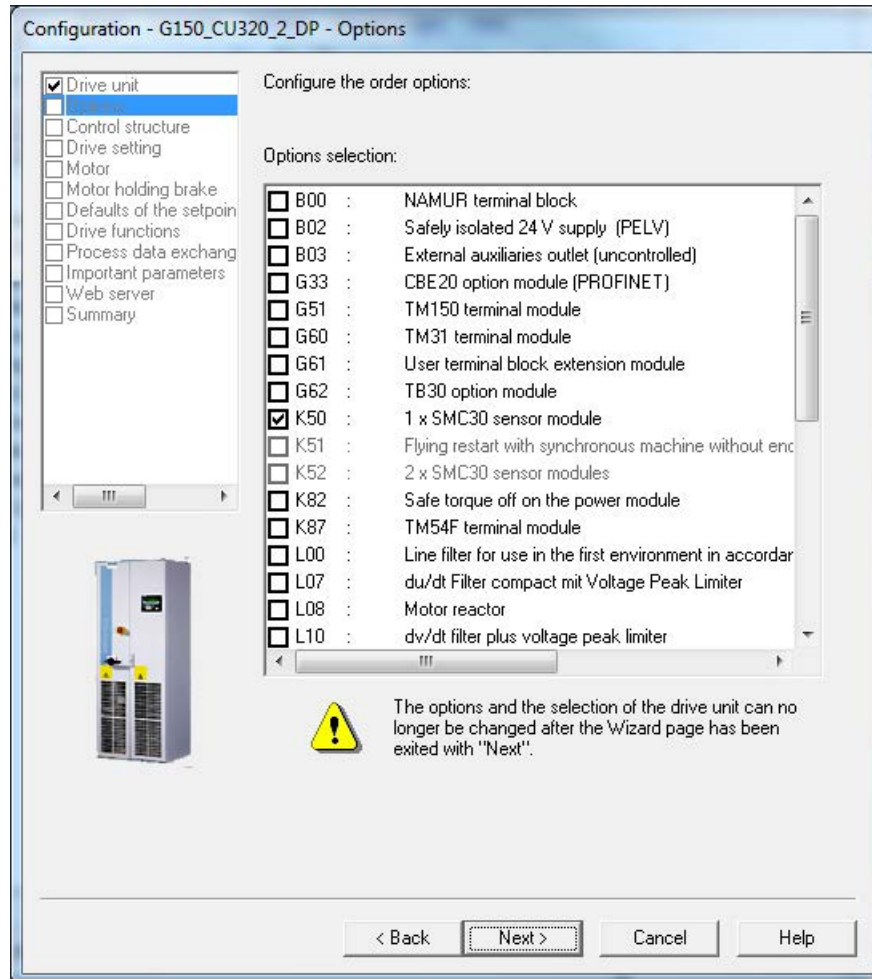


Figure 5-14 Selecting options

⇒ From the combination box **Options selection**: select the options belonging to your drive unit by clicking on the corresponding check box (see type plate).

### NOTICE

#### Damage to the du/dt filter if it is not activated during commissioning

The du/dt filter may be damaged if it is not activated during commissioning.

- Activate the du/dt filter during commissioning by activating the appropriate checkbox (option L07, L10).

---

**Note**

**Motor reactor**

If a motor reactor (option L08) is being used, the option selection must be activated, otherwise the closed-loop motor control will not be able to operate in an optimum fashion.

---

**Note**

**Check option selection**

Check your options carefully against the options specified on the type plate.

Since the wizard establishes internal interconnections on the basis of the options selected, you cannot change the selected options by clicking **< Back**.

If you make an incorrect entry, delete the entire drive unit from the project navigator and create a new one.

---

⇒ Check your options carefully and then click **Continue >**

## Selecting the control structure

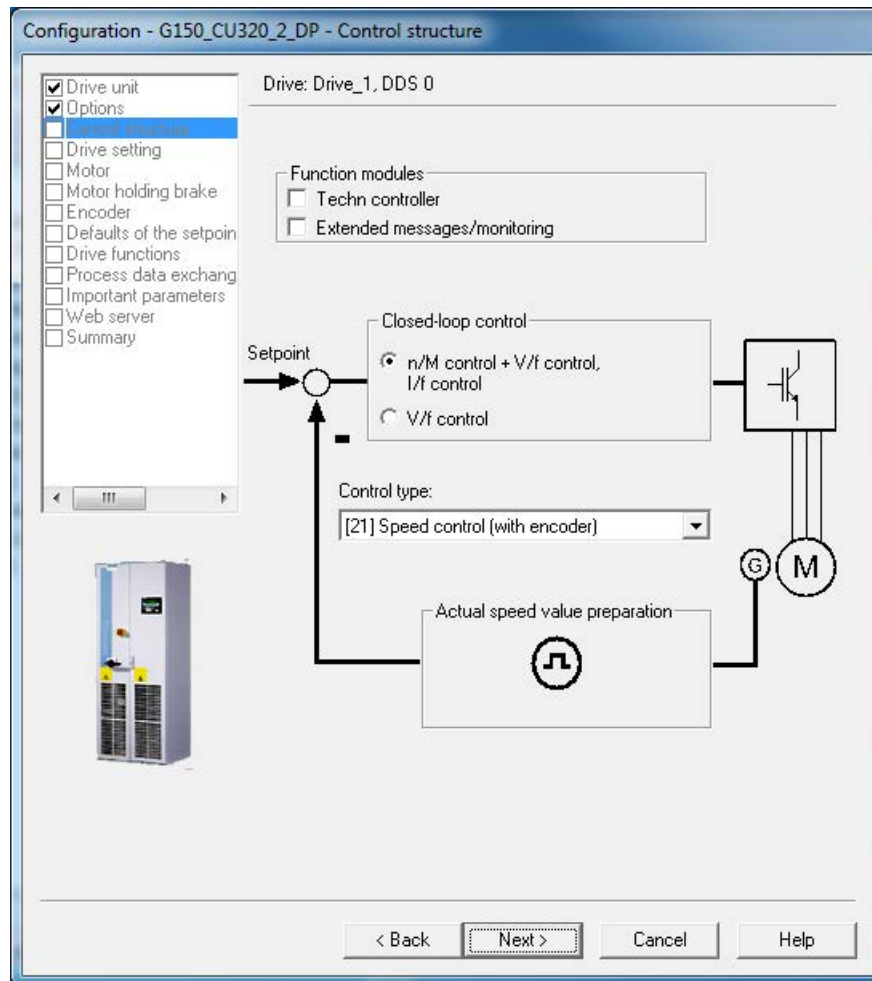


Figure 5-15 Selecting the control structure

⇒ Select the corresponding settings for the closed-loop control structure:

- **Function modules:**

- Technology controller
- Extended messages/monitoring

- **Control:**

- n/M control + U/f control, I/f control
- U/f control

- **Control mode:**

Depending on the selected control, you can select from one of the following open-loop/closed-loop control modes:

- 0: U/f control with linear characteristic
- 1: U/f control with linear characteristic and FCC
- 2: U/f control with parabolic characteristic
- 3: U/f control with parameterizable characteristic
- 4: U/f control with linear characteristic and ECO
- 5: U/f control for drive requiring a precise frequency (e.g. textiles)
- 6: U/f control for drive requiring a precise frequency and FCC
- 7: U/f control with parabolic characteristic and ECO
- 15: Operation with braking resistor
- 18: I/f control with fixed current
- 19: U/f control with independent voltage setpoint
- 20: Speed control (without encoder)
- 21: Speed control (with encoder)
- 22: Torque control (without encoder)
- 23: Torque control (with encoder)

⇒ Click **Continue** >

## Configuring the drive unit properties

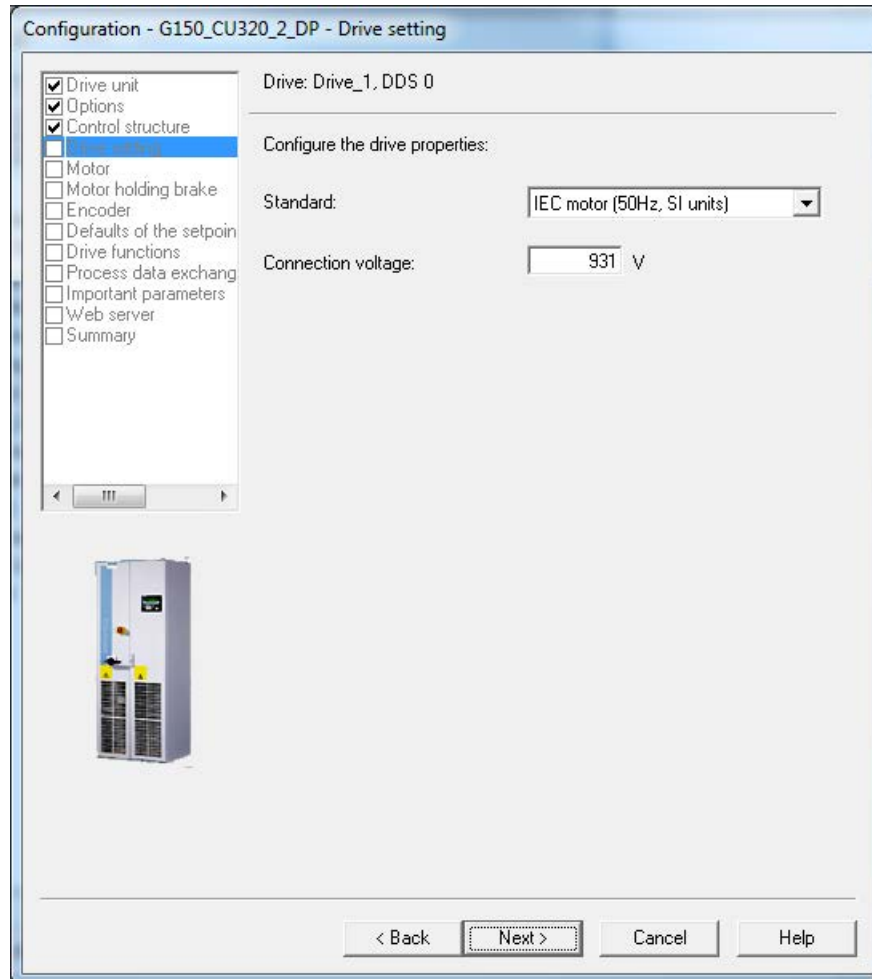


Figure 5-16 Configuring the drive unit properties

⇒ Under **Standard:**, choose the appropriate standard for your motor, whereby the following is defined:

- IEC motor (50 Hz, SI unit): Line frequency 50 Hz, motor data in kW
- NEMA motor (60 Hz, US unit): Line frequency 60 Hz, motor data in hp

⇒ Under **Supply voltage:** the DC link voltage of the cabinet unit is specified (this should not be changed).

⇒ Click **Continue >**

The connected motor can be selected and/or entered in different ways:

- by selecting a standard motor from a list
- by entering the motor data.

## Selecting a standard motor type from a list

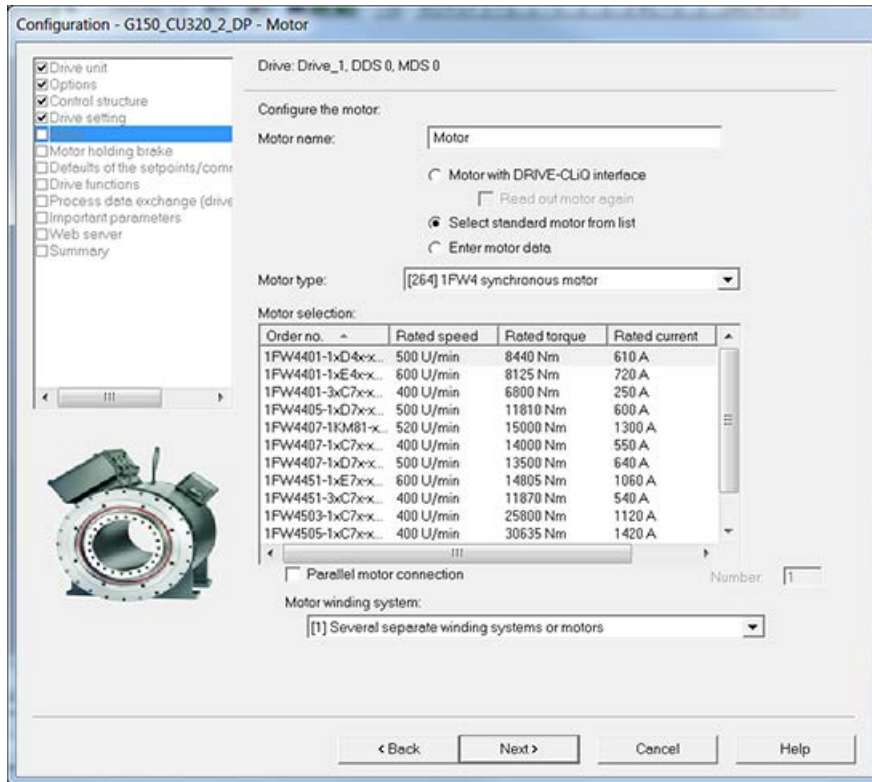


Figure 5-17 Configuring a motor – selecting the motor type, selecting a standard motor from a list

- ⇒ Under **Motor name:** enter a name for the motor.
- ⇒ Select a **standard motor from the list**
- ⇒ From the selection box next to **Motor type:**, select the corresponding motor type
- ⇒ From the list **Select motor:**, select the corresponding motor
- ⇒ Under **Parallel motor connection**, enter the number of motors connected in parallel when required.  
The motors connected in parallel must be of the same type and size.
- ⇒ Under **Motor winding system:** select which motor winding system the connected motor has.
- ⇒ Click on **Continue >** to configure the motor holding brake

## Selecting the motor type by entering the motor data

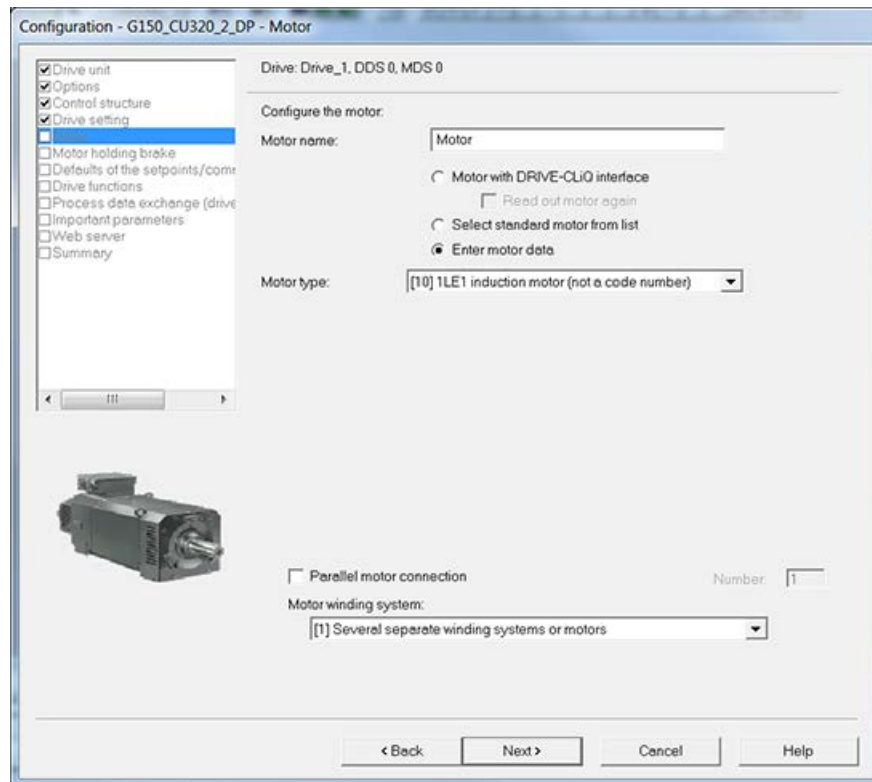


Figure 5-18 Configuring the motor – selecting the motor type, entering the motor data

⇒ Under **Motor name**: enter a name for the motor.

⇒ Select **Enter motor data**

⇒ From the selection box next to **Motor type**:, select the appropriate motor for your application.

⇒ Under **Parallel motor connection**, enter the number of motors connected in parallel when required.

The motors connected in parallel must be of the same type and size.

⇒ Under **Motor winding system**: select which motor winding system the connected motor has.

### Note

#### Selecting the motor type

The selection of the motor type is used to pre-assign specific motor parameters and to optimize the operating characteristics and behavior. Details are described in the list manual in the p0300 parameter.

**Note****Commissioning of an induction motor**

The steps described below also apply to commissioning an induction motor.

When commissioning a permanent-magnet synchronous motor, there are a few special conditions that apply, which are detailed in a separate chapter (see "Setpoint channel and closed-loop control / permanent-magnet synchronous motors").

⇒ Click **Continue** >

**Configuring the motor – Entering motor data**

Configuration - G150\_CU320\_2\_DP - Motor data

Drive: Drive\_1, DDS 0, MDS 0

Motor data, Induction motor (rotary):

aramete	Parameter text	Value	Unit
p304[0]	Rated motor voltage	690	Vrms
p305[0]	Rated motor current	1200.00	Arms
p307[0]	Rated motor power	1225.00	kW
p308[0]	Rated motor power factor	0.880	
p310[0]	Rated motor frequency	50.00	Hz
p311[0]	Rated motor speed	1491.0	rpm
p335[0]	Motor cooling type	[0] No	

The motor data must be entered completely!

Enter optional motor data

Enter optional equivalent circuit diagram data

Note:  
Deselection of the optional or equivalent circuit diagram data resets these irrevocably.

Motor identification is required when the equivalent circuit diagram data is deselected. Motor identification is optional when the equivalent circuit diagram data is entered.

< Back   Next >   Cancel   Help

Figure 5-19 Configuring the motor – Entering motor data

⇒ Enter the motor data (see motor rating plate).

⇒ Activate **Enter optional motor data** if necessary.

⇒ Activate **Enter optional equivalent circuit diagram data** if necessary.



**Note****Entering equivalent circuit diagram data**

You should only activate the **Enter optional equivalent circuit diagram data** if the data sheet with equivalent circuit diagram data is available. If any data is missing, an error message will be output when the system attempts to load the drive project to the target system.

⇒ Click **Continue** >


**Configuring the motor – Entering optional data**

Figure 5-20 Entering optional motor data

⇒ If required, enter the optional motor data.

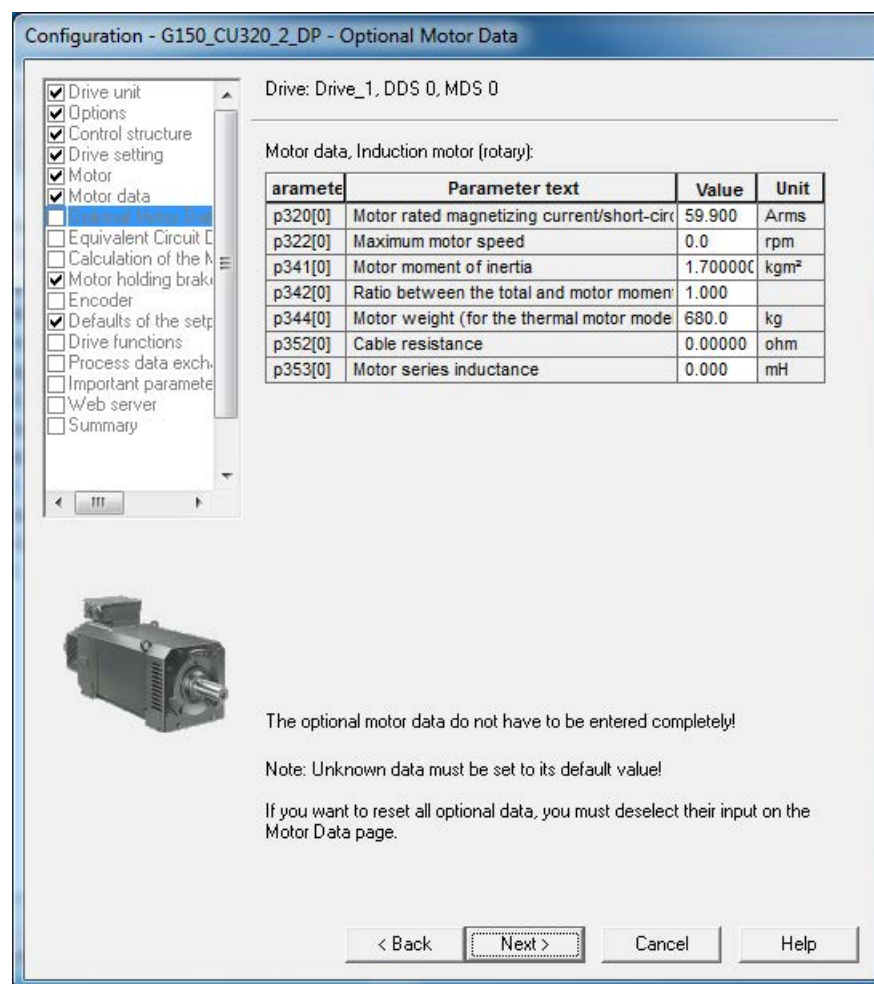⇒ Click **Continue** >

## Configuring the motor – Entering the equivalent circuit diagram data

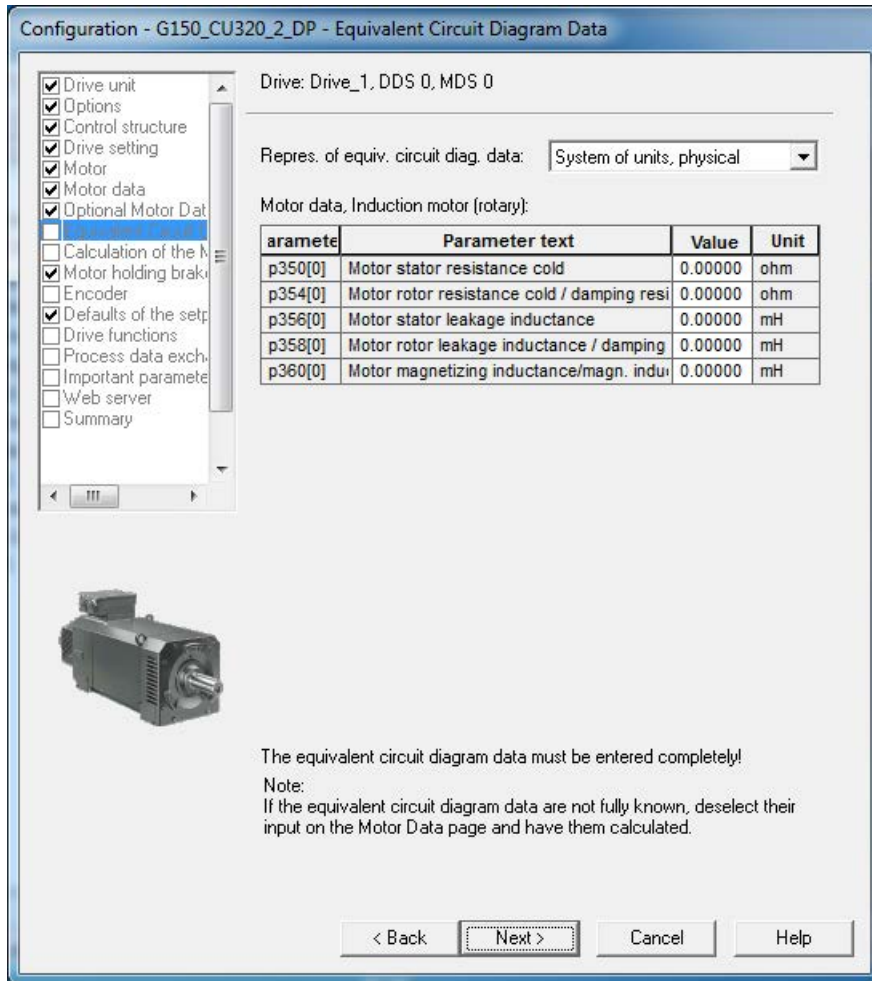


Figure 5-21 Entering equivalent circuit diagram data

⇒ Select one of the equivalent circuit diagram data representations:

- **Physical system of units**  
The equivalent circuit diagram data are shown in the form of physical units.
- **Referred system of units**  
The equivalent circuit diagram data is shown as a % referred to the rated motor data.

⇒ Enter the equivalent circuit diagram data completely.

⇒ Click **Continue >**

### Calculating the motor/controller data

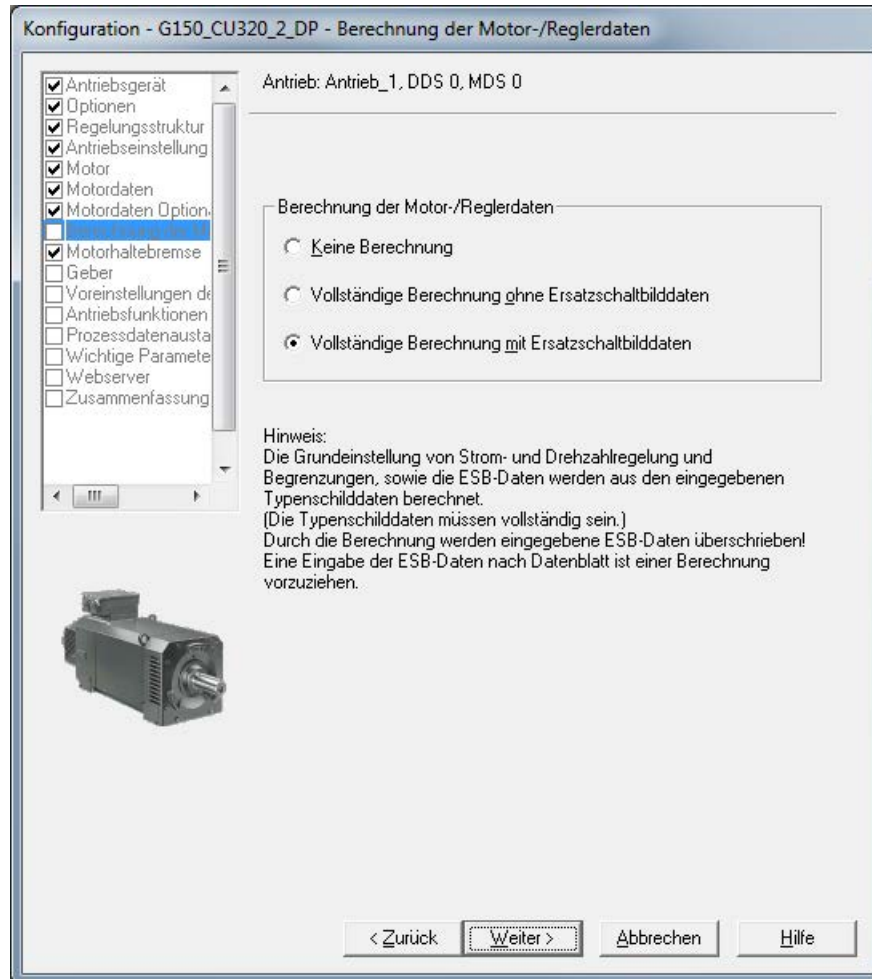


Figure 5-22 Calculating the motor/controller data

⇒ In **Calculation of the motor/controller data**, select the appropriate default settings for your device configuration.

#### Note

##### Manual input of the equivalent circuit diagram data

If the equivalent circuit diagram data was entered manually (see "Entering the equivalent circuit diagram data"), then the motor/controller data should be calculated **without** calculating the equivalent circuit diagram data.

⇒ Click **Continue** >

## Configuring the motor holding brake

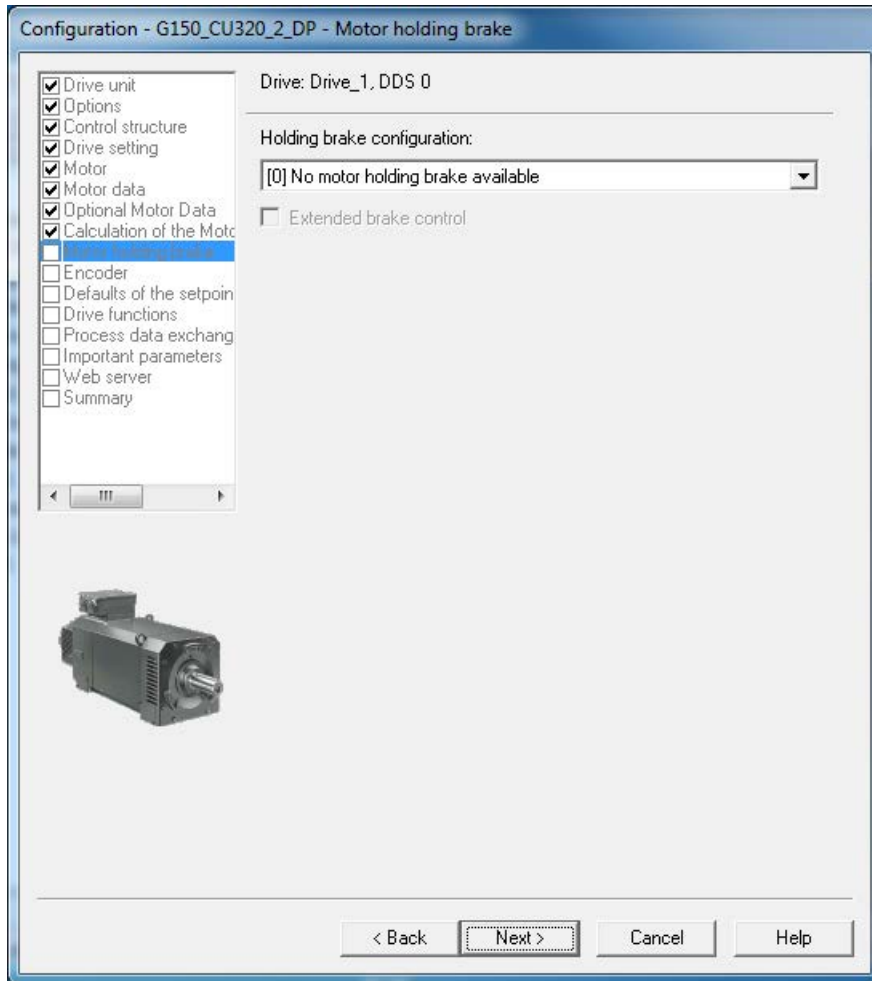


Figure 5-23 Configuring the motor holding brake

⇒ Under **Holding brake configuration**: choose the appropriate setting for your device configuration:

- 0: No motor holding brake being used
- 1: Motor holding brake like sequence control
- 2: Motor holding brake always open
- 3: Motor holding brake like sequence control, connection via BICO

⇒ When a motor holding brake is selected, you can also activate the "Extended brake control" function module.

⇒ Click **Continue >**

## Entering the encoder data (option K50)

### Note

#### Entering the encoder data

If you have specified option K50 (Sensor Module SMC30), the following screen is displayed for you to enter the encoder data.

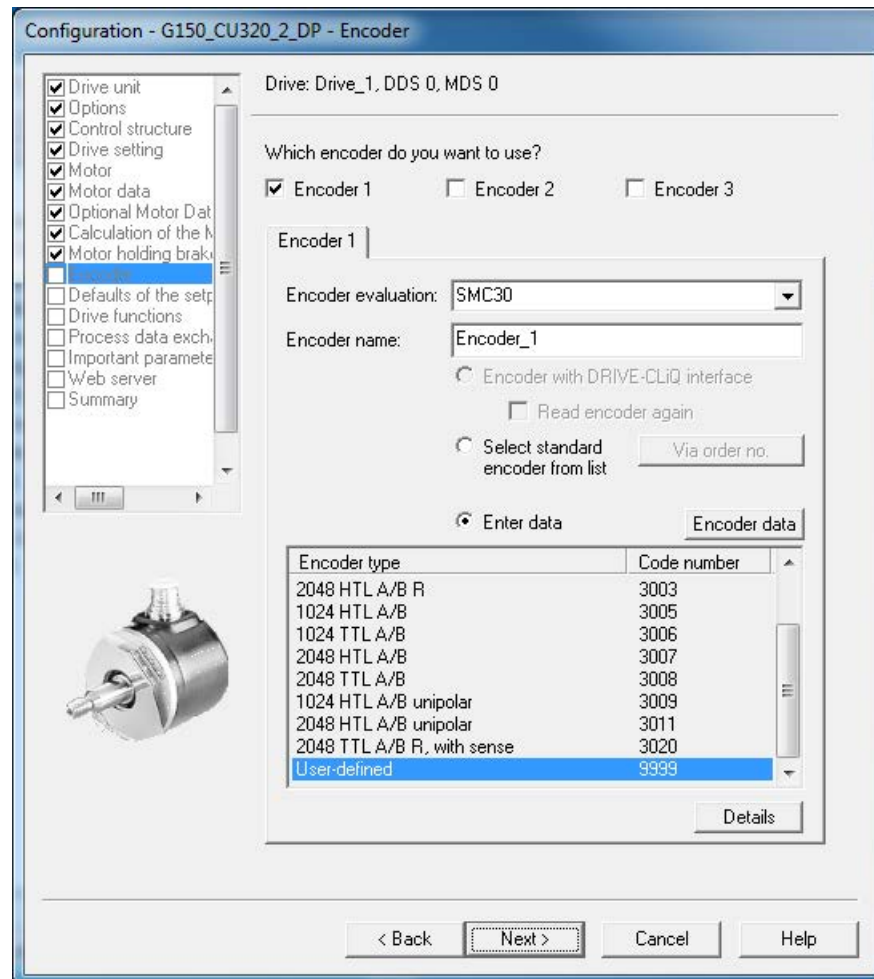


Figure 5-24 Entering the encoder data

⇒ In the **Encoder name:** field, enter a name of your choice.

### Note

#### Delivery condition

The delivery condition is a bipolar HTL encoder with 1024 pulses per revolution at terminal X521/X531.

⇒ To select a different predefined encoder configuration, check the **Select standard encoder from list** radio button and select one of the encoders from the list.

⇒ To enter special encoder configurations, click the **Enter data** radio button and then the **Encoder data** button. The following input screen is displayed for you to enter the required data.

Figure 5-25 Entering encoder data – User-defined encoder data

⇒ Select the **measuring system**.

In conjunction with SINAMICS G150, the following encoders can be selected:

- HTL
- TTL

⇒ Enter the required encoder data.

⇒ under the **Details** tab, special encoder properties can be set, for example, gear ratio, fine resolution, inversion, measuring gear position tracking.

⇒ Click **OK**.

**NOTICE****Material damage when selecting the incorrect encoder supply voltage**

Once the encoder has been commissioned, the supply voltage (5/24 V) set for the encoder is activated on the SMC30 module. If a 5 V encoder is connected and the supply voltage has not been set correctly, the encoder may be damaged.

- Set the correct supply voltage for the connected encoder.

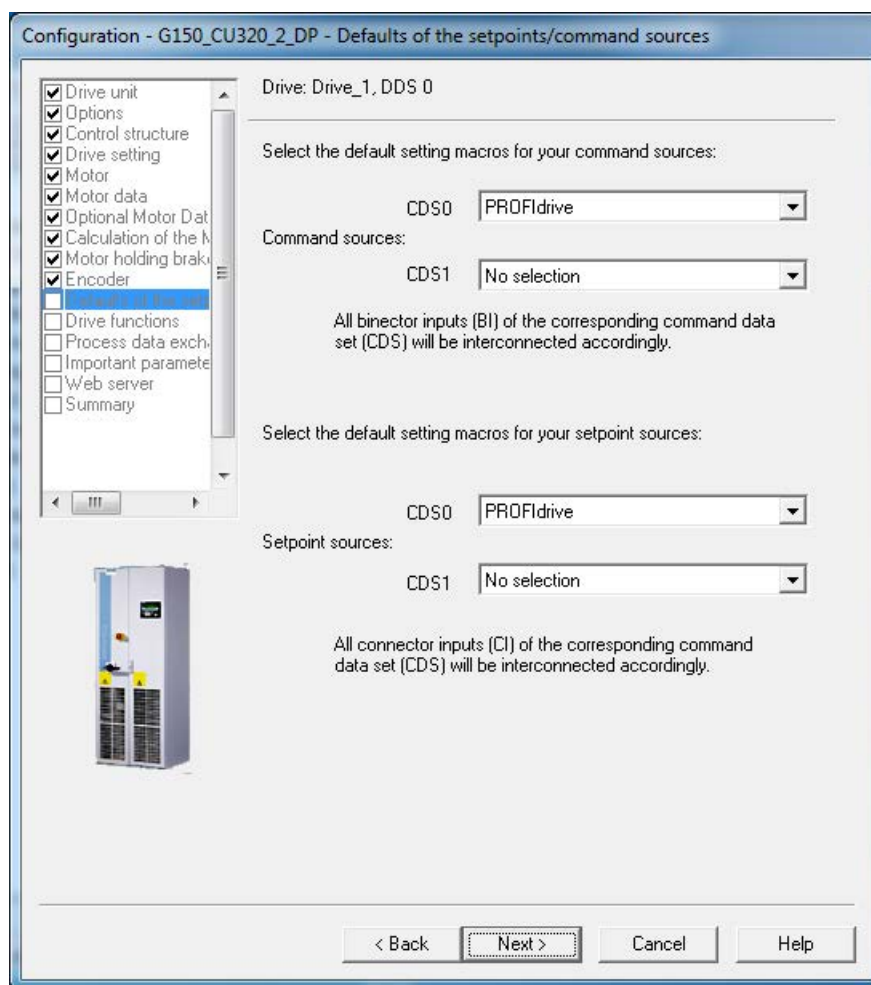
**Default settings for setpoints/command sources**

Figure 5-26 Default settings for setpoints/command sources

⇒ Under **Command sources**; choose and **Setpoint sources**: choose the appropriate settings for your device configuration.

The following command and setpoint source options are available:

Command sources:	PROFIdrive (default) TM31 terminals NAMUR PROFIdrive NAMUR
Setpoint sources:	PROFIdrive (default) TM31 terminals Motorized potentiometer Fixed setpoint

---

**Note**

**Use of CDS0**

With SINAMICS G150, only CDS0 is normally used as a default setting for the command and setpoint sources.

Make sure that the selected default setting is compatible with the actual system configuration.

---

**Note**

**Do not use a selection**

The choice "no selection" is also available as default setting for the command and setpoint sources; if selected, no default settings are applied for the command and setpoint sources.

---

⇒ Check your default settings carefully and then click **Continue >**



## Selecting drive functions

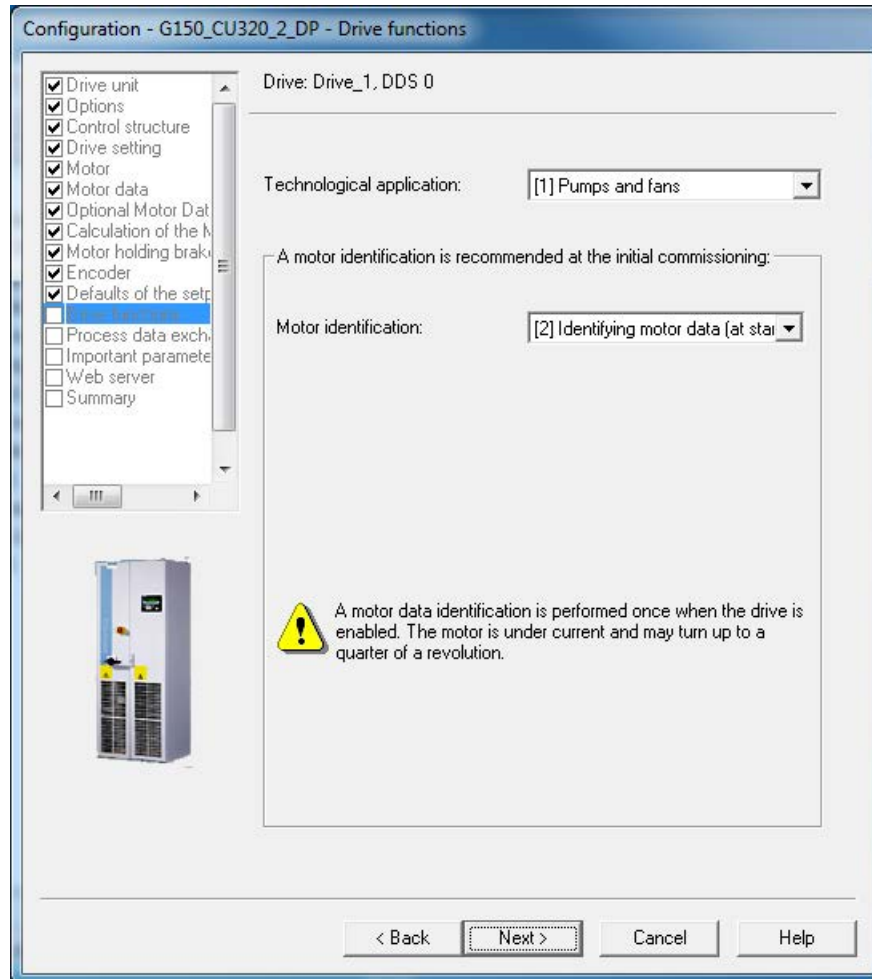


Figure 5-27 Selecting drive functions

⇒ Select the required data:

- **Technological application:**

- **"(0) Standard Drive (VECTOR)"**

The edge modulation is not enabled.

The dynamic voltage reserve is increased (10 V), as a result, which decreases the maximum output voltage.

- **"(1) Pumps and fans" (default setting)**

Edge modulation is enabled.

The dynamic voltage reserve is reduced (2 V), which increases the maximum output voltage.

- **"(2) Encoderless control down to  $f = 0$  (passive loads)"**

Closed-loop controlled operation down to zero speed is possible for passive loads.

These include applications in which the load cannot produce a regenerative torque on startup and the motor comes to a standstill when pulses are inhibited.

- **"(4) Dynamic response in the field weakening range"**  
Space vector modulation with overmodulation is enabled.  
The dynamic voltage reserve is increased (30 V), which reduces the maximum output voltage.
- **"(5) Start-up with high break loose torque"**  
This selection is suitable for speed-controlled start-up with sensorless vector control.  
Start-up current permanent and is increased upon accelerating.
- **"(6) High load inertia"**  
Suitable for high load inertia with/without gearbox coupling.  
The acceleration model is activated, the acceleration control is 100%.
- **Motor identification:**
  - (0): Disabled
  - (1): Identify motor data (standstill) and optimize the closed-loop speed control
  - (2): Identify motor data (standstill)
  - (3): Optimize the closed-loop speed control (rotating)

---

**Note****Identifying motor data at standstill**

In many cases, "Identify motor data (standstill)" is the correct selection for SINAMICS G150. "Identify motor data (standstill) and optimize speed control" is the recommended setting for closed-loop speed control with encoder; this measurement is normally performed with a motor that is not coupled to a load.

---

** WARNING****Unexpected motor movement during motor identification in the rotating mode**

Motor movement caused by the motor data identification routine can result in death, severe injury or material damage.

- Ensure that nobody is in the hazardous zone - and that the mechanical system can freely move.
- Ensure that the EMERGENCY STOP functions are fully functional when commissioning the drive.

⇒ Click **Continue** >

## Selecting process data exchange

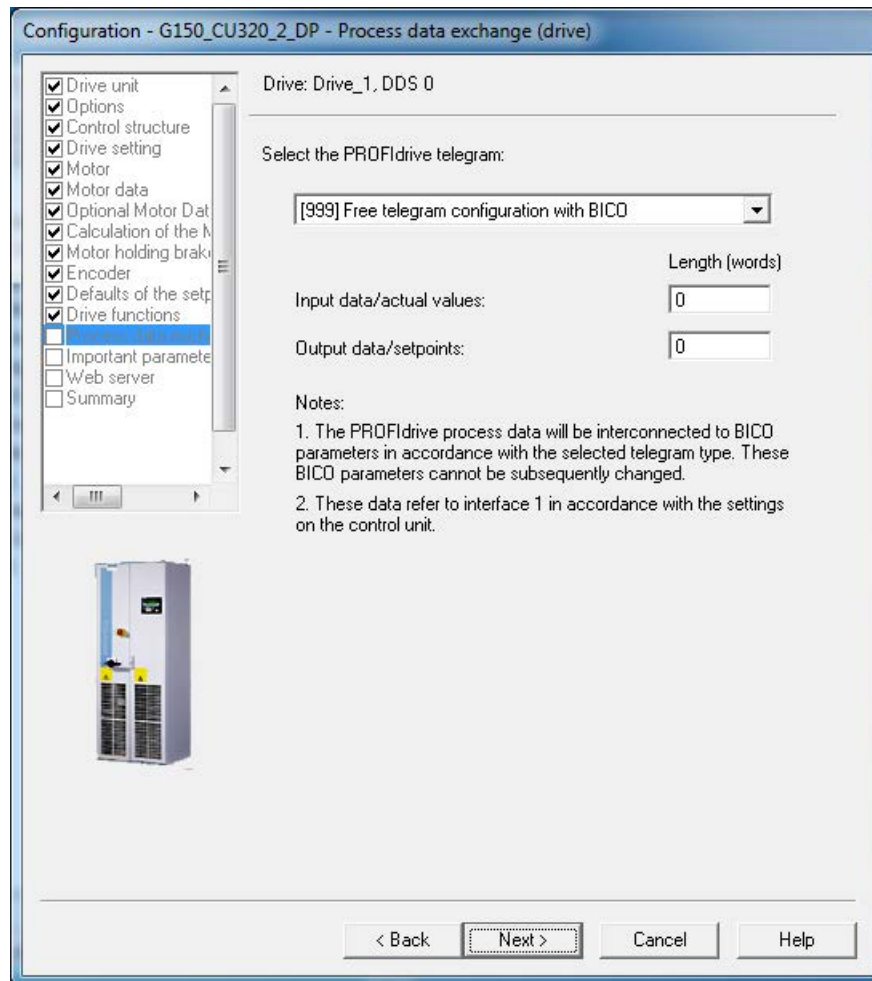


Figure 5-28 Selecting process data exchange

⇒ select the PROFIdrive telegram type.

### Message frame types

- 1: Standard telegram 1, PZD-2/2
- 2: Standard telegram 2, PZD-4/4
- 3: Standard telegram 3, PZD-5/9
- 4: Standard telegram 4, PZD-6/14
- 20: SIEMENS telegram 20, PZD-2/6
- 220: SIEMENS telegram 220, PZD-10/10
- 352: SIEMENS telegram 352, PZD-6/6
- 999: Free telegram configuration with BICO (default setting)

⇒ Click **Continue** >

## Entering important parameters

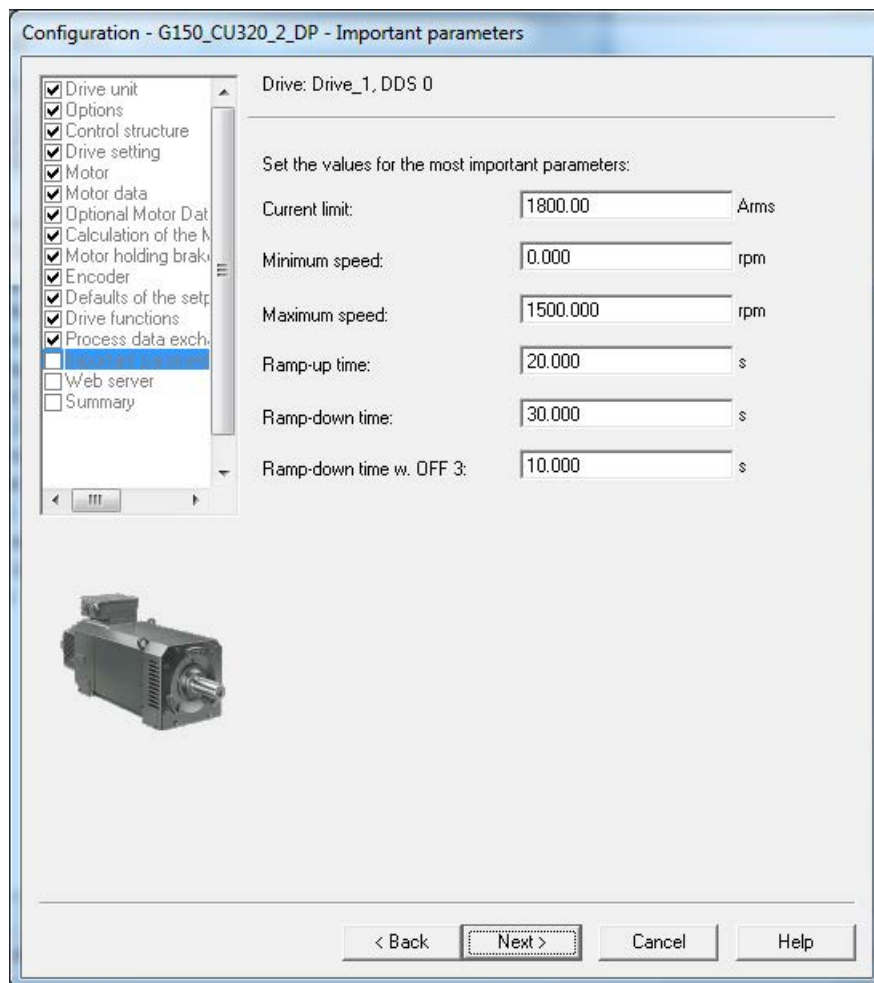


Figure 5-29 Important parameters

⇒ Enter the required parameter values.

---

### Note

#### Tooltips

STARTER provides tooltips if you position your cursor on the required field **without clicking in the field**.

---

⇒ Click **Continue >**

## Configuring a web server

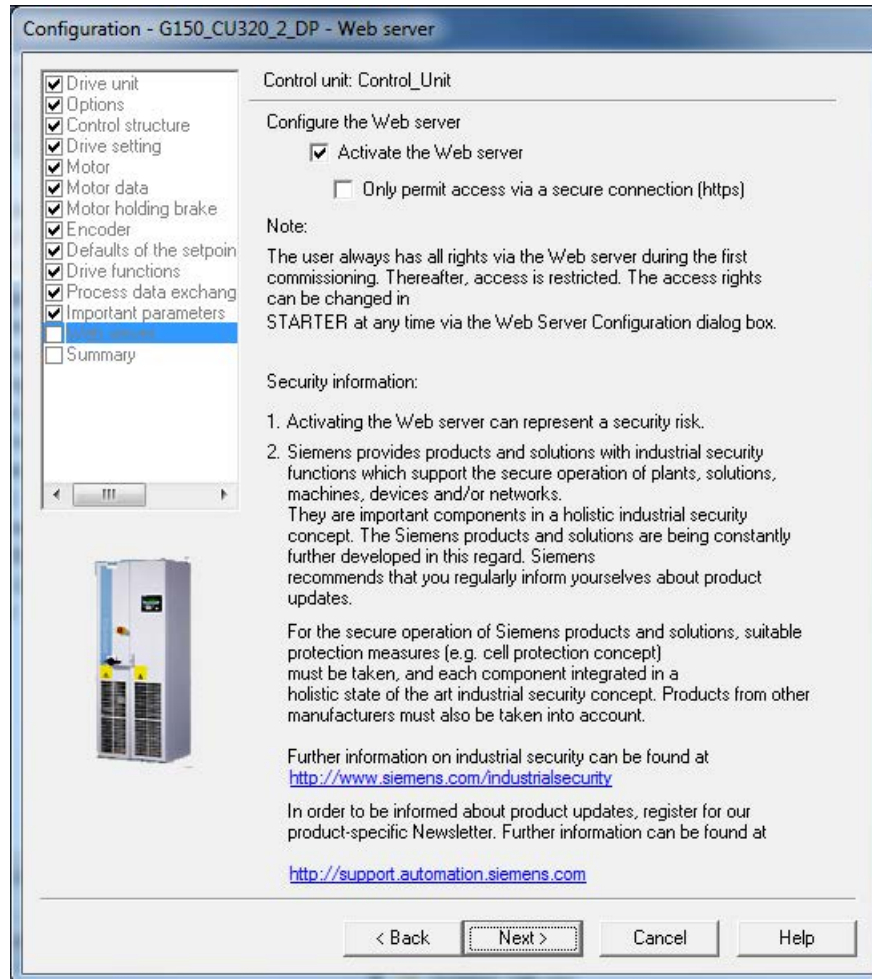


Figure 5-30 Configuring a web server

⇒ Configure the web server.

The Web server is activated in the factory setting.

Activate and deactivate the web server under **Activate web server**.

Select **Only allow access via secure connection (https)** if necessary.

---

### Note

#### Industrial Security

Observe the notes on industrial security.

---

⇒ Click **Continue >**.

## Summary of the drive unit data

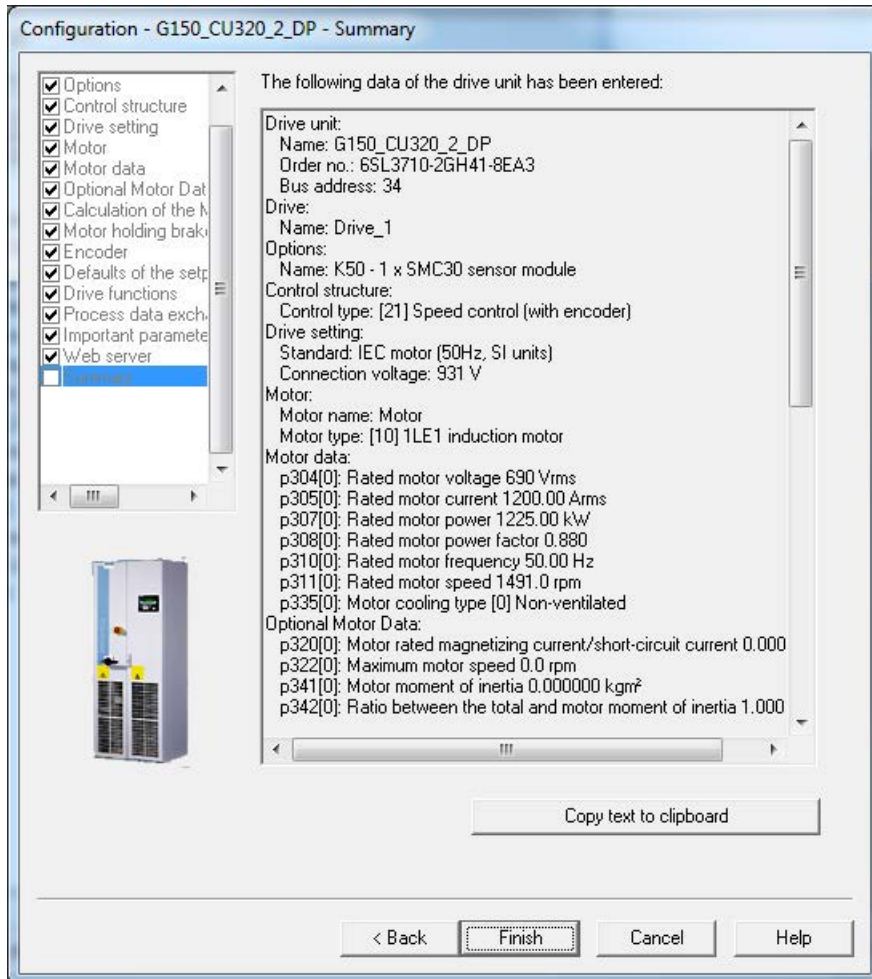


Figure 5-31 Summary of the drive unit data

⇒ You can use the **Copy to clipboard** function to copy the summary of the drive unit data displayed on the screen to a word processing program for further use.

⇒ Click **Finish**.

⇒ Save your project to the hard disk by choosing **Project > Save**.

### 5.3.3 Additional settings required

After commissioning by means of STARTER, additional settings must be made:

#### Settings to monitor the checkback signal from the circuit breaker for 12-pulse infeed

The checkback contacts of the circuit breakers are connected in series in the factory and wired to digital input 5 of the Control Unit.

After the drive unit has been commissioned, the checkback signal monitoring function must be activated. This is realized using parameter  $p0860\{\text{VECTOR}\} = 722.5\{\text{CU}\}$ .



#### Activate monitoring of circuit breaker feedback signal

If the monitoring function for the circuit breaker checkback signal is not activated, then the drive could be powered up even if a circuit breaker on an individual system fails. This could overload and damage the input rectifiers on the individual system.

#### Note

##### Restoring the factory setting

When resetting (restoring) the parameterization to the factory setting, this setting must be made again after the drive unit has been recommissioned.

#### Settings for motor connection to a motor with one-winding system

During commissioning, a motor with several winding systems is automatically defined.

The setting for a one-winding system is made after commissioning has been completed by setting parameter  $p7003$  to 0.

#### Note

##### Setting "motor with a one-winding system"

If the "motor with a one-winding system" is not set using  $p7003 = 0$ , then the drive can be powered down (tripped) during the motor identification routine with an "overcurrent" fault message. The system will not be properly tuned.

#### Note

##### Restoring the factory setting

When resetting (restoring) the parameterization to the factory setting, this setting must be made again after the drive unit has been recommissioned.

### 5.3.4 Transferring the drive project

You have created a project and saved it to your hard disk. You now have to transfer your project configuration data to the drive unit.

#### Specifying the online access point

To connect to the target system, the chosen access point must be specified.

In the menu bar, select **Target system > Select target devices ...**; the following dialog screen appears.

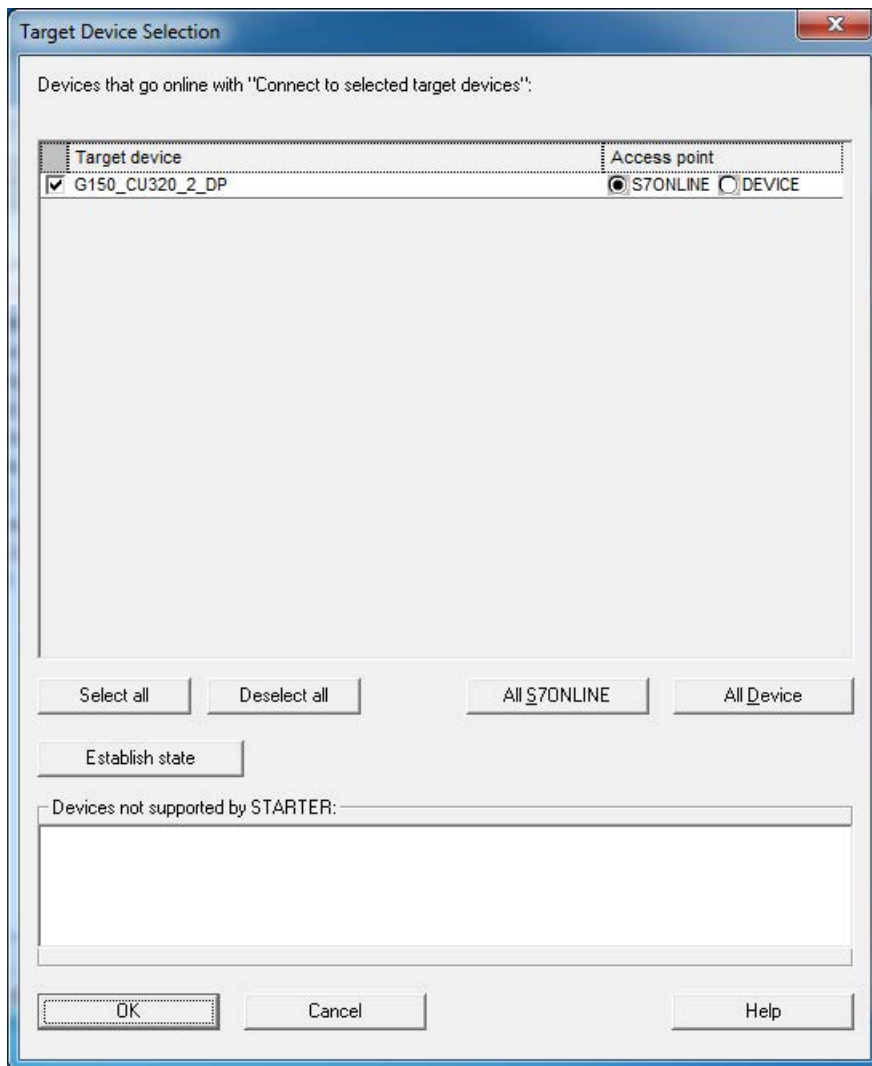


Figure 5-32 Target device selection and access points

The dialog screen lists all existing devices in the project.






Specify access point:

- Select S7ONLINE access for a device, if the connection to the programming device or PC is established via PROFINET or PROFIBUS.
- Select DEVICE access for a device if the connection to the programming device or PC is established via the Ethernet interface.

## Transferring the STARTER project to the drive unit

To transfer the STARTER project you created offline to the drive unit, carry out the following steps:

Step		Selection in toolbar
1	Select menu item <b>Project &gt; Connect to selected target system</b>	
2	Choose the menu item <b>Target system &gt; Load &gt; Load project to target system</b> <b>Save project data so it is protected against power failure</b> The project has now been loaded to the drive unit. This data is currently available only in the drive unit's volatile memory and not on the CompactFlash Card! To store the project data on the memory card so that it is protected in the event of a power failure, carry out the following step.	
3	Select menu item <b>Target system &gt; Copy from RAM to ROM</b>	

### Note

#### Copy from RAM to ROM

The **Copy from RAM to ROM** icon is only active when the drive unit is selected in the project navigator.

### Results of the previous steps

- You have created a drive unit project offline using STARTER.
- You have saved the project data to the hard disk on your PC.
- You have transferred the project data to the drive unit.
- You have saved your project data to your drive's memory card so that it is backed up in the event of a power failure.

---

#### Note

#### Tip for working with STARTER

The STARTER commissioning tool supports complex drive system operations.

If you are confronted with any system conditions in online mode that are beyond your control, you are advised to delete the drive project from the project navigator and carefully create a new project in STARTER using the appropriate configuration data for your application.

---

## 5.3.5 Commissioning with STARTER via Ethernet

### Description

The Control Unit can be commissioned using a programming device (PG/PC) via the integrated Ethernet interface. This interface is provided for commissioning purposes only and cannot be used to control the drive in operation.

A routing of the integrated Ethernet interface via any inserted CBE20 expansion card is not possible.

### Preconditions

- STARTER as of version 4.1.5
- Control Unit CU320-2 DP as of device version "C", CU320-2 PN Control Unit

### STARTER via Ethernet (example)

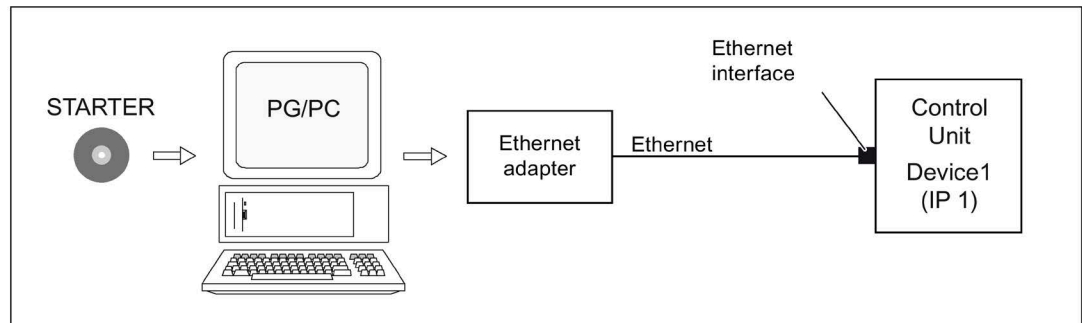


Figure 5-33 STARTER via Ethernet (example)

### Procedure for establishing online operation via Ethernet

1. Install the Ethernet interface in the PG/PC according to the manufacturer's specifications.
2. Set the IP address of the Ethernet interface in Windows.
  - Assign the PG/PC a free IP address (e.g. 169.254.11.1 ).
  - The factory setting for the internal Ethernet interface -X127 of the Control Unit is 169.254.11.22.
3. Set the access point of the STARTER commissioning tool.
4. Use the STARTER commissioning tool to specify a name for the Control Unit interface.

The Ethernet interface must be initialized so that the STARTER can establish communication. Select online operation in STARTER.

### Setting the IP address in Windows

---

#### Note

The following procedure is based on the Windows 7 operating system. Operation can deviate slightly for other operating systems

---

1. In the PG/PC call the control panel using the "Start > Control Panel" menu item.
2. In the control panel of your PG/PC, under "Network and Internet", select the "Network and Sharing Center" function.
3. For your network card that is displayed, click the connection link.
4. Click in the status dialog of the connection on "Properties" and acknowledge the subsequent confirmation prompt with "Yes".
5. In the properties dialog of the connection, select the "Internet protocol 4 (TCP/IPv4)" element and then click "Properties".
6. In the properties dialog, activate the "Use the following IP address" option.

7. Set the IP address of the PG/PC access interface to the Control Unit to 169.254.11.1 and the subnet mask to 255.255.0.0.

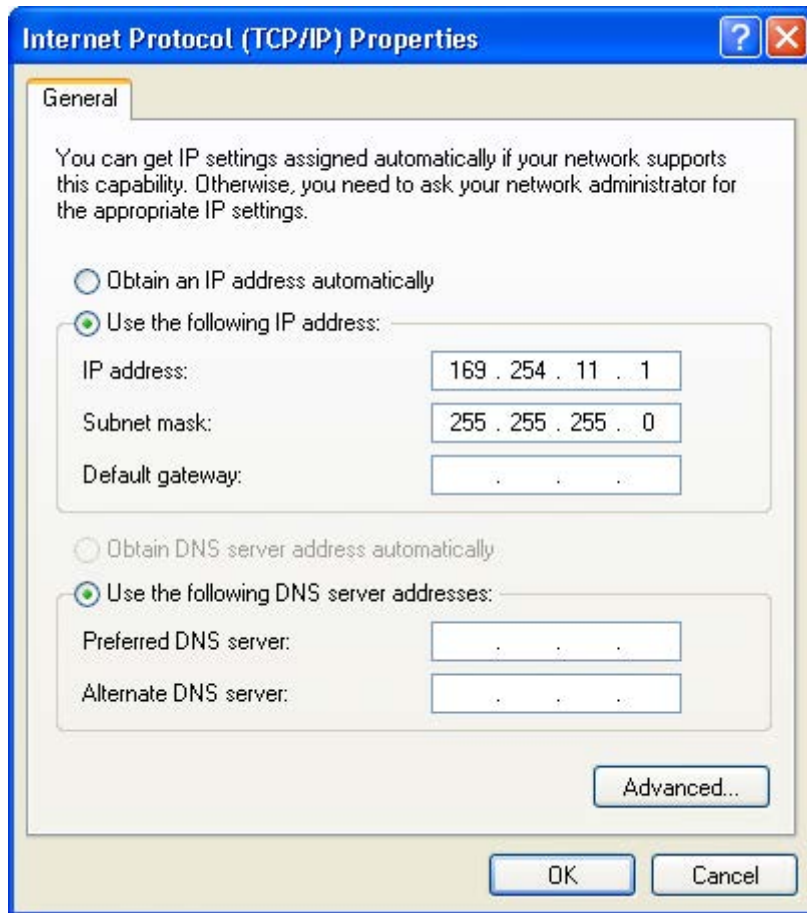


Figure 5-34 Internet Protocol (TCP/IP) properties

8. Click "OK" and close the Windows-specific window of the network connections.

### Assigning the IP address and the name via STARTER, "Accessible nodes" function

Use the STARTER to assign an IP address and a name to the Ethernet interface.

1. Connect the PG/PC and the Control Unit using an Ethernet cable.
2. Switch on the Control Unit.
3. Open STARTER.
4. Create a new project or open an existing project.
5. Search for available nodes in Ethernet via Project -> Accessible nodes or the "Accessible nodes" button.

6. The SINAMICS drive object is detected and displayed as a bus node with IP address 169.254.11.22 and without name.

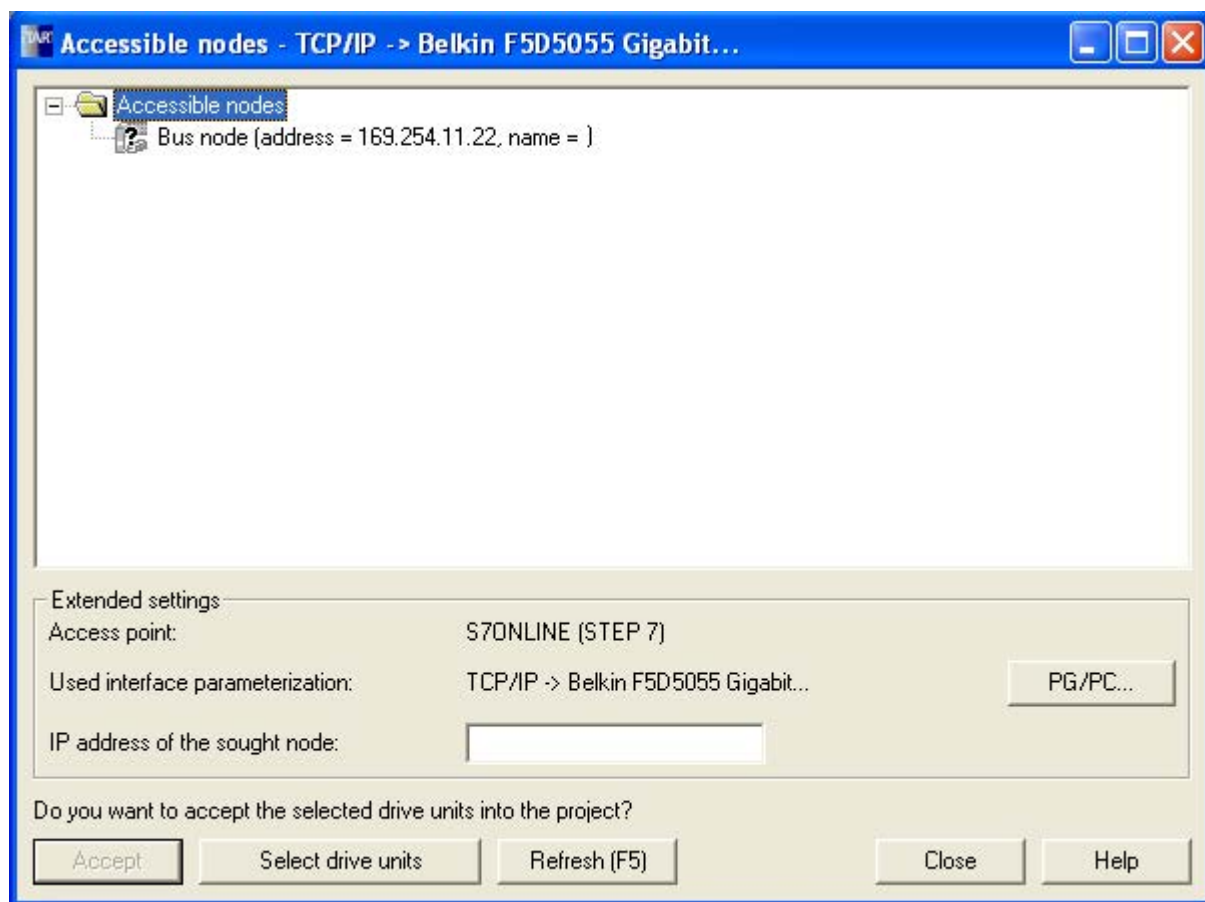


Figure 5-35 Accessible nodes

7. Mark the bus node entry and select the displayed menu item "Edit Ethernet node" with the right mouse button.
8. In the following "Edit Ethernet node" screen, enter the device name for the Ethernet interface ("drive1", for example) and click the "Assign name" button. Enter the IP address (e.g. 169.254.11.10) in the IP configuration and specify the subnet screen (e.g. 255.255.255.0). Then click the "Assign IP configuration" button and close the mask.

**Note****Naming devices**

ST (Structured Text) conventions must be satisfied for the name assignment of IO devices in Ethernet (SINAMICS components). The names must be unique within Ethernet.

Rules for assigning names:

- Other than "-" and ".", no special characters (such as accented characters, spaces, brackets) are permitted in the name of an IO device.
- The device name must not begin or end with the "-" character.
- The device name must not begin with a number.
- Maximum total length of 240 characters (lowercase characters, numbers, hyphen, or period).
- A name component within the device name, e.g. a string between two periods, must not exceed 63 characters.
- The device name must not take the form n.n.n.n (n = 0, ... 999).
- The device name must not begin with the character sequence "port-xyz" or "port-xyz-abcde" (a, b, c, d, e, x, y, z = 0, ... 9).

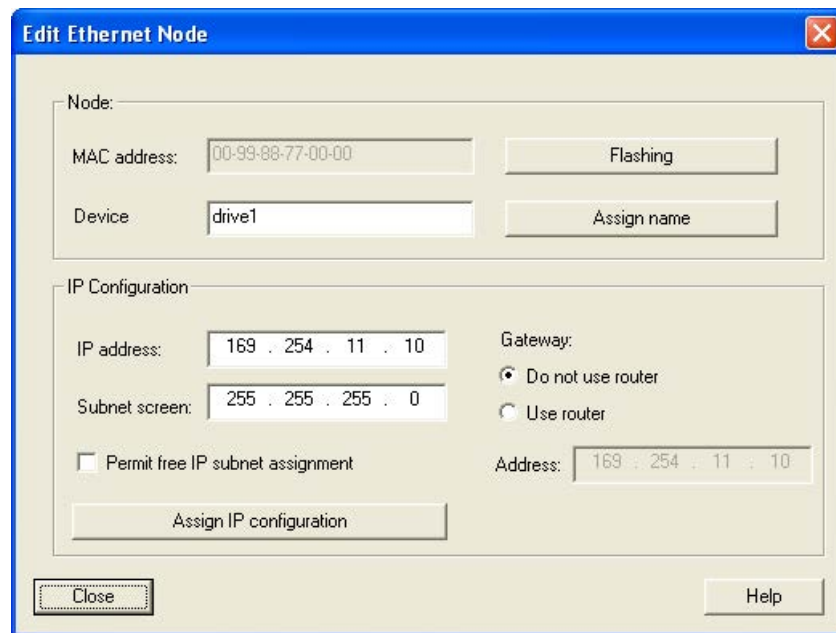


Figure 5-36 Edit Ethernet Node

9. Pressing the "Update (F5)" button displays the IP address and name in the entry for the bus node. If not, close the "Accessible nodes" screen and perform another search for accessible nodes.
10. If the Ethernet interface is displayed as bus node, select the entry and click the "Accept" button.
11. The SINAMICS drive is displayed as drive object in the project navigator.
12. You can now configure the drive unit (see Chapter "Configuring the drive unit").

**Note****Storage location of the IP address**

The IP address and device name are stored on the memory card of the Control Unit (non-volatile).

---

**Parameter**

Parameters can also be used to modify and/or display the properties of the Ethernet interface.

- p8900 IE name of station
- p8901 IE IP address of station
- p8902 IE default gateway of station
- p8903 IE subnet mask of station
- p8904 IE DHCP mode
- p8905 IE interface configuration
- r8910 IE name of station active
- r8911 IE IP address of station active
- r8912 IE default gateway of station active
- r8913 IE subnet mask of station active
- r8914 IE DHCP mode of station active
- r8915 IE MAC address of station

## 5.4 The AOP30 operator panel

### Description

An operator panel is located in the cabinet door of the cabinet unit for operating, monitoring, and commissioning tasks. It has the following features:

- Graphic-capable, back-lit LCD for plain-text display and a "bar-type display" for process variables
- LEDs for indicating the operating modes
- Help function describing causes of and remedies for faults and alarms
- Keypad for controlling drives during operation
- LOCAL/REMOTE switchover for selecting the control terminal (master control assigned to operator panel or Customer Terminal Block / PROFIdrive)
- Numeric keypad for entering setpoint or parameter values
- Function keys for prompted navigation through the menus
- Two-stage security concept to protect against accidental or unauthorized changes to settings
- IP54 degree of protection (when installed).
- Selectable languages: German, English, French, Italian, Spanish, Chinese, Russian, Portuguese

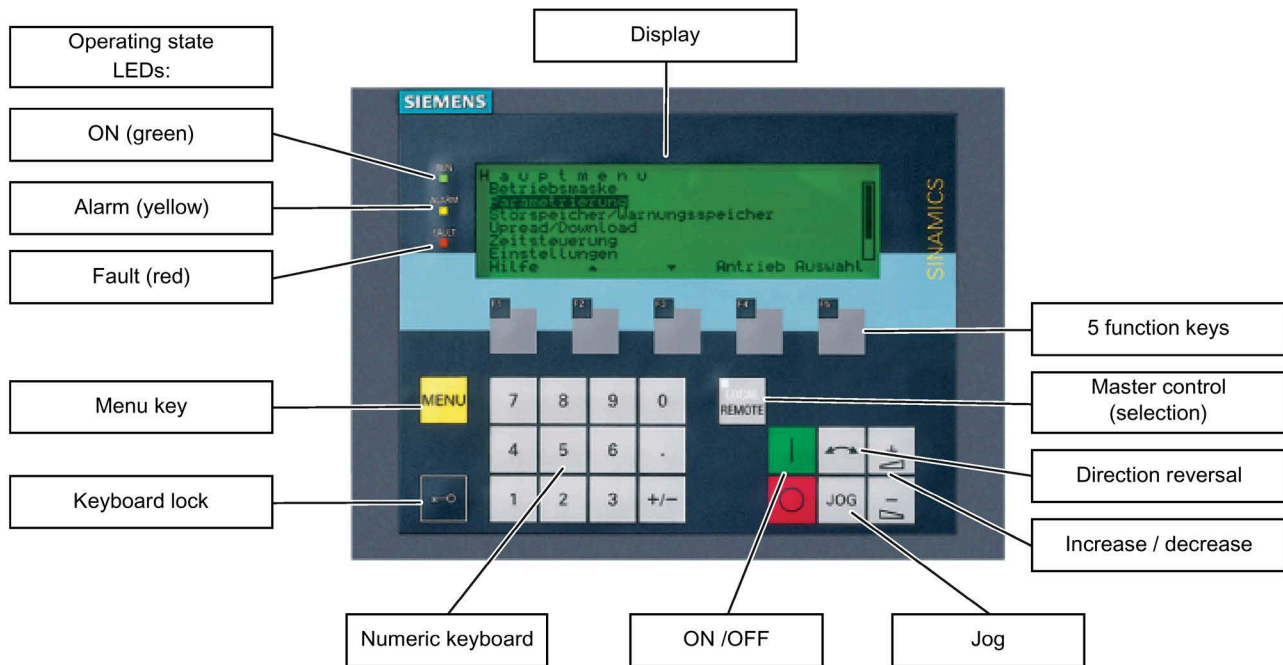


Figure 5-37 Components of the cabinet unit operator panel (AOP30)



## 5.5 First commissioning with the AOP30

### 5.5.1 Initial ramp-up

#### Start screen

When the system is switched on for the first time, the Control Unit is initialized automatically. The following screen is displayed:

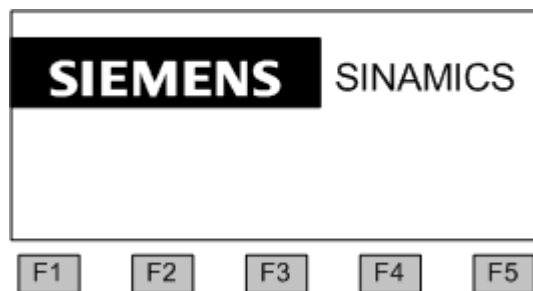


Figure 5-38 Initial screen

When the system boots up, the parameter descriptions are loaded into the operating field from the CompactFlash card.


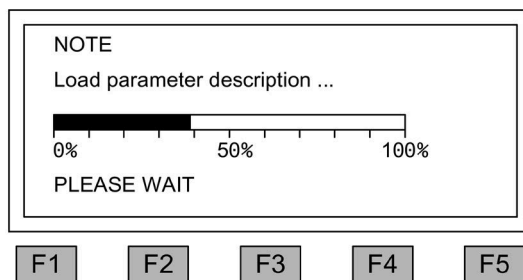


Figure 5-39 Load the parameter descriptions while booting up the system

## Selecting the language

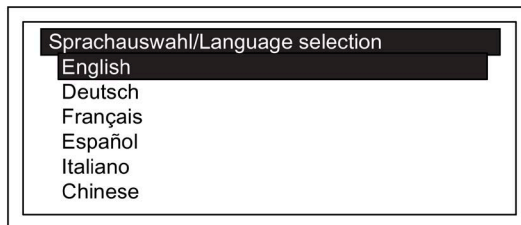
When the system is first booted up, a screen for selecting the language appears.



You can select the language in the dialog screen.

To change the language, choose <F2> or <F3>.

To select the language, choose <F5>.



Once the language has been selected, the booting up process continues.

Once the system has successfully ramped up, the drive has to be commissioned when the system is switched on for the first time after it has been delivered. The converter can then be switched on.

For a subsequent power up, operation can be directly started.

## Navigation within the interactive screens

Within an interactive screen, the selection boxes can usually be selected using the <F2> and/or <F3> keys. Selection fields are generally texts surrounded by a frame. When they are selected, they are highlighted with a white text on a black background.

The present value of a highlighted selection box can usually be changed by pressing <F5> "OK" and/or "Change." Another entry box then appears and the value you want is entered directly using the numerical keypad or can be selected from a list.

You can change from one interactive screen to the next or previous screen by selecting the "Next" or "Previous" selection boxes and then confirming by pressing <F5> "OK."

If a screen contains particularly important parameters, the selection field "Continue" only appears at the bottom of the screen. This is because every single parameter in this interactive screen has to be checked and/or corrected thoroughly before the next interactive screen can be accessed.

With some commissioning steps, the entire commissioning can be interrupted by selecting "Interrupt COMM."

## 5.5.2 Basic commissioning

### Acquiring motor data

During initial commissioning, you have to enter motor data using the operator panel. These can be taken from the motor type plate.

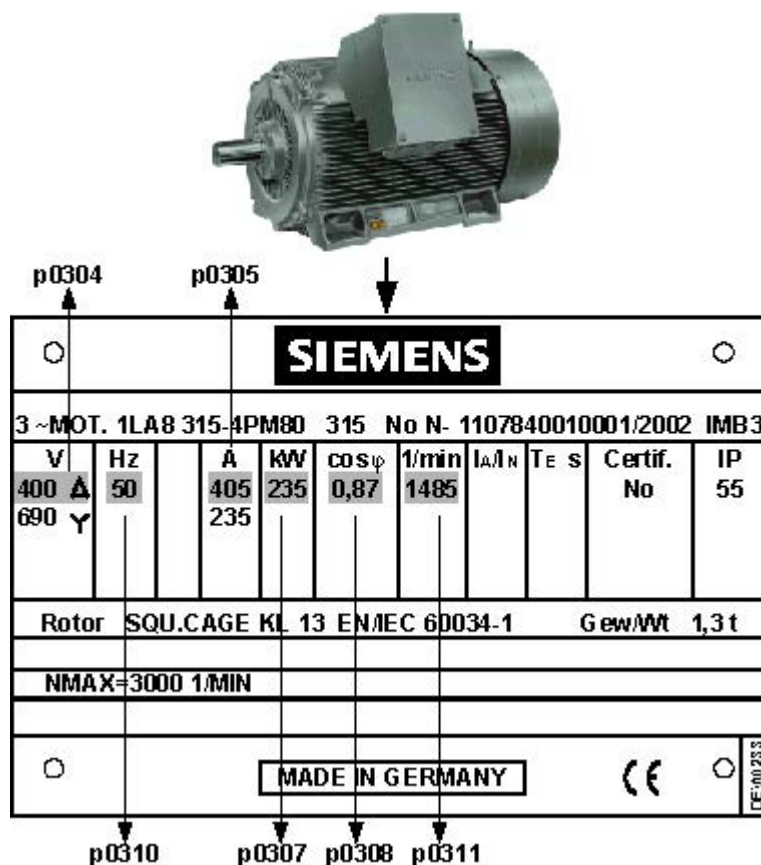


Figure 5-40 Example of a motor type plate

Table 5-1 Motor data

	Parameter No.	Values	Unit
System of units for line frequency and entering motor data	p0100	0 1	IEC [50 Hz / kW] NEMA [60 Hz / hp]
Motor:			
Rated voltage	p0304		[V]
Rated current	p0305		[A]
Rated power	p0307		[kW] / [hp]
Rated power factor cos φ (only for p0100 = 0)	p0308		
Rated efficiency η (only for p0100 = 1)	p0309		[%]
Rated frequency	p0310		[Hz]
Rated speed	p0311		[min-1] / [rpm]

### First commissioning: infeed

{2:B\_INF} First commissioning infeed

p0210 Supply voltage  Veff

p0840cON / OFF1

Help+ ▼ change

Enter the line infeed voltage in V. The default value is 500 V; you must adapt this value to match your system configuration.

Entry for the origin of the ON/OFF1 command. Navigate within the selection fields with <F2> and <F3>.

Activate your selection with <F5>.

Once you have entered the final value, choose "Continue" to exit the screen.

### Basic commissioning: Selecting the motor type and entering the motor data

{3:VECTOR} Motor standard/motor type

p0100 Motor standard IEC/NEMA

p0300mMotor type selection

Help ▼ OK

↓

You can select the motor standard and type in the dialog screen.

The following is defined for the motor standard:

0: Line frequency 50 Hz, motor data in kW  
1: Line frequency 60 Hz, motor data in hp

The corresponding motor is selected for the motor type.

{3:VECTOR} Motor parameter m:0

Back

p0210 U\_connection 931 V

p0304mMot U\_rated 690.00 Vrms

p0305mMot I\_rated 1672.00 Arms

Help ▲ ▼ change

F1 F2 F3 F4 F5

---

{3:VECTOR} Motor parameter m:0

p0306mMot number 1

p0307mMot P\_rated 1710.00 kW

p0308mMot cosphi\_rated 0.870

p0310mMot f\_rated 50.00 Hz

Help ▲ ▼ change

F1 F2 F3 F4 F5

---

{3:VECTOR} Motor parameter m:0

p0310mMot f\_rated 50.00 Hz

p0311mMot n\_rated 1492.00 rpm

p0335mMot cooling method 0:self-cooling

Interr. COMM next

Help ▲ ▼ change

F1 F2 F3 F4 F5

Entering the motor data specified on the type plate.

To navigate through the selection fields, choose <F2> or <F3>.

To activate a selection, choose <F5>.

To change a parameter value, navigate to the required selection field and activate with <F5>.

The system displays another window in which you can:

- Enter the value directly, or
- Select the value from a list.

When you have finished entering the motor data, choose "Continue" below the final parameter value and activate with <F5>.

### Note

#### Selecting the motor type

The selection of the motor type pre-assigns specific motor parameters and optimizes the operating characteristics and behavior. Details are described in the List Manual in the p0300 parameter.

### Note

#### Selection of a list motor (p0300 ≥ 100)

When a motor type ≥ 100 is selected, the article number of the associated motor can be selected via drop-down list.

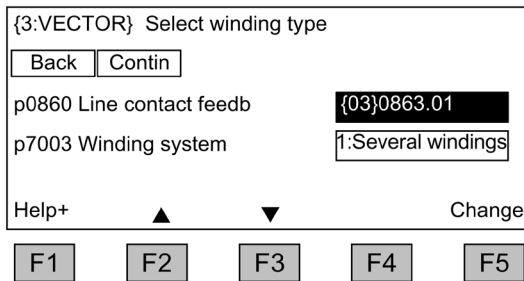
**Note**

**Commissioning of an induction motor**

The steps described below also apply to commissioning an induction motor.

When commissioning a permanent-magnet synchronous motor (p0300 = 2), there are a few special conditions that apply, which are detailed in a separate chapter (see "Setpoint channel and closed-loop control/Permanent-magnet synchronous motors").

**Winding type selection**



Entry of the origin for the line contactor checkback signal: the default setting should remain as it is.

Selecting the winding type:


- Single winding system
- Several separate winding systems or motors (default setting)

Navigate within the selection fields with <F2> and <F3>.

Activate your selection with <F5>.

Once you have entered the final value, choose "Continue" to exit the screen.

**Basic commissioning: entering the encoder data (if available)**

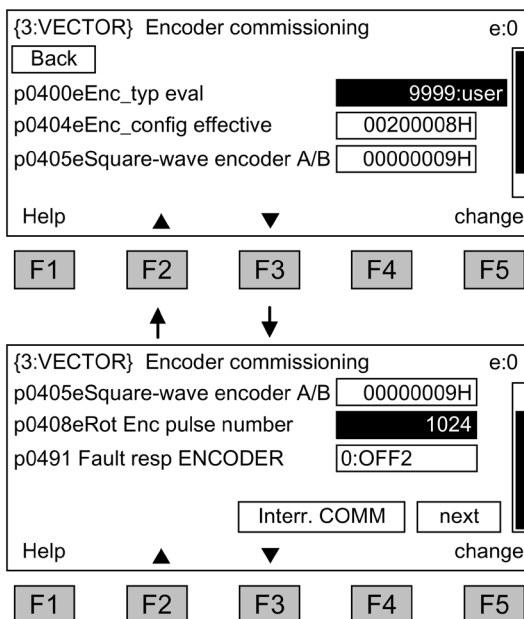

When the SMC30 is connected for encoder evaluation (with option K50), it is recognized by the AOP30 and a screen is displayed in which you can enter the encoder data.

To navigate through the selection fields, choose <F2> or <F3>.

To activate a selection, choose <F5>.

Predefined encoders can be easily set by selecting parameter p0400 (encoder type selection):

3001:	1024 HTL A/B R at X521/X531
3002:	1024 TTL A/B R at X521/X531
3003:	2048 HTL A/B R at X521/X531
3005:	1024 HTL A/B at X521/X531
3006:	1024 TTL A/B at X521/X531
3007:	2048 HTL A/B at X521/X531
3008:	2048 TTL A/B at X521/X531
3009:	1024 HTL A/B unipolar at X521/X531
3011:	2048 HTL A/B unipolar at X521/X531
3020:	2048 TTL A/B R with sense to X520

---

### Note

#### Delivery condition

The delivery condition is a bipolar HTL encoder with 1024 pulses per revolution and a 24-V power supply.

The section ("Electrical Installation") contains two connection examples for HTL and TTL encoders.

---

### Note

#### Pre-defined encoder type

If a predefined encoder type is selected using p0400, then the settings of the following parameters p0404, p0405 and p0408 cannot be changed.

If the connected encoder does not match any of the encoders predefined in p0400, follow the simple procedure below for entering the encoder data:

- Via p0400, select an encoder type whose data is similar to that of the connected encoder.
  - Select "User-defined encoder" (p0400 = 9999). Previously set values are stored here.
  - Adjust the bit fields of p0404, p0405, and p0408 to the data for the connected encoder.
- 

Table 5- 2 Meaning of the bit setting for p0404

Bit	Meaning	Value 0	Value 1
20	Voltage 5 V	No	Yes
21	Voltage 24 V	No	Yes

Table 5- 3 Meaning of the bit settings for p0405

Bit	Meaning	Value 0	Value 1
0	Signal	Unipolar	Bipolar
1	Level	HTL	TTL
2	Track monitoring	None	A/B>< -A/B
3	Zero pulse	24 V unipolar	Same as A/B track
4	Switching threshold	Low	High
5	Pulse/direction	No	Yes

**NOTICE****Material damage when selecting the incorrect encoder supply voltage**

Once the encoder has been commissioned, the supply voltage (5/24 V) set for the encoder is activated on the SMC30 module. The encoder may be damaged, if a 5 V encoder is connected and the supply voltage has not been set correctly (bit 20 = "Yes," bit 21 = "No").

- Set the correct supply voltage for the connected encoder.



## Basic commissioning: Entering the basic parameters

{3:VECTOR} Basic commissioning

Back

p0230 Antr filter type mot 0:no filter

p0700cMacro BI 5:PROFIdrive

p1000cMacro CI n\_set 1:PROFIdrive

Help ▲ ▼ change

F1 F2 F3 F4 F5

↑ ↓

{3:VECTOR} Basic commissioning d:0

p1070cMain setpoint {03}02050[001]

p1080dn\_min 0.000 rpm

p1082dn\_max 1500.000 rpm

p1120dHLG ramp-up time 20.000 s

Help ▲ ▼ change

F1 F2 F3 F4 F5

↑ ↓

{3:VECTOR} Basic commissioning d:0

p1120dHLG ramp-up time 20.000 s

p1121dHLG ramp-down time 30.000 s

p1135dHLG OFF3 t\_ramp-down 10.000 s

Interr. COMM next

Help ▲ ▼ OK

F1 F2 F3 F4 F5

Final confirmation

Back

Permanent parameter acceptance  
execute with "continue" and OK

Interr COMM Contin

Help ▼ OK

F1 F2 F3 F4 F5

### Enter the basic commissioning parameters:

- p0700: Preset command source
- 5: PROFIdrive
- 6: TM31 terminals
- 7: Namur
- 10: PROFIdrive Namur
- p1000: Preset setpoint source
- 1: PROFIdrive
- 2: TM31 terminals
- 3: Motorized potentiometer
- 4: Fixed setpoint

Once a setpoint source has been selected (p1000), the main setpoint p1070 is defaulted accordingly.

To navigate through the selection fields, choose <F2> or <F3>.

To activate a selection, choose <F5>.

To change a parameter value, navigate to the required selection field and activate with <F5>.

Another window appears in which you can

- enter the required value directly, or
- select the value from a list.

### Final confirmation

Confirm the basic parameters to save them.

Once you have selected "Continue" and activated your entries with <F5>, the basic parameters you entered are permanently saved and the calculations required for closed-loop control are carried out.

---

**Note**

**Enter the motor-side filter**

A filter on the motor side must be entered in p0230:

- Option L07 – du/dt filter compact plus Voltage Peak Limiter: p0230 = 2
- Option L08 – motor reactor: p0230 = 1
- Option L10 – du/dt filter plus Voltage Peak Limiter: p0230 = 2
- Option L15 – sine-wave filter: p0230 = 3

When p0230 = 4 "External sine-wave filter", a separate sine-wave filter can be entered. An input mask for specific filter data then appears.

---

**NOTICE**

**Damage to the sine-wave filter if it is not activated during commissioning**

The sine-wave filter may be damaged if it is not activated during commissioning.

- Activate the sine-wave filter during commissioning.

**NOTICE**

**Damage to the du/dt filter if it is not activated during commissioning**

The du/dt filter may be damaged if it is not activated during commissioning.

- Activate the du/dt filter during commissioning.
- 

**Note**

**Motor reactor**

If a motor reactor (option L08) is being used, the option selection must be activated, otherwise the closed-loop motor control will not be able to operate in an optimum fashion.

---

**Note**

**Do not use a selection**

The choice "no selection" is also available as default setting for the command and setpoint sources; if selected, no default settings are applied for the command and setpoint sources.

---

## Basic commissioning: Motor identification

{3:VECTOR} Motor identification

Select the type of identification

**Stationary and rotating**

Only stationary

No identification

Change no. of phases to be identif.

Help OK

F1
F2
F3
F4
F5

↓

{3:VECTOR} Motor identification

**NOTE**

Start the stationary measurement  
in LOCAL with the ON button.

Help Cancel    Diag

F1
F2
F3
F4
F5

### Selecting motor identification

To navigate through the selection fields, choose <F2> or <F3>.

To activate a selection, choose <F5>.

Stationary measurement increases the control performance, as this minimizes deviations in the electrical characteristic values due to variations in material properties and manufacturing tolerances.

Rotary measurement determines the data required (e.g. moment of inertia) for setting the speed controller. It also measures the magnetization characteristic and rated magnetization current of the motor.

Changing the number of phases to be identified:

- For identification with one phase, the measurement time is significantly reduced.
- For identification with several phases, the measurement results are averaged.

To activate this function, press the LOCAL key (wait until the LED in the LOCAL key lights up) and then ON.

If motor identification is not carried out, then the motor control does not operate with measured values, but with the characteristic motor values calculated from the type plate data.

### Note

#### Complete motor identification

When motor identification has been completed, press the OFF key to cancel the power-on inhibit.

### WARNING

#### Unexpected motor movement during motor identification in the rotating mode

When selecting motor identification with optimization in the rotating mode, after commissioning, the drive initiates that the motor rotates with speeds that can reach the maximum motor speed.

- Observe the general safety instructions.
- Ensure that the EMERGENCY STOP functions are fully functional when commissioning the drive.

---

**Note**

**Activate enable signals**

Make sure that the necessary enable signals have been assigned; otherwise motor identification cannot be carried out.

---

**Note**

**Fault with stationary or rotating measurements**

The motor identification cannot be performed if, when selecting the stationary or rotating measurement, a fault is active

Before rectifying the fault, you have to choose "No identification" and close the screen.

Motor identification can then be selected again via <MENU> - <Commissioning/service> - <Drive commissioning> - <Motor identification>.

---

## 5.6 Status after commissioning

### LOCAL mode (control via operator panel)

- You switch to LOCAL mode by pressing the "LOCAL/REMOTE" key.
- Control (ON/OFF) is carried out via the "ON" and "OFF" keys.
- You can specify the setpoint using the "increase" and "decrease" keys or by entering the appropriate numbers using the numeric keypad.

### Analog outputs (with option G60 "Customer terminal module TM31")

- The actual speed (r0063) is output as a current output in the range 0 to 20 mA at analog output 0 (X522:2 and 3).  
A current of 20 mA is equal to the maximum speed in p1082.
- The actual current value (r0068) is output as a current output in the range 0 to 20 mA at analog output 1 (X522:5 and 6).  
A current of 20 mA corresponds to the current limit (p0640), which is set to 1.5 times the rated motor current (p0305).

### Digital outputs (with option G60 "Customer terminal module TM31")

- The "enable pulses" signal is output at digital output 0 (X542:2 and 3).
- The "no fault active" signal is output at digital output 1 (X542:5 and 6) (protection against wire break).
- The "ready for power up" signal is output at digital output 8 (X541:2).

## 5.7 Commissioning an encoder with gear factor

### Description

When encoders are commissioned (p0010 = 4), a gearbox must be parameterized by means of parameters p0432 (numerator), p0433 (denominator), and p0410 (sign).

To ensure that the commutation position can be accurately determined from the encoder angle, the following applies:

- For resolvers:  $\frac{z_{p\_Motor}}{z_{p\_Resolver}} \times \frac{1}{n} \geq 1, \text{ Integer}$   $z_p = \text{number of poles}$
- For all other absolute encoders:  $\frac{z_{p\_Motor}}{n} \geq 1, \text{ Integer}$   $z_p = \text{number of poles}$
- Where n is the gear factor:  $n = \frac{\text{Encoder speed}}{\text{Motor speed}} = \frac{p0432}{p0433}$

The encoder commissioning program ensures that this uniqueness condition is observed and, if necessary, prevents the system from exiting the commissioning program or outputs an error message.

Sign bit p0410 inverts the calculated encoder angle and the speed, thereby yielding a negative gear factor.

## 5.8 Parameter reset to factory settings

The factory settings represent the defined original status of the device on delivery.

Resetting the parameters to the factory settings means that all the parameter settings made since the system was delivered are reset.

### Resetting Parameters via AOP30

Select parameter reset



Press OK

#### Set parameter filter to "Parameter reset":



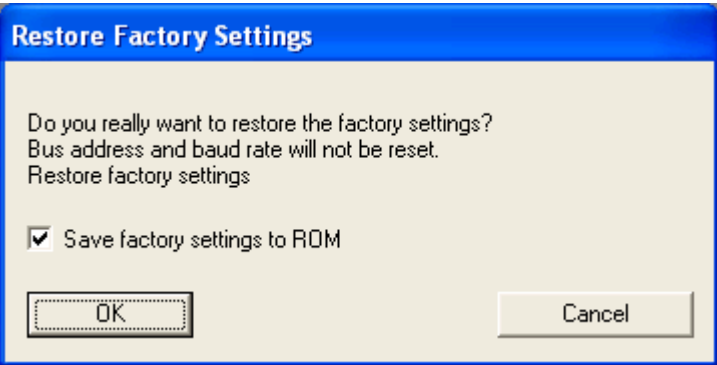

<MENU> <Commissioning/Service> <Device commissioning>  
<OK> <30: Parameter Reset> <OK>

#### Reset all parameters to factory settings:

Factory settings for all the device parameters are restored.

**Parameter reset via STARTER**

With STARTER, the parameters are reset in online mode. The required steps are described below:

Step	Selection in toolbar
Choose <b>Project &gt; Connect to target system</b>	
Click the drive unit whose parameters you want to reset to the factory settings and click <b>Restore factory settings</b> icon in the toolbar.	
To confirm, click <b>OK</b> .  	
Choose <b>Target system &gt; Copy from RAM to ROM</b>	

**Note**

**Copy from RAM to ROM**

The **Copy from RAM to ROM** icon is only active when the drive unit is selected in the project navigator.

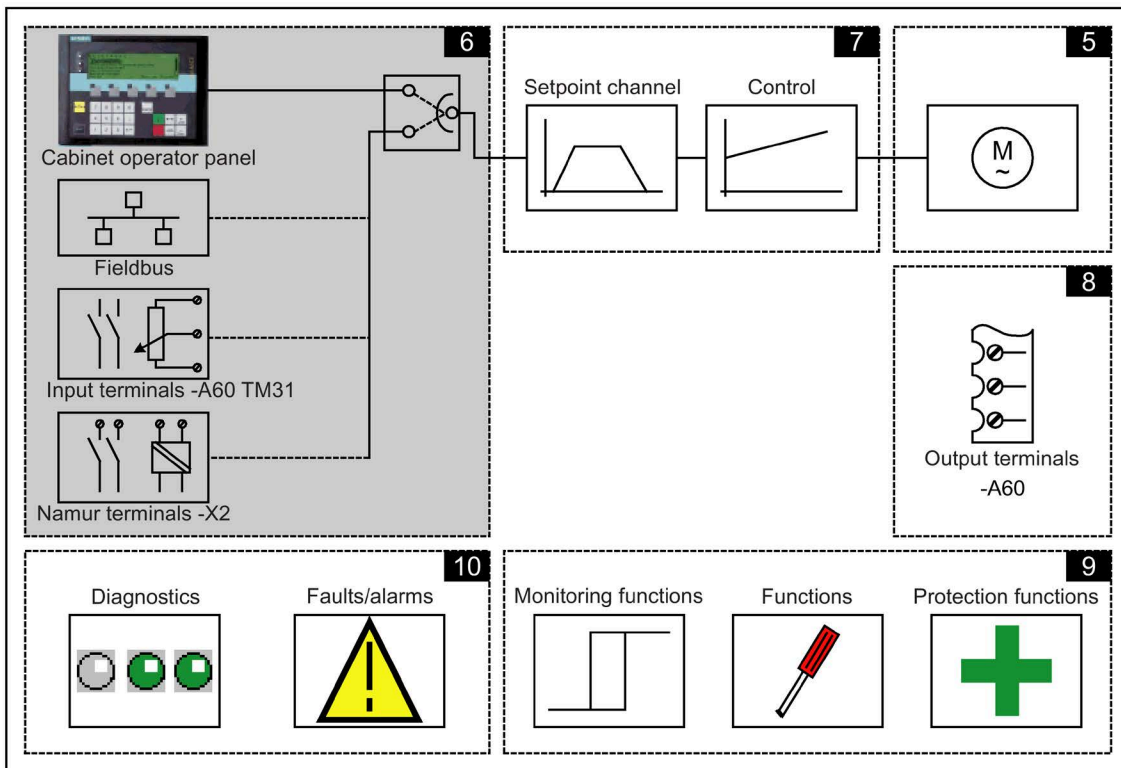
When the parameters have been reset to the factory settings, initial commissioning needs to be carried out.

## Operation

### 6.1 Chapter content

This chapter provides information on the following:

- Basic information about the drive system
- Command source selection via
  - PROFIdrive
  - terminal block
  - NAMUR terminal block
- Setpoint input via
  - PROFIdrive
  - Analog inputs
  - Motorized potentiometer
  - Fixed setpoints
- Control via the AOP30 operator panel
- Communication according to PROFIdrive
- Communication via
  - PROFIBUS DP
  - PROFINET IO
  - SINAMICS Link
  - EtherNet/IP
  - Modbus TCP



## 6.2 General information about command and setpoint sources

### Description

Four default settings are available for selecting the command sources and four for selecting the setpoint sources for the SINAMICS G150 cabinet unit. The choice "no selection" is also available; if selected, no default settings are applied for the command and setpoint sources.

### Command sources

- PROFIdrive
- TM31 terminals
- NAMUR
- PROFIdrive NAMUR

### Setpoint sources

- PROFIdrive
- Analog inputs
- Motorized potentiometer
- Fixed setpoints

The various assignments are explained in the following sections.

---

#### Note

##### Defaults

Make sure that the default settings you choose during commissioning are compatible with the cabinet configuration (see "Commissioning")

Emergency STOP signals (L57, L59, and L60) and motor protection signals (L83 and L84) are always active (regardless of the command source).

---

### Function diagrams

At certain points in this chapter, reference is made to function diagrams. These can be found on the customer DVD in the "SINAMICS G130/G150 List Manual", which provides experienced users with detailed descriptions of all the functions.



## 6.3 Basic information about the drive system

### 6.3.1 Parameters

#### Overview

The drive is adapted to the relevant drive task by means of parameters. Each parameter is identified by a unique parameter number and by specific attributes (e.g. read, write, BICO attribute, group attribute, and so on).

The parameters can be accessed via the following means:

- PC with the "STARTER" commissioning tool via PROFIBUS or PROFINET or via Ethernet
- The user-friendly AOP30 Operator Panel

#### Parameter types

The following adjustable and display parameters are available:

- Adjustable parameters (write/read)

These parameters have a direct impact on the behavior of a function.

Example: Ramp-up and ramp-down time of a ramp-function generator

- Display parameters (read only)

These parameters are used to display internal variables.

Example: Current motor current

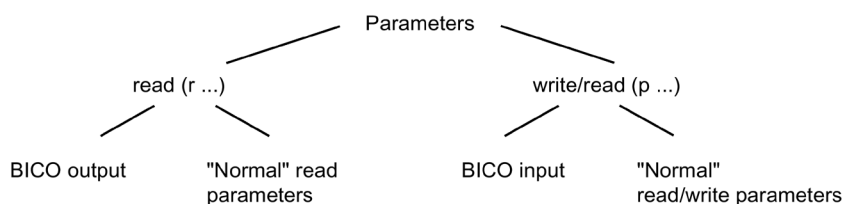


Figure 6-1 Parameter types

All these drive parameters can be read and changed via PROFIBUS or PROFINET using the mechanisms defined in the PROFIdrive profile.

### Parameter categories

The parameters for the individual drive objects (see "Drive objects") are categorized according to data sets as follows (see "Operation/data sets"):

- Data-set-independent parameters  
These parameters exist only once per drive object.
- Data-set-dependent parameters  
These parameters can exist several times for each drive object and can be addressed via the parameter index for reading and writing. A distinction is made between various types of data set:
  - CDS: Command data set  
By parameterizing several command data sets and switching between them, the drive can be operated with different pre-configured signal sources.
  - DDS: Drive data set  
The drive data set contains the parameters for switching between different drive control configurations.
  - PDS: Powerstack Data Set  
The number of powerstack data sets corresponds to the number of power units combined for units that are connected in parallel.

The CDS and DDS can be switched over during normal operation. Additional data record types also exist, however these can only be activated indirectly by means of a DDS changeover.

- EDS: encoder data set
- MDS: Motor data set

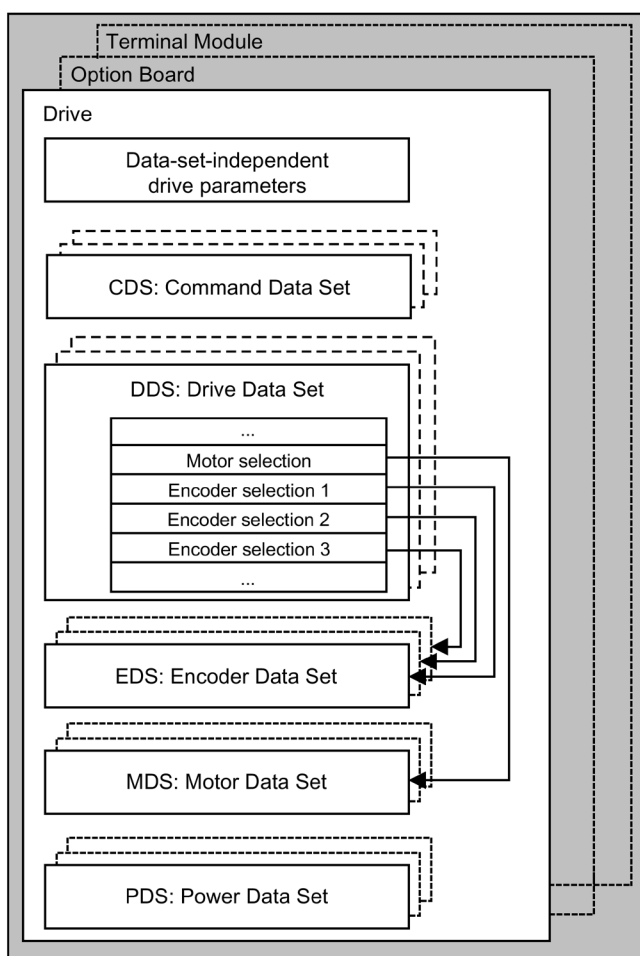


Figure 6-2 Parameter categories

### 6.3.2 Drive objects

A drive object is a self-contained software function with its own parameters and, if necessary, its own faults and alarms. Drive objects can be provided as standard (e.g. I/O evaluation), or you can add single (e.g. option board) or multiple objects (e.g. drive control).

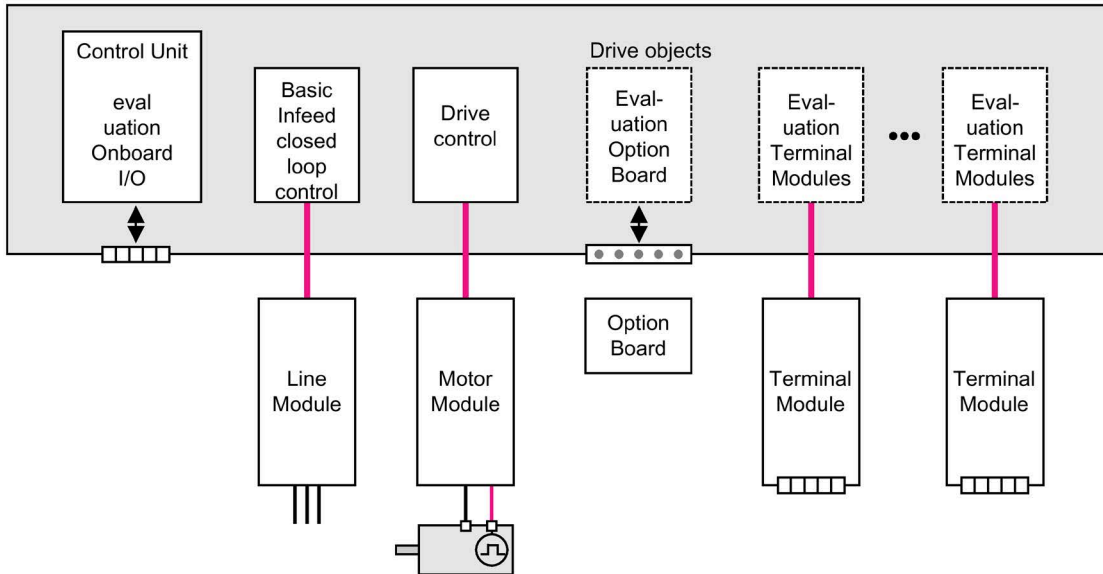


Figure 6-3 Drive objects

#### Drive objects available as standard

- Supply: Infeed control for Basic Line Module  
If a Basic Line Module is used for the infeed in a drive system, open-loop control is implemented on the Control Unit within a corresponding drive object.
- Drive control  
Drive control handles closed-loop control of the motor. At least 1 Motor Module and at least 1 motor and up to 3 encoders are assigned to the drive control.
- Control Unit, inputs/outputs  
The inputs/outputs on the Control Unit are evaluated within a drive object.

#### Optionally installed drive objects

- Option board evaluation  
A further drive object handles evaluation of an installed option board. The specific method of operation depends on the type of option board installed.
- Terminal Module evaluation  
A separate drive object handles evaluation of the respective optional Terminal Modules.

### Properties of a drive object

- Separate parameter space
- Separate window in STARTER
- Separate fault/alarm system
- Separate PROFIdrive telegram for process data

### Configuring drive objects

When you commission the system for the first time using the STARTER tool, you will use configuration parameters to set up the software-based "drive objects" which are processed on the Control Unit. Various drive objects can be created within a Control Unit.

The drive objects are configurable function blocks and are used to execute specific drive functions.

If you need to configure additional drive objects or delete existing ones after initial commissioning, the drive system must be switched to configuration mode.

The parameters of a drive object cannot be accessed until the drive object has been configured and you have switched from configuration mode to parameterization mode.

---

#### Note

##### Assignment during the initial commissioning

Each installed drive object is allocated a number between 0 and 63 during initial commissioning for unique identification.

---

### Parameters

- p0101 Drive object numbers
- r0102 Number of drive objects
- p0107 Drive object type
- p0108 Drive object configuration

## 6.3.3 Data Sets

### Description

For many applications, it is beneficial if more than one parameter can be changed simultaneously by means of **one** external signal during operation/when the system is ready for operation.

This can be carried out using indexed parameters, whereby the parameters are grouped together in a data set according to their functionality and indexed. Indexing allows several different settings, which can be activated by switching the data set, to be defined in each parameter.

**Note**

**Copying data sets**

The command data sets and drive data sets can be copied in STARTER (Drive -> Configuration -> "Command data sets" or "Drive data sets" tab).  
 The displayed command and drive data sets can be selected in the associated STARTER screen forms.

**CDS: Command data set**

The BICO parameters (binector and connector inputs) are grouped together in a command data set. These parameters are used to interconnect the signal sources of a drive (see "Operation/BICO technology: Interconnecting signals").

The parameters that are grouped together in the command data set are marked in the SINAMICS parameter list with "Data set CDS" and are assigned an index [0..n].

By parameterizing several command data sets and switching between them, the drive can be operated with different pre-configured signal sources.

A command data set contains the following (examples):

- Binector inputs for control commands (digital signals)
  - ON/OFF, enable signals (p0844, etc.)
  - Jog (p1055, etc.)
- Connector inputs for setpoints (analog signals)
  - Voltage setpoint for U/f control (p1330)
  - Torque limits and scaling factors (p1522, p1523, p1528, p1529)

In the delivery condition, two command data sets are available; this number can be increased to a maximum of four using p0170 (number of command data sets (CDS)).

The following parameters are available for selecting command data sets and for displaying the currently selected command data set:

Table 6-1 Command data set: selection and display

CDS	Select bit 1 p0811	Select bit 0 p0810	Display	
			selected (r0836)	active (r0050)
0	0	0	0	0
1	0	1	1	1
2	1	0	2	2
3	1	1	3	3

If a command data set, which does not exist, is selected, the current data set remains active.

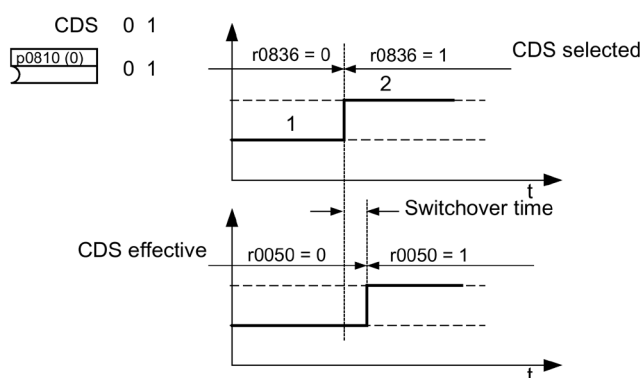


Figure 6-4 Example: Switching between command data set 0 and 1

## DDS: Drive data set

A drive data set contains various adjustable parameters that are relevant with respect to open and closed-loop drive control:

- Numbers of the assigned motor and encoder data sets:
  - p0186: Assigned motor data set (MDS)
  - p0187 to p0189: up to 3 assigned encoder data sets (EDS)
- Various closed-loop control parameters, e.g.:
  - Fixed speed setpoints (p1001 to p1015)
  - Speed limits min./max. (p1080, p1082)
  - Characteristic data of ramp-function generator (p1120 ff)
  - Characteristic data of controller (p1240 ff)
  - ...

The parameters that are grouped together in the drive data set are marked in the parameter list with "Data set DDS" and are assigned an index [0..n].

It is possible to parameterize several drive data sets. You can switch easily between different drive configurations (control type, motor, encoder) by selecting the corresponding drive data set.

One drive object can manage up to 32 drive data sets. The number of drive data sets is configured with p0180.

Binector inputs p0820 to p0824 are used to select a drive data set. They represent the number of the drive data set (0 to 31) in binary format (where p0824 is the most significant bit).

- p0820 BI: Drive data set selection DDS, bit 0
- p0821 BI: Drive data set selection DDS, bit 1
- p0822 BI: Drive data set selection DDS, bit 2
- p0823 BI: Drive data set selection DDS, bit 3
- p0824 BI: Drive data set selection DDS, bit 4

#### Supplementary conditions and recommendations

- Recommendation for the number of DDS in a drive  
The number of DDS in a drive should correspond with the number of changeover options; in other words  
 $p0180 \text{ (DDS)} \geq p0130 \text{ (MDS)}$ .
- Max. number of DDS for one drive object = 32 DDS

#### EDS: Encoder data set

An encoder data set contains various adjustable parameters describing the connected encoder for the purpose of configuring the drive.

- Adjustable parameters, e.g.:
  - Encoder interface component number (p0141)
  - Encoder component number (p0142)
  - Encoder type selection (p0400)

The parameters that are grouped together in the encoder data set are identified in the SINAMICS parameter list by "Data set EDS" and are assigned an index [0..n].

A separate encoder data set is required for each encoder controlled by the Control Unit. Up to 3 encoder data sets are assigned to a drive data set via parameters p0187, p0188, and p0189.

An encoder data set can only be changed using a DDS changeover.

Each encoder may only be assigned to one drive and within a drive must - in each drive data set - either always be encoder 1, always encoder 2 or always encoder 3.

One application for the EDS changeover would be a power unit that alternately controls several motors. A contactor circuit is used to changeover between these motors. Each of the motors can be equipped with an encoder or be operated without an encoder. Each encoder must be connected to its own SMx.

If encoder 1 (p0187) is changed over via DDS, then an MDS must also be changed over.

One drive object can manage up to 16 encoder data sets. The number of encoder data sets configured is specified in p0140.

When a drive data set is selected, the assigned encoder data sets are selected automatically.



## MDS: Motor data set

A motor data set contains various adjustable parameters describing the connected motor for the purpose of configuring the drive. It also contains certain display parameters with calculated data.

- Adjustable parameters, e.g.:
  - Motor component number (p0131)
  - Motor type selection (p0300)
  - Rated motor data (p0304 ff)
  - ...
- Display parameters, e.g.
  - Calculated rated data (p0330 ff)
  - ...

The parameters that are grouped together in the MDS are marked in the SINAMICS parameter list with "Data set MDS" and are assigned an index [0..n].

A separate motor data set is required for each motor that is controlled by the Control Unit via a Motor Module. The motor data set is assigned to a drive data set via parameter p0186.

A motor data set can only be changed using a DDS changeover.

The motor data set changeover is, for example, used for:

- Changing over between different motors
- Changeover between different windings in a motor (e.g. star-delta changeover)
- Motor data adaptation

If several motors are operated alternately on one Motor Module, a corresponding number of drive data sets must be created. See "Functions / Drive functions" for additional information and instructions on changing over motors.

One drive object can manage up to 16 motor data sets. The number of motor data sets in p0130 must not exceed the number of drive data sets in p0180.

## Example of data set assignment

Table 6- 2 Example, data set assignment

DDS	Motor (p0186)	Encoder 1 (p0187)	Encoder 2 (p0188)	Encoder 3 (p0189)
DDS 0	MDS 0	EDS 0	EDS 1	EDS 2
DDS 1	MDS 0	EDS 0	EDS 3	--
DDS 2	MDS 0	EDS 0	EDS 4	EDS 5
DDS 3	MDS 1	EDS 0	--	--

### Copying the command data set (CDS)

Set parameter p0809 as follows:

1. p0809[0] = number of the command data set to be copied (source)
2. p0809[1] = number of the command data to which the data is to be copied (target)
3. p0809[2] = 1

Start copying.

Copying is finished when p0809[2] = 0.

### Copying the drive data set (DDS)

Set parameter p0819 as follows:

1. p0819[0] = Number of the drive data set to be copied (source)
2. p0819[1] = Number of the drive data set to which the data is to be copied (target)
3. p0819[2] = 1

Start copying.

Copying is finished when p0819[2] = 0.

### Copy motor data set (MDS)

Set parameter p0139 as follows:

1. p0139[0] = Number of the motor data set that is to be copied (source)
2. p0139[1] = Number of the motor data set which should be copied into (target)
3. p0139[2] = 1

Start copying.

Copying has been completed, if p0139[2] = 0.

### Function diagram

FP 8560	Command data sets (CDS)
FP 8565	Drive data set (DDS)
FP 8570	Encoder data set (EDS)
FP 8575	Motor data sets (MDS)

## Parameters

- p0120 Power Module data sets (PDS) number
- p0130 Motor data sets (MDS) number
- p0139[0...2] Copy motor data set (MDS)
- p0140 Encoder data sets (EDS) number
- p0170 Command data set (CDS) number
- p0180 Drive data set (DDS) number
- p0186 [0...n] Assigned motor data set (MDS)
- p0187[0...n] Encoder 1 encoder data set number
- p0188[0...n] Encoder 2 encoder data set number
- p0189[0...n] Encoder 3 encoder data set number
- p0809[0...2] Copy command data set CDS
- p0810 BI: Command data set selection CDS bit 0
- p0811 BI: Command data set selection CDS bit 1
- p0819[0...2] Copy drive data set DDS
- p0820[0...n] BI: Drive data set selection, bit 0
- p0821[0...n] BI: Drive data set selection, bit 1
- p0822[0...n] BI: Drive data set selection, bit 2
- p0823[0...n] BI: Drive data set selection, bit 3
- p0824[0...n] BI: Drive data set selection, bit 4

### 6.3.4 BICO technology: interconnecting signals

#### Description

Every drive contains a large number of interconnectable input and output variables and internal control variables.

The drive unit can be adapted to a wide range of requirements using BICO technology (Binector Connector Technology).

Digital signals, which can be connected freely by means of BICO parameters, are identified by the prefix BI, BO, CI or CO in their parameter name. These parameters are identified accordingly in the parameter list or in the function diagrams.

**Note**

**Using STARTER**



The STARTER parameterization and commissioning tool is recommended when using BICO technology.

**Binectors, BI: binector input, BO: Binector output**

A binector is a digital (binary) signal without a unit which can assume the value 0 or 1.

Binectors are subdivided into binector inputs (signal sink) and binector outputs (signal source).

Table 6-3 Binectors



Abbreviation and symbol	Name	Description
BI 	Binector input Binector Input (signal sink)	Can be interconnected to a binector output as source. The number of the binector output must be entered as a parameter value.
BO 	Binector output Binector output (signal source)	Can be used as a source for a binector input.

**Connectors, CI: connector input, CO: Connector output**

A connector is a digital signal e.g. in 32-bit format. It can be used to emulate words (16 bits), double words (32 bits) or analog signals. Connectors are subdivided into connector inputs (signal sink) and connector outputs (signal source).

The options for interconnecting connectors are restricted to ensure that performance is not adversely affected.

Table 6-4 Connectors

Abbreviation and symbol	Name	Description
CI 	Connector input Connector input (signal sink)	Can be interconnected to a connector output as source. The number of the connector output must be entered as a parameter value.
CO 	Connector output Connector output (signal source)	Can be used as a source for a connector input.

## Interconnecting signals using BICO technology

To interconnect two signals, a BICO input parameter (signal sink) must be assigned to the desired BICO output parameter (signal source).

The following information is required in order to connect a binector/connector input to a binector/connector output:

- Binectors: Parameter number, bit number, and drive object ID
- Connectors with no index: Parameter number and drive object ID
- Connectors with index: Parameter number, index, and drive object ID
- Data type (signal source for connector output parameter)

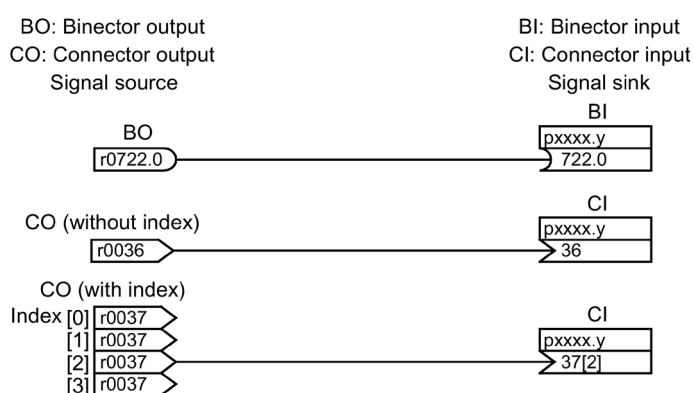


Figure 6-5 Interconnecting signals using BICO technology

### Note

A connector input (CI) cannot be interconnected with any connector output (CO, signal source). The same applies to the binector input (BI) and binector output (BO).

"Data type" in the parameter list provides information about the data type of the parameter and the data type of the BICO parameter for each CI and BI parameter.

For CO and BO parameters, only the data type of the BICO parameter is given.

Notation:

- Data type BICO input: Data type parameter/Data type BICO parameter  
Example: Unsigned32 / Integer16
- Data type BICO output: Data type BICO parameter  
Example: FloatingPoint32

The possible interconnections between BICO input (signal sink) and BICO output (signal source) are described in the List Manual in the table "Possible combinations for BICO interconnections" in the section "Explanations on the parameter list".

The BICO parameter interconnection can be implemented in different data sets (CDS, DDS, MDS, etc.). The different interconnections in the data sets are activated by switching the data sets. Interconnections across drive objects are also possible.

### Internal encoding of the binector/connector output parameters

The internal codes are needed, for example, to write BICO input parameters via PROFIdrive.

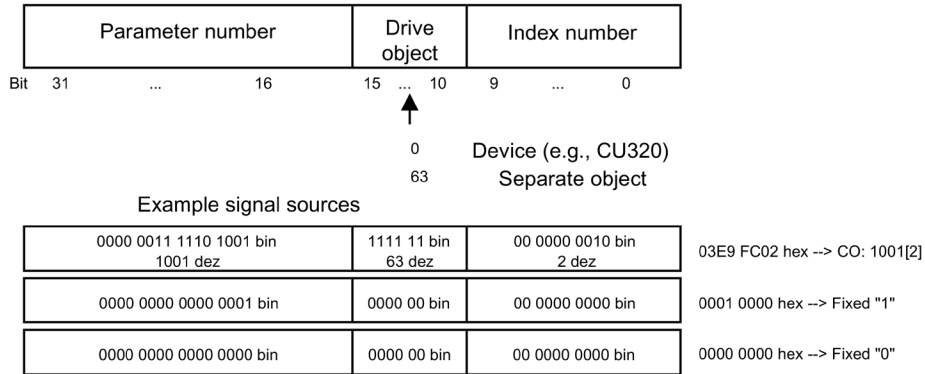


Figure 6-6 Internal encoding of the binector/connector output parameters

### Example 1: interconnecting digital signals

Suppose you want to operate a drive via terminals DI 0 and DI 1 on the Control Unit using jog 1 and jog 2.

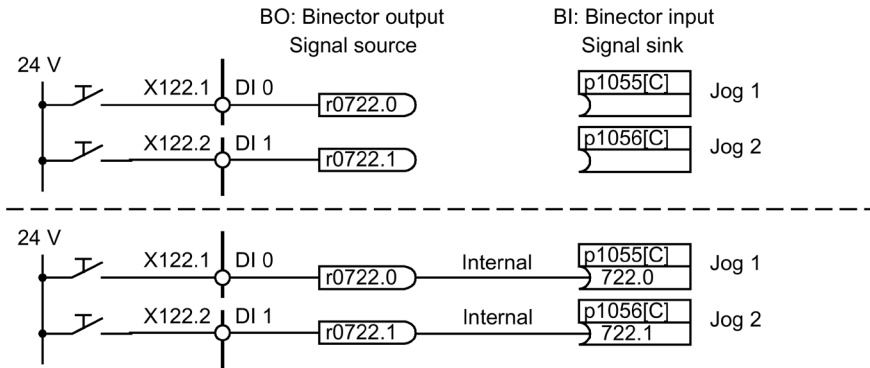


Figure 6-7 Interconnection of digital signals (example)

### Example 2: connection of OC/OFF3 to several drives

The OFF3 signal is to be connected to two drives via terminal DI 2 on the Control Unit.

Each drive has a binector input 1. OFF3 and 2. OFF3. The two signals are processed via an AND gate to STW1.2 (OFF3).

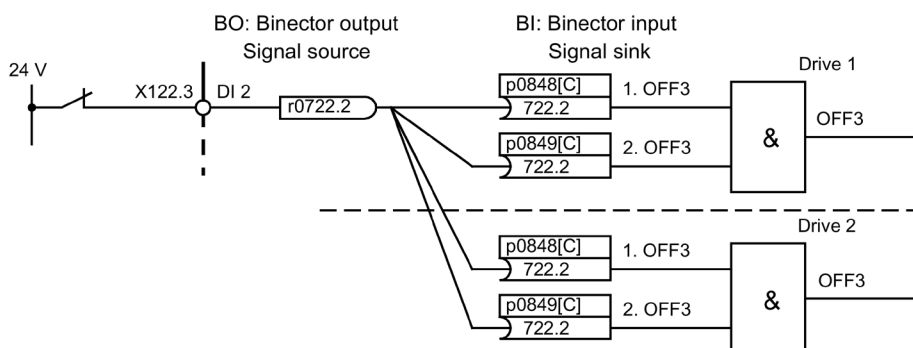


Figure 6-8 Connection of OFF3 to several drives (example)

### Analysis of BICO interconnections

The following parameters exist for the analysis of existing BICO interconnections:

- r9481                      Number of BICO interconnections
- r9482[0...n]            BICO interconnections BI/CI parameters
- r9483[0...n]            BICO interconnections BO/CO parameters
- p9494                    BICO interconnections, search signal source
- p9495                    BICO interconnections, search signal source number
- p9496                    BICO interconnections, search signal source first index

### BICO interconnections to other drives

The following parameters are available for BICO interconnections to other drives:

- r9490                    Number of BICO interconnections to other drives
- r9491[0...9]            BI/CI of BICO interconnections to other drives
- r9492[0...9]            BO/CO of BICO interconnections to other drives
- p9493[0...9]            Reset BICO interconnections to other drives

### **Binector-connector converters and connector-binector converters**

#### **Binector-connector converter**

- Several digital signals are converted to a 32-bit integer double word or to a 16-bit integer word.
- p2080[0...15] BI: PROFIdrive PZD send bit-serial

#### **Connector-binector converter**

- A 32-bit integer double word or a 16-bit integer word is converted to individual digital signals.
- p2099[0...1] CI PROFIdrive PZD selection receive bit-serial

### **Fixed values for interconnection using BICO technology**

The following connector outputs are available for interconnecting any fixed value settings:

- p2900[0...n] CO: Fixed value\_%\_1
- p2901[0...n] CO: Fixed value\_%\_2
- p2930[0...n] CO: Fixed Value\_M\_1

Example:

These parameters can be used to interconnect the scaling factor for the main setpoint or to interconnect an additional torque.



## 6.3.5 Propagation of faults

### Forwarding faults to the Control Unit

In the case of faults that are, for example, triggered by the Control Unit or a Terminal Module, central functions of the drive are also often affected. As a result of propagation, faults that are triggered by one drive object are therefore forwarded to other drive objects. This behavior also applies to the faults that are set in a DCC chart on the Control Unit with the aid of the DCC block.

### Propagation types

There are the following types of propagation:

- BICO  
The fault is propagated to all active drive objects with closed-loop control functions (infeed, drive) to which there is a BICO interconnection.
- DRIVE  
The fault is propagated to all active drive objects with closed-loop control functions.
- GLOBAL  
The fault is propagated to all active drive objects.
- LOCAL  
The behavior of this propagation type is dependent on parameter p3116.
  - With binector input p3116 = 0 (factory setting) the following applies:  
The fault is propagated to the first active drive object with closed-loop control functions.
  - With binector input p3116 = 1 signal, the following applies:  
The fault is not forwarded.

## 6.4 Command sources

### 6.4.1 "PROFIdrive" default setting

#### Preconditions

The "PROFIdrive" default setting was chosen during commissioning:

- STARTER (p0700): "PROFIdrive"
- AOP30 (p0700): "5: PROFIdrive"

#### Command sources

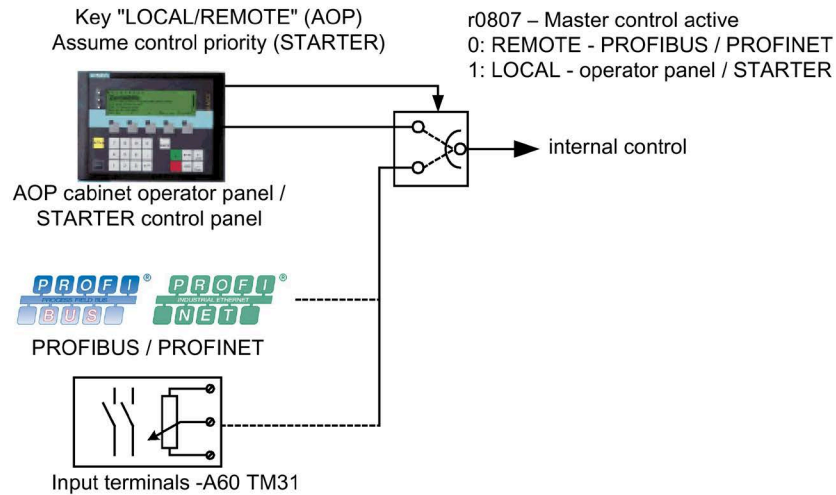


Figure 6-9 Command sources – AOP30 <-> PROFIdrive

#### Priority

The command source priorities are shown in the diagram "Command sources - AOP30 <-> PROFIdrive".

---

#### Note

##### Emergency OFF signals

The emergency OFF and motor protection signals are always active (regardless of the command source).

All of the supplementary setpoints are deactivated for LOCAL master control.

---

### TM31 terminal assignment with "PROFdrive" default setting (if option G60 is present)

When you choose the "PROFdrive" default setting, use the following terminal assignment for TM31:

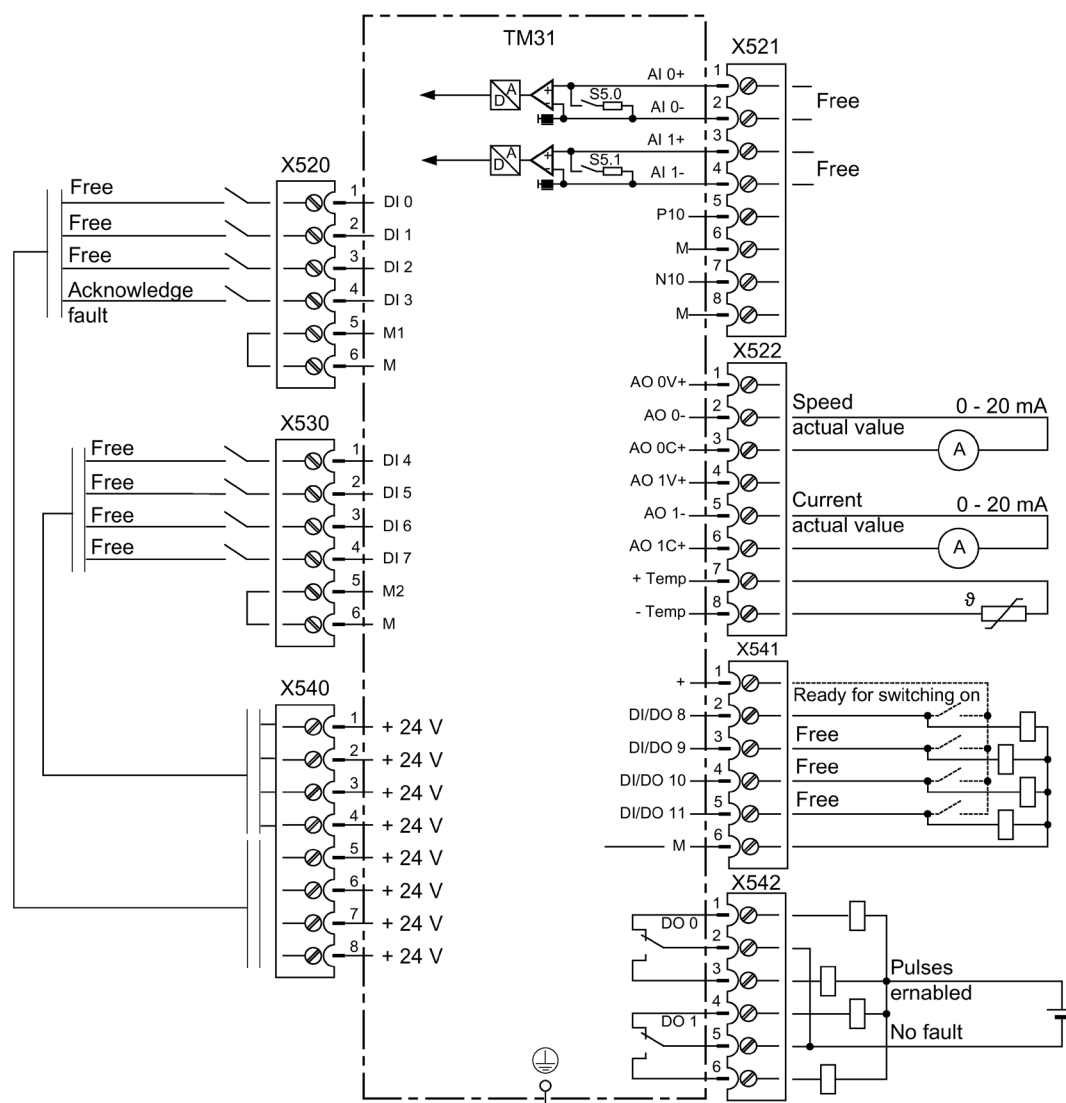


Figure 6-10 TM31 terminal assignment with "PROFdrive" default setting

#### Control word 1

The bit assignment for control word 1 is described in "Description of the control words and setpoints".

#### Status word 1

The bit assignment for status word 1 is described in "Description of the status words and actual values".

#### Changing over the command source

The command source can be changed over using the LOCAL/REMOTE key on the AOP30.

### 6.4.2 "TM31 terminals" default setting

#### Preconditions

The customer Terminal Module option (G60) is installed in the cabinet unit.  
The "TM31 Terminals" default setting was chosen during commissioning:

- STARTER (p0700): "TM31 Terminals"
- AOP30 (p0700): "6: TM31 terminals"

#### Command sources

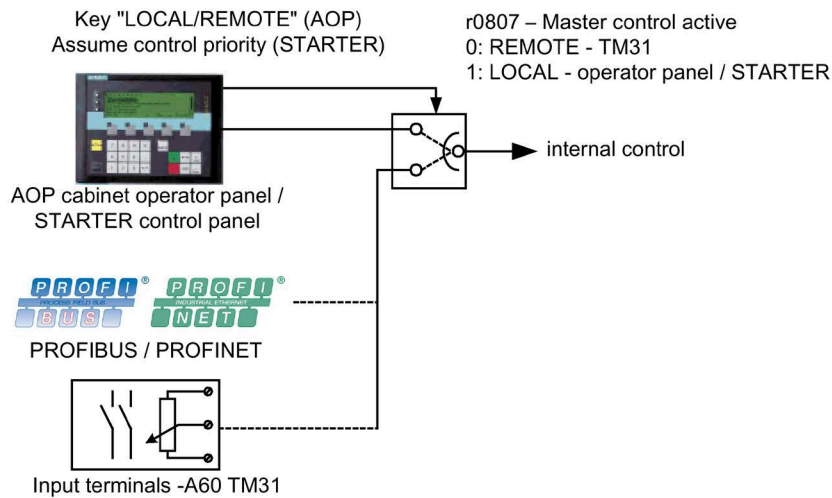


Figure 6-11 Command sources - AOP30 <-> TM31 terminals

#### Priority

The priority of the command sources is shown in the diagram "Command sources - AOP30 <-> TM31 terminals".

---

#### Note

##### Emergency OFF signals

The emergency OFF and motor protection signals are always active (regardless of the command source).

All of the supplementary setpoints are deactivated for LOCAL master control.

---

### TM31 terminal assignment with "TM31 Terminals" default setting

When you choose the "TM31 Terminals" default setting, the terminal assignment for TM31 is as follows:

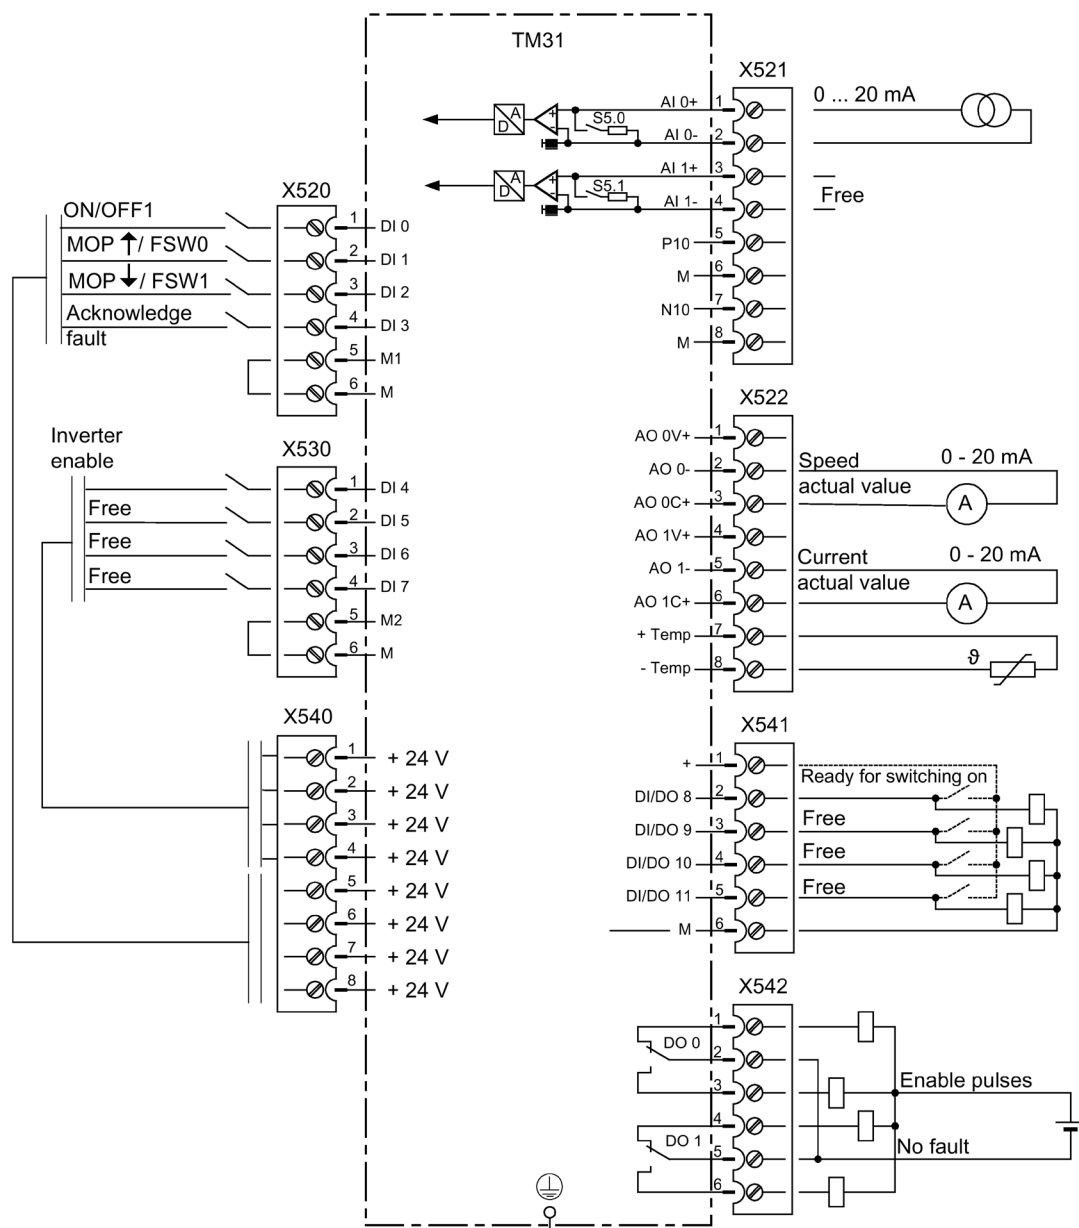


Figure 6-12 TM31 terminal assignment with "TM31 Terminals" default setting

### Changing over the command source

The command source can be changed over using the LOCAL/REMOTE key on the AOP30.

### 6.4.3 "NAMUR" default setting

#### Preconditions

The NAMUR terminal block (option B00) is installed in the cabinet unit.

The "NAMUR" default setting was chosen during commissioning:

- STARTER (p0700): "NAMUR"
- AOP30 (p0700): "7: NAMUR"

#### Command sources

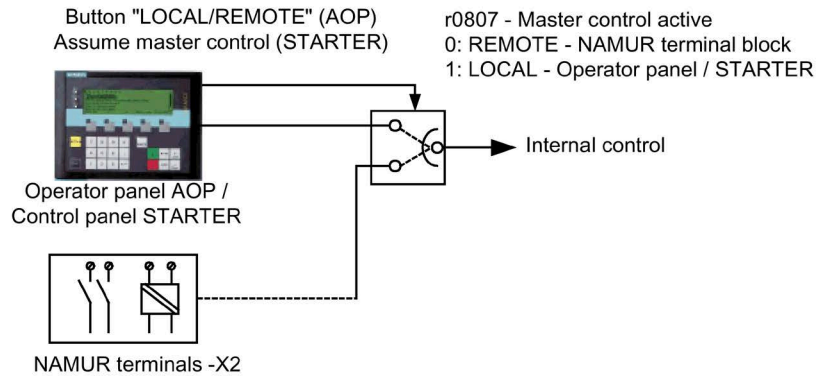


Figure 6-13 Command sources - AOP30 <-> NAMUR terminal block

#### Priority

The priority of the command sources is shown in the diagram "Command sources - AOP30 <-> NAMUR terminal block".

---

#### Note

##### Emergency OFF signals

The emergency OFF and motor protection signals are always active (regardless of the command source).

All of the supplementary setpoints are deactivated for LOCAL master control.

---

### Terminal Assignment with the "NAMUR" Default Setting

When you choose the "NAMUR" default setting, the terminal assignment is as follows (as with option B00):

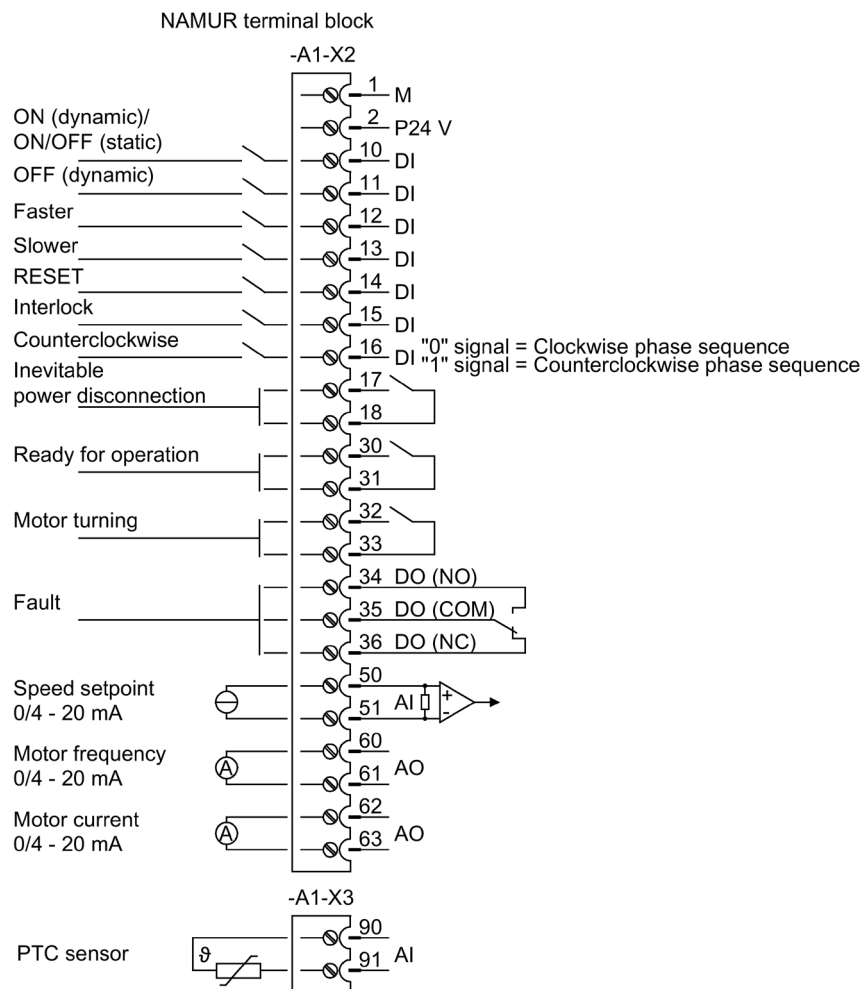


Figure 6-14 Terminal assignment with "NAMUR terminal block" default setting

### Changing over the command source

The command source can be changed over using the LOCAL/REMOTE key on the AOP30.

### 6.4.4 "PROFIdrive NAMUR" default setting

#### Preconditions

The NAMUR terminal block (option B00) is installed in the cabinet unit.

The "PROFIdrive" default setting was chosen during commissioning:

- STARTER (p0700): "PROFIdrive Namur"
- AOP30 (p0700): "10: PROFIdrive Namur"

#### Command sources

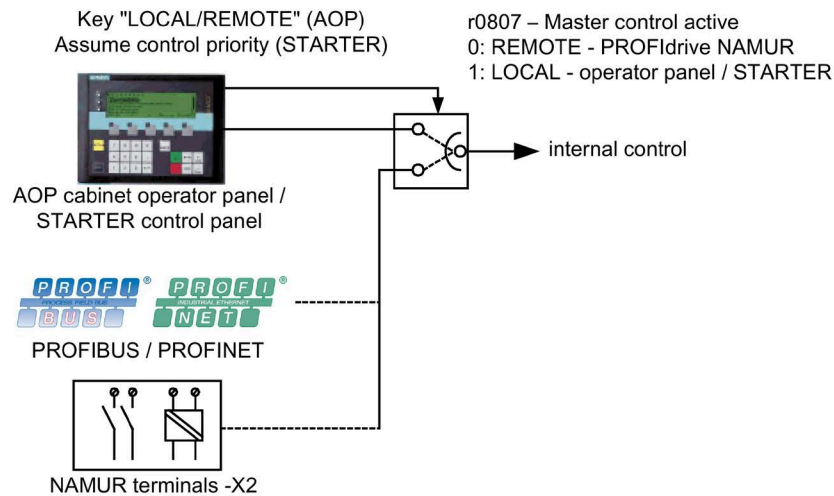


Figure 6-15 Command sources - AOP30 <-> PROFIdrive NAMUR

#### Priority

The priority of the command sources is shown in the diagram "Command sources - AOP30 <-> PROFIdrive NAMUR".

---

#### Note

##### Emergency OFF signals

The emergency OFF and motor protection signals are always active (regardless of the command source).

All of the supplementary setpoints are deactivated for LOCAL master control.

---



## Terminal assignment for the "PROFIdrive NAMUR" default setting

When you choose the "PROFIdrive NAMUR" default setting, the terminal assignment is as follows (as with option B00):

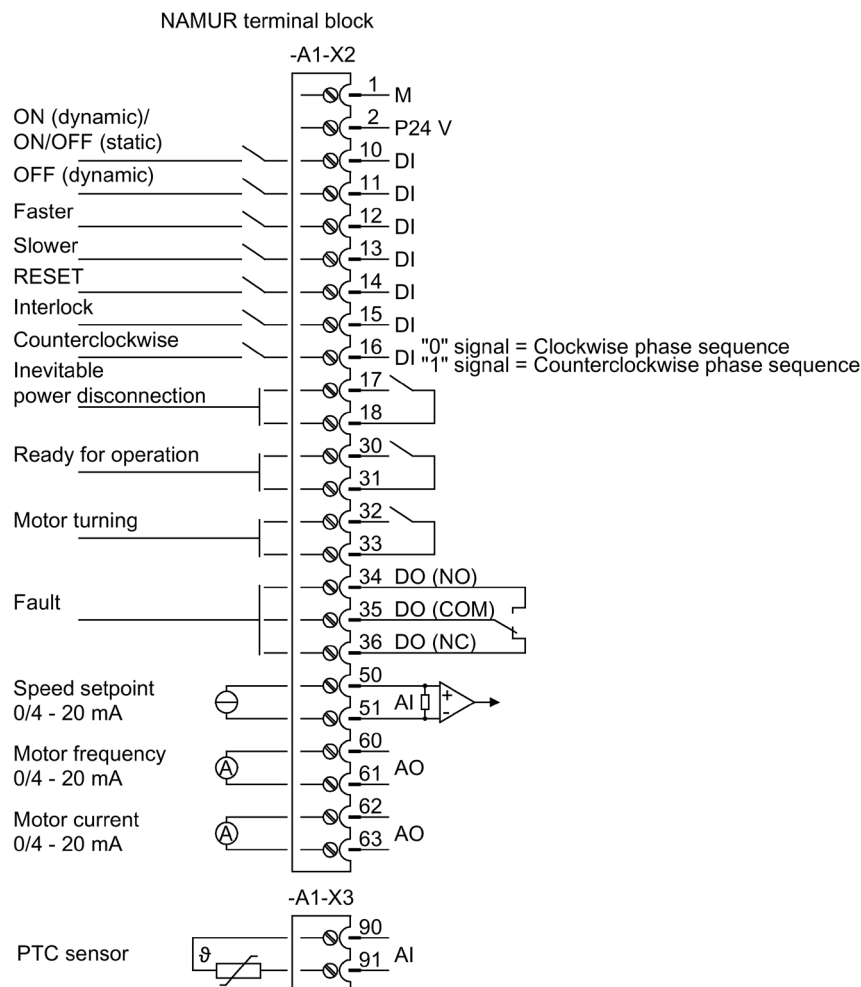


Figure 6-16 Terminal assignment for the "PROFIdrive NAMUR" default setting

### Control word 1

The bit assignment for control word 1 is described in "Description of the control words and setpoints".

### Status word 1

The bit assignment for status word 1 is described in "Description of the status words and actual values".

### Changing over the command source

The command source can be changed over using the LOCAL/REMOTE key on the AOP30.

## 6.5 Setpoint sources

### 6.5.1 Analog inputs

#### Description

The customer terminal block TM31 features two analog inputs for specifying setpoints for current or voltage signals.

In the factory setting, analog input 0 (terminal X521:1/2) is used as a current input in the range 0 to 20 mA.

#### Precondition

The default setting for analog inputs was chosen during commissioning:

- STARTER (p1000): "TM31 terminals"
- AOP30 (p1000): "2: TM31 terminals"

#### Signal flow diagram

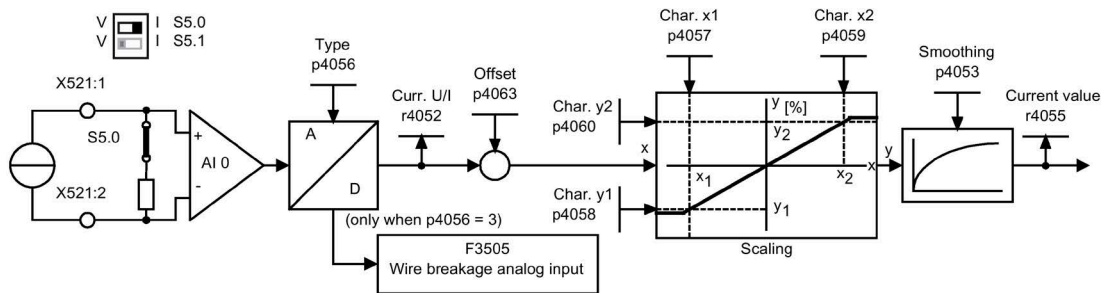


Figure 6-17 Signal flow diagram: analog input 0

#### Function diagram

- |         |                              |
|---------|------------------------------|
| FP 9566 | TM31 – analog input 0 (AI 0) |
| FP 9568 | TM31 – analog input 1 (AI 1) |

**Parameter**

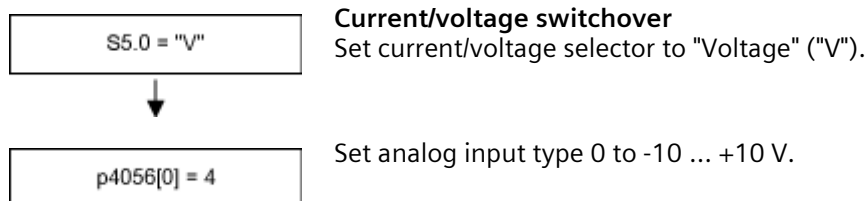
- r4052 Actual input voltage/current
- p4053 Analog inputs smoothing time constant
- r4055 Current referenced input value
- p4056 Analog inputs type
- p4057 Analog inputs, characteristic value x1
- p4058 Analog inputs, characteristic value y1
- p4059 Analog inputs, characteristic value x2
- p4060 Analog inputs, characteristic value y2
- p4063 Analog inputs offset

---

**Note****Delivery condition**

In the factory setting and after basic commissioning, an input current of 20 mA is equal to the main setpoint 100% reference speed (p2000), which has been set to the maximum speed (p1082).

---

**Example: Switching analog input 0 from current to voltage input –10 to +10 V**

---

**Note****Save changes so that they are protected against power failure**

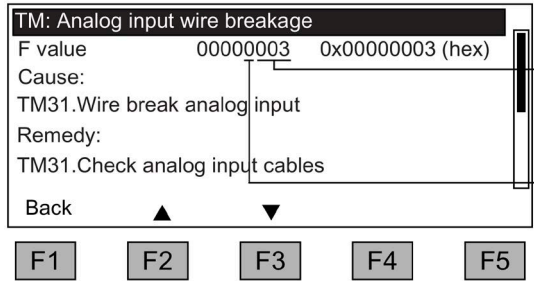
The change to the analog input must then be stored on the CompactFlash card so that it is protected in the event of a power failure.

---

### F3505 – Fault: "Analog input wire break"

This fault is triggered when the analog input type (p4056) is set to 3 (4 ... 20 mA with open-circuit monitoring) and the input current of 2 mA has been undershot.

The fault value can be used to determine the analog input in question.



Component number  
 3: Module -A60 (option G60)  
 4: Module -A61 (option G61)  
 0: Analog input 0: -X521:1/2  
 1: Analog input 1: -X521:3/4

## 6.5.2 Motorized potentiometer

### Description

The digital motorized potentiometer enables you to set speeds remotely using switching signals (+/- keys). It is activated via terminals or fieldbus. As long as a logical 1 is present at signal input "MOP raise" (setpoint higher), the internal numerator integrates the setpoint. You can set the integration time (time taken for the setpoint to increase) using parameter p1047. In the same way, you can decrease the setpoint using signal input "MOP lower". The deceleration ramp can be set using parameter p1048. Configuration parameter p1030.0 = 1 (default setting = 0) enables non-volatile storage of the current motorized potentiometer value when powering down the drive unit. When powering-up the drive unit, the starting (initial) value of the motorized potentiometer is set to the last, actual value that was present when the drive unit was powered-down.

### Precondition

The default setting for the motorized potentiometer was chosen during commissioning:

- STARTER (p1000): "Motorized potentiometer"
- AOP30 (p1000): "3: Motorized potentiometer"

## Signal flow diagram

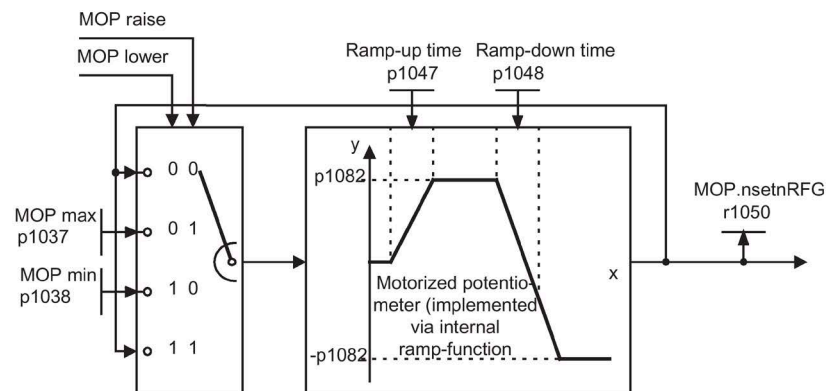


Figure 6-18 Signal flow diagram: Motorized potentiometer

## Function diagram

FD 3020 Motorized potentiometer

## Parameter

- p1030 Motorized potentiometer, configuration
- p1037 Motorized potentiometer, maximum speed
- p1038 Motorized potentiometer, minimum speed
- p1047 Motorized potentiometer, ramp-up time
- p1048 Motorized potentiometer, ramp-down time
- r1050 Motorized potentiometer, setpoint after the ramp-function generator

### 6.5.3 Fixed speed setpoints

#### Description

A total of 15 variable fixed speed setpoints are available. The default setting specified for the setpoint sources during commissioning via STARTER or the operating panel makes three fixed speed setpoints available. They can be selected via terminals or fieldbus.

**Precondition**

The default setting for the fixed speed setpoints was chosen during commissioning:

- STARTER (p1000): "Fixed setpoint"
- AOP30 (p1000): "4: Fixed setpoint"

**Signal flow diagram**

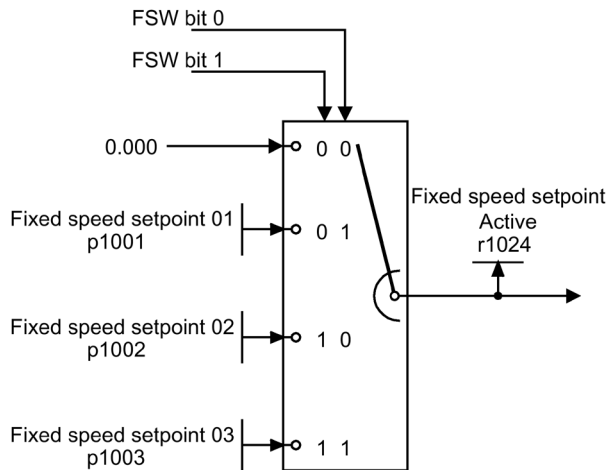


Figure 6-19 Signal flow diagram: Fixed speed setpoints

**Function diagram**

FP 3010 Fixed speed setpoints

**Parameter**

- p1001 Fixed speed setpoint 01
- p1002 Fixed speed setpoint 02
- p1003 Fixed speed setpoint 03
- r1024 Fixed speed setpoint effective

**Note**

Other fixed speed setpoints are available using p1004 to p1015. They can be selected using p1020 to p1023.

## 6.6 Control via the operator panel

### 6.6.1 Operator panel (AOP30) overview and menu structure

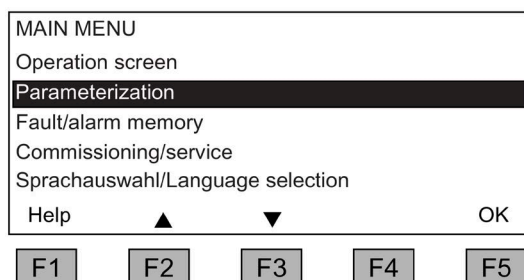
#### Description

The operator panel can be used for the following activities:

- Parameterization (commissioning)
- Monitoring status variables
- Controlling the drive
- Diagnosing faults and alarms

All the functions can be accessed via a menu.

Your starting point is the main menu, which you can always call up using the yellow MENU key:



Dialog screen for the main menu:  
It can be accessed at any time with the "MENU" key.

Press "F2" or "F3" to navigate through the menu options in the main menu.

---

#### Note

##### AOP reset

If the AOP no longer reacts, you can trigger an AOP reset by simultaneously pressing the key and OFF buttons (longer than two seconds) and then releasing the OFF button.

---

**Menu structure of the operator panel**

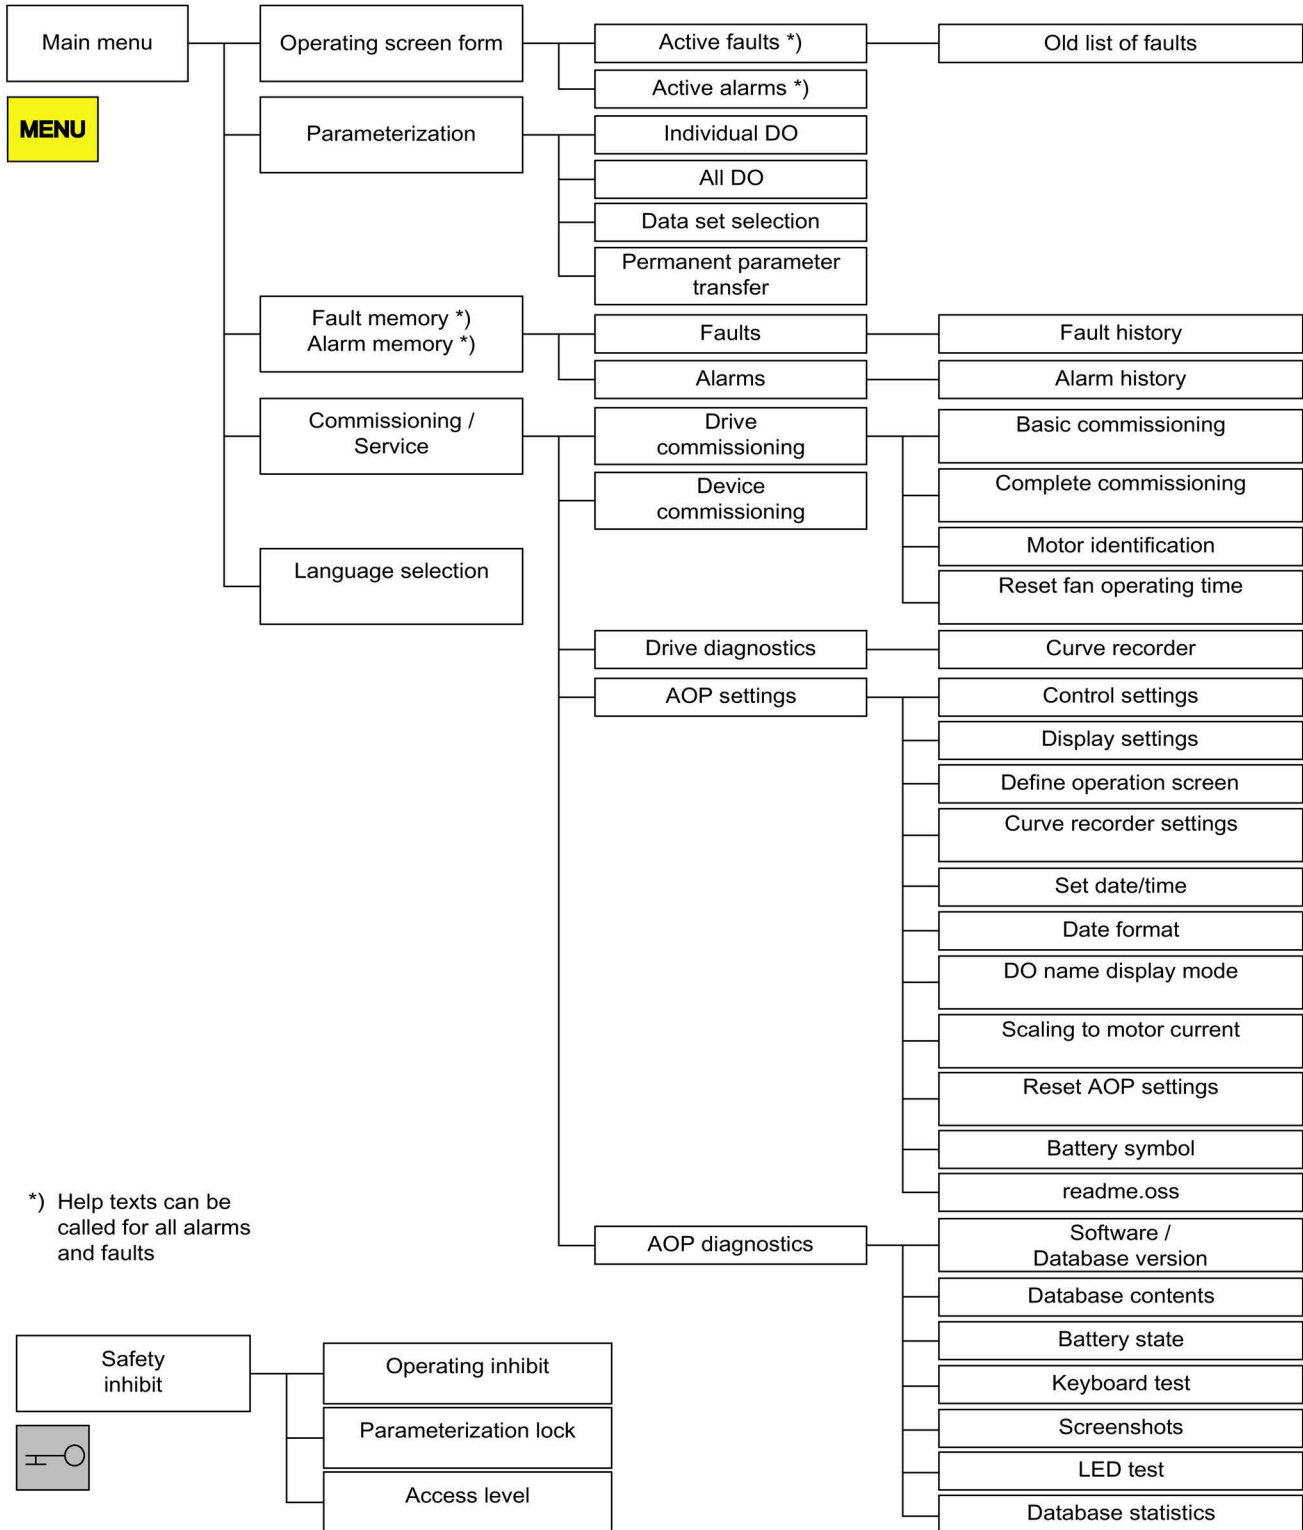


Figure 6-20 Menu structure of the operator panel



## 6.6.2 Menu: Operation screen

### Description

The operation screen displays the most important status variables for the drive unit:

In the delivery condition, it displays the operating state of the drive, the direction of rotation, the time, as well as four drive variables (parameters) numerically and two in the form of a bar display for continuous monitoring.

There are two ways to reach the operation screen:

1. After the power supply has been switched on and the system has ramped up.
2. By pressing the MENU key and F5 "OK "

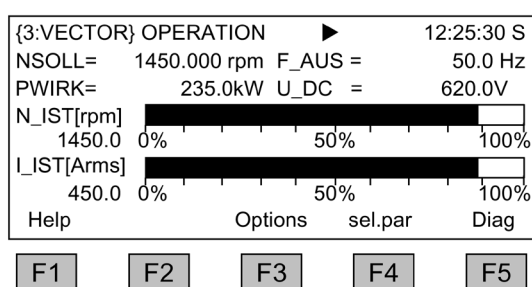


Figure 6-21 Operation screen

If a fault occurs, the system automatically displays the fault screen (see "Faults and alarms").

In LOCAL control mode, you can choose to enter the setpoint numerically (F2: setpoint).

With F3 "Extras", screen2 and CDS data set (see section CDS setting via AOP (Page 307)) can be selected.

The individual parameters of the operation screen can be selected using F4 "Sel. par." The corresponding parameter number of the short identifier is displayed using F1 "Help+" and a description of the parameter can be called up.

### Settings

When you choose Commissioning / service → AOP settings → Define operation screen, you can adjust the display type and the values displayed as required (see "AOP settings").

### 6.6.3 Parameterization menu

You can adjust the device settings in the Parameterization menu.

The drive software is modular. The individual modules are called DOs ("drive objects").

The following DOs are available in the SINAMICS G150:

- CU: General parameters for the Control Unit
- B\_INF: non-regulated infeed
- VECTOR: Drive control
- TM31: TM31 Terminal Module (option G60)
- TM150: TM150 temperature sensor module (option G51)

Parameters with identical functions may exist with the same parameter number in more than one DO (e.g. p0002).

The AOP30 is used for operating devices that comprise more than one drive so that attention is focused on one drive (i.e. the "current" drive). The switchover is made in the main menu. The corresponding function key is labeled "Drive."

This drive determines the following:

- Operation screen
- Fault and alarm displays
- The controller (ON, OFF, ...) of a drive

Depending on your requirements, you can choose between two AOP display types:

1. All parameters  
All the parameters present in the device are listed here. The DO to which the currently selected parameter belongs is displayed in curly brackets in the top left of the screen.
2. DO selection  
In this display, you can pre-select a DO. Only the parameters for this DO are then listed. (The expert list display in STARTER only uses this DO view)

In both cases, the set access level governs which parameters are displayed. You can set the access level in the menu for inhibit functions, which can be called up using the key button.

The parameters for access levels 1 and 2 are sufficient for simple applications.

At access level 3 ("Expert"), you can change the structure of the function by interconnecting BICO parameters.

In the Data set selection menu, you can choose which of the data sets chosen is currently DISPLAYED on the operator panel.

Data set parameters are indicated by a "c", "d", "m", "e", or "p" between the parameter number and parameter designator.

When a data set parameter is changed, the data set selection dialog appears.

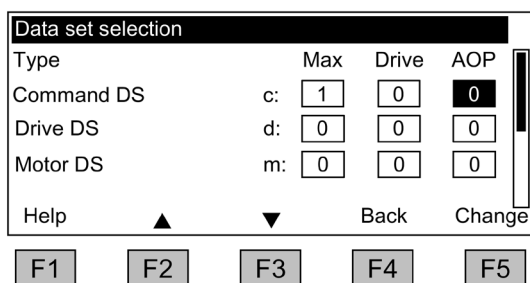


Figure 6-22 Data set selection

Explanation of the operator control dialog


- "Max" shows the maximum number of data sets parameterized (and thereby available for selection) in the drive.
- "Drive" indicates which data set is currently active in the drive.
- "AOP" indicates which particular data set is currently being displayed in the operator panel.

### 6.6.4 Menu: Fault/alarm memory

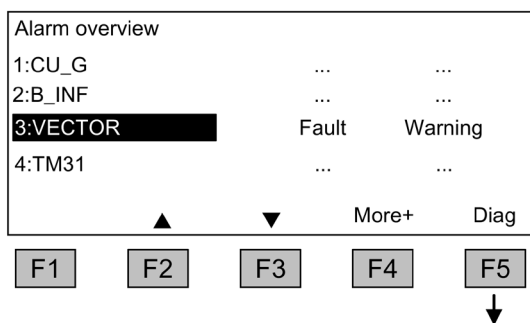When you select the menu, a screen appears containing an overview of faults and alarms that are present.


For each drive object, the system indicates whether any faults or alarms are present. ("Fault" or "Alarm" appears next to the relevant drive object).

In the graphic below, you can see that at least one active fault/alarm is present for the "VECTOR" drive object. No faults/alarms are indicated for the other drive objects.



#### Fault/alarm memory


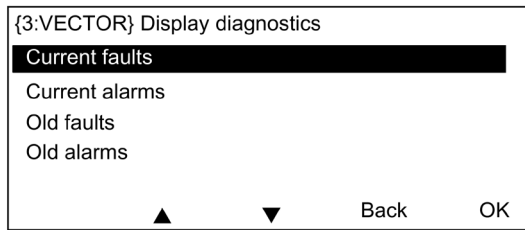
When you navigate to the line with active alarms/faults and then press the F5 <Diag> key, the system displays a screen in which you have to select the current or old alarms/faults.



**Display diagnosis**

When you navigate to the required line and then press the F5 <OK> key, the corresponding faults/alarms are displayed.

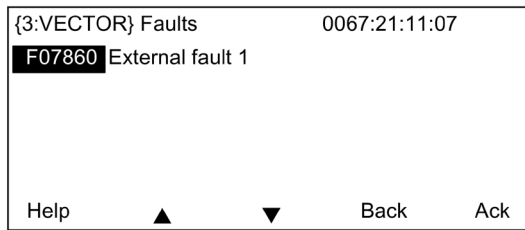The list of current faults is selected here as an example.



**Display of current faults**

A maximum of eight current faults are displayed along with their fault number and name of the fault.

To display additional help regarding the cause of the problem and how to solve it, choose F1 <Help>.

To acknowledge the faults, choose F5 <Ack.>. If a fault cannot be acknowledged, the fault remains.

**6.6.5 Menu commissioning / service**

**6.6.5.1 Drive commissioning**

This option enables you to re-commission the drive from the main menu.

**Basic Commissioning**

Only the basic commissioning parameters are queried and stored permanently.

**Complete commissioning**

Complete commissioning with motor and encoder data entry is carried out. Following this, key motor parameters are recalculated from the motor data. The parameter values calculated during previous commissioning are lost.

In a subsequent motor identification procedure, the calculated values are overwritten.

**Motor identification**

The selection screen for motor identification appears.

## Reset fan operating time

The actual operating hours of the fan in the power unit is displayed.

After a fan replacement, the operating hours counter for monitoring the fan operating time must be reset.

## 6.6.5.2 Device commissioning

### Device commissioning

In this menu, you can enter the device commissioning status directly. This is the only way that you can reset parameters to the factory setting for example.

## 6.6.5.3 Drive diagnostics

### Curve recorder

The curve recorder provides a slow trace function, which monitors a signal trend. A signal selected via a parameter is shown in the form of a curve.

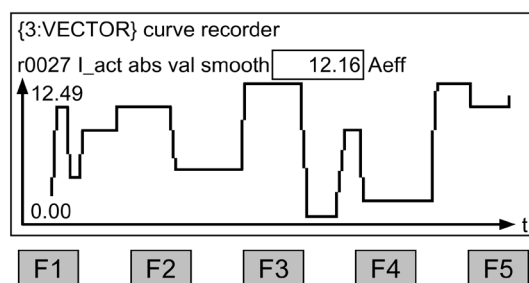


Figure 6-23 Curve recorder

The curve recorder-relevant settings are changed by pressing the F5 key or via the "Commissioning / Service – AOP settings - Curve recorder-relevant settings" menu.

The value of the parameter selected in the curve recorder-relevant settings is output on the display in addition to the curve and updated every 0.5 ... 24.5 seconds (parameterizable). With a slowly running time basis (as of 20 minutes/figure), the time basis value flashes in the header in the 1 s-cycle alternately with the text "slow X".

Assignment of the function keys F1 to F5 is not normally displayed so that the space can be fully utilized to display the curve. Pressing a function key shows the key assignments. If no further key is pressed within 5 seconds, the labeling will disappear again.

The curve can be scaled automatically or manually. This is selected with key F3 "scale+" - F2 "Auto/Manual" followed by confirmation with F5 "OK."

- **Auto**

The scaling of the curve changes dynamically, it is oriented to the maximum value (for example, 12.49) and minimum value (for example, 0.00) visible in the display at the actual point in time. Scaling can be changed step-by-step by pressing buttons F2 and F3. If measured value noise is shown with an excessively high resolution as a result of the automatic scaling, then the resolution can be reduced in four steps by pressing button F2. As a result, the automatic scaling is deactivated. However, if the measured value leaves the display area, then this is extended. Automatic scaling can be reselected by pressing button F3.

- **Manually**

After selecting manual scaling and confirmation with "OK", a window opens in which the maximum and minimum limits for scaling can be set.

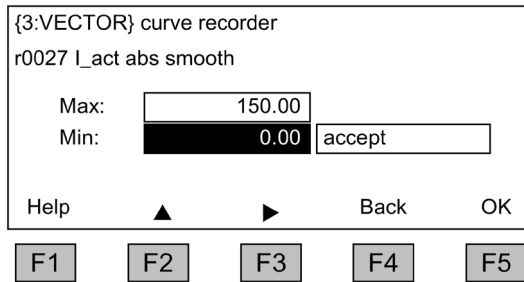


Figure 6-24 Curve recorder - manual scaling

After setting and applying the limits, you switch to the curve recorder and manual scaling is used.

If the current measured values are outside the displayable range, the range will automatically be extended.

---

**Note**

**Changing the parameter for the curve recorder in manual scaling**

When the parameter for the curve recorder is changed the following occurs with manual scaling:

- If the current parameter has lower values than the currently set scaling, the scaling will be retained.
  - If the current parameter has higher values than the currently set scaling, the scaling will be adjusted automatically.
- 

Help on the curve recorder can be opened with key F1.

The curve recorder is exited by pressing the MENU button.

**Note**

**No recording of data**

The values displayed in the recorder are not recorded and saved, they are only used for display until the screen form is exited.

**6.6.5.4 AOP settings**

**Control settings**

This defines the settings for the control keys in LOCAL mode (see "Operation / Control via the operator panel / Operation via the operator panel").

**Display settings**

In this menu, you set the lighting, brightness, and contrast for the display.

**Define operation screen**

In this menu, you can switch between five operation screens. You can set the parameters to be displayed.

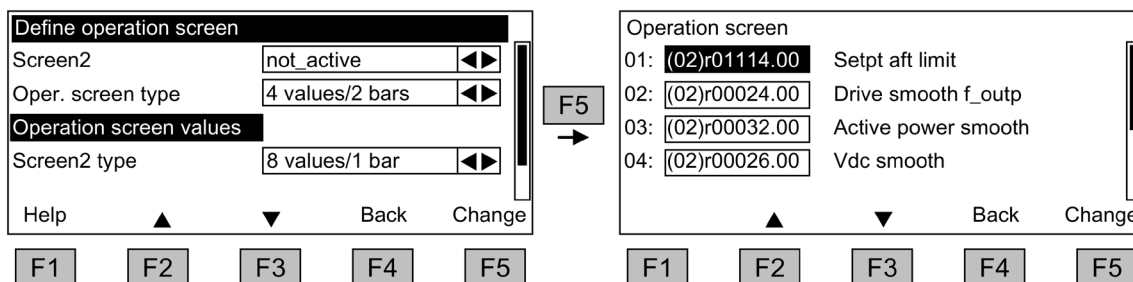


Figure 6-25 Define operation screen

The following screenshot shows how entries are assigned to the screen positions:

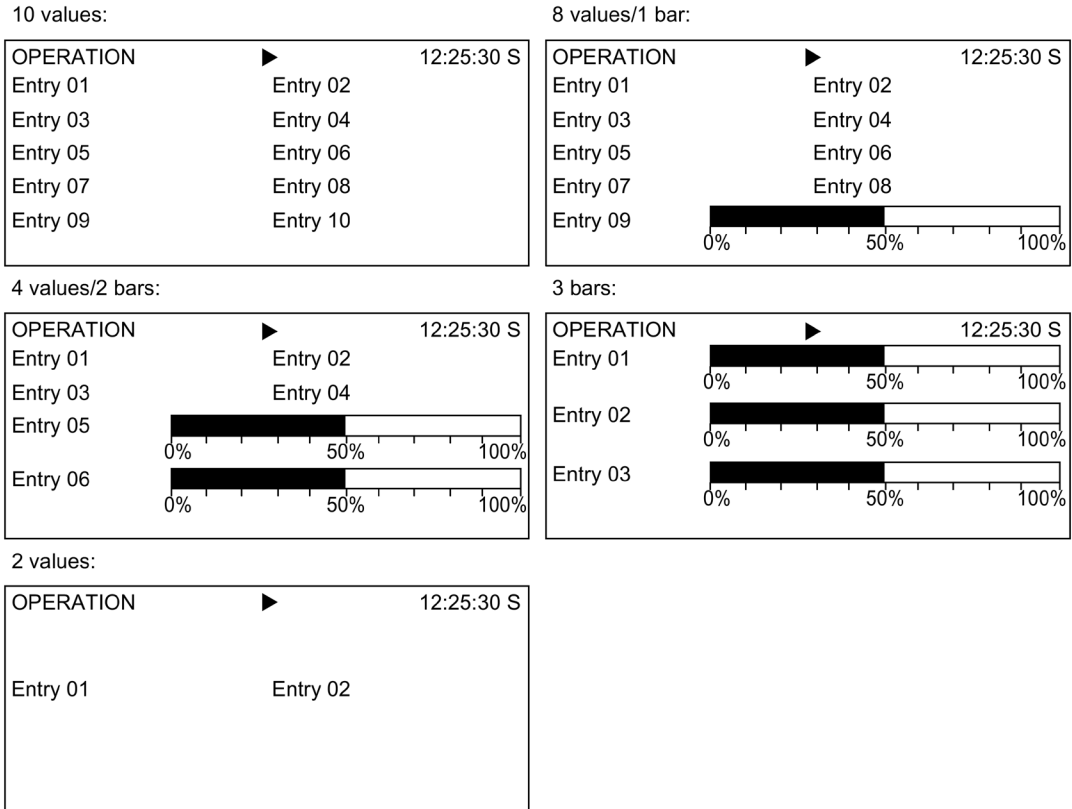


Figure 6-26 Layout of entries on the operation screen

### Lists of signals for the operating screen form

The following tables list some of the main signals for the operation screen along with the associated reference variables and default settings for fast commissioning.



## VECTOR object

Table 6- 5 List of signals for the operation screen - VECTOR object

Signal	Parameter	Short name	Unit	Scaling (100 %=...) See table below
Factory setting (entry no.)				
Speed setpoint upstream of ramp-function generator	(1) r1114	NSETP	1/min	p2000
Output frequency	(2) r0024	F_OUT	Hz	Reference frequency
Power smoothed	(3) r0032	PACTV	kW	r2004
DC link voltage smoothed	(4) r0026	U_DC	V	p2001
Actual speed value smoothed	(5) r0021	N_ACT	1/min	p2000
Absolute actual current, smoothed	(6) r0027	I_IST	A	p2002
Motor temperature	(7) r0035 <sup>1)</sup>	T_MOT	°C	p2006
Converter temperature	(8) r0037	T_LT	°C	p2006
Actual torque smoothed	(9) r0031	M_ACT	Nm	p2003
Converter output voltage smoothed	(10) r0025	C_OUT	V	p2001
<b>For diagnostic purposes</b>				
Speed setpoint smoothed	r0020	NSETP	1/min	p2000
Control factor smoothed	r0028	AUSST	%	Reference modulation depth
Field-producing current component	r0029	IDACT	A	p2002
Torque-producing current component	r0030	IQACT	A	p2002
Converter overload Degree of thermal overload	r0036	LTI2T	%	100 % = Shutdown
Speed actual value motor encoder	r0061	N_ACT	1/min	p2000
Speed setpoint after the filter	r0062	NSETP	1/min	p2000
Actual speed smoothed	r0063	N_ACT	1/min	p2000
Control deviation	r0064	NDIFF	1/min	p2000
Slip frequency	r0065	FSCHL	Hz	Reference frequency
Output frequency	r0066	F_OUT	Hz	Reference frequency
Output voltage	r0072	UACT	V	p2001
Control factor	r0074	AUSST	%	Reference modulation depth
Torque-generating actual current	r0078	IQACT	A	p2002
Actual torque value	r0080	M_ACT	Nm	p2003
<b>For further diagnostic purposes</b>				
Fixed speed setpoint effective	r1024		1/min	p2000
Active motorized potentiometer setpoint	r1050		1/min	p2000
Resulting speed setpoint	r1119	NSETP	1/min	p2000
Speed controller output	r1508	NREGY	Nm	p2003
I component of speed controller	r1482	NREGI	Nm	p2003
PROFIBUS setpoint	r2050	PBSOL	1/min	p2000

<sup>1)</sup> If a temperature sensor has not been installed, a value of –200 °C is displayed.

### Normalization for VECTOR object

Table 6- 6 Normalization for VECTOR object

Size	Scaling parameter	Default for quick commissioning
Reference speed	100% = p2000	p2000 = Maximum speed (p1082)
Reference voltage	100% = p2001	p2001 = 1000 V
Reference current	100% = p2002	p2002 = Current limit (p0640)
Reference torque	100% = p2003	p2003 = 2 x rated motor torque
Reference power	100% = r2004	r2004 = (p2003 x p2000 x $\pi$ ) / 30
Reference frequency	100 % = p2000 / 60	
Reference modulation depth	100 % = Maximum output voltage without overload	
Reference flux	100 % = Rated motor flux	
Reference temperature	100% = p2006	p2006 = 100°C

### Object B\_INF

Table 6- 7 List of signals for the operation screen - object B\_INF

Signal	Parameter	Short name	Unit	Scaling (100 %=...) See table below	
Factory setting (entry no.)					
DC link voltage smoothed	(1)	r0026	U_DC	V	p2001
Temperature of power unit	(2)	r0037	T_LT	°C	p2006

### Normalization for object B\_INF

Table 6- 8 Normalization for object B\_INF

Variable	Scaling parameter	Default for quick commissioning
Reference voltage	100 % = p2001	p2001 = r0206/r0207
Reference temperature	100% = p2006	p2006 = 100°C

### TM31 object

Table 6- 9 List of signals for the operation screen - TM31 object

Signal	Parameters	Short name	Unit	Scaling (100% = ...)
Analog input 0 [V, mA]	r4052[0]	AI_UI	V, mA	R: 100 V / mA: 100 mA
Analog input 1 [V, mA]	r4052[1]	AI_UI	V, mA	R: 100 V / mA: 100 mA
Analog input 0, scaled	r4055[0]	AI_%	%	as set in p200x
Analog input 1, scaled	r4055[1]	AI_%	%	as set in p200x

## Curve recorder settings

In this menu, the following settings can be made:

### Parameter selection

You can select here the parameter whose signal is to be displayed in the form of a trend curve in the curve recorder.

**Interpolation** (factory setting: No), serves for the better display of rapidly changing quantities.

- **No:** Only the measured values are displayed as points, without a connecting line between the points.
- **1:** The measured values are connected with a vertical line.
- **2:** The measured values are connected with a line, offset at the center.

**Time base** (factory setting: 2 minutes/screen)

The rate of the signal acquisition in minutes per screen is set. The value can be changed in integer multiples of 2. If an odd value is entered, the value will be rounded up. After changing the time basis the recording is started again.

**Background recording** (factory setting: No)

- **YES:** Values are still recorded, even if the display screen is exited. When the screen is entered again, the recorded prehistory is displayed.
- **NO:** The recording is stopped when the curve recorder is exited.

**Y scale mode** (factory setting: Auto), specifies the representation of the trend

- **Auto:** Scaling is done automatically (making the best possible use of the display height).
- **Manual:** Scaling is done manually by entering the range limits MIN/MAX. If, in this mode, values that are outside the defined window occur, the limit is automatically adapted for the display so that actual measured values can always be recorded.

## Setting the date/time (for date stamping of error messages)

In this menu, you set the date and time.

You can also set whether and/or how the AOP and drive unit are to be synchronized. Synchronization of the AOP with the drive enables error messages to be date- and time-stamped.

---

### Note

#### Display format for the time

The drive unit displays the time in parameter r3102 in the UTC format (days/milliseconds since 1970-01-01).

---

Under "Additional settings", settings for synchronization can be made:

**Synchronization** (factory setting: None)

- **None**  
The times for the AOP and drive unit are not synchronized.
- **AOP -> Drive**
  - If you activate this option, the AOP and drive unit are synchronized immediately whereby the current AOP time is transferred to the drive unit.
  - The current AOP time is transferred to the drive unit every time the AOP is started.
  - Depending on the set synchronization interval, the current AOP time is transferred to the drive unit.

---

**Note**

**Flashing "S"**

If the AOP detects a difference between RAM and ROM during synchronization to the drive unit, this is indicated by a flashing "S" at the top right in the display or, if operator input and/or parameter assignment has been disabled, by a flashing key symbol.

---

- **Drive -> AOP**
  - If you activate this option, the AOP and drive unit are synchronized immediately whereby the current drive unit time is transferred to the AOP.
  - The current drive unit time is transferred to the AOP every time the AOP is started.
  - Depending on the set synchronization interval, the current drive unit time is transferred to the AOP.

---

**Note**

**Time-of-day master**

The time in the drive must be set by a clock master (e.g. SIMATIC).

---

**Synchronization interval**

The interval for time synchronization is set from 1 hour (factory setting) to 99 hours.

For the interval, the time in the AOP from the time of the last change of the interval is decisive.

**Daylight saving** (factory setting: No)

- **No**  
The time does not automatically change over to daylight-saving time.
- **Yes**  
Selection is only possible if synchronization is set to "None" or "AOP -> Drive".  
The time is then automatically set to summer or winter time.  
After the changeover - for synchronization "AOP -> Drive" - synchronization is immediately carried out, irrespective of the synchronization interval set.

Changes to the synchronization must be saved with "Save".

**Date format**

In this menu, the date format can be set:

- **DD.MM.YYYY**: European date format
- **MM/DD/YYYY**: North American date format

**DO name display mode**

In this menu, you can toggle the display of the DO-name between the standard abbreviation (e.g., VECTOR) and a DO-name of your choice (e.g. motor\_1).

**User-defined DO name** (factory setting: No)

- **Yes**: The "User-defined DO-name" stored in parameter p0199 is displayed instead of the standard DO abbreviation.
- **No**: The standard DO abbreviation is displayed.

**Scaling to motor current**

In this menu, the reference variable for the bar-type display of parameter r0027 (absolute actual current value smoothed) can be changed over in the operating screen forms.

**Scaling to motor current** (factory setting: No)

- **Yes**: The bar display of parameter r0027 in the operating screen form is displayed with reference to parameter p0305 (rated motor current).
- **No**: The bar display of parameter r0027 in the operating screen form is displayed with reference to parameter p2002 (reference current).

### Reset AOP settings

When you choose this menu option, the AOP factory settings for the following are restored:

- Language
- Display (brightness, contrast)
- Operating screen
- Control settings

---

#### Note

##### Restoring the factory setting

When you reset parameters, all settings that are different to the factory settings are reset immediately. This may cause the cabinet unit to switch to a different, unwanted operational status.

For this reason, you should always take great care when resetting parameters.

---

### Battery symbol

In this menu, the battery symbol can be activated so that it is displayed in the operating screen form. When the display is activated, then the battery symbol is shown instead of the time of day seconds display. It displays the battery voltage in 20 % steps. If the display was received in the last 20 %, then the battery symbol flashes in order to indicate that the battery must be replaced.

**Battery symbol** (factory setting: NO)

- **Yes:** The battery symbol is shown at the top right of the operating screen form - at the time of day seconds display.
- **No:** The battery symbol is not displayed in the operating screen form.

### readme.oss

Notes are displayed in this menu that describe complying with regulations when using any embedded OSS software components.

### 6.6.5.5 AOP diagnostics

#### Software/database version

You can use this menu to display the firmware and database versions.

The database version must be compatible with the drive software status (you can check this in parameter r0018).

## Database contents

For service purposes, the contents of the database are displayed in the screen form.

## Battery status

In this menu, you can display the battery voltage numerically (in Volts) or as a bar display. The battery ensures that the data in the database and the current time are retained.

When the battery voltage is represented as a percentage, a battery voltage of  $\leq 2.30$  V is equal to 0%, and a voltage of  $\geq 3$  V to 100%.

The data is secure up to a battery voltage of 2.30 V.

- If the battery voltage is  $\leq 2.45$  V, the message "Battery weak - replace soon" is displayed in the status bar.
- If the battery voltage is  $\leq 2.30$  V, the system displays the following message: "Battery defect - replace immed."
- If the time and/or database is/are unavailable due to an undervoltage condition after being in a switched off state for a longer period of time, the loss is determined using a CRC check when the system is switched on again. This triggers a message instructing the user to replace the battery and then load the database and/or set the time.

For instructions on how to change the battery, see "Maintenance and servicing".

## Keyboard test

In this screen, you can check whether the keys are functioning properly. Keys that you press are represented on a symbolic keyboard on the display. You can press the keys in any order. You cannot exit the screen (F4 – "back") until you have pressed each key at least once.

---

### Note

#### Exit keyboard test

Alternatively, you can exit the keyboard test screen by pressing any key and holding it down.

## Screenshots

A screenshot is created by simultaneously pressing keys "1" and "+/-" - and then the display flashes 2 times, one after the other. A maximum of 8 screenshots can be managed.

The list of the saved screenshots is displayed in the "Screenshots" menu item.

The screenshot is selected from the list and is displayed by pressing F5.

While the screenshot is being displayed, the identifier and the time stamp are displayed flashing in the title line every 5 seconds.

## 6.6 Control via the operator panel

By pressing any function key F1 ... F5, the function key assignment is displayed for 5 seconds.

- The display is exited by pressing F4 and the list of screenshots is redisplayed.
- By pressing the F5 key once and then pressing F5 "Clear" again to confirm, the displayed screenshot will be deleted and the list of screenshots will be displayed again.

To clear all of the screenshots, in the list of screenshots, press F5 for longer than 1 second - and confirm the following prompt with "Yes".

If there are gaps in the list of screenshots, then they are populated with new screenshots from the top to the bottom. When the list is full, then the oldest chronological entry in the list is overwritten.

---

### **Note**

#### **Battery buffering**

The screenshots are saved to the memory, buffered by a battery - and are also available after the power supply has been switched-off and switched-on again.

When the AOP30 is switched off and the battery is too weak - or when changing the batteries - a buffer time of approximately 30 minutes applies.

---

## **LED test**

In this screen, you can check that the four LEDs are functioning properly.

## **Database statistics**

For service purposes, the database statistics are displayed in the screen form.

## **6.6.6 Sprachauswahl/Language selection**

The operator panel downloads the texts for the different languages from the drive.

You can change the language of the operator panel via the "Sprachauswahl/Language selection" menu.

---

### **Note**

#### **Additional languages for the display**

Languages in addition to the current available languages in the display are available on request.

---



## 6.6.7 Operation via the operator panel (LOCAL mode)

You activate the control keys by switching to LOCAL mode. If the green LED in the LOCAL/REMOTE key does not light up, the key is not active.

---

### Note

#### OFF in REMOTE

If the "OFF in REMOTE" function is activated, the LED in the LOCAL-REMOTE key flashes.

---

For LOCAL master control, all of the supplementary setpoints are deactivated.

After the master control has been transferred to the operator panel, the BICO interconnections at bit 0 to bit 10 of the control word of the sequence control are not effective (refer to function diagram 2501).

---

### Note

#### Message "Other device has master control"

If STARTER has master control, then when pressing the LOCAL-REMOTE button, the "Other device has master control" message is displayed, and the master control transfer is rejected.

---

### 6.6.7.1 LOCAL/REMOTE key



**Activating the LOCAL mode:** Press the LOCAL key

**LOCAL mode:** LED lights up

**REMOTE mode:** LED does not light up: the ON, OFF, JOG, direction reversal, INCREASE, DECREASE keys are not active.

## Settings: MENU – Commissioning / Service – AOP Settings – Control Settings

**Save LOCAL mode** (factory setting: yes)

- **Yes:** The "LOCAL" or "REMOTE" operating state is saved when the supply voltage is switched off, and restored when the supply voltage is switched back on.
- **No:** "LOCAL" or "REMOTE" operating mode is not saved. "REMOTE" is active when the supply voltage is switched back on.

**OFF in REMOTE** (factory setting: No)

- **Yes:** The OFF key functions in REMOTE mode even if the drive is being controlled by external sources (fieldbus, customer terminal block, NAMUR terminal block).  
WARNING This function is not an EMERGENCY STOP function!
- **No:** The OFF key only functions in LOCAL mode.

**LOCAL/REMOTE also during operation** (factory setting: No)

- **Yes:** You can switch between LOCAL and REMOTE when the drive is switched on (motor is running).
- **No:** Before the system switches to LOCAL, a check is carried out to determine whether the drive is in the operational status. If it is, switchover is prevented and fault message "LOCAL mode during operation not possible" is output. Before the system switches to REMOTE, the drive is switched off and the setpoint is set to 0.

**6.6.7.2 ON key / OFF key**



**ON key:** always active in the LOCAL mode when the operator input inhibit is deactivated.

**OFF key:** in the factory setting, acts as OFF1 = ramp-down along the deceleration ramp (p1121); when n = 0: Power disconnected (only if there is a main contactor)  
The OFF key is active in the LOCAL mode and when the "OFF in REMOTE" function is active.

**Settings: MENU – Commissioning / Service – AOP Settings – Control Settings**

**Red OFF key acts as:** (Factory setting: OFF1)

- **OFF1:** Ramp-down along the down ramp (p1121)
- **OFF2:** Immediate pulse inhibit, motor coasts down
- **OFF3:** Ramp-down along the quick stop ramp (p1135)

**6.6.7.3 Switching between clockwise and counter-clockwise rotation**



**Settings: MENU – Commissioning / Service – AOP Settings – Control Settings**

**Switching between CCW/CW** (factory setting: no)

- **Yes:** Switching between CW/CCW rotation using the CW/CCW key possible in the LOCAL mode.
- **No:** The CW/CCW key has no effect in the LOCAL mode.

For safety reasons, the CW/CCW key is disabled in the factory setting (pumps and fans must normally only be operated in one direction).

In the "Operation" state in the LOCAL mode, the current direction of rotation is indicated by an arrow next to the operating state.

---

**Note**

**Activation of CCW/CW changeover**

You have to make additional settings when switching between CW/CCW rotation.

---

#### 6.6.7.4 Jog



##### Settings: MENU – Commissioning/Service – AOP settings – Control settings

**JOG key active** (factory setting: No)

- **Yes:** The jog key is effective in the LOCAL mode in the state "ready to power-up" (not in "operation"). The speed that is set in parameter p1058 is approached.
- **No:** The JOG key has no effect in the LOCAL mode

#### 6.6.7.5 Increase setpoint / decrease setpoint



You can use the INCREASE and DECREASE keys to enter the setpoint with a resolution of 1 % of the maximum speed.

You can also enter the setpoint numerically. To do so, press F2 in the operation screen. The system displays a field for entering the required speed. Enter the required value using the numeric keypad. Press F5 "OK" to confirm the setpoint.

When you enter values numerically, you can enter any speed between the minimum speed (p1080) and the maximum speed (p1082).

Unipolar setpoints are entered in the LOCAL mode. You can change the direction of rotation by pressing the key that allows you to switch between CW/CCW rotation.

- CW rotation and "INCREASE key" mean:  
The displayed setpoint is positive and the output frequency is increased.
- CCW rotation and "INCREASE key" mean:  
The displayed setpoint is negative and the output frequency is increased.

#### 6.6.7.6 AOP setpoint

##### Settings: MENU – Commissioning / Service – AOP Settings – Control Settings

**Save AOP setpoint** (factory setting: no)

- **Yes:** In the LOCAL mode, the last setpoint (once you have released the INCREASE or DECREASE key or confirmed a numeric entry) is saved.  
The next time you switch the system on in the LOCAL mode, the saved value is selected. This is also the case if you switched to REMOTE in the meantime or the power supply was switched off.  
When the system is switched from REMOTE to LOCAL mode while the drive is switched on (motor is running), the actual value that was last present is set as the output value for the motorized potentiometer setpoint and saved.  
If the system is switched from the REMOTE to the LOCAL mode while the drive is switched off, the AOP setpoint that was last saved is used.

---

## 6.6 Control via the operator panel

- **No:** When switching on in the LOCAL mode, the speed is always set to the value entered under "AOP starting setpoint". When the system is switched from the REMOTE to LOCAL mode while the drive is switched on (motor is running), the actual value that was last present is set as the output value for the AOP setpoint.

**AOP setpoint ramp-up time** (factory setting: 10 s)

**AOP setpoint ramp-down time** (factory setting: 10 s)

- **Recommendation:** set as ramp-up/ramp-down time (p1120 / p1121).  
Changing the ramp-up/ramp-down times does not affect the settings for parameters p1120 and p1121 because this is an AOP-specific setting.

**AOP starting setpoint** (factory setting: 0.000 rpm)

The AOP starting setpoint is the speed setpoint which is active when the drive is switched on (with AOP30 - "ON" key). This setpoint is valid on condition that the system setting "Save setpoint" is set to "NO".

---

### Note

#### Internal ramp-function generator

The internal drive ramp-function generator is always active.

---

### 6.6.7.7 Lock AOP LOCAL mode

#### Settings: MENU – Commissioning/Service – AOP settings – Control settings

**Save AOP local mode** (factory setting: no)

- **Yes:** Deactivates the "Control via operator panel" function, thereby disabling the LOCAL/REMOTE key.
- **No:** Activates the LOCAL/REMOTE key.

---

### Note

#### Lock LOCAL

LOCAL functionality can also be inhibited on the drive by means of the p0806 parameter (BI: Inhibit master control).

---

### 6.6.7.8 Acknowledge error from the AOP

#### Settings: MENU – Commissioning / Service – AOP Settings – Control Settings

**Acknowledging faults at the AOP** (factory setting: Yes)

- **Yes:** Faults can be acknowledged via the AOP.
- **No:** Faults cannot be acknowledged via the AOP.

### 6.6.7.9 CDS setting via AOP

#### Settings: MENU – Commissioning/Service – AOP settings – Control settings

##### CDS changeover via AOP (factory setting: No)

- **Yes:** In the LOCAL mode, in the operating screen form the active CDS can the changed by one. This is helpful, if operation via an AOP would not be possible due to the fact that a standard telegram is active.  
When CDS0 or 2 is active, "CDS+1" switches to CDS1 or CDS3.  
When CDS1 or 3 is active, "CDS-1" switches to CDS0 or CDS2.
- **No:** In the LOCAL mode, in the operating screen form the active CDS cannot be changed by one.

### 6.6.7.10 Operator input inhibit / parameterization inhibit



To prevent users from accidentally actuating the control keys and changing parameters, you can activate an operator input / parameters disable using a key pushbutton. Two key icons appear in the top right of the display when these inhibit functions are enabled.

Table 6- 10 Display of operator input/parameters disable

Inhibit type	Online operation	Offline operation
No inhibit		
Operator input inhibit		
Parameters disable		
Operator input inhibit + parameters disable		

### Settings

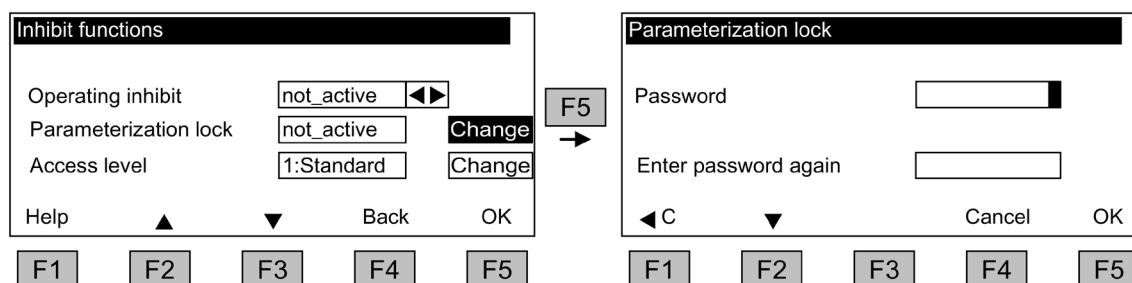


Figure 6-27 Set inhibit functions

The "Operator input inhibit" setting can be changed directly via <F5> "Change" once you have selected the selection field.

When "Parameterization inhibit" is activated, you have to enter a numeric password (repeat this entry). You must also enter this password when deactivating "Parameterization inhibit".

**Operator input inhibit** (factory setting: not active)

- **Active:** The parameters can still be viewed, but a parameter value cannot be saved (message: "Note: operator input inhibit active"). The OFF key (red) is enabled. The LOCAL, REMOTE, ON (green), JOG, CW/CCW, INCREASE, and DECREASE keys are disabled.

**Parameterization inhibit** (factory setting: not active)

- **Active:** Parameters cannot be changed unless a password is entered. The parameterization process is the same as with the operator input inhibit. If you try and change parameters, the message "Note: Parameterization inhibit active" is displayed. All the control keys can, however, still be actuated.

**Access level** (factory setting: Expert):

The different parameters required for this complex application are filtered so that they can be displayed as clearly as possible. You select them according to the access level.

An expert level, which must only be used by expert personnel, is required for certain actions.

---

**Note**

**Copy from RAM to ROM**

When the operator input inhibit or parameterization inhibit is activated, a "Copy from RAM to ROM" is automatically executed to back the parameter settings up in non-volatile memory on the memory card.

---

## 6.6.8 Faults and alarms

### Indicating faults and alarms

If a fault occurs, the drive displays the fault and/or alarm on the operator panel. Faults are indicated by the red "FAULT" LED and a fault screen is automatically displayed. You can use the F1 Help function to call up information about the cause of the fault and how to remedy it. You can use F5 Ack. to acknowledge a stored fault.

Alarms are indicated by means of the yellow "ALARM" LED. The system also displays a note in the status bar providing information on the cause.

## What is a fault?

A fault is a message from the drive indicating an error or other exceptional (unwanted) status that causes the drive to shutdown. This could be caused by a fault within the converter or an external fault triggered, for example, by the winding temperature monitor for the motor. The faults are displayed and can be reported to a higher-level control system via PROFIBUS. In the factory default setting, the message "converter fault" is also sent to a relay output. Once you have rectified the cause of the fault, you have to acknowledge the fault message.

## What is an alarm?

An alarm is the response to a fault condition identified by the drive. It does not result in the drive being switched off and does not have to be acknowledged. Alarms are "self-acknowledging", that is, they are reset automatically when the cause of the alarm has been eliminated.

## Fault and alarm displays

Every fault and alarm is entered in the fault/alarm buffer along with time the error occurred. The time stamp refers to the system time (r2114).

You can call up an overview screen that displays the current status of faults and/or alarms for every drive object in the system by choosing MENU – Fault memory / alarm memory.

A context menu featuring the "Back" and "Quit" options appears when you press F4 "Next". The function required can be selected using F2 and F3 and executed by pressing F5 "OK". The "Acknowledge" function sends an acknowledgement signal to each drive object. The red FAULT LED extinguishes once all the faults have been acknowledged.

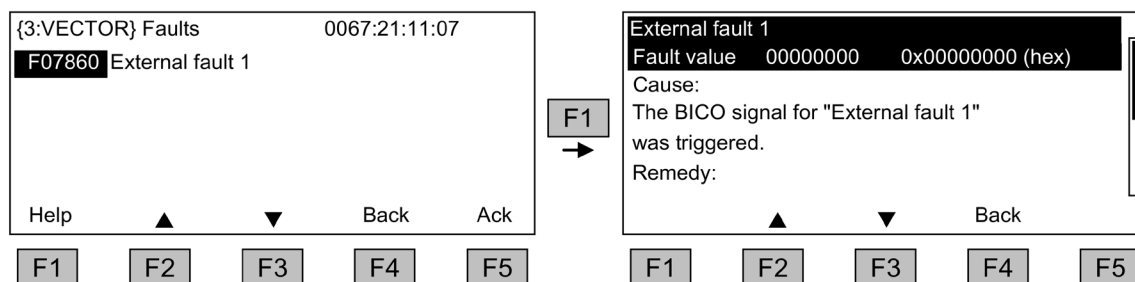


Figure 6-28 Fault screen

You can use F5 Ack. to acknowledge a stored fault.

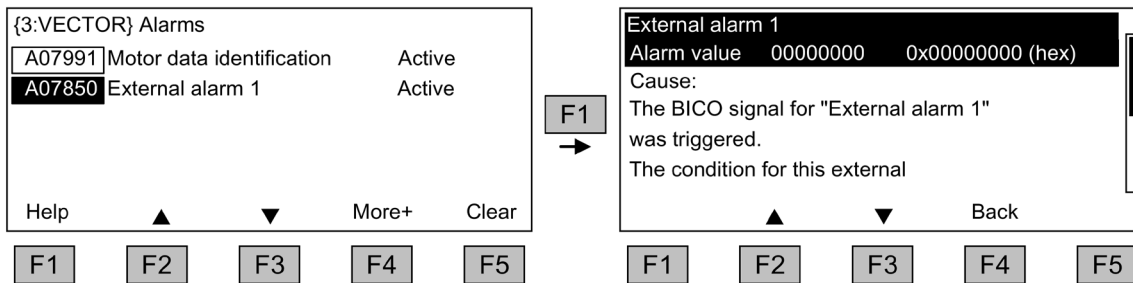


Figure 6-29 Alarm screen

Alarms that are no longer active are removed from the alarm memory with F5 Clear.

### 6.6.9 Saving the parameters permanently

#### Description

If parameters are changed using the operator panel (confirm with OK in the Parameter editor), the new values are initially stored in the volatile memory (RAM) of the drive. An "S" flashes in the top right of the AOP display until they are saved to a permanent memory. This indicates that at least 1 parameter has been changed and not yet stored permanently.

Two methods are available for permanently saving parameters that have been changed:

- To store the parameters permanently, choose <MENU> <Parameterization> <OK> <Permanent parameter transfer>.
- When confirming a parameter setting with OK, press the OK key for more than 1 s. The system displays a message asking you whether the setting is to be saved in the EEPROM. If you press "Yes", the system saves the setting in the EEPROM. If you press "No", the setting is not saved permanently and the "S" starts flashing to indicate this fact.

For both options, **all** changes that have not yet been saved permanently are stored in the EEPROM.

### 6.6.10 Parameterization errors

If a fault occurs when reading or writing parameters, a popup window containing the cause of the problem is displayed.

The system displays:

**Parameter write error (d)pxxxx.yy:0xnn**

and a plain-text explanation of the type of parameterization error.



## 6.7 Communication according to PROFIdrive

### 6.7.1 General information

PROFIdrive is the PROFIBUS and PROFINET profile for drive technology with a wide range of applications in production and process automation systems.

PROFIdrive is independent of the bus system used (PROFIBUS, PROFINET).

---

#### Note

PROFIdrive for drive technology is described in the following document:

- PROFIdrive Profile Drive Technology  
PROFIBUS User Organization e. V.  
Haid-und-Neu-Strasse 7, D-76131 Karlsruhe  
<http://www.profibus.com>
  - IEC 61800-7
- 

### PROFIdrive device classes

Table 6- 11 PROFIdrive device classes

PROFIdrive	PROFIBUS DP	PROFINET
Peripheral device (P device)	DP slave	IO Device
Motion controller (higher-level controller or host of the automation system)	Class 1 DP master	IO Controller
Supervisor (engineering station)	Class 2 DP master	IO Supervisor

- Drive unit (PROFIBUS: Slave, PROFINET IO: IO Device)  
Example: CU320-2 Control Unit
- Controller (PROFIBUS: Master Class 1, PROFINET IO: IO controller)  
A controller is typically a higher-level control in which the automation program runs.  
Example: SIMATIC S7 and SIMOTION
- Supervisor (PROFIBUS: Master Class 2, PROFINET IO: IO Supervisor)  
Devices for configuring, commissioning, operator control and monitoring while the bus is in operation and devices which only exchange non-cyclic data with drive units and controllers.  
Examples: Programming devices, operator control and monitoring devices

## Controllers, supervisor and drive units

Table 6- 12 Properties of the Controller, Supervisor, and Drive Unit

Properties	Controller	Supervisor	Drive unit
As bus node	Active		Passive
Sending messages	Permitted without external request		Only possible on request by the controller
Receiving messages	Possible without any restrictions		Only receive and acknowledge permitted

### Note

#### Consistent naming conventions

For reasons of consistency, the terms "device", "controller", and "supervisor" are used below. The terms "slave" and "master" are only applied in the PROFIBUS chapter and are still use there.

## Communication types

4 communication types are defined in the PROFIdrive profile:

- Cyclic data exchange via a cyclic data channel  
Motion control systems require cyclically updated data in operation for open-loop and closed-loop control tasks. This data must be sent to the drive units in the form of setpoints or transmitted from the drive units in the form of actual values, via the communications system. Transfer of this data is usually time-critical.
- Acyclic data exchange via an acyclic data channel  
An acyclic parameter channel for exchanging parameters between the control/supervisor and drive units is additionally available. Access to this data is not time-critical.
- Alarm channel  
Alarms are output on an event-driven basis, and show the occurrence and expiry of error states.
- Isochronous mode
  - Cyclic data exchange in a fixed time grid
  - The controller and device are synchronized.

## Interface IF1 and IF2

The Control Unit can communicate via two different interfaces (IF1 and IF2).

Table 6- 13 Properties of IF1 and IF2

	IF1	IF2
PROFIdrive and SIEMENS telegram	x	-
Free telegram	x	x
Isochronous mode	x	x
Drive object types	All	All
Can be used for	PROFINET IO PROFIBUS DP SINAMICS Link PN Gate Ethernet/IP	PROFINET IO PROFIBUS DP CANopen SINAMICS Link PN Gate Ethernet/IP
Cyclic operation	x	x
PROFIsafe	x	x

### Note

For additional information on interfaces IF1 and IF2, see Chapter "Parallel operation of communication interfaces (Page 423)".

## 6.7.2 Application classes

### Description

There are different application classes for PROFIdrive according to the scope and type of the application processes. PROFIdrive features a total of 6 application classes, the 3 most important are considered here:

- Class 1 (AK1):  
The drive is controlled using a speed setpoint via PROFIBUS/PROFINET. The complete closed-loop speed control is realized in the drive itself.  
Typical application examples include simple frequency converters for controlling pumps and fans.
- Class 3 (AK3):  
In addition to the speed control, the drive also includes a positioning control, which means that it operates as an autonomous single-axis positioning drive while the higher-level technological processes are performed in the control system. Positioning requests are transferred to the drive controller via PROFINET (or PROFIBUS) and started.

- Class 4 (AK4):

This PROFIdrive application class defines a speed setpoint interface where the closed-loop speed control is executed in the drive and the closed-loop position control in the control system. This is required for robotic and machine tool applications with coordinated motion sequences distributed across several drives.

Motion control is primarily implemented using a central numerical controller (NC). The position control loop is closed via the bus, i.e. the communication between the controller and the drive must be isochronous.

### Selection of telegrams as a function of the application class

The telegrams listed in the table below can be used in the following application classes:

Table 6- 14 Selection of telegrams as a function of the application class

Telegram (p0922 = x)	Description	Class 1	Class 3	Class 4
1	Speed setpoint, 16 bit	x	-	-
2	Speed setpoint, 32 bit	x	-	-
3	Speed setpoint, 32 bit with 1 position encoder	x	-	x
4	Speed setpoint, 32 bit with 2 position encoders	x	-	x
5	Speed setpoint, 32 bit with 1 position encoder and Dynamic Servo Control	-	-	x
6	Speed setpoint, 32 bit with 2 position encoders and Dynamic Servo Control	-	-	x
7	Basic positioner with selection of the traversing block	-	x	-
9	Basic positioner with direct setpoint input (MDI)	-	x	-
20	Speed setpoint, 16 bit VIK-NAMUR	x	-	-
81	Standard encoder	-	-	-
82	Standard encoder with speed actual value 16 bit	-	-	-
83	Standard encoder with speed actual value 32 bit	-	-	-
102	Speed setpoint, 32 bit with 1 position encoder and torque reduction	x	-	x
103	Speed setpoint, 32 bit with 2 position encoders and torque reduction	x	-	x
105	Speed setpoint, 32 bit with 1 position encoder, torque reduction and Dynamic Servo Control	-	-	x
106	Speed setpoint, 32 bit with 2 position encoders, torque reduction and Dynamic Servo Control	-	-	x
110	Basic positioner with direct setpoint input (MDI), override and position actual value	-	x	-
111	Basic positioner in the MDI mode	-	x	-
116	Speed setpoint, 32 bit with 2 position encoders, torque reduction, DSC and additional actual values	-	-	x
118	Speed setpoint, 32 bit with 2 position encoders, torque reduction, DSC, additional actual values and 2 external encoders	-	-	x
125	Dynamic Servo Control with torque precontrol, 1 position encoder (encoder 1)	-	-	x
126	Dynamic Servo Control with torque precontrol, 2 position encoders (encoder 1 and encoder 2)	-	-	x

Telegram (p0922 = x)	Description	Class 1	Class 3	Class 4
136	Dynamic Servo Control with torque precontrol, 2 position encoders (encoder 1 and encoder 2), 4 trace signals	-	-	x
138	Dynamic Servo Control with torque precontrol, 2 external position encoders (encoder 2 and encoder 3), 4 trace signals	-	-	x
139	Speed/position control with Dynamic Servo Control and torque precontrol, 1 position encoder, clamping status, additional actual values	-	-	x
166	Hydraulic axis (HLA) with two encoder channels and HLA additional signals	-	-	-
220	Speed setpoint, 32 bit, metal industry	x	-	-
352	16-bit speed setpoint for PCS7	x	-	-
370	Infeed	-	-	-
371	Infeed, metal industry	-	-	-
390	Control Unit with digital inputs DI 0 ... DI 15 and digital outputs DO 8 ... DO 15	-	-	-
391	Control Unit with digital inputs DI 0 ... DI 15, DO 8 ... DO 15 and 2 probes	-	-	-
392	Control Unit with digital inputs DI 0 ... DI 15, digital outputs DO 8 ... DO 15 and 6 probes	-	-	-
393	Control Unit with digital inputs DI 0 ... DI 22, digital outputs DO 8 ... DO 16, 8 probes and analog input	-	-	-
394	Control Unit with digital inputs DI 0 ... DI 22 and digital outputs DO 8 ... DO 16	-	-	-
395	Control Unit with digital inputs DI 0 ... DI 22, digital outputs DO 8 ... DO 16 and 16 probes	-	-	-
700	Supplementary PZD-0/3	-	-	-
701	Supplementary PZD-2/5	-	-	-
750	Supplementary PZD-3/1	-	-	-
999	Free interconnection and length	x	x	x

### 6.7.3 Cyclic communication

Cyclic communication is used to exchange time-critical process data (e.g. setpoints and actual values).

### 6.7.3.1 Telegrams and process data

#### General information

Selecting a telegram via CU parameter p0922 determines which process data is transferred.

From the perspective of the drive unit, the received process data comprises the receive words and the process data to be sent, the send words.

The receive and send words comprise the following elements:

- Receive words: Control words and setpoints
- Send words: Status words and actual values

#### Default setting "Profidrive"

When the "Profidrive" default setting is chosen for command and setpoint selection (see "Command sources / "Profidrive" default settings"), "Free telegram" (p0922 = 999) is selected.

The receive telegram is parameterized as follows as a result of the default setting:

STW1	NSOLL_A
------	---------

The send telegram is as follows (factory setting):

ZSW1	NIST_GLATT	IAIST_GLATT	MIST_GLATT	PIST_GLATT	FAULT_CODE
------	------------	-------------	------------	------------	------------

You do not have to make any further settings in order to use these telegrams.

#### User-defined telegram selection

##### a. Standard telegrams

Standard telegrams are structured in accordance with PROFIdrive profile or internal company specifications. Process data is automatically interconnected internally corresponding to the telegram number set in parameter p0922.

The following standard telegrams can be set via parameter p0922:

- p0922 = 1 -> Speed setpoint, 16 bit
- p0922 = 2 -> Speed setpoint, 32 bit
- p0922 = 3 -> Speed setpoint 32 bit with 1 position controller
- p0922 = 4 -> Speed setpoint 32 bit with 2 position controller
- p0922 = 20 -> Speed setpoint, 16 bit VIK-NAMUR
- p0922 = 352 -> Speed setpoint, 16-bit PCS7

Depending on the setting in p0922, the interface mode of the control and status word is automatically set:

- p0922 = 1, 352, 999:  
STW 1/STW 1: Interface Mode SINAMICS / MICROMASTER, p2038 = 0
- p0922 = 20:  
STW 1/STW 1: Interface Mode PROFIdrive VIK-NAMUR, p2038 = 2

#### **b. Manufacturer-specific telegrams**

The manufacturer-specific telegrams are structured in accordance with internal company specifications. The internal process data links are set up automatically in accordance with the telegram number setting.

The following vendor-specific telegrams can be set via p0922:

- p0922 = 220 Speed setpoint 32 bit, metal industry

#### **c. Free telegrams (p0922 = 999)**

Send and receive telegrams can be configured as required by using BICO technology to interconnect the send and receive words. The default process data assigned under a) is retained during the changeover to p0922 = 999, although it can be changed or supplemented at any time.

To maintain compliance with the PROFIdrive profile, however, the following assignments should be retained:

- Interconnect PZD receive word 1 as control word 1 (STW 1)
- Interconnect PZD send word 1 as status word 1 (STW 1)

Please refer to function diagrams FP2460 and FP2470 for details on interconnection options.

### **Telegram interconnections**

- After changing p0922 = 999 (factory setting) to p0922 ≠ 999, the telegrams are interconnected and blocked automatically. Exceptions are telegrams 20, 220 and 352. There, in addition to the fixed interconnections, selected process data (PZD) can be interconnected as required in the send/receive telegram.
- When you change p0922 ≠ 999 to p0922 = 999, the previous telegram interconnection is retained and this can be changed.
- If p0922 = 999, a telegram can be selected in p2079. A telegram interconnection is automatically made and blocked. However, the telegram can also be extended. This is an easy method for creating extended telegram interconnections on the basis of existing telegrams.

### 6.7.3.2 Structure of the telegrams

Table 6- 15 Structure of the telegrams

Telegr.	PZD 1	PZD 2	PZD 3	PZD 4	PZD 5	PZD 6	PZD 7	PZD 8	PZD 9	PZD 10
1	STW1	NSOLL_A								
	ZSW1	NIST_A								
2	STW1	NSOLL_B		STW2						
	ZSW1	NIST_B		ZSW2						
3	STW1	NSOLL_B		STW2	G1_STW					
	ZSW1	NIST_B		ZSW2	G1_ZSW	G1_XIST1		G1_XACT2		
4	STW1	NSOLL_B		STW2	G1_STW	G2_STW				
	ZSW1	NIST_B		ZSW2	G1_ZSW	Further assignment, see FP2420				
20	STW1	NSOLL_A								
	ZSW1	NIST_A_G LATT	IAIST_G LATT	MIST_G LATT	PIST_G LATT	MELD_NAMUR				
220	STW1_BM	NSOLL_B		STW2_BM	M_ADD	M_LIM	free	free	free	free
	ZSW1_BM	NIST_A	IAIST	MIST	WARN_CODE	FAULT_CODE	ZSW2_BM	free	free	free
352	STW1	NSOLL_A	PCS7_3	PCS7_4	PCS7_5	PCS7_6				
	ZSW1	NIST_A_G LATT	IAIST_G LATT	MIST_G LATT	WARN_CODE	FAULT_CODE				
999	STW1	free	free	free	free	free	free	free	free	free
	ZSW1	free	free	free	free	free	free	free	free	free

### 6.7.3.3 Overview of control words and setpoints

Table 6- 16 Overview of control words and setpoints

Abbreviation	Description	Parameter	Function diagram
STW1	Control word 1 (interface mode SINAMICS, p2038 = 0)	See table "Control word 1 (interface mode SINAMICS, p2038 = 0)"	FP2442
STW1	Control word 1 (interface mode VIK-NAMUR, p2038 = 2)	See table "Control word 1 (interface mode VIK-NAMUR, p2038 = 2)"	FP2441
STW1_BM	Control word 1, metal industry (interface mode SINAMICS, p2038 = 0)	See table "Control word 1, metal industry (interface mode SINAMICS, p2038 = 0)"	FP2425
STW2	Control word 2 (interface mode SINAMICS, p2038 = 0)	See table "Control word 2 (interface mode SINAMICS, p2038 = 0)"	FP2444
STW2_BM	Control word 2, metal industry (interface mode SINAMICS, p2038 = 0)	See table "Control word 2, metal industry (interface mode SINAMICS, p2038 = 0)"	FP2426
NSOLL_A	Speed setpoint A (16-bit)	p1070	FP3030
NSOLL_B	Speed setpoint B (32-bit)	p1155	FP3080
PCS7_x	PCS7-specific setpoints		



### 6.7.3.4 Overview of status words and actual values

Table 6- 17 Overview of status words and actual values

Abbreviation	Description	Parameter	Function diagram
ZSW1	Status word 1 (interface mode SINAMICS, p2038 = 0)	See table "Status word 1 (interface mode SINAMICS, p2038 = 0)"	FP2452
ZSW1	Status word 1 (interface mode VIK-NAMUR, p2038 = 2)	See table "Status word 1 (interface mode VIK-NAMUR, p2038 = 2)"	FP2451
ZSW1_BM	Status word 1, metal industry (interface mode SINAMICS, p2038 = 0)	See table "Status word 1, metal industry (interface mode SINAMICS, p2038 = 0)"	FP2428
ZSW2	Status word 2 (interface mode SINAMICS, p2038 = 0)	See table "Status word 2 (interface mode SINAMICS, p2038 = 0)"	FP2454
ZSW2_BM	Status word 2, metal industry (interface mode SINAMICS, p2038 = 0)	See table "Status word 2, metal industry (interface mode SINAMICS, p2038 = 0)"	FP2429
NIST_A	Speed setpoint A (16 bit)	r0063[0]	FP4715
NIST_B	Speed setpoint B (32 bit)	r0063	FP4710
IAIST	Actual value of current	r0068[0]	FP6714
MIST	Actual torque value	r0080[0]	FP6714
PIST	Actual power value	r0082[0]	FP6714
NIST_GLATT	Actual speed value smoothed	r0063[1]	FP4715
IAIST_GLATT	Current actual value, smoothed	r0068[1]	FP6714
MIST_GLATT	Torque actual value, smoothed	r0080[1]	FP6714
PIST_GLATT	Power actual value, smoothed	r0082[1]	FP6714
MELD_NAMUR	VIK-NAMUR message bit bar	r3113, see table "NAMUR message bit bar"	--
WARN_CODE	Alarm code	r2132	FP8065
ERROR_CODE	Error code	r2131	FP8060

### 6.7.4 Acyclic communication

Acyclic communication, as opposed to cyclic communication, means data is transferred only when an explicit request is made (e.g., in order to read and write parameters).

The "Read data record" and "Write data record" services are available for acyclic communication.

6.7 Communication according to PROFIdrive

The following options are available for reading and writing parameters:

- S7 protocol
  - This protocol uses the STARTER commissioning tool in online operation via PROFIBUS/PROFINET, for example.
- PROFIdrive parameter channel with the following data records:
  - PROFIBUS: Data block 47 (0x002F)
    - The DPV1 services are available for master class 1 and master class 2.
  - PROFINET: Data block 47 and 0xB02F as global access, data block 0xB02E as local access

**Note**

**References**

Please refer to the following documentation for a detailed description of acyclic communication:

Reference: PROFIdrive profile

You can obtain the current version from "PROFIBUS and PROFINET International (PI)".

Addressing:

- PROFIBUS DP, addressing is carried out via the logical address or the diagnostics address.
- PROFINET IO, addressing is carried out exclusively via a diagnostics address that is assigned to a module starting from slot 1. Parameters cannot be accessed using slot 0.

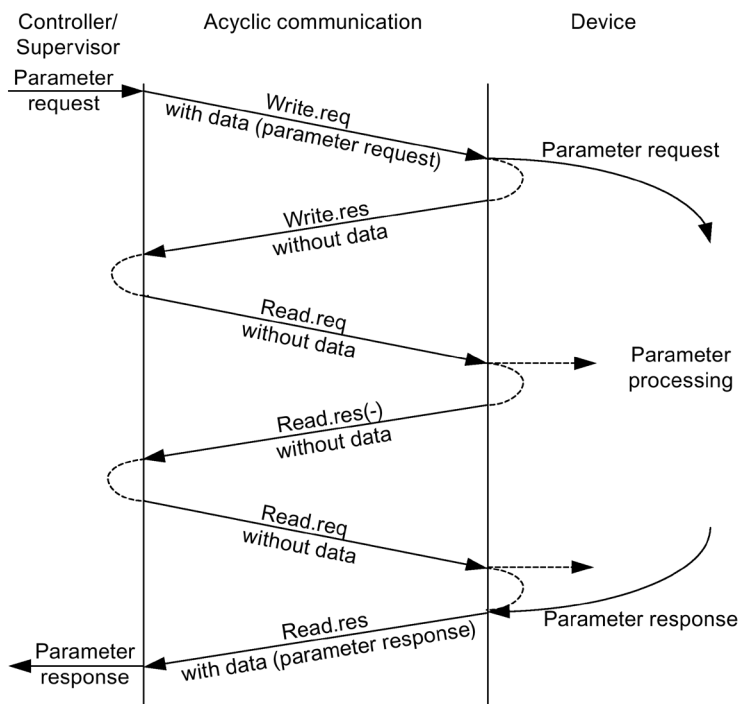


Figure 6-30 Reading and writing data

## Characteristics of the parameter channel

- One 16-bit address exists for each parameter number and subindex.
- Simultaneous access by several additional PROFIBUS masters (master class 2) or PROFINET IO Supervisor (e.g., commissioning tool).
- Transfer of different parameters in one access operation (multiple parameter request).
- Transfer of complete arrays or part of an array possible.
- Only one parameter request is processed at a time (no pipelining).
- A parameter request/parameter response must fit into a data set (e.g. PROFIBUS: max. 240 bytes).
- The request or the response header is user data.

### 6.7.4.1 Structure of requests and responses

#### Structure of parameter request and parameter response

Table 6- 18 Structure of the parameter request

	Parameter request			Offset
Values for write access only	Request header	Request reference	Request ID	0
		Axis	Number of parameters	2
	1st parameter address	Attribute	Number of elements	4
		Parameter number		6
		Subindex		8
	...			
	nth parameter address	Attribute	Number of elements	
		Parameter number		
		Subindex		
	1st parameter value(s)	Format	Number of values	
		Values		
		...		
	...			
	nth parameter value(s)	Format	Number of values	
Values				
...				

Table 6- 19 Structure of the parameter response

	Parameter response			Offset
Values for read access only Error values for negative response only	Response header	Request reference mirrored	Response ID	0
		Axis mirrored	Number of parameters	2
	1st parameter value(s)	Format	Number of values	4
		Values or error values		6
	...			
	...			
	nth parameter value(s)	Format	Number of values	
		Values or error values		
...				

### Description of fields in the parameter request and response

Table 6- 20 Fields in the parameter request and response

Field	Data type	Values	Comment
Request reference	Unsigned8	0x01 ... 0xFF	
	Unique identification of the request/response pair for the master. The master changes the request reference with each new request. The slave mirrors the request reference in its response.		
Request ID	Unsigned8	0x01 0x02	Read job Write job
	Specifies the type of request. In the case of a write request, the changes are made in a volatile memory (RAM). A save operation is needed in order to transfer the modified data to the non-volatile memory (p0971, p0977).		
Response ID	Unsigned8	0x01 0x02 0x81 0x82	Read job(+) Write job(+) Read job(-) Write job(-)
	Mirrors the request ID and specifies whether request execution was positive or negative. Negative means: Cannot execute part or all of request. The error values are transferred instead of the values for each subresponse.		
Drive object number	Unsigned8	0x00 ... 0xFF	Number
	Setting for the drive object number of a drive unit with more than one drive object. Different drive objects with separate parameter number ranges can be accessed via the same DPV1 connection.		
Number of parameters	Unsigned8	0x01 ... 0x27	No. 1 ... 39 Limited by DPV1 telegram length
	Defines the number of following areas for the parameter address and/or parameter value for multi-parameter requests. The number of parameters = 1 for single requests.		
Attribute	Unsigned8	0x10 0x20 0x30	Value Description Text (not implemented)
	Type of parameter element accessed.		
Number of elements	Unsigned8	0x00 0x01 ... 0x75	Special function No. 1 ... 117 Limited by DPV1 telegram length
	Number of array elements accessed.		

Field	Data type	Values	Comment
Parameter number	Unsigned16	0x0001 ... 0xFFFF	No. 1 ... 65535
	Addresses the parameter to be accessed.		
Subindex	Unsigned16	0x0000 ... 0xFFFF	No. 0 ... 65535
	Addresses the first array element of the parameter to be accessed.		
Format	Unsigned8	0x02	Data type integer8
		0x03	Data type integer16
		0x04	Data type integer32
		0x05	Data type unsigned8
		0x06	Data type unsigned16
		0x07	Data type unsigned32
		0x08	Data type floating point
		Other values	See the actual PROFIdrive profile
		0x40	Zero (without values as a positive subresponse of a write request)
		0x41	Byte
		0x42	Word
		0x43	Double word
		0x44	Error
The format and number specify the adjoining space containing values in the telegram. For write access, it is preferable to specify data types according to the PROFIdrive profile. Bytes, words and double words are also possible as a substitute.			
Number of values	Unsigned8	0x00 ... 0xEA	No. 0 ... 234 Limited by DPV1 telegram length
	Specifies the number of subsequent values.		
Error values	Unsigned16	0x0000 ... 0x00FF	Meaning of error values --> see following table
	The error values in the event of a negative response. If the values make up an odd number of bytes, a zero byte is attached. This ensures the integrity of the word structure of the telegram.		
Values	Unsigned16	0x0000 ... 0x00FF	
	The values of the parameter for read or write access. If the values make up an odd number of bytes, a zero byte is attached. This ensures the integrity of the word structure of the telegram.		

## Error values in parameter responses

Table 6- 21 Error values in parameter responses

Error value	Meaning	Comment	Additional info
0x00	Illegal parameter number.	Access to a parameter that does not exist.	–
0x01	Parameter value cannot be changed.	Modification access to a parameter value that cannot be changed.	Subindex
0x02	Lower or upper value limit exceeded.	Modification access with value outside value limits.	Subindex
0x03	Invalid subindex.	Access to a subindex that does not exist.	Subindex
0x04	No array.	Access with subindex to an unindexed parameter.	–
0x05	Wrong data type.	Modification access with a value that does not match the data type of the parameter.	–
0x06	Illegal set operation (only reset allowed)	Modification access with a value not equal to 0 in a case where this is not allowed.	Subindex
0x07	Description element cannot be changed	Modification access to a description element that cannot be changed.	Subindex
0x09	No description data available	Access to a description that does not exist (the parameter value exists).	–
0x10	Read job will not be executed.	The read request is refused because know-how protection is active.	–
0x0B	No parameter change rights.	Modification access with no parameter change rights.	–
0x0F	No text array exists	Access to a text array that does not exist (the parameter value exists).	–
0x11	Request cannot be executed due to operating status.	Access is temporarily not possible for unspecified reasons.	–
0x14	Illegal value.	Modification access with a value that is within the limits but is illegal for other permanent reasons (parameter with defined individual values).	Subindex
0x15	Response too long.	The length of the present response exceeds the maximum transfer length.	–
0x16	Illegal parameter address.	Illegal or unsupported value for attribute, number of elements, parameter number, subindex or a combination of these.	–
0x17	Illegal format.	Write request: illegal or unsupported parameter data format.	–
0x18	Number of values inconsistent.	Write request: a mismatch exists between the number of values in the parameter data and the number of elements in the parameter address.	–
0x19	Drive object does not exist.	You have attempted to access a drive object that does not exist.	–
0x20	Parameter text cannot be changed.	–	–
0x21	Service is not supported.	Illegal or unknown request ID.	–
0x65	Parameter presently deactivated.	You have tried to access a parameter that, although available, does not currently perform a function (e.g., n control set and access to a U/f control parameter).	–
0x6B	Write access for the enabled controller.	Write access is possible while the device is in the "Controller enable" state. Pay attention to the parameter attribute "changeable" in the List Manual (C1, C2, U, T).	–
0x6C	Parameter %s [%s]: unit unknown.	–	–

Error value	Meaning	Comment	Additional info
0x6D	Parameter %s [%s]: write access only in the commissioning state, encoder (p0010 = 4).	–	–
0x6E	Parameter %s [%s]: write access only in the commissioning state, motor (p0010 = 3).	–	–
0x6F	Parameter %s [%s]: write access only in the commissioning state, power unit (p0010 = 2).	–	–
0x70	Parameter %s [%s]: write access only in quick commissioning (p0010 = 1).	–	–
0x71	Parameter %s [%s]: write access only in the ready state (p0010 = 0).	–	–
0x72	Parameter %s [%s]: write access only in the commissioning state, parameter reset (p0010 = 30).	–	–
0x73	Parameter %s [%s]: write access only in the commissioning state, safety (p0010 = 95).	–	–
0x74	Parameter %s [%s]: Write access only in the commissioning state, tech. application/units (p0010 = 5).	–	–
0x75	Parameter %s [%s]: write access only in the commissioning state (p0010 not equal to 0).	–	–
0x76	Parameter %s [%s]: write access only in the commissioning state, download (p0010 = 29).	–	–
0x77	Parameter %s [%s] must not be written during download.	–	–
0x78	Parameter %s [%s]: Write access only in the commissioning state, drive configuration (device: p0009 = 3).	–	–
0x79	Parameter %s [%s]: Write access only in the commissioning state, define drive type (device: p0009 = 2).	–	–
0x7A	Parameter %s [%s]: Write access only in the commissioning state, data record base configuration (device: p0009 = 4).	–	–
0x7B	Parameter %s [%s]: Write access only in the commissioning state, device configuration (device: p0009 = 1).	–	–
0x7C	Parameter %s [%s]: Write access only in the commissioning state, device download (device: p0009 = 29).	–	–
0x7D	Parameter %s [%s]: Write access only in the commissioning state, device parameter reset (device: p0009 = 30).	–	–
0x7E	Parameter %s [%s]: Write access only in the commissioning state, device ready (device: p0009 = 0).	–	–

6.7 Communication according to PROFIdrive

Error value	Meaning	Comment	Additional info
0x7F	Parameter %s [%s]: Write access only in the commissioning state, device (device: p0009 not equal to 0).	–	–
0x81	Parameter %s [%s] must not be written during download.	–	–
0x82	Transfer of master control is blocked by BI: p0806.	–	–
0x83	Parameter %s [%s]: requested BICO interconnection not possible.	BICO output does not supply float values, however the BICO input requires float values.	–
0x84	Parameter %s [%s]: parameter change inhibited (refer to p0300, p0400, p0922)	–	–
0x85	Parameter %s [%s]: access method not defined.	–	–
0x87	Write job will not be executed.	The write job is rejected because know-how protection is active.	–
0xC8	Below currently valid limit.	Modification request for a value that, although within "absolute" limits, is below the currently valid lower limit.	–
0xC9	Above currently valid limit.	Modification request for a value that, although within "absolute" limits, is above the currently valid upper limit (e.g., specified by the actual converter rating).	–
0xCC	Write access not permitted.	Write access is not permitted because an access code is not available.	–



### 6.7.4.2 Determining the drive object numbers

Further information about the drive system (e.g., drive object numbers) can be determined as follows from parameters p0101, r0102 and p0107/r0107:

1. The value of parameter r0102 ("Number of drive objects") is read via a read request from drive object 1.

The drive object with drive object number 1 is the Control Unit (CU), which is always present in every drive system, as a minimum.

2. Depending on the result of the initial read request, further read requests to drive object 1 are used to read the indices of parameter p0101 ("Drive object numbers"), as specified by parameter r0102.

Example:

If the number of drive objects is "5", the values of indices 0 to 4 of parameter p0101 are read. The relevant indices can also be read at once.

3. Following this, parameter r0107/p0107 ("Drive object type") is read for each drive object (indicated by the drive object number).

Depending on the drive object, parameter 107 can be either an adjustable parameter or a display parameter.

The value in parameter r0107/p0107 indicates the drive object type. The coding for the drive object type is specified in the parameter list.

### 6.7.4.3 Example 1: Reading parameters

#### Preconditions

- The PROFIdrive controller has been commissioned and is fully operational.
- PROFIdrive communication between the controller and the device is operational.
- The controller can read and write data sets in conformance with PROFINET/PROFIBUS.

#### Task description

Following the occurrence of at least one fault (STW1.3 = "1") at drive 2 (also drive object number 2), the active fault codes are to be read from the fault buffer r0945[0] ... r0945[7].

The request is to be handled using a request and response data block.

#### Basic procedure

1. Create a request to read the parameters.
2. Invoke request.
3. Evaluate response.

## Create request

Table 6- 22 Parameter request

Parameter request			Offset
Request header	Request reference = 25 hex	Request ID = 01 hex	0 + 1
	Axis = 02 hex	Number of parameters = 01 hex	2 + 3
Parameter address	Attribute = 10 hex	Number of elements = 08 hex	4 + 5
	Parameter no. = 945 dec		6
	Subindex = 0 dec		8

### Information about the parameter request:

- Request reference:  
The value is selected at random from the valid value range. The request reference establishes the relationship between request and response.
- Request identifier:  
01 hex → This identifier is required for a read request.
- Axis:  
02 hex → Drive 2, fault buffer with drive- and device-specific faults
- Number of parameters:  
01 hex → One parameter is read.
- Attribute:  
10 hex → The parameter values are read.
- Number of elements:  
08 hex → The actual fault incident with eight faults is to be read.
- Parameter number:  
945 dec → p0945 (fault code) is read.
- Subindex:  
0 dec → Reading starts at index 0.

### Invoke request.

If STW1.3 = "1" → Initiate parameter request

**Evaluate response.**

Table 6- 23 Parameter response

Parameter response			Offset
Response header	Request reference mirrored = 25 hex	Response ID = 01 hex	0 + 1
	Axis mirrored = 02 hex	Number of parameters = 01 hex	2 + 3
Parameter value	Format = 06 hex	Number of values = 08 hex	4 + 5
	1st value = 1355 dec		6
	2nd value = 0 dec		8
	...		...
	8th value = 0 dec		20

**Information about the parameter response:**

- Request reference mirrored:  
This response belongs to the request with request reference 25.
- Response identifier:  
01 hex → Read request positive, values available starting from 1st value
- Request reference mirrored:  
The values correspond to the values from the request.
- Format:  
06 hex → Parameter values are in the unsigned16 format.
- Number of values:  
08 hex → 8 parameter values are available.
- 1st value ... 8th Value:  
A fault is only entered in the 1st value of the fault buffer for drive 2.

**6.7.4.4 Example 2: Writing parameters (multi-parameter request)****Preconditions**

- The PROFIdrive controller has been commissioned and is fully operational.
- PROFIdrive communication between the controller and the device is operational.
- The controller can read and write data sets in conformance with PROFINET/PROFIBUS.
- Special requirements for this example:  
Control mode: Vector control (with extended setpoint channel)



## Create request

Table 6- 24 Parameter request

Parameter request			Offset
Request header	Request reference = 40 hex	Request ID = 02 hex	0 + 1
	Axis = 02 hex	Number of parameters = 04 hex	2 + 3
1st parameter address	Attribute = 10 hex	Number of elements = 01 hex	4 + 5
	Parameter no. = 1055 dec		6
	Subindex = 0 dec		8
2nd parameter address	Attribute = 10 hex	Number of elements = 01 hex	10 + 11
	Parameter no. = 1056 dec		12
	Subindex = 0 dec		14
3rd parameter address	Attribute = 10 hex	Number of elements = 01 hex	16 + 17
	Parameter no. = 1058 dec		18
	Subindex = 0 dec		20
4th parameter address	Attribute = 10 hex	Number of elements = 01 hex	22 + 23
	Parameter no. = 1059 dec		24
	Subindex = 0 dec		26
1st parameter value(s)	Format = 07 hex	Number of values = 01 hex	28 + 29
	Value = 02D2 hex		30
	Value = 0404 hex		32
2nd parameter value(s)	Format = 07 hex	Number of values = 01 hex	34 + 35
	Value = 02D2 hex		36
	Value = 0405 hex		38
3rd parameter value(s)	Format = 08 hex	Number of values = 01 hex	40 + 41
	Value = 4396 hex		42
	Value = 0000 hex		44
4th parameter value(s)	Format = 08 hex	Number of values = 01 hex	46 + 47
	Value = 4416 hex		48
	Value = 0000 hex		50

**Notes regarding parameter request:**

- Request reference:  
The value is selected at random from the valid value range. The request reference establishes the relationship between request and response.
- Request identifier:  
02 hex → This identifier is required for a write request.
- Axis:  
02 hex → The parameters are written to drive 2.
- Number of parameters:  
04 hex → The multi-parameter request comprises 4 individual parameter requests.

**1st parameter address ... 4th parameter address**

- Attribute:  
10 hex → The parameter values are to be written.
- Number of elements:  
01 hex → 1 array element is written.
- Parameter number:  
Specifies the number of the parameter to be written (p1055, p1056, p1058, p1059).
- Subindex:  
0 dec → ID of the first array element.

**1st parameter value ... 4th parameter value**

- Format:  
07 hex → data type unsigned32  
08 hex → data type floating-point
- Number of values:  
01 hex → A value is written to each parameter in the specified format.
- Value:  
BICO input parameter: Enter signal source:  
Adjustable parameter: enter value

**Invoke request.**

**Evaluate response.**

Table 6- 25 Parameter response

Parameter response			Offset
Response header	Request reference mirrored = 40 hex	Response ID = 02 hex	0
	Axis mirrored = 02 hex	Number of parameters = 04 hex	2

**Notes regarding parameter response:**

- Request reference mirrored:  
This response belongs to the request with request reference 40.
- Request identifier:  
02 hex → Write request positive
- Axis mirrored:  
02 hex → The value matches the value from the request.
- Number of parameters:  
04 hex → The value matches the value from the request.

## 6.7.5 Diagnostics channels

The drive provides the standard diagnostics for PROFIBUS and PROFINET. This allows the PROFIdrive classes of the drive to be integrated into the system diagnostics of a higher-level control system and automatically displayed on an HMI.

The information transferred is saved for the drive objects in the following parameters:

- r0947[0...63] fault number
- r2122[0...63] alarm code
- r9747[0...63] SI message code (with safety messages)
- r3120[0..63] component fault
- r3121[0..63] component alarm
- r9745[0..63] SI component (with safety message)

The messages entered in these parameters are combined to create PROFIdrive message classes for diagnostics. Determining the source of a message is realized by transferring the component number as channel number.

The diagnostics are activated via the appropriate parameterization in the configuration tool being used (e.g. via HW Config).

The functional scope of the diagnostic channels depends on the bus system.

		PROFIdrive message classes		Component assignment
		Faults	Alarms	
PROFINET	GSDML	X	X	X
	TIA	X	X	X
PROFIBUS	GSD	X	-	-
	TIA	X	-	-

- The drive transfers the messages in the sequence in which they occurred.
- When a message occurs, the drive sends a communication message. The message remains until the drive sends the associated outgoing message.
- The time stamps are generated from the higher-level controller when the messages are received
- The existing mechanisms of TIA and S7 Classic can be used.
- Alarms or faults are acknowledged using the already known acknowledgment routes.
- Transfer is possible via interface IF1 and/or IF2.

---

### Note

#### Constraint

If a shared device is activated, only the A-controller can receive diagnostics.

---

### Note

#### Additional information

PROFIdrive message classes of the individual SINAMICS faults and alarms are provided in the List Manual.

---

### 6.7.5.1 Diagnostics via PROFINET

For PROFINET, to transfer PROFIdrive message classes, channel diagnostics (Channel Diagnosis) are used (see PROFINET IO specification (<http://www.profibus.com>)).

A message always comprises the following components in this specific sequence:

- Block Header (6 Byte)
  - Blocktype
  - Blocklength
  - BlockversionHigh
  - BlockversionLow
- API (4 Byte)
- Slot Number (2 Byte)
- Sub Slot Number (2 Byte)
- Channel Number (2 Byte)
- Channel Properties (0x8000) (2 Byte)
- User Structure Identifier (2 Byte)
- Channel Diagnosis Data (6 Byte)
  - Channel Number (2 Byte)
  - Channel Properties (2 Byte)
  - Channel Error Type (2 Byte)

#### Overview

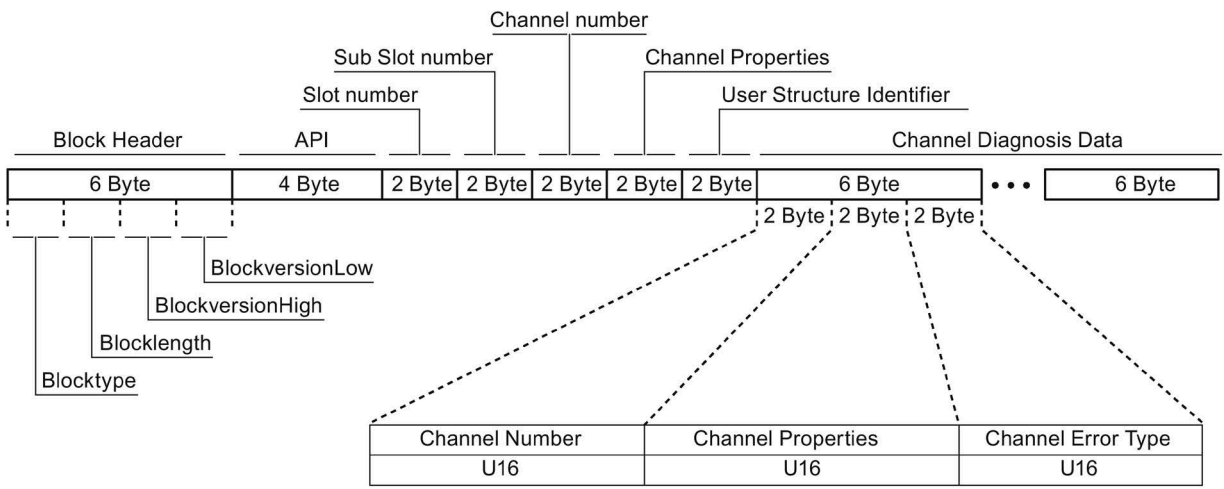


Figure 6-32 Components of a message



Individual components of the Channel Diagnosis Data block can be included n times in a message. A precise explanation of these message components is subsequently provided:

Table 6- 26 Components of a message

Designation	Data type/length	For SINAMICS	
		Value	Meaning
Channel Number	U16	1 ... 399 0x8000	Component number No component assignment <sup>1)</sup>
Channel Properties	U16		
.Type	Bits 7 ... 0	0	No data length
.Accumulative	Bit 8	0	1 channel; no group formation
.Maintenance	Bits 10, 9	0	Fault → diagnostics
		1	Alarm, Class 0 or A → maintenance required ( <i>Maintenance required</i> )
		2	Alarm, Class B or C → maintenance required ( <i>Maintenance demanded</i> )
.Specifier	Bits 12, 11	0	Not used
		1	Message received
		2	Message issued, no additional message available in the channel
		3	Message issued, additional messages are available in the channel
.Direction	Bits 15 ... 13	3	Input/Output
Channel Error Type	U16	0x9000	Hardware / software error
		0x9001	Network fault
		0x9002	Supply voltage fault
		0x9003	DC link overvoltage
		0x9004	Power electronics faulted
		0x9005	Overtemperature of the electronic components
		0x9006	Ground fault / inter-phase short circuit
		0x9007	Motor overload
		0x9008	Communication error to the higher-level control system
		0x9009	Safety monitoring channel has identified an error
		0x900A	Position/speed actual value incorrect or not available
		0x900B	Internal (DRIVE-CLiQ) communication error
		0x900C	Infeed faulted
		0x900E	Line filter faulted
		0x900F	External measured value / signal state outside the permissible range
0x9010	Application / technological function faulted		
0x9011	Error in the parameterization / configuration / commissioning procedure		
0x9012	General drive fault		
0x9013	Auxiliary unit faulted		

<sup>1)</sup> For messages, which cannot be assigned to any particular component

### System response - reading out diagnostics data

The converter requests diagnostics data via "Read data set" (detailed information is provided in the PROFINET-IO specification (<http://www.profibus.com>)).

Example:

For example, a read record with index 0x800C can be used to read out diagnostics data from specific sub slots.

The following rules apply exemplarily:

- 1 message block,  
if at this drive object (one or several) faults of the same message class are identified.
- n messages  
if, at this drive object, n faults of different message classes are identified.

---

### Note

If a fault is active on the CU drive object, then this fault is propagated to all of the drive objects associated with the CU. This fault can therefore be read out at each drive object.

---

## 6.7.5.2 Diagnostics via PROFIBUS

For communication via PROFIBUS, in the case of fault the following diagnostics data is output:

- Standard diagnostics
- Identifier-related diagnostics
- Status messages/module status
- Channel-related diagnostics
- Data sets DS0/DS1 and diagnostics alarm

### Message structure

The following applies if a message contains all of the specified diagnostics data:

- Standard diagnostics  
Is always located at the beginning of the message.
- Data sets DS0/DS1 and diagnostics alarm  
Is always located at the end of the message. This message part is always slot-specific. The actual state of the slot responsible for the message is always transferred in the message.

The other diagnostics data (types) can be in any sequence. This is the reason that the following diagnostics data include a header:

- Identifier-related diagnostics
- Status messages/module status
- Channel-related diagnostics

The diagnostic data type can be uniquely identified based on the header.

---

#### Note

The master must operate in the DPV1 mode.

---

### Standard diagnostics

For communication via PROFIBUS, standard diagnostics is structured as follows.

		Bit							
Octet	Name	7	6	5	4	3	2	1	0
1	Station status 1	Master_Lock = 0	Prm_Fault	0	Not_Supported	Ext_Diag	Cfg_Fault	Station_Not_Ready	Station_Non_Exist = 0
2	Station status 2	0	0	Sync_Mode	Freeze_Mode	WD_On	1	Stat_Diag = 0	Prm_Req
3	Station status 3	Ext_Diag_Overflow	0	0	0	0	0	0	0
4		Master_Add							
5		Ident_Number (HighByte) of the slave							
6		Ident_Number (LowByte) of the slave							

In this context, the following values are decisive for diagnostics:

- Ext\_Diag
  - Group signal for diagnostics in the slave
  - = 1, if at least 1 alarm is active
- Ext\_Diag\_Overflow
  - Display, diagnostics overflow in the slave (for more than 240 bytes)

**Identifier-related diagnostics**

The identifier-related diagnostics provides a bit (KB\_n) for each slot 1 allocated when configuring the device. If a diagnostics message is active at a slot, then its KB\_n = true.

		Bit							
Octet	Name	7	6	5	4	3	2	1	0
1	Header-Byte Station status 1	0	1	Block length (2 ... 32) incl. this byte					
2	Bit structure	KB_7	KB_6	KB_5	KB_4	KB_3	KB_2	KB_1	KB_0
3	Bit structure	...	...	...	...	KB_11	KB_10	KB_9	KB_8
...		...							
x	Bit structure	...	...	KB_n+1	KB_n	...	...	...	...

**Status messages/module status**

Status messages and module status briefly represent an overview of the state of the devices:

		Bit							
Octet	Name	7	6	5	4	3	2	1	0
1	Header byte	0	0	Block length (2 ... 32) incl. this byte					
2	Module status	0x82							
3	Slot	0							
4	Specifier	0							
5		Slot_4		Slot_3		Slot_2		Slot_1	
6		...		Slot_7		Slot_6		Slot_5	
...		...							
x		00	Slot_n		...		...		

**Note**

**Status value**

Diagnostics for SINAMICS are only available in cyclic PROFIBUS operation, so that the state 00 = "Valid user data" is always output for all slots.

## Channel-related diagnostics

Channel-related diagnostics encompasses the following data:

		Bit							
Octet	Name	7	6	5	4	3	2	1	0
x	Header-Byte	1 <sup>1)</sup>	0 <sup>1)</sup>	0 ... 63 (module number) including these bytes					
x + 1		1 <sup>2)</sup>	1 <sup>2)</sup>	0 (no component assignment)					
x + 2		0 <sup>3)</sup>	0 <sup>3)</sup>	Message classes: 2 Undervoltage 3 Overvoltage 9 Error 16 Hardware/software error 17 Line supply/filter faulted 18 DC-link overvoltage 19 Power electronics faulted 20 Electronic component overtemp. 21 Ground/phase fault detected 22 Motor overload 23 Commun. with controller faulted 24 Safety monit. Detected an error 25 Act. Position/speed value error 26 Internal communication faulted 27 Infeed faulted 28 Braking controller faulted 29 External signal state error 30 Application/function faulted 31 Parameterization/commiss. error					

1) ≙ Channel-related diagnostics

2) ≙ Input/output

3) ≙ "Channel type "non specific"

### System response

Only one signal is generated if channel-related diagnostics identifies several faults belonging to the same message class at the same drive object.

### Data sets DS0/DS1 and diagnostics alarm

The PROFIdrive message classes are transferred using diagnostic alarm DS0/DS1. All faults are assigned channel 0. The drive objects are assigned using the slot number.

The structure is as follows:

Bit		7	6	5	4	3	2	1	0	
Octet	Name									
1	Header-Byte	0	0	= 15 (block length)						
2		0	= 1 (diagnostics alarm)							
3		0 ... 244 (slot number $\hat{=}$ drive object)								
4		0 ... 31 (sequence number)						Add_Ack	Alarm_Specifier <sup>1)</sup>	
5	DS0 (byte 0)	0	0	0	0	1 <sup>2)</sup>	0	1 <sup>3)</sup>	1 <sup>4)</sup>	
6	DS0 (byte 1)	0	0	0	1 <sup>5)</sup>	0 <sup>6)</sup>	0 <sup>6)</sup>	1 <sup>6)</sup>	1 <sup>6)</sup>	
7	DS0 (Byte 2)	0	0	0	0	0	0	0	0	
8	DS0 (byte 3)	0	0	0	0	0	0	0	0	
9	Info (byte 1)	Mixed	= 0x45 (ChannelTypeID = SINAMICS)							
10	Info (byte 2)	= 24 (number of diagnostic bits/channel)								
11	Info (byte 3)	= 1 (1 channel signals)								
12	Channel Error Vector	0	0	0	0	0	0	0	Channel 0 1	
13	Channel -related diag- nostics (channel 0)	Err 7	Err 6	Err 5	Err 4	Err 3	Err 2	Err 1	Err 0	
14		Err 15	Err 14	Err 13	Err 12	Err 11	Err 10	Err 9	Err 8	
15		0	0	0	0	Err 19	Err 18	Err 17	Err 16	

- 1) Alarm\_Specifier
  - 1  $\hat{=}$  error has occurred and the slot is not OK
  - 2  $\hat{=}$  error is resolved and the slot is OK
  - 3  $\hat{=}$  error is resolved and the slot is not okay
- 2) Channel fault present
  - = 1; as long as the drive object has an error condition
- 3) Internal fault
  - = 1; as long as the drive object has an error condition
- 4) Module fault
  - = 1; as long as the drive object has an error condition
- 5) Channel information present
  - = 1;  $\hat{=}$  DS1 exists
- 6) Type class of module
  - = 0011;  $\hat{=}$  Distributed

### 6.7.6 Further information about PROFIdrive communication

#### Further information about PROFIdrive communication

Additional information about communication based on PROFIdrive can be taken from the attached document "SINAMICS S120 Function Manual Communication" in Section "Communication according to PROFIdrive".

## 6.8 Communication via PROFIBUS DP

### 6.8.1 PROFIBUS connection

#### Positions of PROFIBUS connection, address switch, and diagnostics LED

The PROFIBUS connection, address switch, and diagnostics LED are located on the Control Unit CU320-2 DP.

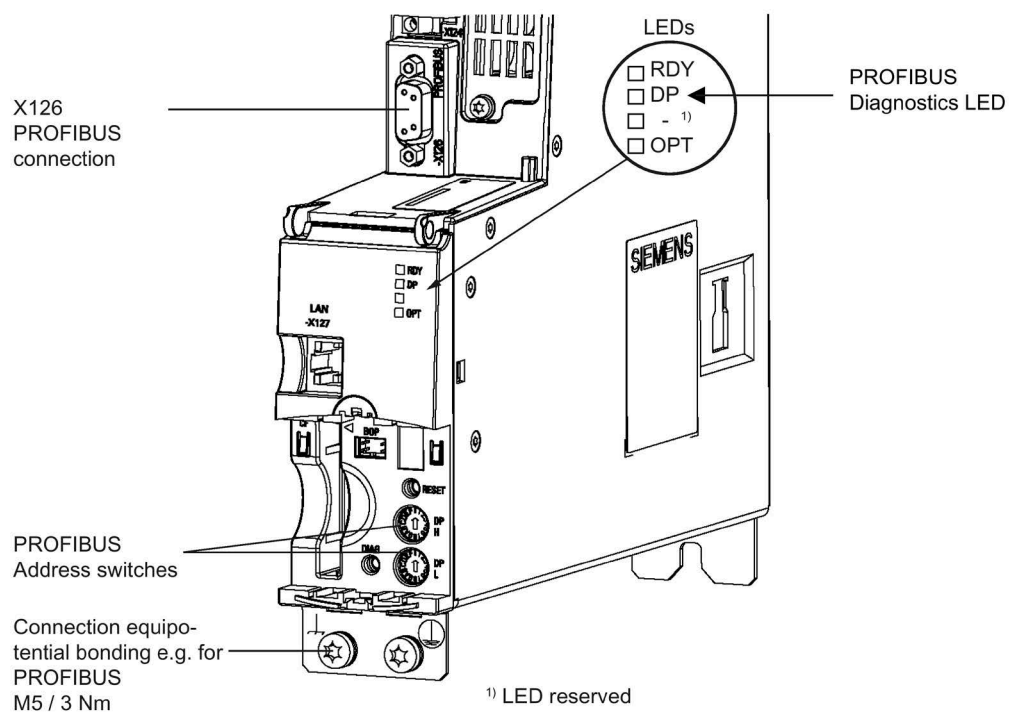
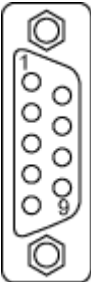


Figure 6-33 View of the Control Unit with PROFIBUS interface

**PROFIBUS connection**

The PROFIBUS is connected by means of a 9-pin SUB D socket (X126). The connections are electrically isolated.


Table 6- 27 X126 - PROFIBUS connection

	Pin	Signal name	Meaning	Range
	1	SHIELD	Ground connection	
	2	M24_SERV	Power supply for teleservice, ground	0 V
	3	RxD/TxD-P	Receive / transmit data P (B/B')	RS485
	4	CNTR-P	Control signal	TTL
	5	DGND	PROFIBUS data reference potential (C/C')	
	6	VP	Supply voltage plus	5 V ± 10%
	7	P24_SERV	Power supply for teleservice P, + (24 V)	24 V (20.4 ... 28.8 V)
	8	RxD/TxD-N	Receive / transmit data N (A/A')	RS485
	9	-	Not assigned	


**Connectors**

The cables must be connected via PROFIBUS connectors as they contain the necessary terminating resistors.

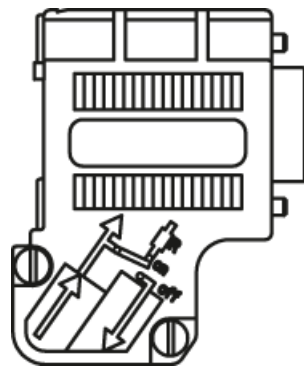The figure below shows suitable PROFIBUS connectors with/without a PG/PC connector.



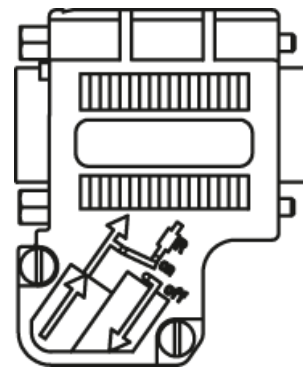PROFIBUS connector without PG/PC connection  
6ES7972-0BA42-0XA0



PROFIBUS connector with PG/PC connection  
6ES7972-0BB42-0XA0



## Bus terminating resistor

The bus terminating resistor must be switched on or off depending on its position in the bus, otherwise the data will not be transmitted properly.

The terminating resistors for the first and last nodes in a line must be switched on; the resistors must be switched off at all other connectors.

The cable shield must be connected at both ends over large-surface area contacts.

---

### Note

#### Connector type

Depending on the connector type, the correct assignment of the connector must be ensured (IN/OUT) in conjunction with the terminating resistor.

---

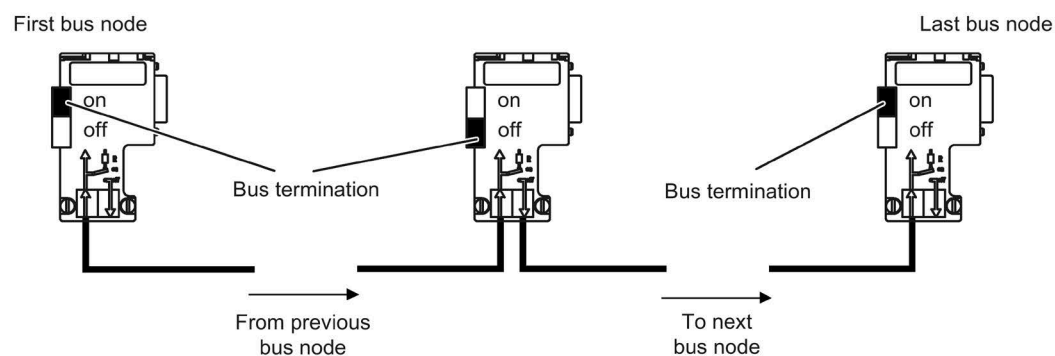


Figure 6-34 Position of the bus terminating resistors

### Cable routing

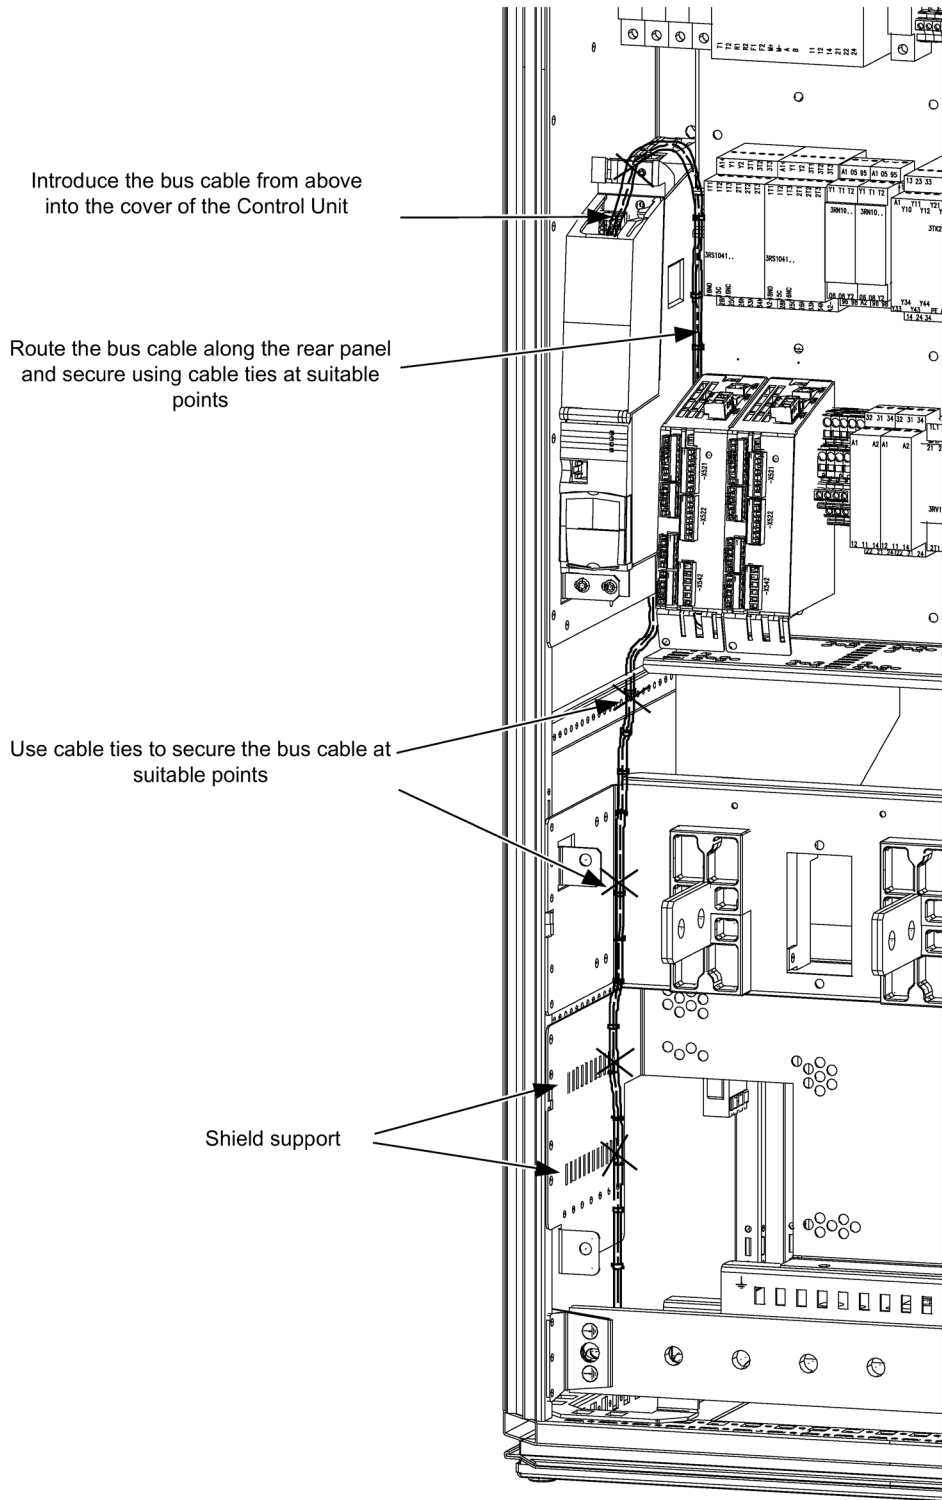


Figure 6-35 Cable routing

## 6.8.2 General information about PROFIBUS DP

### 6.8.2.1 General information about PROFIBUS DP for SINAMICS

#### General information

PROFIBUS is an open international fieldbus standard for a wide range of production and process automation applications.

The following standards ensure open, multi-vendor systems:

- International standard EN 50170
- International standard IEC 61158

PROFIBUS is tuned for high-speed, time-critical data communication at field level.

---

#### Note

PROFIBUS for drive technology is standardized and described in the following document:  
**PROFIdrive Profile Drive Technology**

PROFIBUS User Organization e. V.  
Haid-und-Neu-Strasse 7, D-76131 Karlsruhe  
<http://www.profibus.com>

---

#### Note

Before synchronizing to the isochronous PROFIBUS, all of the drive object pulses must be inhibited - also for those drives that are not controlled via PROFIBUS.

PROFIBUS interface: The cyclic PZD channel is deactivated when the **CBE20** is plugged in!

---

NOTICE
<p><b>Destruction of the CU320-2 or other CAN bus nodes by connecting a CAN cable</b></p> <p>Connecting a CAN cable to interface X126 of the CU320-2 can destroy the CU320-2 or other CAN bus nodes.</p> <ul style="list-style-type: none"><li>• Do not connect any CAN cable to the X126 interface.</li></ul>

**Master and slave**

- Master and slave properties

Properties	Master	Slave
As bus node	Active	Passive
Send messages	Permitted without external request	Only possible on request by master
Receive messages	Possible without any restrictions	Only receive and acknowledge permitted

- Master

The following classes are differentiated:

- Master class 1 (DPMC1):

Central automation stations that exchange data with the slaves in cyclic and acyclic mode. Communication between the masters is also possible.

Examples: SIMATIC S7, SIMOTION

- Master class 2 (DPMC2):

Devices for configuration, commissioning, operator control and monitoring during bus operation. Devices that only exchange data with the slaves in acyclic mode.

Examples: Programming devices, human machine interfaces

- Slaves

With respect to PROFIBUS, the SINAMICS drive unit is a slave.

**Bus access method**

PROFIBUS uses the token passing method, i.e. the active stations (masters) are arranged in a logical ring in which the authorization to send is received within a defined time frame.

Within this time frame, the master with authorization to send can communicate with the assigned slaves and/or with other masters in a master/slave procedure.

**PROFIBUS telegram for cyclic data transmission and acyclic services**

Each drive unit that supports cyclic process data exchange uses a telegram to send and receive all the process data. A separate telegram is sent in order to perform all the acyclic services (read/write parameters) under a single PROFIBUS address. The acyclic data is transferred with a lower priority after cyclic data transmission.

The overall length of the telegram increases with the number of drive objects that are involved in exchanging process data.

## 6.8.2.2 Sequence of DOs in the telegram

### Sequence of drive objects in the telegram

On the drive side, the sequence of drive objects in the telegram is displayed via a list in p0978[0...24] where it can also be changed.

Using the STARTER commissioning tool you can display the sequence of drive objects for a commissioned drive system in the project navigator under "Drive unit" > "Communication" > "Telegram configuration".

When you create the configuration on the controller side (e.g. HW Config), the process-data-capable drive objects for the application are added to the telegram in the sequence shown (see above).

The following drive objects can exchange process data:

- Active Infeed (A\_INF)
- Basic Infeed (B\_INF)
- Control Unit (CU\_S)
- ENC
- Smart Infeed (S\_INF)
- SERVO
- Terminal Board 30 (TB30)
- Terminal Module 15 (TM15)
- Terminal Module 31 (TM31)
- Terminal Module 41 (TM41)
- Terminal Module 120 (TM120)
- Terminal Module 150 (TM150)
- VECTOR

---

#### Note

##### The sequence of the drive objects

The sequence of drive objects in HW Config must be the same as that in the drive (p0978).

Drive objects after the first zero in p0978 must not be configured in the HW Config.

---

The structure of the telegram depends on the drive objects taken into account during configuration. Configurations are permitted that do not take into account all of the drive objects that are present in the drive system.

#### Example:

The following configurations, for example, are possible:

- Configuration with VECTOR, VECTOR, VECTOR
- Configuration with A\_INF, VECTOR, VECTOR, VECTOR, TMB31
- etc.

### 6.8.3 Control via PROFIBUS

#### Diagnostics LED "COM (PROFIdrive)"

The PROFIBUS diagnostics LED is located on the front of the Control Unit. Its states are described in the following table.

Table 6- 28 Description of the "COM" LED

Color	State	Description
----	OFF	Cyclic communication is not (yet) running. <b>Note:</b> The PROFIdrive is ready for communication when the Control Unit is ready for operation (see LED RDY).
Green	Continuous light	Cyclic communication is taking place.
Green	0.5 Hz flashing light	Cyclic communication has still not been fully established. Possible causes: - The controller is not transmitting any setpoints. - In isochronous mode, the controller did not send a Global Control or it sent a defective Global Control (GC).
Red	0.5 Hz flashing light	PROFIBUS master is sending incorrect parameter assignment/configuration
Red	2 Hz flashing light	Cyclic bus communication has been interrupted or could not be established.

#### Setting the PROFIBUS Address

There are two ways to set the PROFIBUS address:

1. Via p0918
  - To set the bus address for a PROFIBUS node using STARTER, first set the rotary code switches to 0<sub>dec</sub> (00<sub>hex</sub>) and 127<sub>dec</sub> (7F<sub>hex</sub>).
  - Then use parameter p0918 to set the address to a value between 1 and 126.
2. Via the PROFIBUS address switches on the Control Unit
  - The address is set manually to values between 1 and 126 using the rotary coding switches. In this case, p0918 is only used to read the address.

---

#### Note

The rotary coding switches used to set the PROFIBUS address are located beneath the cover.

---

**Note**

Address 126 is used for commissioning. Permitted PROFIBUS addresses are 1 ... 126.



When several Control Units are connected to a PROFIBUS line, you set the addresses differently than for the factory setting. Each PROFIBUS address in a PROFIBUS line can only be assigned once. Either set the PROFIBUS address in absolute terms using the rotary coding switches – or selectively in parameter p0918. Each change made to the bus address is not effective until POWER ON.

The currently set address of the rotary coding switch is displayed in parameter r2057.

**PROFIBUS address switches**

The PROFIBUS address is set as a hexadecimal value via two rotary coding switches. Values between 0<sub>dec</sub> (00<sub>hex</sub>) and 127<sub>dec</sub> (7F<sub>hex</sub>) can be set as the address. The upper rotary coding switch (H) is used to set the hexadecimal value for 16<sup>1</sup> and the lower rotary coding switch (L) is used to set the hexadecimal value for 16<sup>0</sup>.

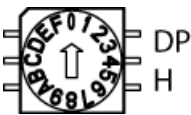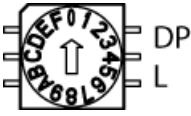Table 6- 29 PROFIBUS address switches

Rotary coding switches	Significance	Examples		
		21 <sub>dec</sub>	35 <sub>dec</sub>	126 <sub>dec</sub>
		15 <sub>hex</sub>	23 <sub>hex</sub>	7E <sub>hex</sub>
	16 <sup>1</sup> = 16	1	2	7
	16 <sup>0</sup> = 1	5	3	E

The factory setting for the rotary coding switches is 0<sub>dec</sub> (00<sub>hex</sub>).

**Setting the PROFIBUS ID number**

The PROFIBUS Ident Number (PNO-ID) can be set using p2042.

SINAMICS can be operated on PROFIBUS with various identities. This allows a PROFIBUS GSD that is independent of the device to be used (e.g. PROFIdrive VIK-NAMUR with Ident Number 3AA0 hex).

- 0: SINAMICS S/G
- 1: VIK-NAMUR

New settings do not become active until after POWER ON, reset, or download.

**Note**

**Totally Integrated Automation**

The advantages of Totally Integrated Automation (TIA) can only be utilized when selecting "0".

### 6.8.4 Monitoring: Telegram failure

#### Description

In monitoring for telegram failure, two cases are possible:

- Telegram failure with a bus fault

After a telegram failure and the additional monitoring time has elapsed (p2047), bit r2043.0 is set to "1" and alarm A01920 is output. Binector output r2043.0 can be used for an emergency stop, for example.

After the fault delay time (p2044) has expired, fault F01910 is output.

Fault F01910 triggers fault response OFF2 (pulse inhibit) for the infeed and OFF3 (quick stop) in the drive.

The fault response can be re-parameterized if an OFF response is not to be initiated.

Fault F01910 can be acknowledged immediately. The drive can then be operated even without PROFIdrive.

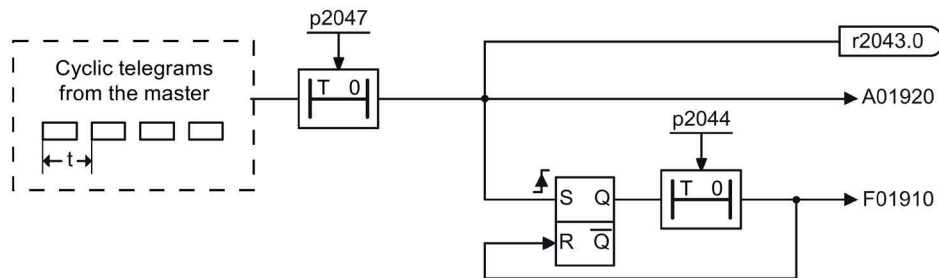


Figure 6-36 Monitoring telegram failure with a bus fault



- Telegram failure with a CPU stop

After telegram failure, bit r2043.0 is set to "1." Binector output r2043.0 can be used for an emergency stop, for example.

After the fault delay time (p2044) has expired, fault F01910 is output.

Fault F01910 triggers fault response OFF2 (pulse inhibit) for the infeed and OFF3 (quick stop) in the drive.

The fault response can be re-parameterized if an OFF response is not to be initiated.

Fault F01910 can be acknowledged immediately. The drive can then be operated even without PROFIdrive.

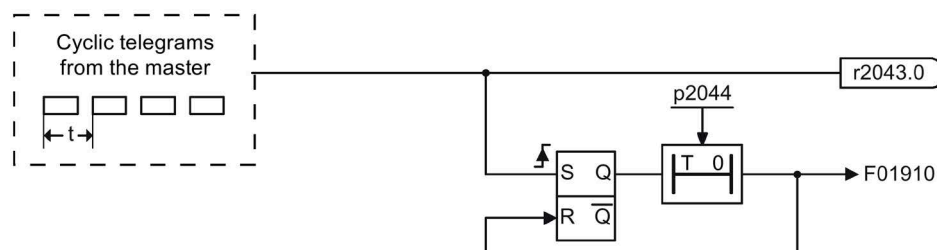


Figure 6-37 Monitoring telegram failure for a CPU stop

## 6.8.5 Further information about communication via PROFIBUS DP

### Further information about communication via PROFIBUS DP

For more information about communication via PROFIBUS DP, refer to "Communication via PROFIBUS DP" in the accompanying "SINAMICS S120 Function Manual Communication".

## 6.9 Communication via PROFINET IO

### 6.9.1 Activating online operation: STARTER via PROFINET IO

#### Description

Online operation with PROFINET IO is implemented using TCP/IP.

#### Preconditions

- STARTER Version 4.2 or higher
- Control unit CU320-2 PN or CBE20

#### STARTER via PROFINET IO (example)

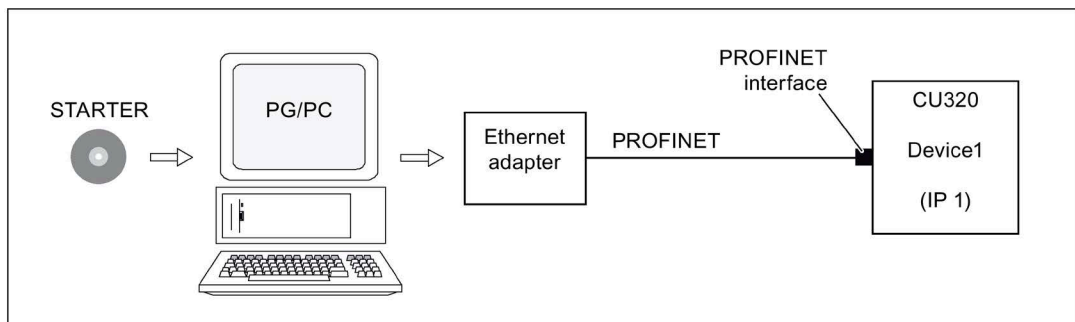


Figure 6-38 STARTER via PROFINET (example)

#### Procedure, establishing online operation with PROFINET

1. Setting the IP address in Windows  
The PC/PG is referred here to a fixed, free IP address.
2. Settings in STARTER
3. Assigning the IP address and the name  
The PROFINET interface must be "baptized" so that the STARTER can establish communication.
4. Select online operation in STARTER.

## Setting the IP address in Windows

On the desktop, right-click on "Network environment" -> Properties -> double-click on Network card and choose -> Properties -> Internet Protocol (TCP/IP) -> Properties -> Enter the freely-assignable addresses.

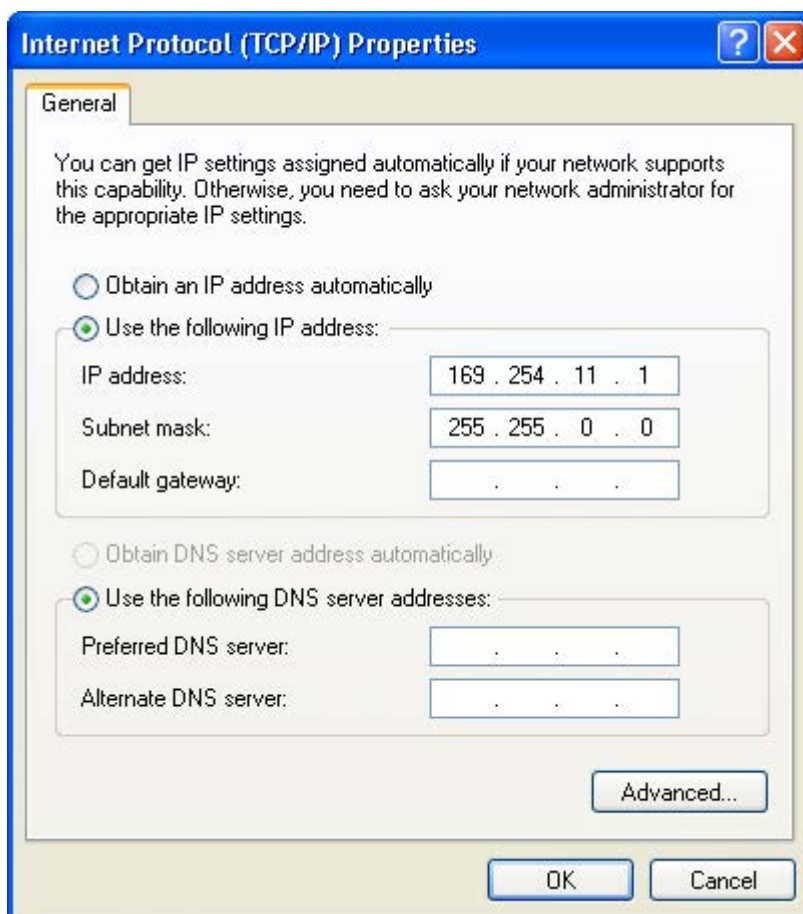


Figure 6-39 Internet Protocol (TCP/IP) properties

**Settings in STARTER**

The following settings are required in STARTER for communication via PROFINET:

- Extras -> Set PG/PC interface

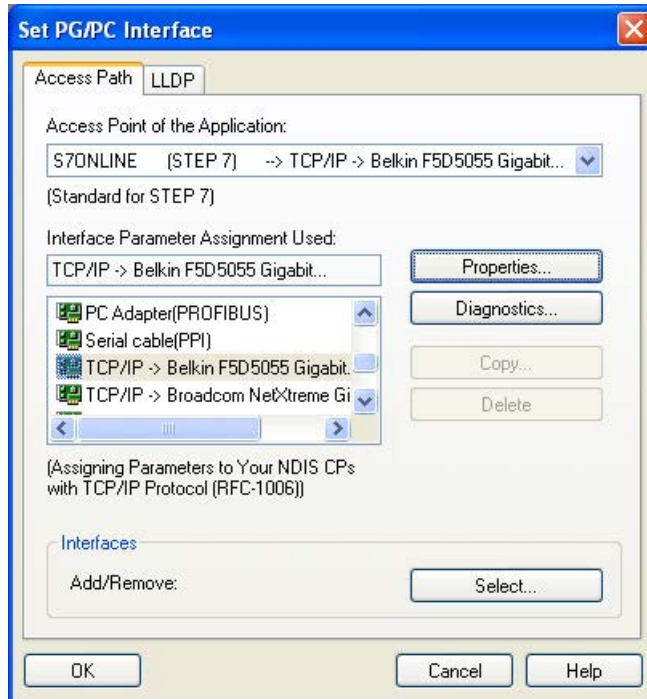


Figure 6-40 Set the PG/PC interface

- Right-click Drive unit -> Target device -> Online access -> Module address

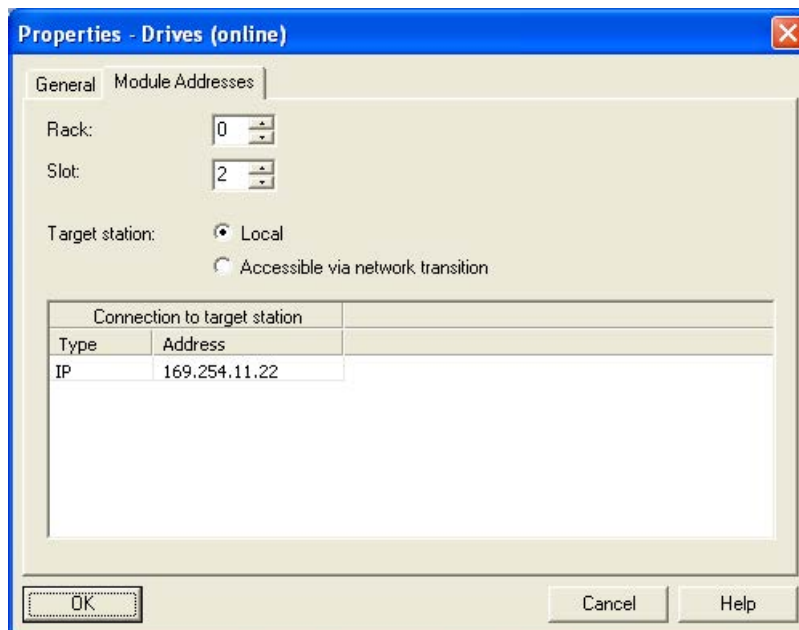


Figure 6-41 Activating online operation

## Assigning the IP address and the name

---

### Note

#### Naming devices

ST (Structured Text) conventions must be satisfied for the name assignment of IO devices in PROFINET (SINAMICS components). The names must be unique within PROFINET. The characters "-" and "." are not permitted in the name of an IO device.

---

#### Assignment with STARTER, "Accessible nodes" function

Use the STARTER to assign an IP address and a name to the PROFINET interface.

- Connect the direct Ethernet cable from the PG/PC to the PROFINET interface.
- Switch on the Control Unit.
- Open STARTER.
- A search is performed for available nodes in PROFINET via Project -> Accessible nodes or the "Accessible nodes" button.
- The SINAMICS drive object is detected and displayed as a bus node with IP address 0.0.0.0 and without a name.
- Mark the bus node entry and select the displayed menu item "Edit Ethernet node" with the right mouse button.
- In the following "Edit Ethernet node" screen, enter the device name for the PROFINET interface and click the "Assign name" button. Enter the IP address (e.g. 169.254.11.22) in the IP configuration and specify the subnet screen (e.g. 255.255.0.0). Then click the "Assign IP configuration" button. Close the screen.
- The "Update (F5)" button displays the IP address and name in the entry for the bus node. If not, close the "Accessible nodes" screen and perform another search for accessible nodes.
- If the PROFINET interface is displayed as bus node, mark the entry and click the "Accept" button.
- The SINAMICS drive is displayed as a drive object in the project tree.
- Further configurations can be performed for the drive object.
- Click "Connect to target system" and load the project to the Control Unit's memory card with Target system -> Load -> To target device.

---

### Note

#### Storage location of the IP address

The IP address and device name for the Control Unit are stored on the memory card (non-volatile).

---

## 6.9.2 General information about PROFINET IO

### 6.9.2.1 General information about PROFINET IO for SINAMICS

#### General information

PROFINET IO is an open Industrial Ethernet standard for a wide range of production and process automation applications. PROFINET IO is based on Industrial Ethernet and observes TCP/IP and IT standards.

Deterministic signal processing in real time is important in industrial networks. PROFINET IO satisfies these requirements.

International standard IEC 61158 ensures open, multi-vendor systems

PROFINET IO is optimized for high-speed, time-critical data communication at field level.

#### PROFINET IO

Within the context of Totally Integrated Automation (TIA), PROFINET IO is the systematic development of the following:

- PROFIBUS DP, the established fieldbus,
- Industrial Ethernet, the communications bus for the cell level.

Experience gained from both systems was integrated into PROFINET IO. As an Ethernet-based automation standard defined by PROFIBUS International (PROFIBUS user organization), PROFINET IO is a manufacturer-independent communication and engineering model.

PROFINET IO defines every aspect of the data exchange between IO controllers (devices with so-called "master functionality") and the IO devices (devices with so-called "slave functionality") as well as carrying out parameterization and diagnostics. A PROFINET IO system is configured in virtually the same way as a PROFIBUS system.

A PROFINET IO system is made up of the following devices:

- The IO controller controls automation tasks.
- An IO Device is controlled and monitored by an IO controller. An IO device can consist of several modules and submodules.
- An IO Supervisor is an engineering tool, typically based on a PC, with which the individual IO devices (drive unit) are parameterized and diagnosed.

#### IO devices: Drive units with PROFINET interface

- SINAMICS G150 with CU320-2 DP and inserted CBE20
- SINAMICS G150 with CU320-2 PN

With SINAMICS G150 and CBE20 or with CU320-2 PN, communication via PROFINET IO with RT is possible.

Cyclic communication using PROFINET IO with IRT or using RT is possible for all drive units equipped with a PROFINET interface. This means that error-free communication using other standard protocols is guaranteed within the same network.

---

**Note****CU320-2 DP and inserted CBE20**

The cyclic process data channel for PROFIBUS DP is initially deactivated for a CU320-2 DP and inserted CBE20. However, it can be reactivated with parameter p8839 = 1 at any time (see Chapter "Parallel operation of communication interfaces (Page 423)").

---

## References

---

**Note**

PROFINET for drive technology is standardized and described in the following document:

- **PROFIBUS profile PROFIdrive – Profile Drive Technology**  
Version V4.2, October 2015  
PROFIBUS User Organization e. V.  
Haid-und-Neu-Strasse 7, D-76131 Karlsruhe, Germany  
<http://www.profibus.com>, Order Number 3.172
  - IEC 61800-7
- 

### 6.9.2.2 Real-time (RT) and isochronous real-time (IRT) communication

#### Real-time communication

When communication takes place via TCP/IP, the resultant transmission times may be too long and not defined to meet the production automation requirements. When communicating time-critical IO user data, PROFINET IO therefore uses its own real-time channel, rather than TCP/IP.

Real time means that a system processes external events over a defined period.

#### Determinism

Determinism means that a system will react in a predictable ("deterministic") manner. With PROFINET IO with IRT, it is possible to precisely determine (predict) transmission times.

#### PROFINET IO with RT (Real Time)

Real-time data is treated with a higher priority than TCP(UDP)/IP data. Transmission of time-critical data takes place at guaranteed time intervals. RT communication is the basis for data exchange using PROFINET IO.

### PROFINET IO with IRT (Isochronous Real Time)

Isochronous real time: Real time property of PROFINET IO where IRT telegrams are transferred deterministically via planned communication paths in a defined sequence to achieve the best possible synchronism and performance between the IO controller and IO device (drive unit). IRT is also known as time-scheduled communication whereby knowledge about the network structure (topology) is utilized. IRT requires special network components that support planned data transfer.

SINAMICS cycle times of minimum 250 µs (on-board) / 500 µs (CBE20) and a jitter accuracy of less than 1 µs can be achieved when this transmission method is implemented.

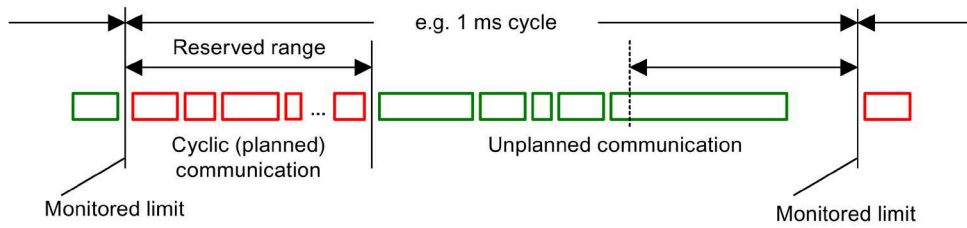


Figure 6-42 Bandwidth distribution/reservation, PROFINET IO

#### 6.9.2.3 Addresses

##### MAC address

Every Ethernet and PROFINET interface is assigned a worldwide unique device identifier in the factory. This 6-byte long device identifier is the MAC address. The MAC address is divided up as follows:

- 3 bytes for the manufacturer's ID
- 3 bytes device identifier (consecutive number).

The MAC address is printed on a label (CBE20) or specified on the type plate (CU320-2 PN), e.g.: 08-00-06-6B-80-C0.

The Control Unit CU320-2 PN has two onboard interfaces:

- One Ethernet interface
- A PROFINET interface with two ports

The two MAC addresses of the Ethernet and PROFINET interfaces are stamped on the type plate.



## IP address

The TCP/IP protocol is a prerequisite for establishing a connection and parameterization. For a PROFINET device to be addressed as a node on Industrial Ethernet, this device also requires an IP address that is unique within the network. The IP address is made up of 4 decimal numbers with a range of values from 0 to 255. The decimal numbers are separated by a decimal point. The IP address is made up as follows:

- Address of the station (also called host or network node)
- Address of the (sub)network

## IP address assignment

The IP addresses of IO devices can be assigned by the IO controller and always have the same subnet mask as the IO controller. In this case, the IP address is not stored permanently. The IP address entry is lost after POWER ON/OFF. The IP address can be assigned retentively via the STARTER function "Accessible nodes".

This function can also be performed with HW Config of STEP 7. The function is called "Edit Ethernet node" here.

---

### Note

#### IP addresses of the onboard interfaces

It is not permissible that the IP address band of the Ethernet interface and the PROFINET interface are the same. The factory setting of the IP address of the Ethernet interface X127 is 169.254.11.22; the subnet mask is 255.255.0.0.

Ethernet interface X127 is intended for commissioning and diagnostics.

Do not use this interface for other purposes and ensure that X127 is always accessible (e.g. for service).

---

### Note

#### Part of a company network

If the network is part of an existing Ethernet company network, obtain the information (IP address) from your network administrator.

---

**Device name (NameOfStation)**

When it is shipped, an IO device does not have a device name. An IO device can only be addressed by an IO controller, for example, for the transfer of project engineering data (including the IP address) during startup or for user data exchange in cyclic operation, after it has been assigned a device name with the IO supervisor.

---

**Note****Save device name retentively**

The device name must be stored retentively using either STARTER or with the hardware Config of STEP 7.

---

**Note****Address information for interfaces**

The address data for the corresponding interfaces can be entered in STARTER in the expert list using the following parameters:

- Ethernet interfaces X127:  
Parameters p8901, p8902 and p8903
  - Internal PROFINET interfaces X150 P1 and P2:  
Parameters p8921, p8922 and p8923
  - Interfaces of the optional CBE20 module:  
Parameters p8941, p8942 and p8943
- 

**Activating the interface configuration and saving it in non-volatile memory**

To activate the interface configuration and save it in non-volatile memory, use the following parameter settings:

- X127 Ethernet interfaces: p8905 = 2
- Internal PROFINET interfaces X150 P1 and P2: p8925 = 2
- Interfaces of the optional CBE20 module (X1400): p8945 = 2

**Replacing Control Unit (IO device)**

If the IP address and device name are stored in non-volatile memory, this data is also transferred with the memory card of the Control Unit. The memory card allows a module to be replaced without an IO supervisor when a fault occurs in a PROFINET device.

If a complete Control Unit needs to be replaced due to a device or module defect, the new Control Unit automatically performs parameterization and configuration using the data on the memory card. Following this, cyclic exchange of user data is restored.

#### 6.9.2.4 Dynamic IP address assignment

In those cases in which the PROFINET interface is not used for the IO communication, it is possible to generate an IP address centrally using a DHCP (DHCP = Dynamic Host Configuration Protocol) server. The following requirements must be satisfied to do this:

- At least one DHCP server must be active.
- The PG/PC and the SINAMICS devices must be connected to the same physical Ethernet subnet.

---

#### Note

DHCP is not supported together with PROFINET. No cyclical connection is established for an activated DHCP. It is therefore recommended that DHCP not be used within PROFINET networks!

---

The DHCP address assignment can be set from the SIMATIC Manager or using SINAMICS parameters.

#### Setting the DHCP address assignment with SIMATIC Manager (STEP 7)

1. Call the "Target system > Edit Ethernet node" menu path in the SIMATIC Manager.
2. Click the "Search" button in the "Ethernet nodes" area.
3. Select the desired SINAMICS device.

You can now specify in the "Edit Ethernet nodes" configuration dialog that a dynamic IP address will be generated via a DHCP server. The IP address can be identified in two ways:

- MAC address
- Device name (name of station)

The "MAC address" option has the disadvantage that the MAC addresses are no longer correct after a device has been replaced.

4. Click the "Obtain the IP address from a DHCP server" option in the dialog to activate.
5. Activate either the "MAC address" or the "Device name" option in the "Identified via" area.
6. Click "Assign IP configuration".

The IP address is then taken from the DHCP server. The SINAMICS device uses the associated setting after a POWER ON to obtain a new IP address from the DHCP server.

### Setting the DHCP address assignment with SINAMICS parameters

The DHCP address assignment can also be initiated using SINAMICS parameters. In this case, the Control Unit always retrieves the IP address from a DHCP server after each POWER ON.

1. Activate the DHCP address assignment using one of the following settings (where the values 2 and 3 mean "MAC address" and "Device name", respectively):
  - For Ethernet onboard (X127): p8904 = 2 or 3
  - For PROFINET onboard: p8924 = 2 or 3
  - For CBE20 (X1400): p8944 = 2 or 3

The DHCP server now temporarily assigns an IP address.

2. You can now activate the interface configuration (value of 1) or activate and save retentively (value of 2). Make one of the following settings:
  - For Ethernet onboard (X127): p8905 = 1 or 2
  - For PROFINET onboard: p8925 = 1 or 2 (applies only to SINAMICS S120 devices)
  - For CBE20 (X1400): p8945 = 2

Direct activation is not possible for the CBE20. The configuration can only be saved. The setting then becomes automatically active for the next POWER ON.

#### 6.9.2.5 DCP flashing

This function is used to check the correct assignment to a module and its interfaces. This function is supported by a CU320-2 DP/PN with inserted CBE20. The function can also be used without CBE20 in a CU320-2 PN.

Activating DCP flashing:

1. In HW Config or the STEP 7 Manager, select the menu item "Target system > Ethernet > Edit Ethernet node".

The "Edit Ethernet Node" dialog box opens.

2. Click the "Browse" button.

The "Browse Network" dialog box opens and displays the connected nodes.

3. Select the CU320-2 PN or the CU320-2 DP when a CBE20 is inserted as node.

The "DCP flashing" function is then activated via the "Flash" button.

The DCP flashing is switched to the RDY LED (READY LED 2 Hz, green/orange or red/orange) on the CU320-2 DP.

The LED will continue to flash as long as the dialog is open. When the dialog box is closed, the LED automatically goes dark.

### 6.9.2.6 Data transmission

#### Properties

The PROFINET interface on a drive unit supports the simultaneous operation of:

- IRT – isochronous real-time Ethernet
- RT – real-time Ethernet
- Standard Ethernet services (TCP/IP, LLDP, UDP and DCP)

#### PROFIdrive telegram for cyclic data transmission, acyclic services

PROFIdrive telegrams are available for implementing cyclic communication via PROFINET IO.

Telegrams to send and receive process data are available for each drive object of a drive unit with cyclic process data exchange. In addition to cyclic data transfer, acyclic services can also be used for parameterizing and configuring the drive unit. These acyclic services can be utilized by the IO supervisor or IO controller.

#### Sequence of drive objects in the telegram

On the drive side, the sequence of drive objects in the telegram is displayed via a list in p0978[0...24] where it can also be changed.

Using the STARTER commissioning tool you can display the sequence of drive objects for a commissioned drive system in the project navigator under "Drive unit" > "Communication" > "Telegram configuration".

When you create the configuration on the controller side (e.g. HW Config), the process-data-capable drive objects for the application are added to the telegram in the sequence shown (see above).

The following drive objects can exchange process data:

- Active Infeed (A\_INF)
- Basic Infeed (B\_INF)
- Control Unit (CU\_S)
- ENC
- Smart Infeed (S\_INF)
- SERVO
- Terminal Board 30 (TB30)
- Terminal Module 15 (TM15)
- Terminal Module 31 (TM31)
- Terminal Module 41 (TM41)
- Terminal Module 120 (TM120)
- Terminal Module 150 (TM150)
- VECTOR

---

**Note**

**The order of the drive objects**

The sequence of drive objects in HW Config must be the same as that in the drive (p0978).

Drive objects after the first zero in p0978 must not be configured in the HW Config.

---

The structure of the telegram depends on the drive objects taken into account during configuration. Configurations are permitted that do not take into account all of the drive objects that are present in the drive system.

**Example:**

The following configurations, for example, are possible:

- Configuration with VECTOR, VECTOR, VECTOR
- Configuration with A\_INF, VECTOR, VECTOR, VECTOR, TMB31
- and additional etc.

### 6.9.2.7 Communication channels

#### PROFINET connection channels

- A Control Unit has an integrated Ethernet interface (X127).
- The Control Unit CU320-2 PN has a PROFINET interface (X150) with two ports onboard: P1 and P2.
- A Control Unit CU320-2 PN can establish a total of 8 acyclic connections simultaneously via the integrated PROFINET interfaces.

---

**Note**

**Using interface X127 LAN (Ethernet)**

Ethernet interface X127 is intended for commissioning and diagnostics, which means that it must always be accessible (e.g. for service).

Further, the following restrictions apply to X127:

- Only local access is permissible.
  - Either no networking or only local networking in a closed and locked electrical cabinet is permissible
- 

If it is necessary to remotely access the electrical cabinet, then additional security measures must be applied so that misuse through sabotage, data manipulation by unqualified persons and intercepting confidential data is completely ruled out.

## Control Unit with CBE20

The CBE20 Communication Board can be optionally inserted into Control Unit CU320-2 PN or CU320-2 DP:

- The CBE20 Communication Board is a PROFINET switch with 4 additional PROFINET ports.

---

### Note

#### PROFINET routing

Routing is neither possible between the onboard interfaces X127 and X150 of the CU320-2 PN, nor between the onboard interfaces of the CU320-2 PN and an inserted CBE20.

---

## 6.9.3 Communication with CBE20

### 6.9.3.1 Selecting the CBE20 firmware

The CBE20 is a Communication Board that can be flexibly used and which can be operated with different communication profiles. Only one firmware of a communication profile can be loaded at any one time. The available firmware files are saved with the communication profiles in UFW files on the Control Unit memory card.

The required file is selected using parameter p8835. A POWER ON must be carried out after selecting the required UFW file. During the subsequent system boot, the corresponding UFW file is loaded. The new selection then becomes active.

Table 6- 30    Functionality and selection in the pointer file

Functionality (p8835)	Pointer file content
PROFINET device	1
PN Gate	2
SINAMICS Link	3
EtherNet/IP	4
Customer-specific <sup>1)</sup>	99

<sup>1)</sup> Path for the UFW file and folders on the memory card: /OEM/SINAMICS/CODE/CB/CBE20.UFW

## Identification of the firmware version

Using parameter r8858, the loaded firmware version of the PROFINET interface can be identified uniquely.

**Parameter**

- p8835 CBE20 firmware selection
- r8858[0...39] COMM BOARD read diagnostics channel
- r8859[0...7] COMM BOARD identification data

**6.9.3.2 EtherNet/IP**

SINAMICS S120 supports the communication with the fieldbus EtherNet Industrial Protocol (EtherNet/IP or also EIP). EtherNet/IP is an open standard based on Ethernet, which is predominantly used in the automation industry. EtherNet/IP is supported by the Open DeviceNet Vendor Association (ODVA).

For communication with EtherNet/IP, an Ethernet CBE20 option board is required. By setting p8835 = 4, you can choose the communication profile EtherNet/IP. The profile becomes active after POWER ON.

**6.9.4 PROFINET media redundancy**

To increase the availability of PROFINET, you can create a ring topology. If the ring is interrupted at one point, the data paths between the devices are automatically reconfigured. After reconfiguration, the devices can be re-accessed in the new topology that is created.

To create a ring topology with media redundancy, route the two ends of a line-type PROFINET topology to a switch which serves as redundancy manager (e.g. a suitable SCALANCE switch). Closing the linear bus topology is realized using 2 ports (ring ports) of the SCALANCE redundancy manager, which monitors the data telegrams in the PROFINET ring. All other connected PROFINET nodes are redundancy clients.

The Media Redundancy Protocol (MRP) is the standard procedure for media redundancy. Using this procedure, a maximum of 50 devices can participate in each ring. In the case of an interrupted cable, data transfer is only briefly interrupted as the system switches over to the redundant data path.

If a short-term interruption is not permitted, data transfer must be set to IRT High Performance. The uninterruptible MRRT is then automatically set. A SIMOTION controller (or another suitable controller) is required in this case.

The two integrated PROFINET IO interfaces of the Control Units CU320-2 PN can be configured as redundancy clients.

For a CBE20, only the first two ports are capable of establishing a ring topology. Routing between the integrated PROFINET IO interfaces and a CBE20 is not possible.



## 6.9.5 PROFINET system redundancy

### 6.9.5.1 Overview

Redundant systems can be created when using the SINAMICS PROFINET Control Unit CU320-2 PN.

The precondition for system-redundant systems is what is known as an H system. The H-system consists of 2 fault-tolerant controls (master and reserve CPU), which are constantly synchronized via fiber-optic cables. If one controller fails, the other automatically takes on the job. This reduces system downtimes.

#### Preconditions

- SIMATIC controller S7-400H with two PROFINET H-CPU type 41xH
- SINAMICS drive with a PROFINET Control Unit (CU320-2 PN)
- Redundant communication links

#### Benefits

- No system downtime in the case of a controller failure
- Component replacement possible during ongoing operation
- Configuration changes possible during ongoing operation
- Automatic synchronization after replacing components

#### Restrictions

- IRT is not supported.
- No simultaneous operation of Shared Device and system redundancy.
- Maximum 2 cyclic PROFINET connections.
- System redundancy is only possible via the onboard interface of SINAMICS PROFINET Control Unit (CU320-2 PN)
- For the duration of switching from one controller to the other, the setpoints of the last connection remain frozen and valid.

### 6.9.5.2 Design, configuring and diagnostics

#### Configuration

The figure below shows a sample structure of a system-redundant controller with 3 converters.

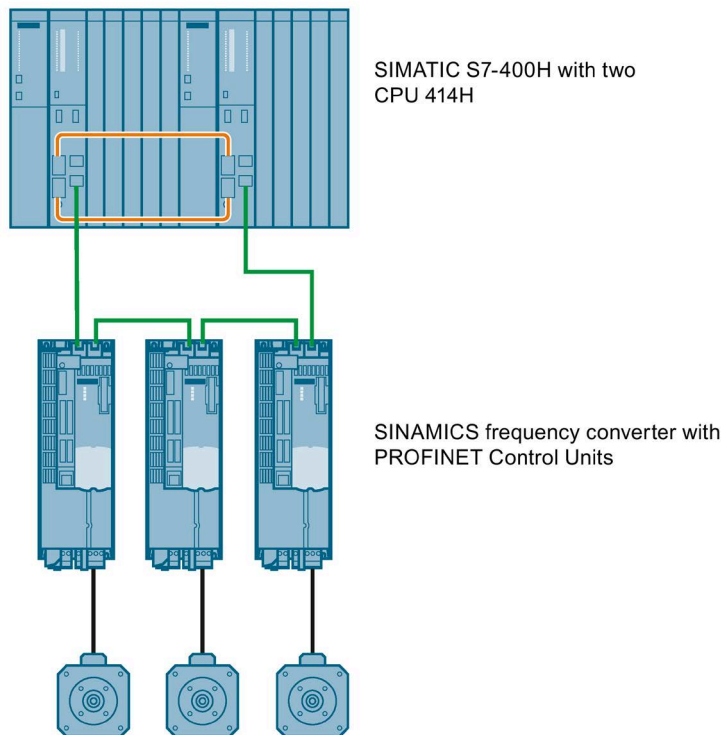


Figure 6-43 System redundancy with converters

#### Configuring

Configuring the redundancy takes place in STEP 7. In the converter, you only have to configure the communication via PROFINET.

System redundancy does not depend on the topology of the system.

#### Diagnostics LEDs

Diagnostics states are shown as follows using LEDs with PROFINET system redundancy:

Color	State	Significance
Green	Continuous light	2 redundancy connections available and setpoints are OK.
Green	Flashing light	Only one redundancy connection is available or setpoints are missing.
Red	Flashing light 2 Hz	No connection or setpoint failure (F01910).

## Additional information

You can find further descriptions of the PROFINET system redundancy online in the following manuals:

- System manual "Fault-tolerant SIMATIC S7-400H systems"  
SIMATICS S7-400H Manual  
(<https://support.industry.siemens.com/cs/ww/en/view/82478488>)
- Application description Configuration examples for S7-400H PROFINET  
SIMATICS S7-400H configuration examples  
(<https://support.industry.siemens.com/cs/ww/en/view/90885106>)

### 6.9.5.3 Faults, alarms and parameters

#### Faults and alarms

- F01910 (N, A) Fieldbus: Setpoint timeout
- A01980 PN: Cyclic connection interrupted
- A01982 PROFINET: Second controller missing
- A01983 PROFINET: System redundancy switchover running

#### Parameter

- r2043.0...2 BO: IF1 PROFIdrive PZD status
- r8843.0...2 BO: IF2 PZD status
- r8936[0...1] PN state of the cyclic connection
- r8937[0...5] PN diagnostics
- r8960[0...2] PN subslot controller assignment
- r8961[0...3] PN IP Address Remote Controller 1
- r8962[0...3] PN IP Address Remote Controller 2

## 6.9.6 PROFlenergy

### 6.9.6.1 Description

PROFlenergy is an energy management system for production plants, based on the PROFINET communication protocol. The functionality is certified in the PROFlenergy profile of the PNO. Drive units which have PROFlenergy functionality, can be certified in an approved laboratory. Certified devices support the PROFlenergy commands and respond accordingly to the requirements and operating states.

SINAMICS supports the PROFlenergy profile V1.1. PROFlenergy commands are acyclically transferred from the controller to the drive with PROFINET data sets. The PROFlenergy commands are transferred using the PROFINET data set 0x80A0.

PROFlenergy data set access is only accepted via connection type "RT connection" or "IRT connection".

If access is made via another type of connection (e.g. a supervisor connection, system redundancy connection), accessing the data set is rejected with error code 0x80B0 "Invalid Index".

There is exactly one PROFlenergy access point (PESAP) and this is on the MAP submodule of the CU drive object.

If access is made via another module/submodule, the data set access is rejected with error code 0x80B0 "Invalid Index".

### PROFlenergy properties of the SINAMICS drive system

SINAMICS drive system devices meet the following requirements:

- Certified for PROFlenergy
- PROFlenergy function unit Class 3
- PROFlenergy energy-saving mode 2

SINAMICS devices support the following PROFlenergy functions:

Functions		SINAMICS support								
		S120 SERVO	S120 VECTOR	S150	G110M	G120D	G120x (otherwise not G120D)	G130	G150	ET200 pro FC-2
Control commands		X	X	X	X	X	X	X	X	X
Query commands		X	X	X	X	X	X	X	X	X
Measured values	ID 34	X	X	X	X	X	X	X	X	X
	ID 166	-	X	X	X	X	X	X	X	X
	ID 200	X	X	X	X	X	X	X	X	X
Measuring value access		X	X	X	X	X	X	X	X	X
PROFlenergy energy-saving mode 1	Shutdown Digital outputs	-	-	-	-	X	-	-	-	-
	Shutdown Encoder	-	-	-	-	X	-	-	-	-
PROFlenergy energy-saving mode 2	Switch on interlocking	X	X	X	X	-	X	X	X	X
Inhibit PROFlenergy		X	X	X	X	X	X	X	X	X
PROFlenergy energy-saving mode in PROFIdrive state S3/S4		-	-	-	X	X	X	X	X	X

Figure 6-44 PROFlenergy functions

### 6.9.6.2 Tasks of PROFlenergy

PROFlenergy is a data interface based on PROFINET. It allows loads to be shut down during non-operational periods in a controlled fashion, and irrespective of the manufacturer and device. Consequently, the process should be given only the energy it actually requires. The majority of the energy is saved by the process, the PROFINET device itself contributes only a few watts to the saving potential.

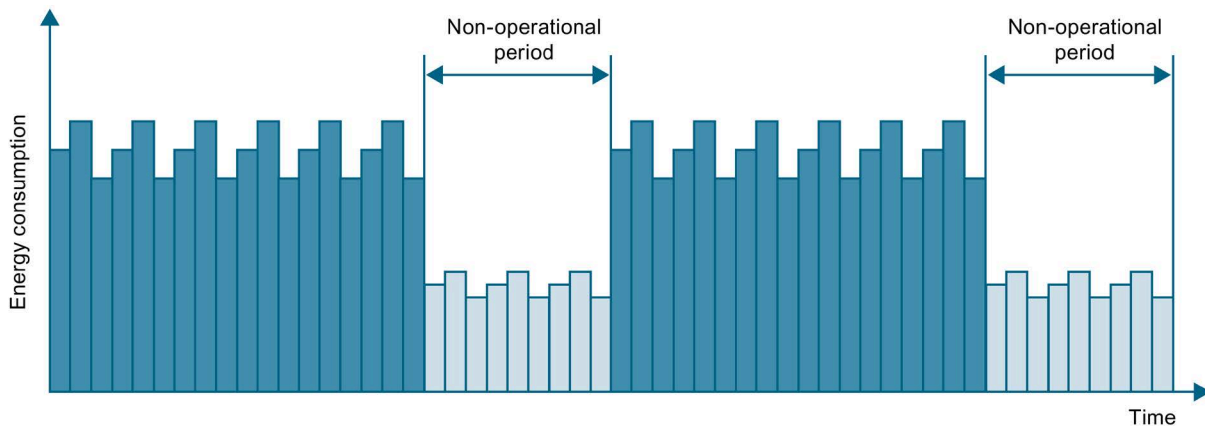


Figure 6-45 Energy saving during pauses with PROFlenergy

The following objectives are reached in detail by temporarily shutting down or stopping unused drives and equipment:

- Lower energy costs.
- Reduction of thermal emissions.
- Longer service life by reducing the effective operating times.
- The drive units provide standardized consumption data for analysis.
- The PROFlenergy state of the participating devices is displayed.
- The PROFlenergy state is available with BICO interconnections for further processing, e.g. to shutdown secondary systems that are not required.

## Basics

The PROFINET devices and the power modules are shut down using special commands in the user program of the PROFINET IO controller. No additional hardware is required; the PROFlenergy commands are interpreted directly by the PROFINET devices.

### 6.9.6.3 PROFlenergy commands

#### Principle of operation

At the start and end of pauses, the plant or system operator activates or deactivates the pause function of the plant or system after which the IO controller sends the PROFlenergy "START\_Pause" / "END\_Pause" command to the PROFINET devices. The device then interprets the content of the PROFlenergy command and switches off or on again.

You can call up device information via additional PROFlenergy functions. You can use these to transfer the "START\_Pause"/"END\_Pause" command in plenty of time.

## PROFenergy control commands

Control command	Description
START_Pause	Switches from the operating state to the energy-saving mode depending on the pause duration. Switches from the energy-saving mode to the operating state depending on the pause duration.
START_Pause_with_time_response	Switches from the operating state to the energy-saving mode and also specifies the transition times in the command response.
END_Pause	Switches from the energy-saving mode to the operating state. Cancels a switch from the operating state to the energy-saving mode.

## PROFenergy query commands

Query command	Description
List_Energy_Saving_Modes	Determines all supported energy-saving modes.
Get_Mode	Determines the energy-saving mode.
PEM_Status	Determines the current PROFenergy status.
PEM_Status_with_CTTO	Determines the actual PROFenergy status, the same as for the command "PEM status" and in addition with the regular transition time to the operating state.
PE_Identify	Determines the supported PROFenergy commands.
Query_Version	Shows the implemented PROFenergy profile.
Get_Measurement_List	This command returns the measured value IDs that can be accessed using the "Get_Measurement_Values" command.
Get_Measurement_List_with_object_number	This command returns the measured value IDs and the associated object number that can be accessed using the "Get_Measurement_Values_with_object_number" command.
Get_Measurement_Values	The command returns the requested measured value using the measured value ID: <ul style="list-style-type: none"> <li>For power measured values: The command addresses the sum of the measured value over all control drive objects.</li> <li>For energy measured values: The command returns the sum of the measured value over all control drive objects.</li> <li>For power factors: This measured value is supported only for a SINAMICS with a control drive object.</li> </ul>
Get_Measurement_Values_with_object_number	This command returns the requested measured values using the measured value ID and the object number. The object number corresponds to the drive object ID. The drive object ID of the Control Unit is used to address the measured values as with "Get_Measurement_Value".

### 6.9.6.4 PROFenergy measured values

Table 6- 31 Overview of the PROFenergy measured values

PROFenergy measured value		PROFenergy accuracy		Unit	SINAMICS source parameters		Value range
ID	Name	Domain	Class		Parameters	Name	
34	Active power	1	12	W	r0032	Active power smoothed	Largest value for r2004 of all drive objects
166	Power factor	1	12	1	r0038	Smoothed power factor	0 ... 1
200	Active energy import	2	11	Wh	r0039[1]	Energy accepted	-

### 6.9.6.5 PROFenergy energy-saving mode

The drive devices support PROFenergy energy-saving mode 2. The following two parameters indicate the effective PROFenergy mode:

- Parameter r5600 indicates the currently active PROFenergy mode.
- Using interconnectable bits, the r5613 parameter indicates whether the PROFenergy energy saving is active.

#### Activating the energy saving mode

The energy-saving mode can be activated or deactivated for the drive devices using the PROFenergy control commands (see also PROFenergy commands).

#### General converter behavior when in the PROFenergy energy-saving mode

- When the PROFenergy energy-saving mode is active, the converter issues alarm A08800.
- When the PROFenergy energy-saving mode is active, the converter does not send any diagnostic alarms.
- When the PROFenergy energy-saving mode is active, then the READY-LED flashes green in the on / off ratio: 500 ms on, 3000 ms off.
- If the bus connection to the control system is interrupted while the converter is in the energy-saving mode, the converter exits the energy-saving mode and resumes normal operation ("ready\_to\_operate").
- The converter changes into normal operation if the control system goes into the stop condition while the converter is in the energy-saving mode.



### 6.9.6.6 PROFlenergy inhibit and pause time

#### Inhibit PROFlenergy

If you set p5611.0 = 1, you inhibit the response of the converter to PROFlenergy control commands. In this case, the converter ignores the PROFlenergy control commands.

#### Pause time

- Minimum pause time: p5602
  - When the pause time, which is sent using command "Start\_Pause", is equal to or greater than the value in p5602[1], then the converter goes into the energy-saving mode.
  - If the pause time is less than p5602[1], the converter ignores the command.
- Maximum duration: p5606

### 6.9.6.7 Function diagrams and parameters

#### Function diagram

FP 2381	PROFlenergy - Control commands / query commands
FP 2382	PROFlenergy - States
FP 2610	Sequence control - Sequencer

#### Parameter

- r5600 Pe hibernation ID
- p5602[0...1] Pe hibernation pause time, minimum
- p5606[0...1] Pe hibernation duration, maximum
- p5611 Pe energy-saving properties, general
- p5612[0...1] Pe energy-saving properties, mode-dependent
- r5613.0...1 CO/BO: Pe energy-saving active/inactive
- p5614 BI: Set Pe switching on inhibited signal source

## 6.9.7 Support of I&M data sets 1...4

### Identification & Maintenance (I&M)

I&M data records contain information for a standardized and simplified identification and maintenance of PROFINET devices. I&M data sets 1...4 contain system-specific information, such as the installation location and date. PROFINET supports I&M data sets 0...4.

I&M data sets 1...3 can be set with the SIMATIC Manager (STEP 7) and also with HW Config (STEP 7).

### I&M parameters

Table 6- 32 Parameter designation, assignment and meaning

I&M parameter designation	Format	Size/ octets	Initialization	SINAMICS parameters	Meaning
I&M 0: IM_SUPPORTED	-	-	-	r8820[62,63]	The parameter indicates which I&M data sets are supported. The value 0x1E indicates that I&M data sets 1...4 are available.
I&M 1: TAG_FUNCTION	Visible string	32	Space 0x20...0x20	p8806[0...31]	Text that identifies the function or task of the device.
I&M 1: TAG_LOCATION	Visible string	22	Space 0x20...0x20	p8806[32...53]	Text that identifies the device location.
I&M 2: INSTALLATION_DATE	Visible string	16	Space 0x20...0x7E	p8807[0...15]	Text with the date of the installation or the initial commissioning of the device. The following date formats are supported: <ul style="list-style-type: none"> <li>• YYYY-MM-DD</li> <li>• YYYY-MM-DD hh:mm                             <ul style="list-style-type: none"> <li>– YYYY: Year</li> <li>– MM: Month 01...12</li> <li>– DD: Day 01...31</li> <li>– hh: Hours 00...23</li> <li>– mm: Minutes 00...59</li> </ul> </li> </ul> The separators between the individual specifications, i.e. hyphen '-', blank ' ' and colon ':', must be entered.
I&M 3: DESCRIPTOR	Visible string	54	Space 0x20...0x20	p8808[0...53]	Text with any comments or notes.

I&M parameter designation	Format	Size/ octets	Initialization	SINAMICS parameters	Meaning
I&M 4: SIGNATURE	Octet string	54	Space 0x00...0x00	p8809[0...53]	<p>The parameter can be filled automatically by the system, in which case it contains a standard value, namely, a functional check signature for the change tracking by Safety Integrated. The check signature has the following format:</p> <ul style="list-style-type: none"> <li>• The first four octets (0...3) contain the content of parameter r9781 index 0: "SI change monitoring checksum (Control Unit)".</li> <li>• The second four octets (4...7) contain the content of parameter r9782 index 0: "SI change monitoring time stamp (Control Unit)".</li> <li>• The remainder (octets 8...53) contains zeroes.</li> </ul>

The I&M data sets 1...4 are stored permanently in parameters p8806...p8809. Significant properties of these four parameters:

- They can be displayed in the STARTER expert list.
- The SINAMICS "Reset parameter" (p0976 = 1, p0970 = 1) function does not have any effect on the content of parameters.
- I&M data sets are not changed when the alternative parameter sets are stored or loaded. The transfer of parameter sets between a memory card and non-volatile device memory does not have any effect on the I&M data sets.

## Parameters

- p8805[0...1] Identification and Maintenance configuration
- p8806[0...53] Identification and Maintenance 1
- p8807[0...15] Identification and Maintenance 2
- p8808[0...53] Identification and Maintenance 3
- r8809[0...53] Identification and Maintenance 4

### 6.9.8 Further information about communication via PROFINET IO

#### Further information about communication via PROFINET IO

For more information about communication via PROFINET IO, refer to "Communication via PROFINET IO" in the accompanying "SINAMICS S120 Function Manual Communication".

## 6.10 Communication via SINAMICS Link

### 6.10.1 Basic principles of SINAMICS Link

SINAMICS Link allows data to be directly exchanged between a maximum of 64 Control Units (CU320-2 PN and CU320-2 DP). The participating Control Units must be equipped with the CBE20 supplementary module. Other nodes cannot be integrated into this communication.

Possible applications include e.g.:

- Torque distribution for n drives
- Setpoint cascading for n drives
- Load distribution of drives coupled through a material web
- Master/slave function for infeed units

#### Preconditions

The following preconditions must be fulfilled to operate SINAMICS Link:

- r0108.31: Function module "PROFINET CBE20" must be activated.
- r2064[1]: The bus cycle time ( $T_{dp}$ ) must be an integer multiple of p0115[0] (current controller cycle).
- r2064[2]: The master cycle time ( $T_{mapc}$ ) must be an integer multiple of p0115[1] (speed control cycle).
- p0115[0]: The current controller clock cycle must be set to 250  $\mu$ s or 500  $\mu$ s. One clock cycle with 400  $\mu$ s is not permitted. For 400  $\mu$ s, alarm A01902 is output with alarm value "4". As countermeasure, set the current controller cycle with p0115[0] to 500  $\mu$ s.

#### Send and receive data

The SINAMICS Link telegram contains 32 indices (0...31) for the process data (PZD1...32). Each PZD is precisely 1 word long (= 16 bits). Slots that are not required are automatically populated with "0". There is always a fixed assignment between the index and PZD: The index  $i$  always corresponds to PZD  $i+1$ .

Slot	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
PZD	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

SINAMICS Link telegram content, Part 1

Slot	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
PZD	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

SINAMICS Link telegram content, Part 2

Each transfer cycle, every SINAMICS Link node can send 1 telegram with 32 PZD. Each node receives all of the telegrams that are sent. For each transfer cycle clock, a node can select and process up to 32 PZD from all telegrams that have been received. Single words and double words can be sent and received. You must write double words in two consecutive PZD.

Limitations:

- In a telegram, a PZD may only be sent and received once. If a PZD occurs more than once in a telegram, then Alarm A50002 or A50003 is output.
- Reading in own send data is not possible; otherwise an appropriate alarm is output.
  - A50006: It is parameterized that own data sent can be received. This is not permitted.
  - A50007: The send telegram word is larger than possible in the project.
  - A50008: The receive telegram word is larger than possible in the project.
- The maximum number of PZD that can be received and sent also depends on the drive object. The number of PZDs that can be evaluated corresponds to communication according to PROFIdrive; however, for SINAMICS Link, it is limited to a maximum of 32 PZDs.
- If, as a result of a project download, parameters of the CBE20 are change, then alarm A08531 is output. In this case, a POWER ON is required to activate the values.

### Transmission time

With SINAMICS Link, a transmission time of up to 500  $\mu$ s is possible (with a max. controller cycle of 500  $\mu$ s; synchronous bus cycle of 500  $\mu$ s).

### Bus cycle and number of nodes

You can operate the bus cycle of the SINAMICS Link with the current controller cycle, either synchronized or non-synchronized.

- You set synchronized operation with p8812[0] = 1. A maximum of 64 nodes can then communicate with one another via SINAMICS Link. To do so, set the maximum number of nodes with p8811 (project selection):

Number of nodes/ project no.	Number of PZD	Bus cycle ( $\mu$ s)
64	16	1000 or 2000
16	16	500
12	24	500
8	32	500

- A maximum of 64 participants can communicate with one another via SINAMICS Link.

If you change one of the parameters p8811, p8812, p8835 or p8836, then you must carry out a POWER ON to accept the settings.

## 6.10.2 Topology

Only a line topology with the following structure is permitted for SINAMICS Link.

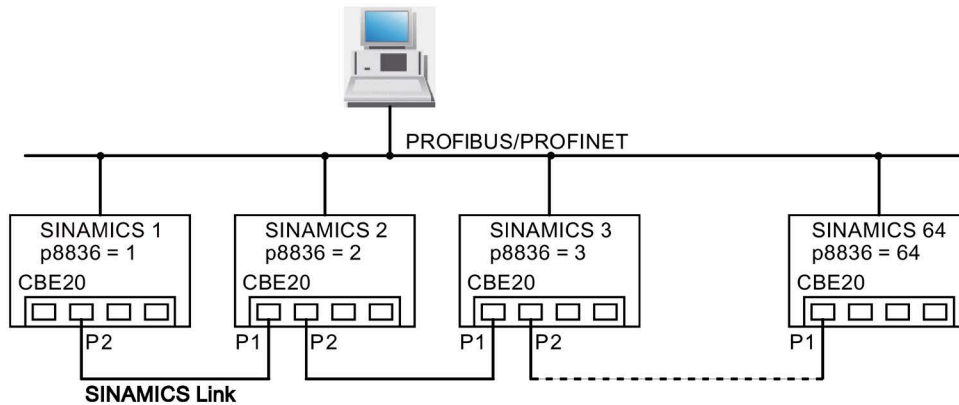


Figure 6-46 Maximum topology

## Features

- The CBE20 can be assigned to IF1 or IF2 when SINAMICS Link is used.

The interface, assigned to the CBE20, must be switched into synchronous operation if  $p8812[0] = 1$  is set.

You must also make the following parameter settings in order to assign, e.g. IF1 to SINAMICS Link:

- For IF1:  $p8839[0] = 2$  (COMM BOARD)
- For IF2:  $p8839[1] = 1$  (Control Unit onboard)

The following data is applicable for the case (IF1  $\hat{=}$  SINAMICS Link):

- The number of the respective node must be entered manually in parameter  $p8836$ . A different number must be assigned for each node. Enter the numbers in ascending order, starting with "1".
- If  $p8836$  is set to 0, the nodes and the complete following line is shut down for SINAMICS Link.
- Gaps in the numbering are not permitted, as then SINAMICS Link would not function.
- The node with the number 1 is automatically the sync master of the communication link.
- The ports of the CBE20 must be interconnected strictly in accordance with the above diagram. You must always connect port 2 (P2) of node  $n$  with port 1 (P1) of node  $n + 1$ .
- In the "SINAMICS Link" mode, ports 3 and 4 of the CBE20 can only be used in conjunction with the STARTER commissioning tool.

## Corresponding parameters for IF1 or IF2

Use different parameters for configuring, depending on which interface SINAMICS Link is assigned:

Table 6- 33 Corresponding parameters for IF1 or IF2

Parameters	IF1	IF2
Setting of the processing mode for PROFIdrive STW1.10 "Control by PLC".	p2037	p8837
Connector output to interconnect the PZD (setpoints) received from the fieldbus controller in the word format.	r2050	r8850
Selects the PZD (actual values) to be sent to the fieldbus controller in the word format.	p2051	p8851
Displays the PZD (actual values) sent to the fieldbus controller in the word format.	r2053	r8853
Connector output to interconnect the PZD (setpoints) received from the fieldbus controller in the double word format.	r2060	r8860
Selects the PZD (actual values) to be sent to the fieldbus controller in the double word format.	p2061	p8861
Displays the PZD (actual values) sent to the fieldbus controller in the double word format.	r2063	r8863

## 6.10.3 Configuring and commissioning

### Commissioning

When commissioning, proceed as follows:

1. Set the Control Unit parameter p0009 = 1 (device configuration).
2. Set the Control Unit parameter p8835 = 3 (SINAMICS Link).
3. Using p8839, define which interface should be used (for example for IF1: p8839[0] = 2).
4. If SINAMICS Link is assigned to IF1, set parameter p2037 of the drive objects to 2 (do not freeze setpoints).

If SINAMICS Link was assigned IF2, then p8837 must be used for the setting.

5. Assign the nodes in parameter p8836 to the SINAMICS Link node number.

The first Control Unit is always assigned the number 1. Node number 0 means that for this Control Unit SINAMICS Link has been shut down. Observe the specifications under "Topology".

6. Check and/or correct the following parameters:
  - p8811 must be identical for all nodes
  - p8812[1] must be identical for all nodes
  - p8812[0] may be different for local nodes
7. Set the Control Unit parameter p0009 = 0 (ready).
8. Then execute a "Copy RAM to ROM".
9. Carry out a POWER ON (switch off the Control Unit and switch on again).

**Sending data**

**Note**

The parameters listed in the following description refer to the assignment of SINAMICS Link to IF1. If you assigned SINAMICS Link to IF2, then you find the corresponding parameters in the previous chapter.

In this example, the first "Control Unit 1" node has two drive objects, "Drive 1" and "Drive 2". Proceed as follows to send data:

1. If SINAMICS Link is assigned to IF1, then for each drive object, in its associated parameter p2051[0...31], you define which data (PZDs) should be sent.  
 If SINAMICS Link was assigned IF2, then p8851 must be used for the setting. The data is simultaneously reserved in the send slot of the p8871[0...31].
2. Enter the double words in p2061[x].  
 Double word data is simultaneously written to p8861[0...31].
3. For each drive object, allocate the send parameters in p8871[0...31] to a send slot of its own node.

Table 6- 34 Compile send data of drive 1 (DO2)

p2051[x] Index	p2061[x] Index	Contents	From parameter	Telegram word p8871
0	-	ZSW1	r0899	1
-	1	Actual speed value part 1	r0061[0]	2
-		Actual speed value part 2		3
-	3	Actual torque value part 1	r0080	4
-		Actual torque value part 2		5
5	-	Actual fault code	r2131	6
6	-	0	0	0
...	-	...	-	...
15	-	0	0	0
...	-	...	-	...
31	-	0	0	0



Table 6- 35 Compile send data of drive 2 (DO3)

p2051[x] Index	p2061[x] Index	Contents	From pa- rameter	Slots in the send buffer p8871[x]	
				x	Telegram word
-	-	-	-	0...5 <sup>1)</sup>	0
0	-	ZSW1	r0899	6	7
-	1	Actual speed value part 1	r0061[0]	7	8
-		Actual speed value part 2		8	9
-	3	Actual torque value part 1	r0080	9	10
-		Actual torque value part 2		10	11
5	-	Actual fault code	r2131	11	12
6	-	0	0	12	0
...		...		...	...
15	-	0	0	15	0
...		...		...	...
31	-	0	0	31	0

<sup>1)</sup> 0...5 here remain free, as they are already assigned by DO2.

Table 6- 36 Compile send data of Control Unit 1 (DO1)

p2051[x] Index	p2061[x] Index	Contents	From pa- rameter	Slots in the send buffer p8871[x]	
				x	Telegram word
-	-	-	-	0...11 <sup>1)</sup>	0
0	-	Control word, faults/alarms	r2138	12	13
-	1	Missing enables part 1	r0046	13	14
-		Missing enables part 2		14	15
15	-	0	0	15	0
...		...		...	...
31	-	0	0	31	0

<sup>1)</sup> 0...11 here remain free, as they are already assigned by DO2 and DO3.

Send slots PZD 16 to 31 are not required for this telegram and are therefore filled with a zero.

1. For double words (e.g. 1 + 2), assign two consecutive send slots, e.g.  
p2061[1] => p8871[1] = PZD 2 and p8871[2] = PZD 3.
2. Enter the following PZD into the next parameter slots of p2051[x] or p2061[2x].
3. Populate the unused slots of p8871[0...31] with zeros.
4. The sequence of the PZDs in the send telegram of this node are defined in parameter p8871[0...31] by the entries in the required slots.

## Receiving data

The sent telegrams of all nodes are simultaneously available at the SINAMICS Link. Each telegram has a length of 32 PZD. Each telegram has a marker of the sender. You select those PZD that you want to receive for the relevant node from all telegrams. You can process a maximum of 32 PZD.

### Note

#### The first word of the receive data

If you have not deactivated the evaluation of bit 10 with  $p2037 = 2$ , the first word of the receive data (PZD 1) must be a control word, where bit 10 = 1 is set.

In this example, Control Unit 2 receives selected data from the telegram of Control Unit 1. Proceed as follows to receive data:

1. In parameter  $p8872[0...31]$  enter the address of the node for which you want to read one or more PZDs (e.g.  $p8872[3] = 1 \rightarrow$  from node 1, read in PZD 4,  $p8872[15] = 0 \rightarrow$  do not read in PZD 16).
2. After setting the parameters, using parameter  $r2050[0...31]$  or  $r2060[0...31]$  you can read out the values.

Table 6- 37 Receive data for Control Unit 2

From the sender		Receiver					
Transfer from	Phone Word <sup>1)</sup> $p8871[x]$	Address $p8872[x]$	Receive buffer $p8870[x]$	Data transferred in		Parameters	Contents
				$r2050[x]$	$r2060[x]$		
$p2051[0]$	0	1	PZD 1	0	-	r0899	ZSW1
$p2061[1]$	1	1	PZD 2	-	1	r0061[0]	Actual speed value part 1
	2	1	PZD 3	-		r0061[0]	Actual speed value part 2
$p2061[3]$	3	1	PZD 4	-	3	r0080	Actual torque value part 1
	4	1	PZD 5	-			Actual torque value part 2
$p2051[5]$	5	1	PZD 6	5	-	r2131	Actual fault code
$p2051[4]$	6	1	PZD 7	6	-	r0899	ZSW1
$p2061[5]$	7	1	PZD 8	-	7	r0061[0]	Actual speed value part 1
	8	1	PZD 9	-			Actual speed value part 2
$p2061[6]$	9	1	PZD 10	-	9	r0080	Actual torque value part 1
	10	1	PZD 11	-			Actual torque value part 2
$p2051[7]$	11	1	PZD 12	11	-	r2131	Actual fault code
$p2051[8]$	12	1	PZD 13	12	-	2138	Control word, faults/alarms
$p2061[9]$	13	1	PZD 14	-	13	r0046	Missing enables part 1
	14	1	PZD 15	-			Missing enables part 2
-	15	0	PZD 16	15	-	0	Empty
...	...	...	...	...	...	...	...
-	31	0	PZD 32	31	0	0	-

<sup>1)</sup> Tel. word = telegram word

**Note**

For double words, two PZD must be read in succession. To do this, read in a 32 bit setpoint, which is on PZD 2 + PZD 3 of the telegram of node 2. Emulate this setpoint on PZD 2 + PZD 3 of node 1:

p8872[1] = 2, p8870[1] = 2, p8872[2] = 2, p8870[2] = 3

---

**Activating the SINAMICS Link**

To activate SINAMICS Link connections, perform a POWER ON for all nodes.

Without POWER ON, the following can be changed:

- The assignments of p2051[x]/2061[2x] and the links of the read parameters r2050[x]/2060[2x]
- Changes to parameters p8870, p8871 and p8872. Here, SINAMICS Link connections can also be activated using p8842 = 1.

**Settings for cabinet units with rated pulse frequency 1.25 kHz**

For the following cabinet units with a rated pulse frequency of 1.25 kHz, in addition parameter p0115[0] must be set from 400 µs to 250 µs or 500 µs:

- 3 AC 660 to 690 V: All cabinet units

Generally, the following conditions must be met:

1. r2064[1] bus cycle time (T<sub>dp</sub>) must be an integer multiple of p0115[0] (current controller clock cycle).
2. r2064[2] master cycle time (T<sub>mapc</sub>) must be an integer multiple of p0115[1] (speed controller cycle).

## 6.10.4 Example

### Task

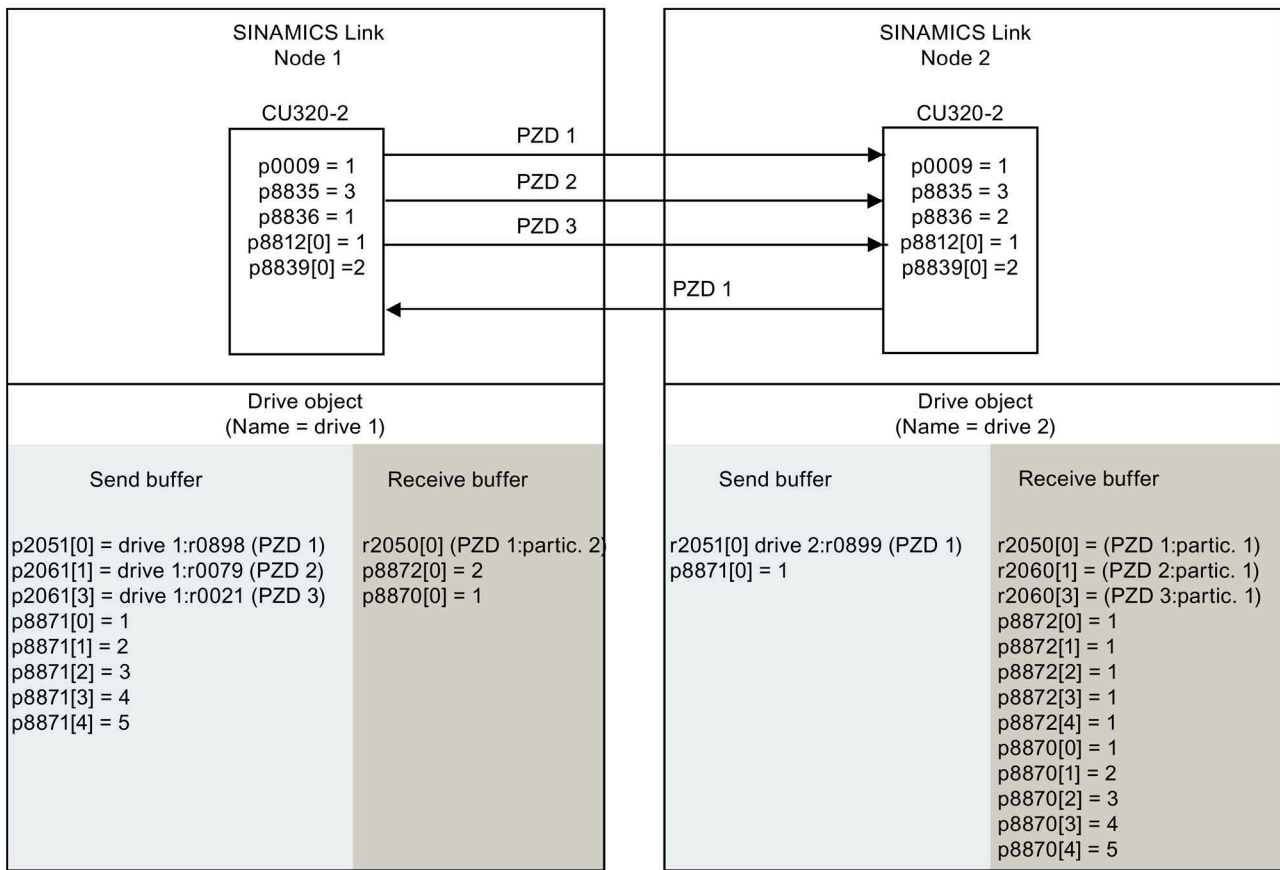
Configure SINAMICS Link for two nodes and transfer the following values:

- Send data from node 1 to node 2
  - r0898 CO/BO: Control word, sequence control, drive 1 (1 PZD), in the example PZD 1
  - r0079 CO: Total torque setpoint (2 PZD), in the example PZD 2
  - r0021 CO: Smoothed actual speed (2 PZD), in the example PZD 3
- Send data from node 2 to node 1
  - r0899 CO/BO: Status word, sequence control, drive 2 (1 PZD), in the example PZD 1
- IF1 is used for SINAMICS Link.

### Procedure

1. For all nodes, set p0009 = 1 to change the device configuration.
2. For all CBE20 nodes, set the "SINAMICS Link" mode using p8835 = 3.
3. Limit the maximum number of nodes for all nodes with p8811 = 8. By setting p8811, parameter p8812[1] is preassigned, and parameter p8836, if necessary, is corrected.
4. Assign the node numbers for the devices involved:
  - Node 1 ( $\hat{=}$  device 1): p8836 = 1
  - Node 2 ( $\hat{=}$  device 2): p8836 = 2
5. Set all CBE20 to the isochronous mode by setting p8812[0] = 1.
6. Make the following interface setting for all nodes:
  - For IF1: p8839[0] = 2 (COMM BOARD)
  - For IF2: p8839[1] = 1 (Control Unit onboard)
7. For both nodes p0009 = 0, carry out a "Copy RAM to ROM" followed by a POWER ON in order to activate the modified firmware versions and the new settings in the CBE20.

8. Define the send data for node 1:
  - Define the PZD that participant 1 should send:
    - p2051[0] = drive1:r0898 (PZD 1)
    - p2061[1] = drive1:r0079 (PZD 2 + PZD 3)
    - p2061[3] = drive1:r0021 (PZD 4 + PZD 5)
  - Place these PZD in the send buffer (p8871) of node 1:
    - p8871[0] = 1 (r0898)
    - p8871[1] = 2 (r0079 1st part)
    - p8871[2] = 3 (r0079 2nd part)
    - p8871[3] = 4 (r0021 1st part)
    - p8871[4] = 5 (r0021 2nd part)
9. Define the receive data for node 2:
  - Specify that the data placed in the receive buffer p8872 of node 2 in locations 0 to 4 is received from node 1:
    - p8872[0] = 1
    - p8872[1] = 1
    - p8872[2] = 1
    - p8872[3] = 1
    - p8872[4] = 1
  - Specify that PZD1, PZD2 and PZD3 of node 1 are to be placed in the receive buffer p8870 of node 2 in locations 0 to 4:
    - p8870[0] = 1 (PZD1)
    - p8870[1] = 2 (PZD2 1st part)
    - p8870[2] = 3 (PZD2 2nd part)
    - p8870[3] = 4 (PZD3 1st part)
    - p8870[4] = 5 (PZD3 2nd part)
  - r2050[0], r2060[1] and r2060[3] subsequently contain (after step 13) the values of PZD 1, PZD 2 and PZD 3 of node 1.
10. Define the send data for node 2:
  - Specify the PZD that node 2 should send:
    - p2051[0] = drive1:r0899 (PZD length is 1 word)
  - Place this PZD in the send buffer (p8871) of node 2:
    - p8871[0] = 1
11. Define the receive data for node 1:
  - Specify the data that should be placed in the receive buffer p8872 of node 1 in location 0, received from node 2:
    - p8872[0] = 2
  - Define that PZD1 of node 2 is saved in the receive buffer p8870 of node 1 in location 0:
    - p8870 [ 0] = 1
  - r2050[0] subsequently contains (after step 13) the value of PZD 1 of node 2.
12. At the two nodes carry-out a "Copy RAM to ROM" to backup the parameterization and the data.
13. Set p8842 = 1, to activate parameters p8870, p8871 and p8872.



r0021: Actual speed smoothed  
 r0079: Total torque setpoint  
 r0898: Control word sequence control drive 1  
 r0899: Status word sequence control drive 2

Figure 6-47 SINAMICS Link: Configuration example

### 6.10.5 Communication failure when booting or in cyclic operation

If at least one SINAMICS Link node does not correctly run up after commissioning or fails in cyclic operation, then alarm A50005 is output to the other nodes: "Sender was not found on SINAMICS Link".

The alarm value contains the number of the sender that was not found. The alarm is automatically canceled after the fault has been resolved at the node involved.

If several nodes are involved, the message occurs a multiple number of times consecutively with different node numbers. The alarm is automatically canceled after the fault has been resolved at the nodes involved.

When a node fails in cyclic operation, in addition to alarm A50005, fault F08501 is output: "COMM BOARD: Setpoint timeout".

Fault F08501 is not triggered at node 1. This node should be used for specifying setpoint values to other nodes.

### 6.10.6 Transmission times for SINAMICS Link

Transmission times at a communication cycle of 1 ms

p2048 or p8848 = 1 ms

Bus cycle [ms]	Transfer times [ms]			
	Sync both	Sync send	Sync receive	Async both
0.5	1.0	1.5	1.3	1.6
1.0	1.5	2.1	2.1	2.2
2.0	3.0	3.6	3.1	2.8

Transmission times at a communication cycle of 4 ms

p2048 or p8848 = 4 ms

Bus cycle [ms]	Transfer times [ms]			
	Sync both	Sync send	Sync receive	Async both
0.5	1.0	3.0	2.8	4.6
1.0	1.5	3.6	3.6	5.2
2.0	3.0	5.1	4.6	5.8

## 6.10.7 Function diagrams and parameters

### Function diagram

FP 2197	Control Unit communication - SINAMICS Link overview (r0108.31 = 1, p8835 = 3)
FP 2198	Control Unit communication - SINAMICS Link configuration (r0108.31 = 1, p8835 = 3)
FP 2199	Control Unit communication - SINAMICS Link receive data (r0108.31 = 1, p8835 = 3)
FP 2200	Control Unit communication - SINAMICS Link send data (r0108.31 = 1, p8835 = 3)

### Parameters

- r0108.31: Drive objects function module PROFINET CBE20
- p0115 Sampling time for additional functions
- p2037 IF1 PROFIdrive STW1.10 = 0 mode
- r2050[0...31] CO: IF1 PROFIdrive PZD receive word
- p2051[0...31] CI: IF1 PROFIdrive PZD send word
- r2060[0...30] CO: IF1 PROFIdrive PZD receive double word
- p2061[0...30] CI: IF1 PROFIdrive PZD send double word
- p8811 SINAMICS Link project selection
- p8812[0...1] SINAMICS Link cycle settings
- p8835 CBE20 firmware selection
- p8836 SINAMICS Link node address
- p8839[0...1] PZD interface hardware assignment
- p8870[0...31] SINAMICS Link PZD receive word
- p8871[0...31] SINAMICS Link PZD send word
- p8872[0...31] SINAMICS Link PZD receive address



## 6.11 Communication via EtherNet/IP

### 6.11.1 Overview

EtherNet/IP (short: EIP) is real-time Ethernet, and is mainly used in automation technology.

The EtherNet Industrial Protocol (EtherNet/IP) is an open standard for industrial networks. EtherNet/IP is used to transmit cyclic I/O data and acyclic parameter data. EtherNet/IP was developed by Rockwell Automation and the Open Device-Net Vendor Association (ODVA), and standardized in the series of international IEC 61158 standards. EtherNet/IP uses the basis technology of Ethernet TCP/IP, which has been well proven in practice. Ethernet twisted-pair cables or fiber-optic cables are used as data transmission medium. The CIP protocol (Common Industrial Protocol) – known from DeviceNet and ControlNet – is used as application protocol.

#### General information about communication

Communication via EIP requires the following interfaces:

- The Ethernet interface (X1400) of the Ethernet CBE20 option board
- The onboard PROFINET interface (X150) at the CU320-2 PN Control Units

The interfaces are either individually available at the different Control Units, or together at one Control Unit (e.g. at a CU320-2 PN with CBE20).

The following table provides an overview of the configurable Control Units and interfaces that are available for communication via EIP.

Table 6- 38 Configurable Control Units and interfaces

Control Unit	EIP via X150	EIP via X1400 (CBE20)
CU320-2 PN	Yes	No
CU320-2 PN with CBE20 (optional)	Yes	Yes
CU320-2 DP with CBE20	No	Yes

Independent of the configuration, only one interface can be assigned for communication via EIP. A simultaneous connection via the interfaces X150 and X1400 is not possible and is acknowledged with alarm A08555(1).

### 6.11.2 Connect drive device to Ethernet/IP

In order that your drive can be connected to a control system via Ethernet, your control system requires a generic I/O module for cyclic communication via Ethernet/IP. You manually create this generic I/O module in the control system.

### Create generic I/O module and connect the drive to the control system

To connect the drive to a control system via Ethernet, proceed as follows:

1. Connect the drive to the control system via an Ethernet cable.
2. In your control, create a generic I/O module with EtherNet/IP functionality:
  - Insert a new module in your control system.
  - Select a generic Ethernet module from the selection.
  - Enter the network parameters for the newly inserted module (IP address, subnet mask, standard gateway, station name).
3. For the generic I/O module, enter the lengths of the process data for cyclic communication, which you have selected in STARTER, r2067[0] (input), r2067[1] (output), for example: Standard telegram 2/2.

In the STARTER telegram configuration, read out the length of the process data for all drive objects (for input and output) - and add them (see PROFIdrive "Telegrams and process data (Page 316)").

- Input 101:  
Here, enter the sum of all input process data of your drive objects from STARTER.
  - Output 102:  
Here, enter the sum of all output process data of your drive objects from STARTER.
  - Configuration 103:  
Here, you generally enter the value 0 or 1.
  - 4 ms is supported as the minimum value for RPI (Requested Packet Interval).
4. In STARTER, set the same values for IP address, subnet mask, standard gateway and the name station as in the control system (see Chapter "Configuring communication (Page 393)").

Furthermore, you can find a detailed description of how to create a generic I/O module on the following Internet page:

(Creating a generic I/O module

<https://support.industry.siemens.com/cs/ww/en/view/92045369>)).

### Routing and shielding Ethernet cables

You can find information on how to do this on the Internet page of "Open Device-Net Vendor Association (ODVA)":

Ethernet IP (<https://www.odva.org/Publication-Download>).

### Commissioning the drive in an EtherNet/IP network

To commission the drive, connect the drive via an interface (depending on the Control Unit type: PROFIBUS, PROFINET, Ethernet, etc) with your computer, on which STARTER with version  $\geq 4.5$  is installed.

## 6.11.3 Configuring communication

### Requirements for communication

Check the communication settings using the following questions. If you answer "Yes" to the questions, you have correctly set the communication settings and can control the drive via the fieldbus.

- Is the drive correctly connected to EtherNet/IP?
- Has a generic module been created in your control system?
- Have the bus interface and IP address been correctly set?
- Have the signals that the drive and the control system exchange been correctly interconnected?

### Configuring EtherNet/IP via the onboard PROFINET X150 interface

To communicate with a higher-level control via EtherNet/IP, make the following settings for the PROFINET interface at the CU320-2 PN:

1. With p2030 = 10, set the firmware version of "EtherNet/IP".
2. Set the IP address using p8921.  
You can find the currently valid address in r8931.
3. Set the subnet mask using p8923.  
You can find the currently valid subnet mask in r8933.
4. Set the standard gateway using p8922.  
You can find the currently valid standard gateway in r8932.
5. Set the station name using p8920.  
You can find the currently valid station name in r8930.
6. Select the setting "Save and activate configuration" as interface configuration using p8925 = 2.
7. Save the data using command "Copy RAM to ROM".  
Then switch off the drive power supply.
8. Carry out a POWER ON (switch off the Control Unit and switch on again).  
Wait until all LEDs on the drive are dark before switching on. Your settings become active after switching on.

### Configuring EtherNet/IP via interface X1400 at the CBE20

To communicate with a higher-level control via EtherNet/IP, make the following settings for the CBE20:

1. With p8835 = 4, set the firmware version of "EtherNet/IP".
2. Using p8941, set the IP address for the CBE20.  
You can find the currently valid address in r8951.

3. Set the subnet mask using p8943.  
You can find the currently valid subnet mask in r8953.
4. Set the standard gateway using p8942.  
You can find the currently valid standard gateway in r8952.
5. Set the station name using p8940.  
You can find the currently valid station name in r8950.
6. Select the setting "Save and activate configuration" as interface configuration using p8945 = 2.
7. Save the data using command "Copy RAM to ROM".  
Then switch off the drive power supply.
8. Carry out a POWER ON (switch off the Control Unit and switch on again).  
Wait until all LEDs on the drive are dark before switching on. Your settings become active after switching on.

### 6.11.4 Supported objects

#### Overview

Object class		Object name	Objects required	SINAMICS objects
hex	dec			
1 hex	1	Identity object	x	-
4 hex	4	Assembly Object	x	-
6 hex	6	Connection Management Object	x	-
32C hex	812	Siemens Drive Object	-	x
32D hex	813	Siemens Motor Data Object	-	x
F5 hex	245	TCP/IP Interface Object <sup>1)</sup>	x	-
F6 hex	246	Ethernet Link Object <sup>1)</sup>	x	-
300 hex	768	Stack Diagnostic Object	-	x
302 hex	770	Adapter Diagnostic Object	-	x
303 hex	771	Explicit Messages Diagnostic Object	-	x
304 hex	772	Explicit Message Diagnostic List Object	-	x
401 hex	1025	Parameter object	-	x
402 hex ... 43E hex	1026 ... 1086	Parameter object	-	x

<sup>1)</sup> These objects are part of the Ethernet/IP system management.

For Assembly Object "4 hex" you define the data length. Assembly Object is assigned a cycle in the control system.

## Identity Object, Instance Number: 1 hex

## Supported services

Class	• Get Attribute all	Instance	• Get Attribute all
	• Get Attribute single		• Get Attribute single
			• Reset

Table 6- 39 Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

Table 6- 40 Instance Attribute

No.	Service	Type	Name	Value/explanation
1	get	UINT16	Vendor ID	1251
2	get	UINT16	Device Type - Siemens Drive	0C hex
3	get	UINT16	Product code	r0964[1]
4	get	UINT16	Revision	
5	get	UINT16	Status	See the following table
6	get	UINT32	Serial number	Bits 0 ... 19: consecutive number; bits 20 ... 23: Production identifier bits 24 ... 27: Month of manufacture (0 = Jan, B = Dec) Bits 28 ... 31: Year of manufacture (0 = 2002)
7	get	Short String	Product name	Max. length 32 bytes

Table 6- 41 Explanation for No. 5 of the previous table

Byte	Bit	Name	Description
1	0	Owned	0: Converter is not assigned to a controller 1: Converter is assigned to a controller
	1		Reserved
	2	Configured	0: EtherNet/IP basic settings 1: Modified EtherNet/IP settings
	3		Reserved
	4 ... 7		Extended Device Status 0: Self-test or status not known 1: Firmware update active 2: At least one I/O connection with error 3: No I/O connections 4: Incorrect configuration in the ROM 5: Fatal fault 6: At least one I/O connection is active 7: All I/O connections in the quiescent state 8 ... 15: Reserved
2	8 ... 11		Not used
	12 ... 15		Reserved

**Assembly Object, Instance Number: 4 hex**

**Supported services**

- |       |  |          |  |
|-------|--|----------|--|
| Class | <ul style="list-style-type: none"> <li>• Get Attribute single</li> </ul> | Instance | <ul style="list-style-type: none"> <li>• Get Attribute single</li> <li>• Set Attribute single</li> </ul> |
|-------|--|----------|--|

Table 6- 42 Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

Table 6- 43 Instance Attribute

No.	Service	Type	Name	Value/explanation
3	get	Array of UINT8	Assembly	1 byte array

**Connection Management Object, Instance Number: 6 hex**

**Supported services**

- |       |   |          |   |
|-------|---|----------|---|
| Class | <ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Get Attribute single</li> </ul> | Instance | <ul style="list-style-type: none"> <li>• Forward open</li> <li>• Forward close</li> <li>• Get Attribute single</li> <li>• Set Attribute single</li> </ul> |
|-------|---|----------|---|

Table 6- 44 Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

Table 6- 45 Instance Attribute

No.	Service	Type	Name	Value/explanation
1	get	UINT16	OpenReqs	Counters
2	get	UINT16	OpenFormat Rejects	Counters
3	get	UINT16	OpenResource Rejects	Counters
4	get	UINT16	OpenOther Rejects	Counters
5	get	UINT16	CloseReqs	Counters
6	get	UINT16	CloseFormat Rejects	Counters
7	get	UINT16	CloseOther Rejects	Counters
8	get	UINT16	ConnTimeouts	Counters Number of bus errors

## Siemens Drive Object, Instance Number: 32C hex

## Supported services

- |       |  |          |  |
|-------|--|----------|--|
| Class | <ul style="list-style-type: none"> <li>• Get Attribute single</li> </ul> | Instance | <ul style="list-style-type: none"> <li>• Get Attribute single</li> <li>• Set Attribute single</li> </ul> |
|-------|--|----------|--|

Table 6- 46 Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

Table 6- 47 Instance Attribute

No.	Service	Name	Value/explanation
2	get, set	Commissioning state	p0010: commissioning parameter filter
3 ... 18	get	STW1	STW1 bit-by-bit access: Attr. 3 = STW1.0 Attr. 18 = STW1.15
19	get	Main setpoint	Main setpoint
20 ... 35	get	ZSW1	ZSW1 bit-by-bit access: Attr. 20 = ZSW1.0 Attr. 35 = ZSW1.15
36	get	Actual Frequency	Main actual value (actual frequency)
37	get, set	Ramp Up Time	p1120[0]: ramp-function generator ramp-up time
38	get, set	Ramp Down Time	p1121[0]: ramp-function generator ramp-down time
39	get, set	Current Limit	p0640[0]: Current limit
40	get, set	Frequency MAX Limit	p1082[0]: Maximum speed
41	get, set	Frequency MIN Limit	p1080[0]: minimum speed
42	get, set	OFF3 Ramp Down Time	p1135[0]: OFF3 ramp-down time
43	get, set	PID Enable	p2200[0]: Technology controller enable
44	get, set	PID Filter Time Constant	p2265: Technology controller actual value filter time constant
45	get, set	PID D Gain	p2274: technology controller differentiation time constant
46	get, set	PID P Gain	p2280: technology controller proportional gain
47	get, set	PID I Gain	p2285: technology controller integral time
48	get, set	PID Up Limit	p2291: technology controller maximum limiting
49	get, set	PID Down Limit	p2292: technology controller minimum limiting
50	get	Speed setpoint	r0020: speed setpoint
51	get	Output Frequency	r0024: output frequency
52	get	Output Voltage	r0025: output voltage
53	get	DC Link Voltage	r0026[0]: DC link voltage
54	get	Actual Current	r0027: current actual value
55	get	Actual Torque	r0031: actual torque value
56	get	Output power	r0032: active power actual value

No.	Service	Name	Value/explanation
57	get	Motor Temperature	r0035[0]: motor temperature
58	get	Power Unit Temperature	r0037[0]: power unit temperature
59	get	Energy kWh	r0039: energy display
60	get	CDS Eff (Local Mode)	r0050: active command data set
61	get	Status Word 2	r2089[1]: status word 2
62	get	Control Word 1	r0054: control word 1
63	get	Motor Speed (Encoder)	r0061: Actual speed value
64	get	Digital Inputs	r0722: Digital inputs status
65	get	Digital Outputs	r0747: digital outputs status
66	get	Analog input 1	r0752[0]: analog input 1
67	get	Analog input 2	r0752[1]: analog input 2
68	get	Analog output 1	r0774[0]: analog output 1
69	get	Analog output 2	r0774[1]: analog output 2
70	get	Fault Code 1	r0947[0]: fault number 1
71	get	Fault Code 2	r0947[1]: fault number 2
72	get	Fault Code 3	r0947[2]: fault number 3
73	get	Fault Code 4	r0947[3]: fault number 4
74	get	Fault Code 5	r0947[4]: fault number 5
75	get	Fault Code 6	r0947[5]: fault number 6
76	get	Fault Code 7	r0947[6]: fault number 7
77	get	Fault Code 8	r0947[7]: fault number 8
78	get	Pulse Frequency	r1801: pulse frequency
79	get	Alarm Code 1	r2110[0]: alarm number 1
80	get	Alarm Code 2	r2110[1]: alarm number 2
81	get	Alarm Code 3	r2110[2]: alarm number 3
82	get	Alarm Code 4	r2110[3]: alarm number 4
83	get	PID setpoint Output	r2260: technology controller setpoint after ramp-function generator
84	get	PID Feedback	r2266: technology controller actual value after filter
85	get	PID Output	r2294: Technology controller output signal

The instances are assigned using the slot sequence in p0978.



## Siemens Motor Data Object, Instance Number: 32D hex

### Supported services

Class	• Get Attribute single	Instance	• Get Attribute single • Set Attribute single
-------	------------------------	----------	--

Object "32D hex" is only available on "SERVO" and "VECTOR" drive objects:

- SERVO DO = 11
- VECTOR DO = 12

Table 6- 48 Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

Table 6- 49 Instance Attribute

No.	Service	Type	Name	Value/explanation
2	get, set	UINT16	Commissioning state	p0010: commissioning parameter filter
3	get	INT16	Motor Type	p0300: motor type
6	get, set	REAL	Rated Current	p0305: rated motor current
7	get, set	REAL	Rated Voltage	p0304: rated motor voltage
8	get, set	REAL	Rated Power	p0307: rated motor power
9	get, set	REAL	Rated Frequency	p0310: rated motor frequency
10	get, set	REAL	Rated Temperature	p0605: Threshold and temperature value for monitoring the motor temperature
11	get, set	REAL	Max Speed	p0322: maximum motor speed
12	get, set	UINT16	Pole pair number	p0314: motor pole pair number
13	get, set	REAL	Torque Constant	p0316: motor torque constant
14	get, set	REAL	Inertia	p0341: motor moment of inertia
15	get, set	REAL	Base Speed	p0311: rated motor speed
19	get, set	REAL	Cos Phi	p0308: rated motor power factor

The instances are assigned using the slot sequence in p0978.

**TCP/IP Interface Object, Instance Number: F5 hex**

**Supported services**

- |  |   |
|--|---|
| <p>Class</p> <ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Get Attribute single</li> </ul> | <p>Instance</p> <ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Get Attribute single</li> <li>• Set Attribute single</li> </ul> |
|--|---|

Table 6- 50 Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

Table 6- 51 Instance Attribute

No.	Service	Type	Name	Value/explanation
1	get	UNIT32	Status	Fixed value: 1 hex 1: Configuration acknowledged, by DHCP or saved values
2	get	UNIT32	Configuration Capability	Fixed value: 94 hex 4 hex: DHCP supported, 10 hex: Configuration can be adjusted, 80 hex: ACD-capable
3	get, set	UNIT32	Configuration Control	1 hex: Saved values 3 hex: DHCP
4	get, set	UNIT16	Physical link	Path Size (in WORDs) Fixed value: 2 hex
		UNIT8		Path 20 hex, F6 hex, 24 hex, 05 hex, where 5 hex is the number of instances of F6 hex (four physical ports plus one internal port).
5	get, set	STRING	Interface Configuration	r61000: name of station
		UNIT32		r61001: IP address
6	get, set	UNIT16	Host Name	Host Name Length
		STRING		-
10	get, set	UNIT8	Select ACD	local OM flash: 0: Disabled, 1: Enabled
11	get, set	UNIT8	Last Conflict Detected	local OM flash ACD Activity
		UNIT8		local OM flash Remote MAC
		UNIT8		local OM flash ARP PDU

## Link Object, Instance Number: F6 hex

### Supported services

- |       |   |          |   |
|-------|---|----------|---|
| Class | <ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Get Attribute single</li> </ul> | Instance | <ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Get Attribute single</li> <li>• Set Attribute single</li> </ul> |
|-------|---|----------|---|

Table 6- 52 Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

Table 6- 53 Instance Attribute

No.	Service	Type	Name	Value/explanation
1	get	UINT32	Interface Speed	0: link down, 10: 10 Mbps, 100: 100 Mbps
2	get	-	Interface Flags	Bit 1: Link-Status Bit 2: Duplex Mode (0: half duplex, 1 duplex) bit 3 ... 5: Automatic state identification Bit 6: Reset required Bit 7: Local hardware fault (0 = ok)
3	get	ARRAY	Physical Address	r8935: Ethernet MAC address
4	get, get_and _clear	Struct of	Interface Counters	Optional, required if the "Media Counters Attribute" is implemented.
		UINT32	In Octets	Received octets
		UINT32	In Ucast Packets	Received Unicast packets
		UINT32	In NUcast Packets	Received non-Unicast packets
		UINT32	In Discards	Incoming packets, not processed
		UINT32	In Errors	Incoming packets with errors
		UINT32	In Unknown Protos	Incoming packets with unknown protocol
		UINT32	Out Octets	Sent octets
		UINT32	Out Ucast Packets	Sent Unicast packets
		UINT32	Out NUcast packets	Sent non-Unicast packets
		UINT32	Out Discards	Outgoing packets, not processed
UINT32	Out Errors	Outgoing packets, with errors		

No.	Service	Type	Name	Value/explanation
5	get, get_and_clear	Struct of	Media Counters	Media-specific counters
		UINT32	Alignment Errors	Structure received, which does not match the number of octets
		UINT32	FCS Errors	Structure received, which does not pass the FCS check
		UINT32	Single Collisions	Structure successfully transmitted, precisely one collision
		UINT32	Multiple Collisions	Structure successfully transmitted, several collisions
		UINT32	SQE Test Errors	Number of SQE errors
		UINT32	Deferred Transmissions	First transmission attempt delayed
		UINT32	Late Collisions	Number of collisions that occurred delayed by 512 bit timers to the request
		UINT32	Excessive Collisions	Transmission unsuccessful as a result of intensive collisions
		UINT32	MAC Transmit Errors	Transmission unsuccessful as a result of an internal MAC sublayer transmission error.
		UINT32	Carrier Sense Errors	Number of errors when attempting to send a request frame, where the transmission condition was lost or was not assigned
		UINT32	Frame Too Long	Structure too large
		UINT32	MAC Receive Errors	Transmission unsuccessful as a result of an internal MAC sublayer receive error.
6	get, set	Struct of	Interface Control	-
		UINT16	Control Bits	-
		UINT16	Forced Interface Speed	-
10	get	String	Interface_Label	Interface-Label
11	get	-	Interface capability	Bit 0: Manual setting Bit 1: Auto negotiate Bit 2: Auto MDIX Bit 3: Manual speed/duplex Bits 4 – 31: reserved Rest: Speed/duplex options

**Parameter Object, Instance Number: 401 hex**

**Supported services**

- |       |   |          |   |
|-------|---|----------|---|
| Class | <ul style="list-style-type: none"> <li>• Get Attribute all</li> </ul> | Instance | <ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Set Attribute single</li> </ul> |
|-------|---|----------|---|

Table 6- 54 Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

Parameter access to drive object 0 (DO 0) is realized via this class.

**Example: Read parameter 2050[10] (connector output to interconnect the PZD received from the fieldbus controller)**

Get Attribute single function with the following values:

- Class = 401 hex
- Instance = 2050 = 802 hex  $\hat{=}$  parameter number
- Attribute = 10 = A hex  $\hat{=}$  Index 10

**Example: Parameter 1520[0] writing (upper torque limit)**

Set Attribute single function with the following values:

- Class = 401 hex
- Instance = 1520 = 5F0 hex  $\hat{=}$  parameter number
- Attribute = 0 = 0 hex  $\hat{=}$  index 0
- Data = 500.0 (value)

**Parameter Object, Instance Number: 401 hex ... 43E hex**

**Supported services**

- |       |   |          |   |
|-------|---|----------|---|
| Class | <ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Get Attribute single</li> </ul> | Instance | <ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Set Attribute single</li> </ul> |
|-------|---|----------|---|

Table 6- 55 Class Attribute

No.	Service	Type	Name
1	get	UINT16	-
2	get	UINT16	Max slot num
3	get	UINT16	Max slot ID

Parameter access to drive object 0 (DO 0) is realized via this class.

The class structure is analog to 401 hex. Drive object (DO) is selected via the class number.

Example:

0x401 -> DO 1

0x402 -> DO 2

...

0x43E -> DO 62

### 6.11.5 Integrate the drive device into the Ethernet network via DHCP

#### Integrating the drive into the EtherNet/IP network via the onboard PROFINET interface X150.

Proceed as follows to integrate the drive into EtherNet/IP:

1. Set p8924 (PN DHCP mode) = 2 or 3

Parameterization	Meaning
p8924 = 2	The DHCP server assigns the IP address based on the MAC address.
p8924 = 3	The DHCP server assigns the IP address based on the station name.

2. Save the settings with p8925 = 2.

The next time that it is run-up, the drive retrieves the IP address made available by a DHCP server. After the drive has run-up, you can address the drive as Ethernet participant.

#### Note

##### Immediate switchover without restart

The switchover to DHCP is performed immediately and without a restart if the change is carried out with the EIP command "Set Attribute Single" (class F5 hex, attribute 3), e.g. using:

- An EIP control
- An EIP commissioning tool

#### Displays:

- r8930: Station name of the onboard PROFINET interface X150
- r8934: DHCP mode of the onboard PROFINET interface X150
- r8935: MAC address of the onboard PROFINET interface X150

## Integrating the drive into the EtherNet/IP network via interface X1400 on the CBE20

Proceed as follows to integrate the drive into EtherNet/IP:

1. Set p8944 (CBE2x DHCP mode) = 2 or 3.

Parameterization	Meaning
p8944 = 2	The DHCP server assigns the IP address based on the MAC address.
p8944 = 3	The DHCP server assigns the IP address based on the station name.

2. Save the settings with p8945 = 2.

The next time that it is run-up, the drive retrieves the IP address made available by a DHCP server. After the drive has run-up, you can address the drive as Ethernet participant.

### Note

#### Immediate switchover without restart

The switchover to DHCP is performed immediately and without a restart if the change is carried out with the EIP command "Set Attribute Single" (class F5 hex, attribute 3), e.g. using:

- An EIP control
- An EIP commissioning tool

### Displays:

- r8950: Station name of interface X1400 at the CBE20
- r8954: DHCP mode of interface X1400 at the CBE20
- r8955: MAC address of interface X1400 at the CBE20

## 6.11.6 Parameters, faults and alarms

### Parameters

- p0978 List of drive objects
- p0922 IF1 PROFIdrive PZD telegram selection
- p0999[0...99] List of modified parameters 10
- p8835 CBE20 firmware selection
- p8842 COMM BOARD activate send configuration
- p8920[0...239] PN name of station
- p8921[0...3] PN IP address
- p8922[0...3] PN default gateway
- p8923[0...3] PN Subnet Mask

- p8924 PN DHCP mode
- p8925 Activate PN interfaces configuration
- r8930[0...239] PN Name of Station actual
- r8931[0...3] PN IP Address actual
- r8932[0...3] PN Default Gateway actual
- r8933[0...3] PN subnet mask actual
- r8934 PN DHCP mode actual
- r8935[0...5] PN MAC address
- p8940[0...239] CBE2x Name of Station
- p8941[0...3] CBE2x IP address
- p8942[0...3] CBE2x Default Gateway
- p8943[0...3] CBE2x Subnet Mask
- p8944 CBE2x DHCP mode
- p8945 CBE2x interfaces configuration
- r8950[0...239] CBE2x Name of Station actual
- r8951[0...3] CBE2x IP address actual
- r8952[0...3] CBE2x Default Gateway actual
- r8953[0...3] CBE2x Subnet Mask actual
- r8954 CBE2x DHCP Mode actual
- r8955[0...5] CBE2x MAC address

### Faults and alarms

- F01910 (N, A) Fieldbus: Setpoint timeout
- F08501 (N, A) PN/COMM BOARD: Setpoint timeout
- A01980 (F) PN: Cyclic connection interrupted
- A08526 (F) PN/COMM BOARD: No cyclic connection
- A01906 (F) EtherNet/IP Configuration error
- A50011 (F) EtherNetIP/COMM BOARD: Configuration error



## 6.12 Communication via MODBUS TCP

### 6.12.1 Overview

The Modbus protocol is a communication protocol based on a controller/device architecture.

Modbus offers three transmission modes:

- **Modbus ASCII** - via a serial interface  
data in the ASCII code. The data throughput is lower compared to RTU.
- **Modbus RTU** - via a serial interface  
data in the binary format. The data throughput is greater than in ASCII code.
- **Modbus TCP** - via Ethernet  
data as TCP/IP packages. TCP port 502 is reserved for Modbus TCP.

With the the CU320-2 Control Unit, only transfer type "**Modbus TCP**" is available.

### Modbus functionality

Process data and parameters are accessed via the Modbus register.

- Process data: 40100 - 40119
- Drive data: 40300 - 40522
- All parameters via DS47: 40601 - 40722

Modbus TCP always provides a basic Ethernet functionality, which corresponds to the functionality of Ethernet interface X127:

- Commissioning access for STARTER with S7 protocol
- DCP to set the IP address etc.
- SNMP for identification

### General information about communication

Communication with Modbus TCP is established via the Ethernet/PROFINET interfaces:

- **X150:**  
For Modbus TCP with a CU320-2 PN.
- **X1400:**  
For Modbus TCP with a CU320-2 PN or a CU320-2 DP via a CBE20.

Precisely one Modbus connection can be established. A simultaneous connection via the interfaces X150 and X1400 is not possible and is acknowledged with alarm A08555(1).

However, you can use one interface for Modbus TCP, and the other as PROFINET interface.

### Drive object that can be addressed via Modbus

With Modbus TCP, you always address drive object DO1 from the list of drive objects (p0978[0]). A vector drive object must be in this parameter.

- However, Modbus TCP is only activated if, under p0978[0], there is a drive object that is supported by Modbus TCP.
- If p0978[0] does not contain a valid drive object, then establishing communication is acknowledged with alarm A08555(2).

### Diagnostics LEDs in Modbus TCP

Diagnostics states are shown as follows using LEDs with Modbus TCP:

- X150: "PN" LED
- X1400 (CBE20): "OPT" LED

The following states can be displayed using these LEDs:

Color	State	Significance
Green	Continuous light	Connections and setpoints are OK.
Green	Flashing light	Connection is OK, but no setpoints (dependent on timeout).
Red	Flashing light 2 Hz	No connection or setpoint timeout.

## 6.12.2 Configuring Modbus TCP via interface X150

### Activate Modbus TCP via X150 (CU320-2 PN)

1. For drive object DO1, set p2030 = 13 (Modbus TCP).
2. Using p8921, set the IP address for the onboard PROFINET interface on the Control Unit.
3. Set the standard gateway using p8922.
4. Set the subnet mask using p8923.
5. Set the DHCP mode using p8924.
6. Select "Activate and save configuration" as interface configuration using p8925 = 2.
7. In the STARTER commissioning tool, check the list of drive object p0978.

When required, change the sequence of the drive objects using the telegram configuration ("Drive device" > "Communication" > "Telegram configuration").

8. Save the settings in the STARTER commissioning tool and carry out a POWER ON.

## Modbus settings with interface X150

Using the following parameters, set the communication for Modbus TCP with a X150 interface:

Parameters	Explanation
p2040	Setting the monitoring time to monitor the received process data via fieldbus interface. If process data is not transferred within one cycle of the fieldbus monitoring time, then the drive shuts down with fault F01910.
r2050[0...19]	Connector output to interconnect the PZD received from the fieldbus controller via IF1.
p2051[0...24]	Selects the PZD (actual values) to be sent to the fieldbus controller in the word format via IF1.
r2053[0...24]	Displays the PZD (actual values) sent to the fieldbus controller in the word format via IF1.
r2054	Status display for the internal communication interface.
p8839[0...1]	Assigning the PN onboard interface (X150) for acyclic communication via PZD interface 1 (IF1) and interface 2 (IF2).
r8850[0...19]	Connector output to interconnect the PZD (setpoints) received in the word format via IF2.
p8851[0...24]	Selects the PZD (actual values) to be sent in the word format via IF2.
r8853[0...24]	Displays the PZD (actual values) sent in the word format via IF2.
r8854	Status display for COMM BOARD.

### 6.12.3 Configuring Modbus TCP via interface X1400

#### Activating Modbus TCP via X1400 (CBE20)

1. For drive object DO1, set p8835 = 5 (Modbus TCP).
2. Set the IP address for the CBE20 using p8941.
3. Set the standard gateway for the CBE20 using p8942.
4. Set the subnet mask for the CBE20 using p8943.
5. Set the DHCP mode for the CBE20 using p8944.
6. Select the setting "Activate and save configuration" as interface configuration using p8945 = 2.
7. In the STARTER commissioning tool, check the list of drive object p0978.  
When required, change the sequence of the drive objects using the telegram configuration ("Drive device" > "Communication" > "Telegram configuration").
8. Save the settings in the STARTER commissioning tool and carry out a POWER ON.

### Modbus settings with interface X1400

Using the following parameters, set the communication for Modbus TCP with a X1400 interface:

Parameters	Explanation
r2050[0...19]	Connector output to interconnect the PZD received from the fieldbus controller via IF1.
p2051[0...24]	Selects the PZD (actual values) to be sent to the fieldbus controller in the word format via IF1.
r2053[0...24]	Displays the PZD (actual values) sent to the fieldbus controller in the word format via IF1.
r2054	Status display for the internal communication interface.
p8840	Setting the monitoring time to monitor the received process data via the COMM BOARD. If, within this time, the Control Unit does not receive any process data from the COMM BOARD, then the drive shuts down with fault F08501.
p8839[0...1]	Assigning the CBE20 interface (x1400) for cyclic communication via PZD interface 1 (IF1) and interface 2 (IF2).
r8850[0...19]	Connector output to interconnect the PZD (setpoints) received in the word format via IF2.
p8851[0...24]	Selects the PZD (actual values) to be sent in the word format via IF2.
r8853[0...24]	Displays the PZD (actual values) sent in the word format via IF2.
r8854	Status display for COMM BOARD.

### 6.12.4 Mapping tables

#### Modbus register and Control Unit parameters

The Modbus protocol contains register or bit numbers for addressing the memory. You must assign the appropriate control words, status words, and parameters to these registers in the device.

The valid holding register address range extends from 40001 up to 40722. When trying to access other holding registers, the "Exception code" error is output

The process data are transferred into the register range from 40100 up to 40119.

---

#### Note

"R"; "W"; "R/W" in the Access column stands for read (with FC03); write (with FC06); read/write.

---

Table 6- 56 Assigning the Modbus register to the parameters - process data

Register	Description	Access	Unit	Scaling	ON/OFF text or Value range	Data / parameter
<b>Control data</b>						
40100	Control word (see List Manual, function diagram 2442)	R/W	-	1	-	Process data 1
40101	Main setpoint	R/W	-	1	-	Process data 2
40102	STW 3	R/W	-	1	-	Process data 3
40103	STW 4	R/W	-	1	-	Process data 4
40104	PZD 5	R/W	-	1	-	Process data 5
40105	PZD 6	R/W	-	1	-	Process data 6
40106	PZD 7	R/W	-	1	-	Process data 7
40107	PZD 8	R/W	-	1	-	Process data 8
40108	PZD 9	R/W	-	1	-	Process data 9
40109	PZD 10	R/W	-	1	-	Process data 10
<b>Status data</b>						
40110	Status word (see List Manual, function diagram 2452)	R	-	1	-	Process data 1
40111	Main actual value	R	-	1	-	Process data 2
40112	ZSW 3	R	-	1	-	Process data 3
40113	ZSW 4	R	-	1	-	Process data 4
40114	PZD 5	R	-	1	-	Process data 5
40115	PZD 6	R	-	1	-	Process data 6
40116	PZD 7	R	-	1	-	Process data 7
40117	PZD 8	R	-	1	-	Process data 8
40118	PZD 9	R	-	1	-	Process data 9
40119	PZD 10	R	-	1	-	Process data 10

Table 6- 57 Assigning the Modbus register to the parameters - parameter data

Register	Description	Access	Unit	Scaling	ON/OFF text or Value range	Data / parameter
<b>Drive identification</b>						
40300	Actual power unit code number	R	-	1	0 ... 65535	r0200
40301	Control Unit firmware	R	-	1	0 ... 65535	r0018 / 10000
<b>Drive data</b>						
40320	Rated power of the power unit	R	kW	100	0 ... 655.35	r0206
40321	Current limit	R/W	%	10	0.0 ... 6553.5	p0640
40322	Ramp-up time	R/W	s	100	10.00 ... 655.35	p1120
40323	Ramp-down time	R/W	s	100	10.00 ... 655.35	p1121
40324	Reference speed	R/W	RPM	1	6 ... 65535	p2000
<b>Drive diagnostics</b>						
40340	Speed setpoint	R	RPM	1	-32768 ... 32767	r0020
40341	Actual speed value	R	RPM	1	-32768 ... 32767	r0021
40342	Output frequency	R	Hz	100	-327.68 ... 327.67	r0024
40343	Output voltage	R	V	1	0 ... 65535	r0025
40344	DC-link voltage	R	V	1	0 ... 65535	r0026

Register	Description	Access	Unit	Scaling	ON/OFF text or Value range	Data / parameter
40345	Actual current value	R	A	100	0 ... 655.35	r0027
40347	Actual active power	R	kW	100	0 ... 655.35	r0032
40349	Control priority	R	-	1	HAND   AUTO	r0807
<b>Fault diagnostics</b>						
40400	Failure number, index 0	R	-	1	0 ... 65535	r0947[0]
40401	Failure number, index 1	R	-	1	0 ... 65535	r0947[1]
40402	Failure number, index 2	R	-	1	0 ... 65535	r0947[2]
40403	Fault number, index 3	R	-	1	0 ... 65535	r0947[3]
40404	Fault number, index 4	R	-	1	0 ... 65535	r0947[4]
40405	Fault number, index 5	R	-	1	0 ... 65535	r0947[5]
40406	Fault number, index 6	R	-	1	0 ... 65535	r0947[6]
40407	Fault number, index 7	R	-	1	0 ... 65535	r0947[7]
40408	Alarm number	R	-	1	0 ... 65535	r2110[0]
40409	Actual alarm code	R	-	1	0 ... 65535	r2132
40499	PRM ERROR code	R	-	1	0 ... 255	-
<b>Technology controller<sup>3)</sup></b>						
40500	Technology controller enable	R/W	-	1	0 ... 1	p2200, r2349.0
40501	Technology controller MOP	R/W	%	100	-200.0 ... 200.0	p2240
<b>Adapt technology controller<sup>1)</sup></b>						
40510	Time constant for actual-value filters of the technology controller	R/W	-	100	0.00 ... 60.0	p2265
40511	Scaling factor for actual value of the technology controller	R/W	%	100	0.00 ... 500.00	p2269
40512	Proportional amplification of the technology controller	R/W	-	1000	0.000 ... 65.535	p2280
40513	Integral time of the technology controller	R/W	s	1	0 ... 60	p2285
40514	Time constant D-component of the technology controller	R/W	-	1	0 ... 60	p2274
40515	Max. limit of technology controller	R/W	%	100	-200.0 ... 200.0	p2291
40516	Min. limit technology controller	R/W	%	100	-200.0 ... 200.0	p2292
<b>PID diagnostics</b>						
40520	Effective setpoint acc. to internal technology controller MOP ramp-function generator	R	%	100	-100.0 ... 100.0	r2250
40521	Actual value of technology controller after filter	R	%	100	-100.0 ... 100.0	r2266
40522	Output signal technology controller	R	%	100	-100.0 ... 100.0	r2294

1) The technology controller parameters can only be accessed if, in the STARTER project, also the "Technology controller" function module is activated.

Table 6- 58 Assignment of the Modbus register for general parameter access using DS47

Register	Description	Access	Unit	Scaling	ON/OFF text or Value range	Data / parameter
40601	DS47 Control	R/W	-	-	-	-
40602	DS47 header	R/W	-	-	-	-
40603	DS47 data 1	R/W	-	-	-	-
...	...					
40722	DS47 data 120	R/W	-	-	-	-

**Note****Limited value range**

Modbus TCP registers have a maximum 16 bit width. The values of display parameters (r parameters) cannot always be represented with 16 bits. In these particular cases, the maximum value that can be represented is displayed.

- Unsigned: 65535
- Signed min: -32768
- Signed max: 32767

## 6.12.5 Write and read access using function codes

### Function codes used

For data exchange between the controller and device, predefined function codes are used for communication via Modbus.

The Control Unit uses the following Modbus function codes:

- FC 03: Holding register to read data from the inverter
- FC 06: Write single register to write to individual register
- FC 16: Write to multiple registers to write to several registers

### Structure of a Modbus TCP message

Table 6- 59 Individual components, including Modbus Application Header (MBAP) and function code

Application Data Unit (ADU)					
Modbus Application Header				Protocol Data Unit (PDU)	
Transaction ID	Protocol ID	Length	Unit ID	FCode	Data
2 bytes	2 bytes	2 bytes	1 byte	1 byte	0 ... 252 bytes

**Structure of a read request via Modbus function code 03 (FC 03)**

Any valid register address is permitted as the start address.

Via FC 03, the control can address more than one register with one request. The number of addressed registers is contained in bytes 10 and 11 of the read request.

Table 6- 60 Structure of a read request for device number 17, example

Value	Byte	Description
MBAP header		
03 h	7	
00 h	8	Register start address "High" (register 40110)
6D h	9	Register start address "Low"
00 h	10	Number of registers "High" (2 registers: 40110; 40111)
02 h	11	number of registers "Low"

The response returns the corresponding data set:

Table 6- 61 Device response to the read request, example

Value	Byte	Description
MBAP header		
03 h	7	Function code
04 h	8	Number of bytes (4 bytes are returned)
11 h	9	Data, first register "High"
22 h	10	Data, first register "Low"
33 h	11	Data, second register "High"
44 h	12	Data, second register "Low"

Table 6- 62 Invalid read request

Read request	Inverter response
Invalid register address	Exception code 02 (invalid data address)
Read a write-only register	Telegram in which all values are set to 0.
Read a reserved register	
Controller addresses more than 125 registers	Exception code 03 (invalid data value)
The start address and the number of registers of an address are located outside of a defined register block	Exception code 02 (invalid data address)

**Structure of a write request via Modbus function code 06 (FC 06)**

Start address is the holding register address.

Via FC 06, with one request, only precisely one register can be addressed. The value, which is written to the addressed register, is contained in bytes 10 and 11 of the write request.



Table 6- 63 Structure of a write request for device number 17, example

Value	Byte	Description
MBAP header		
06 h	7	Function code
00 h	8	Register start address "High" (write register 40100)
63 h	9	Register start address "Low"
55 h	10	Register data "High"
66 h	11	Register data "Low"

The response returns register address (bytes 8 and 9) and the value (bytes 10 and 11), which the higher-level control had written to the register.

Table 6- 64 Device response to the write request, example

Value	Byte	Description
MBAP header		
06 h	7	Function code
00 h	8	Register start address "High"
63 h	9	Register start address "Low"
55 h	10	Register data "High"
66 h	11	Register data "Low"

Table 6- 65 Invalid write request

Write request	Inverter response
Incorrect address (a holding register address does not exist)	Exception Code 02 - invalid data address
Write to a "read-only" register	Exception Code 04 - device failure
Write to a reserved register	

For Exception Code 4, via the holding register 40499, you can read out the internal drive error code, which has occurred for the last parameter access via the holding register.

## 6.12.6 Communication via data set 47

Via FC 16, with one request, up to 122 registers can be written to directly one after the other, while for Write Single Register (FC 06) you must individually write the header data for each register.

### Header

In addition to the transfer type, the start address and the number of the following registers in the header.

**User data**

You control the access in the user data via register 40601.

In register 40602, you define the access as well as the length of the request data.

Register 40603 contains the request reference - it is defined by the user - and the access type -reading or writing.

From register 40603 and higher, the request aligns communication via data set 47 according to PROFIdrive.

Register 40604 contains the number of the drive object and the number of parameters that are read out or written to.

Register 40605 contains the attribute that you use to control whether you read out the parameter value or the parameter attribute. In the number of elements you specify how many indices are read.

**6.12.6.1 Communication details**

General parameter access is realized using the Modbus register 40601 ... 40722.

Communication via DS47 is controlled via register 40601. Register 40602 contains the function code (always = 47 = 2F hex) and the number of the following user data. User data are contained in registers 40603 ... 40722.

**Communication overview**

Value in the register				Explanation
40601	40602	40603 ... 40722		
0	47	...	...	Write values for acyclic access
1	47	Request length [bytes]	Request data	Activate acyclic access
2	47	Response length [bytes]	Response data	Response for a successful request
2	47	0	Error code	Response for an erroneous request

**Error codes**

- 1 hex: Invalid Length (invalid length)
- 2 hex: Invalid State (in the actual inverter state, this action is not permitted)
- 3 hex: Invalid function code (FC ≠ 2F hex)
- 4 hex: Response not ready (the response has still not been issued)
- 5 hex: Internal Error (general system error)

Incorrect access operations to parameters via data set 47 are logged in registers 40603 ... 40722. The error codes are described in the PROFIdrive profile.

### 6.12.6.2 Examples: Read parameters

Table 6- 66 Write parameter request: Reading parameter value of r0002 from device number 17

Value	Byte	Description
MBAP header		
10 h	7	Function code (write multiple)
0258 h	8,9	Register start address
0007 h	10,11	Number of registers to be read (40601 ... 40607)
0E h	12	Number of data bytes (7 registers, each 2 bytes = 14 bytes)
0001 h	13,14	40601: DS47 Control = 1 (activate request)
2F0A h	15,16	40602: Function 2F h (47), request length 10 bytes (0A h)
8001 h	17,18	40603: Request reference = 80 h, request identifier = 1 h
0101 h	19,20	40604: DO-Id = 1, number of parameters = 1
1001 h	21,22	40605: Attribute, number of elements = 1
0002 h	23,24	40606: Parameter number = 2
0000 h	25,26	40607: Subindex = 0

Table 6- 67 Start parameter request: Reading parameter value of r0002 from device number 17

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
0258 h	8,9	Register start address
0007 h	10,11	Number of registers to be read (40601 ... 40607)
0010 h	12,13	Number of registers

Table 6- 68 Response for successful read operation

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
20 h	8	Number of following data bytes (20 h: 32 bytes $\triangleq$ 16 registers)
0002 h	9,10	40601: DS47 Control = 2 (the request was executed)
2F08 h	11,12	40602: Function code 2F h (47), response lengths 8 bytes
8001 h	13,14	40603: Request reference mirrored = 80 h, response identifier = 1 (request parameter)
0101 h	15,16	40604: DO-ID = 1, number of parameters = 1
0301 h	17,18	40605: Format, number of elements = 1
001F h	19,20	40606: Parameter value = 1F h (31)

Table 6- 69 Response for unsuccessful read operation - read request still not completed

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
20 h	8	Number of following data bytes (20 h: 32 bytes $\triangleq$ 16 registers)
0001 h	9,10	40601: Check value 1 = request is processed
2F00 h	11,12	40602: Function code 2F h (47), response length 0 (error)
0004 h	13,14	40603: Error code: 0004 Response Not Ready (response has still not been issued)

### 6.12.6.3 Examples: Write parameter

Table 6- 70 Write parameter request: Writing the parameter value of p1121 from device number 17

Value	Byte	Description
MBAP header		
10 h	7	Function code (write multiple)
0258 h	8,9	Register start address
000A h	10,11	Number of registers to be written to (40601 ... 40610)
14 h	12	Number of data bytes (10 registers, each 2 bytes = 20 bytes)
0001 h	13,14	40601: C1 (activate request)
2F10 h	15,16	40602: Function 2F h (47), request length 16 bytes (10 h)
8002 h	17,18	40603: Request reference = 80 h, request identifier = 2 h (write)
0101 h	19,20	40604: DO-Id = 1, number of parameters = 1
1001 h	21,22	40605: Attribute, number of elements = 1
0461 h	23,24	40606: Parameter number = 1121
0000 h	25,26	40607: Subindex = 0
0801 h	27,28	40608: Format + number of values
4142 h	29,30	40609: Parameter value 12,15
6666 h	31,32	40610: Parameter value

Table 6- 71 Start parameter request: Writing the parameter value of p1121 from device number 17

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
0258 h	8,9	Register start address
0007 h	10,11	Number of registers to be written to (40601 ... 40610)
0010 h	12,13	Number of registers

Table 6- 72 Response for successful write operation

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
20 h	8	Number of following data bytes (20 h: 32 bytes $\hat{=}$ 16 registers)
0002 h	9,10	40601: DS47 Control = 2 (request was executed)
2F04 h	11,12	40602: Function code 2F h (47), response length 4 bytes
8002 h	13,14	40603: Request reference mirrored = 80 h, response identifier = 2 (change parameter)
0101 h	15,16	40604: DO-ID = 1, number of parameters = 1

Table 6- 73 Response for unsuccessful write operation - write request still not completed

Value	Byte	Description
MBAP header		
03 h	7	Function code (read)
20 h	8	Number of following data bytes (20 h: 32 bytes $\hat{=}$ 16 registers)
0001 h	9,10	40601: DS47 Control = 1 (request is processed)
2F00 h	11,12	40602: Function code 2F h (47), response length 0 (error)
0004 h	13,14	40603: Error code: 0004 Response Not Ready (response has still not been issued)

## 6.12.7 Communication procedure

### Logical error

If the device detects a logical error within a request, it responds to the controller with an "exception response". In the response, the device sets the highest bit in the function code to 1. If the device receives, for example, an unsupported function code from the controller, the device responds with an "exception response" with code 01 (illegal function code).

Table 6- 74 Overview of exception codes

Exception code	Modbus name	Remark
01	Illegal function code	An unknown (unsupported) function code was sent to the device.
02	Illegal Data Address	An invalid address was requested.
03	Illegal data value	An invalid data value was detected.
04	Server failure	The device terminated while processing.

### Process data monitoring time (setpoint timeout)

The "Setpoint timeout" only applies for access to process data (40100 ... 40109, 40110 ... 40119). The "Setpoint timeout" is not generated for parameter data (40300 ... 40522).

#### Fieldbus interface:

In parameter p2040 you define the time for cyclic data exchange for process data.

Setting range: 0 ... 2000 s.

The time depends on the amount of data to be transferred and the control.

"Setpoint timeout" (F01910) is issued by the Modbus if p2040 is set to a value > 0 ms and no process data is requested within this time period.

#### COMM BOARD (CBE20):

In parameter p8840 you define the time for cyclic process data exchange.

Setting range: 0 ... 2000 s.

The time depends on the amount of data to be transferred and the control.

"Setpoint timeout" (F08501) is issued by the Modbus if p8840 is set to a value > 0 ms and no process data is requested within this time period.

## 6.12.8 Parameters, faults and alarms

### Parameters

- p0978 List of drive objects
- p2030 Fieldbus interface protocol selection
- p2040 Fieldbus interface monitoring time:
- r2050[0...19] CO: IF1 PROFIdrive PZD receive word
- p2051[0...24] CI: IF1 PROFIdrive PZD send word
- r2053[0...24] IF1 PROFIdrive diagnostics PZD send word
- r2054 PROFIBUS status
- p8835 CBE20 firmware selection
- p8839[0...1] PZD interface hardware assignment
- p8840 COMM BOARD monitoring time
- r8850[0...19] CO: IF2 PZD receive word
- p8851[0...24] CI: IF2 PZD send word
- r8853[0...24] IF2 diagnostics PZD send
- r8854 COMM BOARD state
- p8920[0...239] PN Name of Station
- p8921[0...3] PN IP address
- p8922[0...3] PN default gateway
- p8923[0...3] PN Subnet Mask
- p8924 PN DHCP mode
- p8925 PN interfaces configuration
- p8940[0...239] CBE2x Name of Station
- p8941[0...3] CBE2x IP address
- p8942[0...3] CBE2x Default Gateway
- p8943[0...3] CBE2x Subnet Mask
- p8944 CBE2x DHCP mode
- p8945 CBE2x interfaces configuration

### Faults and alarms

- F01910 Fieldbus: Setpoint timeout
- A01925 (F) Modbus TCP connection interrupted

- F08501 (N, A) PN/COMM BOARD: Setpoint timeout
- A08526 (F) PN/COMM BOARD: No cyclic connection
- A08555 Modbus TCP commissioning fault

## 6.13 Communication services and used port numbers

The drive device supports the protocols listed in the following table. The address parameters, the relevant communication layer as well as the communication role and the communication direction are specified for each protocol.

This information allows you to match the security measures for the protection of the automation system to the used protocols (e.g. firewall). As the security measures are limited to Ethernet and PROFINET networks, no PROFIBUS protocols are listed in the table.

The following table shows the various layers and protocols that are used.

### Layers and protocols

Report	Port number	(2) Link layer (4) Transport layer	Function	Description
<b>PROFINET protocols</b>				
DCP Discovery and configuration protocol	Not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x8892 (PROFINET)	Accessible nodes, PROFINET Discovery and configuration	DCP is used by PROFINET to determine PROFINET devices and to make basic settings. DCP uses the special multicast MAC address: xx-xx-xx-01-0E-CF, xx-xx-xx = Organizationally Unique Identifier
LLDP Link Layer Discovery protocol	Not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x88CC (PROFINET)	PROFINET Link Layer Discovery protocol	LLDP is used by PROFINET to determine and manage neighborhood relationships between PROFINET devices. LLDP uses the special multicast MAC address: 01-80-C2-00-00-0E
MRP Media Redundancy Protocol	Not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x88E3 (PROFINET)	PROFINET medium redundancy	MRP enables the control of redundant routes through a ring topology. MRP uses the special multicast MAC address: xx-xx-xx-01-15-4E, xx-xx-xx = Organizationally Unique Identifier

6.13 Communication services and used port numbers

Report	Port number	(2) Link layer (4) Transport layer	Function	Description
PTCP Precision Trans- parent Clock Protocol	Not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x8892 (PROFINET)	PROFINET send clock and time synchroni- zation, based on IEEE 1588	PTC allows a time delay measurements to be made between RJ45 ports – therefore send cycle synchronization and time syn- chronization. PTCP uses the special multicast MAC ad- dress: xx-xx-xx-01-0E-CF, xx-xx-xx = Organizationally Unique Identi- fier
PROFINET IO data	Not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x8892 (PROFINET)	PROFINET Cyclic IO data transfer	The PROFINET IO telegrams are used to cyclically transfer I/O data between the PROFINET IO controller and IO devices via Ethernet.
PROFINET Con- text Manager	34964	(4) UDP	PROFINET con- nection less RPC	The PROFINET context manager provides an endpoint mapper in order to establish an application relationship (PROFINET AR).
<b>Connection-oriented communication protocols</b>				
FTP File Transfer Protocol	21	(4) TCP	Serv- er/incoming	FTP can be used for first commissioning. FTP can be activated/deactivated using parameter p8908.
DHCP Dynamic Host Configuration Protocol	68	(4) UCP	Dynamic Host Configuration Protocol	Is used to query an IP address. Is closed when delivered, and is opened when se- lecting the DHCP mode.
http Hypertext trans- fer protocol	80	(4) TCP	Hypertext transfer proto- col	http is used for communication with the CU-internal web server. Is open in the delivery state and can be deactivated.
ISO on TCP (according to RFC 1006)	102	(4) TCP	ISO-on-TCP protocol	ISO on TCP (according to RFC 1006) is used for the message-oriented data exchange to a remote CPU, WinAC or devices of other suppliers. Communication with ES, HMI, etc. Is open in the delivery state and is always required.
SNMP Simple network management protocol	161	(4) UDP	Simple network management protocol	SNMP enables the reading out and setting of network management data (SNMP managed Objects) by the SNMP manager. Is open in the delivery state and is always required.
https Secure Hyper- text transfer protocol	443	(4) TCP	Secure Hyper- text transfer protocol	https is used to communicate with the web server integrated in the CPU via Transport Layer Security (TLS). Is open in the delivery state and can be deactivated.
Internal proto- col	5188	4 (TCP)	Serv- er/incoming	Communication with commissioning tools for downloading project data.
Reserved	49152...65535	(4) TCP (4) UDP	-	Dynamic port area that is used for the active connection endpoint if the applica- tion does not specify the local port.
<b>EtherNet/IP protocols</b>				



Report	Port number	(2) Link layer (4) Transport layer	Function	Description
Explicit messaging	44818	(4) TCP (4) UDP	-	Is used for parameter access, etc. Is closed when delivered, and is opened when selecting EtherNet/IP.
Implicit messaging	2222	(4) UDP	-	Is used for exchanging I/O data. Is closed when delivered, and is opened when selecting EtherNet/IP.
<b>Modbus TCP protocols (server)</b>				
Request & response	502	(4) TCP	-	Is used for exchanging data packages. Is closed when delivered, and is opened when selecting Modbus TCP.

## 6.14 Parallel operation of communication interfaces

### General information

The two cyclic interfaces for the setpoints and actual values differ by the parameter ranges used (BICO technology etc.) and the functions that can be used. The interfaces are designated as cyclic interface 1 (IF1) and cyclic interface 2 (IF2).

Cyclic process data (setpoints/actual values) are processed using interfaces IF1 and IF2. The following interfaces are used:

- Onboard interfaces of the Control Unit for PROFIBUS DP or PROFINET.
- An optional interface (COMM board) for PROFINET (CBE20) or CANopen (CBE10) for insertion in the Control Unit.

Parameter p8839 is used to set the parallel use of the Control Unit onboard interfaces and COMM board. The functionality is assigned to interfaces IF1 and IF2 using indices.

For example, the following applications are possible:

- PROFIBUS DP for drive control and PROFINET for the acquisition of actual values/measured values of the drive.
- PROFIBUS DP for control and PROFINET for engineering only
- Mixed mode with two masters (the first for logic and coordination and the second for technology)
- SINAMICS Link via IF2 (CBE20), standard telegrams and PROFIsafe via IF1
- Operation of redundant communication interfaces

### Assignment of communication interfaces to cyclic interfaces

With the factory setting p8839 = 99, the communication interfaces are permanently assigned one of the cyclic interfaces (IF1, IF2), depending on the communication system, e.g. PROFIBUS DP, PROFINET or CANopen.

6.14 Parallel operation of communication interfaces

The assignment to the cyclic interfaces can essentially be freely defined by user parameterization for the parallel operation of the communication interfaces.

Table 6- 75 Properties of the cyclic interfaces IF1 and IF2

Feature	IF1	IF2
Setpoint (BICO signal source)	r2050, r2060	r8850, r8860
Actual value (BICO signal sink)	p2051, p2061	p8851, p8861

Table 6- 76 Implicit assignment of hardware to cyclic interfaces for p8839[0] = p8839[1] = 99

Inserted hardware interface	IF1	IF2
No option, only use Control Unit onboard interface (PROFIBUS, PROFINET or USS)	Control Unit onboard	--
CU320-2 DP with CBE20 (optional PROFINET interface)	COMM BOARD	Control Unit onboard PROFIBUS or Control Unit onboard USS
CU320-2 PN with CBE20 (optional PROFINET interface)	Control Unit onboard	COMM BOARD PROFINET
CAN option CBC10	Control Unit onboard	COMM BOARD CAN

Parameter p8839[0,1] is used to set the parallel operation of the hardware interfaces and the assignment to the cyclic interfaces IF1 and IF2 for the Control Unit drive object.

The object sequence for process data exchange via IF2 depends on the object sequence from IF1; see "List of drive objects" (p0978).

The factory setting of p8839[0,1] = 99 enables the implicit assignment (see table above).

An alarm is generated in case of invalid or inconsistent parameterization of the assignment.

**Note**

**Parallel operation of PROFIBUS and PROFINET**

Either the isochronous mode or PROFIsafe functionality can be assigned to an interface via p8815 (IF1 or IF2).

Example:

- p8815[0] = 1: IF1 supports the isochronous mode.
- p8815[1] = 2: IF2 supports PROFIsafe.

Additional configuration options are available if additionally the PROFINET module CBE20 is inserted in the CU320-2 DP:

- p8839[0] = 1 and p8839[1] = 2: PROFIBUS isochronous, PROFINET cyclic
- p8839[0] = 2 and p8839[1] = 1: PROFINET isochronous, PROFIBUS cyclic

### Parameters for IF2

The following parameters are available in order to optimize the IF2 for a PROFIBUS or PROFINET interface:

- Receive and send process data:  
r8850, p8851, r8853, r8860, p8861, r8863<sup>1)</sup>
- Diagnostic parameters:  
r8874, r8875, r8876<sup>1)</sup>
- Binector-connector converters:  
p8880, p8881, p8882, p8883, p8884, r8889<sup>1)</sup>
- Connector-binector converters:  
r8894, r8895, p8898, p8899<sup>1)</sup>

<sup>1)</sup> Significance of 88xx identical to 20xx

### Note

Using the HW Config configuration tool, a PROFIBUS slave / PROFINET device with two interfaces cannot be shown. In parallel operation, this is the reason that a SINAMICS drive appears 2x in the project or in 2 projects, although physically it is just one device.

## Parameters

p8839	PZD interface hardware assignment
Description:	Assigning the hardware for cyclic communication via PZD interface 1 and interface 2.
Value:	0: Inactive 1: Control Unit onboard 2: COMM BOARD 99: Automatic

For p8839, the following rules apply:

- The setting of p8839 applies for all drive objects of a Control Unit (device parameter).
- For the setting p8839[0] = 99 and p8839[1] = 99 (automatic assignment, factory setting), the hardware used is automatically assigned to interfaces IF1 and IF2. Both indices must be selected so that the automatic assignment is activated. If both indices are not selected, then an alarm is output and the setting p8839[x] = 99 is treated just like 'inactive'.
- An alarm is issued if the same hardware (Control Unit onboard or COMM BOARD) is selected in p8839[0] and p8839[1]. The following then applies: The setting of p8839[0] and the setting of p8839[1] are treated just the same as "inactive".
- If the CAN board (CBC10) is used, the entry of p8839[0] = 2 is not permissible (no assignment of the CAN board to IF1). An alarm is then issued.
- If p8839[x] is set to 2, and the COMM BOARD is missing or defective, then the corresponding interface is not supplied from the Control Unit onboard interface. Message A08550 is output instead.

### Parameters

- p0922 IF1 PROFIdrive telegram selection
- p0978[0...24] List of drive objects
- p8815[0...1] IF1/IF2 PZD functionality selection
- p8839[0...1] PZD interface hardware assignment

## 6.15 Engineering Software Drive Control Chart (DCC)

### Graphical configuring and expansion of the device functionality by means of available closed-loop control, arithmetic, and logic function blocks

Drive Control Chart (DCC) expands the facility for the simplest possible configuring of technological functions for both the SIMOTION motion control system and the SINAMICS drive system. This provides the user with a new dimension of system adaptability for specific machine functions.

DCC does not restrict the number of functions that can be used; the only restriction is the performance of the target platform.

The user-friendly DCC Editor enables easy graphical configuration and a clear representation of control loop structures as well as a high degree of reusability of existing diagrams.

The open-loop and closed-loop control functionality is defined by using multi-instance-enabled blocks (Drive Control Blocks (DCBs)) from a pre-defined library (DCB library) that are selected and graphically linked by dragging and dropping.

Test and diagnostic functions allow verification of the program behavior, and troubleshooting in the event of a fault.

The block library encompasses a large selection of closed-loop, arithmetic and logic function blocks, as well as comprehensive open-loop and closed-loop control functions.

For combining, analyzing and acquiring binary signals, all commonly used logic functions are available for selection (AND, XOR, on/off delay, RS flipflop, counter, etc.). Numerous computation functions are available for monitoring and evaluating numerical variables; for example absolute value generation, division, min/max evaluation.

Besides drive control functions, it is also a simple matter to configure axis winding functions, PI controllers, ramp-function generators, and wobble generators.

Almost unlimited programming of control structures is possible in conjunction with the SIMOTION motion control system. These can then be combined with other program sections to form an overall program.

Drive Control Chart for SINAMICS also provides a convenient basis for resolving drive-level open-loop and closed-loop control tasks directly in the drive. This results in further adaptability of SINAMICS for the task set. On-site processing in the drive supports modular machine concepts and results in increased overall machine performance.

---

#### Note

##### Detailed documentation

A detailed description of the DCC Editor and the available Drive Control Blocks is given in the relevant documentation. This documentation is available on the accompanying customer DVD.

---

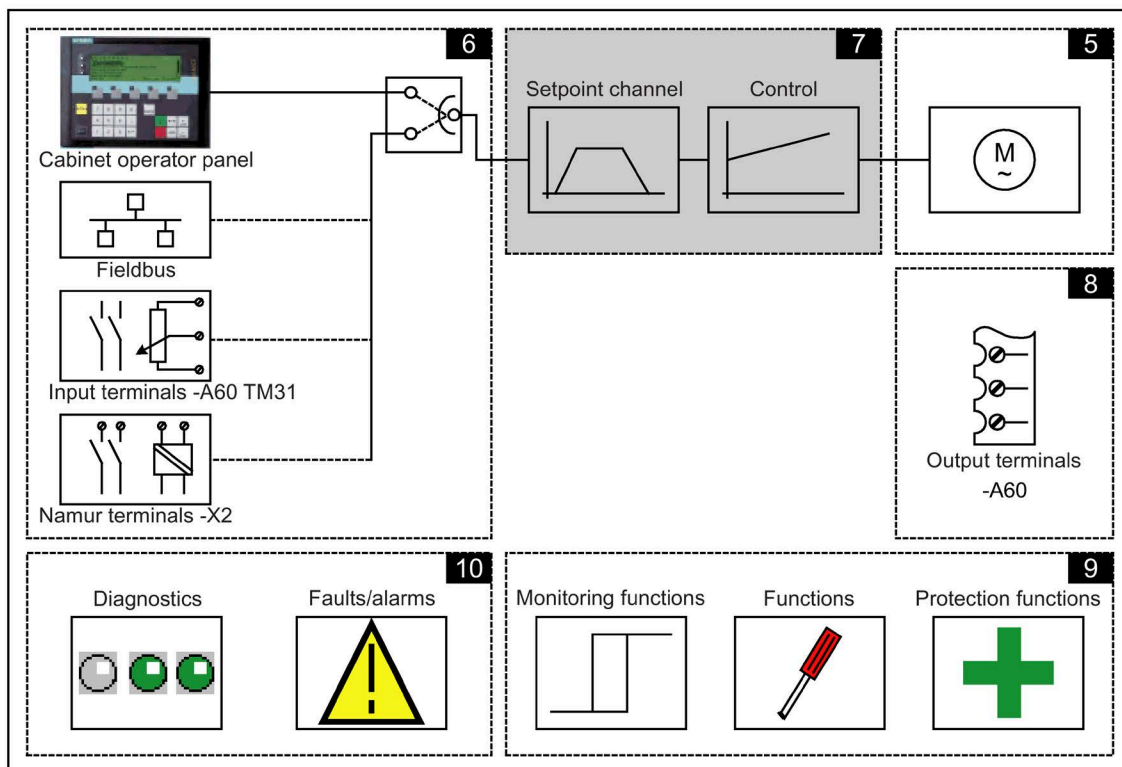


# Setpoint channel and closed-loop control

## 7.1 Chapter content

This chapter provides information on the setpoint channel and closed-loop control functions.

- Setpoint channel
  - Direction reversal
  - Skip speed
  - Minimum speed
  - Speed limitation
  - Ramp-function generator
- U/f control
- Vector speed control with / without encoder



### Function diagrams

At certain points in this chapter, reference is made to function diagrams. These can be found on the customer DVD in the "SINAMICS G130/G150 List Manual", which provides experienced users with detailed descriptions of all the functions.

## 7.2 Setpoint channel

### 7.2.1 Setpoint addition

#### Description

The supplementary setpoint can be used to enter correction values from higher-level closed-loop controls. This can be implemented using the summing point of the main/supplementary setpoint in the setpoint channel. Both variables are imported simultaneously via two separate or one setpoint source and added in the setpoint channel.

#### Function diagram

FD 3030      Main/added setpoint, setpoint scaling, jogging

#### Parameter

- p1070      Main setpoint
- p1071      Main setpoint scaling
- r1073      Main setpoint effective
- p1075      Supplementary setpoint
- p1076      Supplementary setpoint scaling
- r1077      Supplementary setpoint effective
- r1078      Total setpoint effective



## 7.2.2 Direction reversal

### Description

Due to the direction reversal in the setpoint channel the drive can be operated in both directions with the same setpoint polarity.

Use the p1110 or p1111 parameter to block negative or positive direction of rotation.

---

#### Note

##### Incorrect rotating field when the cables were routed

If an incorrect phase sequence was connected when the cables were installed, and the cabling cannot be changed, the phase sequence can be changed during drive commissioning using p1821 (phase sequence direction reversal), thus enabling a direction reversal. Modifying parameter p1821 produces a direction reversal of the motor and the actual encoder value without changing the setpoint.

---

### Preconditions

Direction reversal is initiated:

- via PROFIBUS by means of control word 1, bit 11
- via the cabinet operator panel (LOCAL mode) with the "Direction reversal" key.

---

#### Note

##### Delivery condition

Note that only one direction of rotation is enabled in the delivery condition when control is carried out via the AOP30.

---

### Function diagram

FP 3040      Direction limitation and direction reversal

### Parameter

- p1110      BI: Inhibit negative direction
- p1111      BI: Inhibit positive direction
- p1113      BI: Setpoint inversion
- r1114      Setpoint after direction limiting

### 7.2.3 Skip frequency bands and minimum speed

#### Description

In the case of variable-speed drives, it is possible for the control range of the overall drive train to contain bending-critical speeds that the drive must not be operated at or the vicinity of in steady-state condition. In other words, although the drive can pass through this range, it must not remain within it because resonant oscillations may be excited. The skip frequency bands allow this range to be blocked for steady-state operation. Because the points at which critical whirling speeds occur in a drive train can vary depending on age or thermal factors, a broader control range must be blocked. To prevent constant speed step changes in the vicinity of these skip frequency bands (speeds), they are provided with a hysteresis. The skip speed values apply in the positive and negative directions of rotation.

Specifying a minimum speed allows a specific range to be disabled around speed 0 rpm for steady-state operation.

#### Signal flow diagram

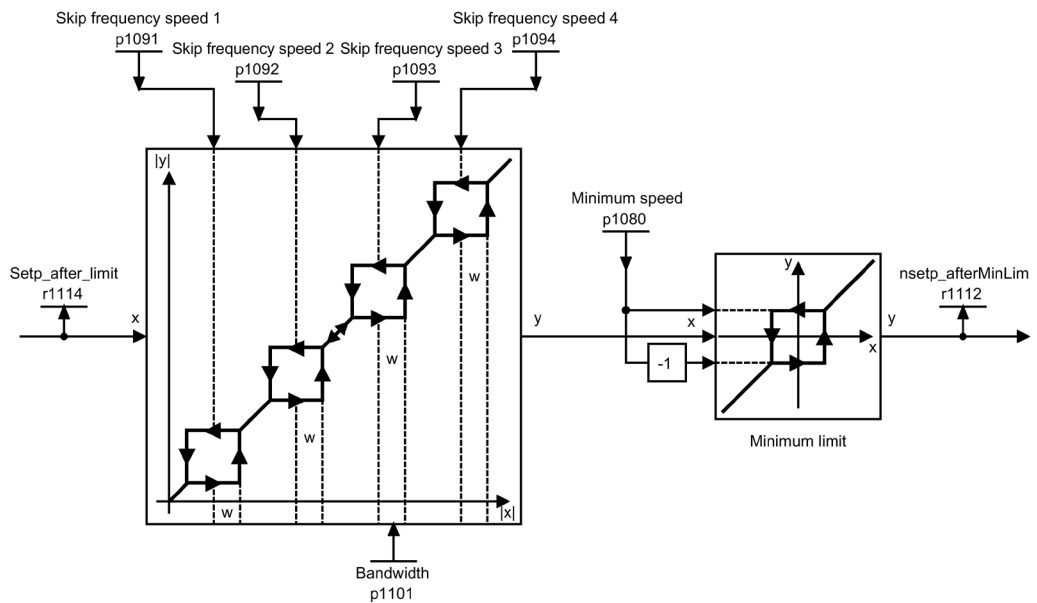


Figure 7-1 Signal flow diagram: Skip frequency bands and minimum speed

#### Function diagram

FP 3050 Skip frequency bands and speed limiting

## Parameter

- p1080 Minimum speed
- p1091 Skip frequency speed 1
- p1092 Skip frequency speed 2
- p1093 Skip frequency speed 3
- p1094 Skip frequency speed 4
- p1098 Suppression speed scaling
- r1099.0 Suppression bandwidth status word
- p1101 Skip frequency speed bandwidth
- p1106 Minimum speed signal source
- r1112 Speed setpoint after minimum limiting

## 7.2.4 Speed limitation

### Description

Speed limitation aims to limit the maximum permissible speed of the entire drive train to protect the drive and load machine/process against damage caused by excessive speeds.

### Signal flow diagram

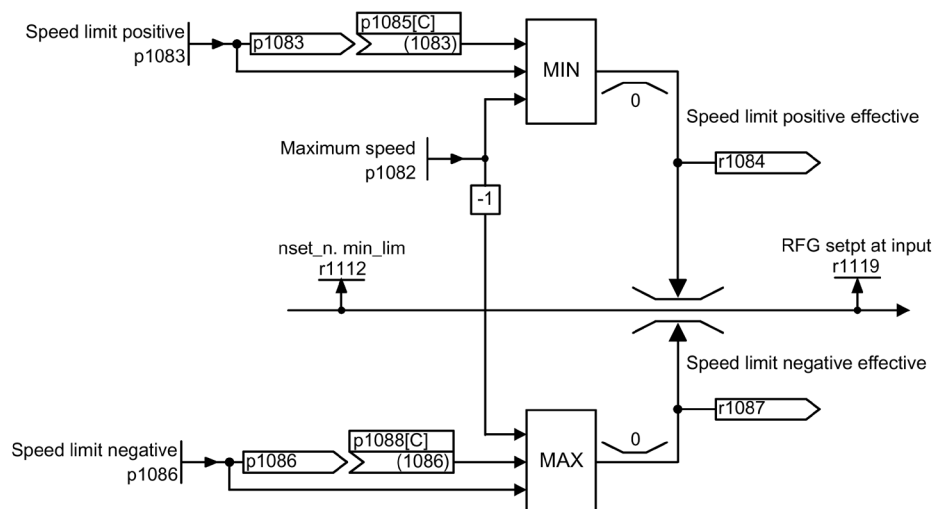


Figure 7-2 Signal flow diagram: Speed limitation

**Function diagram**

FP 3050      Skip frequency bands and speed limiting

**Parameter**

- p1082      Maximum speed
- p1083      CO: Speed limit in positive direction of rotation
- r1084      CO: Speed limit positive effective
- p1085      CI: Speed limit in positive direction of rotation
- p1086      CO: Speed limit in negative direction of rotation
- r1087      CO: Speed limit negative effective
- p1088      CI: Speed limit in negative direction of rotation
- r1119      CO: Ramp-function generator setpoint at the input

**7.2.5 Ramp-function generator****Description**

The ramp-function generator limits the rate at which the setpoint changes when the drive is accelerating or decelerating. This prevents excessive setpoint step changes from damaging the drive train. Additional rounding times can also be set in the lower and upper speed ranges to improve control quality and prevent load surges, thereby protecting mechanical components, such as shafts and couplings.

The ramp-up and ramp-down times each refer to the maximum speed (p1082). The rounding times that can be set can prevent the actual speed value from being overshoot when the setpoint is approached, thereby improving control quality.

When final rounding set, a sudden reduction of the setpoint when ramping up can cause the setpoint to overshoot if continuous smoothing has been selected via p1134 = 0. The larger the selected final rounding time, the larger the overshoot.

Rounding is also effective in the zero crossover; in other words, when the direction is reversed, the ramp-function generator output is reduced to zero via initial rounding, the ramp-down time, and final rounding before the new, inverted setpoint is approached via initial rounding, the ramp-up time, and final rounding. Rounding times that can be set separately are active in the event of a fast stop (OFF3). The actual ramp-up/ramp-down times increase with active rounding.

The rounding type can be set using p1134 and separately activated/deactivated using p1151.0 at the zero point.

The ramp-up time (p1120) can be scaled using connector input p1138, the ramp-down time (p1121) using connector input p1139. Scaling is deactivated in the factory setting.

**Note****Effective ramp-up time**

The effective ramp-up time increases when you enter the initial and final rounding times.

$$\text{Effective ramp-up time} = p1120 + (0.5 \times p1130) + (0.5 \times p1131)$$

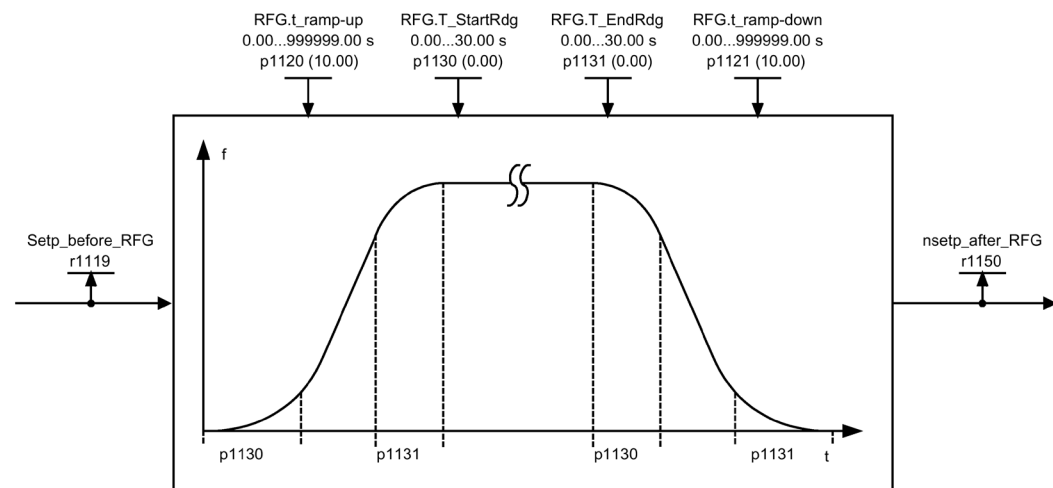
**Signal flow diagram**

Figure 7-3 Signal flow diagram: Ramp-function generator

**Ramp-function generator tracking**

If the drive is in range of the torque limits, the actual speed value moves away from the speed setpoint. The ramp-function generator tracking updates the speed setpoint in line with the actual speed value and so levels the ramp.

p1145 can be used to deactivate ramp-function generator tracking (p1145 = 0) or to set the permissible deviation (p1145 > 1). If the permissible deviation is reached, then the speed setpoint at the ramp-function generator output will only be increased further in proportion to the speed setpoint.

Parameters p1151.1 and p1151.2 can be used to set as to whether ramp-function generator tracking is realized with or without polarity change.

Parameter r1199.5 displays whether the ramp-function generator tracking is active.

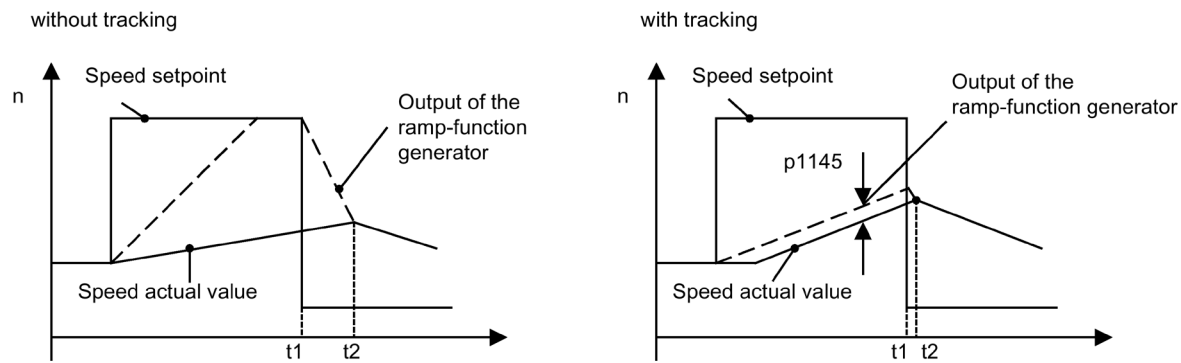


Figure 7-4 Ramp-function generator tracking

**Without ramp-function generator tracking**

- $p1145 = 0$
- Drive accelerates to  $t2$ , although the setpoint after  $t1$  is smaller than the actual value

**With ramp-function generator tracking**

- At  $p1145 > 1$  (values between 0 and 1 are not applicable), ramp-function generator tracking is activated when the torque limit is approached. The ramp-function generator output thereby only exceeds the actual speed value by the deviation value defined in  $p1145$ .
- $t1$  and  $t2$  are almost identical

## Function diagram

FP 3070	Extended ramp-function generator
FP 3080	Ramp-function generator selection, status word, tracking

## Parameter

- r1119 CO: Ramp-function generator setpoint at the input
- p1120 Ramp-function generator ramp-up time
- p1121 Ramp-function generator ramp-down time
- p1130 Ramp-function generator initial rounding time
- p1131 Ramp-function generator final rounding time
- p1134 Ramp-function generator rounding type
- p1135 OFF3 ramp-down time
- p1136 OFF3 initial rounding time
- p1137 OFF3 final rounding time
- p1138 CI: Ramp-function generator ramp-up time scaling
- p1139 CI: Ramp-function generator, ramp-down time
- p1140 BI: Enable ramp-function generator/disable ramp-function generator
- p1141 BI: Continue ramp-function generator/freeze ramp-function generator
- p1142 BI: Enable setpoint/inhibit setpoint
- P1143 BI: Accept ramp-function generator setting value
- P1144 CI: Ramp-function generator setting value
- p1145 Ramp-function generator tracking intensity
- P1148 Ramp function generator tolerance for ramp-up and ramp-down active
- r1149 CO: Ramp-function generator acceleration
- r1150 Ramp-function generator speed setpoint at the output
- p1151 Ramp-function generator configuration
- r1199.0...8 Ramp-function generator status word

## 7.3 V/f control

### Description

The simplest control technique is the U/f characteristic, whereby the stator voltage for the induction motor or synchronous motor is controlled proportionately to the stator frequency. This method has proved successful in a wide range of applications with low dynamic requirements, such as:

- Pumps and fans
- Belt drives
- Multi-motor drives

The objective of U/f control is to maintain a constant flux  $\Phi$  in the motor, whereby the flux is proportional to the magnetization current ( $I_\mu$ ) or the ratio of voltage (U) to frequency (f).

$$\Phi \sim I_\mu \sim U/f$$

The torque (M) generated by the induction motors is, in turn, proportional to the product (or, more precisely, the vector product ( $\Phi \times I$ )) of the flux and current.

$$M \sim \Phi \times I$$

To generate as much torque as possible with a given current, the motor must function using the greatest possible constant flux. To maintain a constant flux ( $\Phi$ ), therefore, the voltage (V) must change in proportion to the frequency (f) to ensure a constant magnetization current ( $I_\mu$ ). The U/f characteristic control is derived from these principles.

The field-weakening range is above the rated motor frequency, where the maximum voltage is reached. The flux and maximum torque decrease as the frequency increases; this is illustrated in the following diagram.

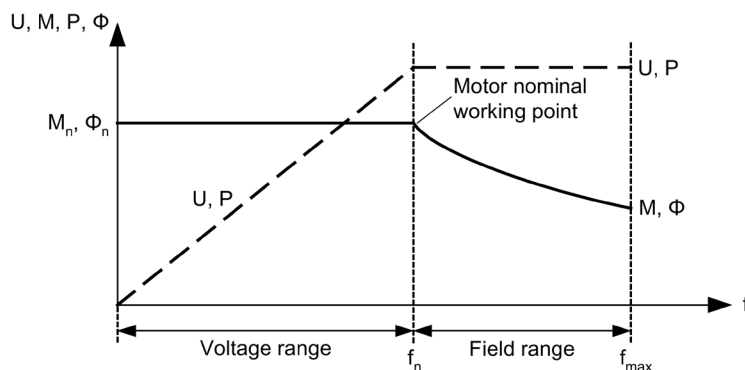


Figure 7-5 Operating areas and characteristic curves for the induction motor with converter supply

#### Note





##### Ratio between the rated motor current and the rated device current

For U/f control, the permissible range of the ratio between the rated motor current (p0305) and rated device current (r0207) is 1:1 to 1:12.



Several variations of the U/f characteristic exist, which are shown in the following table:

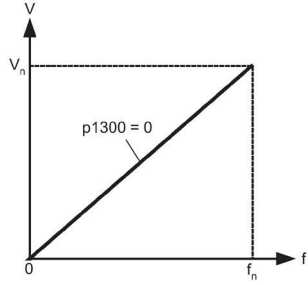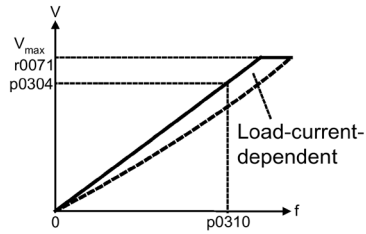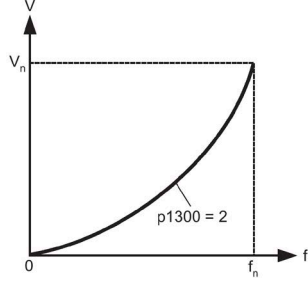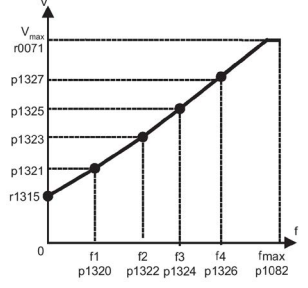Table 7- 1 p1300 U/f characteristics

Parameter value	Meaning	Application / property
0	Linear characteristic	Standard with variable voltage boost 
1	Linear characteristic with flux current control (FCC)	Characteristic that compensates for voltage losses in the stator resistance for static/dynamic loads (Flux Current Control FCC). This is especially relevant for small motors as these have a relatively high stator resistance. 
2	Parabolic characteristic	Characteristic that takes into account the motor torque curve (e.g. fan/pump). <ul style="list-style-type: none"> <li>Quadratic characteristic (<math>f^2</math> characteristic)</li> <li>Energy saving because the low voltage also results in small currents and losses.</li> </ul> 
3	Programmable characteristic	Characteristic that takes into account the motor/driven machine torque characteristic. 
4	Linear characteristic and ECO	Characteristic (see parameter value 0) and Eco mode at a constant operating point. <ul style="list-style-type: none"> <li>At constant operating point, the efficiency is optimized by varying the voltage.</li> <li>Active slip compensation is necessary here; the scaling must be set so that the slip is fully compensated (p1335 = 100%).</li> </ul>

Parameter value	Meaning	Application / property
5	Precise frequency drives (textiles)	Characteristic (see parameter value 0) that takes into account the specific technological features of an application (e.g. textile applications). <ul style="list-style-type: none"> <li>The current limiting (I<sub>max</sub> controller) only affects the output voltage and not the output frequency.</li> <li>The slip compensation and resonance damping are disabled.</li> </ul>
6	Precise frequency drives with flux current control (FCC)	Characteristic (see parameter value 1) that takes into account the specific technological features of an application (e.g. textile applications). <ul style="list-style-type: none"> <li>The current limiting (I<sub>max</sub> controller) only affects the output voltage and not the output frequency.</li> <li>The slip compensation and resonance damping are disabled.</li> </ul> Voltage losses in the stator resistance for static / dynamic loads are also compensated (flux current control, FCC). This is particularly useful for small motors, since they have a relatively high stator resistance.
7	Parabolic characteristic and ECO	Characteristic (see parameter value 1) and Eco mode at a constant operating point. <ul style="list-style-type: none"> <li>At constant operating point, the efficiency is optimized by varying the voltage.</li> <li>Active slip compensation is necessary here; the scaling must be set so that the slip is fully compensated (p1335 = 100%).</li> </ul>
19	Independent voltage setpoint	The user can define the output voltage of the converter independently of the frequency using BICO parameter p1330 via the interfaces (e.g. analog input AIO of the TM31 → p1330 = r4055[0]).

## Function diagram

FP 6300	<i>U/f</i> control, overview
FP 6301	<i>U/f</i> characteristic and voltage boost

## Parameter

- p1300 Open-loop/closed-loop control operating mode
- p1302 *U/f* control configuration
- p1320 *U/f* control programmable characteristic frequency 1
- ...
- p1327 *U/f* control programmable characteristic voltage 4
- p1330 CI: *U/f* control independent of voltage setpoint
- p1331 Voltage limitation
- p1333 *U/f* control FCC starting frequency
- r1348 *U/f* control Eco factor actual value
- p1350 *U/f* control soft starting

## 7.3.1 Voltage Boost

### Description

With low output frequencies, the U/f characteristics yield only a small output voltage.

Further, at low frequencies the ohmic resistance of the stator windings has an effect and can no longer be ignored with respect to the machine reactance. Therefore, at low frequencies the magnetic flux is no longer proportional to the magnetization current or the U/f ratio.

There are several reasons for using the "Voltage boost" function:

- Magnetization build-up of an induction motor at  $n = 0$  rpm
- Establishing a torque at  $n = 0$  rpm, e.g. in order to hold a load
- Applying a breakaway, acceleration or braking torque
- Compensating ohmic losses in the windings and feeder cables

You can choose whether the voltage boost is to be active permanently (p1310) or only during acceleration (p1311). In addition, a one-off voltage boost in the first power up after pulse enable can be set via p1312.

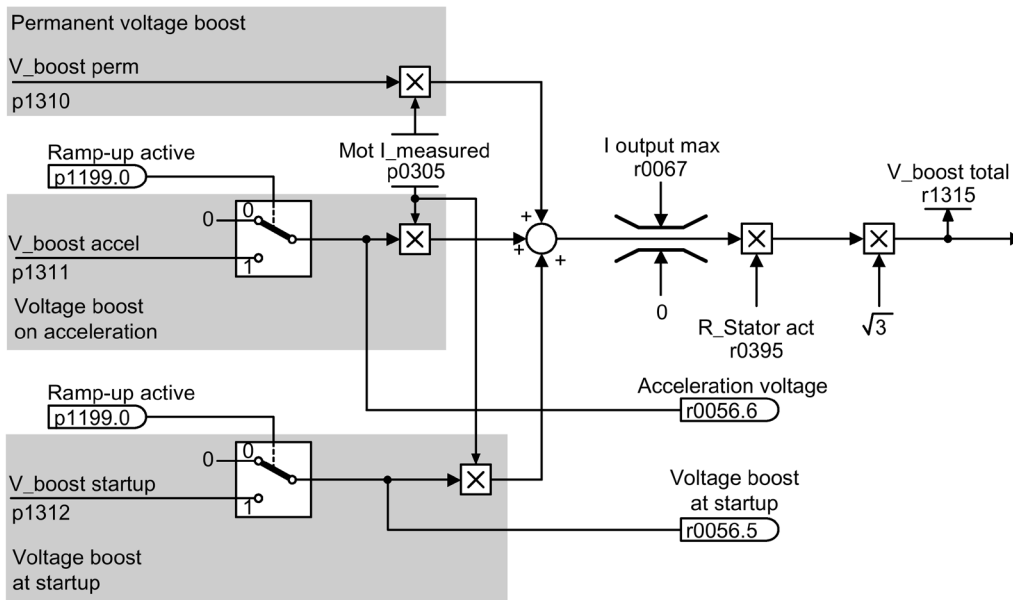


Figure 7-6 Voltage boost total

#### Note

#### Voltage boost effect

The voltage boost affects all U/f characteristics (p1300).

**Note**

**Excessive motor temperature rise**

If the voltage boost value is too high, this can result in a thermal overload of the motor winding and in turn a shutdown.

**Permanent voltage boost (p1310)**

The voltage boost is active across the entire frequency range up to the rated frequency  $f_n$ ; at higher frequencies, the value decreases continuously.

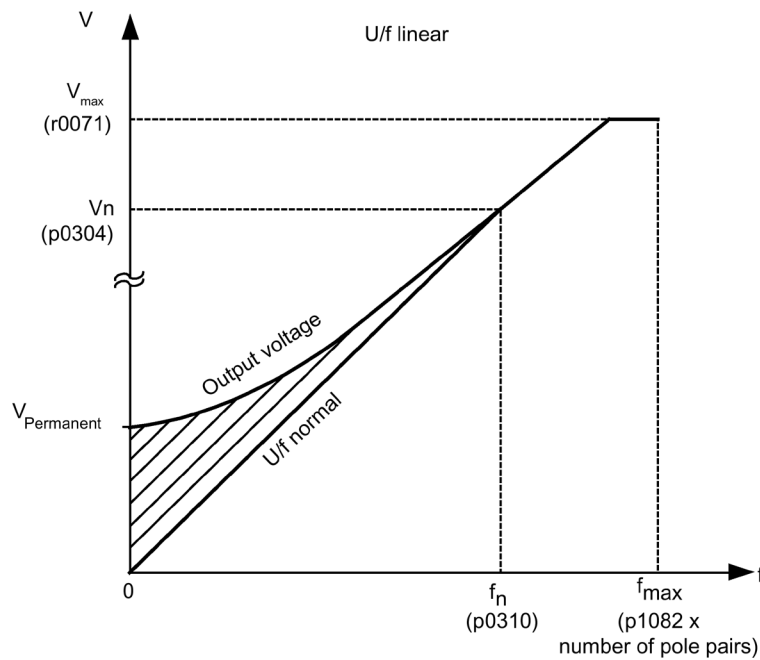


Figure 7-7 Permanent voltage boost (example: p1300 = 0, p1310 > 0, p1311 = p1312 = 0)

### Voltage boost during acceleration (p1311)

The voltage boost is only effective for one acceleration operation and only until the setpoint is reached.

Voltage boost is only effective if the signal "ramp-up active" ( $r1199.0 = 1$ ) is active.

You can use parameter r0056.6 to observe whether the voltage boost is active during acceleration.

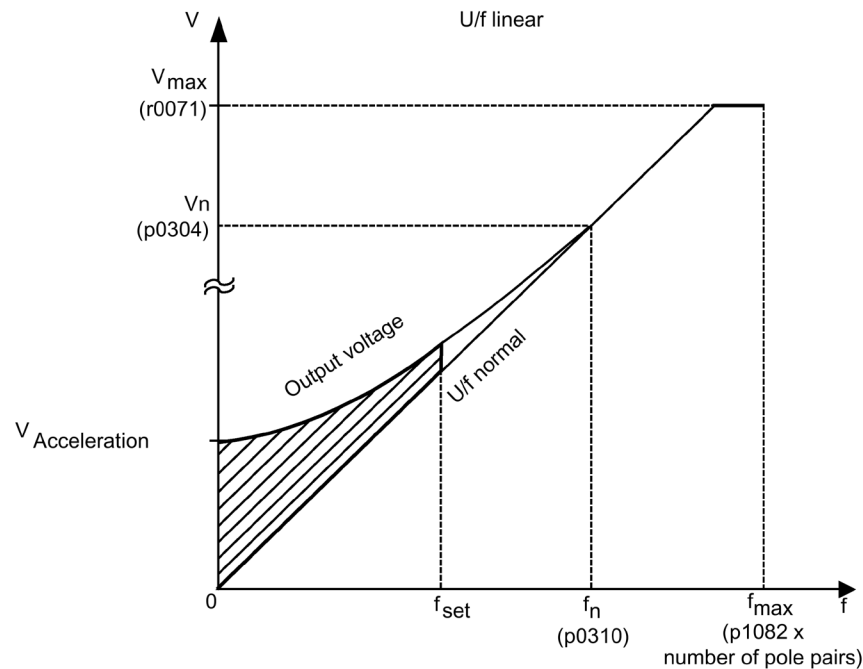


Figure 7-8 Voltage boost during acceleration (example:  $p1300 = 0$ ,  $p1310 = 0$ ,  $p1311 > 0$ )

### Voltage boost at startup (p1312)

The voltage boost is only effective for the first acceleration operation after pulse enable and only until the setpoint is reached.

Voltage boost is only effective if the signal "ramp-up active" ( $r1199.0 = 1$ ) is active.

You can use parameter r0056.5 to observe whether the voltage boost is active at startup.

### Function diagram

FP 6301 U/f characteristic and voltage boost

## Parameter

- r0056.5 Voltage boost at startup active/inactive
- r0056.6 Acceleration voltage active/inactive
- p0304 Rated motor voltage
- p0305 Rated motor current
- r0395 Stator resistance, actual
- p1310 Starting current (voltage boost) permanent
- p1311 Starting current (voltage boost) when accelerating
- p1312 Starting current (voltage boost) when starting
- r1315 Voltage boost total

## 7.3.2 Resonance damping

### Description

Resonance damping damps oscillations in the active current, which often occur during no-load operation.

Resonance damping is active in a range between 5 % and 90 % of the rated motor frequency (p0310). The switch-off frequency is determined by p1349.

For p1300 = 5 and 6 (textiles) the resonance damping is internally disabled in order to be able to precisely set the output frequency.

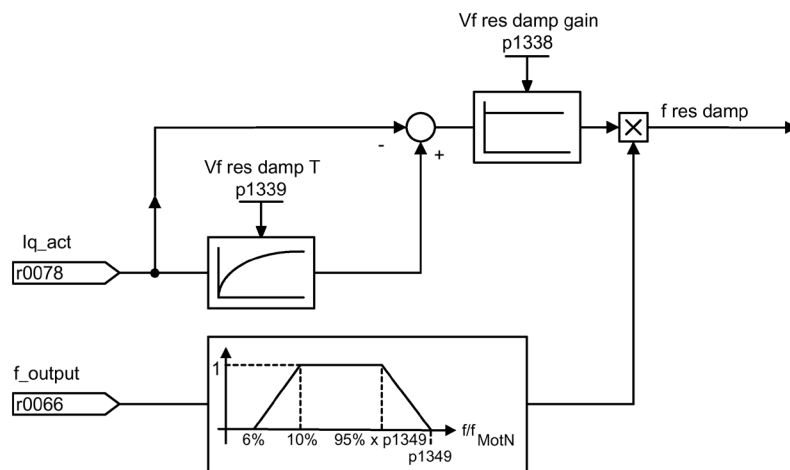


Figure 7-9 Resonance damping

**Note****Maximum frequency resonance damping**

When  $p1349 = 0$ , the changeover limit is automatically set to 95 % of the rated motor frequency, but only up to a maximum of 45 Hz.

**Function diagram**

FP 6310      Resonance damping and slip compensation

**Parameters**

- r0066      Output frequency
- r0078      torque-generating actual current value
- p1338      U/f control resonance damping gain
- p1339      U/f control resonance damping filter time constant
- p1349      U/f control resonance damping maximum frequency

**7.3.3 Slip compensation****Description**

The slip compensation acts so that the speed of induction motors is essentially kept constant independent of the load ( $M_1$  or  $M_2$ ).

When the load is increased from  $M_1$  to  $M_2$ , the setpoint frequency is increased automatically so that the resulting frequency, and therefore also the motor speed, remain constant. For a decrease in the load from  $M_2$  to  $M_1$ , the setpoint frequency is automatically decreased accordingly.

For  $p1300 = 4$  and  $7$  (U/f controls with ECO), the slip compensation must be activated to ensure correct operation.

For  $p1300 = 5$  and  $6$  (textiles) the slip compensation is internally disabled in order to be able to precisely set the output frequency.

If a motor holding brake is applied, a setting value can be specified at the slip compensation output via  $p1351$ . A parameter setting of  $p1351 > 0$  automatically activates the slip compensation ( $p1335 = 100\%$ ).

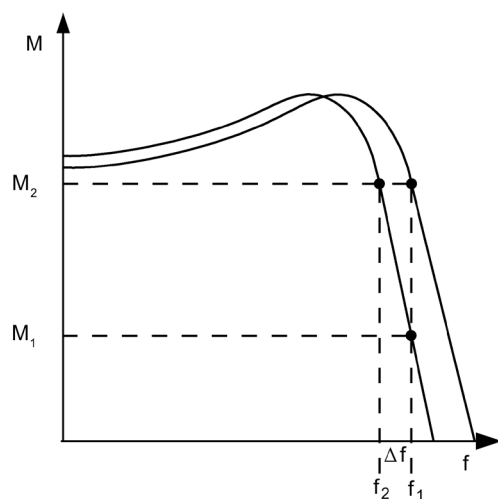


Figure 7-10 Slip compensation

## Function diagram

FP 6310      Resonance damping and slip compensation

## Parameters

- r0330      Rated motor slip
- p1334      Slip compensation start frequency
- p1335      Slip compensation, scaling  
p1335 = 0.0%: slip compensation is deactivated.  
p1335 = 100.0%: slip is fully compensated.
- p1336      Slip compensation limit value
- r1337      CO: Actual slip compensation
- p1351      CO: Motor holding brake start frequency



## 7.4 Vector speed/torque control with/without encoder

### Description

Compared with U/f control, vector control offers the following benefits:

- Stability vis-à-vis load and setpoint changes
- Short rise times with setpoint changes (→ better command behavior)
- Short settling times with load changes (→ better disturbance characteristic)
- Acceleration and braking are possible with maximum settable torque
- Motor protection due to variable torque limitation in motor and regenerative mode
- Drive and braking torque controlled independently of the speed
- Maximum breakaway torque possible at speed 0

These benefits are available without speed feedback.

Vector control can be used with or without an encoder.

The following criteria indicate when an encoder is required:

- High speed accuracy is required
- High dynamic response requirements
  - Better control behavior
  - Better response to disturbances
- Torque control is required in a control range greater than 1:10
- A defined and/or variable torque should be maintained for speeds below approx. 10 % of the rated motor frequency (p0310)
- A speed controller is normally always required for applications in which an unknown speed can represent a safety risk (where a load can drop, e.g. lifting gear, elevators, ...).

With regard to setpoint input, vector control is divided into:

- Speed control
- Torque/current control (in short: torque control)

### 7.4.1 Vector control without encoder

#### Description

For sensorless vector control only (SLVC: Sensorless Vector Control), the position of the flux and actual speed must be determined via the electric motor model. The model is buffered by the incoming currents and voltages. At low frequencies (approx. 0 Hz), the model cannot determine the speed.

For this reason and due to uncertainties in the model parameters or inaccurate measurements, the system is switched from closed-loop to open-loop operation in this range.

The switchover between closed-loop/open-loop controlled operation is controlled on the basis of time and frequency conditions (p1755, p1756, p1758 - only for induction motors). The system does not wait for the time condition to elapse if the setpoint frequency at the ramp-function generator input and the actual frequency are below  $p1755 \times (1 - (p1756 / 100\%))$  simultaneously.

The transition from open-loop to closed-loop operation always takes place when the changeover speed in p1755 is exceeded (characteristic ① in the diagram below). If the speed increase is set very slow and a changeover delay time > 0 is set in p1759, then the transition takes place after the changeover delay time (characteristic ② in the diagram below).

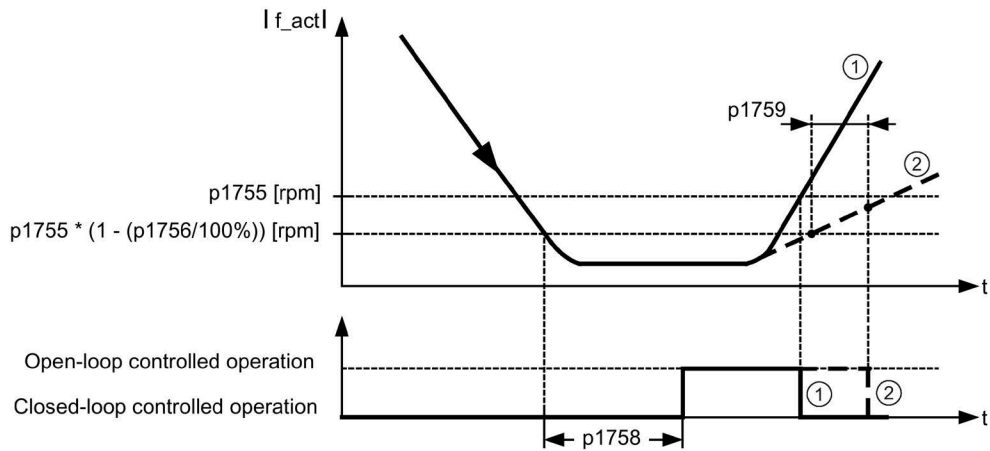


Figure 7-11 Changeover conditions

## Setting the torque setpoint

In open-loop operation, the calculated actual speed value is the same as the setpoint value. For vertical loads and when accelerating, parameters p1610 (static torque setpoint) and p1611 (additional acceleration torque) must be adjusted to the necessary maximum torque in order to generate the static or dynamic load torque of the drive.

- If, for an induction motor, p1610 is set to 0 %, then only the magnetization current r0331 is impressed.  
If a value of 100 % is set, then the rated motor current p0305 is impressed.
- For permanent-magnet synchronous motors, at p1610 = 0%, a pre-control absolute value derived from the supplementary torque r1515 remains instead of the magnetizing current for induction motors.

To ensure that the drive does not stall during acceleration, p1611 can be increased or acceleration pre-control for the speed controller can be used. This is also advisable to ensure that the motor is not subject to thermal overload at low speeds.

If the moment of inertia of the drive is almost constant, acceleration precontrol using p1496 offers more advantages than the supplementary accelerating torque with p1611. For the rotating measurement, the moment of inertia of the drive is determined using p1900 = 3 and p1960 = 1.

## Features of the vector control without actual value speed encoder

Vector control without a speed sensor has the following characteristics at low frequencies:

- Closed-loop controlled operation for passive loads up to approx. 0 Hz output frequency (p0500 = 2), for p1750.2 = 1 and p1750.3 = 1).
- Start an induction motor in the closed-loop controlled mode (after the motor has been completely excited), if the speed setpoint before the ramp-function generator is greater than p1755.
- Reversing without the need to switch into the open-loop controlled mode is possible, if the range of the changeover speed (p1755) is passed through in a shorter time than the changeover wait time set (p1758), and the speed setpoint before the ramp-function generator lies outside the open-loop controlled speed range (p1755).
- In the "Torque control" mode, at low speeds, the system always switches over into the open-loop controlled mode.

---

### Note

#### Precondition

In this case, the speed setpoint upstream of the ramp-function generator must be greater than the changeover speed in p1755.

---

### Advantages of closed-loop controlled operation down to $f = 0$ Hz

Closed-loop operation to approx. 0 Hz (can be set using parameter p1755) and the possibility to start or reverse at 0 Hz directly in closed-loop controlled operation (can be set using parameter p1750) result in the following benefits:

- No switchover operation required within closed-loop control (bumpless behavior, no frequency dips, no discontinuities in the torque).
- Closed-loop speed control without encoder down to and including 0 Hz
- Passive loads down to a frequency of 0 Hz
- Steady-state closed-loop speed control down to approx. 0 Hz possible
- Higher dynamic performance when compared to open-loop controlled operation

---

#### Note

##### Automatic changeover

If, in the closed-loop controlled mode, start from 0 Hz or reversing takes longer than 2 s, or the time set in p1758 - then the system automatically changes over from closed-loop controlled into open-loop controlled operation.

---

#### Note

##### Operation in sensorless torque control

Operation in sensor less torque control only makes sense if, in the speed range below the changeover speed of the motor model (p1755), the setpoint torque is greater than the load torque. The drive must be able to follow the setpoint and the associated setpoint speed (p1499).

---

## Closed-loop operation down to standstill for passive loads

By restricting to a passive load at the starting point, it is possible to maintain stationary closed-loop operation down to zero frequency (standstill) without having to change over to open-loop operation.

Parameter p1750.2 = 1 must be set.

The closed-loop control without switchover is restricted to applications involving passive loads:

These include applications in which the load cannot produce a regenerative torque when starting and the motor comes to a standstill when pulses are inhibited; for example, loads with high moments of inertia, brakes, pumps, fans, centrifuges, extruders, ....

Standstill of any duration is possible without holding current, only the motor magnetization current is impressed.

Steady-state regenerative operation at a frequency close to 0 Hz is not possible.

It is also possible to select sensorless control for passive loads during commissioning by setting p0500 = 2 (technology application = passive loads (for sensorless control down to  $f = 0$ )).

This function is activated automatically if quick commissioning is exited with p3900 > 0, or if automatic calculation is called (p0340 = 1, 3, 5 or p0578 = 1).

## Blocking drives

If the load torque is higher than the torque limiting of the sensorless vector control, the drive is braked to zero speed (standstill). To avoid open-loop controlled mode being selected after the time p1758, p1750.6 can be set to 1. Under certain circumstances p2177 (Motor blocked delay time) must be increased.

---

### Note

#### Exception for reversing drives

It is not permissible to use this setting if the load can force the drive to reverse.

---

## Active loads

Active loads, with which the drive can be reversed, must be started with open-loop speed control (e.g. hoisting gear). In this case, bit p1750.6 must be set to 0 (open-loop controlled operation when the motor is blocked). The static (steady state) torque setpoint (p1610) must be greater than the maximum occurring load torque.

---

### Note

#### Loads that can drive the motor

For applications with high regenerative load torques at low speeds, p1750.7 can also be set to 1. As a result, the speed changeover limits of the motor model are increased and a faster changeover can be made into open-loop controlled operation.

---

## Permanent-magnet synchronous motors

### Standard procedure: open-loop controlled operation at low speeds

Permanent-magnet synchronous motors are normally started and reversed in open-loop controlled operation. The changeover speeds are set to 10% as well as 5% of the rated motor speed. Changeover is not subject to any time condition (p1758 is not evaluated). Prevailing load torques (motor or regenerative) are adapted in open-loop operation, facilitating constant-torque crossover to closed-loop operation even under high static loads. Whenever the pulses are enabled, the rotor position is identified.

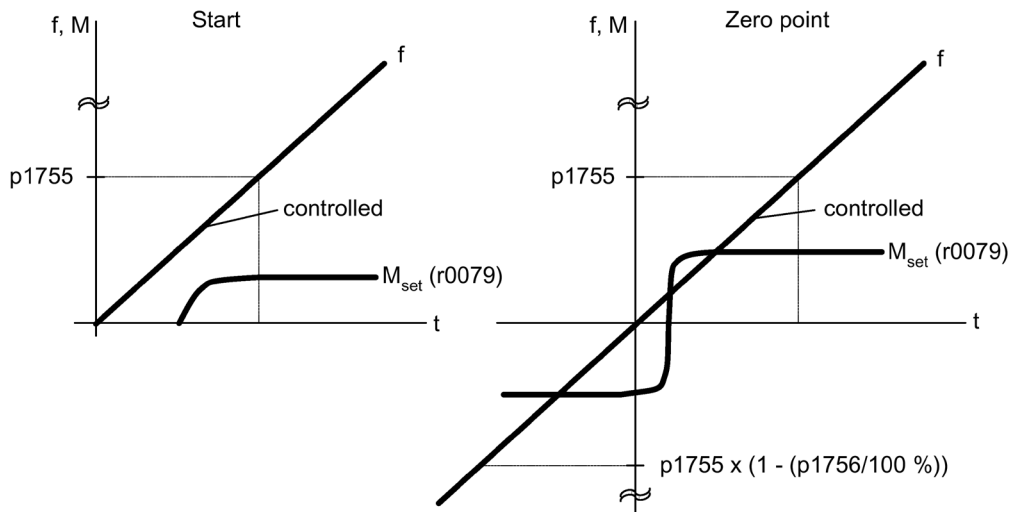


Figure 7-12 Zero crossing in open-loop controlled operation at low speeds

#### Extended method: closed-loop controlled operation to zero speed

By superimposing high-frequency pulses on the driving fundamental voltage and evaluating the resulting offset pulse in the machine current, it is possible to determine the continuous rotor position up to frequency zero (standstill).

1FW4 and 1PH8 series Siemens torque motors can be started from standstill with any load up to the rated torque or even hold the load at standstill.

The procedure is suitable for motors with internal magnets.

---

#### Note

##### Use of a sine-wave filter

If a sine-wave filter is used, the open-loop controlled procedure should be used.

---

The following advantages are obtained by maintaining closed-loop controlled operation:

- No switchover required within closed-loop control (smooth switching, no discontinuities in the torque).
- Sensorless closed-loop speed and torque control down to and including 0 Hz
- Higher dynamic performance when compared to open-loop controlled operation.
- Encoderless operation of drive line-ups (e.g. in the paper industry, master-slave operation).
- Active (including hanging/suspended) loads down to zero frequency.

Supplementary conditions for the use of third-party motors:

- Experience shows that the procedure is very suitable for motors with magnets within the rotor core (IPMSM - Interior Permanent Magnet Synchronous Motors).
- The ratio of stator quadrature reactance ( $L_{sq}$ ): Stator direct-axis reactance ( $L_{sd}$ ) must be  $> 1$  (recommendation: minimum  $> 1.5$ ).
- The possible operating limits of the procedure depend upon up to what current the asymmetrical reactance ratio ( $L_{sq}:L_{sd}$ ) is retained in the motor. If the procedure should be operable up to the rated motor torque, then the reactance ratio must be retained up to the rated motor current.

A prerequisite for optimum behavior is the entry of the following parameters:

- Enter the saturation characteristic: p0362 - p0369
- Enter the load characteristic: p0398, p0399

Commissioning sequence for closed-loop controlled operation to zero speed:

- Run through the commissioning with motor identification at standstill.
- Enter the parameters for the saturation characteristic and the load characteristic.
- Activate closed-loop controlled operation down to zero speed using parameter  $p1750.5 = 1$ .

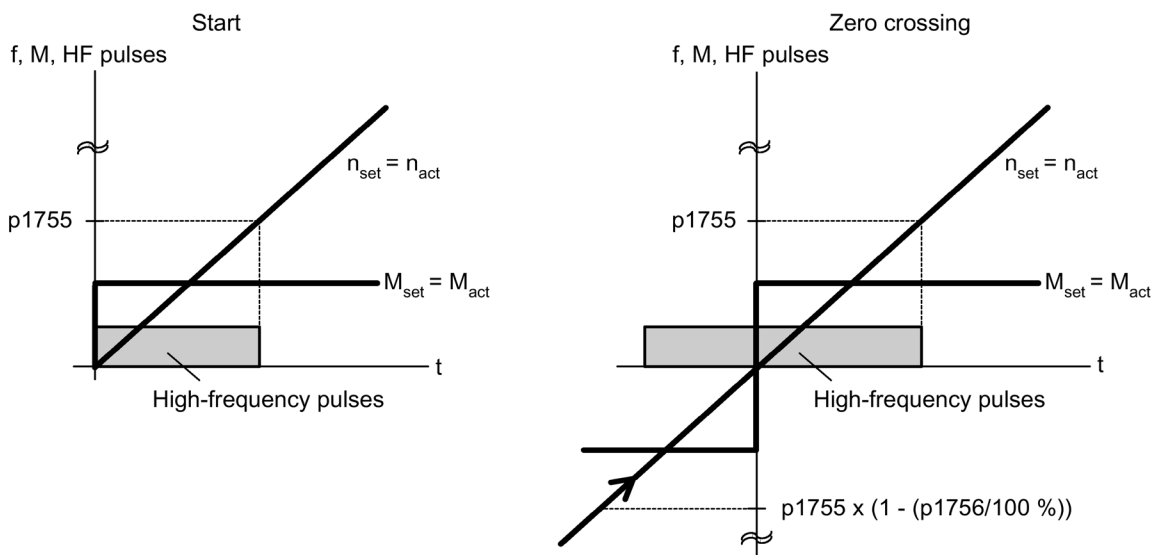


Figure 7-13 Zero crossing in closed-loop controlled operation to zero speed

## Function diagram

FP 6730	Interface to Motor Module (ASM), p0300 = 1)
FP 6731	Interface to Motor Module (PEM), p0300 = 2)

## Parameters

- p0305 Rated motor current
- r0331 Motor magnetizing current/short-circuit current
- p0362 Saturation characteristic flux 1
- ...
- p0365 Saturation characteristic flux 4
- p0366 Saturation characteristic I\_mag 1
- ...
- p0369 Saturation characteristic I\_mag 4
- p0398 Magnet angle. Decoupling (cross saturation) coefficient 1
- p0398 Magnet angle. Decoupling (cross saturation) coefficient 3
- p0500 Technology application
- p0578 Calculating technology/unit-dependent parameters
- p1605 Pulse technique pattern configuration
- r1606 CO: Actual pulse technique pattern
- p1607 Pulse technique stimulus
- r1608 CO: Pulse technique answer
- p1610 Torque setpoint static (SLVC)
- p1611 Supplementary accelerating torque (SLVC)
- p1750 Motor model configuration
- p1755 Motor model changeover speed encoderless operation
- p1756 Motor model changeover speed hysteresis
- p1758 Motor model changeover delay time, closed/open-loop control
- p1759 Motor model changeover delay time open/closed loop control
- r1762.1 Motor model deviation component 1 - deviation model 2
- p1798 Motor model pulse technique speed adaptation Kp
- p1810.3 Modulator configuration - current measurement oversampling activated (for pulse technique PEM)



## 7.4.2 Vector control with encoder

### Description

Benefits of vector control with an encoder:

- The speed can be controlled right down to 0 Hz (standstill)
- Stable control response throughout the entire speed range
- Allows a defined and/or variable torque for speeds below approx. 10% of the rated motor speed to be maintained
- Compared with speed control without an encoder, the dynamic response of drives with an encoder is significantly better because the speed is measured directly and integrated in the model created for the current components.

### Motor model change

A model change takes place between the current model and the observer model within the speed range  $p1752 \times (100\% - p1753)$  and  $p1752$ . In the current-model range (i.e., at lower speeds), torque accuracy depends on whether thermal tracking of the rotor resistance is carried out correctly. In the observer-model range and at speeds of less than approx. 20% of the rated speed, torque accuracy depends primarily on whether thermal tracking of the stator resistance is carried out correctly. If the resistance of the supply cable is greater than 20 to 30 % of the total resistance, this should be entered in  $p0352$  before motor data identification is carried out ( $p1900/p1910$ ).

To deactivate thermal adaptation, set  $p0620 = 0$ . This may be necessary if adaptation cannot function accurately enough due to the following general conditions.

Causes of inaccuracies:

- A sensor is not used for the temperature measurement and the ambient temperatures fluctuate significantly.
- The motor overtemperatures ( $p0626$  to  $p0628$ ) deviate greatly from the default settings as a result of its design.

### Function diagram

FP 4715	Actual speed value and rotor position measurement, motor encoder
FD 6030	Speed setpoint, droop
FP 6040	Speed controller with/without encoder
FP 6050	Speed controller adaptation ( $Kp_n/Tn_n$ adaptation)
FP 6060	Torque setpoint
FP 6490	Speed control configuration

### 7.4.3 Actual speed value filter

#### Description

The speed actual value filter is used to suppress cyclic disturbance variables in speed acquisition.

The speed actual value filter can be set as follows:

- 2nd order lowpass (PT2: -40 dB/decade)
- General 2nd order filter

Bandstop and low-pass with reduction are converted into the parameters of the general 2nd order filter using STARTER.

The speed actual value filter is activated with  $p1656.4 = 1$ . The properties of the speed actual value filter are set in  $p1677$  to  $p1681$ .

As long as changes to the data of the actual speed value filter are being made, the conversion of the new filter data can be prevented using  $p1699 = 1$ .

When  $p1699 = 0$  is set, the calculation will be performed and the new values applied.

---

#### Note

For the vector control, there are 2 current setpoint filters and one actual speed value filter. The actual speed value filter has been allocated the number "5".

---

#### Function diagrams

FP 4715 Encoder evaluation - speed actual value and pole position sensing, motor encoder (encoder1),  $n\_act\_filter$  5

#### Parameters

- $p1655[4]$  CI: Speed actual value filter 5 natural frequency tuning
- $p1656.4$  Speed actual value filter 5 activation
- $p1677$  Actual speed value filter 5 type
- $p1678$  Actual speed value filter 5 denominator natural frequency
- $p1679$  Actual speed value filter 5 denominator damping
- $p1680$  Actual speed value filter 5 numerator natural frequency
- $p1681$  Actual speed value filter 5 numerator damping
- $p1699$  Filter data acceptance

### 7.4.4 Speed controller

Both closed-loop control techniques with and without encoder (SLVC, VC) have the same speed controller structure that contains the following components as kernel:

- PI controller
- Speed controller pre-control
- Droop Function

The torque setpoint is generated from the total of the output variables and reduced to the permissible magnitude by means of torque setpoint limitation.

#### Function of the speed controller

The speed controller receives its setpoint (r0062) from the setpoint channel and its actual value (r0063) either directly from the speed actual value encoder (vector control with encoder) or indirectly via the motor model (encoderless vector control). The system difference is increased by the PI controller and, in conjunction with the pre-control, results in the torque setpoint.

When the load torque increases, the speed setpoint is reduced proportionately when the droop function is active, which means that the single drive within a group (two or more mechanically connected motors) is relieved when the torque becomes too great.

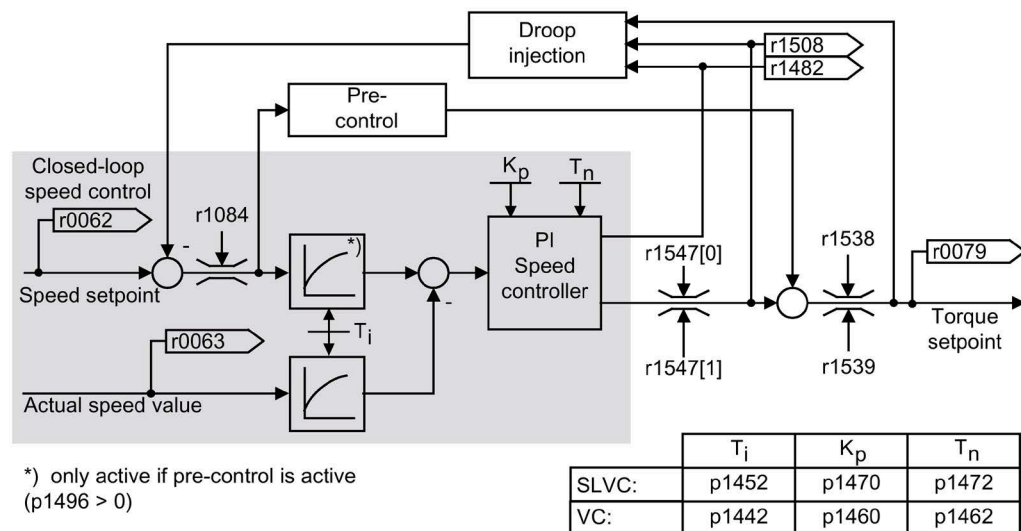


Figure 7-14 Speed controller

The optimum speed controller setting can be determined via the automatic speed controller optimization function (p1900 = 1, rotating measurement).

If the moment of inertia has been specified, the speed controller ( $K_p$ ,  $T_n$ ) can be calculated by means of automatic parameterization (p0340 = 4). The controller parameters are defined in accordance with the symmetrical optimum as follows:

$$T_n = 4 \times T_s$$

$$K_p = 0.5 \times r0345 / T_s = 2 \times r0345 / T_n$$

$$T_s = \text{Sum of the short delay times (includes p1442 and p1452).}$$

If vibrations occur with these settings, the speed controller gain ( $K_p$ ) will need to be reduced manually. Actual-speed-value smoothing can also be increased (standard procedure for gearless or high-frequency torsion vibrations) and the controller calculation performed again because this value is also used to calculate  $K_p$  and  $T_n$ .

The following relationships apply for optimization:

- If  $K_p$  is increased, the controller becomes faster, although overshoot is increased. However, signal ripples and vibrations in the speed control loop will increase.
- Although reducing  $T_n$  will also speed up the controller, it will increase overshoot.

When setting speed control manually, you are advised to define the dynamic response via  $K_p$  (and actual-speed-value smoothing) first, so that the integral time can subsequently be reduced as much as possible. Please remember that closed-loop control must also remain stable in the field-weakening range.

To suppress any vibrations that occur in the speed controller, it is usually only necessary to increase the smoothing time in p1452 for operation without an encoder or p1442 for operation with an encoder, or reduce the controller gain.

The integral output of the speed controller can be monitored via r1482 and the limited controller output via r1508 (torque setpoint).

---

#### Note

##### Reduced dynamic response for encoderless operation

In comparison with speed control with an encoder, the dynamic response of drives without an encoder is significantly reduced. The actual speed is derived by means of a model calculation based on the converter output variables for current and voltage that have a corresponding interference level. To this end, the actual speed must be adjusted by means of filter algorithms in the software.

---

### Speed controller response when a brake is opened

After a motor has been magnetized, "Open brake" is controlled. The value that the BICO input delivers defines the speed controller response:

- BICO input p1475 (torque setting value for the motor holding brake) supplies a value of 0:
  - The speed controller I component is immediately enabled; this means that the system can respond to a slipping load and establish a holding torque.
  - Depending on the parameter assignment, the speed setpoint remains inhibited until the brake opening time has elapsed ( $p1275.6 = 0$ ) - or until the brake feedback signal is received ( $p1275.6 = 1$ ).
- BICO input p1475 (torque setting value for the motor holding brake) supplies a value  $\neq 0$ :
  - The speed controller I component is held at the specified setting value until the "Brake open" feedback signal is received.
  - Only then are the speed controller I component and the speed setpoint enabled.

## Function diagram

FP 6040      Speed controller with/without encoder

## Parameters

- r0062      CO: Speed setpoint after the filter
- r0063      CO: Actual speed value smoothed
- p0340      Automatic calculation of motor/control parameters
- r0345      Rated motor startup time
- p1442      Speed controller actual speed value smoothing time
- p1452      Speed controller actual speed value smoothing time (without encoder)
- p1460      Speed controller P gain adaptation speed lower
- p1462      Speed controller integral time adaptation speed lower
- p1470      Speed controller encoderless operation P gain
- p1472      Speed controller encoderless operation integral time
- p1475      CI: Speed controller torque setting value for motor holding brake
- p1478      CI: Speed controller integrator setting value
- r1482      CO: Speed controller I torque output
- r1508      CO: Torque setpoint before supplementary torque
- p1960      Rotating measurement selection

## Examples of speed controller settings

A few examples of speed controller settings with vector control without encoders (p1300 = 20) are provided below. These should not be considered to be generally valid and must be checked in terms of the control response required.

- **Fans (large centrifugal masses) and pumps**

$K_p$  (p1470) = 2 ... 10

$T_n$  (p1472) = 250 ... 500 ms

The  $K_p = 2$  and  $T_n = 500$  ms settings result in asymptotic approximation of the actual speed to the setpoint speed after a setpoint step change. During many simple control procedures, this is satisfactory for pumps and fans.

- **Stone mills, separators (large centrifugal masses)**

$K_p$  (p1470) = 12 ... 20

$T_n$  (p1472) = 500 ... 1000 ms

- **Kneader drives**

$K_p$  (p1470) = 10

$T_n$  (p1472) = 200 ... 400 ms

---

**Note**

**Check speed control gain**

We recommend checking the effective speed control gain (r1468) during operation. If this value changes during operation, the  $K_p$  adaptation is being used (p1400.5 = 1).  $K_p$  adaptation can if necessary be deactivated or its behavior changed.

---

- **When operating with encoder (p1300 = 21)**

A smoothing value for the actual speed value (p1442) = 5 ... 20 ms ensures quieter operations for motors with gear units.

#### 7.4.4.1 Speed controller pre-control (integrated pre-control with balancing)

##### Description

The command behavior of the speed control loop can be improved by calculating the accelerating torque from the speed setpoint and connecting it on the line side of the speed controller. This torque setpoint  $m_v$  is applied directly as an additive reference variable on the input side/supply side of the current controller by means of adaptation elements (enabled via p1496).

The torque setpoint ( $m_v$ ) is calculated from:

$$m_v = p1496 \times J \times (dn/dt) = p1496 \times p0341 \times p0342 \times (dn/dt)$$

The motor moment of inertia p0341 is calculated when commissioning the drive system. The factor p0342 between the total moment of inertia  $J$  and the motor moment of inertia must be determined manually or by optimizing the speed controller. The acceleration is calculated from the speed difference over the time  $dn/dt$ .

---

**Note**

**When using speed controller optimization**

When optimizing the speed controller, the ratio between the total moment of inertia and that of the motor (p0342) is determined and acceleration precontrol scaling (p1496) is set to 100 %.

If  $p1400.2 = p1400.3 = 0$ , then the pre-control balancing is automatically set.

---

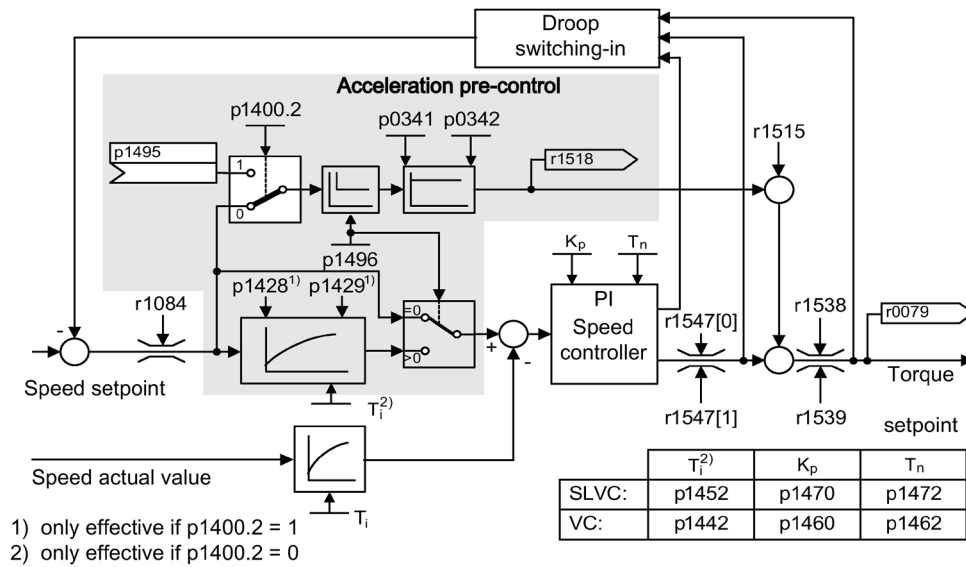


Figure 7-15 Speed controller with pre-control

When correctly adapted, when accelerating, the speed controller only has to compensate disturbance variables in its control loop. This is achieved with a relatively minor controlled variable change at the controller output. Speed setpoint changes, on the other hand, are carried out without involving the speed controller and are, therefore, performed more quickly.

The effect of the pre-control variable can be adapted according to the application using the weighting factor p1496. For p1496 = 100 %, precontrol is calculated according to the motor and load moment of inertia (p0341, p0342). A balancing filter is used automatically to prevent the speed controller acting against the injected torque setpoint. The time constant of the balancing filter corresponds to the equivalent delay time of the speed control loop. Speed controller pre-control is correctly set (p1496 = 100%, calibration using p0342) if the I component of the speed controller (r1482) does not change while ramping-up or ramping-down in the range  $n > 20 \% \times p0310$ . Thus, pre-control allows a new speed setpoint to be approached without overshoot (prerequisite: torque limiting does switch in and the moment of inertia remains constant).

If the speed controller is pre-controlled by means of injection, the speed setpoint (r0062) is delayed with the same smoothing time (p1442 or p1452) as the actual value (r1445). This ensures that no target/actual difference (r0064) occurs at the controller input during acceleration, which would be attributable solely to the signal propagation time.

When speed pre-control is activated, the speed setpoint must be specified continuously or without a higher interference level (avoids sudden torque changes). An appropriate signal can be generated by smoothing the speed setpoint or activating ramp-function generator rounding p1130 – p1131.

The startup time r0345 ( $T_{\text{startup}}$ ) is a measure for the total moment of inertia J of the machine and describes the time during which the unloaded drive can be accelerated with the rated motor torque r0333 ( $M_{\text{mot,rated}}$ ) from standstill to the rated motor speed p0311 ( $n_{\text{mot,rated}}$ ).

$$r0345 = T_{\text{startup}} = J \times (2 \times \pi \times n_{\text{mot,rated}}) / (60 \times M_{\text{mot,rated}}) = p0341 \times p0342 \times (2 \times \pi \times p0311) / (60 \times r0333)$$

If these supplementary conditions are in line with the application, the starting time can be used as the lowest value for the ramp-up or ramp-down time.

---

**Note**

**Setting the ramp-function generator**

The ramp-up and ramp-down times (p1120; p1121) of the ramp-function generator in the setpoint channel should be set accordingly so that the motor speed can track the setpoint during acceleration and braking. This will optimize the function of speed controller pre-control.

---

The acceleration precontrol using a connector input (p1495) is activated by the parameter settings p1400.2 = 1 and p1400.3 = 0. p1428 (dead time) and p1429 (time constant) can be set for balancing purposes.

**Function diagram**

FP 6031      Precontrol balancing reference/acceleration model

**Parameter**

- p0311      Rated motor speed
- r0333      Rated motor torque
- p0341      Motor moment of inertia
- p0342      Ratio between the total and motor moment of inertia
- r0345      Rated motor startup time
- p1400.2    Acceleration pre-control source
- p1428      Speed pre-control balancing dead time
- p1429      Speed pre-control balancing time constant
- p1496      Acceleration pre-control scaling
- r1518      Acceleration torque



### 7.4.4.2 Reference model

#### Description

The reference model is activated with  $p1400.3 = 1$ .

The reference model is used to emulate the speed control loop with a P speed controller.

The loop emulation can be set in  $p1433$  to  $p1435$ . It becomes effective if  $p1437$  is connected to the output of the model  $r1436$ .

The reference model delays the setpoint-actual value deviation for the integral component of the speed controller so that settling (stabilizing) operations can be suppressed.

The reference model can also be externally emulated and the external signal entered via  $p1437$ .

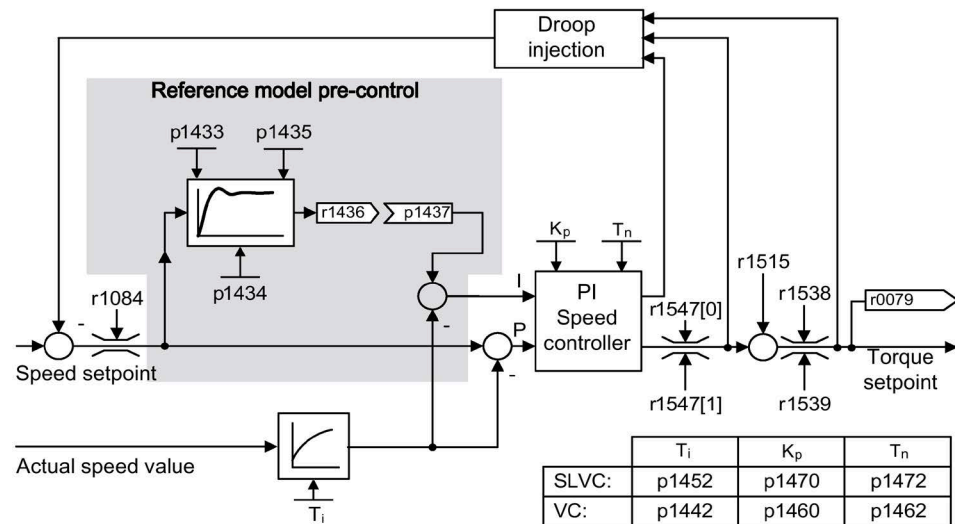


Figure 7-16 Reference model

#### Function diagram

FP 6031 Precontrol balancing reference/acceleration model

#### Parameter

- $p1400.3$  Reference model speed setpoint I component
- $p1433$  Speed controller reference model natural frequency
- $p1434$  Speed controller reference model damping
- $p1435$  Speed controller reference model dead time
- $r1436$  Speed controller reference model speed setpoint output
- $p1437$  Speed controller reference model I component input

### 7.4.4.3 Speed controller adaptation

#### Description

With the speed controller adaptation, any speed controller oscillation can be suppressed.

The speed-dependent  $K_p_n/T_n_n$  adaptation is activated as default setting. The required values are automatically calculated when commissioning and for the rotating measurement. If, in spite of the automatic calculation, speed oscillations occur, then the  $K_p_n$  component can also be tuned (optimized) using the free  $K_p_n$  adaptation. The free  $K_p_n$  adaptation is activated by connecting a signal source at p1455. The factor calculated from this is multiplied by the  $K_p_n$  value of the speed-dependent adaptation. The range of action of the free  $K_p_n$  adaptation is set using parameters p1456 to p1459

In addition, using  $p1400.6 = 1$ , the  $T_n_n$  component of the speed-dependent adaptation can be tuned. The  $T_n_n$  value of the speed-dependent adaptation is divided by the factor of the free adaptation.

The  $K_p_n/T_n_n$  adaptation can be deactivated with  $p1400.5 = 0$ . As a consequence, the dynamic reduction of the speed controller is deactivated.

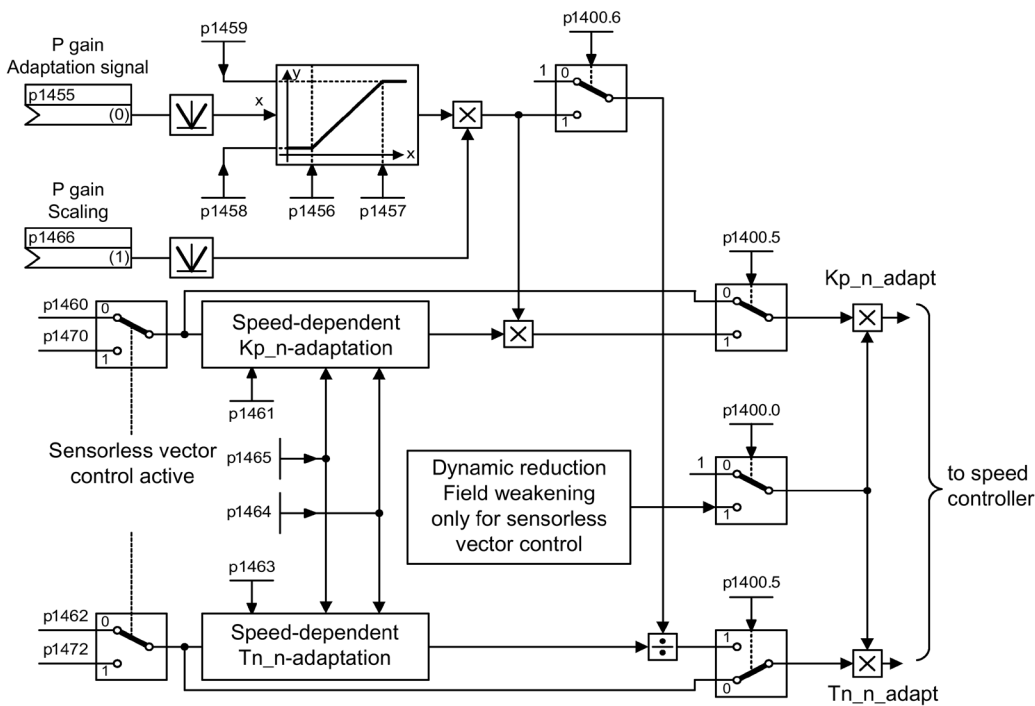


Figure 7-17  $K_p_n/T_n_n$  adaptation

### Example of speed-dependent adaptation

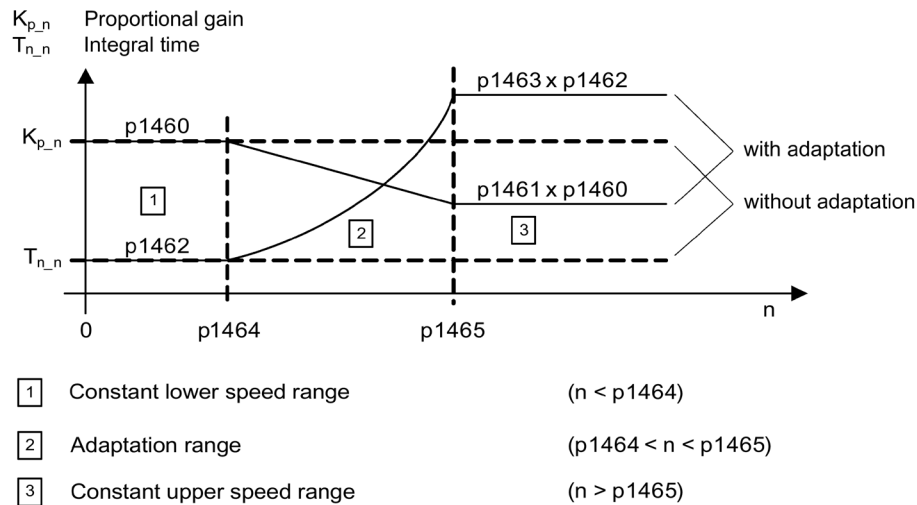


Figure 7-18 Example of speed-dependent adaptation

For operation without encoder, a higher value is in p1464 than in p1465. As a consequence, the behavior is inverted:  $K_p$  increases with increasing speed and  $T_n$  decreases.

### Special case, encoderless operation in the field-weakening range

In encoderless operation, dynamic reduction for the field-weakening range can be activated with  $p1400.0 = 1$ .

$K_p/T_n \sim$  flux setpoint

$K_p/T_n$  decreases proportionally with the flux setpoint (minimum: factor 0.25).

This dynamic reduction is activated to reduce the controller dynamic response in the field-weakening range. Up to the field-weakening range, the higher controller dynamic of the speed controller is kept.

### Function diagram

FP 6050 Speed controller adaptation ( $K_{p\_n}/T_{n\_n}$  adaptation)

### Parameters

- p1400.5 Speed control configuration:  $K_p/T_n$  adaptation active
- p1400.6 Speed control configuration: Free  $T_n$  adaptation active
- p1470 Speed controller encoderless operation P gain
- p1472 Speed controller encoderless operation integral time

Free Kp\_n adaptation

- p1455 Speed controller P gain adaptation signal
- p1456 Speed controller P gain adaptation lower starting point
- p1457 Speed controller P gain adaptation upper starting point
- p1458 Adaptation factor lower
- p1459 Adaptation factor upper
- p1466 CI: Speed controller P gain scaling

Speed-dependent Kp\_n/Tn\_n adaptation (VC only)

- p1460 Speed controller P gain adaptation speed lower
- p1461 Speed controller Kp adaptation speed, upper scaling
- p1462 Speed controller integral time adaptation speed lower
- p1463 Speed controller Tn adaptation speed, upper scaling
- p1464 Speed controller adaptation speed lower
- p1465 Speed controller adaptation speed upper

Dynamic response reduction field weakening (encoderless VC only)

- p1400.0 Speed control configuration: Automatic Kp/Tn adaptation active

#### 7.4.4.4 Droop Function

##### Description

Droop (enabled via p1492) ensures that the speed setpoint is reduced proportionally as the load torque increases.

The droop function has a torque limiting effect on a drive that is coupled to a different speed (e.g. guide roller on a material web). In connection with the torque setpoint of a leading speed-controlled drive, a very effective load distribution can also be implemented. With the appropriate setting (in contrast to torque control or load distribution with overcontrol and limitation), this load distribution can even handle a smooth mechanical coupling or if slip should occur.

This method is only suitable to a limited extent for drives that are accelerated and braked with significant changes in speed.

The droop feedback is used, for example, in applications in which two or more motors are operated with a common shaft and fulfill the above requirements. It limits the torque differences that can occur as a result of the coupling by appropriately modifying the speeds of the individual motors. The load on the drive is reduced when the torque is excessively high.

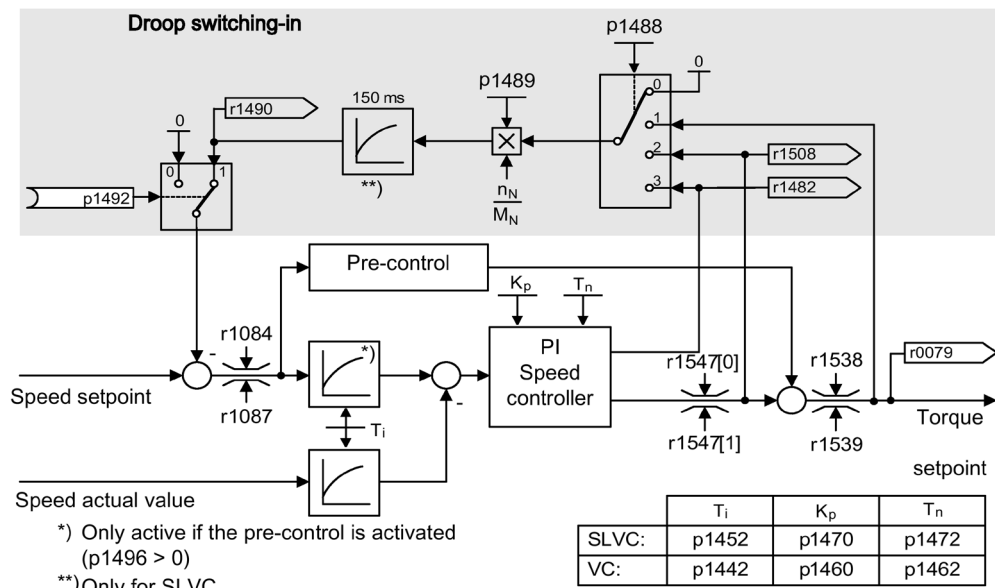


Figure 7-19 Speed controller with droop

### Precondition

- All connected drives must be operated with vector and speed control (with or without speed actual value encoder).
- The setpoints at the ramp function generators of the mechanically connected drives must be identical; the ramp function generators must have identical ramp-up and ramp-down times.

### Function diagram

FP 6030 Speed setpoint, droop

### Parameters

- r0079 Total speed setpoint
- r1482 Speed controller I torque output
- p1488 Droop input source
- p1489 Droop feedback scaling
- r1490 Droop feedback speed reduction
- p1492 Droop feedback enable
- r1508 Torque setpoint before supplementary torque

#### 7.4.4.5 Open actual speed value

##### Description

Via parameter p1440 (CI: speed controller, speed actual value) is the signal source for the speed actual value of the speed controller. The unsmoothed actual speed value r0063[0] has been preset as the signal source in the factory.

Depending on the machine, parameter p1440 can be used, for example, to switch on a filter in the actual value channel or feed in an external actual speed value.

Parameter r1443 displays the actual speed value available at p1440.

---

##### Note

##### Feed in an external actual speed value

When infeeding an external actual speed value, care should be taken that the monitoring functions continue to be derived from the motor model.

---

#### Response for speed control with an encoder (p1300 = 21)

A motor encoder must always be available for the speed or position signal of the motor model (e.g. evaluation via SMC, see p0400). The actual speed of the motor (r0061) and the position information for synchronous motors still come from this motor encoder and are not influenced by the setting in p1440.

Interconnection of p1440:

When interconnecting connector input p1440 with an external actual speed value, ensure the speed scaling is the same (p2000).

The external speed signal should correspond to the average speed of the motor encoder (r0061).

#### Response for speed control without an encoder (p1300 = 20)

Depending on the transmission path of the external speed signal, dead times will accumulate; these dead times must be taken into account in the speed controller's parameter assignment (p1470, p1472) and can lead to commensurate losses in dynamic performance. Signal transmission times must therefore be minimized.

P1750.2 = 1 should be set so that the speed controller is also able to operate at standstill (closed-loop controlled operation to zero frequency for passive loads). Otherwise, at low speeds it switches over to speed-controlled operation, so that the speed controller is switched off and the measured actual speed no longer has an influence.

## Monitoring of the speed deviation between motor model and external speed

The external actual speed (r1443) is compared with the actual speed of the motor model (r2169). If the deviation is greater than the tolerance threshold set in p3236, after the switch-off delay time set in p3238 expires, fault F07937 (Drive: Speed deviation motor model to external speed) is generated and the drive switched-off corresponding to the set response (factory setting: OFF2).

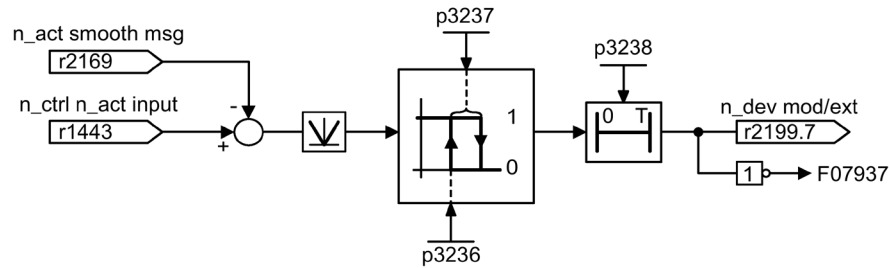


Figure 7-20 Monitoring "Speed deviation model / external in tolerance"

## Function diagram

FP 6040	Vector control – speed controller with/without encoder
FP 8012	Signals and monitoring function – Torque messages, motor blocked/stalled

## Parameter

- r0063[0] Actual speed value unsmoothed
- p1440 CI: Speed controller actual speed value input
- p1442 Speed controller actual speed value smoothing time
- r1443 CO: Speed controller actual speed value at actual value input
- p1452 Speed controller actual speed value smoothing time (without encoder)
- r2169 CO: Actual speed value smoothed messages
- r2199.7 Speed deviation model / external in tolerance
- p3236 Speed threshold 7
- p3237 Hysteresis speed 7
- p3238 Switch-off delay n\_act\_motor model = n\_act\_external

### 7.4.5 Closed-loop torque control

#### Description

For speed control without encoder (p1300 = 20) or speed control with encoder (p1300 = 21), a changeover can be made to torque control (following drive) using BICO parameter p1501. A changeover cannot be made between speed and torque control if torque control is selected directly with p1300 = 22 or 23. The torque setpoint and/or supplementary setpoint can be entered using BICO parameter p1503 (CI: torque setpoint) or p1511 (CI: supplementary torque setpoint). The supplementary torque is active both for torque and speed control. This particular feature with the supplementary torque setpoint allows a precontrol torque to be applied for speed control.

#### Note

##### No interconnection to fixed torque setpoints

For safety reasons, connecting to fixed torque setpoints is presently not possible.

#### Note

##### Regenerative energy without feedback capability

If energy is regenerated and cannot be injected back into the line supply, then a Braking Module with connected braking resistor must be used.

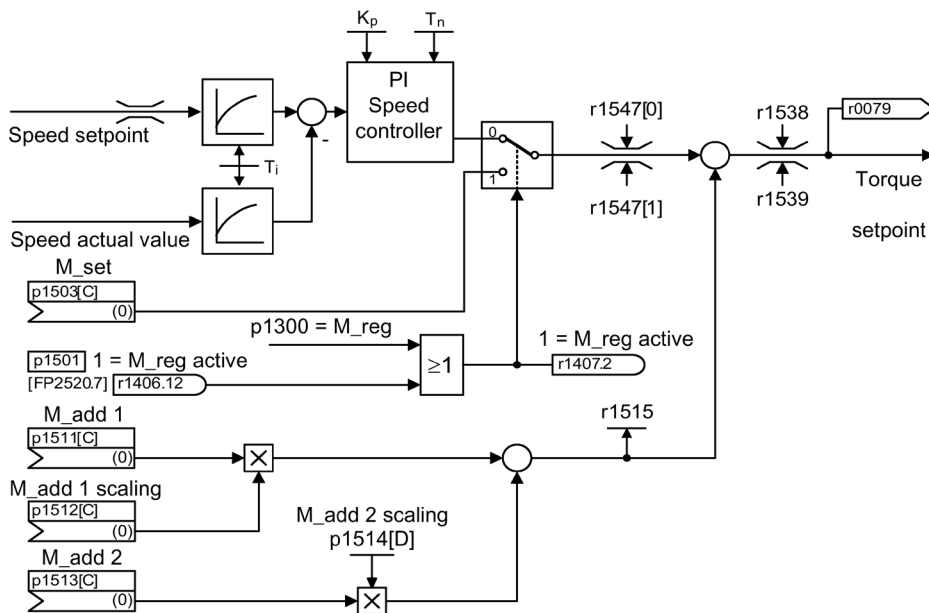


Figure 7-21 Closed-loop speed/torque control



The total of the two torque setpoints is limited in the same way as the speed control torque setpoint. Above the maximum speed (p1082), a speed limiting controller reduces the torque limits in order to prevent the drive from accelerating any further.

A "real" closed-loop torque control (with a speed that automatically sets itself) is only possible in the closed-loop control range but not in the open-loop control range of the sensorless closed-loop vector control.

In the open-loop controlled range, the torque setpoint changes the setpoint speed via a ramp-up integrator (integrating time  $\sim p1499 \times p0341 \times p0342$ ). For this reason, encoderless torque control at standstill is only suitable for applications that require an accelerating torque but no load torque (e.g. traction drives). Closed-loop torque control with encoder does not have this restriction.

## OFF responses

- OFF1 and p1300 = 22, 23
  - Response as for OFF2
- OFF1, p1501 = "1" signal and p1300  $\neq$  22, 23
  - No separate braking response; the braking response is provided by a drive that specifies the torque.
  - The pulses are inhibited when the brake application time (p1217) expires. Standstill is detected when the speed actual value of the speed threshold (p1226) is undershot or when the monitoring time (p1227) started when speed setpoint  $\leq$  speed threshold (p1226) expires.
  - Switching on inhibited is activated.
- OFF2
  - Immediate pulse suppression, the drive coasts to standstill.
  - The motor brake (if parameterized) is closed immediately.
  - Switching on inhibited is activated.
- OFF3
  - Switch to speed-controlled operation
  - The drive is immediately braked along the OFF3 down ramp (p1135) when n\_set = 0 is entered.
  - When standstill is detected, the motor brake (if parameterized) is closed.
  - The pulses are inhibited when the motor brake closing time (p1217) has elapsed. Standstill is detected when the speed actual value of the speed threshold (p1226) is undershot or when the monitoring time (p1227) started when speed setpoint  $\leq$  speed threshold (p1226) expires.
  - Switching on inhibited is activated.

**Function diagram**

FP 6060 Torque setpoint

**Parameter**

- p0341 motor moment of inertia
- p0342 Ratio between the total and motor moment of inertia
- p1300 Open-loop/closed-loop control operating mode
- p1499 Accelerating for torque control, scaling
- p1501 Change over between speed/torque control
- p1503 Torque setpoint
- p1511 Supplementary torque 1
- p1512 Supplementary torque 1 scaling
- p1513 Supplementary torque 2
- p1514 Supplementary torque 2 scaling
- r1515 Supplementary torque total

**7.4.6 Torque limiting**

**Description**

The torque limiting value specifies the maximum permissible torque. Different limits can be parameterized for motoring and generating operation.

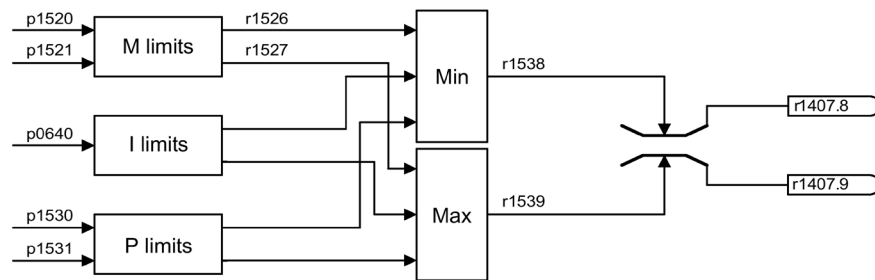


Figure 7-22 Torque limiting

- p0640 Current limit
- p1520 CO: Torque limit, upper/motoring
- p1521 CO: Torque limit, lower/regenerative
- p1522 CI: Torque limit, upper/motoring
- p1523 CI: Torque limit, lower/regenerative
- p1524 CO: Torque limit, upper/motoring, scaling
- p1525 CO: Torque limit, lower/regenerative scaling
- p1530 Power limit, motoring
- p1531 Power limit, regenerating

The currently active torque limit values are displayed in the following parameters:

- r0067 Output current maximum
- r1526 Torque limit, upper/motoring without offset
- r1527 Torque limit, lower/regenerative without offset

All of the following limits act on the torque setpoint – that is either available at the speed controller output for closed-loop speed control or as torque input, for closed-loop torque control. The minimum or the maximum is used for the various limits. This minimum or maximum is cyclically calculated and is displayed in the following parameters:

- r1538 Upper effective torque limit
- r1539 Lower effective torque limit

These cyclical values therefore limit the torque setpoint at the speed controller output/torque input or indicate the instantaneous max. possible torque. If the torque setpoint is limited, then this is displayed using the following parameters:

- r1407.8 Upper torque limit active
- r1407.9 Lower torque limit active

## Function diagram

FP 6060	Torque setpoint
FP 6630	Upper/lower torque limit
FP 6640	Current/power/torque limits

## 7.4.7 Current setpoint filters

### Description

The current setpoint filters are for suppressing cyclic disturbance variables that can be caused, for example, by mechanical vibrations in the drive train.

The current actual value filters can be set as follows:

- 2nd order lowpass (PT2: -40 dB/decade)
- General 2nd order filter

Bandstop and low-pass with reduction are converted into the parameters of the general 2nd order filter.

The current actual value filters are activated with  $p1656.0 = 1$  or  $p1656.1 = 1$ . The properties of the current actual value filters are set in  $p1657$  to  $p1666$ .

As long as changes to the data of the current setpoint filter are being made, the conversion of the new filter data can be prevented using  $p1699 = 1$ .

When  $p1699 = 0$  is set, the calculation will be performed and the new values applied.

### Function diagrams

FP 6710      Current setpoint filters

### Parameter

- $p1655[0]$  Cl: Current setpoint filter 1 natural frequency tuning
- $p1655[1]$  Cl: Current setpoint filter 2 natural frequency tuning
- $p1656.0$  Current setpoint filter 1 activation
- $p1657$  Current setpoint filter 1 type
- $p1658$  Current setpoint filter 1 denominator natural frequency
- $p1659$  Current setpoint filter 1 denominator damping
- $p1660$  Current setpoint filter 1 numerator natural frequency
- $p1661$  Current setpoint filter 1 numerator damping
- $p1656.1$  Current setpoint filter 2 activation
- $p1662$  Current setpoint filter 2 type
- $p1663$  Current setpoint filter 2 denominator natural frequency
- $p1664$  Current setpoint filter 2 denominator damping
- $p1665$  Current setpoint filter 2 numerator natural frequency
- $p1666$  Current setpoint filter 2 numerator damping
- $p1699$  Filter data acceptance

## 7.4.8 Current controller adaptation

Current controller adaptation can be used to adapt the P gain of the current controller and the dynamic precontrol of the  $I_q$  current controller depending on the current. The current controller adaptation is directly activated with setting  $p1402.2 = 1$  or deactivated with  $p1402.2 = 0$ . Using  $p1959.5$ , it is automatically activated ( $p1959.5 = 1$ ) or deactivated ( $p1959.5 = 0$ ).

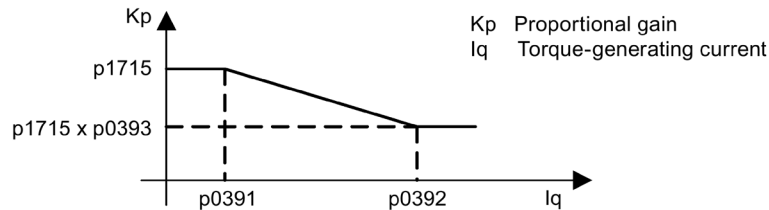


Figure 7-23 Current controller adaptation for  $p0393 < 1$ , with  $p0391 < p0392$

When swapping the  $I_q$  interpolation points (e.g. for induction motors), the current controller adaptation appears as follows:

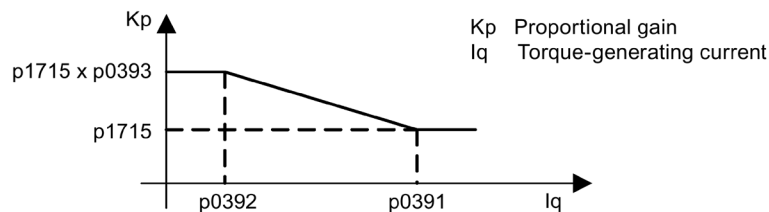


Figure 7-24 Current controller adaptation with swapped  $I_q$  interpolation points for  $p0393 > 1$ , with  $p0392 < p0391$

## Function diagrams

FP 6714 Vector control -  $I_q$  and  $I_d$  controller

## Parameters

- $p0391$  Current controller adaptation, starting point KP
- $p0392$  Current controller adaptation, starting point KP adapted
- $p0393$  Current controller adaptation P gain scaling
- $p1402$  Current control and motor model configuration
- $p1703$   $I_{sq}$  current controller precontrol scaling
- $p1715$  Current controller P gain
- $p1717$  Current controller integral time
- $p1959$  Rotating measurement configuration

## 7.4.9 Permanent-magnet synchronous motors

### Description

Permanent-magnet synchronous motors without encoders are supported during operations without encoders.

Typical applications include direct drives with torque motors, which are characterized by high torque at low speeds, e.g. Siemens 1FW3 series torque motors. When these drives are deployed, gear units and mechanical parts subject to wear can be dispensed with if the application allows this.



#### **! WARNING**

#### **Electric shock when permanent magnet synchronous motors rotate**

As soon as the motor rotates, a voltage is generated at the terminals, which when touched, can result in death or severe injury.

- Electrically disconnect the motor when working on the converter.
- If it is not possible to disconnect the connecting cables to the motor, secure the motor so that it cannot undesirably rotate, e.g. using a holding brake.

### Features

- Field weakening of up to approx. 1.2 x rated speed (depending on the supply voltage of the converter and motor data, also see supplementary conditions)
- Flying restart (during operation without encoders, only when a VSM records the motor speed and phase angle (option K51))
- Speed and torque control vector
- V/f control for diagnostics vector
- Motor identification
- Speed controller optimization (rotary measurement)

### Supplementary conditions

- Maximum speed or maximum torque depend on the converter output voltage available and the back EMF of the motor (calculation specifications: EMF must not exceed  $V_{\text{rated, converter}}$ ).
- Calculating the maximum speed:

$$n_{\text{max}} = n_n \cdot \sqrt{\frac{3}{2}} \cdot \frac{U_{\text{DC link max}} \cdot I_n}{P_n}$$

- Depending on the terminal voltage and load cycle, the maximum torque can be taken from the motor data sheets / configuration instructions.

- No thermal model is available for the closed-loop control of a permanent-magnet synchronous motor. The motor can only be protected against overheating by using temperature sensors (PTC, KTY, PT1000). To achieve a high level of torque accuracy, we recommend a temperature sensor (KTY, PT1000) to measure the motor temperature.

## Commissioning

The following sequence is recommended for commissioning:

- Configure the drive

When the drive is being commissioned using STARTER or the AOP30 operator panel, the permanent-magnet synchronous motor must be selected. The motor data specified in the table below must then be entered. Finally, the motor identification routine and speed optimization (p1900) are activated. Encoder adjustment is activated automatically together with the motor identification routine.

- Motor identification (standstill measurement, p1910)
- Speed controller optimization (rotary measurement, p1960)

## Motor data for permanent-magnet synchronous motors

Table 7-2 Motor data type plate

Parameter	Description	Comment
p0304	Rated motor voltage	If this value is not known, the value "0" can also be entered. Entering the correct value, however, means that the stator leakage inductance (p0356, p0357) can be calculated more accurately.
p0305	Rated motor current	
p0307	Rated motor power	
p0310	Rated motor frequency	
p0311	Rated motor speed	
p0314	Motor pole pair number	If this value is not known, the value "0" can also be entered.
p0316	Motor torque constant	If this value is not known, the value "0" can also be entered.

If the torque constant  $k_T$  is not stamped on the type plate or specified in the data sheet, you can calculate this value from the rated motor data or from the stall current  $I_0$  and stall torque  $M_0$  as follows:

$$k_T = \frac{M_N}{I_N} = \frac{60 \frac{\text{s}}{\text{min}} \times P_N}{2\pi \times n_N \times I_N}$$

or

$$k_T = \frac{M_0}{I_0}$$

The optional motor data can be entered if it is known. Otherwise, this data is estimated from the type plate data or determined by means of motor identification or speed controller optimization.

Table 7- 3 Motor data type plate

Parameter	Description	Comment
p0320	Rated motor short-circuit current	This is used for the field weakening characteristic
p0322	Maximum motor speed	Maximum mechanical speed
p0323	Maximum motor current	De-magnetization protection
p0325	Rotor position identification current 1. Phase	-
p0327	Optional load angle	Optional otherwise leave at 90°
p0328	Reluctance torque constant	-
p0329	Rotor position identification current	-
p0341	Motor moment of inertia	For speed controller pre-control
p0344	Motor weight	-
p0350	Stator resistance, cold	-
p0356	Quadrature axis stator inductance Lq	-
p0357	In-line stator inductance Ld	-

### Short-circuit protection

For short-circuits that can occur in the drive converter or in the motor cable, the rotating machine would supply the short-circuit until it comes to a standstill. An output contactor can be used for protection. This should be located as close as possible to the motor. This is particularly necessary if the motor can still be driven by the load when a fault develops. The contactor must be provided with a protective circuit against overvoltage on the motor side so that the motor winding is not damaged as a result of the shutdown.

Control signal r0863.1 (VECTOR) controls the contactor via a free digital output; the checkback contact of the contactor is connected to parameter p0864 via a free digital input.

This means that if the drive converter develops a fault with a shutdown response, at the instant in time that the pulses are inhibited, the motor is isolated from the drive converter so that energy is not fed back to the fault location.

### Function diagram

- FP 6721 Vector control - Id setpoint (PEM, p0300 = 2)
- FP 6724 Vector control – field weakening controller (PEM, p0300 = 2)
- FP 6731 Vector control - interface to Motor Module (PEM, p0300 = 2)



# Output terminals

## 8.1 Chapter content

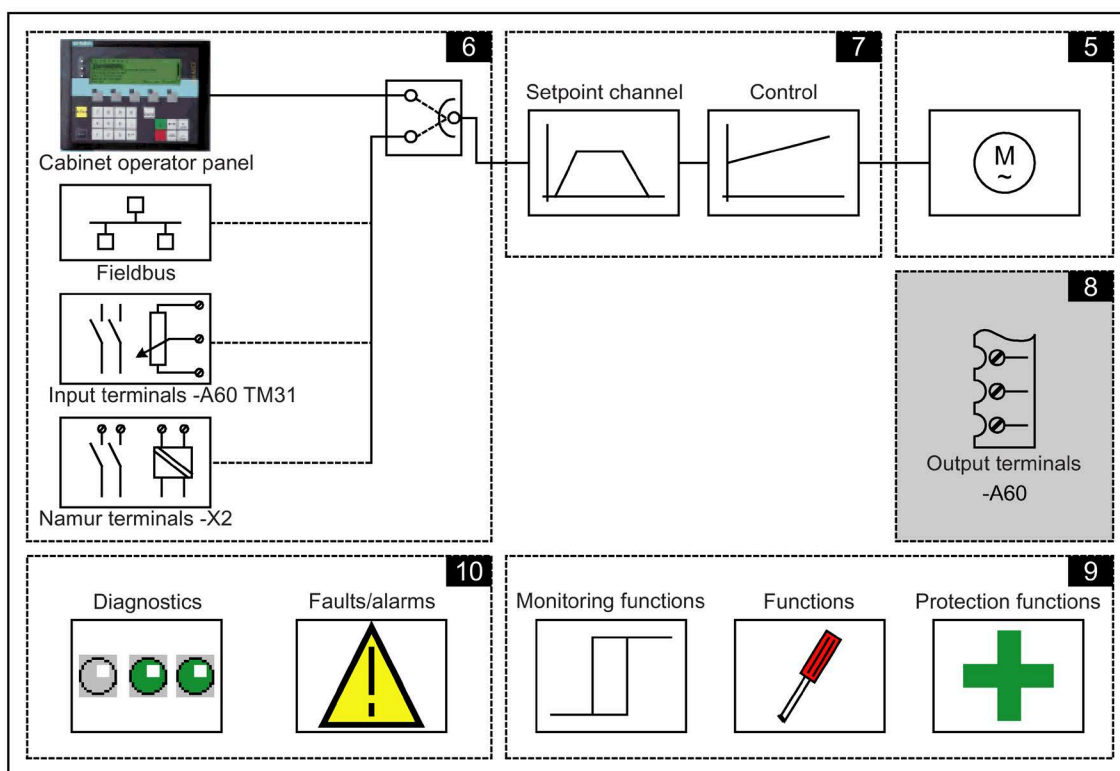
This chapter provides information on:

- Analog outputs
- Digital outputs

The analog/digital outputs described are located on the TM31 customer terminal block, which is available only with option G60.

As an alternative to the analog/digital outputs of the TM31, it is possible to use the terminals on the Control Unit or on the Terminal Board TB30 (option G62).

Some of the outputs on the Control Unit and on the TM31 are pre-assigned at the factory; the outputs on the TB30 are not pre-assigned at the factory.



### Function diagrams

At certain points in this chapter, reference is made to function diagrams. These can be found on the customer DVD in the "SINAMICS G130/G150 List Manual", which provides experienced users with detailed descriptions of all the functions.

## 8.2 Analog outputs

### Description

When using option G60, the customer terminal strip has two analog outputs two output setpoints via current or voltage signals.

Delivery condition:

- AO0: Actual speed value 0 to 20 mA
- AO1: Actual motor current, 0 to 20 mA

### Signal flow diagram

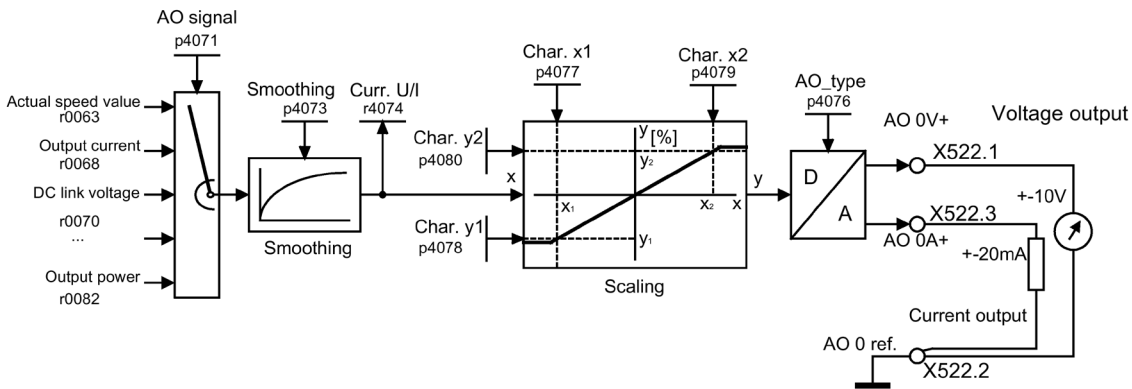


Figure 8-1 Signal flow diagram: analog output 0

### Function diagram

FP 1840, TM31 - analog outputs (AO 0 to AO 1)  
FP 9572

### Parameter

- p4071 TM31 analog outputs, signal source
- p4073 TM31 analog outputs, smoothing time constant
- r4074 Analog outputs, actual output voltage/current
- p4076 TM31 analog outputs, type
- p4077 TM31 analog outputs, characteristic, value x1
- p4078 TM31 analog outputs, characteristic, value y1
- p4079 TM31 analog outputs, characteristic, value x2
- p4080 TM31 analog outputs, characteristic, value y2

## 8.2.1 List of signals for the analog signals

### List of signals for the analog outputs

Table 8- 1 List of signals for the analog outputs


Signal	Parameter	Unit	Scaling (100% =...) See table below
Speed setpoint before the setpoint filter	r0060	rpm	p2000
Motor speed unsmoothed	r0061	rpm	p2000
Speed actual value after smoothing	r0063	rpm	p2000
Output frequency	r0066	Hz	Reference frequency
Output current	r0068	Arms	p2002
DC link voltage	r0070	V	p2001
Torque setpoint	r0079	Nm	p2003
Output power	r0082	kW	r2004
<b>for diagnostic purposes</b>			
System deviation	r0064	rpm	p2000
Modulation depth	r0074	%	Reference modulation depth
Torque-generating current setpoint	r0077	A	p2002
Torque-generating actual current	r0078	A	p2002
Flux setpoint	r0083	%	Reference flux
Actual flux	r0084	%	Reference flux
<b>for advanced diagnostics</b>			
Speed controller output	r1480	Nm	p2003
I component of speed controller	r1482	Nm	p2003

### Scaling


Table 8- 2 Scaling

Size	Scaling parameter	Default for quick commissioning
Reference speed	100 % = p2000	p2000 = Maximum speed (p1082)
Reference voltage	100 % = p2001	p2001 = 1000 V
Reference current	100 % = p2002	p2002 = Current limit (p0640)
Reference torque	100 % = p2003	p2003 = 2 x rated motor torque
Reference power	100 % = r2004	r2004 = (p2003 x p2000 x π) / 30
Reference frequency	100 % = p2000/60	
Reference modulation depth	100 % = Maximum output voltage without over-load	
Reference flux	100 % = Rated motor flux	
Reference temperature	100% = p2006	p2006 = 100°C
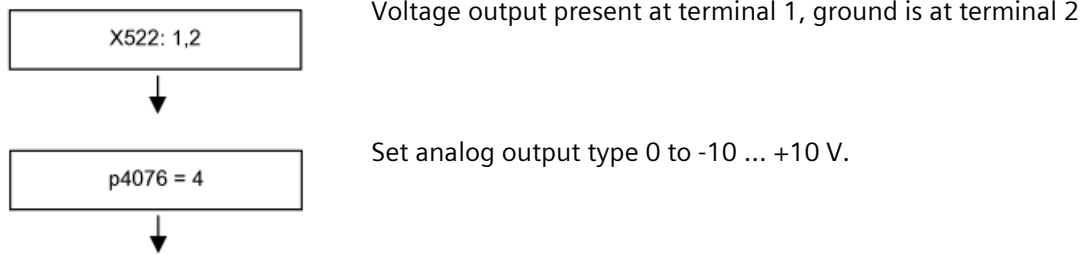
### Changing analog output 0 from current to voltage output -10 V ... +10 V (example)



### Changing the analog output 0 from current to voltage output -10 ... +10 V (example) and setting the characteristic

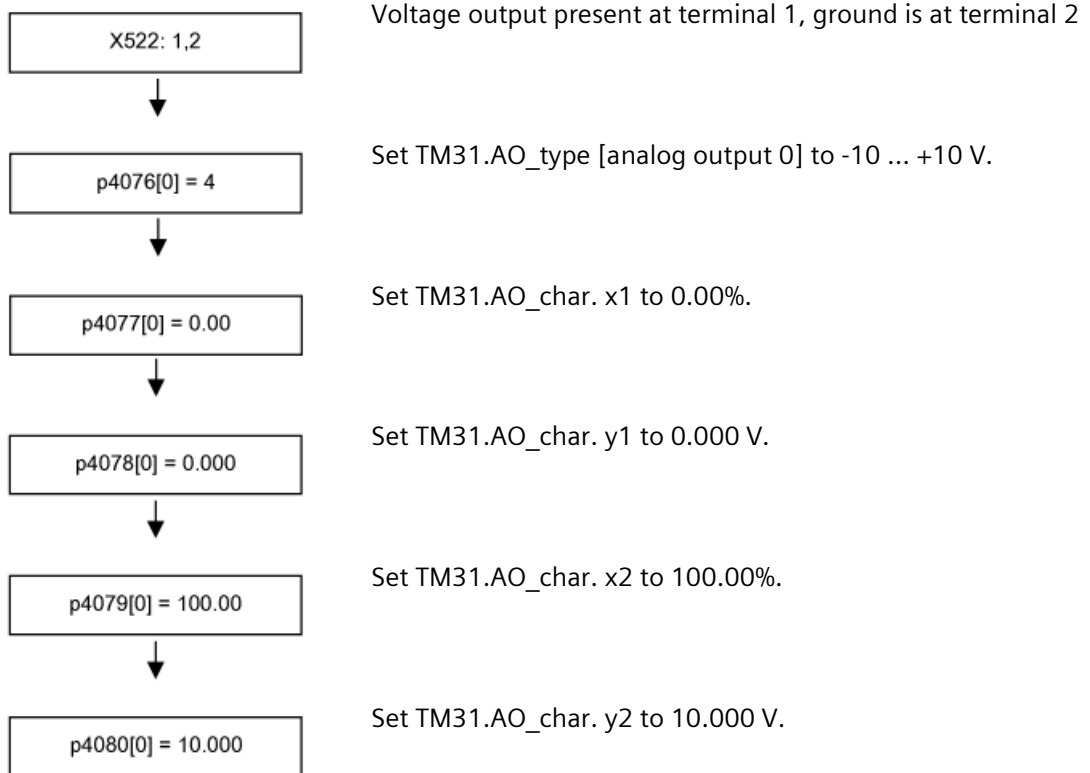

## 8.3 Digital outputs

### Description

Four bi-directional digital outputs (terminal X541) and two relay outputs (terminal X542) are available. These outputs are, for the most part, freely parameterizable.

### Signal flow diagram

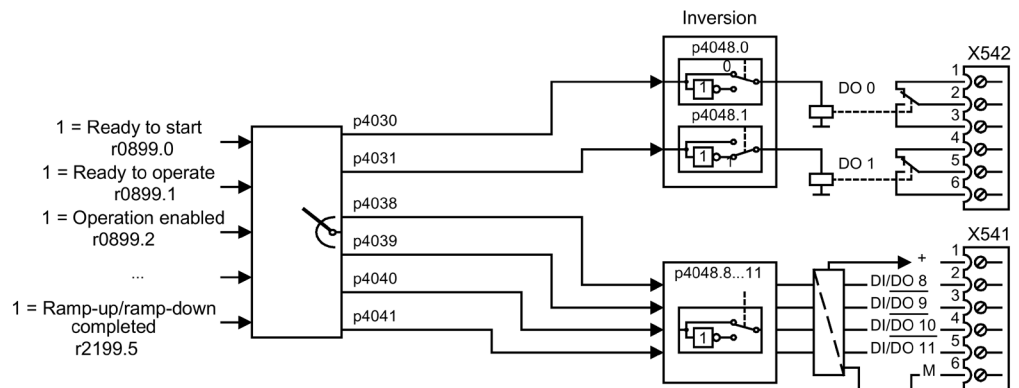


Figure 8-2 Signal flow diagram: Digital outputs

### Delivery condition

Table 8-3 Digital outputs, delivery condition

Digital output	Terminal	Delivery condition
DO0	X542: 2.3	"Enable pulses"
DO1	X542: 5.6	"No fault"
DI/DO8	X541: 2	"Ready to start"
DI/DO9	X541: 3	
DI/DO10	X541: 4	
DI/DO11	X541: 5	

## Selection of possible connections for the digital outputs

Table 8- 4 Selection of possible connections for the digital outputs

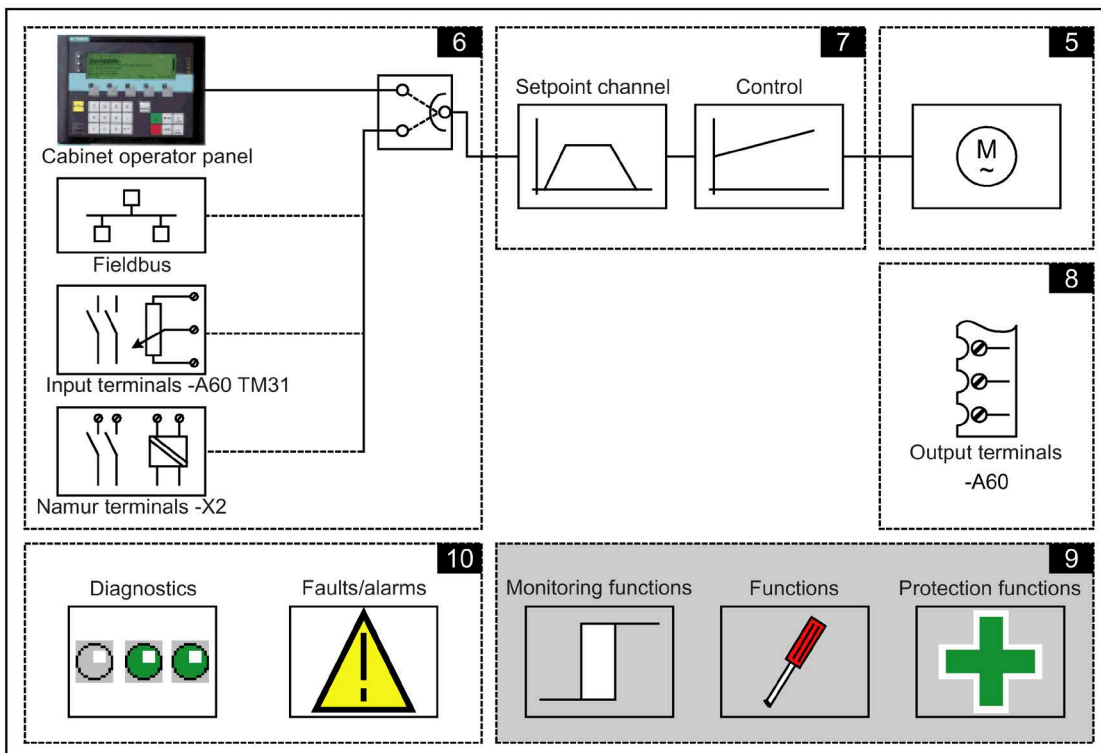
Signal	Bit in status word 1	Parameter
1 = Ready to start	0	r0899.0
1 = Ready	1	r0899.1
1 = Operation enabled	2	r0899.2
1 = Fault present	3	r2139.3
0 = Coast to stop active (OFF2 active)	4	r0899.4
0 = Fast stop active (OFF3 active)	5	r0899.5
1 = Closing lockout active	6	r0899.6
1 = Alarm present	7	r2139.7
1 = Speed setpoint/actual deviation within the tolerance band	8	r2197.7
1 = Master control requested	9	r0899.9
1 = f or n comparison value reached or exceeded	10	r2199.1
1 = I, M or P limit reached	11	r1407.7
1 = Open holding brake	12	r0899.12
0 = Alarm, motor overtemperature	13	r2135.14
1 = Motor rotates forward ( $n_{act} \geq 0$ ) 0 = Motor rotates backward ( $n_{act} < 0$ )	14	r2197.3
0 = Alarm thermal overload in power unit (A5000)	15	r2135.15
1 = Pulses enabled		r0899.11
1 = $n_{act} \leq p2155$		r2197.1
1 = $n_{act} > p2155$		r2197.2
1 = Ramp-up/ramp-down completed		r2199.5
1 = $ n_{act}  < p2161$ (preferably as $n_{min}$ or $n=0$ message)		r2199.0
1 = $ M_{set}  < p2174$		r2198.10
1 = LOCAL mode active (control via operator panel or control panel)		r0807.0
1 = Motor blocked		r2198.6

## Functions, Monitoring, and Protective Functions

### 9.1 Chapter content

This chapter provides information on:

- Drive functions:  
Motor identification, efficiency optimization, quick magnetization for induction motors, Vdc control, automatic restart, flying restart, motor changeover, friction characteristic, armature short-circuit braking, DC braking, increase in the output frequency, pulse frequency wobbling, runtime, simulation operation, direction reversal, unit changeover, derating behavior with increased pulse frequency, simple brake control, energy savings indicator for fluid-flow machines, write protection, know-how protection, emergency operation, web server.
- Extension functions:  
Technology controller, bypass function, extended brake control, extended monitoring functions, inertia estimator
- Monitoring and protective functions:  
Power unit protection, thermal monitoring functions and overload responses, blocking protection, stall protection, thermal motor protection.



### Function diagrams

At certain points in this chapter, reference is made to function diagrams. These can be found on the customer DVD in the "SINAMICS G130/G150 List Manual", which provides experienced users with detailed descriptions of all the functions.

## 9.2 Drive Functions

### 9.2.1 Motor data identification and automatic speed controller optimization

#### Description

Two motor identification options, which are based on each other, are available:

- Motor identification with p1910 (standstill measurement)
- Rotating measurement with p1960 (speed controller optimization)

These can be selected more easily via p1900.

- p1900 = 2 selects the motor identification (motor not rotating).
- p1900 = 1 also activates the rotating measurement; setting p1910 = 1 and p1960 depending on the current control type (p1300).

Parameter p1960 is set depending on p1300 as follows:

- p1960 = 1, if p1300 = 20 or 22 (encoderless control)
- p1960 = 2, if p1300 = 21 or 23 (control with encoder)

The measurements parameterized using p1900 are started in the following sequence after the corresponding drive has been enabled:

1. Motor identification at standstill, after the measurement has been completed, the pulses are inhibited and parameter p1910 is reset to 0.
2. Encoder adjustment - after the measurement has been completed, the pulses are inhibited and parameter p1990 is reset to 0.
3. Rotating measurement - after the measurement has been successfully completed, the pulses are inhibited and parameter p1960 is reset to 0.
4. After all of the activated measurements have been successfully completed, reset parameter p1900 = 0.

The measurement progress can be monitored using r0047.

Completion of the individual motor data identification runs can be read via parameters r3925 to r3928.

---

#### Note

##### Non-volatile saving

To set the new controller setting permanently, the data must be saved with p0977 or p0971 in a non-volatile memory.


---

#### Note

The motor data identification runs only influence the currently valid motor data set (MDS).

---



 <b>WARNING</b>
<p><b>Unexpected motor movement during motor identification in the rotating mode</b></p> <p>When selecting motor identification with optimization in the rotating mode, after commissioning, the drive initiates that the motor rotates with speeds that can reach the maximum motor speed.</p> <ul style="list-style-type: none"> <li>• Observe the general safety instructions.</li> <li>• Ensure that the EMERGENCY STOP functions are fully functional when commissioning the drive.</li> </ul>

### 9.2.1.1 Motor data identification

#### Description

Motor identification with p1910 is used for determining the motor parameters at standstill (see also p1960: speed controller optimization):

- Equivalent circuit diagram data p1910 = 1
- Magnetization characteristic p1910 = 3

For control-related reasons, you are strongly advised to carry out motor identification because the equivalent circuit diagram data, motor cable resistance, IGBT on-state voltage and compensation for the IGBT lockout time can only be estimated if the data on the rating plate is used. For this reason, the stator resistance is a very important for the stability of sensorless vector control or for the voltage boost for the U/f characteristic.

Motor identification is essential if long supply cables or third-party motors are used. When motor data identification is started for the first time, the following data is determined with p1910 on the basis of the data on the rating plate:

Table 9- 1 Data determined using p1910

p1910	Induction motor	Permanent-magnet synchronous motor
p1910 = 1	<ul style="list-style-type: none"> <li>• Rated magnetization current (p0320)</li> <li>• Stator resistance (p0350)</li> <li>• Rotor resistance (p0354)</li> <li>• Stator leakage inductance (p0356)</li> <li>• Rotor leakage inductance (p0358)</li> <li>• Magnetizing inductance (p0360)</li> <li>• Drive converter valve threshold voltage (p1825)</li> <li>• Converter valve interlocking times (p1828 ... p1830)</li> </ul>	<ul style="list-style-type: none"> <li>• Stator resistance (p0350)</li> <li>• Stator resistance q axis (p0356)</li> <li>• Stator inductance d axis (p0357)</li> <li>• Drive converter valve threshold voltage (p1825)</li> <li>• Converter valve interlocking times (p1828 ... p1830)</li> </ul>
p1910 = 3	<ul style="list-style-type: none"> <li>• Saturation characteristics (p0362 ... p0366)</li> </ul>	<p>not recommended</p> <p>Notice: When encoder adjustment is complete, the motor is automatically rotated approx. one revolution in order to determine the zero marker of the encoder.</p>

Since the type plate data provides the initialization values for identification, you must ensure that it is entered correctly and consistently (taking into account the connection type (star/delta)) so that the above data can be determined.

It is recommended that the motor feeder cable resistance (p0352) is entered before the standstill measurement (p1910) is performed, so that it can be subtracted from the total measured resistance when the stator resistance is calculated (p0350).

Entering the cable resistance improves the accuracy of thermal resistance adaptation, particularly when long supply cables are used. This governs behavior at low speeds, particularly during encoderless vector control.

For  $p1909.20 = 1$  (and  $p0352 = 0$ ), the supply cable resistance is set from the difference of the measured value and the default value of the automatic parameterization or the value of the data set for list motors. The supply cable resistance then normally no needs to be entered.

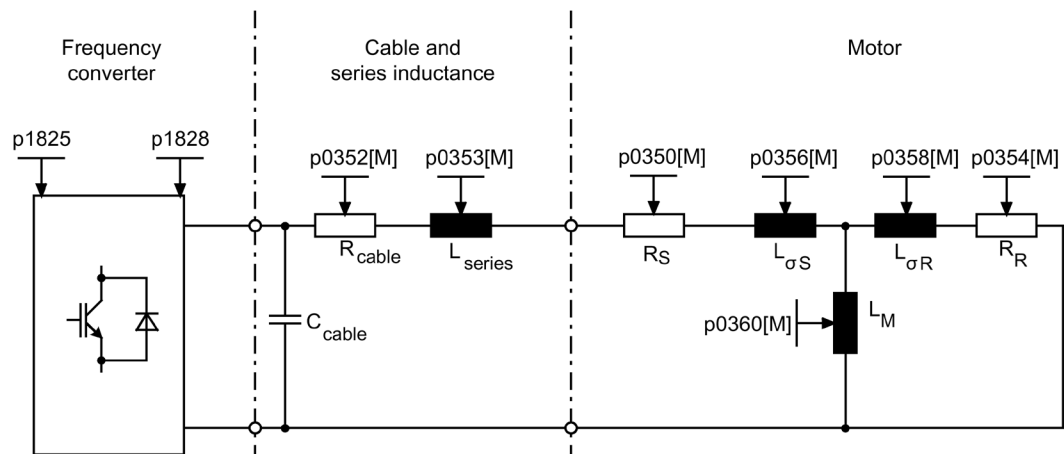


Figure 9-1 Equivalent circuit diagram for induction motor and cable

If an output filter (see p0230) or series inductance (p0353) is used, its data must also be entered before the standstill measurement is carried out.

The inductance value is then subtracted from the total measured value of the leakage. With sine-wave filters, only the stator resistance, valve threshold voltage, and valve interlocking time are measured.

**Note**

**Large spread of the rated motor impedance**

Leakage values in excess of 35 to 40 % of the rated motor impedance will restrict the dynamic response of speed and current control in the voltage limit range and in field-weakening operation.

**Note**

**Perform standstill measurement with the motor in a cold state**

Standstill measurement must be carried out when the motor is cold. In p0625, enter the estimated motor ambient temperature during the measurement (for PT1000 or KTY sensor: set p0600, p0601 and read r0035). This is the reference point for the thermal motor model and thermal  $R_s/R_R$  adaptation.

In addition to the equivalent circuit diagram data, motor data identification (p1910 = 3) can be used for induction motors to determine the rated magnetizing current and the magnetizing characteristic of the motor. Due to the higher accuracy, if possible, these values should be determined as part of the rotating measurement (without encoder: p1960 = 1, 3; with encoder: p1960 = 2, 4). If the drive is operated in the field-weakening range, this characteristic should be determined for vector control in particular. The magnetization characteristic can be used to calculate the field-generating current in the field-weakening range more accurately, thereby increasing torque accuracy.

**Note**

**Results of the rotating measurement**

In comparison with standstill measurement (p1910) for induction motors, rotating measurement (p1960) allows the rated magnetization current and saturation characteristic to be determined more accurately.

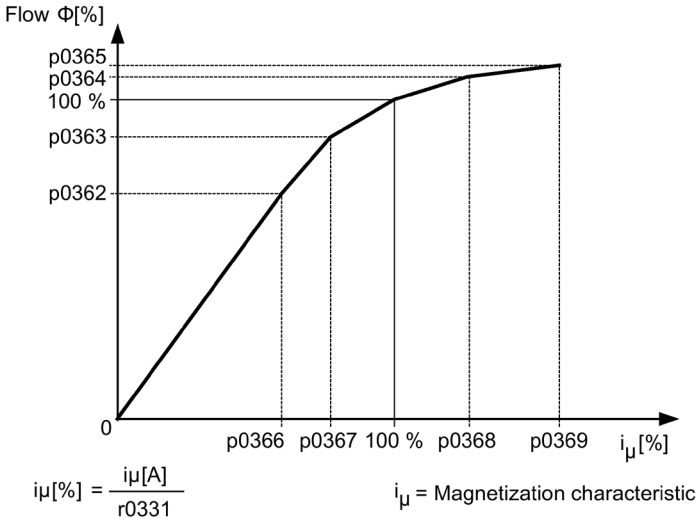


Figure 9-2 Magnetization characteristic

### Carrying out motor identification

- Enter p1910 > 0. Alarm A07991 is displayed.
- Identification starts when the motor is switched on.
- p1910 resets itself to "0" (successful identification) or fault F07990 is output.
- r0047 displays the current status of the measurement.

---

#### Note

##### Non-volatile saving

To set the new controller setting permanently, the data must be saved with p0977 or p0971 in a non-volatile memory.

---



#### WARNING

##### Unexpected motor movement when identifying the motor

When the motor identification is selected, after commissioning the drive may cause the motor to move.

- Observe the general safety instructions.
- Ensure that the EMERGENCY STOP functions are fully functional when commissioning the drive.

### Measurement without automatic adaptation of the control parameters (p1909.17)

p1909.17 = 1 can be used, for example, to measure the motor parameters after a motor replacement, without automatically adapting the control parameters via p0340.

### 9.2.1.2 Rotating measurement and speed controller optimization

#### Description

"Rotating measurement" can be activated using p1960 or using p1900 = 1.

The main difference between rotating measurement and standstill measurement is speed control optimization, with which the drive's moment of inertia is ascertained and speed controller is set. In addition, the saturation characteristic and rated magnetizing current of induction motors are measured and so make a significant contribution to improving the torque accuracy.

If rotating measurement is not to be carried out at the speed set in p1965, this parameter can be changed before the measurement is started. Higher speeds are recommended.

The same applies to the speed in p1961, at which the saturation characteristic is determined and the encoder test is carried out.

The speed controller is set to the symmetrical optimum in accordance with dynamic factor p1967. p1967 must be set before the optimization run and only affects the calculation of the controller parameters.

If, during the measurement, it becomes clear that the the drive cannot operate in a stable manner with the specified dynamic factor or that the torque ripples are too great, the dynamic response is reduced automatically and the result displayed in r1968. The drive must also be checked to ensure that it is stable across the entire range. The dynamic response might need to be reduced or the  $Kp_n/Tn_n$  adaptation for the speed controller parameterized accordingly.

---

#### Note

##### Dynamic response reduced too much

If the dynamic response of the speed controller is reduced excessively because of load oscillations, the oscillation test can also be deactivated (p1959.4 = 0).

---

When commissioning induction machines, you are advised to proceed as follows:

- Before connecting the load, a complete "rotating measurement" (without encoder: p1960 = 1; with encoder: p1960 = 2) should be carried out. Since the induction machine is idling, you can expect highly accurate results for the saturation characteristic and the rated magnetization current.
- When the load is connected, speed controller optimization should be repeated because the total moment of inertia has changed. This is realized by selecting parameter p1960 (without encoder: p1960 = 3; with encoder: p1960 = 4).  
The saturation characteristic recording is automatically deactivated in parameter p1959 during the speed tuning run.

When permanent-magnet synchronous motors are commissioned, the speed controller should be tuned (p1900 = 3 or p1960 > 0) when the load is connected.

### Carrying out the rotating measurement (p1960 > 0)

The following measurements are carried out when the enable signals are set and a switch-on command is issued in accordance with the settings in p1959 and p1960.

- Encoder test  
If a speed encoder is used, the direction of rotation and the pulse number are checked.
- Only for induction motors:
  - Measurement of the magnetization characteristic (p0362 to p0369)
  - Measurement of the magnetization current (p0320) and determination of the offset voltage of the converter for offset compensation
  - Measurement of the saturation of the leakage inductance and setting of the current controller adaptation (p0391 to p0393)  
This is automatically activated with 1LA1 and 1LA8 motors (p0300 = 11, 18) (see p1959.5).
- Speed controller optimization
  - p1470 and p1472, when p1960 = 1 (operation without encoder)
  - p1460 and p1462, when p1960 = 2 (operation with encoder)
  - Setting the Kp adaptation
- Acceleration precontrol setting (p1496, p1517)
- Setting for ratio between the total moment of inertia and that of the motor (p0342)

---

#### Note

##### Non-volatile saving

To set the new controller setting permanently, the data must be saved with p0977 or p0971 in a non-volatile memory.

---

 <b>WARNING</b>
--

<b>Unexpected motor movement during motor identification in the rotating mode</b>
---

When selecting motor identification with optimization in the rotating mode, after commissioning, the drive initiates that the motor rotates with speeds that can reach the maximum motor speed.
---

- |  |
|--|
| <ul style="list-style-type: none"><li>• Observe the general safety instructions.</li><li>• Ensure that the EMERGENCY STOP functions are fully functional when commissioning the drive.</li></ul> |
|--|

---

#### Note

##### Speed controller optimization for operation with encoder

If speed controller optimization is carried out for operation with an encoder, the control mode will be temporarily changed over to encoderless speed control automatically, in order to be able to carry out the encoder test.

---

### 9.2.1.3 Shortened rotating measurement

A normal rotating measurement cannot always be performed when the load is connected. When switching the motor on for the first time, a short measurement of the moment of inertia and the measurement of the magnetizing current and the saturation characteristic can be performed with a simplified measuring procedure.

The following settings apply for the shortened rotating measurement:

- Measurement shortened (p1959.12 = 1)
- After measurement: Direct transfer to operation (p1959.13 = 1)

During the shortened rotating measurement, the drive is not ramped up to the rated speed, but to the value set in p1965 (factory setting, 40 %). Parameter p1961 can be adjusted at the plant, but it must be high enough to ensure that the machine has left open-loop controlled operation. The machine should be operated in no-load operation (torque < 30% of  $M_{rated}$ ) as far as is possible.

During the shortened rotating measurement the saving of parameters is disabled, because parameter adjustments are automatically made for the measurement, which are to be reassigned after the measurement.

#### Measurement shortened (p1959.12 = 1)

If p1959.12 = 1 is set, a shortened rotating measurement is carried out. In this case, the magnetizing current and moment of inertia are determined with a somewhat lower degree of accuracy; the vibration test is no longer required.

After the end of the measurement, the drive is brought to a standstill and all the parameters modified for performing the measurement are set to their original values. p1959.12 has no effect on p1960 = 3, 4.

#### After measurement: Direct transfer to operation (p1959.13 = 1)

If p1959.13 = 1 is set, the drive is not stopped after the end of the shortened measurement, but is instead moved to the desired setpoint speed with the set ramp up.

Since braking to standstill cannot be performed during this measurement and no pulses are locked, no more parameters can be changed that could later be written back during operation.

#### Do not change controller parameters during the measurement (p1959.11 = 1)

With the rotating measurement, the drive independently changes its speed controller parameters during start-up. This is also performed when bits 3 (recalculate speed controller parameters) and 4 (speed controller optimization/tuning) of parameter 1959 are not set. In many cases, however, the decoupling of drives is linked to high cost. The loads have high moments of inertia. The controller parameters set by the drive do not always match the drive application and may therefore potentially cause damage to the mechanical system.

If p1959.11 = 1 is set, the recalculation of the speed controller parameters is prevented.

#### 9.2.1.4 Parameters

- r0047 Motor data identification and speed controller optimization
- p1300 Open-loop/closed-loop control operating mode
- p1900 Motor data identification and rotating measurement
- p1909 Motor data identification, control word
- p1910 Motor data identification selection
- p1959 Rotating measurement configuration
- p1960 Rotating measurement selection
- p1961 Saturation characteristic speed to determine
- p1965 Speed controller optimization speed
- p1967 Speed controller optimization dynamic factor
- r1968 Speed controller optimization actual dynamic factor
- r1973 Rotating measurement encoder test pulse number determined
- p1980 Pole position identification procedure
- r3925 Identification final display
- r3927 Motor data identification, control word
- r3928 Rotating measurement configuration

### 9.2.2 Efficiency optimization

#### 9.2.2.1 Description

For induction motors, efficiency optimization has the following advantages:

- Lower energy costs
- Lower motor temperature rise
- Reduced motor noise levels

Disadvantages of efficiency optimization

- Longer acceleration times
- More significant speed dips for torque surges
- Lower dynamic response

However, the disadvantages are only relevant if the motor must respond with a high dynamic performance. Also when that the efficiency optimization is active, the converter motor control prevents the motor from stalling.



**Optimization techniques**

Speed and torque are specified by the driven machine. As a consequence, the flux is the remaining variable for optimizing the efficiency.

The efficiency of induction motors can be optimized using 2 different techniques. Both techniques optimize the efficiency using the flux.

It only makes sense to activate efficiency optimization if the dynamic response requirements are low (e.g. pump and fan applications).

**9.2.2.2 Simple efficiency optimization (method 1)**

For p1580 = 100 %, the flux in the motor under no-load operating conditions is reduced to half of the setpoint (reference) flux (p1570/2). As soon as a load is connected to the drive, the setpoint (reference) flux increases linearly with the load and reaches the setpoint set in p1570 at approx. r0077 = r0331 x p1570.

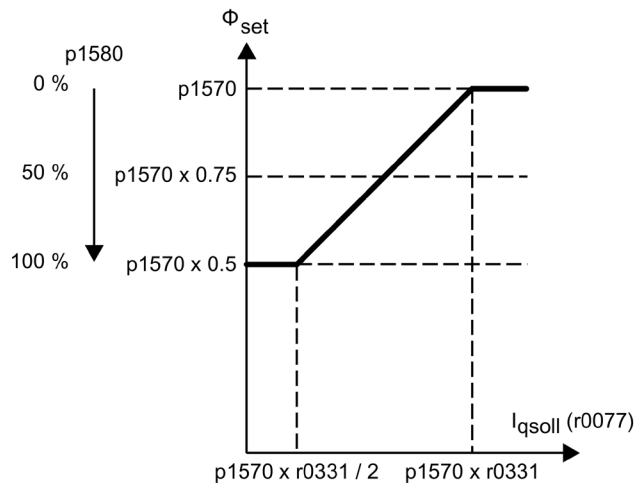


Figure 9-3 Efficiency optimization

In the field-weakening range, the final value is reduced by the actual degree of field weakening. The smoothing time (p1582) should be set to approx. 100 ms to 200 ms. Flux differentiation (see also p1401.1) is automatically deactivated internally following magnetization.


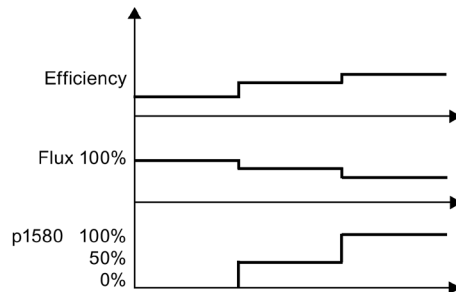


Figure 9-4 Basic efficiency optimization

### 9.2.2.3 Advanced efficiency optimization (method 2)

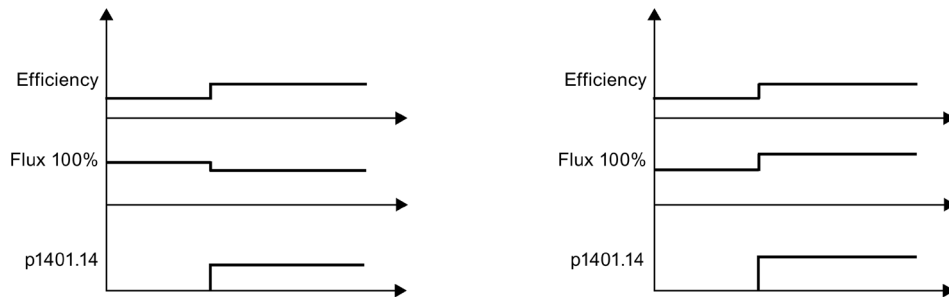The advanced efficiency optimization generally achieves a better efficiency than the basic efficiency optimization. With this technique, the actual motor operating point is determined as a function of the efficiency and flux - and the flux is set to achieve the optimum efficiency. Depending on the motor operating point, the inverter either decreases or increases the flux in partial load operation of the motor.



Advanced efficiency optimization with flux reduction

Advanced efficiency optimization with flux reduction

The advanced efficiency optimization is deactivated in the factory setting.

To activate advanced efficiency optimization, set p1401.14 = 1.

### 9.2.2.4 Function diagrams, parameters

#### Function diagram

- FP 6722 Field weakening characteristic, Id setpoint (ASM, p0300 = 1)
- FP 6723 Field weakening controller, flux controller for induction motor (p0300 = 1)

#### Parameter

- r0077 Current setpoints, torque-generating
- r0331 Motor magnetizing current/short-circuit current (actual)
- p1401 Flux control configuration
- p1570 Flux setpoint
- p1580 Efficiency optimization
- p1582 Flux setpoint smoothing time

### 9.2.3 Fast magnetization for induction motors

#### Description

Fast magnetization for induction motors reduces the delay time when magnetizing.

This shorter delay time is required for applications where a change is frequently made between various motors and one converter. After being switched to a different motor, a new data set must be loaded in the converter and then the motor magnetized. This can result in excessive waiting times, which can be significantly reduced by means of quick magnetization.

#### Features

- Rapid flux build-up by impressing a field-producing current at the current limit, which considerably reduces the magnetization time.
- If the "Flying restart" function is activated, the excitation build-up time set in p0346 is still used.

#### Commissioning

Parameter setting p1401.6 = 1 is necessary to activate fast magnetization.

This setting initiates the following sequence during motor starting:

- The maximum excitation build-up current of the induction motor (referred to the permitted rated power module current (r0207[0])) is set using parameter p0644 (Current limit excitation build-up induction motor).
- The field-generating current setpoint jumps to the value set in p0644 or the maximum of  $I_{max} = 0.9 \times r0067$  (high limit field-generating current setpoint).
- The flux increases as fast as physically possible with the specified current.
- The flux setpoint r0083 is made to follow accordingly.
- As soon as the flux threshold value programmed in p1573 is reached (min.: 10%, max. 200%, factory setting: 100%), excitation ceases and the speed setpoint is enabled. The flux threshold value must not be set too low for a large load as the torque-generating current is limited during the magnetizing time.

---

#### Note

##### Influence of the flux threshold value

The flux threshold value set in parameter p1573 is effective only if the actual flux during magnetization reaches the value programmed in p1573 before the time set in p0346.

---

- The flux is increased further until the flux setpoint in (p1570) is reached.
- The field-producing current setpoint is reduced by means of a flux controller with P gain (p1590) and the parameterized smoothing factor (p1616).

**Notes**

When quick magnetization is selected (p1401.6 = 1), smooth starting is deactivated internally and alarm A07416 displayed.

When the stator resistance identification function is active (see p0621 "Identification of stator resistance after restart"), quick magnetization is deactivated internally and alarm A07416 displayed.

The parameter does not work when combined with the "flying restart" function (see p1200), i.e. flying restart is performed without quick magnetization.

**Alarms and faults**

**Flux controller configuration**

When a function controlled using parameters p1401 and p0621 is activated, the system checks whether any other incompatible function has already been selected. If this is the case, alarm A07416 is displayed with the number of the parameter that is incompatible with that of the configuration (i.e. p0621 or p1401).

As these are data-set-dependent parameters (p1401 is DDS-dependent and p0621 MDS-dependent), the number of the data set is also specified in the alarm value.

The configuration of the flow control (p1401) has inconsistencies.

**Error causes and remedies**

Cause	Remedy
1 = Quick magnetizing (p1401.6) for soft starting (p1401.0)	<ul style="list-style-type: none"> <li>Deactivate smooth starting: p1401.0 = 0</li> <li>Deactivate quick magnetization: p1401.6 = 0</li> </ul>
2 = Quick magnetizing (p1401.6) for flux build-up control (p1401.2)	<ul style="list-style-type: none"> <li>Deactivate flux build-up control: p1401.2 = 0</li> <li>Deactivate quick magnetization: p1401.6 = 0</li> </ul>
3 = Quick magnetization (p1401.6) for Rs identification (stator resistance identification) after restart (p0621 = 2)	<ul style="list-style-type: none"> <li>Change Rs identification parameter settings: p0621 = 0, 1</li> <li>Deactivate quick magnetization: p1401.6 = 0</li> </ul>

**Flux controller output limited**

If the current limit (p0640) is set very low (below the rated magnetizing current value, p0320), it is possible that the parameterized flux setpoint (p1570) is never reached.

As soon as the time in p0346 (magnetization time) is exceeded, fault F07411 is output. Generally, the magnetization time is significantly longer than the flux build-up time associated with quick magnetization.

**Error causes and remedies**

When fast magnetization is configured (p1401.6 = 1), the specified flux setpoint is not reached even though the current setpoint = 90 % of maximum current.

Cause	Remedy
Motor data is incorrect.	Correct the motor data.
Motor data and motor connection type (star/delta) do not match.	Check the motor connection type.
Current limit in p0640 is set too low for the motor concerned.	Correct the current limits (p0640, p0323).
Induction motor (encoderless, open-loop controlled) at I2t limit.	Reduce the load on the induction motor.
Power unit rating is too low.	<ul style="list-style-type: none"> <li>• Possibly use a higher rating power unit.</li> <li>• Check the motor feeder cable.</li> </ul>

**Function diagram**

- FP 6491 Flux control configuration
- FP 6722 Field weakening characteristic, Id setpoint (ASM, p0300 = 1)
- FP 6723 Field weakening controller, flux controller (ASM, p0300 = 1)

**Parameter**

- r0207 Rated power unit current
- p0320 Motor rated magnetization current / short-circuit current
- p0346 Motor excitation build-up time
- p0621 Stator resistance identification after restart
- p0640 Current limit
- p0644 Induction motor excitation current limit
- p1401 Flux control configuration
- p1570 Flux setpoint
- p1573 Flux threshold value magnetization
- p1590 Flux controller P gain
- p1616 Current setpoint smoothing time

## 9.2.4 Vdc control

### Description

The "Vdc control" function can be activated using the appropriate measures if an overvoltage or undervoltage is present in the DC link.

- Overvoltage in the DC link
  - Typical cause:  
The drive operates in regenerative mode and is supplying too much energy to the DC link.
  - Remedy:  
By reducing the regenerative torque, the DC-link voltage is maintained within permissible limits.

---

#### Note

##### Fault F30002 "DC-link overvoltage"

When switching off or during rapid load changes, if failure often arises and fault F30002 "DC-link overvoltage" is reported, you may be able to improve the situation by increasing the gain factor for the Vdc controller p1250 (p1290), e.g. from "1.00" to "2.00".

---

- Undervoltage in the DC link
  - Typical cause:  
Failure of the supply voltage or infeed for the DC link.
  - Remedy:  
Specify a regenerative torque for the rotating drive to compensate the existing losses, thereby stabilizing the voltage in the DC link. This process is known as kinetic buffering.  
Kinetic buffering is only possible as long as energy is generated by the movement of the drive.

## Properties

- Vdc control
  - Comprises Vdc\_max control and Vdc\_min control (kinetic buffering), which are independent of each other.
  - Contains a joint PI controller. The dynamic factor is used to set Vdc\_min and Vdc\_max control independently of each other.
- Vdc\_min control (kinetic buffering)
  - The kinetic energy of the motor is used for buffering the DC-link voltage in the event of a momentary power failure, thereby delaying the drive.
- Vdc\_max control
  - Control momentary regenerative load without shutdown using "overvoltage in the DC link".
  - Vdc\_max control is only recommended for a supply without active closed-loop control for the DC link and without feedback.

## Description of Vdc\_min control (kinetic buffering)

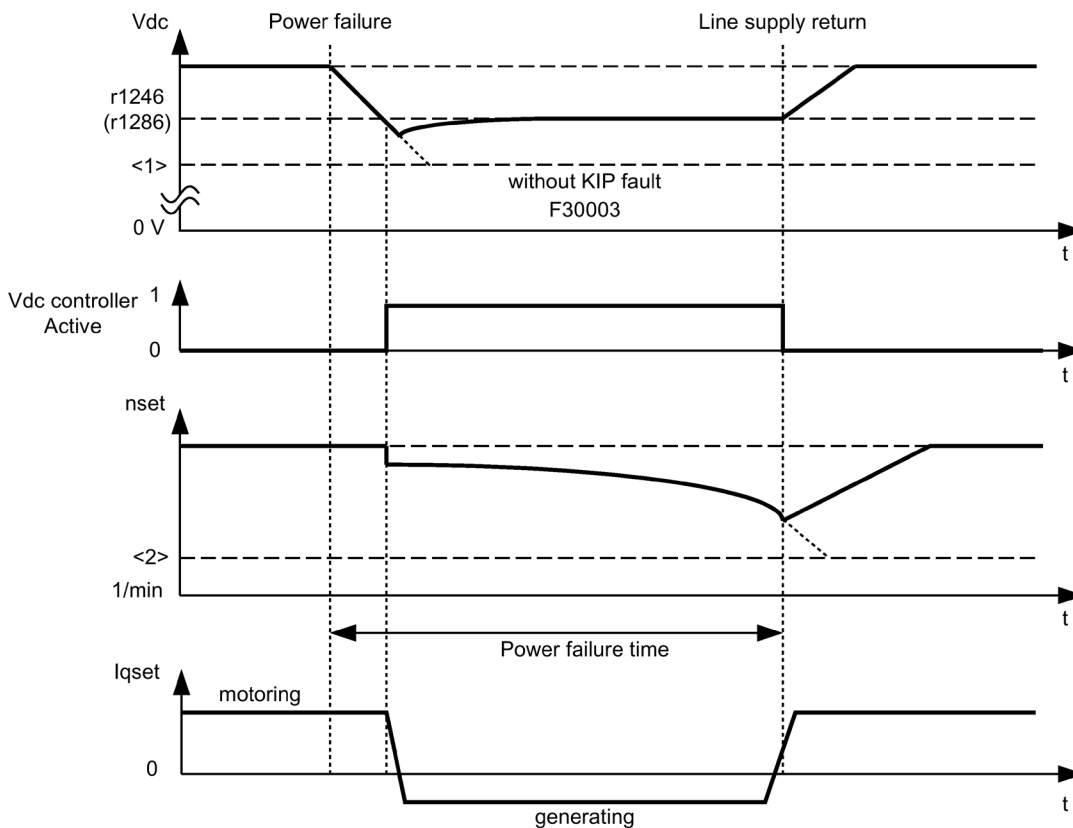


Figure 9-5 Switching Vdc\_min control on/off (kinetic buffering)

---

**Note**

**Activation of kinetic buffering**

Kinetic buffering must only be activated in version A in conjunction with an external power supply.

---

When Vdc\_min control is enabled with p1240 = 2.3 (p1280), it is activated if the power fails when the Vdc\_min switch-in level (r1246 (r1286)) is undershot. Seen generally, the regenerative energy (braking energy) of the motor when the speed is reduced is used to support the converter DC link voltage. This means that when Vdc\_min control is active, the motor speed no longer follows the main setpoint and can be reduced to zero. The drive continues operating until the shutdown threshold of the DC link voltage is undershot (see "Switching Vdc\_min control on/off" <1>).

---

**Note**

**Parameter specifications in brackets**

All parameter specifications in parentheses refer to U/f control.

---

Distinction between U/f control and speed control:

- U/f control  
The Vdc\_min controller acts on the speed setpoint channel. When Vdc\_min control is active, the drive setpoint speed is reduced so that the drive becomes regenerative.
- Speed control  
The Vdc\_min controller acts on the speed controller output and affects the torque-generating current setpoint. When Vdc\_min control is active, the torque-generating current setpoint is reduced so that the drive becomes regenerative.

If the power fails, the DC link voltage decreases due to the lack of power from the supply system. When the DC link voltage threshold set via parameter p1245 (p1285) is reached, the Vdc\_min controller is activated. Due to the PID properties of the controller, the motor speed is reduced to the extent that the regenerative drive energy maintains the DC link voltage at the level set in p1245 (p1285). The kinetic energy of the drive governs the dropout characteristic of the motor speed and, in turn, the buffering duration. In centrifugal mass drives (e.g. fans), buffering can last a few seconds. In drives with a low centrifugal mass (e.g. pumps), however, buffering can last just 100 to 200 ms. When the power is restored, the Vdc\_min controller is deactivated and the drive is ramped up to its setpoint speed at the ramp-function generator ramp. As long as the Vdc\_min controller is active, an alarm A7402 (drive: DC link voltage minimum controller active) will be issued.

If the drive can no longer generate any regenerative energy (because, for example, it is almost at a standstill), the DC link voltage continues to drop. If the minimum DC link voltage is undershot (see "Switching Vdc\_min control on/off" <1>), the drive will shut down with fault F30003 (power unit: DC link undervoltage).



If a speed threshold set with parameter p1257 (p1297) is undershot when Vdc\_min control is active (see diagram "Switching Vdc\_min control on/off" <2>), the drive is shut down with F7405 (drive: kinetic buffering minimum speed not reached).

If a shutdown with undervoltage in the DC link (F30003) occurs without the drive coming to a standstill despite the fact that Vdc\_min control is active, the controller may have to be optimized via dynamic factor p1247 (p1287). Increasing the dynamic factor in p1247 (p1287) causes the controller to intervene more quickly. The default setting for this parameter, however, should be sufficient for most applications.

Parameter p1256 = 1 (p1296) can be used to activate time monitoring for kinetic buffering. The monitoring time can be set in parameter p1255 (p1295). If buffering (i.e. the power failure) lasts longer than the time set here, the drive is switched off with fault F7406 (drive: kinetic buffering maximum time exceeded). The standard fault reaction for this fault is OFF3, which means that this function can be used for controlled drive deceleration in the event of a power failure. In this case, excess regenerative energy can only be dissipated via an additional braking resistor.

### Description of Vdc\_max control

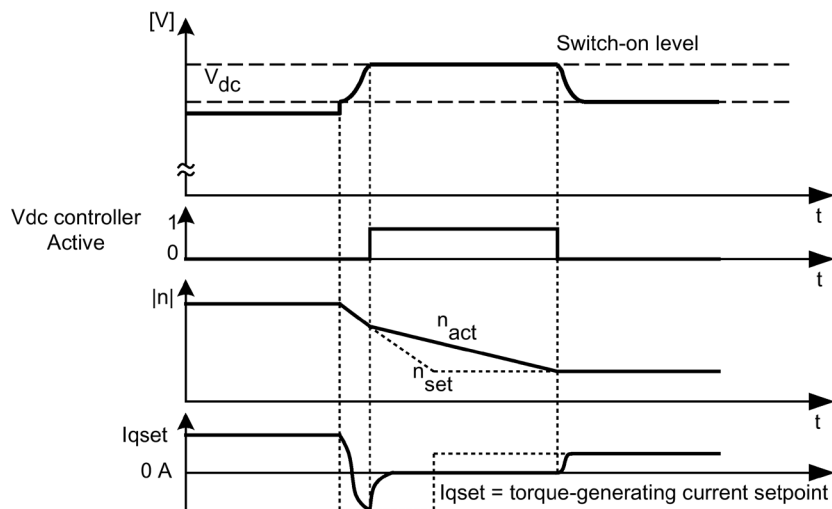


Figure 9-6 Activating/deactivating the Vdc\_max control

The switch-on level of the Vdc\_max control (r1242 or r1282) is calculated as follows:

- when the automatic switch-on level sensing is disabled (p1254 (p1294) = 0)
  - ACAC device:  $r1242 (r1282) = 1.15 \times \sqrt{2} \times p0210$  (device supply voltage)
  - DCAC device:  $r1242 (r1282) = 1.15 \times p0210$  (device supply voltage)
- when the automatic switch-on level sensing is enabled (p1254 (p1294) = 1)
  - $r1242 (r1282) = V_{dc\_max} - 50 \text{ V}$  ( $V_{dc\_max}$ : overvoltage threshold of the converter)

## Function diagram

FP 6220 (FP 6320) Vdc\_max controller and Vdc\_min controller

## Parameter

- p1240 (p1280) Vdc controller or Vdc monitoring configuration
- r1242 (r1282) Vdc\_min controller switch-in level
- p1243 (p1283) Vdc\_max controller dynamic factor
- p1245 (p1285) Vdc\_min controller switch-on level (kinetic buffering)
- r1246 (r1286) Vdc\_min controller switch-on level (kinetic buffering)
- p1247 (p1287) Vdc\_min controller dynamic factor (kinetic buffering)
- (p1288) Vdc\_max controller ramp-function generator feedback factor (V/f)
- p1249 (p1289) Vdc\_max controller speed threshold
- p1250 (p1290) Vdc controller proportional gain
- p1251 (p1291) Vdc controller integral action time
- p1252 (p1292) Vdc controller derivative-action time
- (p1293) Vdc\_min controller output limit (V/f)
- p1254 (p1294) Vdc\_max controller automatic ON level detection
- p1255 (p1295) Vdc\_min controller time threshold
- p1256 (p1296) Vdc\_min controller response (kinetic buffering)
- p1257 (p1297) Vdc\_min controller speed threshold
- r1258 (r1298) Vdc controller output

## 9.2.5 Automatic restart function

### Description

The automatic restart function automatically restarts the converter after an undervoltage or a power failure. The alarms present are acknowledged and the drive is restarted automatically.

The drive can be restarted using:

- The standard procedure starting from standstill, or
- Starting the drive with the flying restart function.  
For drives with low moments of inertia and load torques that allow the drive to come to a standstill within a matter of seconds (e.g., pump drives operating against a pressure head), then starting from standstill is recommended.

---

### Note

#### Drives with high moments of inertia

The flying restart function can also be activated for drives with large moments of inertia (such as fan drives). This enables you to switch to the motor that is still rotating.

---



### WARNING

#### Unexpected movement of the motor during automatic restart

If p1210 is set to values  $>1$ , the motor can be restarted automatically without the need to issue the ON command.

In the event of prolonged power failures and when the automatic restart function is activated ( $p1210 > 1$ ), the drive may have been at a standstill for a long time and mistakenly considered to have been switched off.

For this reason, entering the area around the drive when it is in this condition can cause death, severe injury or material damage.

- Observe the general safety instructions.
- Ensure that the EMERGENCY STOP functions are always fully functional.

#### Wait for the demagnetizing time

To prevent the motor from switching to phase opposition when the drive is being restarted, there is a delay while the motor demagnetizes ( $t = 2.3 \times$  motor magnetization time constant). Once this time has elapsed, the inverter is enabled and the motor is supplied with power.

## Automatic restart mode

Table 9- 2 Automatic restart mode

p1210	Mode	Meaning
0	Disables automatic restart	Automatic restart inactive
1	Acknowledges all faults without restarting	Any faults that are present, are acknowledged automatically once the cause has been rectified. If further faults occur after faults have been acknowledged, these will also be acknowledged automatically. A minimum time of $p1212 + 1$ s must expire between successful fault acknowledgement and a fault re-occurring if the signal ON/OFF1 (control word 1, bit 0) is at a HIGH signal level. If the ON/OFF1 signal is set to LOW, the time between a fault being acknowledged and another fault occurring must be at least 1 s. With $p1210 = 1$ , no F07320 fault is generated if the acknowledgement attempt is unsuccessful, for example as the faults occur too frequently.
4	Automatic restart after power failure, without additional startup attempts	An automatic restart is only carried out, if fault F30003 has also occurred at the Motor Module, or there is a HIGH signal at binector input p1208[1], or in the case of an infeed drive object (A_Infeed), fault F06200 has occurred. If additional faults are pending, then these faults will also be acknowledged; if this is successful, the startup attempt will be resumed. The failure of the CU's 24 V power supply will be interpreted as a line supply failure. For the case that only the phase voltage fails, time monitoring can be set using p1213.
6	Restart after fault with additional startup attempts	An automatic restart is carried out after any fault or for $p1208[0] = 1$ . If the faults occur one after the other, then the number of startup attempts is defined using p1211. Monitoring over time can be set using p1213.
14	Restart after power failure after manual acknowledgement	As with $p1210 = 4$ . Pending faults must be manually acknowledged. This is followed by an automatic restart.
16	Restart after fault after manual acknowledgement	As with $p1210 = 6$ . Pending faults must be manually acknowledged. This is followed by an automatic restart.

### Startup attempts (p1211) and waiting time (p1212)

p1211 is used to specify the number of startup attempts. The number is decremented internally after each successful fault acknowledgement (line supply voltage must be restored or the infeed signals that it is ready). Fault F07320 is output when the number of parameterized startup attempts is reached.

If  $p1211 = x$ ,  $x + 1$  startup attempts will be made.

---

**Note****Start of a startup attempt**

A startup attempt starts immediately when the fault occurs.

The faults are acknowledged automatically at intervals of half the waiting time p1212.

Following successful acknowledgement and restoration of the voltage, the system is automatically powered up again.

---

The startup attempt has been successfully completed if the flying restart and the motor magnetization (induction motor) have been completed ( $r0056.4 = 1$ ) and one additional second has expired. The startup counter is not reset to the initial value p1211 until this point.

If additional faults occur between successful acknowledgement and the end of the startup attempt, then the startup counter, when it is acknowledged, is also decremented.

**Automatic restart monitoring time (p1213)**

- p1213[0] = Monitoring time for restart

The monitoring time starts when the faults are detected. If the automatic acknowledgements are not successful, the monitoring time will continue. If the drive has not successfully restarted by the time the monitoring time expires (flying restart and motor magnetization must have been completed:  $r0056.4 = 1$ ), fault F07320 is output.

The monitoring is deactivated with  $p1213 = 0$ . If p1213 is set to a value lower than the sum of p1212, the magnetization time r0346 and the additional delay time due to flying restart, then fault F07320 will be generated on every restart attempt. If, for  $p1210 = 1$ , the time in p1213 is set to a value lower than p1212, then fault F07320 will also be generated on every restart attempt.

The monitoring time must be extended if the faults that occur cannot be immediately and successfully acknowledged (e.g. when faults are permanently present).

For  $p1210 = 14, 16$  manual acknowledgement of the pending fault must take place within the time in p1213[0]. Otherwise the fault F07320 is generated after the time set.

- p1213[1] = Monitoring time for resetting the starting counter

The starting counter (see r1214) is only reset to starting value p1211 once the time in p1213[1] has expired after a successful restart. The delay time is not effective for error acknowledgment without an automatic restart ( $p1210 = 1$ ). If the power supply fails (blackout), the wait time only starts once the power has been restored and the Control Unit is ramped up. The starting counter is reset to the starting value p1211, if F07320 occurred, the switch-on command is recalled and the fault acknowledged.

If starting value p1211 or mode p1210 is changed, the starting counter is immediately updated.

### Faults without automatic restart (p1206)

Up to 10 fault numbers for which the automatic restart should not be effective can be selected via p1206[0...9].

The parameter is only effective if p1210 = 6 and p1210 = 16.

### Parameters

- p1206[0...9] Faults without automatic restart
- p1207 BI: Automatic restart (AR) - connection to the following drive object
- p1208[0...1] BI: Automatic restart modification, infeed
- p1210 Automatic restart mode
- p1211 Automatic restart, start attempts
- p1212 Automatic restart, delay time start attempts
- p1213[0...1] Automatic restart monitoring time
- r1214 Automatic restart status

## 9.2.6 Flying restart

### Description

The "Flying restart" function (enabled via p1200) allows the converter to switch to a motor that is still rotating. Switching on the converter without the flying restart function would not allow any flux to build up in the motor while it is rotating. Since the motor cannot generate any torque without flux, this can cause it to switch off due to overcurrent (F07801).

The flying restart function first determines the speed of the drive with which V/f or vector control is initialized, so that the converter and motor frequency can be synchronized.

During the standard start-up procedure for the converter, the motor must be at a standstill. The converter then accelerates the motor to the setpoint speed. In many cases, however, the motor is not at a standstill.

Two different situations are possible here:

1. The drive rotates as a result of external influences, such as water (pump drives) or air (fan drives). In this case, the drive can also rotate against the direction of rotation.
2. The drive rotates as a result of a previous shutdown (e.g. OFF2 or a power failure). The drive slowly coasts to a standstill as a result of the kinetic energy stored in the drive train (example: induced-draft fan with a high moment of inertia and a steeply descending load characteristic in the lower speed range).

In accordance with the setting chosen (p1200), the flying restart function is activated in the following situations:

- Once power has been restored and the automatic restart function is active
- After a shutdown with the OFF2 command (pulse inhibit) when the automatic restart function is active
- When the ON command is issued.

---

**Note****Applications for flying restart function**

The flying restart function must be used when the motor may still be running or is being driven by the load to prevent shutdowns due to overcurrent (F7801).

---

**Note****Information on flying restart function**

If the value set for parameter p1203 (search speed factor) is higher, the search curve is flatter and, as a result, the search time is longer. A lower value has the opposite effect.

In motors with a low moment of inertia, the flying restart function can cause the drive to accelerate slightly.

In group drives, the flying restart function should not be activated due to the different coasting properties of the individual motors.

---

### 9.2.6.1 Flying restart without encoder

#### Description

Depending on parameter p1200, the flying restart function is started with the maximum search speed  $n_{Search,max}$  once the de-excitation time (p0347) has elapsed (see diagram "Flying restart").

$$n_{Search,max} = 1.25 \times n_{max} \text{ (p1082)}$$

The flying restart function behaves differently with V/f control and vector control:

- V/f characteristic (p1300 < 20):  
The search speed yielded from parameter p1203 reduces the search frequency in accordance with the motor current. The parameterizable search current (p1202) is injected here. If the search frequency is similar to the rotor frequency, a current minimum occurs. Once the frequency has been found, the motor is magnetized. The output voltage during the magnetization time (p0346) is increased to the voltage value yielded from the V/f characteristic (see "Flying restart").
- Vector control without encoder:  
The motor speed is determined using the speed adaptation control loop for the electric motor model. To begin with, the search current (p1202) is injected and then the controller is activated starting from the maximum search frequency. The dynamic response of the controller can be altered using the search speed factor (p1203). If the deviation of the speed adaptation controller is not too great, the motor continues to be magnetized for the duration parameterized in p0346.

Once the excitation build-up time (p0346) has elapsed, the ramp-function generator is set to the actual speed value and the motor ramped up to the current setpoint frequency.

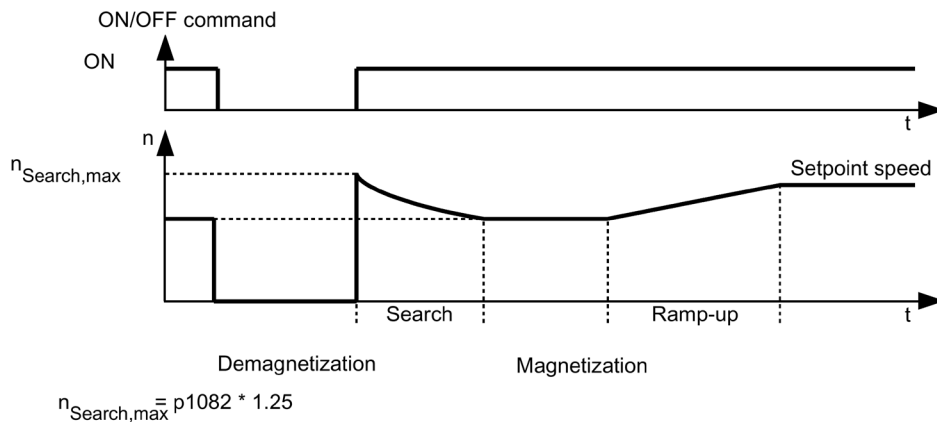


Figure 9-7 Flying restart



** WARNING****Unexpected movement of the motor when flying restart is activated**

When the flying restart (p1200) function is active, the drive may still be accelerated by the search current despite the fact that it is at standstill and the setpoint is 0!

For this reason, death, serious injury, or considerable material damage can occur if personnel enter the working area of a motor in this state.

- Observe the general safety instructions.
- Ensure that the EMERGENCY STOP functions are always fully functional.

**Note****Flying restart without encoder for permanently-excited synchronous motors**

The flying restart without encoder for permanently-excited synchronous motors is possible only when a VSM10 Voltage Sensing Module is used to acquire the motor speed (option K51).

**Flying restart without encoder for long cables**

In the case of long motor cables, the procedure described above can lead to problems during a flying restart. In such cases, the following settings can improve the flying restart function:

- Enter the cable resistance in parameter p0352 before motor data identification.
- Set parameter p1203 to at least 300%.  
With this setting, flying restart takes longer than for values below 300%.

**Note****Optimize the flying restart function**

To optimize the flying restart, a trace recording should check the function. If necessary, you can improve the result by making settings for parameters p1202 and p1203.

### Fast flying restart (only for induction motors)

The "Fast flying restart" function can be activated during operation without encoder (vector control, V/f control linear and parabolic). For a fast flying restart, the initial frequency is set to zero.

In this procedure, the flying restart function is performed successfully within a period of approximately 200 ms.

The fast flying restart function works only under the following conditions:

- for a current controller cycle time of 250  $\mu$ s or 400  $\mu$ s (without motor-side filter and without long cables)
- Up to 4x rated speed for vector control
- Up to the rated speed for V/f control

---

#### Note

The "Fast flying restart" function is only possible with induction motors.

---

The settings for fast flying restart are configured in the expert list.

1. The "Fast flying restart" procedure is selected by setting p1780.11 = 1.

For operation with encoder, the settings of this bit are ignored, because no fast flying restart is possible here.

2. Fast flying restart is activated using the p1200 parameter, as with the normal flying restart.
3. For the determination of the line resistance, a motor data identification must be carried out at standstill (p1900 = 2).

The critical parameters are the motor stator resistance (p0350) and the motor stator leakage inductance (p0356).

The fast flying restart condition codes are the following:

- For U/f control: r1204.14 (fast flying start activated)
- For vector control: r1205.16 (fast flying restart activated) or r1205.17 (fast flying restart finished)

---

#### Note

##### Search current must not be too small

If you have any problems with the fast flying restart it can be useful to set the search current (p1202) to values > 30%. Problems can occur if the drive is operated far into the field weakening, or if it is operated with motor-side filters or long lines.

---

### Fast flying restart with voltage acquisition via VSM10

The time for the connection to a rotating induction motor can be shortened when the terminal voltage of the motor is measured.

Settings for the fast flying restart with voltage acquisition:

1. Select the voltage measurement for the fast flying restart: p0247.5 = 1.
2. Activate the flying restart: p1200 > 0.

The following status bits indicate the characteristic of the flying restart:

1. For U/f control: r1204.15 (flying restart with VSM active)
2. For vector control: r1205.18, r1205.19, r1205.20

---

#### Note

##### Voltage amplitude must not be too small

If the measured voltage amplitude undershoots the 1% limit of the converter rated voltage, the flying restart with voltage measurement is deactivated and the motor speed sought.

---

### 9.2.6.2 Flying restart with encoder

#### Description

The flying restart function behaves differently with V/f control and vector control:

- U/f characteristic (p1300 < 20):  
Flying restart without an encoder (see Chapter "Flying restart without an encoder")
- Vector control with a speed encoder:  
Since the speed is known from the start, the motor can be magnetized immediately at the appropriate frequency. The duration of magnetization is specified in p0346. Once the excitation build-up time has elapsed, the ramp-function generator is set to the actual speed value and the motor ramped up to the current setpoint speed.



#### WARNING

##### Unexpected movement of the motor when flying restart is activated

When the flying restart (p1200) function is active, the drive may still be accelerated by the search current despite the fact that it is at standstill and the setpoint is 0!

For this reason, death, serious injury, or considerable material damage can occur if personnel enter the working area of a motor in this state.

- Observe the general safety instructions.
- Ensure that the EMERGENCY STOP functions are always fully functional.

### 9.2.6.3 Parameters

- p0247.5 Utilize the voltage measured values for flying restart
- p0352 Cable resistance
- p1200 Flying restart operating mode
  - 0: Flying restart inactive
  - 1: Flying restart always active (start in setpoint direction)
  - 2: Flying restart active after On, error, OFF2 (start in setpoint direction)
  - 3: Flying restart active after error, OFF2 (start in setpoint direction)
  - 4: Flying restart always active (start only in setpoint direction)
  - 5: Flying restart active after On, error, OFF2 (start only in setpoint direction)
  - 6: Flying restart active after error, OFF2 (start only in setpoint direction)
- p1202 Flying restart search current
- p1203 Flying restart search speed factor
- r1204 Flying restart, U/f control status
- r1205 Flying restart, vector control status
- p1780.11 Fast flying restart with voltage model for induction motors
- p1900 Motor data identification and rotating measurement
- p1909 Motor data identification control word

---

#### Note

##### Set search direction for the flying restart

For p1200 = 1, 2, 3, the following applies: Search in both directions, start only in the setpoint direction.

For p1200 = 4, 5, 6, the following applies: Search only in the setpoint direction.

---

### 9.2.7 Checking for a short-circuit/ground fault at a motor

When switching on the power unit, test pulses can be generated that check the connection between the power unit and motor - or the motor winding itself - for a short-circuit or ground fault.

Depending on the configuration in p1901, you can define as to whether only the short circuit test is executed - or additionally, also a ground fault test (with higher current pulses).

- p1901.0 = 1

Checks for a line-line short-circuit once/always when the pulses are enabled.

- p1901.1 = 1

Checks for a a ground fault once/always when the pulses are enabled.

- p1901.2

p1901.2 = 0: The checks selected with bit 00 or bit 01 are performed once when the pulses are enabled.

p1901.2 = 1: The checks selected with bit 00 or bit 01 are performed each time the pulses are enabled.

The ground fault test is only possible when the motor is stationary, and is therefore only realized when flying restart is deactivated (p1200 = 0).

The result of the checks that have been set is displayed in r1902.

The tests slightly delay motor starting, depending on what checks have been selected.

---

#### Note

The ground fault and short-circuit test are automatically deactivated as soon as a sine-wave filter is connected, as the filter could be excited by the test pulse.

---

## 9.2.8 Motor changeover/selection

### 9.2.8.1 Description

The motor data set changeover is, for example, used for:

- Changing over between different motors
- Changing over different windings in a motor (e.g. star-delta changeover)
- Motor data adaptation

---

#### Note

##### Switch to a rotating motor

To switch to a rotating motor, the "flying restart" function must be activated.

---

### 9.2.8.2 Example of changing over between two motors

#### Preconditions

- The drive has been commissioned for the first time.
- 2 motor data sets (MDS), p0130 = 2
- 2 drive data sets (DDS), p0180 = 2
- 2 digital outputs to control the auxiliary contactors
- 2 digital inputs to monitor the auxiliary contactors
- 1 digital input to select the data set
- 2 auxiliary contactors with auxiliary contacts (1 NO contact)
- 2 motor contactors with positively-driven auxiliary contacts (1 NC contact, 1 NO contact)

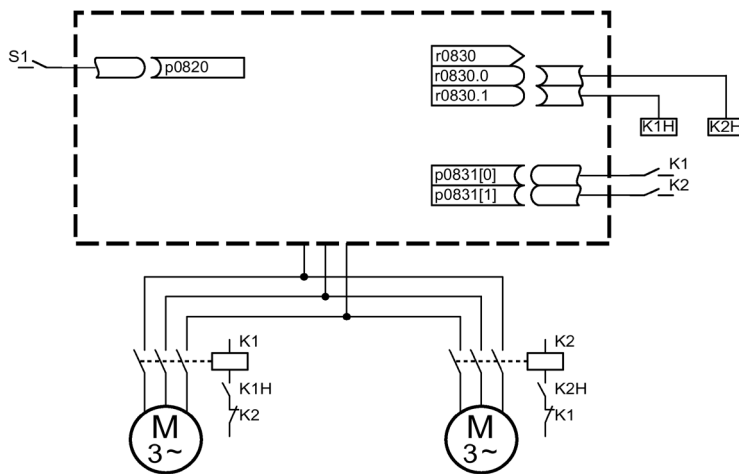


Figure 9-8 Example of motor changeover

Table 9-3 Settings for the motor changeover example

Parameter	Settings	Comment
p0130	2	Configure 2 MDS
p0180	2	Configure 2 DDS
p0186[0..1]	0, 1	The MDS are assigned to the DDS.
p0820	Digital input, DDS selection	The digital input to change over the motor is selected via the DDS. Binary coding is used (p0820 = bit 0, etc.).
p0821 to p0824	0	
p0826[0..1]	1, 2	Different numbers mean different thermal models.
p0827[0..1]	0, 1	The bits of r0830 are assigned to the MDSs. If p0827[0] = 0, for example, bit r0830.0 is set via DDS0 when MDS0 is selected.
r0830.0 and r0830.1	Digital outputs, auxiliary contactors	The digital outputs for the auxiliary contactors are assigned to the bits.
p0831[0..1]	Digital inputs, auxiliary contacts	The digital inputs for the feedback signal of the motor contactors are assigned.
p0833.00 and .01	0, 0	The drive controls the contactor circuit and pulse inhibition.

### Motor changeover sequence

1. Pulse suppression:  
The pulses are suppressed following the selection of a new drive data set using p0820 to p0824.
2. Open motor contactor:  
Motor contactor 1 is opened (r0830 = 0) and the status bit "Motor changeover active" (r0835.0) is set.
3. Change over drive data set:  
The requested data set is activated (r0051 = data set currently effective, r0837 = requested data set).

## 9.2 Drive Functions

4. Energize motor contactor:  
After the feedback signal (motor contactor opened) from motor contactor 1, the appropriate bit of r0830 is set and motor contactor 2 is energized.
5. Enable pulses:  
After the feedback signal (motor contactor closed) from motor contactor 2, the bit "motor data set changeover active" (r0835.0) is reset and the pulses are enabled. The motor has now been changed over.

### 9.2.8.3 Function diagram

FP 8565	Drive Data Set (DDS)
FP 8575	Motor Data Sets (MDS)

### 9.2.8.4 Parameters

- r0051 Drive data set DDS effective
- p0130 Motor data sets (MDS) number
- p0180 Drive data set (DDS) number
- p0186 Motor data sets (MDS) number
- p0819[0...2] Copy drive data set DDS
- p0820 BI: Drive data set selection DDS, bit 0
- p0821 BI: Drive data set selection DDS, bit 1
- p0822 BI: Drive data set selection DDS, bit 2
- p0823 BI: Drive data set selection DDS, bit 3
- p0824 BI: Drive data set selection DDS, bit 4
- p0826 Motor changeover, motor number
- p0827 Motor changeover status word bit number
- p0828 Motor changeover, feedback signal
- r0830 Motor changeover, status
- p0831 Motor changeover, contactor feedback signal
- p0833 Data set changeover configuration



## 9.2.9 Friction characteristic curve

### Description

The friction characteristic is used to compensate for the frictional torque of the motor and driven load. A friction characteristic allows the speed controller to be pre-controlled and improves the control response..

10 points along the characteristic are used for the friction characteristic. The coordinates of every interpolation point are defined by a speed parameter (p382x) and a torque parameter (p383x) (point 1 = p3820 and p3830, point 10 = p3829 and p3839).

### Features

- There are 10 points along the characteristic to represent the friction characteristic.
- An automatic function supports the friction characteristic plot.
- A connector output (r3841) can be interconnected as friction torque (p1569).
- The friction characteristic can be activated and deactivated (p3842).

### Commissioning

Speeds for making measurements as a function of the maximum speed p1082 are pre-assigned in p382x when commissioning the drive system for the first time. These can be appropriately changed corresponding to the actual requirements.

The automatic friction characteristic plot can be activated using p3845. The characteristic is then plotted the next time that it is enabled.

The following settings are possible:

- p3845 = 0 Friction characteristic plot deactivated
- p3845 = 1 Friction characteristic plot activated, all directions  
The friction characteristic is plotted in both directions of rotation. The result of the positive and negative measurement is averaged and entered into p383x.
- p3845 = 2 Friction characteristic plot activated, positive direction
- p3845 = 3 Friction characteristic plot activated, negative direction

p3847 (friction characteristic plot warm-up period) can be used to set a time for the drive to warm up to the specified operating temperature. During this time, the drive is brought up to and kept at the greatest speed set for plotting the friction characteristic, so that the drive warms up to the operating temperature. Then measurement is started with the highest speed.

 **WARNING**

**Unexpected motor movement during the friction characteristic plot**

When the friction characteristic is plotted, the drive can cause the motor to move. As a result, the motor may reach maximum speed.

For this reason, entering the area around the drive when it is in this condition can cause death, severe injury or material damage.

- Observe the general safety instructions.
- Ensure that the EMERGENCY STOP functions are always fully functional.

**Function diagram**

FP 7010      Friction characteristic curve

**Parameter**

- p3820      Friction characteristic, value n0
- ...
- p3839      Friction characteristic, value M9
- r3840      Friction characteristic status word
- r3841      Friction characteristic, output
- p3842      Activate friction characteristic
- p3843      Friction characteristic smoothing time friction moment difference
- p3844      Friction characteristic number changeover point at the top
- p3845      Activate friction characteristic plot
- p3846      Friction characteristic plot ramp-up/ramp-down time
- p3847      Friction characteristic plot warm-up period

## 9.2.10 Armature short-circuit braking, DC brake

### 9.2.10.1 General

The "External armature short-circuit" function for permanent-magnet synchronous motors initiates an external contactor which short-circuits the motor via resistors when the pulses are canceled. This reduces the kinetic energy of the motor.

The "Internal armature short-circuit braking" function for permanent-magnet synchronous motors short-circuits a half-bridge in the power unit to control the motor power consumption, thus braking the motor.

The "DC braking" function for induction motors injects direct current into the motor, thus braking the motor.

### 9.2.10.2 External armature short-circuit braking

#### Description

External armature short-circuit braking is only available for synchronous motors. It is used preferably when braking in a hazardous situation, if controlled braking via the drive is no longer possible (for example, in the event of a power failure, an EMERGENCY OFF, etc.) or if no regenerative infeed is used. In this case, the motor stator windings are short-circuited via external braking resistors. This means that an additional resistance is inserted in the motor circuit that supports reducing the kinetic energy of the motor.

The external armature short circuit is activated via  $p1231 = 1$  (with contactor feedback signal) or  $p1231 = 2$  (without contactor feedback signal). It is initiated when the pulses are canceled.

This function controls an external contactor via output terminals, which then short-circuits the motor through resistors when the pulses are canceled.

A prerequisite for the use of the external armature short circuit is the use of a permanent-magnet synchronous motor ( $p0300 = 2xx$ ).

#### WARNING

##### **Motor accelerates uncontrollably for pulling loads**

For pulling loads, for an armature short circuit, the motor can uncontrollably accelerate if a mechanical brake is not additionally used. If the motor accelerates uncontrollably this can result in severe injury or death.

- For pulling loads, only use armature short circuit braking to support a mechanical brake (a mechanical brake is mandatory).

**NOTICE**

**Material damage when using motors that are not short-circuit proof**

When using motors that are not short-circuit proof, activating the external armature short-circuit braking can damage these motors.

- Only use motors that are short-circuit proof.
- Use suitable resistors for short-circuiting.

**Note**

**Consequences of incorrect parameterization**

In case of incorrect parameterization (e.g., induction motor and external armature short-circuit selected), fault F07906 "Armature short circuit / internal voltage protection: Parameterization error" is output.

**Function diagram**

FP 7014      Technology functions - External armature short circuit

**Parameters**

- p0300: Mot type selection
- p1230    BI: Armature short-circuit/DC braking activation
- p1231    Armature short-circuit/DC braking configuration
  - 1: External armature short-circuit with contactor feedback signal
  - 2: External armature short-circuit without contactor feedback signal
- p1235    BI: External armature short-circuit, contactor feedback signal
- p1236    External armature short-circuit, contactor feedback signal monitoring time
- p1237    External armature short-circuit, delay time when opening
- r1238    CO: External armature short-circuit state
- r1239    CO/BO: Armature short-circuit/DC braking status word

### 9.2.10.3 Internal armature short-circuit braking


#### Description


Internal armature short-circuit braking is only available for synchronous motors. It is used preferably when braking in a hazardous situation, if controlled braking via the drive is no longer possible (for example, in the event of a power failure, an EMERGENCY OFF, etc.) or if no regenerative infeed is used. In this case, the motor stator windings are short-circuited via a half-bridge in the power unit. This means that an additional resistance is inserted in the motor circuit that supports reducing the kinetic energy of the motor.

The internal armature short circuit is configured via p1231 = 4 and activated via p1230. It is initiated when the pulses are canceled.

A prerequisite for the use of the internal armature short circuit is the use of a permanent-magnet synchronous motor (p0300 = 2xx).



 <b>DANGER</b>
<b>Electric shock due to armature short-circuit braking</b>
When the armature short-circuit is active, after the pulses have been cancelled all the motor terminals are at half the DC link potential.
Contact with live parts can result in death or serious injury.
<ul style="list-style-type: none"> <li>• Observe the general safety instructions.</li> </ul>

 <b>WARNING</b>
<b>Motor accelerates uncontrollably for pulling loads</b>
For pulling loads, for an armature short circuit, the motor can uncontrollably accelerate if a mechanical brake is not additionally used. If the motor accelerates uncontrollably this can result in severe injury or death.
<ul style="list-style-type: none"> <li>• For pulling loads, only use armature short circuit braking to support a mechanical brake (a mechanical brake is mandatory).</li> </ul>

<b>NOTICE</b>
<b>Material damage by using motors that are not short-circuit proof or an incorrectly dimensioned Power Module/Motor Module</b>
When using motors that are not short-circuit proof, activating the external armature short-circuit braking can damage the motors or the Power Module/Motor Module.
<ul style="list-style-type: none"> <li>• Only use motors that are short-circuit proof.</li> <li>• Use suitable resistors for short-circuiting.</li> <li>• Dimension the Power Module/Motor Module for 1.8 times the short circuit current of the motor.</li> </ul>

## Function diagram

FP 7016 Technology functions - Internal armature short circuit

## Parameters

- p0300: Mot type selection
- p1230 BI: Armature short-circuit/DC braking activation
- p1231 Armature short-circuit/DC braking configuration
  - 4: Internal armature short-circuit/DC braking
- r1239 CO/BO: Armature short-circuit/DC braking status word

### 9.2.10.4 DC braking

#### Description

DC braking is only available for induction motors. It is used preferably when braking in a hazardous situation, if controlled braking via the drive is no longer possible (for example, in the event of a power failure, an EMERGENCY OFF, etc.) or if no regenerative infeed is used.

DC braking is activated via p1231 = 4, 5, 14. It can be initiated via an input signal p1230 (signal = 1) or a fault response.

 **WARNING**

**Motor accelerates uncontrollably for pulling loads**

For pulling loads, when DC braking is used, during the demagnetization time, the motor can accelerate uncontrollably. This can result in severe injury or death. An additional supporting mechanical brake is only closed after the demagnetization time - when the motor is already rotating - and therefore does not prevent the motor from accelerating uncontrollably.

- Do not use DC braking for pulling loads.

#### DC braking via an input signal

##### **p1231 = 4 (internal armature short-circuit/DC braking)**

If DC braking is activated by the digital input signal, the first step is that the pulses are blocked for the duration of the demagnetization time (p0347) of the motor in order to demagnetize the motor - parameter p1234 (speed at the start of DC braking) is not taken into consideration.

Then the braking current (p1232) is applied as long as the input is initiated in order to brake the motor or hold it at standstill.

### Cancellation of the input signal for DC braking

If DC braking is withdrawn (p1230 = 0), then the drive returns to its selected operating mode.

The following is applicable:

- for vector control (control with and without encoder):
  - If the "Flying restart" function is activated, then the drive is synchronized with the motor frequency and then returns to closed-loop controlled operation.
  - If the "Flying restart" function is not active, then the drive can only be restarted from standstill without overcurrent fault.  
In this case, when restarting the drive, you must wait until the drive has come to a standstill.
- For U/f control:
  - If the "Flying restart" function is activated, then the converter frequency is synchronized with the motor frequency and the drive is then switched back to U/f operation.
  - If the "Flying restart" function is not activated, then the drive can only be restarted from standstill without overcurrent fault.  
In this case, when restarting the drive, you must wait until the drive has come to a standstill.

### DC braking as response to a speed threshold

p1231 = 14 (DC braking below the starting speed)

 <b>WARNING</b>
--

<b>Acceleration to the setpoint speed after DC braking</b>
--

After braking, the drive accelerates to the selected setpoint speed. This can result in death, severe injury or material damage.
--

- |   |
|---|
| <ul style="list-style-type: none"><li>• Ensure that nobody is in the danger zone and that the mechanical parts can move freely.</li></ul> |
|---|

DC braking is initiated if a 1 signal is active at binector input p1230 during operation and the actual speed falls below the starting speed (p1234) (the drive must have previously rotated above p1234 plus hysteresis).

Then, after the preceding demagnetization (see p0347), the braking current (p1232) is impressed for the time set in p1233. The drive then switches back to normal operation and accelerates to the selected setpoint speed.

If an encoder is being used, braking will continue until the speed drops below the standstill threshold (p1226) or the time set in p1233 is exceeded.

### Cancellation of the input signal for DC braking

The DC braking command can be withdrawn again while braking.

- If time (p1233) was exceeded, then DC braking is inhibited and the system returns to normal operation.
- For OFF1 and OFF3, DC braking is only executed if binector input p1230 has a 1 signal.

DC braking via a fault response still remains possible.

For operation with an encoder, the encoder signal ripple must not exceed 15 rpm in the range of p1234.

### DC braking OFF1/OFF3

#### Activation via p1231 = 5 (DC braking for OFF1/OFF3)

DC braking is activated if an OFF1 or OFF3 command is active. Binector input p1230 is not active.

- If the motor speed  $\geq$  p1234, then the motor is braked down to p1234, demagnetized (see p0347) and switched to DC braking for time (p1233). It is then switched off.
- If the motor speed at OFF1/OFF3 is already  $<$  p1234, then the motor is immediately demagnetized, and DC braking activated.
- If an encoder is being used, braking will continue until the speed drops below the standstill threshold (p1226) or the time set in p1233 is exceeded.

Prematurely withdrawing the OFF1 command means that the system switches back to normal operation.

DC braking via a fault response still remains possible.

### DC braking as a fault response

#### Activation via p0491 = 4, p2101 = 6 (armature short-circuit, internal/DC braking)

If DC braking is activated as a fault response, the motor is initially braked in field-oriented mode along the braking ramp up to the threshold set in p1234 (speed at the start of DC braking). The slope of the ramp is identical with that of the OFF1 ramp (parameterized using p1082, p1121). Subsequently, the pulses are disabled for the period in p0347 (demagnetizing time) in order to demagnetize the motor. DC braking will start for the duration set in p1233 (DC braking duration).

- If an encoder is being used, braking will continue until the speed drops below the standstill threshold (p1226) or the time set in p1233 is exceeded.
- If no encoder is present, only the period in p1233 is effective.

### Function diagram

FP 7017      Technology functions - DC braking



## Parameters

- p0300: Mot type selection
- p0347 Motor de-excitation time
- p0491 Motor encoder fault response: ENCODER
- p1226 Speed threshold for standstill detection
- p1230 BI: Armature short-circuit/DC braking activation
- p1231 Armature short-circuit/DC braking configuration
  - 4: Internal armature short-circuit/DC braking
  - 5: DC braking OFF1/OFF3
  - 14: DC braking below starting speed
- p1232 DC braking, braking current
- p1233 DC braking duration
- p1234 Speed at the start of DC braking
- r1239 CO/BO: Armature short-circuit/DC braking status word
- p2100 Changing the fault reaction, fault number
- p2101 Changing the fault reaction, reaction

## 9.2.11 Increasing the output frequency

### 9.2.11.1 Description

In applications that require higher output frequencies, the pulse frequency of the converter may have to be increased.

It may also be necessary to change the pulse frequency to prevent resonances from occurring.

Since increasing the pulse frequency also increases the switching losses, a derating factor for the output current must be taken into account when the drive is configured.

Once the pulse frequency has been increased, the new output currents are automatically included in the calculation for power unit protection.

---

#### Note

##### Use of a sine-wave filter

Use of a sine-wave filter (option L15) must be selected using p0230 = 3 when commissioning. This setting fixes the pulse frequency to 4 kHz or 2.5 kHz and it cannot be changed.

---

### 9.2.11.2 Default pulse frequencies

The specified maximum output frequencies can be achieved with the default pulse frequencies listed below.

Table 9- 4 Maximum output frequency with default pulse frequency

Converter rating [kW]	Default pulse frequency [kHz]	Maximum output frequency [Hz]
<b>Line voltage 3 AC 660 ... 690 V</b>		
1750 to 2700	1.25	100

The pulse frequencies set in the factory are also the minimum frequencies.

The scanning times for the inputs and outputs of the customer terminal block TM31 are set in the factory to 4000 µs. This is also the minimum limit.

### 9.2.11.3 Increasing the pulse frequency

#### Description

The pulse frequency can be increased in a virtually continuously variable manner to between the value preassigned in the factory and the maximum pulse frequency which can be set.

#### Procedure

1. Parameter p0009 on the Control Unit must be set to 3 "Basic drive configuration".
2. Parameter p0112 "Sampling times default setting p0115" of the DO VECTOR must be set to 0 "Expert".
3. Any pulse frequency between 1 kHz and 2 kHz can be entered in p0113. If a higher pulse frequency is to be set (e.g. 2.2 kHz), this value must be divided by 2 or by 4 to obtain a result between 1 kHz and 2 kHz (e.g. 2.2 kHz divided by 2 is 1.1 kHz).
4. Not all pulse frequencies are accepted in parameter p0113; in such cases, the alarm "Impermissible value" is output.
5. If the frequency entered in parameter p0113 is not accepted, parameter r0114[0] recommends a different frequency that can deviate from the entered pulse frequency by several Hertz. This frequency should be entered in p0113.

6. After entering the frequency in p0113, parameter p0009 on the Control Unit must be set to 0 "Ready" again.
7. The Control Unit re-initializes. After booting, the pulse frequencies recommended in r0114[i] (i = 1, 2, ...) can be entered in parameter p1800 "Pulse frequency" of the DO VECTOR.

---

**Note**

**Entering the pulse frequency**

The pulse frequency entered in p1800 must correspond precisely to the value given in r0114[i]; otherwise, the entry will be rejected.

---

**9.2.11.4 Maximum output frequency achieved by increasing the pulse frequency**

By multiplying the basis pulse frequency (with integers), the following output frequencies can be achieved (taking into account the derating factors):

Table 9- 5 Maximum output frequency achieved by increasing the pulse frequency

Pulse frequency [kHz]	Maximum output frequency [Hz]
1.25	100
2	160
2.5	200
≥4	300 <sup>1)</sup>

<sup>1)</sup> The maximum output frequency is limited to 300 Hz due to the closed-loop control.

**9.2.11.5 Parameters**

- p0009 Device commissioning parameter filter
- p0112 Sampling times pre-setting p0115
- p0113 Selects the minimum pulse frequency
- p0115 Sampling times
- p1800 Pulse frequency

## 9.2.12 Derating behavior at increased pulse frequency

### Description

To reduce motor noise or to increase output frequency, the pulse frequency can be increased relative to the factory setting.

The increase in the pulse frequency normally results in a reduction of the maximum output current (see "Technical data/current derating depending on the pulse frequency").

When commissioning the converter the behavior at overload is adjusted in such a manner that the pulse frequency is variably reduced so that the required power can be obtained.

#### Characteristics:

- The reaction to overload depends on the setting of parameter p0290:
  - p0290 = 0: Reduce output current or output frequency
  - p0290 = 1: No reduction, shutdown when overload threshold is reached
  - p0290 = 2, 12: Reduce the output current or output and pulse frequency (not using  $I^2t$ ).
  - p0290 = 3, 13: Reduce the pulse frequency (not using  $I^2t$ )
- With p0290 = 2, 12 for overload, the pulse frequency (and consequently the output frequency) is first reduced until it has decreased to the rated pulse frequency; then the output frequency is reduced if overload continues to persist.  
The rated pulse frequency is half the inverse value of the current controller clock cycle:  $0.5 \times 1/p0115[0]$ .
- The pulse frequency is reduced in whole multiples based on the rated pulse frequency (5 kHz -> 2.5 kHz -> 1.25 kHz or 4 kHz -> 2 kHz).
- After entering the maximum speed in p1082, the system automatically calculates whether the pulse frequency is sufficient for the entered maximum speed, if necessary the pulse frequency is increased automatically to a value that is necessary to achieve this.  
For an overload condition, also for p0290 = 2, 12 or 3, 13, this new pulse frequency will no longer be fallen below, the subsequent response (reduce output voltage or shutdown) is initiated.

#### Exceptions:

- With an activated sine-wave filter (p0230 = 3, 4), this behavior is not permitted because the pulse frequency set in the factory (2.5 kHz or 4 kHz) may not be changed.  
Consequently in this case the selection possibility for the parameter p0290 is limited to "0" and "1".

### Activation of the variable pulse frequency

At commissioning the parameter p 0290 is automatically set to the value "2". This activates pulse frequency reduction at overload.

## Deactivation of the variable pulse frequency

By changing the parameter p0290 to "0" or "1" the variable pulse frequency is deactivated.

## Function diagram

FP 8014      Signals and monitoring functions - thermal monitoring power unit

## Parameter

- r0036      Power unit overload I2t
- r0037      CO: Power unit temperatures
- p0115      Sampling times for internal control loops
- p0230      Drive filter type, motor side
- p0290      Power unit overload response
- p1082      Maximum speed
- r2135.13      Fault thermal overload power unit
- r2135.15      Alarm, thermal overload power unit

## 9.2.13 Pulse frequency wobbling

### Description

Pulse frequency wobbling is when the pulse frequency is varied slightly according to a statistical process. The average pulse frequency value is still the value set; the statistical variation of the instantaneous value results in a modified noise spectrum.

This procedure reduces the subjectively noticeable motor noise, especially for the relatively low pulse frequencies set in the factory.

Pulse frequency wobbling is activated with p1810.2 = 1. The amplitude of the static wobble signal can be set in the range from 0 % to 20 % using p1811.

For units connected in parallel, pulse frequency wobbling is activated automatically during commissioning.

## Restrictions

- Pulse frequency wobbling can only be activated under the following conditions ( $p1810.2 = 1$ ):
  - The drive is pulse suppressed.
  - $p1800 < 2 \times 1000 / p0115[0]$
- $p1811$  (Pulse frequency wobbling amplitude) can only be set under the following conditions:
  - $p1802.2 = 1$
  - $p0230$  (output filter)  $< 3$  (no sine-wave filter)
- When pulse frequency wobbling is activated and impulses are enabled, the maximum pulse frequency ( $p1800$ ) can be set as follows:
  - For  $p1811 = 0$ :  $p1800 \leq 2 \times 1000 / p0115[0]$
  - For  $p1811 > 0$ :  $p1800 \leq 1000 / p0115[0]$
- When pulse frequency wobbling is activated and impulses are enabled, if the maximum pulse frequency ( $p1800$ ) is set to be greater than  $1000 / p0115[0]$ , then  $p1811$  is set to 0.
- When pulse frequency wobbling is activated and impulses are suppressed, if the maximum pulse frequency ( $p1800$ ) is set to be greater than  $2 \times 1000 / p0115[0]$ , then  $p1811$  and  $p1810.2$  are set to 0.

---

### Note

#### Disable pulse frequency wobbling

If pulse frequency wobbling is deactivated ( $p1810.2 = 0$ ), then all the indices of parameter  $p1811$  are set to 0.

---

## Parameter

- $p1800$  Pulse frequency setpoint
- $p1810.2$  Wobbling activated
- $p1811[D]$  Pulse frequency wobbling amplitude

## 9.2.14 Runtime (operating hours counter)

### Total system runtime

The total system runtime is indicated in r2114 (Control Unit), and comprises data from r2114[0] (milliseconds) and from r2114[1] (days).  
Index 0 indicates the system runtime in milliseconds; after reaching 86,400,000 ms (24 hours) the value is reset. Index 1 indicates the system runtime in days.

The value is saved when the system is switched off.  
Once the drive unit has been switched on, the counter continues to run with the value that was saved the last time the drive was switched off.

### Relative system runtime

The relative system runtime since the last POWER ON is displayed in p0969 (Control Unit).  
The value is indicated in milliseconds and the counter overflows after 49 days.

### Actual motor operating hours

The motor operating hours counter p0650 (drive) is started when the pulses are enabled.  
When the pulse enable is withdrawn, the counter is stopped and the value saved.

The counter is deactivated with p0651 = 0.

If the maintenance interval set in p0651 is reached, alarm A01590 is triggered. Once the motor has been maintained, the maintenance interval must be reset.

---

#### Note

If the motor data set is switched during the star/delta changeover without the motor being replaced, the two values in p0650 must be added to determine the correct number of motor operating hours.

---

### Operating hours counter for the fan

The operating hours of the fan in the power unit are displayed in p0251 (drive).

In this parameter, the number of elapsed hours can only be reset to 0 (e.g. after a fan has been replaced).

The service life of the fan is entered in p0252 (drive).

Alarm A30042 (service life of the fan reached or exceeded) is output when this figure is reached, and also 500 hours beforehand. Evaluation of the fault value in the alarm provides details of the cause of the alarm.

Monitoring is deactivated with p0252 = 0.

## Time stamp mode

The mode for the time stamp can be set via parameter p3100.

Setting	Explanation
p3100 = 0	Time stamp based on operating hours
p3100 = 1	Time stamp UTC format
p3100 = 2	Time stamp operating hours + 01.01.2000 Additional setting for firmware V4.7 and higher: With this setting the value in p3102 is used as the time stamp for the error messages. For firmware versions prior to V4.7 the time basis of p2114 was used with the setting p3100 = 0.

### Note

#### Time stamp settings depending on the firmware version

If a project is upgraded from firmware V4.6 to V4.7 then the time stamp settings for the old project are retained. The times displayed for the error messages do not therefore differ from those in the old firmware version.

If a new project is created in firmware version V4.7 and above, the factory setting for the p3100 = 2 and therefore a different time basis for error messages. If the response required is the one for versions older than V4.7 then p3100 = 0 should be set.

## 9.2.15 Simulation operation

### Description

The simulation function is predominantly used to simulate the drive without a motor being connected and without a DC link voltage. In this case, it should be noted that the simulation mode can only be activated under an actual DC link voltage of 40 V. If the voltage lies above this threshold, the simulation mode is reset, and a fault message F07826 is issued.

Communications with a higher-level automation system can be tested using the simulation mode. If the drive is also to return actual values, note that it must be switched over to encoderless operation during simulation mode. This means that large parts of the SINAMICS software (e.g., software channel, sequence control, communications, technology function, etc.) can be tested in advance without requiring a motor.

Another application is to test the correct functioning of the power unit. Especially for drive units with higher power ratings 75 kW (690 V) and 110 kW (400 V), after repairs, it is necessary to test the gating of the power semiconductors. This is done by injecting a low DC voltage as DC link voltage (e.g., 12 V). The drive unit is then powered-up and the pulses enabled.



**Note****Deactivated functions in simulation mode**

The following functions are deactivated in the simulation mode:

- Motor data identification
- Motor data identification, rotating without encoder
- Pole position identification

No flying restart is carried-out for V/f control and sensorless closed-loop vector control.

---

**Note****Activating binector output r0863.1 in the simulation mode**

In the simulation mode, binector output r0863.1 is set = 1. Therefore, before activating the simulation mode, check as to whether additional devices are switched on using the signal. If necessary, the corresponding BICO interconnection should be temporarily removed.

---

**Commissioning**

Simulation is activated using p1272 = 1; the following pre-requisites must be fulfilled:

- The drive unit must have been commissioned for the first time (default: Standard induction motors).
- The DC link voltage must lie below 40 V (observe the tolerance of the DC link voltage sensing).

Alarm A07825 (simulation mode activated) must be output during simulation operation.

**Parameter**

- p1272      Simulation operation

## 9.2.16 Direction reversal

### Description

The direction of rotation of the motor can be reversed using direction reversal via p1821 without having to change the motor rotating field by interchanging two phases on the motor and inverting the encoder signals using p0410.

Reversal via p1821 can be detected from the motor direction of rotation. The speed setpoint and actual value, torque setpoint and actual value remain unchanged, as does the relative position change.

A pulse inhibit must be set prior to attempting reversal.

Direction reversal can be set differently for each drive data set.

---

### Note

#### Drive data set changeover with differently set direction reversal

When changing over the drive data set to differently set reversing and with pulse approval, fault F7434 is issued.

---

Reversing can be observed by checking parameters r0069 (phase currents) and r0089 (phase voltage). The absolute position reference is lost on reversal.

The output direction of rotation of the converter can be additionally reversed using p1820. This means that the rotating field can be changed without having to interchange the power connections. If an encoder is being used, the direction of rotation must, when required, be adapted using p0410.

<b>NOTICE</b>
---------------

<b>Unintended acceleration of the drive due to external speed actual value</b>
--

When using an external speed actual value for the speed controller via p1440, positive feedback can occur in the speed control loop. As a consequence, the drive accelerates up to its speed limit and can be damaged.
--

- |  |
|--|
| <ul style="list-style-type: none"> <li>When using external speed actual values for the speed controller, additionally change its polarity when reversing the direction of rotation (p1821 = 1).</li> </ul> |
|--|

 <b>WARNING</b>
--

<b>Excessively high torque due to an inappropriate phase sequence of the motor after direction reversal</b>
---

If a drive is synchronized to the line supply, when the direction is reversed, high torques can be generated when connecting to the line supply if the phase sequence of the line voltage does not match the phase sequence of the rotating motor. This high torque can destroy the coupling between the motor and load and therefore result in death or severe injury.
---

- |  |
|--|
| <ul style="list-style-type: none"> <li>As a consequence, for this constellation, check the phase sequence of the VSM wiring and correct if necessary.</li> </ul> |
|--|

**Function diagram**

FD 4704, 4715	Encoder evaluation
FD 6730, 6731	Interface to the Motor Module

**Parameters**

- r0069 Phase currents actual value
- r0089 Phase voltage actual value
- p0410 Encoder inversion actual value
- p1820 Reverse output phase sequence
- p1821 Direction of rotation

**9.2.17 Unit changeover****Description**

Parameters and process variables for input and output can be switched to a suitable units system (SI units, US units or referenced variables (%)) with the help of the unit changeover function.

The following constraints apply to the unit changeover:

- Unit changeover is only possible for the "VECTOR" and "B\_INF" drive object.
- Parameters of the rating plate of the drive converter or the motor rating plate can be changed over between SI/US units; however, a per unit representation is not possible.
- Once the changeover parameter has been changed, all parameters that are assigned to a unit group depending on this parameter are jointly changed over to the new unit.
- A separate parameter is available for selecting technological units (p0595) for the representation of technological variables in the technology controller.
- If a changeover is made to referenced variables and the reference variable is subsequently changed, the % value entered in a parameter will not change.

Example:

- A fixed speed of 80% corresponds, for a reference speed of 1500 rpm, to a value of 1200 rpm.
- If the reference speed is changed to 3000 rpm, the value of 80 % is retained and now means 2400 rpm.

## Restrictions

- When a unit changeover occurs, rounding to the decimal places is carried out. This can mean that the original value might change by up to one decimal place.
- If a referenced form is selected and the reference parameters (e.g. p2000) are changed retrospectively, the physical significance of some of the control parameters is also adjusted, which can affect the control behavior.
- If the reference variables (p2000 to p2007) are changed in the offline mode in STARTER, there is a risk that the parameter value ranges will be violated. In this case, appropriate fault messages will be displayed when the parameters are loaded to the drive unit.

## Changing over the units

The units can be changed over via the AOP30 and via STARTER.

- Unit changeover via AOP30 is always carried out immediately. Once the corresponding parameters have been changed, the values affected are displayed in the new selected unit.
- If STARTER is used, unit changeover can only take place in offline mode in the configuration screen of the corresponding drive object. The new units are not displayed until after the download ("Load project to target system") and subsequent upload ("Load project to PG") have been completed.

## Unit groups

Each parameter that can be switched is assigned to a unit group which can be switched within certain limits depending on the group.

This assignment and the units groups for each parameter appear in the parameter list in the SINAMICS List Manual.

The unit groups can be individually switched using 4 parameters (p0100, p0349, p0505 and p0595).

## Parameter

- p0010 Commissioning parameter filter
- p0100 IEC/NEMA mot stds
- p0349 Unit system, motor equivalent circuit diagram data
- p0505 Unit system selection
- p0595 Technological unit selection
- p0596 Technological unit reference variable
- p2000 Reference speed reference frequency
- p2001 Reference voltage
- p2002 Reference current
- p2003 Reference torque

- r2004 Reference power
- p2005 Reference angle
- p2006 Reference temperature
- p2007 Reference acceleration

## 9.2.18 Simple brake control

### Description

The "Simple brake control" is used exclusively for the control of holding brakes. The holding brake is used to secure drives against unwanted motion when deactivated.

The control command for releasing and applying the holding brake is transmitted directly to the converter via DRIVE-CLiQ from the Control Unit, which logically combines the signals with the system-internal processes and monitors these signals.

The drive then performs the action and controls the output for the holding brake appropriately.

The mode of operation of the holding brake can be configured using p1215.

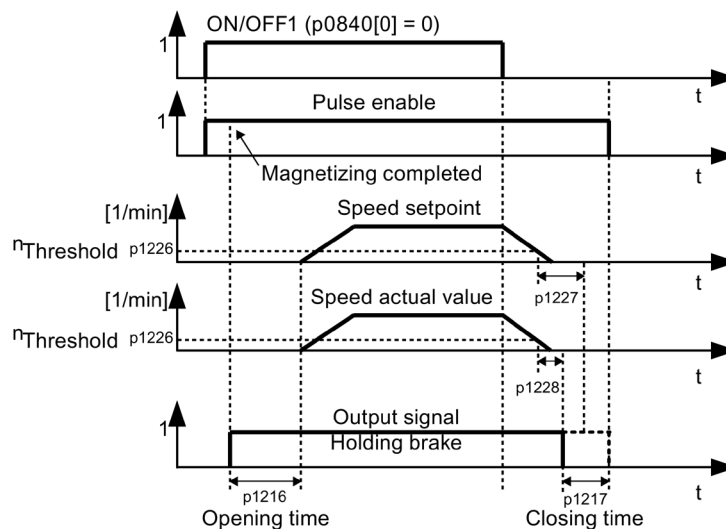


Figure 9-9 Sequence diagram, simple brake control

The start of the closing time for the brake depends on the expiration of the shorter of the two times p1227 (standstill detection monitoring time) and p1228 (pulse cancellation delay time).

 **WARNING**

**Improper use of simple brake control**

Accidents causing serious injury or death can occur if the basic brake control is incorrectly used.

- Do not use the basic brake control as service brake.
- Carefully observe the special technological and machine-specific conditions and standards for ensuring personnel and machine safety.
- Take into account the risks that can result, e.g. from suspended axes.

## Features

- Automatic activation by means of sequence control
- Standstill (zero-speed) monitoring
- Forced brake release (p0855, p1215)
- Application of brake for a 1 signal "Unconditionally close holding brake" (p0858)
- Application of brake after "Enable speed controller" signal has been canceled (p0856)

## Signal connections

The holding brake is controlled using free digital outputs on the Control Unit or the TM31. If necessary, control must be realized by means of a relay to connect a holding brake with higher voltage or with higher power demand.

For this, parameter p1215 must be set to "3" (motor holding brake the same as sequence control, connection via BICO) and the appropriate BICO parameters of the selected digital outputs must be interconnected.

## Commissioning

If p1215 is set to "0" (no brake available) during initial commissioning and a connected brake is recognized, then simple brake control is automatically activated (p1215 = 1). In this case, fault F07935 "Motor holding brake detected" appears and must be acknowledged.

**NOTICE**

**Material damage due to a destroyed brake for an incorrectly set configuration**

If a motor holding brake is being used, the parameter setting p1215 = "0" (no motor holding brake available) means that the motor holding brake remains closed. The brake will be destroyed when the motor moves.

- If there is a motor brake, set parameter p1215 to values > 1.

Notes on setting the release (opening) time (p1216):

- The release time (p1216) should be set longer than the actual release time of the holding brake. As a result, the drive will not accelerate when the brake is closed.

Notes on setting the closing time (p1217):

- The closing time (p1217) should be set longer than the actual closing time of the holding brake. As a result, the pulses are suppressed only after the holding brake is closed.
- If the closing time (p1217) is set too low compared to the actual closing time of the holding brake, the load may drop suddenly.
- If the closing time (p1217) is set too high compared to the actual closing time of the holding brake, the controller acts against the holding brake and thus reduces its service life.

## Function diagram

FP 2701                      Simple brake control (r0108.14 = 0)

## Parameter

- r0056.4                      Magnetizing completed
- r0060                        CO: Speed setpoint before the setpoint filter
- r0063[0...2]                CO: Actual speed value
- r0108.14                    Extended brake control
- p0855[C]                    BI: Unconditionally release holding brake
- p0856                        BI: Speed controller enabled
- p0858                        BI: Unconditionally apply holding brake
- r0899.12                    BO: Holding brake open
- r0899.13                    BO: Command, close holding brake
- p1215                        Motor holding brake configuration
- p1216                        Motor holding brake release time
- p1217                        Motor holding brake closing time
- p1226                        Threshold for standstill detection
- p1227                        Standstill detection monitoring time
- p1228                        Pulse suppression delay time
- p1278                        Brake control diagnostic evaluation

## 9.2.19 Synchronization

### Description

The "Synchronization" function and an existing VSM10 Voltage Sensing Module (to measure the line voltage) synchronizes a motor to the line supply. The connection to the line supply or the required contactor control can be realized using the existing bypass function or a higher-level control system.

The use of the bypass function permits the temporary (e.g. to perform maintenance work without system standstill) or permanent operation of the motor on the line supply.

The p3800 parameter activates the synchronization. The voltage is acquired via a VSM10 assigned to the drive (via DRIVE-CLiQ) and measures the line supply voltage.

### Features

- Connector inputs for the actual voltage sensing of the motor via VSM10 (p3661, r3662)
- Setting a phase difference (p3809)
- Can be activated by parameter (p3800)
- Enable via parameter (p3802)

### Function diagram

FP 7020                      Technology functions - Synchronizing

### Parameter

- p3800[0...n]      Sync network drive activation
- p3801[0...n]      Sync-line-drive drive object number
- p3802[0...n]      BI: Sync network drive enable
- r3803              CO/BO: Sync network drive control word
- r3804              CO: Sync network drive target frequency
- r3805              CO: Sync network drive frequency difference
- p3806[0...n]      Sync network drive frequency difference threshold value
- r3808              CO: Sync network drive phase difference
- p3809[0...n]      Sync network drive phase setpoint value
- p3811[0...n]      Sync network drive frequency limitation
- r3812              CO: Sync network drive correction frequency
- p3813[0...n]      Sync network drive phase synchronism threshold value
- r3814              CO: Sync network drive voltage difference
- p3815[0...n]      Sync network drive voltage difference threshold value
- r3819.0...7      CO/BO: Sync network drive status word



## 9.2.20 Energy saving indicator for pumps, fans, and compressors

### Function of the energy savings indicator

This function determines the amount of energy used by pumps, fans, and compressors and compares it with the interpolated energy requirement for similar equipment controlled using conventional throttle controls.

The energy saved is calculated over the last 100 operating hours, and is displayed in kWh. For an operating time of less than 100 hours, the potential energy-saving is interpolated up to 100 operating hours.

The flow characteristic with conventional throttle control is specified over 5 adjustable interpolation points.

### Background

In a conventionally controlled pump, fan or compressor, the flow rate of the medium is controlled using valves or throttles. In so doing, the machine runs constantly at the rated speed. The system efficiency decreases significantly if the flow rate is reduced by means of valves or throttles. The pressure in the system increases. The motor also consumes energy when the valves or throttles are completely closed, i.e. with a flow rate of  $Q = 0$ . In addition, undesirable process-related situations can occur; for example, cavitation in the fluid flow machine or increased temperature rise of the fluid flow machine and the medium.

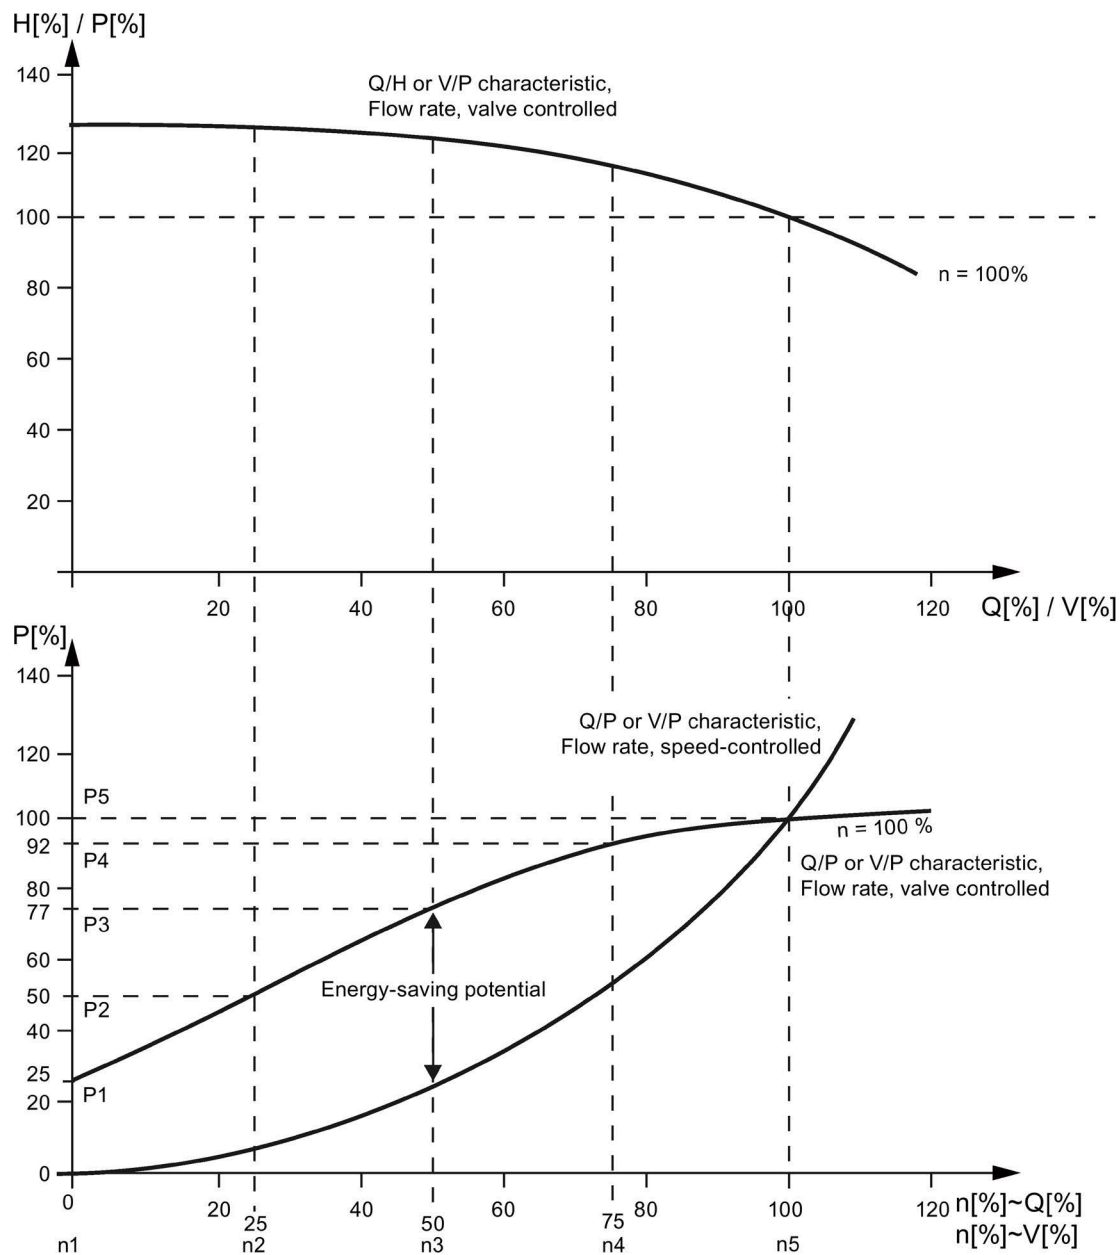
As a result of variable speed operation, a drive operating under partial load conditions consumes considerably less energy than with conventional process control using valves or throttles. This applies in particular for pumps, fans, and compressors with parabolic load characteristics. With SINAMICS, a closed-loop control of the flow rate or pressure is achieved by employing closed-loop speed control of the pump, fan or compressor. As a consequence, the plant or system is controlled close to its maximum efficiency over the complete operating range.

In comparison to pumps, fans, and compressors, machines with linear or constant load characteristic (e.g. conveyor drives or positive displacement pumps) have lower potential savings.

### Energy saving by using a variable speed drive

When a variable speed drive is used, the flow rate of the pump, fan, or compressor is controlled as a function of speed. The flow rate changes proportionally with the speed of the continuous-flow machine. Any existing valve or throttle remains open. Therefore, the equipment works close to optimum efficiency and consumes considerably less energy, particularly in the partial load range, than equipment controlled by means of valves or throttles.

9.2 Drive Functions



**Upper characteristic:**

H[%] = Head, P[%] = Flow pressure, Q[%] = Flow rate, V[%] = Volumetric flow

**Lower characteristic:**

P[%] = Power drawn by the conveyor motor, n[%] = Speed of conveyor motor

Interpolation points p3320 to p3329 for system characteristic with n = 100%:

P1...P5 = Power drawn, n1...n5 = Speed in accordance with variable speed motor

Figure 9-10 Energy saving potential

### Adapting the pump, fan, or compressor characteristic

The 5 interpolation points of the pump, fan, or compressor characteristic are entered using parameters p3320 to p3329. This characteristic can be configured individually for each drive data set.

Table 9- 6 Interpolation points of the pump, fan, or compressor characteristic

Interpolation point	Parameter	Factory setting: P: Power in % n: Speed in %
1	p3320	P1 = 25.00
	p3321	n1 = 0.00
2	p3322	P2 = 50.00
	p3323	n2 = 25.00
3	p3324	P3 = 77.00
	p3325	n3 = 50.00
4	p3326	P4 = 92.00
	p3327	n4 = 75.00
5	p3328	P5 = 100.00
	p3329	n5 = 100.00

#### Note

##### Consequences of not adjusting the pump, fan, or compressor curve

If the interpolation points of the pump, fan, or compressor curve are not adapted, the factory setting will be used to calculate the energy saving indicator. The values of the factory setting could then deviate from the equipment characteristic and cause incorrect calculation of the actual energy savings.

### Energy saving indication

The energy saving is displayed in parameter r0041.

By setting p0040 = 1, the value of parameter r0041 is reset to 0. Parameter p0040 is then automatically set to 0.

## 9.2.21 Write protection

### Description

Write protection is used to prevent setting parameters from being accidentally changed. No password is required for write protection.

### Activating write protection

Write protection can be activated as follows:

- With STARTER in the online mode, after selecting the drive unit via **Project > Write protection drive unit > Activate**.
- Using the AOP30 operator panel via  $p7761 = 1$ .

All setting parameters involved with write protection can no longer be changed.

In STARTER all write-protected setting parameters have a gray background in the expert list and in the operating screen forms.

If, in AOP30, an attempt is made to change a write-protected setting parameter, then this is rejected with the corresponding error message.

Write requests from write-protected setting parameters via communication are treated in different ways:

- Parameter changes involving class 1 controllers (controls, e.g. SIMATIC) are executed.
- Parameter changes of class 2 controllers (engineering or commissioning total, e.g. STARTER) are not executed.

### Deactivating write protection

Write protection can be deactivated as follows:

- With STARTER in the online mode, after selecting the drive unit via **Project > Write protection drive unit > Deactivate**.
- Using the AOP30 operator panel via  $p7761 = 0$ .

### Write protection status

The status of write protection can be displayed using parameter  $r7760.0$ :

- $r7760.0 = 0$ : Write protection is not active
- $r7760.0 = 1$ : Write protection is active

### Exceptions when write protection is active

The following functions or adjustable parameters are excluded from the write protection:

- Changing the access level (p0003)
- Commissioning the parameter filter (p0009)
- Module detection via LED (p0124, p0144, p0154)
- Resetting parameters (p0972, p0976)
- Saving parameters (p0977)
- Acknowledge a fault (p2102, p3981)
- RTC time stamp, set time, synchronization (p3100, p3101, p3103)
- Master control mode selection (p3985)
- Trace (p 4700ff.)
- Function generator (p4800ff.)
- Activating/deactivating write protection (p7761)
- Identification and maintenance (p8806ff.)
- Flashing component (p9210, p9211)

---

#### Note

##### List of the exceptions for activated write protection

A list of the adjustable parameters which, in spite of the write protection, can be changed is provided in the List Manual.

The list has the designation "WRITE\_NO\_LOCK".

---

### Write protection for multi-master fieldbus systems

For fieldbus systems (e.g. CAN bus), which can be operated as multi-master bus systems, when write protection is activated, all setting parameters can be accessed.

For these bus systems, parameter p7762 can be used to set the behavior when write protection is activated:

- p7762 = 0: Write access independent of p7761
- p7762 = 1: Write access dependent on p7761

#### Parameter

- r7760      Write protection/know-how protection status
- p7761      Write protection
- p7762      Write protection multi-master fieldbus system access behavior

## 9.2.22 Know-how protection

### 9.2.22.1 Description

The know-how protection is used, for example, so that machine manufacturers can encrypt their configuration know-how and protect it against changes and copying.

For know-how protection, a password is required; saved data is encrypted.

When know-how protection is activated, most of the setting parameters cannot be changed and cannot be read out. The display parameters are shown unchanged. The contents of screen forms in STARTER are not displayed.

Know-how protection can be combined with copy protection.

### Characteristics when know-how protection is activated

- Except for a small number of system parameters and the parameters specified in an exception list, all other parameters are locked.
- The values of these parameters are not visible in the expert list and so cannot be changed. The text "know-how protected" appears instead of the parameter values.
- Know-how protected parameters can be hidden in the expert list. This requires that the "not know-how protected" filter is set in the "Online value" column.
- The values of display parameters remain visible.
- The contents of screen forms are not displayed when know-how protection is active.
- Know-how protection can be combined with copy protection.
- The same know-how protection is used for scripts.
- The drive unit as well as the drive objects and DCC charts therein can be displayed as inconsistent.

### Know-how protection with and without copy protection.

To protect the drive unit settings against unauthorized copying, in addition to know-how protection, you can also activate copy protection.

Know-how protection without copy protection is possible with or without memory card.

Know-how protection with copy protection is only possible with a Siemens memory card.

### Know-how protection without copy protection

The drive unit can be operated with or without a memory card. The drive unit settings can be transferred to other drive units using a memory card, an operator panel or STARTER.

**Know-how protection with basic copy protection**

The drive unit can only be operated if the associated memory card with the drive unit settings is inserted into it. After replacing a drive unit, to be able to operate the new one with the settings of the replaced drive unit without knowing the password, the memory card must be inserted in the new drive unit.

**Know-how protection with extended copy protection**

The drive unit can only be operated if the associated memory card with the drive unit settings is inserted into it. It is not possible to insert and use the memory card in another drive unit without knowing the password.

**Functions, which can be executed when know-how protection is active**

The following functions can be executed although know-how protection is active:

- Restoring factory settings
- Saving parameters
- Acknowledging faults
- Displaying faults and alarms
- Displaying the history of faults and alarms
- Reading out the diagnostic buffer
- Switching over to the control panel (complete control panel functionality: Fetch master control, all buttons and setting parameters)
- Displaying created acceptance documentation

---

**Note****List of the exceptions when know-how protection is activated**

A list of the adjustable parameters which, in spite of activated know-how protection, can be changed, is provided in the List Manual.

The list has the designation "KHP\_WRITE\_NO\_LOCK".

---

**Functions, which cannot be executed when know-how protection is active**

The following functions cannot be executed when know-how protection is active:

- Download the drive device settings
- Auto Servo Tuning
- Stationary or rotating measurement of the motor data identification
- Clear fault and alarm buffer
- Generating acceptance documentation for safety functions

### Functions that can be executed optionally when know-how protection is active

The functions listed below can be executed for activated know-how protection provided diagnostic functions were permitted when it was activated:

- Trace function
- Function generator
- Measuring functions

### Setting parameters, which can only be read when know-how protection is active

The following setting parameters cannot be changed, but can be read, when know-how protection is activated:

- Motor parameters (p0100, p0300, p0304, p0305, p0349)
- Data sets (p0120, p0130, p0140, p0150, p0170, p0180)
- Encoder type (p0400)
- Units (p0505, p0595)
- Open-loop control parameters (p0806, p0864, p0870)
- Speeds, torques (p1080, p1082, p1520, p1532)
- Reference quantities (p2000, p2001, p2002, p2003, p2005, p2006, p2007)

These parameters are shown in STARTER in the expert list with a gray background.

---

#### Note

#### List of the setting parameters, which can only be read when know-how protection is active

A list of the setting parameters, which can only be read when know-how protection is activated, are provided in the List Manual.

The list has the designation "KHP\_ACTIVE\_READ".

---

### AOP30 with activated know-how protection

When know-how protection is activated, the AOP30 operator panel does not show protected parameters.

The setting parameters, which can only be read when know-how protection is active, are displayed. An attempt to change such an adjustable parameter, will be rejected and an error message displayed.



### 9.2.22.2 Activating know-how protection

Know-how protection can be activated via STARTER in the online mode.

#### Activating know-how protection

Know-how protection is activated via STARTER in the online mode as follows:

- Select the drive unit via **Project > Know-how protection drive unit > Activate**.
- A dialog appears in which the following settings can be made:
  - It can be selected as to whether know-how protection should be realized with or without copy protection:
    - Without copy protection (factory setting)
    - With basic copy protection (permanently linked to the memory card)
    - With extended copy protection (permanently linked to the memory card and Control Unit)
  - Further, you can select whether diagnostic functions are permitted.
  - By clicking on **Define** an additional dialog opens, in which the password can be entered and acknowledged. The password must comprise at least one character, it may not exceed a length of 30 characters, all characters are permissible.

---

#### Note

##### Password check for know-how protection and Windows language settings

A change to the Windows language settings after activating know-how protection can cause errors for a subsequent password verification. As a consequence, only characters from the ASCII character set should be used for the password.

---

- If **Copy from RAM to ROM** is selected, the settings are permanently saved after exiting the screen form.  
If **Copy RAM to ROM** is not selected, then the settings for know-how protection are only saved non-retentively and are no longer available after the system has been switched on the next time.
- After the dialog is closed with **OK**, know-how protection is activated and the data (parameters, DCC) are saved as encrypted data on the memory card. If larger data volumes must be encrypted, then a progress display informs you that the encryption or the activation of the know-how protection is still running.  
In all protected adjustable parameters in the expert list, instead of the parameter value, the text "know-protected" is shown.

---

#### Note

For published DCC parameters, the entry "--" appears in the expert list instead of the text "Know-how protected".

---

## Note regarding know-how protection

---

### Note

#### Safely deleting existing unencrypted data

If unencrypted data have already been saved on the memory card before saving encrypted data, then this data will not be safely deleted. No special deletion method is applied in order to completely and finally remove unencrypted data from the memory card.

In this case, users must ensure that the unencrypted data are safely and reliably deleted, for instance by using special PC-based tools.

---

### 9.2.22.3 Deactivating know-how protection

Know-how protection can be deactivated via STARTER in the online mode.

#### Deactivating know-how protection

Know-how protection is deactivated via STARTER in the online mode as follows:

- Select the drive unit via **Project > Know-how protection drive unit > Deactivate**.
- A dialog appears in which the know-how protection can be temporarily or permanently deactivated:
  - Temporary deactivation:  
Select **temporary** and enter the password, accept using **OK**.
  - Final deactivation:  
Select **final** and enter the password, select **Copy RAM to ROM** and accept using **OK**.

#### Note when deactivating know-how protection

---

### Note

#### Permanently or temporarily deactivating know-how protection

Temporary deactivation means that know-how protection is active again after a POWER ON. Data is still saved on the memory card in an encrypted form. The existing password is used to reactivate know-how protection.

Final deactivation means that know-how protection is no longer active, even after a POWER ON. Data is saved on the memory card in an unencrypted form (i.e. data is no longer encrypted).

Even if know-how protection has been finally deactivated, it can still be reactivated when required.

---

#### 9.2.22.4 Changing the know-how protection password

Changing the password for know-how protection can be realized via STARTER in the online mode.

##### Changing the password

The password for know-how protection can be changed as follows via STARTER in the online mode:

- Select the drive unit via **Project > Know-how protection drive unit > Change password**.
- A dialog appears in which the following entries can be made:
  - Enter the old password
  - Enter the new password  
The password must comprise at least one character, it may not exceed a length of 30 characters, all characters are permissible.
  - Confirm the new password
- If **Copy from RAM to ROM** is selected, the settings are permanently saved after exiting the screen form.  
If **Copy RAM to ROM** is not selected, then the settings for know-how protection are only saved non-retentively and are no longer available after the system has been switched on the next time.

After closing the dialog with **OK**, the changed password is activated.

#### 9.2.22.5 OEM exception list

Setting parameters can be excluded from know-how protection using the OEM exception list. The parameters contained in the exception list can also be read and changed even when know-how protection is activated.

The exception list can only be generated via the expert list in STARTER in online mode. Parameter p7763 is used to define the number of parameters that should be contained in the exception list. In parameter p7764, in each index, the parameter number that should be included in the exception list is entered. The exception list can be separately generated for each drive object.

---

##### Note

##### Changing parameter p7763

After parameter p7763 has been changed, a "Load to PG" must be realized so that the index field of parameter p7764 is adapted.

---

In the factory setting, the exception list of the Control Unit consists of one parameter (p7763 = 1). Parameter p7766 (password input) is entered into parameter p7764[0] of the Control Unit; this means that when know-how protection is activated, the password for deactivation can be entered.

---

**Note**

**Absolute know-how protection**

If parameter p7766 is removed from the exception list and know-how protection is activated, then a password can no longer be entered. This means that know-how protection can no longer be deactivated!

In this case, the drive can only be accessed by restoring the factory settings.

---

### 9.2.22.6 Loading data with know-how protection into the file system

Data with know-how protection can be directly loaded or saved to the file system from the drive unit. The activated know-how protection ensures that the data cannot be forwarded to unauthorized third parties.

The following end user applications are conceivable:

- Encrypted SINAMICS data must be adapted.
- The memory card is defective.
- The Control Unit of the drive is defective.

In these cases, the machine builder (OEM) can create a new encrypted subproject (for a drive object) using STARTER. The serial number of a new memory card or a new Control Unit is saved in this encrypted data set in advance.

#### Application example: Control Unit is defective

**Scenario:**

The Control Unit of the end user is defective.

The machine manufacturer (OEM) has the end user's STARTER project files of the machine.

**Sequence:**

1. The end user sends the OEM the serial numbers of the new Control Unit (r7758) and the new memory card (r7843), and specifies the machine in which the Control Unit is installed.
2. The OEM loads the STARTER project data of the end user.
3. The OEM initiates the STARTER function "Load to file system".
  - The OEM specifies whether the data is to be stored zipped or unzipped.
  - The OEM makes the settings required for know-how protection.
4. The OEM sends the stored data to the end user (e.g. by e-mail).

5. The end user copies the "User" directory to the new memory card and inserts it into the new Control Unit.
6. The end user switches on the drive.

When powering up, the Control Unit checks the new serial numbers and deletes the values p7759 and p7769 if they match.

After it has powered-up without any errors, the Control Unit is ready for operation. The know-how protection is active.

If the serial numbers do not match, then fault F13100 is output.

If required, the end user must re-enter the changed parameters from the OEM exception lists.

### Calling the "Load to File System" dialog box

1. Select the drive unit in the project navigator of the STARTER project.
2. Call the "Load to file system" function.

The "Load to File System" dialog box opens.

### Specifying general memory data

The "General" tab is displayed automatically when the dialog is called.

1. The "Standard storage" is activated as storage option in the factory setting.  
If the data is to be saved compressed, then the "Save compressed" (.zip archive) must be selected.
2. The "Store additional data on the target device" option is deactivated in the factory setting.  
This option must be activated, if additional data, for example, program sources, are to be saved to the target device.
  - Optionally, graphic chart data can be saved using the "Including DCC chart data".
3. The target directory to save the data is entered by specifying the path in the appropriate input field - or by clicking on "Browse" and selecting the directory in the file system.

## Configuring know-how protection

The settings for know-how protection are made under the "Drive unit know-how protection" tab.

1. Click the "Drive unit know-how protection" tab.

Option "Without know-how protection" is active as default setting. If data is to be saved without protection (not recommended), then at this point, the dialog can be exited with "OK" or "Cancel".

2. If data is to be saved with protection, then one of the following options must be activated:
  - "Know-how protection without copy protection"  
Inputs required: "New password" and "Confirm password"
  - "Know-how protection with basic copy protection (permanently linked to the memory card)"  
Inputs required: "New password", "Confirm password" and "Memory card specified serial number"
  - "Know-how protection with extended copy protection (permanently linked to the memory card and CU)"  
Inputs required: "New password", "Confirm password" "Memory card specified serial number" and "Control Unit specified serial number"

The input fields for the passwords and the serial numbers become active (depending on the activated know-how protection option).

The active input fields are mandatory inputs.

3. The required password is entered in the "New password" field and reentered in the "Confirm password" field.
4. If the appropriate input fields are active, enter the serial number:
  - The serial number of the new memory card for which the data is intended
  - The serial number of the Control Unit
5. If, in spite of active know-how protection, diagnostic functions are also to be permitted, then option "Allow diagnostic functions (trace and measuring functions)" must be activated.

This allows the trace function, the measuring function and the function generator to be used despite know-how protection.

6. Click "OK" to confirm the settings you made.

## Result

The activation of the know-how protection starts the encryption of the subproject data. If larger data volumes must be encrypted, then a progress display informs you that the encryption or the activation of the know-how protection is still running. Using this encrypted data, an end user can install a new memory card for his drive unit.

### 9.2.22.7 Overview of important parameters

- r7758[0...19] KHP Control Unit serial number
- p7759[0...19] KHP Control Unit reference serial number
- r7760 Write protection/know-how protection status
- p7763 KHP OEM exception list number of indices for p7764
- p7764[0...n] KHP OEM exception list
- p7765 KHP memory card copy protection
- p7766[0...29] KHP password input
- p7767[0...29] KHP password new
- p7768[0...29] KHP password confirmation
- p7769[0...20] KHP memory card reference serial number
- r7843[0...20] Memory card serial number

KHP: Know-how protection (know-how protection)

## 9.2.23 Essential service mode

### Description

Essential Service Mode (ESM) enables the the drive to be operated for as long as possible if needed, even when errors occur.

For instance, this function can be used in applications in which an undesirable standstill can cause significant subsequent damage.

For example, if a fire breaks out in a large building, a fan should extract smoke and other gases so that people can be evacuated.

### Features

- In essential service mode, the automatic restart function is activated irrespective of the setting of parameter p1210. The result of this is that the drive is automatically switched back on if an OFF2 occurs due to an internal fault.
- In essential service mode, converter shutdown due to faults is suppressed. Exceptions to this rule are faults that would lead to the destruction of the device.
- Essential service mode is triggered by a continuous signal via the digital input, which is set as a signal source via p3880.

- If the drive is in bypass mode when essential service mode is activated, the motor will automatically switch over to converter operation. In this case, there is no back synchronization to the converter, i.e. the "Flying restart" function must be activated (p1200 = 1).
- When essential service mode ends, the converter returns to normal operation and responds according to the currently pending commands and setpoints.

---

**Note**

**Loss of warranty for an converter operated in the essential service mode**

Should essential service mode apply, the customer can no longer lodge any claims for warranty.

The essential service mode is an exceptional state, and is not suitable for continuous operation.

The essential service mode can have the following effects:

- Exceptionally high temperatures inside and outside the converter
- Open fire inside and outside the converter
- Emissions of light, noise, particles, gases.

---

The converter logs the essential service mode, and the faults that occur while in essential service mode in a password-protected memory. This data is only accessible for the service and repair organization.

 **WARNING**

**Active essential service mode and selection of "Safe Torque Off"**

Using the essential service mode and simultaneously using a Safety Integrated function can lead to the essential service mode being exited, and can therefore result in death or severe injury, e.g. when a smoke extraction system fails.

The background information is that the motor must continue to run as long as possible during essential service mode and also must not be shut down by a Safety Integrated function.

- Do not use a Safety Integrated function simultaneously with the essential service mode.

### Activating essential service mode

Essential service mode is activated through a continuous signal to the digital input, which is set as a signal source via p3880.

Only the digital inputs on the Control Unit are permitted as signal sources:

- r0722.x (high active)
- r0723.x (low active)

x = 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 20, 21



**Note****Special features when the essential service mode is either activated or deactivated**

Signal p3880 = 1 activates the essential service mode:

- If the motor was switched off by activating essential service mode, the converter switches the motor on.
- If the motor was switched on by activating essential service mode, the converter switches the speed setpoint to "ESM setpoint source".

Signal p3880 = 0 deactivates the essential service mode:

- If one of the OFF1, OFF2 or OFF3 commands is active, the converter switches off the motor.
  - If neither OFF1, OFF2 nor OFF3 is active, the converter switches the speed setpoint from the "ESM setpoint source" to the normal setpoint source.
- 

**Note**

Emergency operation is not fully functional until one of the following requirements is met:

- p3880 is wired offline; a POWER ON of the CU must then be performed after the download to the device.
  - p3880 is wired online.
- 

**Setpoint source for essential service mode**

When essential service mode is activated, the setpoint which is set via p3881 is switched to:

- p3881 = 0: Last known setpoint (r1078 smoothed) - factory setting
- p3881 = 1: Fixed speed setpoint 15 (p1015)
- p3881 = 3: Fieldbus
- p3881 = 5: TB30/TM31 analog input
- p3881 = 6: Enable of response OFF1
- p3881 = 7: Enable of response OFF2

When using the analog setpoint value from TB30/TM31 (p3881 = 5) the setpoint is used that is set via p3886.

If, when setting p3881 = 3 or 5, the setpoint is lost (e.g. cable break or fieldbus failure), then the alternative setpoint that is set via p3882 is automatically switched to:

- p3882 = 0: Last known setpoint (r1078 smoothed) - factory setting
- p3882 = 1: Fixed speed setpoint 15 (p1015)
- p3882 = 2: Maximum speed (p1082)

### Direction of rotation in essential service mode

Depending on your system, you may have to invert the setpoint locally for essential service mode. To do this, parameter p3883 can be linked with a free digital input:

- Signal in p3883 = 0: The direction of rotation of the setpoint parameterized for essential service mode is maintained
- Signal in p3883 = 1: Reversal of the direction of rotation of the setpoint parameterized for essential service mode

### Automatic restart

In essential service mode, if the automatic restart function is activated and the settings of parameters p1206, 1210 and p1212 then have no effect. The settings in p1211 (automatic restart, start attempts) and p1213 (automatic restart monitoring time) are still effective. The setting of p1213 [0] = p1213 [1] = 0.0 s allows an unlimited number of startup attempts.

### Bypass as a fallback strategy

If the converter fails due to an internal, non-acknowledgeable fault, essential service mode is no longer possible. In this case, the motor can be operated via the controller in bypass mode in the event of converter failure. For this purpose, bit 7 of the status word for the automatic restart (r1214.7) must be interconnected with p1266.

The bypass function must also be activated without synchronization (p1260 ≠ 3), and the changeover source for the bypass must be set to "Bypass via signal (BI: p1266)" (p1267.0 = 1).

You must ensure that r1214.7 is also set, otherwise there will be no changeover to the line supply. To end the bypass mode, the essential service mode must be deactivated. There is no switchover to converter operation (drive coasts down).

### Automatic switchover to encoderless operation for encoder faults

By automatically pre-assigning parameter p0491 (motor encoder fault response ENCODER) with the value "1", then the drive maintains the emergency service mode even when there is an encoder fault.

In addition, setting values "5" or "6" can be used. These setting values are lost after a power interruption at the Control Unit - or when the drive restarts. After this, the drive continues to operate with automatic pre-assignment (p0491 = 1).

#### WARNING

##### Pending drive standstill in the essential service mode (ESM)

As a result of the automatic drive switchover to encoderless operation, controlled starting of the drive **after a power interruption** can fail, in spite of the fact that the automatic restart function (AR) is activated. If the drive comes to a standstill, then this can cause severe injury or death, e.g. for ventilation and smoke extraction systems.

- To avoid the motor coming to a standstill, when the essential service mode (ESM) is activated, switchover the drive to encoderless operation.

## Display of activations/faults of essential service mode

The number of activations and the errors that occurred during essential service mode are displayed in parameter r3887:

- r3887[0]: Number of activations of essential service mode
- r3887[1]: Number of faults during essential service mode

The counter statuses in r3887 can be reset with p3888 = 1.

## Function diagram

FP 3040	Setpoint channel - Direction limitation and direction reversal
FP 7033	Technology functions - essential service mode (ESM)

## Parameters

- p3880 BI: ESM activation signal source
- p3881 ESM setpoint source
- p3882 ESM alternative setpoint source
- p3883 BI: ESM direction of rotation signal source
- p3886 CI: ESM setpoint TB30/TM31 analog input
- r3887[0...1] ESM activations/faults, quantity
- p3888 ESM activations/faults, reset quantity
- r3889.0...10 CO/BO: ESM status word

## 9.2.24 Web server

### 9.2.24.1 Description

#### General information

The web server is a web-based commissioning tool for SINAMICS converters, and provides information on a connected SINAMICS converter via its web pages.

You can open the web server via the Internet browser of your commissioning device.

The most important functions of the Web server are described below. However, the "Files" and "User's Area" display areas of the Web server are described in detail in a separate document (see "User-defined Web pages"). For this reason, these display areas are not described in this description.

**Note**

**Total memory size of user files**

The sum of the data stored via the web server must not exceed the total memory size of 100 MB. The total memory size of the stored data influences the backup times. The larger the data quantity, the longer the backup takes.

**Configuration**

The web server is already active in the factory settings.

The web server is either directly configured in the web server or via p8986 (web server configuration).

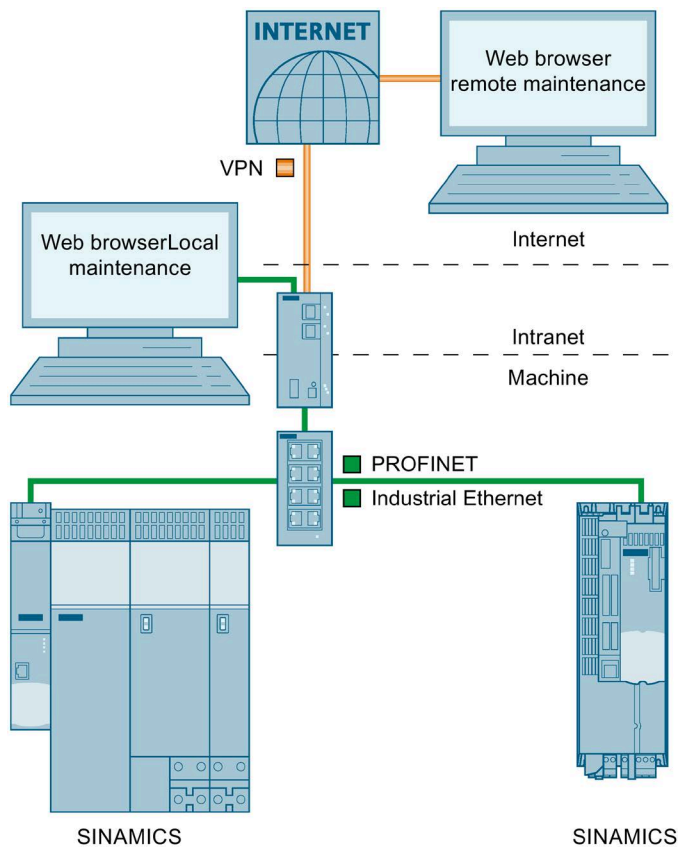


Figure 9-11 Web server structure

**Communication**

The web server supports unencrypted communication via the HTTP protocol as well as encrypted communication via the HTTPS protocol.

The type of transmission is defined by entering the corresponding address.

For safety reasons, secure transmission can be forced by deactivation of the http port.

## Accessing the web server

The web server is accessed via the following interfaces:

- Service interface X127 of the CU320-2 DP or CU320-2 PN Control Unit
- PROFINET interface X150 of the CU320-2 PN

### Access via the service interface X127

The service interface has the following default setting:

- IP address: 169.254.11.22
- Subnet mask: 255.255.0.0
- Access via the service interface is **activated by default** in the web server.
- Data transfer via HTTP (factory setting) and HTTPS connection possible.

<b>NOTICE</b>
<b>Risk of software manipulation with HTTP connection</b>
The HTTP protocol transfers data without encryption. This facilitates, for example, password theft and can lead to data manipulation by unauthorized parties and thus to damage.
<ul style="list-style-type: none"><li>• Limit access to HTTPS connections so that all data is transferred in encrypted form.</li></ul>



Interface X127 can also be connected to an external WLAN access point, and from this an IP address can be sourced via DHCP. This is just a temporary situation, and is only used for commissioning and/or diagnostics with mobile devices. The subsequently described security notes must be carefully observed when doing this.

---

### Note

Service interface X127 is intended for commissioning and diagnostics, which means that it must always be accessible (e.g. for service).

The following restrictions apply in addition:

- Only local access is permissible.
  - No networking - or only local networking is permissible in a locked control cabinet.
- 

If it is necessary to remotely access the electrical cabinet, then additional security measures must be applied so that misuse through sabotage, data manipulation by unqualified persons and intercepting confidential data is completely ruled out.

**Access via PROFINET interface X150 of the CU320-2 PN**

PROFINET interface X150 of the CU320-2 PN is preset as follows:

- Access via the PROFINET interface is **deactivated by default** in the web server.
- The PROFINET interface can be activated using parameter p8984[1]. Because parameter p8984[1] is a BICO parameter, the interface can also be activated via a key-operated switch.
- Data transfer is only possible via an HTTPS connection.

**Note**

**Security measures for communication via PROFINET**

In accordance with the Defense in Depth concept, PROFINET must be separated from the remaining system/plant network. Access to cables and possibly open connections must be implemented in a protected fashion, such as in a control cabinet.

**Note**

The IP addresses of the service and PROFINET interfaces must not be in the same subnet.

**Access protection and access rights**

Access protection in the web server comprises the following protective measures:

- User roles  
 Access to the converter is possible in the web server via 2 defined user roles ("Administrator" and "SINAMICS") with different access rights.  
 We recommend that secure passwords are created to access SINAMICS converters.
- Access rights to parameter lists  
 Access rights to parameter lists in the web server are defined or changed by the "Administrator" user.
- Administrator

Access rights	The "Administrator" user has full access to the converter data displayed in the web server.
Password	To access the converter, an administrator password must be assigned.

- SINAMICS

Access rights	The "SINAMICS" user has restricted access rights in the default settings of the web server.
Password	As default, a password is not assigned for "SINAMICS" users. To avoid access by unauthorized persons, we recommend that a password is assigned.

The access rights for the "Administrator" and "SINAMICS" users are assigned as follows in the default settings:

Display areas and functions		Administrator		SINAMICS	
		W/E	R	W/E	R
Start page	Password input	x		x	
Diagnostics	Drive objects and components	x		x	
	Messages > Search and filter	x		x	
	Messages > Acknowledge faults	x		x	
	Diagnostics buffer > Search and filter	x		x	
	Communication	x		x	
	Trace files	x		x	
Parameter	Create list	x		x	
	List properties > Access rights > Read parameter values	x		x <sup>1)</sup>	
	List properties > Access rights > Change parameter values ... • ... Add parameters • ... Delete parameters • ... Change parameter values	x			x <sup>2)</sup>
	List properties > Access rights > Change list • ... Enter / change list names • ... Delete list	x		x <sup>1)</sup>	
	List properties > Change position of list	x		x	
Backup and restore	Back up parameters	x <sup>3)</sup>			
	Restore parameters from file	x <sup>3)</sup>			
	Restoring the factory setting	x <sup>3)</sup>			
System	Settings > User accounts	x <sup>3)</sup>			
	Settings > Configure IP connections	x <sup>3)</sup>			
	Apply for	x			x
	Firmware update	x <sup>3)</sup>			
Save changes (RAM to ROM)		x		x	
Call Support			x		x

**W/E = Write/Edit, R = Read**

- 1) The parameter lists generated by user "SINAMICS" are automatically assigned access rights "Read parameter values" and "Change list". The automatically assigned access rights can be extended or restricted by the "Administrator" user. The "Administrator" user can assign the access right "Change parameter values" to a parameter list created by the "SINAMICS" user and at the same time deactivate the automatically assigned access right "Change list". As a consequence, a "SINAMICS" user can change individual values in the corresponding parameter list; however, he cannot add additional parameters to the list or delete parameters that have already been added.
- 2) The function and the associated operating options are displayed for both users. However, the access rights for the function can only be assigned by user "Administrator".
- 3) The function and the associated operating options are not displayed for the "SINAMICS" user and are solely reserved for the "Administrator" user.

The settings of the write and know-how protection also apply to the drive parameters and configuration when accessing the web server.

## Supported browsers

Access to the web server is possible with the following Internet browsers:


Commissioning device	Operating system	Supported browsers
PG/PC	Windows (as of Version 7) <sup>1)</sup>	<ul style="list-style-type: none"> <li>• Microsoft Internet Explorer (Version 11)</li> <li>• Microsoft Edge (Version 14)</li> <li>• Mozilla Firefox (Version 62)</li> <li>• Google Chrome (Version 69)<sup>2)</sup></li> </ul>
Tablet, Smartphone	Apple iOS (from Version 12.0)	<ul style="list-style-type: none"> <li>• Google Chrome (Version 69)</li> <li>• Safari (Version 12.0)</li> </ul>
	Android (from Version 4.4.4)	<ul style="list-style-type: none"> <li>• Google Chrome (Version 69)</li> </ul>

1) We recommend the use of Windows 10, Version 1803, from April 2018 or later.

2) We recommend the use of Google Chrome in the supported version 69.

### Reloading pages

If the web server does not respond, or if buttons are inactive or are not labeled, although the converter is not fully utilized with internal calculations, load the web server pages again as follows:

- With the PG/PC via <F5>
- With the smartphone or tablet via 

### Write and know-how protection

Write or know-how protection that has been set is also active for access via the web server.

The set protective measure cannot be configured or deactivated in the web server.

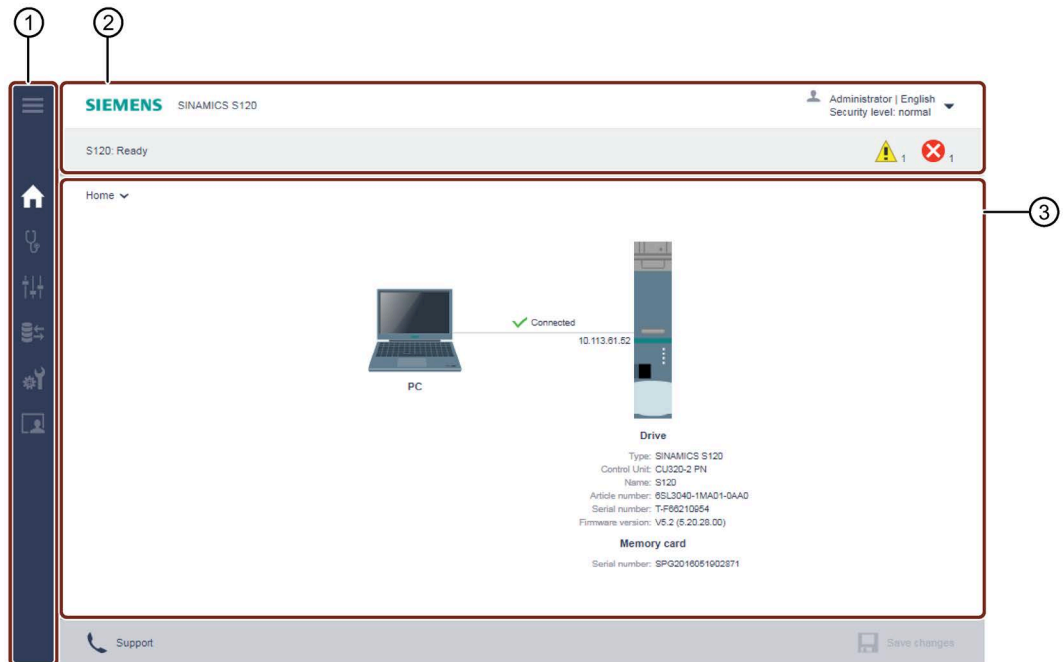
If know-how protection is set, then no values are displayed in the parameter list of the web server; instead, a note referring to the fact that know-how protection is activated.



### Dialog screen forms in the web server

You make most of the important converter settings in the dialog screen forms of the web server.

The web pages are structured as follows:



① Navigation bar

② Status bar

- Top: Device designation, drop-down list for the language selection and to log out, display of the security level
- Bottom: Name of the converter (if entered), status of the converter, fault and warning messages

③ Main window (depending on navigation)

Figure 9-12 Example of a dialog screen

## Change parameter values

The parameters displayed in the web server are subdivided into adjustable parameters (p...) and display parameters (r...). The parameters are shown in the same way in parameter lists and dialog screen forms.

### Adjustable parameters

You change the parameter values for adjustable parameters in the parameter lists and dialog screen forms by means of input fields ② or drop-down lists ③.

Parameter	Value	Unit
Drive commissioning parameter filter 1	Ready (0)	
Drive commissioning parameter filter 2		
Drive unit line supply voltage	600	V
Power unit heat sink fan operating hours counter	4	h
Activate measuring probe 1	DI 0 (X130 / 1.2) (210)	
Encoder 1	DI 0 (X130 / 1.2) (210)	
Reserved	DI 0 (X130 / 1.2) (210)	
Reserved	DI 0 (X130 / 1.2) (210)	
Activate measuring probe 2	DI 1 (X130 / 1.5) (211)	

- ① Parameter (opened)
- ② "Parameter" column
- ③ "Value" column (values can be changed via drop-down lists or input fields.)
- ④ "Unit" column
- ⑤ Input field (invalid values are displayed with red background)

Figure 9-13 Example: Display of adjustable parameters

### Input of invalid values

The web server responds to the input of invalid values in the following ways:

- If the input of an invalid value is confirmed with "Enter", a corresponding message is shown (e.g. "Value invalid") and the value is automatically set to the previously set value. The invalid value is not applied.
- If the input of an invalid value is confirmed with "Enter", the value is automatically set to the default value. If the previously set value differs from the default value, the previously set value is overwritten. The invalid value is not applied.

### Display parameters

Display parameters are for information purposes only and cannot be changed.

## Administrator password

For the first login to the web server, the assignment of an administrator password is mandatory.

When you have logged on successfully, you will receive advanced access to all web server functions as "Administrator" user.

Proceed as follows to assign an administrator password:

1. Switch the converter on.
2. Connect the commissioning device (PG/PC, tablet or smartphone) to service interface X127 on the converter using a LAN cable.

---

### Note

#### Observe time window

Once you have connected the commissioning device with service interface X127 at the converter, assign a password within 10 minutes.


If a password is not assigned within this time window, the display automatically switches to the login screen of the web server. To redisplay dialog "Define administrator", proceed as follows:

- Switch the converter off and on again.  
OR
  - Withdraw the LAN cable from service interface X127, and then reinsert it into the service interface.
- 

3. Open the browser in your commissioning device.
4. Call the web server using the converter IP address (e.g. 169.254.11.22).

If you have not assigned a password, then the following dialog is displayed.

**Define administrator**



To receive access to the drive you must log in as Administrator within ten minutes. Assign a password for this.

To protect against unauthorized access choose a secure password, consisting of at least eight characters, uppercase and lowercase letters, numbers and special characters (eg: ?!% +) are also recommended.

Password

Confirm password

**Security information**

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement - and continuously maintain - a holistic, state-of-the-art industrial security concept. Siemens' products and solutions only form one element of such a concept.

<http://www.siemens.com/industrialsecurity>

5. Enter an administrator password in the "Password" field.

---

**Note**

**Secure passwords**

To protect against unauthorized access, by a hacker, for example, select a secure password that comprises:

- At least 8 characters
- Uppercase and lowercase letters
- Numbers and special characters (e.g.: ?!%+ ...)

It is not permissible that the password is used elsewhere.

---

**Note**

**Checking passwords**

When passwords are entered, the converter only checks the password length. A check is not made for special characters or uppercase/lowercase letters!

---

6. Repeat the password in the "Confirm password" field.  
If the input is not identical in both fields, the "OK" button is not enabled.
7. Confirm the password that you entered with "OK".  
The display changes to the login page of the web server.
8. Log in using the administrator password.
9. Remember the password or store it in a secure place that cannot be accessed by unauthorized persons.

## User-defined Web pages

You can extend the standard Web pages for the Web server using some self-created Web pages. The SIEMENS Industry Online Support contains detailed information on:

- SINAMICS S120: Creating user-defined web pages  
(<https://support.industry.siemens.com/cs/ww/en/view/68691599>)
- SINAMICS S120: User-defined sample pages  
(<https://support.industry.siemens.com/cs/ww/en/view/78388880>)

### 9.2.24.2 Starting the web server

In order to be able to work with the web server, you must be logged in as "SINAMICS" or "Administrator" user.

You must be logged in as "Administrator" to perform commissioning tasks.

#### Precondition

- The web server is already active in the factory settings.
- A functional commissioned drive project.
- PG/PC is connected to the Control Unit (to the target device).

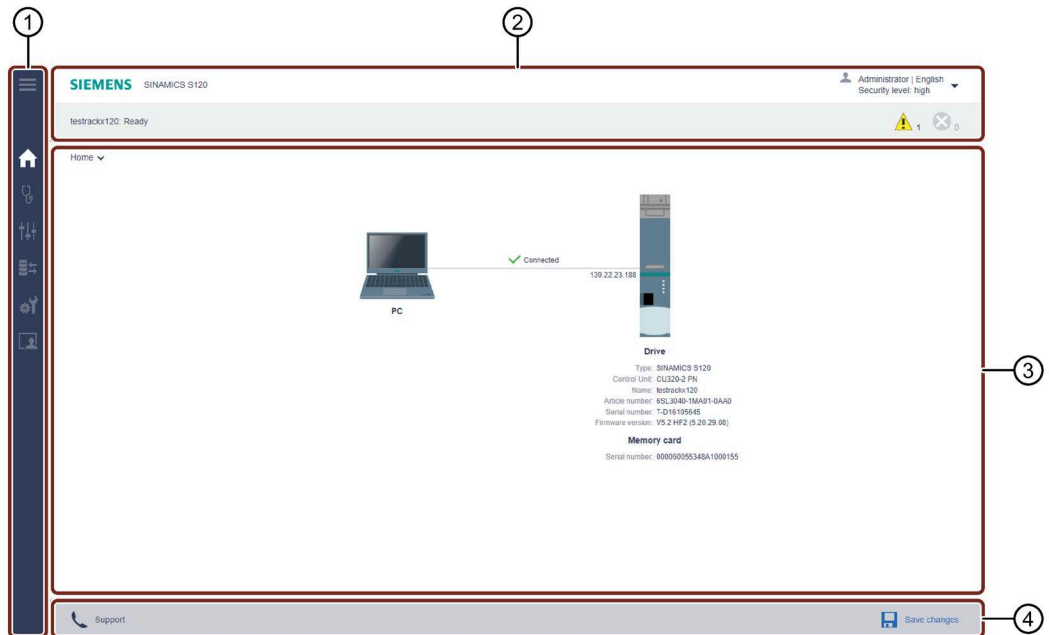
### Starting the web server

1. Enter the IP address of the SINAMICS drive in the address line of the browser (e.g. `http://169.254.11.22`).  
Confirm with <Return>.  
The login page of the web server is displayed in the browser.
2. Enter the name of the user ("Administrator" or "SINAMICS") in the "User name" field.
3. Then enter the user password.  
If you have still not assigned a password for user "SINAMICS", you can skip entering the password.  
In the factory setting, only user "SINAMICS" is enabled, and no password has been assigned.
4. Make sure that you have entered the user name and password correctly.
5. Click "Login".

You are logged into the web server.

### Layout of the start page

After you have logged in, the web server will display the following start page:




- ① Navigation bar
- ② Status bar
  - Top: Device designation, drop-down list for logout and language selection, display of the security level
  - Bottom: Name of the converter (if entered), status of the converter, fault and warning messages
- ③ Main window (depending on navigation)
- ④ Action bar
  - Support information
  - Save changes retentively (RAM to ROM)

Figure 9-14 Structure of the web server

## Navigation

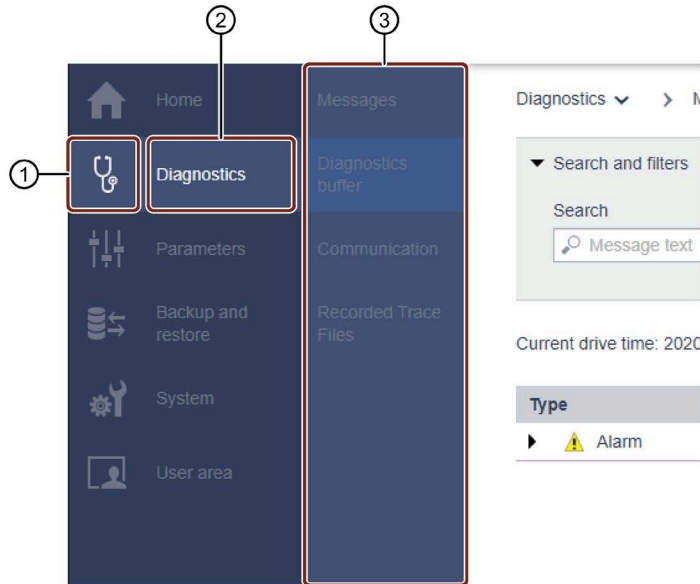
The web server provides the following options for navigating:

- Multi-level navigation bar:



- ① Main menu as icon
- ② Main menu in text format
- ③ Submenus of the active main menu

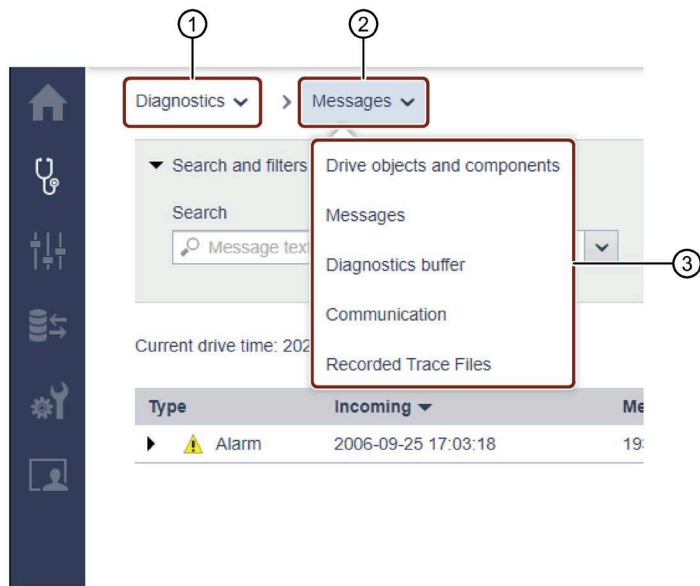- Via drop-down lists:



- ① Main menu in text format
- ② Submenu in text format
- ③ Submenu of the active submenu

For navigation on mobile devices, the screen forms can also be called in the active view of the web server via drop-down lists ① / ②.

## Call support information

You call the support addresses for the SINAMICS drive via the action bar of the web server.

Click "Support" in the action bar of the web server.

The following information is shown:



Figure 9-15 Support addresses (example)

You can use the links to open or copy the required support addresses.


Click "OK" to close the dialog.

## Saving settings retentively

Changed settings are saved in the volatile memory of the converter, and retained when the web server is closed.

The settings are lost when the drive is switched off. Therefore, save the changes retentively on a regular basis (also known as "RAM to ROM"). You can save the changed settings and optimization results both for each individual commissioning step and after commissioning is complete.


Proceed as follows to save changed settings retentively:

1. Click "Save changes" in the footer of the web server . A save dialog box is displayed.
2. Click "Save". The settings are saved retentively.



## User logout

Proceed as follows to log out of the web server:

1. Click the  user symbol in the status bar of the web server.
2. Click on "Log out".  
If you have changed the settings, a save prompt appears.
3. If you wish to retentively save the settings, click on "Save settings".  
The settings are saved retentively and you are logged out of the web server.

OR


4. If you want to discard the settings, click "Log out without saving". The settings are discarded and you are logged out of the web server.

## Automatic logout

If you do not perform any actions in the web server, you are automatically logged out after 10 minutes.

Settings made are not lost as a result of automatic logout. You must log in again to be able to access the web server.

Proceed as follows to save settings made retentively after automatic logout:

1. Log in to the web server.
2. Click on "Save changes" .  
An appropriate dialog is displayed.
3. Click "Save". The settings are saved retentively.

### 9.2.24.3 Web server configuration

#### Setting or changing user accounts

The "SINAMICS" and "Administrator" user roles have been predefined and cannot be changed.

#### Settings

The following settings are available for the user roles:

User role	Setting	Note
Administrator	Change password	The user cannot be disabled in the web server.
SINAMICS	Enable/lock user	The user is enabled by default.
	Assign password	The user must be enabled.
	Change/delete password	–

### Requirements for secure passwords

To protect against unauthorized access, by an attacker, for example, generate a secure password that consists of:

- At least 8 characters
- Uppercase and lowercase letters
- Numbers and special characters (e. g. ?!%+ etc.)
- Different passwords for different user roles

### Checking the password

The length of the password is checked by the converter. There is no check for special characters or upper and lower case letters.

Remember the passwords or store the passwords in a safe place that cannot be accessed by unauthorized persons.

## Assigning the password for the "SINAMICS" user


Before you assign the password for the "SINAMICS" user, the user must be enabled.

### Procedure

To assign the password for the "SINAMICS" user, proceed as follows:

1. Select "System > Settings" in the navigation.
2. Select the "User Accounts" tab.
3. For the "SINAMICS" user, click on "Assign password...".

A corresponding dialog opens.

4. Enter the password as requested in the dialog.
5. Click "Assign" to complete the operation.  
If the entered parameters match, the dialog is closed.
6. To save the settings retentively, click .

## Changing the password for the "SINAMICS" user

To change the password for the "SINAMICS" user, proceed as follows:

1. Select "System > Settings" in the navigation.
2. Select the "User Accounts" tab.
3. Click "Change password..." for the "SINAMICS" user.

4. Enter the passwords as requested in the dialog.
5. Click "Change" to complete the operation.

If the entered parameters match, the dialog is closed.


6. To save the settings retentively, click .

### Deleting the password for the "SINAMICS" user

Proceed as follows to delete the "SINAMICS" user:

1. Select "System > Settings" in the navigation.
2. Select the "User Accounts" tab.
3. Click "Delete password..." for the "SINAMICS" user.
4. Enter the current password as requested in the dialog.
5. Click "Delete" to complete the operation.

If the password was entered correctly, the dialog is closed.

6. To save the settings retentively, click .

#### 9.2.24.4 Additional information

A detailed description of the complete principle of operation and handling the web server is included in the "Function Manual SINAMICS S120 Drive Functions". This manual is available as additional documentation on the customer DVD supplied with the device.

## 9.3 Extended functions

### 9.3.1 Technology controller

#### Description

The "technology controller" function module allows simple control functions to be implemented, e.g.:

- Level control
- Temperature control
- Dancer roll position control
- Pressure control
- Flow control
- Simple control without higher-level control
- Tension control

The technology controller features:

- Two scalable setpoints
- Scalable output signal
- Separate fixed values
- Integrated motorized potentiometer
- The output limits can be activated and deactivated via the ramp-function generator.
- The D component can be switched to the system deviation or actual value channel.
- The motorized potentiometer of the technology controller is only active when the drive pulses are enabled.

The technology controller is designed as a PID controller, whereby the differentiator can be switched to the control deviation channel or the actual value channel (factory setting). The P, I, and D components can be set separately.

A value of 0 deactivates the corresponding component. Setpoints can be specified via two connector inputs. The setpoints can be scaled via parameters p2255 and p2256.

A ramp-function generator in the setpoint channel can be used to set the setpoint ramp-up/ramp-down time via parameters p2257 and p2258. The setpoint and actual value channel each have a smoothing element. The smoothing time can be set via parameters p2261 and p2265.

The setpoints can be specified via separate fixed setpoints (p2201 to p2215), the motorized potentiometer, or via the fieldbus (e.g. PROFIBUS, PROFINET).

Pre-control can be integrated via a connector input.

The output can be scaled via parameter p2295 and the control direction reversed. It can be limited via parameters p2291 and p2292 and interconnected as required via a connector output (r2294).

The actual value can be integrated, for example, via an analog input on the TM31.

If a PID controller has to be used for control reasons, the D component is switched to the setpoint/actual value difference (p2263 = 1) unlike in the factory setting. This is always necessary when the D component is to be effective, even if the reference variable changes. The D component is only activated if p2274 > 0.

---

### Note

#### Ramp-up/down time freeze

With the entry "0" sec. as power up time or ramp-down time for the ramp function generator of the technology controller, the current values of the respective ramp function generator will be frozen.

---

## Commissioning

The "technology controller" function module can be activated by running the commissioning wizard. Parameter r0108.16 indicates whether the function module has been activated.

### Example: liquid level control

The objective here is to maintain a constant level in the container.

This is carried out by means of a variable-speed pump in conjunction with a sensor for measuring the level.

The level is determined via an analog input (e.g. AI0 TM31) and sent to the technology controller. The level setpoint is defined in a fixed setpoint. The resulting controlled variable is used as the setpoint for the speed controller.

In this example, a Terminal Module (TM31) is used.

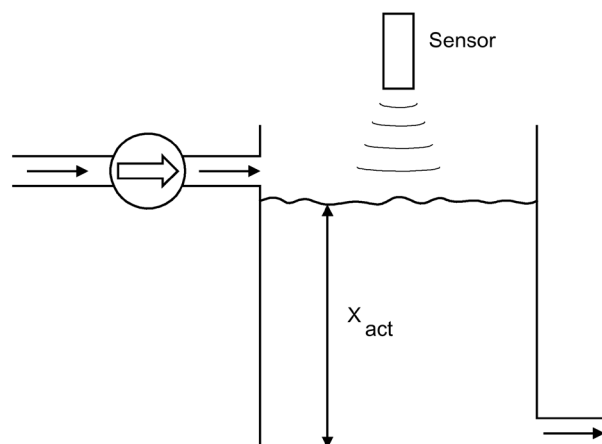


Figure 9-16 Level control: Application

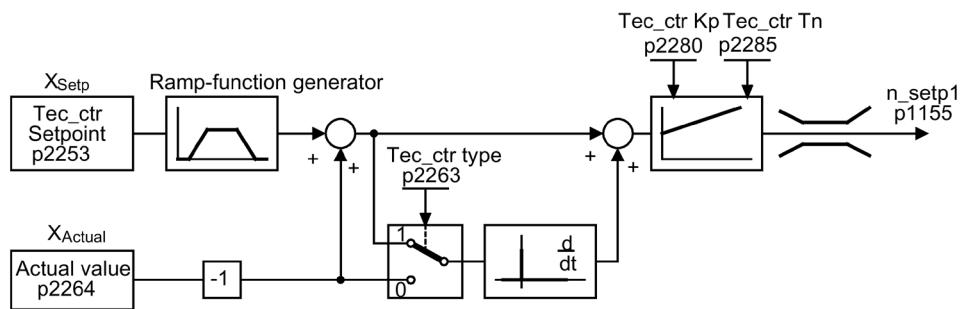


Figure 9-17 Level control: Controller structure

### Function diagram

FD 7950	Technology controller – fixed values, binary selection
FP 7951	Technology controller – fixed values, direct selection
FD 7954	Technology controller – motorized potentiometer
FD 7958	Technology controller – closed-loop controller

### Key control parameters

- p1155 = r2294 CI: Speed controller speed setpoint 1 [FP 3080]
- p2253 = r2224 Technology controller setpoint effective via fixed setpoint [FD 7950]
- p2263 = 1 D component in fault signal [FD 7958]
- p2264 = r4055 Actual value signal  $X_{actual}$  via AI0 of TM31 [FP 9566]
- p2280 =  $K_p$  Calculate P gain by means of optimization
- p2285 =  $T_n$  Calculate integral time by means of optimization
- p2200 = 1 Technology controller enabled

### 9.3.2 Bypass function

The bypass function uses digital drive outputs to activate two contactors and uses digital inputs to evaluate the contactor's feedback (e.g., via TM31). This circuit allows the motor to be operated using the converter or directly on the supply line. The contactors are activated by the converter. The feedback signals for the contactor positions have to be returned to the converter.

The bypass circuit can be implemented in two ways:

- without synchronizing the motor to the line supply
- with synchronizing the motor to the supply.

The following applies to all bypass versions:

- The bypass switch is also always shut down if one of the "OFF2" or "OFF3" control word signals is canceled (motor coasts down). When "OFF1" is withdrawn, the motor remains connected to the line supply.
- Exception:  
If necessary, the bypass switch can be interlocked by a higher-level controller such that the drive can be shut down completely (i.e. including the controller electronics) while the motor is operated on the supply.  
The protective interlocking must be implemented on the system side.
- When the drive is started up again after POWER ON, the status of the bypass contactors is evaluated. After powering up, the converter can thereby change straight into "Ready to start and bypass" status. This is only possible if the bypass is activated via a control signal, the control signal (p1266) is still present once the system has been ramped up, and the "automatic restart" function is active (p1210 = 4).  
The bypass function is automatically restarted by the restart process. To accelerate the motor to the setpoint speed or to synchronize it to the network, the pulse enable may take place with the motor rotating. In this case, it is recommended that you activate the "Flying restart" function (p1200 = 1) to prevent high current peaks.
- Changing the converter into "Ready to start and bypass" status after powering up, is of a higher priority than switching back on automatically.
- Monitoring of the motor temperatures using temperature sensors is active while the converter is in one of two statuses "Ready to start and bypass" or "Ready for operation and bypass".
- The two motor contactors must be designed for switching under load.

---

**Note**

**Information on the examples**

The examples contained in the following descriptions are only basic circuits designed to explain the basic function. The dimensions of specific circuit configurations (contactors, protective equipment) must be calculated for specific systems.

---

<b>NOTICE</b>
<p><b>Device damage as a result of incorrect phase sequence</b></p> <p>The target frequency r3804 is specified as an absolute value. It does not contain information about the direction of the rotating field (phase sequence)!</p> <p>If the phase sequence of the line voltage, which the system must synchronize with, does not match the motor voltage phase sequence then this results in incorrect synchronization. In the worst-case scenario, this can mechanically damage the plant or system.</p> <ul style="list-style-type: none"> <li>• Ensure that the line voltage phase sequence matches that of the motor voltage. You can correct the phase sequence as follows: <ul style="list-style-type: none"> <li>– Interchange the two feeder cables at the converter output or at the line contactor.</li> <li>– Correct the phase sequence of the motor or converter output voltage using p1820 or p1821.</li> </ul> </li> </ul>

**Precondition**

The bypass function is only possible for encoderless closed-loop speed control (p1300 = 20) or V/f control (p1300 = 0...19) and when an induction motor is used.

**Establishing the bypass function**

The bypass function is part of the "technology controller" function module that can be activated by running the commissioning Wizard. Parameter r0108.16 indicates whether the function module has been activated.

**9.3.2.1 Bypass with synchronizer with degree of overlapping (p1260 = 1)**

**Description**

The "Bypass with synchronization with degree of overlapping" is used for drives with a low moment of inertia. These are drives for which their speed would sink very fast when the K1 contactor opens.

When "bypass with synchronization with overlap (p1260 = 1)" is activated, the motor is transferred, synchronized to the line supply and is also retrieved again. During the changeover, both contactors K1 and K2 are closed at the same time for a period (phase lock synchronization).

This bypass type requires a VSM10 Voltage Sensing Module that measures the line voltage for the drive to be synchronized.

A reactor is used to decouple the converter from the line supply; the uk value for the reactor is 10 % (±2).

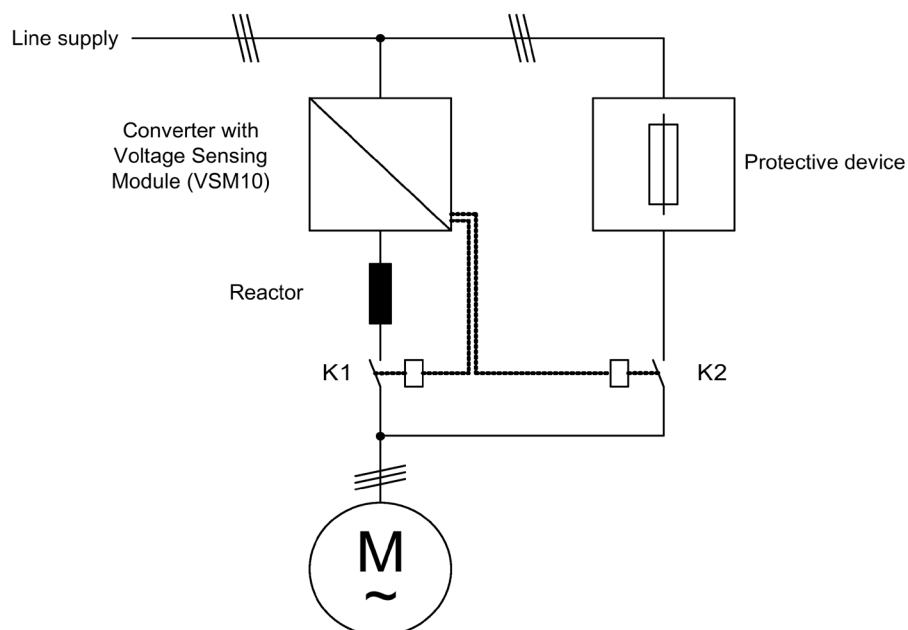


Figure 9-18 Typical circuit diagram for bypass with synchronizer with degree of overlapping



**Note**

As a result of the overlap, when synchronizing back to the converter, the DC link voltage can increase; in the worst case scenario this can result in a fault trip. It is possible to activate an overvoltage protection function, which, when a Vdc max threshold (r1242) is reached, the pulses are inhibited; as a consequence, the DC link voltage stops increasing. When the pulses are inhibited, the motor coasts down, which is why it must be restarted on the fly. As a consequence, overvoltage protection is only active if the "Flying restart" function was activated (p1200 = 1).

**Activation**

The synchronized bypass with overlap (p1260 = 1) function can only be activated using a control signal. It cannot be activated using a speed threshold.

**Parameterization**

Once the bypass with synchronizer with degree of overlapping (p1260 = 1) function has been activated, the following parameters must be set:

Table 9- 7 Parameter settings for bypass function with synchronizer with degree of overlapping

Parameters	Description
r1261.0	Signal "Command switch motor - power unit" (contactor K1)
r1261.1	Signal "Command switch motor - line" (contactor K2)
p1266 =	Control signal setting
p1269[0] =	Signal source for contactor K1 feedback
p1269[1] =	Signal source for contactor K2 feedback
p3800 = 1	Synchronization is activated
p3802 = r1261.2	Synchronizer activation is triggered by the bypass function.

### Transfer process

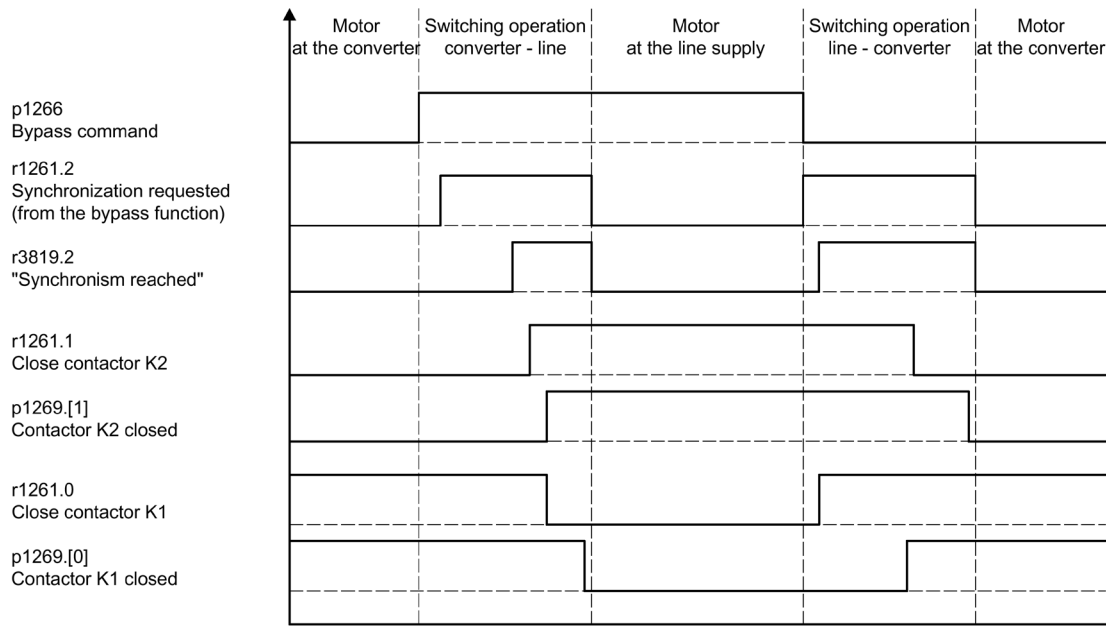


Figure 9-19 Signal diagram, bypass with synchronization with overlap

Transfer of motor to the line supply  
(contactors K1 and K2 are controlled by the converter):

- The initial state is as follows: Contactor K1 is closed, contactor K2 is open and the motor is fed from the converter.
- The control bit "bypass command" (p1266) is set (e.g. by the higher-level automation).
- The bypass function sets the control word bit "synchronizing" (r1261.2).
- Since the bit is set while the converter is running, the "Transfer motor to line supply" synchronization process is started.
- The synchronizing algorithm signals once the motor has been synchronized to the line frequency, line voltage and phase position (r3819.2).
- The bypass mechanism evaluates this signal and closes contactor K2 (r1261.1 = 1). The signal is evaluated internally - BICO wiring is not required.
- After contactor K2 has signaled back the "closed" state (r1269[1] = 1), contactor K1 is opened and the drive inhibits the pulses. The converter is in "Ready for operation and bypass" state.
- If the On command is cancelled in this phase, the converter will change to "Ready to start and bypass" state. If the appropriate contactors are being used, the converter will be isolated from the line supply and the DC link discharged.

To transfer the motor back from the line supply, the sequence is simply reversed: At the start of the process, contactor K2 is closed and contactor K1 is open.

- The "Bypass command" control bit is canceled (e.g. by the higher-level automation).
- The bypass function sets the control word bit "synchronizing".
- The pulses are enabled. Since "synchronizing" is set before "pulse enable", the converter interprets this as a command to retrieve the motor from the line supply.
- The synchronizing algorithm signals once the converter has been synchronized to the line frequency, line voltage and line phase.
- The bypass mechanism evaluates this signal and closes contactor K1. The signal is evaluated internally - BICO wiring is not required.
- Once contactor K1 has reported "closed" state, contactor K2 is opened and the motor returns to operation on the converter.

### 9.3.2.2 Bypass with synchronizer without degree of overlapping (p1260 = 2)

#### Description

When "bypass with synchronization without overlap (p1260 = 2)" is activated, contactor K2 is only closed when contactor K1 has opened (anticipatory type synchronization). During this time, the motor is not connected to a line supply so that its speed is determined by the load and the friction. Consequently, this bypass type is suitable for drives with large moment of inertia (see following note).

Synchronization setpoint p3809 is used to correct a phase rotation in the signal sensing of the voltage actual values (p3809 =  $-180^\circ \dots 179.90^\circ$ ). Furthermore, using this parameter, the setpoint angle of the motor voltage can be set (in a range up to a maximum of  $20^\circ$ el, see p3813) to compensate for friction or load-dependent speed decrease during the bypass switchover.

The phase position of the motor voltage before synchronization can be set using p3809 to enable an "advance start" before the line supply to which synchronization should be performed. As a result of the motor braking in the short time in which both contactors are open, when closing contactor K2, a phase and frequency difference of approximately zero must now be obtained.

If the angular difference is  $> 20^\circ$ el during switchover, the current surges that cannot be regarded as negligible would have to be expected. For this reason, synchronism is only reached if the angular difference is  $\leq p3813$  (maximum of  $20^\circ$ el). Compensating a speed decrease using p3809 is only practical if the motor is evenly loaded during the switchover period.

For instance, for conveyor belts, the load can also change during the bypass sequence, depending on the process environment. If, during the switchover process, the angular difference is more than  $20^\circ$ el or if the load for each bypass operation differs, then the "Bypass with synchronization with overlap (p1260 = 1)" mode must be used.

This bypass type requires a VSM10 Voltage Sensing Module that measures the line voltage for the drive to be synchronized.

For the function to run correctly, the moment of inertia of the drive and the load must be sufficiently high.

**Note**

**Sufficiently high moment of inertia**

A sufficiently high moment of inertia is characterized by a change in the motor speed when contactors K1 and K2 are opened, which is approximately equal to the rated slip. Further, it must be ensured that at the switchover instant, the motor is not significantly braked as a result of external effects (e.g. friction).

It is no longer necessary to use the de-coupling reactor after having determined the synchronizing setpoint (p3809) in the manner described above.

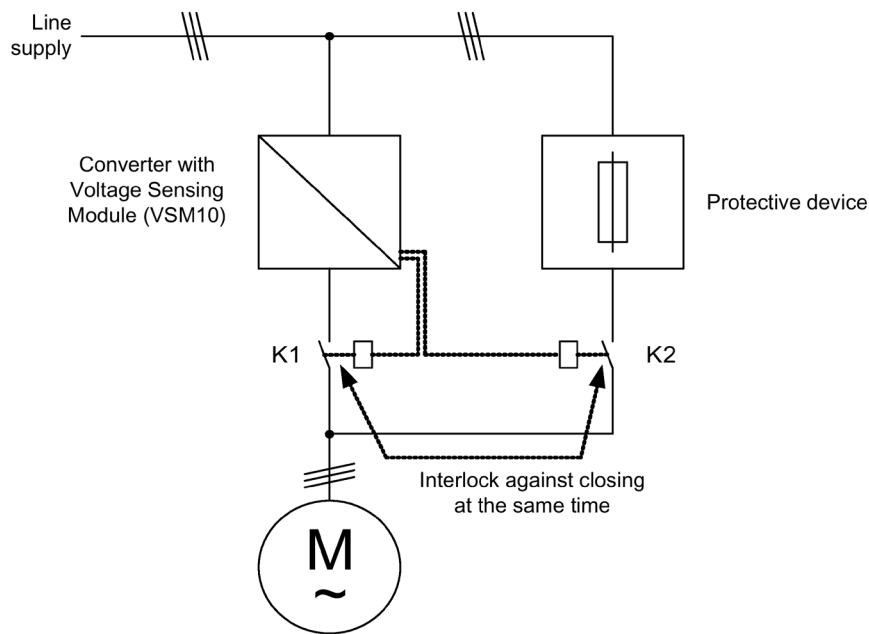


Figure 9-20 Example circuit for bypass with synchronizer without degree of overlapping

**Activation**

The synchronized bypass without overlap (p1260 = 2) function can only be activated using a control signal. It cannot be activated using a speed threshold.

## Parameterization

Once the synchronized bypass without overlap (p1260 = 2) function has been activated, the following parameters must be set.

Table 9- 8 Parameter settings for bypass function with synchronizer without degree of overlapping

Parameters	Description
r1261.0	Signal "Command switch motor - power unit" (contactor K1)
r1261.1	Signal "Command switch motor - line" (contactor K2)
p1266 =	Control signal setting
p1269[0] =	Signal source for contactor K1 feedback
p1269[1] =	Signal source for contactor K2 feedback
p3800 = 1	Synchronization is activated
p3802 = r1261.2	Synchronization activation is triggered by the bypass function
p3809 =	Setting the phase setpoint for synchronizing the drive to the line supply

9.3.2.3 Bypass without synchronizer (p1260 = 3)

Description

When the motor is transferred to the line supply, contactor K1 is opened (after the drive converter pulses have been inhibited); the system then waits for the motor de-excitation time and then contactor K2 is closed so that the motor is directly connected to the line supply. If the motor is connected to the supply in a non-synchronized manner, an equalizing current flows when the motor is switched in, and this must be taken into account when designing the protective equipment (see diagram "Circuit example for bypass without synchronization"). Consequently, this bypass type is suitable only for low power drives.

When the motor is being transferred from the supply by the converter, initially contactor K2 is opened and after the excitation time, contactor K1 is closed. The converter then captures the rotating motor and the motor is operated on the converter.

This bypass type does not require a VSM10 Voltage Sensing Module.

Contactor K2 must be designed for switching under load.

Contactors K1 and K2 must be interlocked against closing at the same time.

The "flying restart" function must be activated (p1200 = 1).

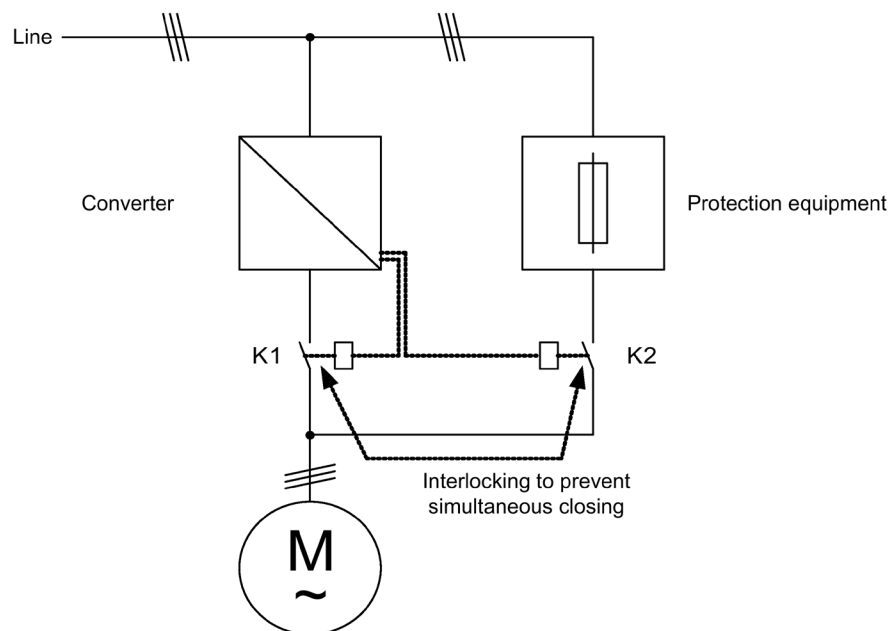


Figure 9-21 Example circuit for bypass without synchronization

## Activation

The bypass without synchronization (p1260 = 3) can be triggered using the following signals (p1267):

- Bypass using control signal (p1267.0 = 1):  
The bypass is triggered using a digital signal (p1266) (e.g., from a higher-level automation system). If the digital signal is canceled, a switchover to converter operations is triggered once the debypass delay time (p1263) has expired.
- Bypass at a specific speed threshold (p1267.1 = 1):  
Once a certain speed is reached, the system switches to bypass (i.e., the drive is used as a starting drive). The bypass cannot be connected until the speed setpoint is greater than the bypass speed threshold (p1265).  
The system reverts to converter mode when the setpoint (at the input of the ramp-function generator, r1119) falls below the bypass speed threshold (p1265). The setpoint > comparison value condition prevents the bypass from being reactivated straight away if the actual speed is still above the bypass speed threshold (p1265) after switching back to converter operations.

The bypass time, debypass time, bypass speed variables and the command source for switching over are set using parameters.

## Parameterization

Once the bypass without synchronization (p1260 = 3) function has been activated, the following parameters must be set.

Table 9- 9 Parameter settings for bypass function with synchronizer without degree of overlapping

Parameters	Description
r1261.0	Signal "Command switch motor - power unit" (contactor K1)
r1261.1	Signal "Command switch motor - line" (contactor K2)
p1262 =	Bypass dead time setting The total time for switching to line operation or switching back to converter operation is obtained from the sum of p1262 and the monitoring time of the switch being used (p1274[x]).
p1263 =	Setting the debypass delay time The delay time corresponds to the time between the reset of the bypass command and the status change from 1 to 0 in p1261.1 (command, switch motor - line supply).
p1264 =	Setting the bypass delay time The delay time corresponds to the time between setting the bypass command and the status change from 1 to 0 in p1261.0 (command, switch motor - power unit).
p1265 =	Speed threshold setting when p1267.1 = 1
p1266 =	Control signal setting when p1267.0 = 1
p1267.0 = p1267.1 =	Trigger signal setting for bypass function
p1269[0] =	Signal source for contactor K1 feedback
p1269[1] =	Signal source for contactor K2 feedback
p1274[x]	Setting the monitoring time for the bypass switch, motor/drive and motor/line supply.
p3800 = 0	Synchronization is deactivated.
p1200 = 1	The "flying restart" function is always active.

### 9.3.2.4 Function diagram

FP 7020 Synchronization

### 9.3.2.5 Parameters

#### Bypass function

- p1200 Flying restart operating mode
- p1260 Bypass configuration
- r1261 CO/BO: Bypass control/status word
- p1262 Bypass dead time
- p1263 Debypass delay time
- p1264 Bypass delay time
- p1265 Bypass speed threshold
- p1266 BI: Bypass control command
- p1267 Bypass changeover source configuration
- p1268 BI: Bypass feedback signal synchronization completed
- p1269 BI: Bypass switch feedback signal
- p1274 BI: Bypass switch monitoring time

#### Synchronization

- p3800 Sync–supply–drive activation
- p3801 Sync–supply–drive drive object number
- p3802 BI: Sync–supply–drive enable
- r3803 CO/BO: Sync–supply–drive control word
- r3804 CO: Sync–supply–drive target frequency
- r3805 CO: Sync–supply–drive frequency difference
- p3806 Sync–supply–drive frequency difference threshold
- r3808 CO: Sync–supply–drive phase difference
- p3809 Sync–supply–drive phase setpoint
- p3811 Sync–supply–drive frequency limitation
- r3812 CO: Sync–supply–drive correction frequency
- p3813 Sync–supply–drive phase synchronism threshold
- r3814 CO: Sync–supply–drive voltage difference
- p3815 Sync–supply–drive voltage difference threshold
- r3819 CO/BO: Sync–supply–drive status word



### 9.3.3 Extended brake control

#### Description

The "Extended brake control" function module allows complex braking control for motor holding brakes and holding brakes for example.

The brake is controlled as follows (the sequence reflects the priority):

- Via parameter p1215
- Via binector parameters p1219[0...3] and p0855
- Via zero speed detection
- Via a connector interconnection threshold value

#### Commissioning

The "Extended brake control" function module can be activated by running the commissioning wizard. Parameter r0108.14 indicates whether the function module has been activated.

Parameter p1215 must be set to "3" and the brake controlled via a digital output (for example at the customer terminal block TM31).

#### Extended brake control when braking with feedback

When braking with a feedback signal ( $p1275.5 = 1$ ), the brake control reacts to the feedback signal contacts of the brake. If the timer p1216 is greater than the time to the feedback signal, then the approach is delayed by the corresponding time difference.

In order to be able to approach with as little delay as possible, the opening time set in p1216 must be shorter than the time to the feedback signal. However, if the timer in p1216 is set shorter, then alarm A07931 "Brake does not open" appears.

Remedy:

1. Activate the "Release with feedback signal" ( $p1275.6 = 1$ ).

The pulse enable (BO: r1229.3) and setpoint enable (BO: r0899.15) are now independent of the set timer (p1217, p1216). The associated enable is determined only by the feedback signal (BI: p1222, BI: p1223). The timers (p1216, p1217) only affect the warnings A07931 "Brake does not open" and A07932 "Brake does not close".

2. Optional: To make the two warnings stop appearing, set both timers (p1217, p1216) to 0 ms.

Result: The monitoring of the brake and the display of the alarms are switched off.

### Example 1: Starting against a closed brake

When the device is switched on, the setpoint is enabled immediately (if other enable signals are issued), even if the brake has not yet been released ( $p1152 = 1$ ). The factory setting  $p1152 = r0899.15$  must be separated here. The drive first establishes a torque against the applied brake. The brake is not released until the motor torque or current ( $p1220$ ) has exceeded braking threshold 1 ( $p1221$ ).

Depending on the type and design of the brake, the time required to completely release the brake differs. It must be taken into consideration that, once the braking threshold torque has been exceeded, the operation enable signal ( $p0899.2$ ) is interrupted for the time interval that the brake is being released ( $p1216$ ) to ensure that the motor current does not exceed the permissible limit values during this period and the motor torque generated does not damage the brake. Time interval  $p1216$  must be set depending on the time the brake actually requires to release.

This configuration is used, for example, when the drive is connected to a belt that is under tension (loop accumulator in the steel industry).

### Example 2: Emergency brake

In the case of emergency braking, electrical and mechanical braking should be realized at precisely the same time. This can be achieved if OFF3 is used as a tripping signal for emergency braking:

$p1219[0] = r0898.2$  and  $p1275.00 = 1$  (OFF3 to "apply brake immediately" and invert signal).

To prevent the converter working in opposition to the brake, the OFF3 ramp ( $p1135$ ) should be set to 0 seconds. Any prevailing regenerative energy must be converted into heat via a braking resistor.

Typical applications include calendars, cutting tools, travel units and presses, for example.

### Example 3: Service brake on crane drives

For cranes with manual control, it is important that the drive responds immediately when the control lever is moved (master switch). To this end, the drive is powered up using the on command ( $p0840$ ) (the pulses are enabled). Speed setpoint ( $p1142$ ) and speed controller ( $p0856$ ) are inhibited. The motor is magnetized. As a consequence, the magnetization time generally applicable for three-phase motors (1 - 2s) is eliminated.

Now, only the brake opening time will delay the motor starting to rotate following activation of the master switch. Movement of the master switch generates a "setpoint enable from the control" (bit interconnected with  $p1142$ ,  $p1229.2$ ,  $p1224.0$ ). The speed controller is enabled immediately and the speed setpoint is enabled once the brake opening time ( $p1216$ ) has elapsed. When the master switch is in the zero position, the speed setpoint is inhibited and the drive ramps down along the ramp-function generator's ramp-down ramp. The brake closes once the standstill limit ( $p1226$ ) is undershot. Once the brake closing time ( $p1217$ ) has elapsed, the speed controller is inhibited (the motor is no longer generating any force). Extended braking control is used with the modifications described below.

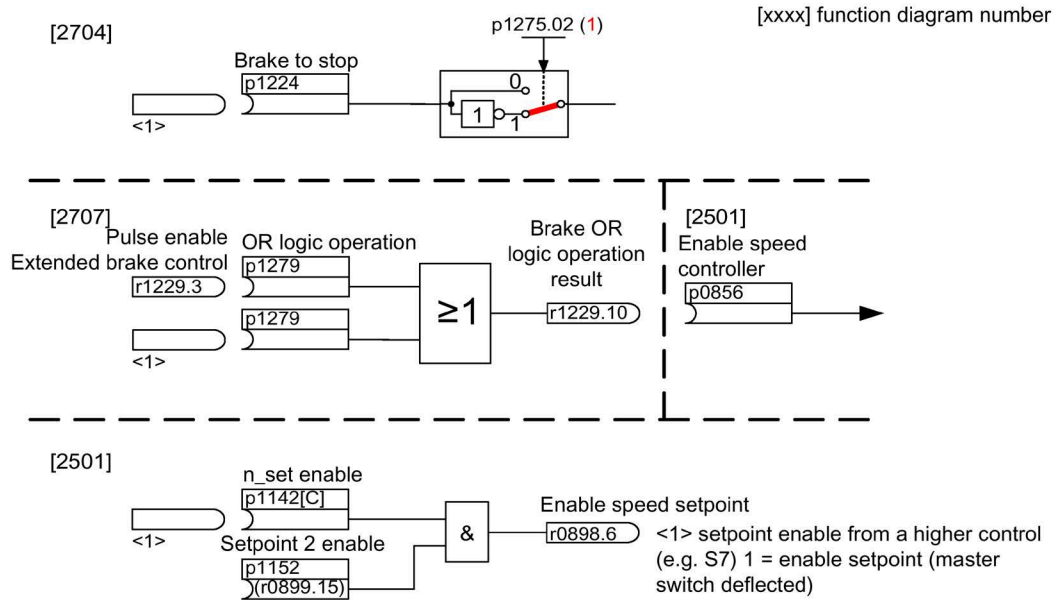


Figure 9-22 Example: Service brake on a crane drive

### Control and status messages for extended brake control

Table 9- 10 Control of extended brake control

Signal name	Binector input	Control word sequence control/ interconnection parameters
Enable speed setpoint	p1142 BI: Enable speed setpoint	STWA.6
Enable setpoint 2	p1152 BI: Setpoint 2 enable	p1152 = r0899.15
Unconditionally release holding brake	p0855 BI: Unconditionally release holding brake	STWA.7
Enable speed controller	p0856 BI: Enable speed controller	STWA.12
Unconditionally apply holding brake	p0858 BI: Unconditionally apply holding brake	STWA.14

Table 9- 11 Status message of extended brake control

Signal name	Parameter	Brake status word
Command, release brake (continuous signal)	r1229.1	B_STW.1
Pulse enable, extended brake control	r1229.3	B_STW.3
Brake does not release	r1229.4	B_STW.4
Brake does not close	r1229.5	B_STW.5
Brake threshold exceeded	r1229.6	B_STW.6
Brake threshold fallen below	r1229.7	B_STW.7
Brake monitoring time expired	r1229.8	B_STW.8
Request, pulse enable missing/n_ctrl inhibited	r1229.9	B_STW.9
Brake OR logic operation result	r1229.10	B_STW.10
Brake AND logic operation result	r1229.11	B_STW.11

### Function diagram

- FP 2704 Extended brake control – standstill detection (r0108.14 = 1)
- FP 2707 Extended brake control – release/close brake (r0108.14 = 1)
- FP 2711 Extended brake control – signal outputs (r0108.14 = 1)

### Parameter

- r0108.14 Extended brake control
- r0899 CO/BO: Status word sequence control

#### Standstill (zero-speed) monitoring

- r0060 CO: Speed setpoint before the setpoint filter
- r0063[0...2] CO: Speed actual value
- p1224[0...3] BI: Apply motor holding brake at standstill
- p1225 CI: Standstill detection threshold value
- p1226 Standstill monitoring speed threshold
- p1227 Standstill detection monitoring time
- p1228 Pulse suppression delay time
- p1276 Motor holding brake standstill detection bypass

**Release/apply brake**

- p0855 BI: Unconditionally release holding brake
- p0858 BI: Unconditionally apply holding brake
- p1216 Motor holding brake release time
- p1217 Motor holding brake closing time
- p1218[0...1] BI: Release motor holding brake
- p1219[0...3] BI: Immediately apply motor holding brake
- p1220 CI: Release motor holding brake, signal source, threshold
- p1221 Release motor holding brake, threshold
- p1277 Motor holding brake, delay, braking threshold exceeded
- p1279 BI: Motor holding brake OR/AND logic operation

**Brake monitoring functions**

- p1222 BI: Motor holding brake, feedback signal, brake closed
- p1223 BI: Motor holding brake, feedback signal, brake released

**Configuration, control/status words**

- p1215 Motor holding brake configuration
- r1229 CO/BO: Motor holding brake status word
- p1275 Motor holding brake control word
- p1278 Motor holding brake type

### 9.3.4 Extended monitoring functions

#### Description

The "extended monitoring functions" function module enables additional monitoring functions:

- Speed setpoint monitoring:  $|n\_set| \leq p2161$
- Speed setpoint monitoring:  $n\_set > 0$
- Load monitoring

#### Description of load monitoring

This function monitors power transmission between the motor and the working machine. Typical applications include V-belts, flat belts, or chains that loop around the belt pulleys or cog wheels of drive and outgoing shafts and transfer the peripheral speeds and forces. Load monitoring can be used here to identify blockages in the working machine and interruptions to the power transmission.

For load monitoring, the current speed/torque curve is compared with the programmed speed/torque curve (p2182 to p2190). If the current value is outside the programmed tolerance bandwidth, a fault or alarm is triggered depending on parameter p2181. The fault or alarm message can be delayed by means of parameter p2192 to prevent false alarms caused by brief transitional states.

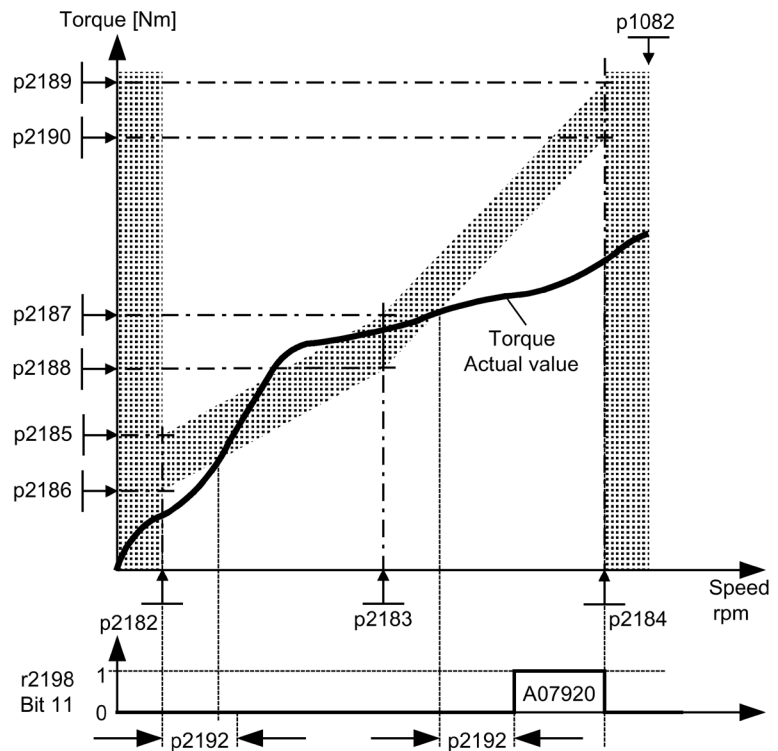


Figure 9-23 Load monitoring (p2181 =1)

## Commissioning

The "extended monitoring functions" function module can be activated by running the commissioning wizard. Parameter r0108.17 indicates whether it has been activated.

## Function diagram

FD 8010	Speed messages 1
FP 8011	Speed messages 2
FD 8013	Load monitoring

## Parameters

- p2150 Hysteresis speed 3
- p2151 Cl: Speed setpoint for messages
- p2161 Speed threshold 3
- p2181 Load monitoring, response
- p2182 Load monitoring, speed threshold 1
- p2183 Load monitoring, speed threshold 2
- p2184 Load monitoring, speed threshold 3
- p2185 Load monitoring, speed threshold 1 upper
- ...
- p2190 Load monitoring, speed threshold 3 lower
- p2192 Load monitoring, delay time
- r2198.4  $|n\_set| \leq p2161$
- r2198.5  $n\_set > 0$
- r2198.11 Load monitoring displays alarm
- r2198.12 Load monitoring displays fault

### 9.3.5 Moment of inertia estimator

#### Background

From the load moment of inertia and the speed setpoint change, the converter calculates the accelerating torque required for the motor. Via the speed controller precontrol, the accelerating torque specifies the main percentage of the torque setpoint. The speed controller corrects inaccuracies in the precontrol (feed-forward control).

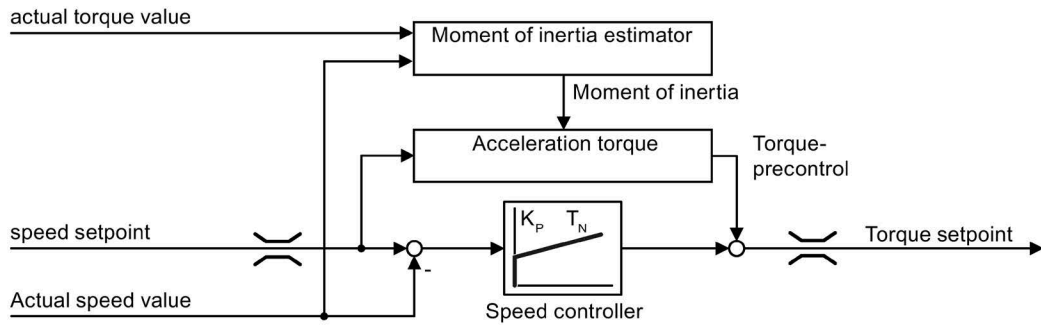


Figure 9-24 Influence of the moment of inertia estimator on the speed control

The more precise the value of the moment of inertia in the converter, the lower the overshoot after speed changes.



Figure 9-25 Influence of the moment of inertia estimator on the speed

#### Function

From the actual speed, the actual motor torque and the frictional torque of the load, the converter calculates the total moment of inertia of the load and motor.

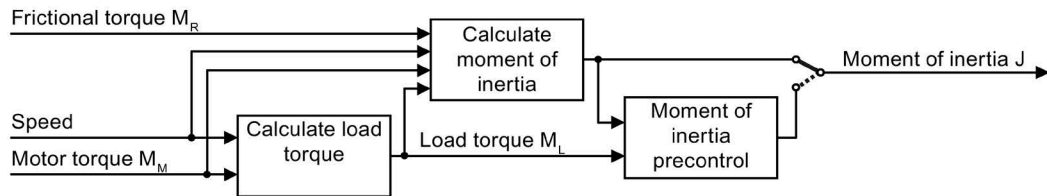


Figure 9-26 Overview of the function of the moment of inertia estimator



### Calculating the load torque

The load torque must first be determined to determine the moment of inertia.

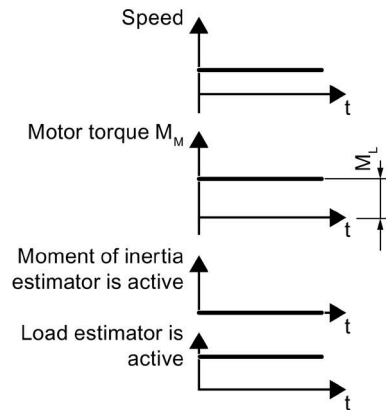


Figure 9-27 Calculating the load torque

Phases with constant speed not equal to zero are required to determine the load torque (e.g. friction force).

For small speed changes, the converter calculates the load torque  $M_L$  from the actual motor torque.

The following conditions must be satisfied to do this:

- Speed  $\geq p1226$
- Acceleration setpoint  $< 8 \text{ 1/s}^2$
- Acceleration x moment of inertia (r1493)  $< 0.9 \times p1560$

Once the load torque is specified, the moment of inertia in the acceleration or deceleration phase can be determined. If the source of p1502 has a 1 signal, the moment of inertia is not estimated.

The accuracy of the moment of inertia estimation increases as the acceleration rate increases. The start value of the moment of inertia estimator is the parameterized moment of inertia ( $J = p0341 \times p0342 + p1498$ ).

### Calculating the moment of inertia

For larger changes, the converter initially calculates the accelerating torque  $M_B$  as difference between the motor torque  $M_M$ , load torque  $M_L$  and frictional torque  $M_R$ :

$$M_B = M_M - M_L - M_R$$

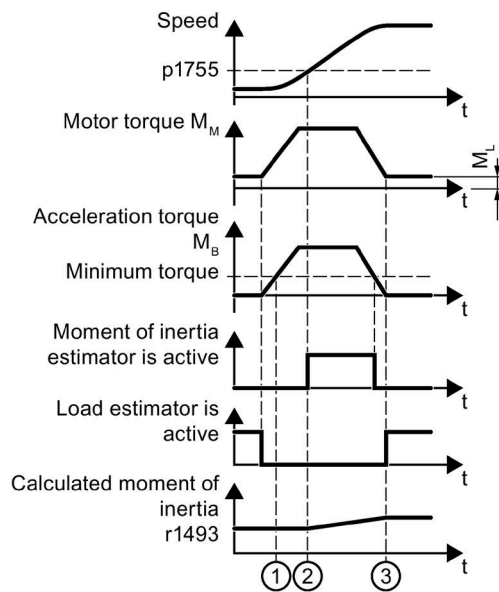


Figure 9-28 Calculating the moment of inertia

The moment of inertia  $J$  of the motor and load is then obtained from the accelerating torque  $M_B$  and the angular acceleration  $\alpha$

$$J = M_B / \alpha$$

The following conditions must be fulfilled for this calculation:

- ① The rated acceleration torque  $M_B$  must satisfy the following two conditions:
  - $M_B$  must be greater than  $p1560 \times r0333$  (rated motor torque).
  - $M_B$  must be greater than 80% of the friction torque ( $0.4 \times (p1563 - p1564)$ ).
- ② For operation without encoder, the speed must be  $> p1755$  (in closed-loop controlled operation).
- ③ The converter calculates the load torque again after acceleration.

If the load estimation has taken place and the moment of inertia does not settle (stabilize) ( $r1407.24/26 = 0$ ), then increasing the acceleration ( $p2572/p2573$ ) is recommended.

If the load moment of inertia is significantly greater than the motor moment of inertia, then the transient event can also be improved via parameterization of the load moment of inertia ( $p1498$ ).

### Moment of inertia precontrol

In applications where the motor predominantly operates with a constant speed, the converter can only infrequently calculate the moment of inertia using the function described above. Moment of inertia precontrol is available for situations such as these. The moment of inertia precontrol assumes that there is an approximately linear relationship between the moment of inertia and the load torque.

You can configure the moment of inertia precontrol via  $p5310$ .

- Using bit 0, you can activate the calculation of the characteristic ( $p5312 \dots p5315$ ).
- Using bit 1, you can activate the moment of inertia precontrol.

The following bit combinations are possible:

p5310.0 = 0, p5310.1 = 0	Moment of inertia precontrol not active
p5310.0 = 0, p5310.1 = 1	Cyclic calculation of the coefficients without moment of inertia precontrol (commissioning)
p5310.0 = 1, p5310.1 = 0	Moment of inertia precontrol activated (without cyclic calculation of the coefficients)
p5310.0 = 1, p5310.1 = 1	Moment of inertia precontrol activated (with cyclic calculation of the coefficients)

The status word of the moment of inertia precontrol is indicated in r5311.

### Example

For a horizontal conveyor, in a first approximation, the moment of inertia depends on the load.

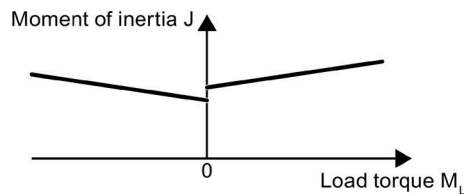


Figure 9-29 Relationship between moment of inertia J and load torque  $M_L$

The relationship between load torque and torque is saved in the converter as linear characteristic.

- In positive direction of rotation:  
Moment of inertia  $J = p5312 \times \text{load torque } M_L + p5313$
- In negative direction of rotation:  
Moment of inertia  $J = p5314 \times \text{load torque } M_L + p5315$

You have the following options to determine the characteristic:

- You already know the characteristic from other measurements. In this case, you must set the parameters to known values when commissioning the system.
- The converter iteratively determines the characteristic by performing measurements while the motor is operational.

### Additional supplementary functions

- Accelerated moment of inertia estimation (p1400.24 = 1)  
Using this setting, when the drive accelerates steadily, the moment of inertia can be more quickly estimated.
- Speed controller adaptation (p5271.2 = 1)  
The estimated load moment of inertia is taken into account for the speed controller gain.

## Commissioning

The "inertia estimator" function module can be activated by running the commissioning wizard. Parameter r0108.10 indicates whether the function module has been activated.

### Activating the moment of inertia estimator

The moment of inertia estimator is deactivated in the factory setting.  $p1400.18 = 0$ ,  $p1400.20 = 0$ ,  $p1400.22 = 0$ .

If you performed the rotating measurement for the motor identification during commissioning, we recommend leaving the moment of inertia estimator deactivated.

#### Preconditions

- You have selected sensorless vector control.
- The load torque must be constant whilst the motor accelerates or brakes.  
Typical of a constant load torque are conveyor applications and centrifuges, for example. Fan applications, for example, are not permitted.
- The speed setpoint is free from superimposed unwanted signals.
- The motor and load are connected to each other with an interference fit.  
Drives with slip between the motor shaft and load are not permitted, e.g. as a result of loose or worn drive belts.

If the conditions are not met, you must not activate the moment of inertia estimator.

#### Procedure

To activate the moment of inertia estimator, proceed as follows:

1. Set  $p1400.18 = 1$
2. Check:  $p1496 \neq 0$
3. Activate the acceleration model of the speed controller pre-control:  $p1400.20 = 1$ .

With  $p1400.22 = 1$ , the valued determined by the moment of inertia estimator is retained at a pulse inhibit.

With  $p1400.24 = 1$ , the moment of inertia can be determined in an accelerated manner for steady acceleration processes.

## Function diagram

FP 6035 Moment of inertia estimator (r0108.10 = 1)

## Parameters

- r0108 Drive objects function module
- r0333 Rated motor torque
- p0341 motor moment of inertia
- p0342 Ratio between the total and motor moment of inertia
- p1226 Speed threshold for standstill detection
- p1400 Speed control configuration
- p1402 Current control and motor model configuration
- r1407 CO/BO: Status word, speed controller
- r1493 CO: Moment of inertia total
- p1496 Acceleration precontrol scaling
- p1497 CI: Moment of inertia scaling
- p1498 Load moment of inertia
- p1502 BI: Freezing the moment of inertia estimator
- r1518 CO: Acceleration torque
- r1538 CO: Upper effective torque limit
- r1539 CO: Lower effective torque limit
- p1560 Moment of inertia estimator acceleration threshold value
- p1561 Moment of inertia estimator change time moment of inertia
- p1562 Moment of inertia estimator change time load
- p1563 CO: Moment of inertia estimator load torque positive direction of rotation
- p1564 CO: Moment of inertia estimator load torque negative direction of rotation
- p1755 Motor model changeover speed encoderless operation
- p5310 Moment of inertia precontrol configuration
- r5311 Moment of inertia precontrol status word
- p5312 Moment of inertia precontrol linear positive
- p5313 Moment of inertia precontrol constant positive
- p5314 Moment of inertia precontrol linear negative
- p5315 Moment of inertia precontrol constant negative
- p5316 Moment of inertia precontrol change time moment of inertia

## 9.4 Monitoring and protective functions

### 9.4.1 Protecting power components

#### Description

SINAMICS power modules offer comprehensive protection of power components.

Table 9- 12 General protection for power units

Protection against:	Protective measure	Response
Overcurrent <sup>1)</sup>	Monitoring with two thresholds: <ul style="list-style-type: none"> <li>• First threshold exceeded</li> </ul>	A30031, A30032, A30033 Current limiting in phase U has responded. Pulsing in this phase is inhibited for one pulse period. F30017 -> OFF2 is triggered if the threshold is exceeded too often.
	<ul style="list-style-type: none"> <li>• Second threshold exceeded</li> </ul>	F30001 "Overcurrent" -> OFF2
DC link overvoltage <sup>1)</sup>	Comparison of DC link voltage with hardware shutdown threshold	F30002 "Overvoltage" -> OFF2
DC link undervoltage <sup>1)</sup>	Comparison of DC link voltage with hardware shutdown threshold	F30003 "Undervoltage" -> OFF2
Short-circuit <sup>1)</sup>	Second monitoring threshold checked for overcurrent	F30001 "Overcurrent" -> OFF2
	Uce monitoring for IGBT module	F30022 "Monitoring Uce" -> OFF2
Ground fault	Monitoring the sum of all phase currents	After threshold in p0287 is exceeded: F30021 "power unit: Ground fault" -> OFF2 Note: The sum of all phase currents is displayed in r0069[6]. For operation, the value in p0287[1] must be greater than the sum of the phase currents when the insulation is intact.
Line phase-failure detection <sup>1)</sup>		F30011 "Line phase-failure in main circuit" -> OFF2

<sup>1)</sup> The monitoring thresholds are permanently set in the converter and cannot be changed by the user.

## 9.4.2 Thermal monitoring and overload responses

### Description

The thermal power unit monitor is responsible for identifying critical situations. Possible reactions can be assigned and used when alarm thresholds are exceeded to enable continued operation (e.g., with reduced power) and prevent immediate shutdown. The parameterization options, however, only enable intervention below the shutdown thresholds, which cannot be changed by the user.

The following thermal monitoring options are available:

- **i<sup>2</sup>t monitoring – A07805 – F30005**  
i<sup>2</sup>t monitoring is used to protect components that have a high thermal time constant compared with semiconductors. Overload with regard to i<sup>2</sup>t is present when the converter load (r0036) is greater than 100 % (load as a % of rated operation).
- **Heat sink temperature - A05000 - F30004**  
Used to monitor the temperature r0037[0] of the heat sinks on the power semiconductors (IGBT).
- **Chip temperature - A05001 - F30025**  
Significant temperature differences can occur between the barrier layer of the IGBT and the heat sink. The calculated barrier junction temperature is displayed in r0037[13...18]; the monitoring ensures that the specified maximum barrier junction temperature is not exceeded.

If an overload occurs with respect to any of these three monitoring functions, an alarm is first output. The alarm threshold p0294 (i<sup>2</sup>t monitoring) can be parameterized relative to the shutdown (trip) values.

### Overload responses

To reduce thermal stress and thus losses in the power unit, the following methods and overload responses are available.

- **Reducing the pulse frequency**

Reducing the pulse frequency is an effective procedure for reducing losses in the power unit. This is due to the fact that the switching losses make up a very large portion of the total losses. In many applications, a temporary reduction in pulse frequency is tolerable.

Disadvantage:

Reducing the pulse frequency increases the current ripple. At a small moment of inertia, this may cause an increase in the torque ripple on the motor shaft and a noise level increase. We recommend using the overload response with pulse frequency reduction for applications that are not critical from a control-related perspective (e.g. for pump and fan drives).

---

**Note**

This procedure can be used only if the power unit is clocked with a pulse frequency greater than the minimum pulse frequency and a reduction of the pulse frequency is permissible.

---

- **Reducing the output current**

We recommend this procedure if a pulse frequency reduction is not desired or permissible (e.g. if the pulse frequency has already been set to the lowest level).

Disadvantage:

This procedure makes sense exclusively for drives that must tolerate a rotational speed deviation and must not be operated at a constant torque.

**Responses**

The Control Unit sets the desired responses using p0290. Using this parameter, the described procedures can be used in various combinations in order to reduce the thermal stress.

The following responses are possible depending on the selected procedure:

- **No reduction (p0290 = 1)**

Select this option if neither reducing the pulse frequency or reducing the output current (= output frequency) can be considered suitable procedures. In this case, the converter does not change its operating point once an alarm threshold has been overshoot, which means that the drive can be operated until it reaches its shutdown values.

When the trip threshold is reached, the converter switches off and outputs one of the following faults.

- F30004 (power unit: temperature rise for inverter heat sink)
- F30005 (power unit: overload I<sup>2</sup>t) check, was skipped
- F30025 (power unit: chip temperature rise)

The time until shutdown is not defined and depends on the degree of overload. We recommend the set value p0290 = 1 for applications that, based on the process, do not allow set value deviations for individual drives in the group or for which the pulse frequency must absolutely be adhered to.

- **Reducing the output current (p0290 = 0)**

For the set value "0" the following applies:

When a temperature alarm threshold or I<sup>2</sup>t alarm threshold is exceeded, the output frequency (= output frequency) is reduced. If the reduction of the output current is not sufficient for eliminating the thermal stress on the power unit, the drive switches off when the corresponding fault threshold is reached.

---

**Note**

This setting is not suitable for drives requiring a constant torque.

---



- **Reducing the pulse frequency (p0290 = 3, 13)**

This procedure is suitable for the following applications:

- The drive is frequently started and accelerated.
- The drive has a heavily fluctuating torque profile. Reducing the output current is not desired.
- The drive is operated at a low dynamic response and occasional overload. A rotational speed deviation is not allowed.

For the set value "3" the following applies:

When a temperature alarm threshold is exceeded, the pulse frequency is reduced to a permissible minimum.

For the set value "13" the following applies:

In this case, the chip temperature is evaluated based on the load at the current time. If this temperature exceeds the alarm threshold, the pulse frequency is reduced to a permissible minimum. Unlike the set value "3", the pulse frequency is reduced based on the chip temperature evaluation before the temperature alarm threshold has even been reached.

- **Reducing the pulse frequency and the output current (p0290 = 2, 12)**

This procedure is suitable for the following applications:

- The drive is frequently started and accelerated.
- The drive has a heavily fluctuating torque profile.

For the set value "2" the following applies:

When a temperature alarm threshold is exceeded, the pulse frequency is reduced to a permissible minimum. If the pulse frequency reduction is not sufficient for eliminating the thermal stress on the power unit, then the output current is also reduced. When the I<sup>2</sup>t alarm threshold is reached, only the output current is reduced while the pulse frequency remains at the set value.

For the set value "12" the following applies:

In this case, the chip temperature is evaluated based on the load at the current time. If this temperature exceeds the alarm threshold, the pulse frequency is reduced to a permissible minimum. Unlike the set value "2", the pulse frequency is reduced based on the chip temperature evaluation before the temperature alarm threshold has even been reached. The output current is reduced if, in addition to the chip temperature, also the alarm thresholds of the heat sink temperature and the I<sup>2</sup>t monitoring are exceeded.

## Function diagram

FP 8021      Thermal monitoring, power unit

Parameter

- r0036 CO: Power unit overload I2t
- r0037 CO: Power unit temperatures
- p0290 Power unit overload response
- r0293 CO: Power unit alarm threshold model temperature
- p0294 Power unit alarm I2t overload
- r2135.13 Fault thermal overload power unit
- r2135.15 Alarm, thermal overload power unit

9.4.3 Block protection

Description

The "Motor blocked" fault is only triggered when the speed of the drive is below the adjustable speed threshold in p2175.

- For vector control, then the speed controller must also be at its limit.
- For U/f control, then the current limit must also be reached.

Once the on delay (p2177) has elapsed, the message "Motor blocked" and fault F07900 are generated.

The blocking monitoring enable can be deactivated via p2144.

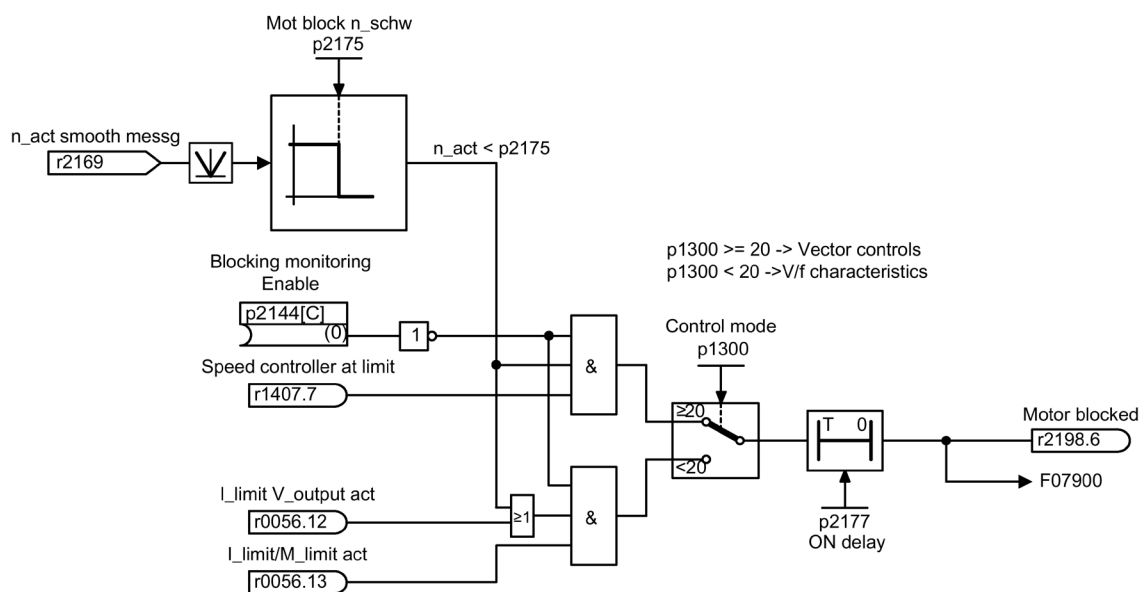


Figure 9-30 Blocking protection

## Function diagram

FP 8012 Signals and monitoring functions - torque messages, motor locked/stalled

## Parameter

- p2144 BI: Motor stall monitoring enable (negated)
- p2175 Motor locked speed threshold
- p2177 Motor locked delay time

### 9.4.4 Stall protection (only for vector control)

#### Description

If, for closed-loop speed control with encoder, the speed threshold set in p1744 for stall detection is exceeded, then r1408.11 (speed adaptation, speed deviation) is set.

If the fault threshold value set in p1745 is exceeded when in the low speed range (less than  $p1755 \times (100\% - p1756)$ ), r1408.12 (motor stalled) is set.

If one of these two signals is set, then after the delay time in p2178, fault F07902 (motor stalled) is returned.

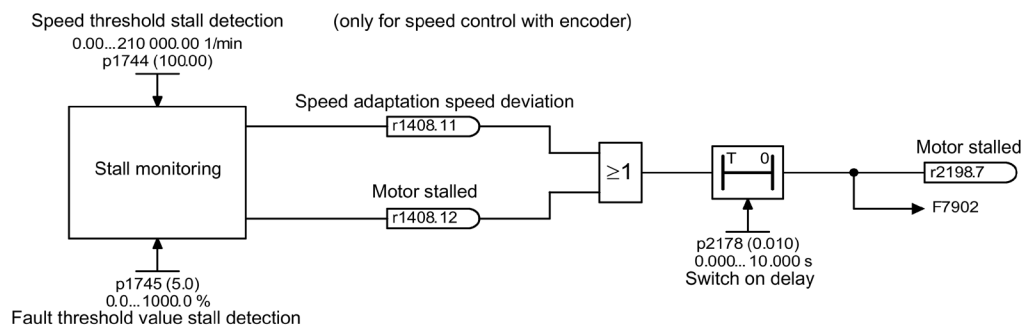


Figure 9-31 Stall protection

## Function diagram

FP 6730 Vector control - Interface to Motor Module (ASM, p0300 = 1)  
 FP 8012 Messages and monitoring - Torque messages, motor blocked/stalled

## Parameter

- r1408 CO/BO: Control status word, current controller
- p1744 Motor model speed threshold stall detection
- p1745 Motor model error threshold stall detection
- p1755 Motor model changeover speed encoderless operation
- p1756 Motor model changeover speed hysteresis encoderless operation
- p2178 Motor stalled delay time

## 9.4.5 Thermal motor protection

### 9.4.5.1 Description

#### Description

The priority of thermal motor protection is to identify critical situations. Possible reactions can be assigned (p0610) and used when alarm thresholds are exceeded to enable continued operation (e.g., with reduced power) and prevent immediate shutdown.

- Effective protection is also possible without a temperature sensor (p0600 = 0 or p4100 = 0). The temperatures of different motor components (stators, core, rotors) can be determined indirectly using a temperature model.
- Connecting temperature sensors allows the motor temperature to be determined directly. In this way, accurate start temperatures are available immediately when the motor is switched on again or after a power failure.

### 9.4.5.2 Temperature sensor connection to customer terminal module TM31 (option G60)

#### Temperature measurement via KTY

The device is connected to terminals X522:7 (Temp+) and X522:8 (Temp-) on the customer terminal block (TM31) in the forward direction of the diode. The measured temperature is limited to between  $-140\text{ °C}$  up to  $+188.6\text{ °C}$  and is available for further evaluation.

- Activating the motor temperature measurement via the external sensor: p0600 = 10  
If the customer terminal block TM31 (option G60) is available and after commissioning has been completed, the source for the external sensor is set to the customer terminal block (p0603 = {TM31} r4105).
- Set the KTY temperature sensor type: p4100 = 2.

### Temperature measurement via PTC

The connection is made to user terminal block (TM31) at terminal X522:7/8. The threshold for changing over to an alarm or fault is 1650  $\Omega$ . If the threshold is exceeded, the system switches internally from an artificially-generated temperature value of -50° C to +250° C and makes it available for further evaluation:

- Activating the motor temperature measurement via the external sensor: p0600 = 10  
If the customer terminal block TM31 (option G60) is available and after commissioning has been completed, the source for the external sensor is set to the customer terminal block (p0603 = {TM31} r4105).
- Set the PTC temperature sensor type: p4100 = 1.

### Temperature measurement via PT1000

The connection is made to user terminal block (TM31) at terminal X522:7/8. The measured temperature is limited to between -99 °C up to +188.6 °C and is available for further processing.

- Activating the motor temperature measurement via the external sensor: p0600 = 10  
If the customer terminal block TM31 (option G60) is available and after commissioning has been completed, the source for the external sensor is set to the customer terminal block (p0603 = {TM31} r4105).
- Set the PT1000 temperature sensor type: p4100 = 6.

#### 9.4.5.3 Temperature sensor connection at a Sensor Module (option K50)

### Temperature measurement via KTY

The device is connected to the appropriate terminals Temp- and Temp+ on the Sensor Module in the forward direction of the diode (see corresponding section in chapter "Electrical installation").

- Activate motor temperature measurement via encoder 1: p0600 = 1.
- Set the KTY temperature sensor type: p0601 = 2.

### Temperature measurement via PTC

The device is connected to the appropriate terminals Temp- and Temp+ on the Sensor Module (see corresponding section in chapter "Electrical installation"). The threshold for changing over to an alarm or fault is 1650  $\Omega$ .

- Activate motor temperature measurement via encoder 1: p0600 = 1.
- Set the PTC temperature sensor type: p0601 = 1.

#### Temperature measurement via PT1000

The device is connected to the appropriate terminals Temp- and Temp+ on the Sensor Module (see corresponding section in chapter "Electrical installation").

- Activate motor temperature measurement via encoder 1: p0600 = 1.
- Set the PTC temperature sensor type: p0601 = 6.

#### 9.4.5.4 Temperature sensor connection directly to the Control Interface Module

##### Temperature measurement via KTY

The device is connected to terminals X41:3 (Temp-) and X41:4 (Temp+) on the Control Interface Module in the forward direction of the diode.

- Activate motor temperature measurement via Motor Module: p0600 = 11.
- Set the KTY temperature sensor type: p0601 = 2.

##### Temperature measurement via PTC

The connection is made at the terminals X41:3 (Temp-) and X41:4 (Temp+) at the Control Interface Module. The threshold for changing over to an alarm or fault is 1650  $\Omega$ .

- Activate motor temperature measurement via Motor Module: p0600 = 11.
- Set the PTC temperature sensor type: p0601 = 1.

##### Temperature measurement using the bimetal normally closed contact

The connection is made at the terminals X41:3 (Temp-) and X41:4 (Temp+) at the Control Interface Module. The threshold for changing over to an alarm or fault is 100  $\Omega$ .

- Activate motor temperature measurement via Motor Module: p0600 = 11.
- Set the temperature sensor type bimetal normally closed contact: p0601 = 4.

##### Temperature measurement via PT100

The connection is made at the terminals X41:3 (Temp-) and X41:4 (Temp+) at the Control Interface Module. p0624 can be used to set the temperature offset for the PT100 measured value.

- Activate motor temperature measurement via Motor Module: p0600 = 11.
- Set the PT100 temperature sensor type: p0601 = 5.

### Temperature measurement via PT1000

The connection is made at the terminals X41:3 (Temp-) and X41:4 (Temp+) at the Control Interface Module.

- Activate motor temperature measurement via Motor Module: p0600 = 11:
- Set the PT1000 temperature sensor type: p0601 = 6.

### Sensor connection to units connected in parallel

In the case of units connected in parallel, the number of the power unit to which the temperature sensor is connected must be specified in p0602.

#### 9.4.5.5 Temperature sensor evaluation

### Temperature measurement via KTY, PT100 or PT1000

- When the alarm threshold is reached (set via p0604; delivery state after commissioning 120 °C), alarm A07910 is triggered.

Parameter p0610 can be used to set how the drive responds to the alarm triggered:

- 0: No response, only alarm, no reduction of I<sub>max</sub>
  - 1: Alarm and reduction of I<sub>max</sub> and fault (F07011)
  - 2: Alarm and fault (F07011), no reduction of I<sub>max</sub>
  - 12: Alarm and fault (F07011), no reduction of I<sub>max</sub>, temperature saved
- When the fault threshold is reached (set via p0605, delivery state after commissioning 155 °C), fault F07011 is triggered in conjunction with the setting in p0610.

### Temperature measurement via PTC or bimetallic normally closed contact

- Once the PTC or the bimetallic normally closed contact responds, alarm A07910 is initiated.
- Fault F07011 is triggered once the waiting time defined in p0606 has elapsed.

### Sensor monitoring for wire breakage/short-circuit

- A sensor monitoring function for a short-circuit in the sensor cable is possible for a PTC and a PT1000 or KTY84 sensor. For a PT1000 or KTY84 sensor, it is possible to monitor for wire breakage:  
If the temperature of the motor temperature monitor is outside the range -140 to +250 °C, then the sensor cable is broken or has a short-circuit – and Alarm A07015 "Motor temperature sensor alarm" is triggered. Fault F07016 ("Drive: Motor temperature sensor fault") is triggered once the waiting time defined in p0607 has elapsed.
- Fault F07016 can be suppressed using p0607 = 0. If an induction motor is connected, the drive continues operating with the data calculated in the thermal motor model.
- If the system detects that the motor temperature sensor set in p0600 is not connected, alarm A07820 "Temperature sensor not connected" is triggered.

#### 9.4.5.6 Thermal motor models

Thermal motor models are used so that thermal motor protection is guaranteed even without a temperature sensor or with a deactivated temperature sensor (p0600 = 0).

The simultaneous use of temperature sensors and a thermal motor model also makes sense. For example, a very fast temperature increase that is not detected by the sensors in sufficient time can potentially damage a motor. This situation can occur for motors with a low thermal capacity.

Depending on the particular model, the temperature rise is either assigned different motor parts (stator, rotor), or is calculated from the motor current and the thermal time constant. A combination of motor temperature model with additional temperature sensors can also be deployed.

#### NOTICE

##### Material damage caused by overheating for motor operation without sensor

A thermal motor model cannot fully replace a sensor. The thermal model cannot protect the motor if incorrectly installed, for increased ambient temperatures or if errors were made in the parameter settings. Without temperature sensors, thermal motor models are not in a position to identify or take into account the ambient temperatures or the initial motor temperature. This can cause motor overheating and so material damage.

- Do not deploy thermal motor models when a higher environment temperature or a higher initial temperature of the motor can occur.



### **Thermal motor model 1 (for permanent-magnet synchronous machines)**

By deploying the thermal I2t motor model, the temperature rise of the motor windings as a result of dynamic motor loads is also determined in addition to data acquired using a temperature sensor.

The model motor temperature is indicated in r0632. It is calculated from the following values:

- Absolute value of the actual current, unsmoothed (r0068[0])
- Motor stall current (p0318)
- I2t motor model thermal time constant (p0611)
- Measured motor temperature (r0035) or motor ambient temperature (p0613, p0625) for operation without temperature sensor
- Motor temperature at rated load (p0605, for expansion p0627)

#### **Commissioning the motor model**

The thermal I2t motor model is activated via p0612.0 = 1, the expansions of the motor model can additionally be activated via p0612.8 = 1.

---

#### **Note**

When commissioning the motor, thermal motor model 1 (p0612.0 = 1) including expansion (p0612.8 = 1) is automatically activated.

Preconditions for automatic activation:

- Use of a permanent magnet synchronous motor
  - There is no motor sensor
  - No (other) thermal motor model is activated
-

### Important settings

The most important parameters for thermal motor model 1 and/or for the expansion of this model are subsequently explained.

When the expansion is subsequently activated, the corresponding parameters of the expansion are preassigned with the parameter values before activating the expansion.

Parameters for the following settings		Explanation
p0612.8 = 0	p0612.8 = 1	
p0605	p5390	Alarm threshold If the model motor temperature (r0632) exceeds the alarm threshold, alarm A07012 "Drive: Motor temperature model 1/3 overtemperature" is output.
p0615	p5391	Fault threshold If the model motor temperature (r0632) exceeds the fault threshold, fault F07011 "Drive: Motor overtemperature" is output.
p0605	p0627 + 40 °C	Rated temperature (winding) Defines the rated overtemperature of the stator winding referred to the ambient temperature.
1.333 (fixed value)	p5350	Boost factor Defines the boost factor for the copper losses at standstill.
p0612 = 0x1	p0612 = 0x101	Activation Activates the motor module and/or additionally the expansion.
r0632	r0632	Actual temperature Indicates the stator winding temperature of the motor temperature model.
r0034	r0034	Motor utilization Indicates the actual motor utilization level.

### Taking into account the ambient temperature

If, for thermal motor model 1, a temperature sensor has not been parameterized, then motor module 1 automatically uses an ambient temperature of 20 °C for the calculation. You can enter one of these ambient temperatures deviating from the standard temperature as follows:

1. Activate the setting p0612.12 = 1.  
This enables parameter p0613. The factory setting is 20 °C.
2. If you wish to take into account an ambient temperature, which deviates from the factory setting, in the motor model, then enter the expected ambient temperature in p0613.

---

### Note

When commissioning the motor, the setting p0612.12 = 1 is automatically activated. When required, the value in p0613 can be changed.

---

## Thermal motor model 2 (for induction motors)

Thermal motor model 2 is used for induction motors. It is a thermal 3-mass model.

This makes thermal motor protection possible even for operation without temperature sensor or with the temperature sensor deactivated ( $p0600 = 0$ ).

### Commissioning the motor model

The thermal 3-mass model is activated with  $p0612.1 = 1$ . An expansion makes the motor model more precise; this can be additionally activated using  $p0612.9 = 1$ .

---

#### Note

When commissioning the motor, the expansion of thermal motor model ( $p0612.9 = 1$ ) is automatically activated.

---

### Motor model settings

The total motor mass is entered in  $p0344$ .

The 3-mass model splits up the total motor mass as follows:

- $p0617$  = thermally active iron mass (stator): laminated cores and frame as a percentage of  $p0344$
- $p0618$  = thermally active copper mass (stator: windings) as a percentage of  $p0344$
- $p0619$  = thermally active rotor mass (rotor) as a percentage of  $p0344$

Entering the temperatures:

- $p0625$  = ambient temperature
- $p0626$  = overtemperature, stator iron
- $p0627$  = overtemperature, stator winding
- $p0628$  = rotor winding temperature rise

The motor temperatures are calculated on the basis of motor measured values. The calculated temperatures are indicated in the following parameters:

- $r0630$  Motor temperature model ambient temperature
- $r0631$  Motor temperature model stator iron temperature
- $r0632$  Motor temperature model stator winding temperature
- $r0633$  Motor temperature model rotor temperature

In operation with a KTY or PT1000 sensor, the calculated temperature value of the 3-mass model is continuously corrected to track the measured temperature value. After the temperature sensor is switched off ( $p0600 = 0$  or  $p0601 = 0$ ), the last temperature value continues to be used as basis for the calculation.

### 9.4.5.7 Function diagram

FP 8016	Thermal motor monitoring, mot_temp ZSW F/A
FP 8017	Motor temperature model 1 (I2t)
FP 8018	Motor temperature model 2
FP 9576	TM31 - temperature evaluation (KTY/PTC)

### 9.4.5.8 Parameters

#### Temperature sensor evaluation

- r0035 CO: Motor temperature
- p0600 Motor temperature sensor for monitoring
- p0601 Motor temperature sensor type
- p0603 Motor temperature signal source
- p0604 Motor overtemperature fault threshold
- p0605 Motor overtemperature fault threshold
- p0606 Motor overtemperature timer
- p0607 Temperature sensor fault timer
- p0610 Motor overtemperature response
- p0614 Thermal resistance adaptation reduction factor
- p0624 Motor temperature offset PT100
- p4100 TM31 temperature evaluation sensor type
- r4105 CO: TM31 temperature evaluation actual value

#### Thermal motor model 1 (for permanent-magnet synchronous machines)

- r0034 CO: Motor utilization
- r0068[0] CO: Absolute value of actual current, unsmoothed
- p0318 Motor stall current
- p0605 Motor overtemperature fault threshold
- p0610 Motor overtemperature response
- p0611 I2t motor model thermal time constant
- p0612 Thermal motor model configuration
- p0613 Mot\_temp\_mod 1/3 ambient temperature
- p0615 I2t motor model fault threshold
- p0625 Motor ambient temperature
- p0627 Motor overtemperature, stator winding
- p0632 Mot\_temp\_mod stator winding temperature

- p5350 Mot\_temp\_mod 1/3 zero speed boost factor
- p5390 Mot\_temp\_mod 1/3 alarm threshold
- p5391 Mot\_temp\_mod 1/3 fault threshold

#### Thermal motor model 2 (for induction motors)

- p0344 Motor weight
- p0612 Thermal motor model configuration
- p0617 Stator thermally relevant iron component
- p0618 Stator thermally relevant copper component
- p0619 Rotor thermally relevant mass
- p0625 Motor ambient temperature
- p0626 Motor overtemperature, stator iron
- p0627 Motor overtemperature, stator winding
- p0628 Motor overtemperature, rotor winding
- r0630 Mot\_temp\_mod ambient temperature
- r0631 Mot\_temp\_mod stator iron temperature
- r0632 Mot\_temp\_mod stator winding temperature
- r0633 Mot\_temp\_mod rotor temperature

## 9.4.6 Temperature measurement via TM150 (option G51)

### 9.4.6.1 Description

Terminal Module 150 (TM150) has 6x 4-pole terminals for temperature sensors. Temperature sensors can be connected in a 1x2, 1x3 or 1x4-wire system. In a 2x2-wire system, up to 12 input channels can be evaluated. 12 input channels can be evaluated in the factory setting. The temperature channels can be combined into three groups and evaluated together.

PTC, KTY84, bimetallic NC contact, PT100 and PT1000 temperature sensors can be connected and evaluated. The fault and/or alarm thresholds of the temperature values can be set from -99° C up to 251° C.

The temperature sensors are connected at terminal blocks X531 to X536 according to the following table.

The TM150 temperature inputs are not electrically isolated.

### Selecting the sensor types

- p4100[0...11] sets the sensor type for the respective temperature channel.
- r4105[0...11] indicates the actual value of the temperature channel.

For switching temperature sensors, such as e.g. PTC and bimetallic NC contact, symbolically two limit values are displayed:

- r4105[0...11] = -50 °C: The actual temperature value is below the rated response temperature.
- r4105[0...11] = +250 °C: The actual temperature value is above the rated response temperature.

---

**Note**

**PTC and bimetallic NC contact**

What is shown in r4105[0...11] does not correspond to the actual temperature value.

---

Table 9- 13 Selecting the sensor types

Value of p4100[0...11]	Temperature sensor	Temperature display range r4105[0...11]
0	Evaluation disabled	-
1	PTC thermistor	-50° C or +250° C
2	KTY84	-99° C to +250° C
4	Bimetallic NC contact	-50° C or +250° C
5	PT100	-99° C to +250° C
6	PT1000	-99° C to +250° C

### Measuring the cable resistances

When using 2-wire sensors (1x2, 2x2 wire systems), to increase the measuring accuracy, the cable resistance can be measured and saved.

Procedure for determining the cable resistance:

1. Select the measuring method (1x2/2x2) for the corresponding terminal block (p4108[0...5] = 0, 1).
2. Set the required sensor type for the relevant channel (p4100[x] = 1 ... 6, x = 0...5 or 0...11).
3. Bypass/jumper the sensor to be connected (short-circuit the sensor cable close to the sensor).
4. Connect the sensor cables to the relevant terminals 1(+), 2(-) or 3(+), 4(-).
5. For the corresponding channel, start measurement of the cable resistance (p4109[x] = 1).
6. After p4109[x] = 0, check the measured resistance value in p4110[x].
7. Remove the jumper across the temperature sensor.

The measured cable resistance is then taken into account when evaluating the temperature. The cable resistance value is saved in p4110[0...11].

---

**Note****Cable resistance**

The value for the cable resistance can also be directly entered into p4110[0...11].

---

**Line filter**

A line filter is available to suppress radiated noise. Using p4121, the filter can be set to a 50 Hz or 60 Hz rated line frequency.

**9.4.6.2 Measurement with up to 6 channels****Temperature measurement with a sensor in 2-wire technology**

With p4108[0...5] = 0, you evaluate a sensor in a 2-wire system at a 4-wire connection at terminals 1(+) and 2(-).  
Terminals 3 and 4 remain open.

**Temperature measurement with a sensor in 3-wire technology**

With p4108[0...5] = 2, you sense the signals from a sensor in 3-wire system at a 4-wire connection at terminals 3(+) and 4(-).  
The measuring wire is connected at terminal 1(+).  
You must short-circuit terminals 2(-) and 4(-).

**Temperature measurement with a sensor in 4-wire technology**

With p4108[0...5] = 3, you sense the signals from a sensor in a 4-wire system at a 4-wire connection at terminals 3(+) and 4(-).  
The measuring wire is connected at terminals 1(+) and 2(-).

**9.4.6.3 Measurement with up to 12 channels****Temperature measurement with two sensors in 2-wire technology**

With p4108[0...5] = 1, you sense two sensors in a 2-wire system.  
The first sensor is connected at terminals 1(+) and 2(-).  
The second sensor (number = first sensor + 6) is connected at terminals 3(+) and 4(-).

When connecting two sensors in a 2-wire system to terminal X531, the first sensor is assigned to temperature channel 1 and the second sensor is assigned to channel 7 (1+6).

---

**Note**

**Connection diagram for 12 temperature channels**

The temperature sensors connected to a TM150 are not numbered consecutively. The first 6 temperature channels retain their numbering of 0 to 5. The other 6 temperature channels are consecutively numbered from 6 to 11, starting at terminal X531.

---

Example of 8 temperature channels:

- 2x2 conductors at terminal X531: p4108[0] = 1  $\hat{=}$  sensor 1 is at channel 0 and sensor 2 is at channel 6
- 2x2 wire at terminal X532: p4108[1] = 1  $\hat{=}$  sensor 1 is at channel 1 and sensor 2 is at channel 7
- 1x3 wire at terminal X533: p4108[2] = 2  $\hat{=}$  sensor 1 is at channel 2
- 1x3 wire at terminal X534: p4108[3] = 2  $\hat{=}$  sensor 1 is at channel 3
- 1x4 wire at terminal X535: p4108[4] = 3  $\hat{=}$  sensor 1 is at channel 4
- 1x2 conductor at terminal X536: p4108[5] = 0  $\hat{=}$  sensor 1 is at channel 5

#### 9.4.6.4 Forming groups of temperature sensors

Using p4111[0...2], temperature channels can be combined to form groups. For each group, the following calculated values are provided from the temperature actual values (r4105[0...11]):

- Maximum: r4112[0...2], (index 0,1,2 = group 0,1,2)
- Minimum: r4113[0...2]
- Average value: r4114[0...2]

Example:

The temperature actual value from channels 0, 3, 7, and 9 should be combined in group 1:

- p4111[1].0 = 1
- p4111[1].3 = 1
- p4111[1].7 = 1
- p4111[1].9 = 1

The calculated values from group 1 are available in the following parameters for interconnection:

- r4112[1] = maximum
- r4113[1] = minimum
- r4114[1] = average value



**Note****Forming groups of temperature channels**

Only form groups of continuously measuring temperature sensors. Depending on the status, the switching temperature sensors PTC and bimetal NC contacts are only assigned two temperatures - 50 °C and +250 °C.

Within a group with continuously measuring temperature sensors, the calculation of the maximum/minimum/average values, is significantly falsified when taking into account switching temperature sensors.

---

**9.4.6.5 Evaluating temperature channels**

For each of the individual 12 temperature channels, using p4102[0...23] an alarm threshold and a fault threshold can be set (straight parameter indices: Alarm thresholds, odd parameter indices: Fault thresholds). The temperature thresholds can be set for each channel from -99 °C to +251 °C. For p4102[0...23] = 251, the evaluation of the corresponding threshold is deactivated.

Using p4118[0...11], for each channel a hysteresis for the fault/alarm thresholds can be set in p4102[0...23].

The following applies for the alarm thresholds:

- If the temperature actual value associated with a channel exceeds the set alarm threshold ( $r4105[x] > p4102[2x]$ ), the corresponding alarm is output. Timer p4103[0...11] is started at the same time.
- The alarm remains until the temperature actual value ( $r4105[x]$ ) has reached or fallen below the alarm threshold ( $p4102[2x]$ ) - hysteresis ( $p4118[x]$ ).
- If, after the timer has expired, the temperature actual value is still above the alarm threshold, then the appropriate fault is output.

The following applies for the fault thresholds:

- If the temperature actual value associated with a channel exceeds the set fault threshold ( $r4105[x] > p4102[2x+1]$ ), the corresponding fault is output.
- The fault remains until the temperature actual value ( $r4105[x]$ ) has reached or fallen below the fault threshold ( $p4102[2x+1]$ ) - hysteresis ( $p4118[x]$ ) and the fault has been acknowledged.

Using p4119[0...11], for each channel, a filter can be activated to smooth the temperature signal.

The time constant of the filter depends on the number of active temperature channels and can be read in r4120.

### Failure of a sensor within a group

Using parameter p4117[0...2], the response to the failure of a temperature sensor can be set within a group:

- p4117[x] = 0: The failed sensor is not taken into account in the group.
- p4117[x] = 1: When a sensor fails, for the maximum value, minimum value and the average value of the group, a value of 300 °C is output.

### Smoothing time for temperature channels

For long or unshielded temperature cables, interference can occur and incorrectly shut down the drive (nuisance trip). To avoid this, a smoothing time can be configured for every temperature channel in TM150 for the respective temperature signal.

The smoothing is realized using a 1st order lowpass filter. The effective smoothing time constant depends on the number of simultaneously active temperature channels, and is indicated in parameter r4120 [0...11].

The smoothing time constant to be set is calculated using the following formula:  
Smoothing time constant (p4122)  $\geq 2 \times$  active number of channels  $\times 50$  ms

#### Setting the smoothing time (using sensor 5 as an example)

- Activate the smoothing time: p4119[5] = 1.
- Enter the smoothing time constant: p4122[5] = 1.

The smoothing time constants can be calculated using the formula shown above. To do this, you have to know for how many temperature channels you wish to configure a smoothing time. The implemented smoothing time is displayed after the entry in p4122 for the selected temperature channel (r4120[0...11]).

### 9.4.6.6 Function diagram

FP 9625	TM150 - temperature evaluation structure (channel 0 ... 11)
FP 9626	TM150 - temperature evaluation 1x2, 3, 4-wire (channel 0 ... 5)
FP 9627	TM150 - temperature evaluation 2x2-wire (channel 0 ... 11)

### 9.4.6.7 Parameter

- p4100[0...11] TM150 sensor type
- r4101[0...11] TM150 sensor resistance
- p4102[0...23] TM150 fault threshold/alarm threshold
- p4103[0...11] TM150 delay time
- r4104.0...23 BO: TM150 temperature evaluation status
- r4105[0...11] CO: TM150 temperature actual value
- p4108[0...5] TM150 terminal block measurement method
- p4109[0...11] TM150 cable resistance measurement
- p4110[0...11] TM150 cable resistance value
- p4111[0...2] TM150 group channel assignment
- r4112[0...2] CO: TM150 group, temperature actual value maximum value
- r4113[0...2] CO: TM150 group, temperature actual value minimum value
- r4114[0...2] CO: TM150 group temperature actual value, average
- p4117[0...2] TM150 group, sensor fault effect
- p4118[0...11] TM150 fault threshold/alarm threshold hysteresis
- p4119[0...11] TM150 activate/deactivate smoothing
- r4120[0...11] TM150 actual value smoothing time in ms
- p4121 TM150 filter, rated line frequency
- p4122[0...11] TM150 smoothing time constant

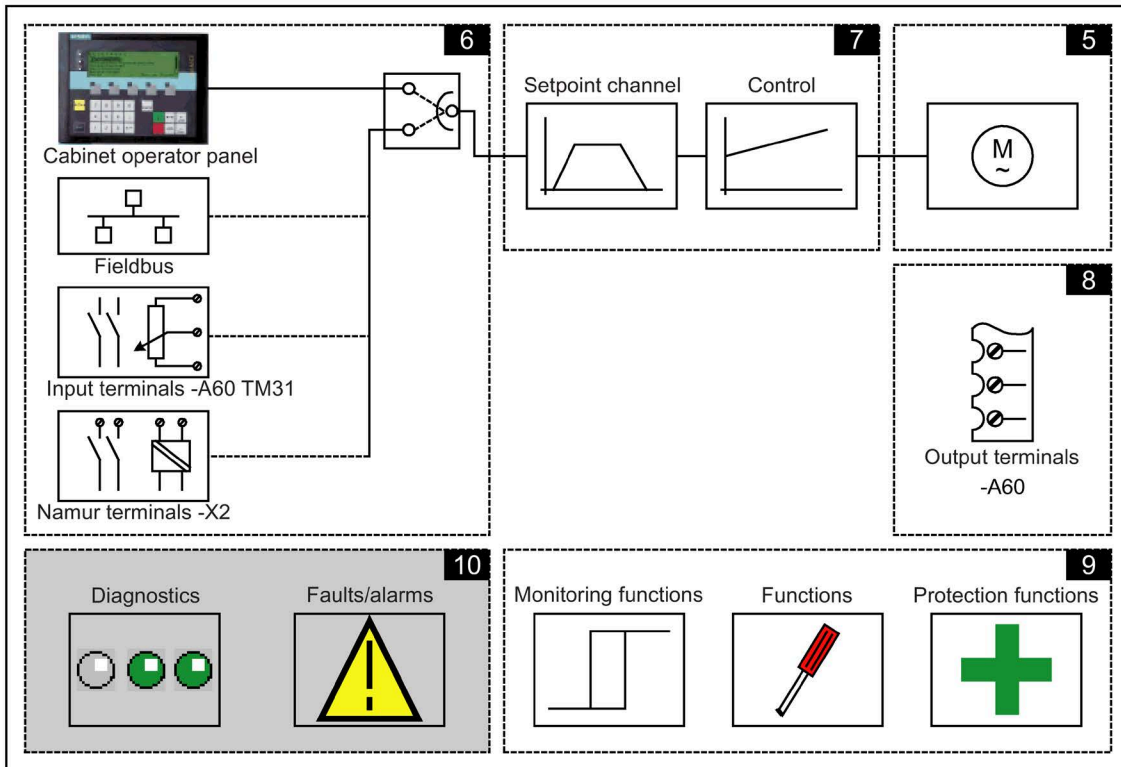


## Diagnosis/faults and alarms

### 10.1 Chapter content

This chapter provides information on the following:

- Notes regarding diagnostic functions that are available and troubleshooting in the case of a fault



## 10.2 Diagnosis

### Description

This section describes procedures for identifying the causes of problems and the measures you need to take to rectify them.

#### Note

##### Errors or malfunctions

If errors or malfunctions occur in the device, you must carefully check the possible causes and take the necessary steps to rectify them. If you cannot identify the cause of the problem or you discover that components are defective, your regional office or sales office should contact Siemens Service and describe the problem in more detail. Addresses of contact persons are listed in the preface.

### 10.2.1 Diagnostics using LEDs

#### Control Unit (-A10)

Table 10- 1 Description of the LEDs on the CU320-2 DP Control Unit

LED	Color	State	Description
RDY (READY)	---	OFF	The electronic power supply is missing or lies outside the permissible tolerance range.
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.
		0.5 Hz flashing light	Commissioning/reset
		2 Hz flashing light	Writing to the memory card.
		Flashing light - 0.5 s on 3 s off	PROFenergy energy saving mode is active (in conjunction with option G33 - CBE20)
	Red	2 Hz flashing light	General fault
	Red/green	0.5 Hz flashing light	Control Unit is ready for operation. However, there are no software licenses.
	Orange	0.5 Hz flashing light	Firmware update in progress for the connected DRIVE-CLiQ components.
		2 Hz flashing light	Firmware update of components has been completed. Wait for POWER ON of the respective component.
	Green/orange or red/orange	2 Hz flashing light	Component detection via LED is activated (p0124[0]). <b>Note:</b> Both options depend on the LED status when component recognition is activated using p0124[0] = 1.

LED	Color	State	Description
COM PROFIdrive cyclic operation	---	OFF	Cyclic communication is not (yet) running. <b>Note:</b> The PROFIdrive is ready for communication when the Control Unit is ready for operation (see LED RDY).
	Green	Continuous light	Cyclic communication is taking place.
		0.5 Hz flashing light	Cyclic communication has still not been fully established. Possible causes: - The controller is not transmitting any setpoints. - In isochronous mode, the controller did not send a Global Control or it sent a defective Global Control (GC).
	Red	0.5 Hz flashing light	PROFIBUS master is sending incorrect parameter assignment/configuration
		2 Hz flashing light	Cyclic bus communication has been interrupted or could not be established.
OPT (OPTION)	---	OFF	Electronic power supply missing or outside permissible tolerance range. The component is not ready for operation. The Option Board is missing or an associated drive object has not been created.
	Green	Continuous light	Option board is ready.
		0.5 Hz flashing light	Depends on the option board used <sup>1)</sup> .
	Red	Continuous light	Depends on the option board used <sup>1)</sup> .
		0.5 Hz flashing light	Depends on the option board used <sup>1)</sup> .
		2 Hz flashing light	This component has at least one fault. The option board is not ready (e.g., after switching on).
RDY and COM	Red	2 Hz flashing light	Bus error - communication has been interrupted.
RDY and OPT	Orange	0.5 Hz flashing light	The firmware of the connected option board is being updated.

<sup>1)</sup> Any individual behaviors of the LED OPT are described at the respective Option Board.

10.2 Diagnosis

Table 10- 2 Description of the LEDs on the CU320-2 PN Control Unit

LED	Color	State	Description
RDY (READY)	---	OFF	The electronic power supply is missing or lies outside the permissible tolerance range.
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.
		0.5 Hz flashing light	Commissioning/reset
		2 Hz flashing light	Writing to the memory card.
		Flashing light - 0.5 s on 3 s off	PROFenergy energy saving mode is active
	Red	2 Hz flashing light	General fault
	Red/green	0.5 Hz flashing light	Control Unit is ready for operation. However, there are no software licenses.
	Orange	0.5 Hz flashing light	Firmware update in progress for the connected DRIVE-CLiQ components.
		2 Hz flashing light	Firmware update of components has been completed. Wait for POWER ON of the respective component.
	Green/orange or red/orange	2 Hz flashing light	Component detection via LED is activated (p0124[0]). <b>Note:</b> Both options depend on the LED status when component recognition is activated using p0124[0] = 1.
COM PROFIdrive cyclic operation	---	OFF	Cyclic communication is not (yet) running. <b>Note:</b> The PROFIdrive is ready for communication when the Control Unit is ready for operation (see LED RDY).
	Green	Continuous light	Cyclic communication is taking place.
		0.5 Hz flashing light	Cyclic communication is still not completely running. Possible causes: - The controller is not transferring any setpoints. - For isochronous operation, either none or a faulty Global Control (GC) has been transferred from the controller. - "Shared Device" has been selected and only one controller connected.
	Red	0.5 Hz flashing light	Bus error, incorrect parameter assignment/configuration
		2 Hz flashing light	Cyclic bus communication has been interrupted or could not be established.
	OPT (OPTION)	---	OFF
Green		Continuous light	Option board is ready.
		0.5 Hz flashing light	Depends on the option board used <sup>1)</sup> .
Red		Continuous light	Depends on the option board used <sup>1)</sup> .
		0.5 Hz flashing light	Depends on the option board used <sup>1)</sup> .
		2 Hz flashing light	This component has at least one fault. The option board is not ready (e.g., after switching on).
RDY and COM	Red	2 Hz flashing light	Bus error - communication has been interrupted.
RDY and OPT	Orange	0.5 Hz flashing light	The firmware of the connected option board is being updated.

<sup>1)</sup> Any individual behaviors of the LED OPT are described at the respective Option Board.



## Customer Terminal Block TM31 (-A60)

Table 10- 3 Description of the LEDs on the TM31

LED	Color	State	Description
READY	---	OFF	The electronic power supply is missing or lies outside the permissible tolerance range.
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.
	Orange	Continuous light	DRIVE-CLiQ communication is being established.
	Red	Continuous light	This component has at least one fault. <b>Remark:</b> The LED is activated irrespective of whether the corresponding messages have been reconfigured.
	Green/red	0.5 Hz flashing light	Firmware is being downloaded.
		2 Hz flashing light	Firmware download is complete. Waiting for POWER ON.
	Green / orange or red / orange	Flashing light	Detection of the components via LED is activated (p0154). <b>Remark:</b> Both options depend on the LED status when module recognition is activated via p0154 = 1.

### Control Interface Module – interface module in the Basic Line Module (-T2)

Table 10- 4 Description of the LEDs "READY" and "DC LINK" on the Control Interface Module

LED state		Description
READY	DC LINK	
Off	Off	The electronic power supply is missing or lies outside the permissible tolerance range.
Green	--- <sup>1)</sup>	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.
	Orange	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place. The DC link voltage is present.
	Red	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place. The DC-link voltage lies outside the permitted tolerance range.
Orange	Orange	DRIVE-CLiQ communication is being established.
Red	--- <sup>1)</sup>	This component has at least one fault. <b>Remark:</b> The LED is activated irrespective of whether the corresponding messages have been reconfigured.
Flashing light 0.5 Hz: green/red	--- <sup>1)</sup>	Firmware is being downloaded.
Flashing light 2 Hz: green/red	--- <sup>1)</sup>	Firmware download is complete. Waiting for POWER ON.
Flashing light 2 Hz: green/orange or red/orange	--- <sup>1)</sup>	Detection of the components via LED is activated (p0124). <b>Note:</b> Both options depend on the LED status when module recognition is activated via p0124 = 1.

<sup>1)</sup> Irrespective of the status of the LED "DC LINK"

Table 10- 5 Meaning of the LED "POWER OK" on the Control Interface Module

LED	Color	State	Description
POWER OK	Green	Off	DC link voltage < 100 V and voltage at -X9:1/2 less than 12 V.
		On	The component is ready for operation.
		Flashing light	There is a fault. If the LED continues to flash after you have performed a POWER ON, please contact your Siemens service center.



**! WARNING**

**Touching live parts of the DC link**

Irrespective of the state of the LED "DC LINK", hazardous DC link voltages can always be present. This means that if live parts are touched, this can result in death or serious injury.

- Observe the warning information on the component.

## Control Interface Module – interface module in the Motor Module (-T1)

Table 10- 6 Description of the LEDs "READY" and "DC LINK" on the Control Interface Module

LED state		Description
READY	DC LINK	
Off	Off	The electronic power supply is missing or lies outside the permissible tolerance range.
Green	--- <sup>1)</sup>	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.
	Orange	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place. The DC link voltage is present.
	Red	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place. The DC-link voltage lies outside the permitted tolerance range.
Orange	Orange	DRIVE-CLiQ communication is being established.
Red	--- <sup>1)</sup>	This component has at least one fault. <b>Remark:</b> The LED is activated irrespective of whether the corresponding messages have been reconfigured.
Flashing light 0.5 Hz: green/red	--- <sup>1)</sup>	Firmware is being downloaded.
Flashing light 2 Hz: green/red	--- <sup>1)</sup>	Firmware download is complete. Waiting for POWER ON.
Flashing light 2 Hz: green/orange or red/orange	--- <sup>1)</sup>	Detection of the components via LED is activated (p0124). <b>Note:</b> Both options depend on the LED status when module recognition is activated via p0124 = 1.

<sup>1)</sup> Irrespective of the status of the LED "DC LINK"

Table 10- 7 Meaning of the LED "POWER OK" on the Control Interface Module

LED	Color	State	Description
POWER OK	Green	Off	DC link voltage < 100 V and voltage at -X9:1/2 less than 12 V.
		On	The component is ready for operation.
		Flashing light	There is a fault. If the LED continues to flash after you have performed a POWER ON, please contact your Siemens service center.



### WARNING

#### Touching live parts of the DC link

Irrespective of the state of the LED "DC LINK", hazardous DC link voltages can always be present. This means that if live parts are touched, this can result in death or serious injury.

- Observe the warning information on the component.

**SMC30 – encoder evaluation (-B83)**

Table 10- 8 Description of the LEDs on the SMC30

LED	Color	State	Description
READY	---	OFF	The electronic power supply is missing or lies outside the permissible tolerance range.
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.
	Orange	Continuous light	DRIVE-CLiQ communication is being established.
	Red	Continuous light	This component has at least one fault. <b>Remark:</b> The LED is activated irrespective of whether the corresponding messages have been reconfigured.
	Green/red	0.5 Hz flashing light	Firmware is being downloaded.
		2 Hz flashing light	Firmware download is complete. Waiting for POWER ON.
Green / orange or red / orange	2 Hz flashing light	Detection of the components via LED is activated (p0144). <b>Remark:</b> Both options depend on the LED status when module recognition is activated via p0144 = 1.	
OUT>5 V	---	OFF	The electronic power supply is missing or lies outside the permissible tolerance range. Power supply $\leq$ 5 V.
	Orange	Continuous light	Electronic power supply for measuring system present. Supply voltage > 5 V. Notice: You must ensure that the connected encoder can be operated with a 24 V supply. Operating an encoder designed for a 5 V supply with a 24 V supply can damage the encoder electronics beyond repair.

**CBE20 – Communication Board Ethernet**

Table 10- 9 Description of the LEDs at ports 1-4 of the X1400 interface on the CBE20

LED	Color	State	Description
Link port	---	OFF	The electronic power supply is missing or lies outside the permissible tolerance range (link missing or defective).
	Green	Continuous light	A different device is connected to port x and a physical connection exists.
Activity port	---	OFF	The electronic power supply is missing or lies outside the permissible tolerance range (no activity).
	Yellow	Continuous light	Data is being received or sent at port x.

Table 10- 10 Description of the Sync and Fault LEDs on the CBE20

LED	Color	State	Description
Fault	---	OFF	If the link port LED is green: The CBE20 is operating normally, data is being exchanged with the configured IO Controller.
	Red	Flashing light	<ul style="list-style-type: none"> <li>- The response monitoring time has elapsed.</li> <li>- Communication has been interrupted.</li> <li>- The IP address is incorrect.</li> <li>- Incorrect or missing configuration.</li> <li>- Incorrect parameter assignment.</li> <li>- Incorrect or missing device name.</li> <li>- IO controller not present/switched off but Ethernet connection present.</li> <li>- Other CBE20 errors.</li> </ul>
		Continuous light	CBE20 bus fault <ul style="list-style-type: none"> <li>- No physical connection to a subnet/switch.</li> <li>- Incorrect transmission rate.</li> <li>- Full-duplex transmission not activated.</li> </ul>
Sync	---	OFF	If the link port LED is green: Control Unit task system is not synchronized with the IRT clock. An internal substitute clock is generated.
	Green	Flashing light	Control Unit task system has synchronized with the IRT clock and data is being exchanged.
		Continuous light	Task system and MC-PLL have synchronized with the IRT clock.

Table 10- 11 Description of the OPT LED on the Control Unit

LED	Color	State	Description
OPT	---	OFF	Electronics power supply is missing or outside permissible tolerance range. The CBE20 is defective or not inserted.
	Green	Continuous light	CBE20 is ready and cyclic communication is taking place.
		0.5 Hz flashing light	CBE20 is ready but cyclic communication is not running. Possible causes: <ul style="list-style-type: none"> <li>- Communication is being established.</li> <li>-At least one fault is present.</li> </ul>
		Red	Continuous light
	0.5 Hz flashing light		The firmware download to the CBE20 has failed. Possible causes: <ul style="list-style-type: none"> <li>- The memory card of the Control Unit is faulty.</li> <li>- The CBE20 is out of order.</li> </ul> The CBE20 cannot be used in this state.
	2 Hz flashing light		Communication between the Control Unit and the CBE20 is faulty. Possible causes: <ul style="list-style-type: none"> <li>- The CBE20 was removed following power-up.</li> <li>- The CBE20 is defective.</li> </ul>
	Orange	0.5 Hz flashing light	Firmware is being updated.

### TM150 - Terminal Module (-A151)

Table 10- 12 Description of the LEDs on the TM150

LED	Color	State	Description	
READY	-	OFF	The electronic power supply is missing or lies outside the permissible tolerance range.	
	Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place.	
	Orange	Continuous light	DRIVE-CLiQ communication is being established.	
	Red	Continuous light	This component has at least one fault. <b>Remark:</b> The LED is activated irrespective of whether the corresponding messages have been reconfigured.	
	Green/red	Flashing light 0.5 Hz	Flashing light 0.5 Hz	Firmware is being downloaded.
			Flashing light 2 Hz	Firmware download is complete. Waiting for POWER ON.
	Green / orange or red / orange	Flashing light 2 Hz	Detection of the components via LED is activated (p0154). <b>Remark:</b> Both options depend on the LED status when module recognition is activated via p0154 = 1.	

### 10.2.2 Diagnostics via parameters

#### All Objects: key diagnostic parameters (details in List Manual)

Parameter	Name
	Description
r0945	Fault code
	Displays the fault number. Index 0 is the most recent fault (last fault to have occurred).
r0948	Fault time received in milliseconds
	Displays the system runtime in ms at which the fault occurred.
r0949	Fault value
	Displays additional information about the fault. This information is required for detailed fault diagnosis.
r2109	Fault time removed in milliseconds
	Displays the system runtime in ms at which the fault was rectified.
r2122	Alarm code
	Displays the numbers of alarms that have occurred
r2123	Alarm time received in milliseconds
	Displays the system runtime in ms at which the alarm occurred.
r2124	Alarm value
	Displays additional information about the alarm. This information is required for detailed alarm diagnosis.
r2125	Alarm time removed in milliseconds
	Displays the system runtime in ms at which the alarm was rectified.

**Control Unit: key diagnostic parameters (details in List Manual)**

Parameter	Name
	Description
r0002	Control Unit status display
	Status display for the Control Unit
r0018	Control Unit firmware version
	Displays the firmware version of the Control Unit. For the display parameters for the firmware version of the other connected components, see the parameter description in the List Manual.
r0037	Control Unit temperature
	Displays the measured temperature on the Control Unit.
r0721	CU digital inputs, terminal actual value
	Displays the actual value at the digital input terminals on the CU. This parameter shows the actual value, uninfluenced by simulation mode of the digital inputs.
r0722	CO/BO: CU digital inputs, status
	Displays the status of the digital inputs on the CU. This parameter shows the status of the digital inputs under the influence of simulation mode of the digital inputs.
r0747	CU, digital outputs status
	Display of the CU digital output status. This parameter shows the status of the digital inputs under the influence of simulation mode of the digital inputs.
r2054	PROFIBUS status
	Displays the status of the Profibus interface.
r8937	PN diagnostics
	Display to diagnose the cyclic PROFINET connections.
r9976[0..7]	System utilization
	Displays the system load. The individual values (computation load and cyclic load) are measured over short time slices; from these values, the maximum, the minimum and the average value are generated and displayed in the appropriate indices. Further, the degree of memory utilization of the data and program memory is displayed.

**Supply: key diagnostic parameters (details in List Manual)**

Parameter	Name
	Description
r0002	Infeed operating display
	The value provides information about the current operating status and the conditions necessary to reach the next status.
r0026	CO: DC link voltage smoothed
	Displays the smoothed actual value of the DC link.
r0027	CO: Absolute actual current, smoothed
	Displays the smoothed actual value of the current.
r0037	CO: Power unit temperatures
	Displays the measured temperatures in the power unit.
r0046	CO/BO: Missing enable signals
	Displays missing enable signals that are preventing the closed-loop infeed control from being commissioned.
r0050	CO/BO: Command Data Set CDS effective
	Displays the effective command data set (CDS)

Parameter	Name
	Description
r0070	CO: Actual DC link voltage
	Displays the actual measured value of the DC link voltage.
r0206	Rated power unit power
	Displays the rated power unit power for various load duty cycles.
r0207	Rated power unit current
	Displays the rated power unit power for various load duty cycles.
r0208	Rated power unit line supply voltage
	Displays the rated line supply voltage of the power unit.
r0209	Power unit, maximum current
	Displays the maximum output current of the power unit.

**VECTOR: key diagnostic parameters (details in List Manual)**

Parameter	Name
	Description
r0002	Drive operating display
	The value provides information about the current operating status and the conditions necessary to reach the next status.
r0020	Speed setpoint smoothed
	Displays the actual smoothed speed/velocity setpoint at the input of the speed/velocity controller or U/f characteristic (after the interpolator).
r0021	CO: Actual speed value smoothed
	Displays the smoothed actual value of the motor speed/velocity.
r0024	CO: Output frequency, smoothed
	Displays the smoothed converter frequency.
r0026	CO: DC link voltage smoothed
	Displays the smoothed actual value of the DC link.
r0027	CO: Absolute actual current, smoothed
	Displays the smoothed actual value of the current.
r0031	Actual torque smoothed
	Displays the smoothed actual torque.
r0034	CO: Motor utilization
	Displays the motor utilization from the thermal I2t motor model.
r0035	CO: Motor temperature
	<p>If r0035 does not equal -200.0 °C, the following applies:</p> <ul style="list-style-type: none"> <li>This temperature indicator is valid.</li> <li>An KTY sensor is connected.</li> <li>If using an asynchronous motor, the thermal motor model is activated (p0600 = 0 or p0601 = 0).</li> </ul> <p>If r0035 equals -200.0 °C, the following applies:</p> <ul style="list-style-type: none"> <li>This temperature indicator is invalid (temperature sensor fault).</li> <li>An PTC sensor is connected.</li> <li>If using a synchronous motor, the thermal motor model is activated (p0600 = 0 or p0601 = 0).</li> </ul>
r0037	CO: Power unit temperatures



Parameter	Name
	Description
	Displays the measured temperatures in the power unit.
r0046	CO/BO: Missing enable signals Displays missing enable signals that are preventing the closed-loop drive control from being commissioned.
r0049	Motor data set/encoder data set active (MDS, EDS) Displays the effective motor data set (MDS) and the effective encoder data sets (EDS).
r0050	CO/BO: Command Data Set CDS effective Displays the effective command data set (CDS)
r0051	CO/BO: Drive Data Set DDS effective Effective drive data set (DDS) display.
r0056	CO/BO: Status word, closed-loop control Displays the status word of the closed-loop control.
r0063	CO: Speed actual value Displays the actual speed for speed control and U/f control.
r0066	CO: Output frequency Displays the output frequency of the Motor Module.
r0070	CO: Actual DC link voltage Displays the measured actual value of the DC link voltage.
r0072	CO: Output voltage Displays the actual output voltage of the power unit (Motor Module).
r0082	CO: Active power actual value Displays the instantaneous active power.
r0206	Rated power unit power Displays the rated power unit power for various load duty cycles.
r0207	Rated power unit current Displays the rated power unit power for various load duty cycles.
r0208	Rated power unit line supply voltage Displays the rated line supply voltage of the power unit.
r0209	Power unit, maximum current Displays the maximum output current of the power unit.

### TM31: key diagnostic parameters (details in List Manual)

Parameter	Name
	Description
r0002	TM31 operating display Operating display for Terminal Board 31 (TB31).
r4021	TM31 digital inputs, terminal actual value Displays the actual value at the digital input terminals on the TM31. This parameter shows the actual value, uninfluenced by simulation mode of the digital inputs.
r4022	CO/BO: TM31 digital inputs, status Displays the status of the digital inputs on the TM31. This parameter shows the status of the digital inputs under the influence of simulation mode of the digital inputs.
r4047	TM31 digital outputs, status Displays the status of the TM31 digital outputs. Inversion via p4048 is taken into account.

### Additional diagnostic parameters for units that are connected in parallel (details in List Manual)

For units that are connected in parallel, there are additional diagnostic parameters that provide detailed information about individual Basic Line Modules and/or Motor Modules for a parallel circuit configuration.

r7000 to r7252      Special parameters for Basic Line Modules and/or Motor Modules connected in parallel

### 10.2.3 Indicating and rectifying faults

The device features a wide range of functions that protect the drive against damage if a fault occurs (faults and alarms).

#### Indicating faults and alarms

If a fault occurs, the drive displays the fault and/or alarm on the AOP30 operator panel. Faults are indicated by the red "FAULT" LED and a fault screen is automatically displayed. You can use the F1 Help function to call up information about the cause of the fault and how to remedy it. You can use F5 Ack. to acknowledge a stored fault.

Any alarms are displayed by the yellow flashing "ALARM" LED. The system also displays a note in the status bar providing information on the cause.

Every fault and alarm is entered in the fault/alarm buffer along with time the error occurred. The time stamp refers to the relative system time in milliseconds (r0969).

Activate the "Set date/time - AOP synchronization -> Drive" setting to date- and time-stamp errors on the AOP30.

#### What is a fault?

A fault is a message from the drive indicating an error or other exceptional (unwanted) status. This could be caused by a fault within the converter or an external fault triggered, for example, from the winding temperature monitor for the induction motor. The faults are displayed and can be reported to a higher-level control system via PROFIdrive. In the delivery condition, the message "Drive fault" is also sent to a relay output. Once you have rectified the cause of the fault, you have to acknowledge the fault message.

#### What is an alarm?

An alarm is the response to a fault condition identified by the drive. It does not result in the drive being switched off and does not have to be acknowledged. Alarms are "self acknowledging", that is, they are reset automatically when the cause of the alarm has been eliminated.

## 10.3 Overview of warnings and faults

If a fault occurs, the drive indicates the fault and/or alarm. Faults and alarms are listed in a fault/alarm list, together with the following information:

- Fault/alarm number
- Standard drive response
- Description of the possible cause of the fault/alarm
- Description of the procedure for rectifying the problem
- Standard fault acknowledgement after it has been rectified

---

### Note

#### List of faults and alarms

The list of faults and alarms is included on the customer DVD!

It also contains descriptions of possible fault responses (OFF1, OFF2, ...).

---

### Note

#### Faults and alarms wired and preset at the factory

The faults and alarms described below have been wired specially for the cabinet units listed in this document and preset via macro. In this way, the appropriate reaction is triggered by the additional components in the cabinet unit when faults and alarms are signaled.

It is possible to reprogram the faults and alarms described, provided that the stated options are not included in the scope of the equipment.

---

### 10.3.1 "External alarm 1"

#### Causes

Alarm A7850 ("External alarm 1") is triggered by the following optional protection devices in the cabinet unit:

- Temperature sensor for triggering the alarm threshold in the Line Harmonics Filter compact (option L01)
- Thermistor motor protection unit alarm (option L83)
- PT100 Evaluation Unit (Option L86)

## Remedy

When a fault is indicated, the following procedure is recommended:

1. Identify the cause by examining the specified devices (display or LEDs).
2. Check the fault display on the relevant protection device and establish the fault.
3. Rectify the displayed fault with the help of the appropriate operating instructions provided in "Additional Operating Instructions".

### 10.3.2 "External fault 1"

#### Causes

Fault code F7860 ("External Fault 1") is triggered by the following optional protection devices in the cabinet unit:

- Temperature sensor for triggering the fault threshold in the Line Harmonics Filter compact (option L01)
- Thermistor motor protection unit shutdown (option L84)
- PT100 Evaluation Unit (Option L86)

#### Remedy

When a fault is indicated, the following procedure is recommended:

1. Identify the cause by examining the specified devices (display or LEDs).
2. Check the fault display on the relevant protection device and establish the fault.
3. Rectify the displayed fault with the help of the appropriate operating instructions provided in "Additional Operating Instructions".

### 10.3.3 "External fault 2"

#### Causes

Fault code F7861 ("External Fault 2") is triggered when the braking resistor available with options L61 and L62 is subject to thermal overload, thereby activating the thermostat. The drive is switched off with OFF2.

#### Remedy

The cause of the braking resistor overload must be eliminated and the fault code acknowledged.

### 10.3.4 "External fault 3"

#### Causes

Fault code F7862 "External fault 3" is triggered when the braking unit fitted for options L61 and L62 triggers a fault. The drive is switched off with OFF2.

#### Remedy

The cause of the braking unit overload must be eliminated and the fault code acknowledged.



## Maintenance and servicing

### 11.1 Chapter content

This chapter provides information on the following:

- Maintenance and servicing procedures that have to be carried out on a regular basis to ensure the availability of the cabinet units.
- Exchanging device components when the unit is serviced
- Forming the DC link capacitors
- Upgrading the cabinet unit firmware
- Loading the new operator panel firmware from the PC.

 **WARNING**

**Not observing fundamental safety instructions and residual risks**

The non-observance of the fundamental safety instructions and residual risks stated in Chapter 1 can result in accidents with severe injuries or death.

- Adhere to the fundamental safety instructions.
- When assessing the risk, take into account residual risks.



 **DANGER**

**Electric shock due to the residual charge of the DC link capacitors**

Because of the DC link capacitors, a hazardous voltage is present for up to five minutes after the power supply has been switched off.

Contact with live parts can result in death or serious injury.

- Only open the device after five minutes have elapsed.
- Measure the voltage before starting work on the DCP and DCN DC link terminals.



 **DANGER**

**Electric shock from external supply voltages**

When the external power supply for individual options (L50 / L55) or the external 230 V AC auxiliary supply is connected, dangerous voltages are still present at the components even when the main switch is open.

Contact with live parts can result in death or serious injury.

- Switch off any external supply voltages and the external 230 VAC auxiliary supply before opening the device.



**! WARNING**

**Live parts and components for devices connected in parallel**

Touching live components of sub-cabinets associated with devices connected in parallel can result in death or severe injury.

- When connecting, installing and repairing, electrically disconnect both partial cabinets from the line supply.

## 11.2 Maintenance

The cabinet unit mainly comprises electronic components. Apart from the fan(s), the unit contains very few components that are subject to wear or require maintenance or servicing. Maintenance aims to preserve the specified condition of the cabinet unit. Dirt and contamination must be removed regularly and parts subject to wear replaced.

The following points must generally be observed.

### 11.2.1 Cleaning

#### Dust deposits

Dust deposits inside the cabinet unit must be removed at regular intervals (or at least once a year) by qualified personnel in line with the relevant safety regulations. The unit must be cleaned using a brush and vacuum cleaner, and dry compressed air (max. 1 bar) for areas that cannot be easily reached.

#### Ventilation

The ventilation openings in the cabinet must never be obstructed. The fan must be checked to make sure that it is functioning correctly.

#### Maintaining the filter medium for option M23/M43/M54

For option M23/M43/M54, the filter medium must be maintained according to the local environmental conditions. The filter medium must be regularly inspected and replaced as required.

You can obtain additional information regarding a maintenance contract from your Siemens contact person.

## 11.3 Maintenance

Servicing involves activities and procedures for maintaining and restoring the specified condition of the device.



## Required tools

The following tools are required for replacing components:

- Standard set of tools with screwdrivers, screw wrenches, socket wrenches, etc.
- Torque wrenches 1.5 Nm up to 100 Nm
- 600 mm extension for socket wrenches

## Cable and screw terminals

Cable and screw terminals must be checked regularly to ensure that they are secure in position, and if necessary, retightened. Cabling must be checked for defects. Defective parts must be replaced immediately.

---

### Note

#### Maintenance intervals

The actual intervals at which maintenance procedures are to be performed depend on the installation conditions (cabinet environment) and the operating conditions.

Siemens offers its customers support in the form of a service contract. For further details, contact your regional office or sales office.

---

## Tightening torques for screw connections

The following tightening torques apply when tightening current-conducting connections (DC link connections, motor connections, busbars, lugs) and other connections (ground connections, protective conductor connections, steel threaded connections).

Table 11- 1 Tightening torques for screw connections

Thread	Ground connections, protective conductor connections, steel threaded connections	Aluminum threaded connections, plastic, busbars, lugs
M3	1.3 Nm	0.8 Nm
M4	3 Nm	1.8 Nm
M5	6 Nm	3 Nm
M6	10 Nm	6 Nm
M8	25 Nm	13 Nm
M10	50 Nm	25 Nm
M12	88 Nm	50 Nm
M16	215 Nm	115 Nm

---

### Note

#### Screw connections for protective covers

The threaded connections for the protective covers made of Makrolon may only be tightened with 2.5 Nm.

---

### Maintenance work at the main switch or circuit breaker

For an optionally installed main switch or circuit breaker, the inspection must be carried out at the intervals specified in the attached description.

#### 11.3.1 Installation device

##### Description

The installation device is used for installing and removing the power blocks.

It is used as an installation aid, which is placed in front of and secured to the module. The telescopic guide support allows the withdrawable device to be adjusted according to the height at which the power blocks are installed. Once the mechanical and electrical connections have been removed, the power block can be removed from the module, whereby the power block is guided and supported by the guide rails on the withdrawable devices.



Figure 11-1 Installation device

## Article number

The article number for the installation device is 6SL3766-1FA00-0AA0.

## 11.3.2 Using crane lifting lugs to transport power blocks

### Crane lifting lugs

The power blocks are fitted with crane lifting lugs for transportation on a lifting harness in the context of replacement.

The positions of the crane lifting lugs are illustrated by arrows in the figures below.

#### NOTICE

##### Damage to the device due to improper transport

Improper transport can subject the power block housing or the busbars to mechanical loads, which damage the device.

- When transporting the power blocks, use a lifting harness with vertical ropes or chains.
- Do not use the power block busbars to support or secure lifting harnesses.

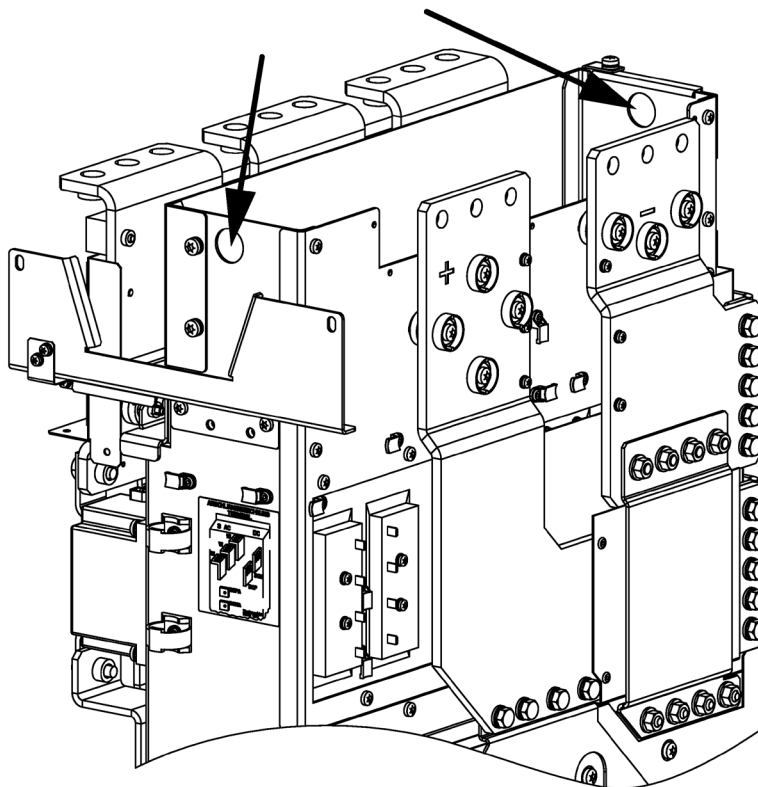


Figure 11-2 Crane lifting lugs on power block frame size GB, GD

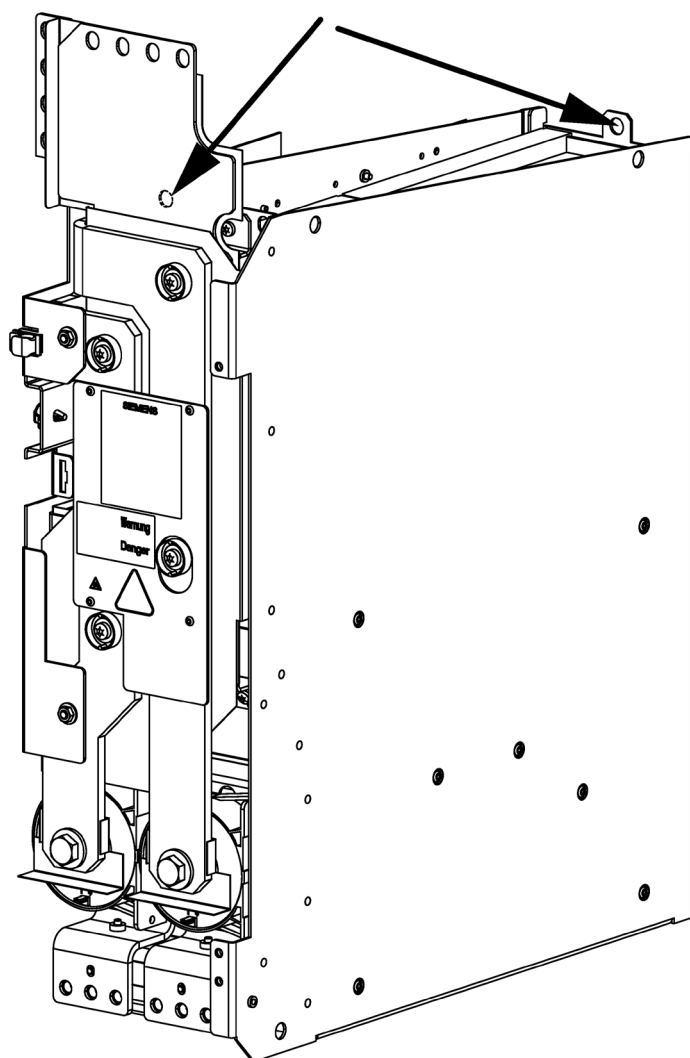


Figure 11-3 Crane lifting lugs on power block frame size JX

---

**Note**

**Crane lifting lugs on power block frame size JX**

On size JX power blocks, the front crane lifting lug is located behind the busbar.

---

## 11.4 Replacing components



### **Improper transport and installation of devices and components**

Serious injury or even death and substantial material damage can occur if the devices are not transported or installed properly.

- Transport, mount, and remove the devices and components only if you are qualified to do so.
- Take into account that the devices and components are in some cases heavy and top-heavy; take the necessary precautionary measures.  
The weights of the individual power blocks are listed in the corresponding section.

### 11.4.1 Replacing the filter mats

The filter mats must be checked at regular intervals. If the mats are too dirty to allow the air supply to flow normally, they must be replaced.

---

#### **Note**

#### **Replacing the filter mats**

Filter mat replacement is only relevant for options M23, M43 and M54.

Failure to replace dirty filter mats can cause premature thermal shutdown of the drive.

---

### 11.4.2 Replacing the Control Interface Module, frame size GB, GD

#### Replacing the Control Interface Module

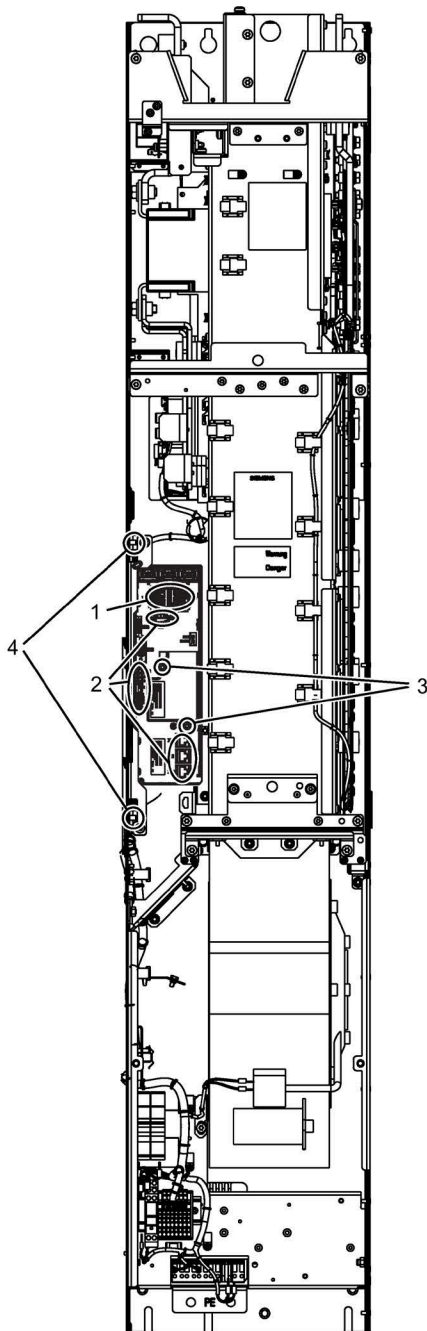


Figure 11-4 Replacing the Control Interface Module, frame size GB, GD

## Preparatory steps

- Disconnect the drive line-up from the power supply
- Allow unimpeded access.
- Remove the front cover

## Removal steps

The removal steps are numbered in accordance with the numbers in the diagram.

1. Disconnect the plugs for the signal cables (2 plugs).
2. Remove DRIVE-CLiQ cables and connections at –X41/–X42/–X46 (6 connectors).  
The DRIVE-CLiQ cables should be marked to ensure that they are subsequently correctly inserted.
3. Take out the retaining screws for the IPD card (2 screws) and remove the IPD card from plug –X45 on the Control Interface Module.
4. Remove the retaining screws for the Control Interface Module (2 screws).

When removing the Control Interface Module, you have to disconnect 5 additional plugs one after the other (2 at the top, 3 below).

### NOTICE

#### Damage to the device if signal cables are damaged when removing

Signal cables can be damaged when the Control Interface Module is removed. This can cause the device to fail.

- When removing the Control Interface Module, ensure that you do not damage any signal cables.

## Installation steps

To reinstall, perform the above steps in the reverse order.

Tightening torque for the fixing screws of the Control Interface Module (M6 x 16, item ④): 6 Nm.

### Note

#### Specifications for the installation

The tightening torques specified in the table "Tightening torques for screw connections" must be observed.

Carefully insert the plug-in connections and ensure that they are secure.

### 11.4.3 Replacing the Control Interface Module, frame size JX

#### Replacing the Control Interface Module

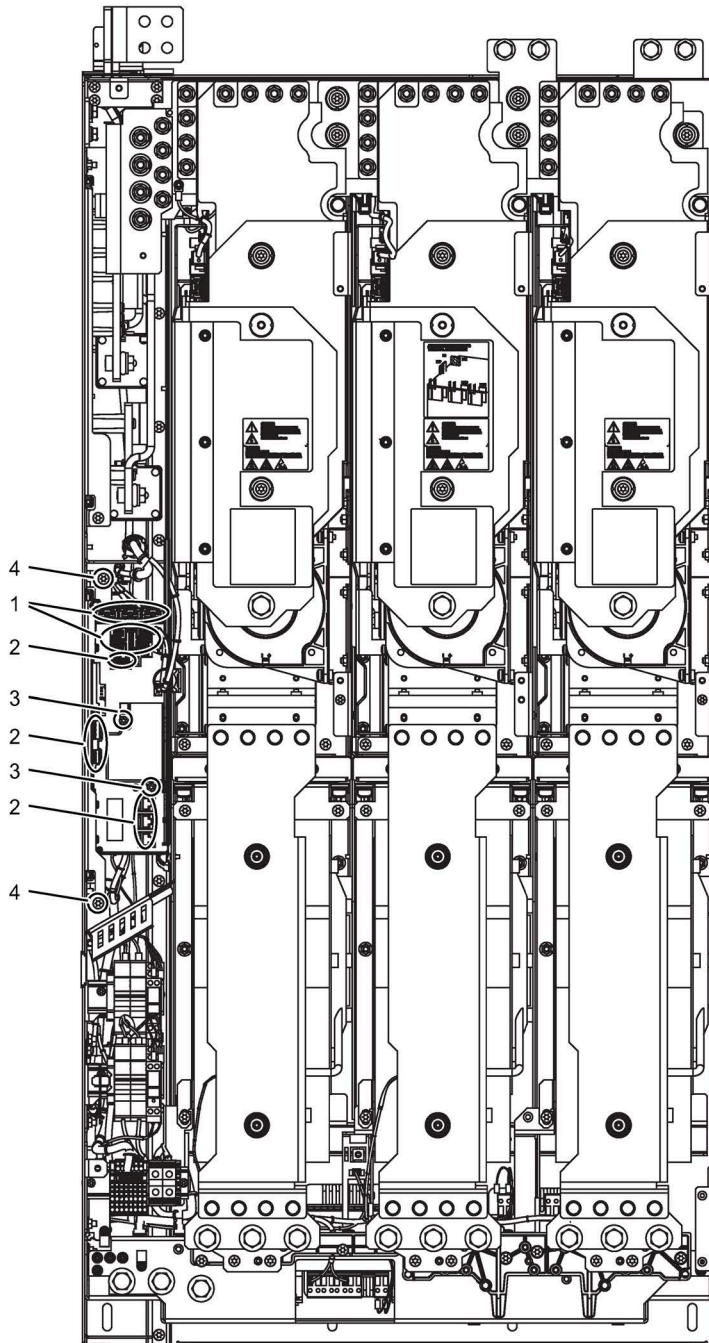


Figure 11-5 Replacing the Control Interface Module, frame size JX



## Preparatory steps

- Disconnect the cabinet unit from the power supply.
- Allow unimpeded access.
- Remove the protective cover.

## Removal steps

The removal steps are numbered in accordance with the numbers in the diagram.

1. Disconnect the plug-in connections for the fiber-optic cables and signal cables (5 plugs).
2. Remove DRIVE-CLiQ cables and connections at - X41, -X42, -X46 (6 connectors).  
The DRIVE-CLiQ cables should be marked to ensure that they are subsequently correctly inserted.
3. Take out the retaining screws for the IPD card (2 screws) and remove the IPD card from plug -X45 on the Control Interface Module.
4. Remove the retaining screws for the Control Interface Module (2 screws).

When removing the Control Interface Module, you have to disconnect 5 additional plugs one after the other (2 at the top, 3 below).

### NOTICE

#### Damage to the device if signal cables are damaged when removing

Signal cables can be damaged when the Control Interface Module is removed. This can cause the device to fail.

- When removing the Control Interface Module, ensure that you do not damage any signal cables.

## Installation steps

To reinstall, perform the above steps in the reverse order.

Tightening torque for the fixing screws of the Control Interface Module (M6 x 16, item ④): 6 Nm.

### Note

#### Specifications for the installation

The tightening torques specified in the table "Tightening torques for screw connections" must be observed.

Carefully insert the plug-in connections and ensure that they are secure.

The fiber-optic cable plugs must be remounted at their original slot. Fiber-optic cables and sockets are labeled to ensure that they are assigned correctly (U11, U21, U31).

### 11.4.4 Replacing the power block, frame sizes GB, GD

#### Replacing the power block

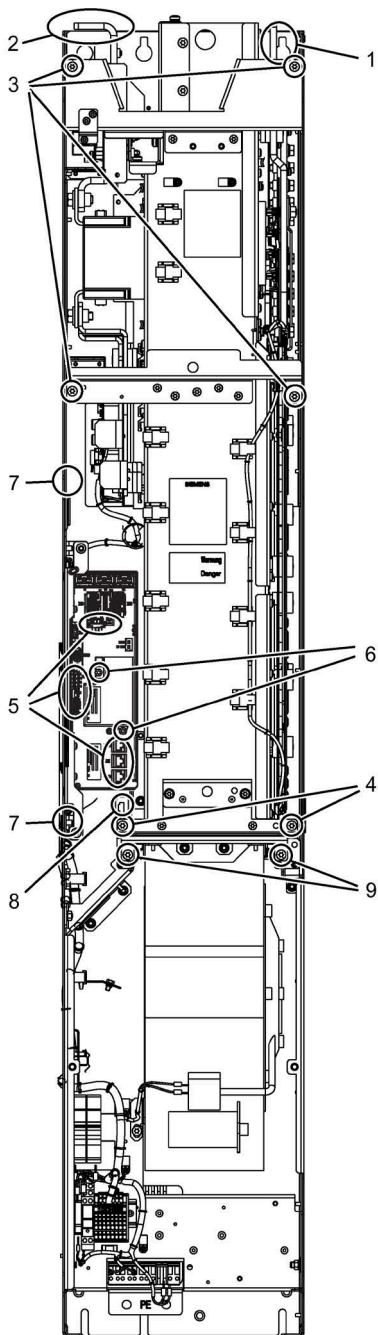


Figure 11-6 Replacing the power block, frame sizes GB, GD

### Preparatory steps

- Disconnect the drive line-up from the power supply
- Allow unimpeded access to the power block.
- Remove the protective cover.

### Removal steps

The removal steps are numbered in accordance with the numbers in the diagram.

1. Unscrew the connection to the DC link (6 screws).
2. Unscrew the connection to the line connection (9 screws).
3. Remove the retaining screws at the top (4 screws).
4. Remove the retaining screws at the bottom (2 screws).
5. Remove the DRIVE-CLiQ cables and connections on –X41 / –X42 / –X46 (6 plugs).
6. Take out the retaining screws for the IPD card (2 screws) and remove the IPD card from plug -X45 on the Control Interface Module.
7. Remove the mounts for the Control Interface Module (2 nuts) and carefully pull out the Control Interface Module.  
  
When removing the Control Interface Module, you have to disconnect 5 additional plugs one after the other (2 at the top, 3 below).
8. Disconnect the plug for the thermocouple.
9. Unscrew the two retaining screws for the fan and attach the equipment for assembling the power block at this position.

You can now remove the power block.

---

#### Note

The power block weighs approx. 135 kg!

---

NOTICE
<p><b>Damage to the device if signal cables are damaged when removing</b></p> <p>Signal cables can be damaged when the power block is removed. This can cause the device to fail.</p> <ul style="list-style-type: none"><li>• When removing the power block, ensure that you do not damage any signal cables.</li></ul>

### Installation steps

To reinstall, perform the above steps in the reverse order.

---

#### Note

##### Specifications for the installation

The tightening torques specified in the table "Tightening torques for screw connections" must be observed.

Carefully insert the plug-in connections and ensure that they are secure.

---

#### Note

##### Connection clip for the basic interference suppression module

The connection clip for the basic interference suppression module is mounted on the spare power block together with a yellow warning label.

Please note the information in Chapter "Removing the connection clip to the basic interference suppression module for operation on an ungrounded line supply (IT system)".

---

### 11.4.5 Replacing the power block, frame size JX

#### Replacing the power block

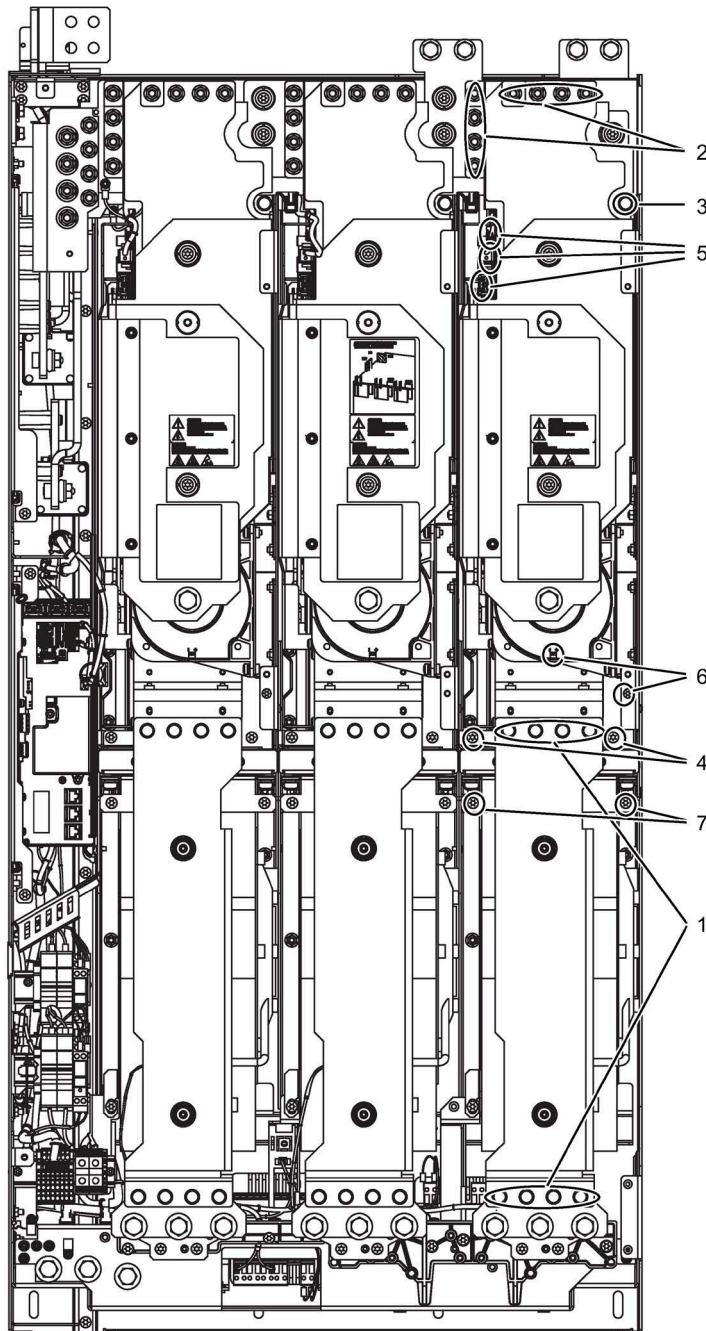


Figure 11-7 Replacing the power block, frame size JX

### Preparatory steps

- Disconnect the cabinet unit from the power supply.
- Allow unimpeded access to the power block.
- Remove the protective cover.

### Removal steps

The removal steps are numbered in accordance with the numbers in the diagram.

1. Remove the busbar (8 screws).
2. Unscrew the connection to the DC link (8 nuts).
3. Remove the retaining screw at the top (1 screw).
4. Remove the retaining screws at the bottom (2 screws).
5. Disconnect the plug-in connections for the fiber-optic cables and signal cables (3 plugs).
6. Remove the connection for the current transformer and associated PE connection (1 plug).
7. Unscrew the two retaining screws for the fan and attach the equipment for assembling the power block at this position.

You can now remove the power block.

---

#### Note

The power block weighs approx. 90 kg!

---

<b>NOTICE</b>
<b>Damage to the device if signal cables are damaged when removing</b>
Signal cables can be damaged when the power block is removed. This can cause the device to fail.
<ul style="list-style-type: none"><li>• When removing the power block, ensure that you do not damage any signal cables.</li></ul>



### Installation steps

To reinstall, perform the above steps in the reverse order.

---

#### Note

##### Specifications for the installation

The tightening torques specified in the table "Tightening torques for screw connections" must be observed.

Carefully insert the plug-in connections and ensure that they are secure.

---

### 11.4.6 Replacing the fan, frame sizes GB, GD

#### Replacing the fan

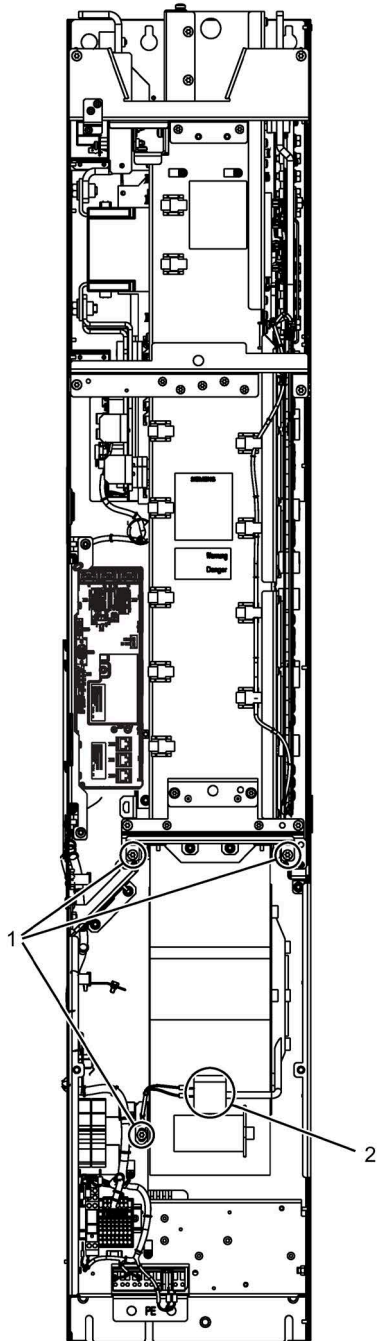


Figure 11-8 Replacing the fan, frame sizes GB, GD

## Description

The average service life of the device fans is 50,000 hours. In practice, however, the service life depends on other variables (e.g. ambient temperature, degree of cabinet protection, etc.) and, therefore, may deviate from this value.

The fans must be replaced in good time to ensure that the device is available.

## Preparatory steps

- Disconnect the drive line-up from the power supply
- Allow unimpeded access.
- Remove the protective cover.

## Removal steps

The removal steps are numbered in accordance with the numbers in the diagram.

1. Remove the retaining screws for the fan (3 screws)
2. Disconnect the supply cables (1 x "L", 1 x "N")

You can now carefully remove the fan.

<b>NOTICE</b>
<b>Damage to the device if signal cables are damaged when removing</b>
Signal cables can be damaged when the fan is removed. This can cause the device to fail.
<ul style="list-style-type: none"><li>• When removing the fan, ensure that you do not damage any signal cables.</li></ul>



## Installation steps

To reinstall, perform the above steps in the reverse order.

---

### Note

#### Pay attention to the tightening torques

The tightening torques specified in the table "Tightening torques for screw connections" must be observed.

---

### Note

#### Reset the operating hours counter

Following fan replacement, the operating hours counter of the fan should be reset using p0251 = 0.

---



### 11.4.7 Replacing the fan, frame size JX

#### Replacing the fan

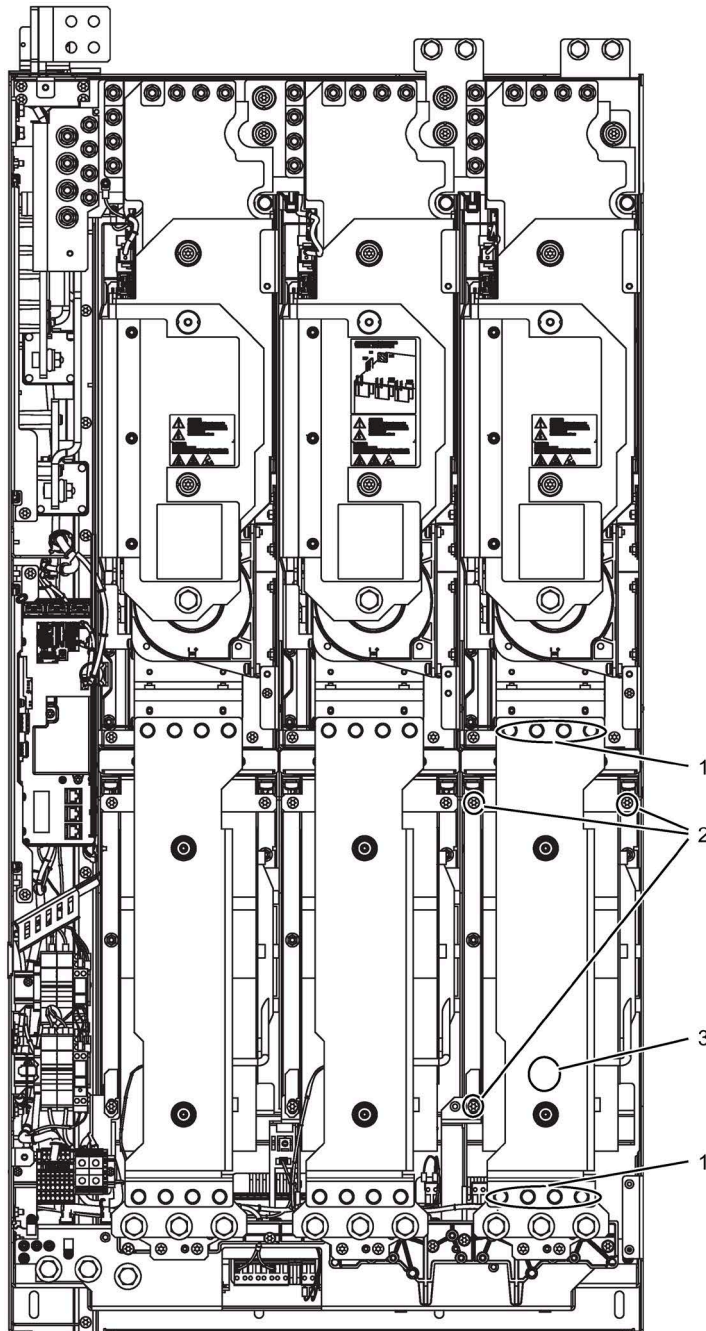


Figure 11-9 Replacing the fan, frame size JX

## Description

The average service life of the device fans is 50,000 hours. In practice, however, the service life depends on other variables (e.g. ambient temperature, degree of cabinet protection, etc.) and, therefore, may deviate from this value.

The fans must be replaced in good time to maintain the availability of the cabinet unit.

## Preparatory steps

- Disconnect the cabinet unit from the power supply.
- Allow unimpeded access.
- Remove the protective cover.

## Removal steps

The removal steps are numbered in accordance with the numbers in the diagram.

1. Remove the busbar (8 screws)
2. Remove the retaining screws for the fan (3 screws)
3. Disconnect the supply cables (1 x "L", 1 x "N")

You can now carefully remove the fan.

<b>NOTICE</b>
<b>Damage to the device if signal cables are damaged when removing</b>
Signal cables can be damaged when the fan is removed. This can cause the device to fail.
<ul style="list-style-type: none"><li>• When removing the fan, ensure that you do not damage any signal cables.</li></ul>



## Installation steps

To reinstall, perform the above steps in the reverse order.

---

### Note

#### Pay attention to the tightening torques

The tightening torques specified in the table "Tightening torques for screw connections" must be observed.

---

### Note

#### Reset the operating hours counter

Following fan replacement, the operating hours counter of the fan should be reset using p0251 = 0.

---

## 11.4.8 Replacing the DC fuses in the Motor Module

### Replacing the DC fuses

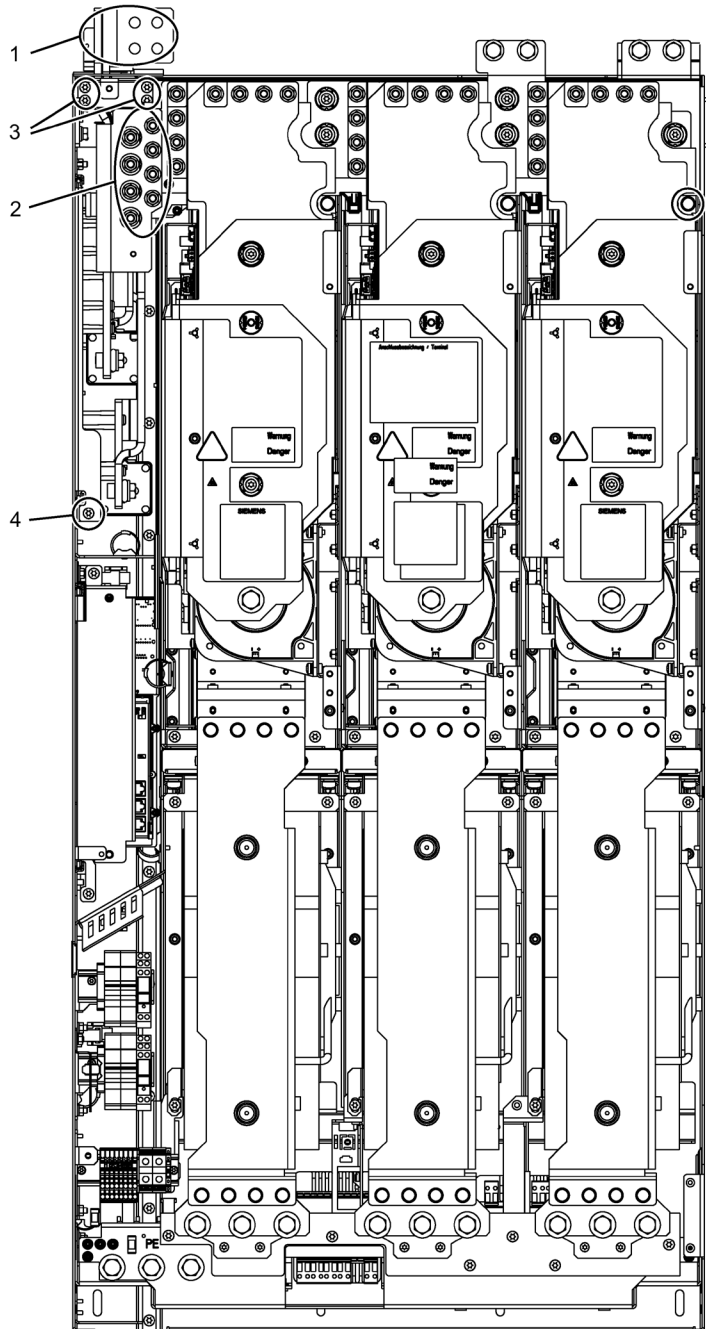


Figure 11-10 Replacing the DC fuses, Motor Module, frame size JX

## Description

The DC fuses are installed in a fuse insert. To replace the fuses, the fuse insert must be removed.

### NOTICE

#### Device failure after a DC fuse ruptures

The neighboring DC fuses may also become damaged if a DC fuse ruptures. Failure to replace all fuses at the same time can cause the device to fail.

- After a DC fuse ruptures, always replace all DC fuses at the same time. Always use fuses of the same type.

## Preparatory steps

- Disconnect the drive line-up from the power supply
- Allow unimpeded access.
- Remove the protective cover.

## Removal steps

The removal steps are numbered in accordance with the numbers in the diagram.

1. Release the DC connections at DCP and DCN (4 screws each)
2. Remove nuts (8 screws)
3. Remove the retaining screws for the connection plate of the housing (4 screws) and remove the connection plate.
4. Remove the retaining screw for the fuse insert (1 screw)

You can now remove the fuse insert.

### NOTICE

#### Damage to the device if signal cables or plastic parts are damaged when removing

Signal cables or plastic parts can be damaged when the fuse insert is removed. This can cause the device to fail.

- When removing the fuse insert, ensure that you do not damage any signal cables or plastic parts.

You can then replace the DC fuses.

## Installation steps

To reinstall, perform the above steps in the reverse order.

---

### Note

#### Pay attention to the tightening torques

The tightening torques specified in the table "Tightening torques for screw connections" must be observed.

---

## 11.4.9 Replacing cylindrical fuses

The following fuses are cylindrical fuses:

- Fan fuses (-T1 -F10, -T1 -F11)
- Fuses for auxiliary power supply (-F11, -F12)
- Fuse for the internal 230 V AC supply (-F21)



Figure 11-11 Fuse holder

Article numbers for replacing fuses that have blown can be found in the spare parts list.

---

### Note

#### Removing fault causes

Make sure that the cause of the fault is found before the fuse is replaced.

---

### 11.4.10 Replacing the LV HRC fuses

#### Description

NH fuses (low-voltage high-breaking-capacity fuses), also called knife fuses, are used, for example, in the on/off switches of the power supplies.



Figure 11-12 NH fuse

#### Preparatory steps

- Keep the safety equipment close at hand: NH fuse puller with forearm protection for NH fuse-links
- Observe the national safety regulations.



Figure 11-13 NH fuse puller with forearm protection for NH fuses

---

**Note**

If required, the LV HRC fuse grip can be ordered from Siemens using article number 3NX1.

---

**Removal steps**

The NH fuse is removed in the following steps:

1. Open the main switch.
2. Remove the front shock hazard protection cover of the cabinet in front of the fuses.

**! WARNING****Electric shock as the cover above the line supply connections has been removed**

When the lower cover (over the line connections) is removed, line voltage is present even when the main switch is switched off. Contact with the connections can result in death or serious injury.

- Do not remove the cover (shock protection) over the line connections.

3. Locate the LV HRC fuse puller with forearm protection for LV HRC fuse-links over the fuse.
4. Withdraw the defective fuse.

**NOTICE****Device failure after a LV HRC fuse trips**

The neighboring LV HRC fuses may also become damaged if a LV HRC fuse ruptures. Failure to replace all fuses at the same time can cause the device to fail.

- After a LV HRC fuse ruptures, always replace all LV HRC fuses at the same time. Always use fuses of the same type.

**Installation steps**

The NH fuse is installed in the following steps:

1. Insert the new fuse into the LV HRC fuse puller.
2. Insert the fuse into the fuse holder.
3. Press the release button on the LV HRC fuse puller to release the grip from the new fuse.
4. Attach the front shock hazard protection cover.

The power switch can then be closed.



<p><b>⚠ WARNING</b></p> <p><b>Electric shock when using unsuitable fuses</b></p> <p>If unsuitable fuses are used, an electric shock can cause severe injury or death.</p> <ul style="list-style-type: none"> <li>• Use only fuses specified in the spare parts list.</li> </ul>
---

### 11.4.11 Replacing the cabinet operator panel

1. Switch the unit into a no-voltage condition.
2. Open the cabinet.
3. Disconnect the power supply and communications line on the operator panel.
4. Release the fastenings on the operator panel.
5. Remove the operator panel.
6. Install the new operator panel.
7. Carry out any other work by reversing the sequence.

### 11.4.12 Replacing the Backup Battery for the Cabinet Operator Panel

Table 11- 2 Technical specifications of the backup battery

Type	CR2032 3 V lithium battery
Manufacturer	Maxell, Sony, Panasonic
Nominal capacity	220 mAh
Self-discharge at 20 °C	1 %/year
Service life (in backup mode)	> 1 year at 70 °C; >1.5 years at 20 °C
Service life (in operation)	> 2 years

#### Replacement

1. Switch the unit into a no-voltage condition.
2. Open the cabinet.
3. Disconnect the 24 V DC power supply and communications line on the operator panel.
4. Open the cover of the battery compartment.
5. Remove the old battery.
6. Insert the new battery.
7. Close the cover of the battery compartment.
8. Reconnect the 24 V DC power supply and communications line.
9. Close the cabinet.



---

**Note**

**Time for replacing the battery**

The battery must be replaced within one minute to ensure that no AOP settings are lost.

---



Figure 11-14 Replacing the backup battery for the cabinet operator panel

---

**Note**

**Battery disposal**

The battery must be disposed of in accordance with the applicable country-specific guidelines and regulations.

---

## 11.5 Forming the DC link capacitors

### Description

If the device is kept in storage for more than two years, the DC-link capacitors have to be re-formed.

If the cabinet is commissioned within two years of its date of manufacture, the DC-link capacitors do not need to be re-formed. The date of manufacture is indicated in the serial number on the type plate (see "Device Overview").

<b>NOTICE</b>
<b>Material damage caused by omitted forming</b>
If no forming is performed on a device after that has been stored for more than two years, operation with load can cause material damage on the device.
<ul style="list-style-type: none"><li>• Form a device that has been in storage for more than two years.</li></ul>



---

### Note

#### Storage period

It is important that the storage period is calculated from the date of manufacture and not from the date that the equipment was shipped.

---

### Procedure

The DC-link capacitors are re-formed by applying the rated voltage without load for at least 30 minutes at room temperature.

- Operation via PROFIBUS:
  - Set bit 3 of control word 1 (operation enable) permanently to "0".
  - Switch on the converter by means of an ON signal (bit 0 of the control word); all the other bits must be set in such a way that the converter can be operated.
  - Once the delay time has elapsed, switch off the converter and restore the original PROFIBUS setting.
- Operation via terminal block:
  - Set p0852 to "0" (factory setting is "1").
  - Switch on the converter (via digital input 0 on the customer terminal block).
  - Once the delay time has elapsed, switch off the converter and restore the original setting for p0852.

---

### Note

#### Forming via AOP30

Reforming cannot be carried out in LOCAL mode via the AOP30.

---

## 11.6 Messages after replacing DRIVE-CLiQ components

After DRIVE-CLiQ components are replaced (Control Interface Module, TM31, SMCxx) when service is required, generally no message is output after power-up, since an identical component is identified and accepted as component when the system boots.

The reason for this is that an identical component is detected and accepted as spare part when running-up. If, unexpectedly, a fault message of the "topology fault" category is displayed, then when replacing a component, one of the following faults/errors should have occurred:

- A Control Interface Module with different firmware data was installed.
- When connecting-up DRIVE-CLiQ cables, connections were interchanged.

### Automatic firmware update

A firmware update for the replaced DRIVE-CLiQ component may run automatically after switching on the electronics.

- The following LEDs will flash slowly to indicate that an automatic firmware update is in progress: the "RDY" LED on the Control Unit (orange, 0.5 Hz) and an LED on the relevant DRIVE-CLiQ component (green/red, 0.5 Hz).

---

#### Note

##### Do not shut down the converter

Do not shut down the converter during this process as the firmware update will otherwise have to be started again.

---

- Once the automatic firmware update is complete, the "RDY" LED on the Control Unit will flash quickly (orange, 2 Hz) along with an LED on the relevant DRIVE-CLiQ component (green/red, 2 Hz).
- To complete the automatic firmware update process, a POWER ON is required (switch the device off and back on again).

## 11.7 Upgrading the cabinet unit firmware

Upgrading the enclosed device firmware (by installing a new memory card with a new firmware version, for example) may also necessitate an upgrade of the firmware of the DRIVE-CLiQ components contained in the enclosed drive.

If the system detects that the firmware in the DRIVE-CLiQ components needs to be upgraded, it will do this independently as part of the automatic firmware update.

### Automatic firmware update sequence

1. During an automatic firmware update, the "RDY" LED on the Control Unit flashes slowly (orange, 0.5 Hz).
2. The firmware update is performed on each DRIVE-CLiQ component as needed; during the update process, an LED for the respective component flashes slowly (green/red, 0.5 Hz).
3. Once the firmware update for a specific DRIVE-CLiQ component is complete, the LED for that component will flash quickly (green/red, 2 Hz).
4. Once the firmware update for all components is complete, the LED for the Control Unit will flash quickly (orange, 2 Hz).
5. To complete the automatic firmware update process, a POWER ON is required (switch the device off and back on again).

---

#### Note

The power supply to the components should not be interrupted during the update, because otherwise the firmware update must be restarted.

---

## 11.8 Load the new operator panel firmware from the PC.

### Description

Firmware might need to be loaded to the AOP if the AOP functionality needs to be upgraded.

If, once the drive has been switched on, the memory card is found to contain a newer version of the firmware, a message will appear on the AOP30 prompting you to load the new firmware. You should click "YES" in response to this prompt.

The firmware will then be loaded automatically on the operator panel and the following dialog screen will appear.

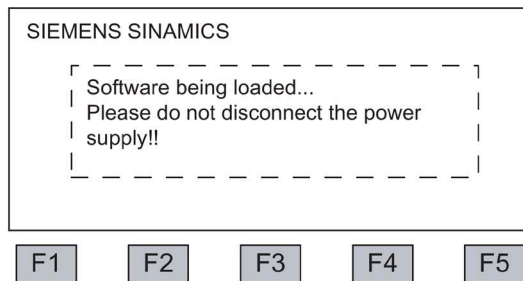


Figure 11-15 Dialog screen: loading firmware

If the firmware cannot be loaded successfully, it can be loaded using the following manual method.

The load program LOAD\_AOP30 and the firmware file can be found on the customer DVD.

### Loading the firmware

1. Establish the RS232 connection from the PC to the AOP30.
2. Provide the supply voltage (24 V DC).
3. Start the LOAD\_AOP30 program on the PC.
4. Choose the PC interface (COM1, COM2).
5. Choose and open the firmware (AOP30.H86).
6. Follow the instructions in the status window of the program and connect the power supply for the AOP30 while pressing the red key (O).
7. The load procedure is started automatically.
8. Switch the power on (switch the power supply off and then back on).

*11.8 Load the new operator panel firmware from the PC.*

## Technical specifications

### 12.1 Chapter content

This chapter provides information on the following:

- General and specific technical specifications for the devices.
- Information on restrictions that apply when the devices are used in unfavorable ambient conditions (derating)

## 12.2 General data

Table 12- 1 General technical data

<b>Electrical data</b>	
Line system configurations	Grounded TN/TT systems or ungrounded IT systems (a grounded phase conductor is not permissible in 690 V line supplies)
Line frequency	47 ... 63 Hz
Output frequency	0 ... 300 Hz
Power factor - Fundamental mode - Total	≥ 0.96 0.75 ... 0.93
Converter efficiency	> 98%
Switching at input	1x every 3 minutes
Overvoltage category	III per EN 61800-5-1
<b>Electromagnetic compatibility (EMC)</b>	
Emitted interference • Standard • With line filter (option L00)	<ul style="list-style-type: none"> <li>• Category C3 (second environment) according to EN 61800-3</li> <li>• Category C2 (first <sup>*)</sup> and second environments) according to EN 61800-3 <sup>1)</sup></li> </ul> <p><sup>*)</sup> When used in the first environment, an appropriately trained and authorized technical person must set up the drive and commission it.</p> <p>NOTE: An appropriately trained and authorized technician is person or organization with the required experience for setting up and/or for commissioning the drive systems, including the associated EMC aspects.</p>
Immunity	Use in the first and second environment according to EN 61800-3
<b>Mechanical data</b>	
Degree of protection	IP20 (higher degrees of protection up to IP54 optional)
Class of protection	I per EN 61800-5-1
Cooling method	Forced air cooling AF according to EN 60146
Sound pressure level L <sub>pA</sub> (1 m)	At 50 Hz line frequency: ≤ 75 dB(A) (synchronizers) At 60 Hz line frequency: ≤ 78 dB(A) (synchronizers)
Touch protection	EN 50274 and DGUV regulation 3 when used for the intended purpose
Cabinet system	Rittal TS 8, doors with double-barb lock, three-section base plates for cable entry
Paint finish	RAL 7035 (indoor requirements)
<b>Compliance with standards</b>	
Standards	EN 60146-1, EN 61800-2, EN 61800-3, EN 61800-5-1, EN 60204-1, EN 60529 <sup>2)</sup>
CE mark	In accordance with EMC Directive No. 2014/30/EU and Low-Voltage Directive No. 2014/35/EU and Machinery Directive No. 2006/42/EC



Ambient conditions	Storage	Transport	Operation
Ambient temperature	-25 ... +55 °C	-25 ... +70 °C from -40 °C for 24 hours	0 ... +40 °C up to 50 °C with derating
Humidity range <sup>2)</sup> (non-condensing) corresponds to class	5 ... 95 %  1K4 acc. to EN 60721-3-1:1997	5 ... 95% at 40 °C  2K3 acc. to EN 60721-3-2:1997	5 ... 95 %  3K3 acc. to EN 60721-3-3:2002
Environmental class/harmful chemical substances <sup>2)</sup>	1C2 acc. to EN 60721-3-1:1997	2C2 acc. to EN 60721-3-2:1997	3C2 acc. to EN 60721-3-3:2002
Organic/biological influences <sup>2)</sup>	1B1 acc. to EN 60721-3-1:1997	2B1 acc. to EN 60721-3-2:1997	3B1 acc. to EN 60721-3-3:2002
Mechanically active sub- stances <sup>2)</sup>	1S1 acc. to EN 60721-3-1:1997	2S1 acc. to EN 60721-3-2:1997	3S1 acc. to EN 60721-3-3:2002
Degree of pollution	2 according to EN 61800-5-1		
Installation altitude	Up to 2000 m above sea level without derating, > 2000 m above sea level with derating (see "Derating data")		
Mechanical strength	Storage	Transport	Operation
Vibrational load <sup>2)</sup> - Displacement - Acceleration corresponds to class	1.5 mm at 5 ... 9 Hz 5 m/s <sup>2</sup> at > 9 ... 200 Hz 1M2 acc. to EN 60721-3-1:1997	<i>3.1 mm</i> at 5 ... 9 Hz 10 m/s <sup>2</sup> at > 9 ... 200 Hz 2M2 acc. to EN 60721-3-2:1997	0.075 mm at 10 ... 58 Hz 10 m/s <sup>2</sup> at >58 ... 200 Hz -
Shock load <sup>2)</sup> - Acceleration corresponds to class	40 m/s <sup>2</sup> at 22 ms 1M2 acc. to EN 60721-3-1:1997	100 m/s <sup>2</sup> at 11 ms 2M2 acc. to EN 60721-3-2:1997	100 m/s <sup>2</sup> at 11 ms 3M4 acc. to EN 60721-3-3:2002
Functional safety			
Safety Integrity Level (SIL)	SIL 2 according to IEC 61508 and IEC 61800-5-2		
Performance Level and Cate- gory	PL d and Category 3 according to EN ISO 13849-1		

Deviations from the defined classes are shown in *italics*.

1) Applies to cable lengths of up to 100 m.

2) The EN standards specified are the European editions of the international IEC standards with the same designations.

## 12.2.1 Derating data

### 12.2.1.1 Current derating as a function of the ambient temperature

#### Permissible output current as a function of the ambient temperature

The cabinet devices and the associated system components are rated for an ambient temperature of 40 °C and installation altitudes up to 2000 m above sea level. The output current must be reduced if the cabinet devices are operated at ambient temperatures above 40 °C. Ambient temperatures above 50 °C are not permissible. The following tables specify the permissible output current as a function of the ambient temperature for the different degrees of protection.

Table 12- 2 Current derating factors as a function of the ambient temperature (inlet air temperature at the air inlet of the cabinet unit) and installation altitude for cabinet units with degree of protection IP20/IP21/IP23/IP43

Installation altitude above sea level in m	Current derating factor at an ambient temperature (air intake temperature) of						
	20 °C	25 °C	30 °C	35 °C	40 °C	45 °C	50 °C
0 ... 2000	100 %	100 %	100 %	100 %	100 %	93.3 %	86.7 %

Table 12- 3 Current derating factors as a function of the ambient temperature (inlet air temperature at the air inlet of the cabinet unit) and installation altitude for cabinet units with degree of protection IP54

Installation altitude above sea level in m	Current derating factor at an ambient temperature (air intake temperature) of						
	20 °C	25 °C	30 °C	35 °C	40 °C	45 °C	50 °C
0 ... 2000	100 %	100 %	100 %	100 %	93.3 %	86.7 %	80.0 %

### 12.2.1.2 Installation altitudes between 2000 m and 5000 m above sea level

If the SINAMICS G150 cabinet units are operated at an installation altitude >2000 m above sea level, it must be taken into account that the air pressure and, consequently, the air density decreases. The lower air density also reduces the cooling efficiency and the insulation capacity of the air.

Installation altitudes between 2000 m and 5000 m can be achieved by applying the following measures.

### Reduce the ambient temperature and the output current

Due to the reduced cooling efficiency, it is necessary, on the one hand, to reduce the ambient temperature and, on the other, to lower heat loss in the cabinet unit by reducing the output current, whereby ambient temperatures lower than 40° C may be offset to compensate, and are taken into account in the tables. The following tables specify the permissible output currents as a function of installation altitude and ambient temperature for the different degrees of protection. The specified values already include a permitted correction in respect of installation altitude and ambient temperatures less than 40° C (incoming air temperature at the inlet to the cabinet unit). The values apply under the precondition that the cabinet layout ensures a cooling air flow through the units as stated in the technical data.

Table 12- 4 Current derating as a function of ambient temperature (inlet air temperature at the air inlet of the cabinet unit) and installation altitude for cabinet units with degree of protection IP20/IP21/IP23/IP43

Installation altitude above sea level in m	Current derating factor						
	at an ambient temperature (air inlet temperature) of						
	20° C	25° C	30° C	35° C	40° C	45° C	50° C
0 ... 2000	100 %	100 %	100 %	100 %	100 %	93,3 %	86,7 %
... 2500	100 %	100 %	100 %	100 %	96,3 %		
... 3000	100 %	100 %	100 %	98,7 %			
... 3500	100 %	100 %	100 %				
... 4000	100 %	100 %	96,3 %				
... 4500	100 %	97,5 %					
... 5000	98,2 %						

Table 12- 5 Current derating as a function of the ambient temperature (inlet air temperature at the air inlet of the cabinet unit) and installation altitude for cabinet units with degree of protection IP54

Installation altitude above sea level in m	Current derating factor						
	at an ambient temperature (air inlet temperature) of						
	20° C	25° C	30° C	35° C	40° C	45° C	50° C
0 ... 2000	100 %	100 %	100 %	100 %	93,3 %	86,7 %	80,0 %
... 2500	100 %	100 %	100 %	96,3 %	89,8 %		
... 3000	100 %	100 %	98,7 %	92,5 %			
... 3500	100 %	100 %	94,7 %				
... 4000	100 %	96,3 %	90,7 %				
... 4500	97,5 %	92,1 %					
... 5000	93,0 %						

### Using an isolating transformer to reduce transient overvoltages according to IEC 61800-5-1

This drops overvoltage category III to overvoltage category II, thereby reducing the requirements for insulation capacity of the air. Additional voltage derating (reduction of the input voltage) is not required if the following framework conditions are observed:

- The isolating transformer must be fed from a low-voltage or medium-voltage network and must not be power directly from a high-voltage supply system.
- The isolating transformer may be connected to one or more cabinet units.
- The cables between the isolating transformer and the cabinet unit(s) must be routed in such a manner as to rule out direct lightning strike, i.e. overland lines must not be used.
- The following types of system are permissible:
  - TN systems with grounded star point (no grounded outer conductor).
  - IT systems (operation with a ground fault must be restricted to the shorted possible time).

#### 12.2.1.3 Current derating as a function of the pulse frequency

When the pulse frequency is increased, the derating factor of the output current must be taken into account. This derating factor must be applied to the currents specified in the technical data for the cabinet units.

Table 12- 6 Derating factor of the output current as a function of the pulse frequency

Article no.	Type rating	Output current at 1.25 kHz	Derating factor at the pulse frequency				
			2 kHz	2.5 kHz	4 kHz	5 kHz	7.5 kHz
6SL3710-...	[kW]	[A]					
<b>Supply voltage 3 AC 660 ... 690 V</b>							
2GH41-8EA3	1750	1740	92%	87%	67%	55%	33%
2GH42-0EA3	1950	1940	91%	86%	64%	50%	30%
2GH42-2EA3	2150	2150	87%	79%	55%	40%	25%
2GH42-4EA3	2400	2390	87%	79%	55%	40%	25%
2GH42-7EA3	2700	2685	91%	86%	64%	50%	30%

**Note**

**Derating factors for pulse frequencies in the range between fixed values**

For pulse frequencies in the range between the specified fixed values, the relevant derating factors can be determined by linear interpolation.

## 12.2.2 Overload capability

The converter has an overload reserve (e.g. to handle breakaway torques).

In drives with overload requirements, the appropriate base load current must, therefore, be used as a basis for the required load.

The overloads apply under the precondition that the converter is operated as a maximum at its base-load current before and after the overload (a duty cycle duration of 300 s is used as a basis here).

Another precondition is that the frequency converter is operated at its factory-set pulse frequency at output frequencies >10 Hz.

For additional information on overload capability, see the Low Voltage configuration manual.

### Low overload

The base-load current for low overload ( $I_L$ ) is based on a load duty cycle of 110% for 60 s or 150% for 10 s.

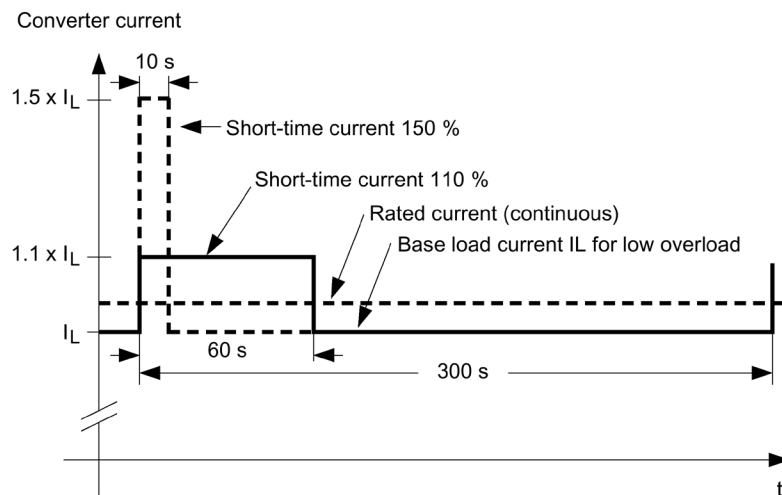


Figure 12-1 Low overload

### High overload

The base-load current for a high overload  $I_H$  is based on a duty cycle of 150% for 60 s or 160% for 10 s.

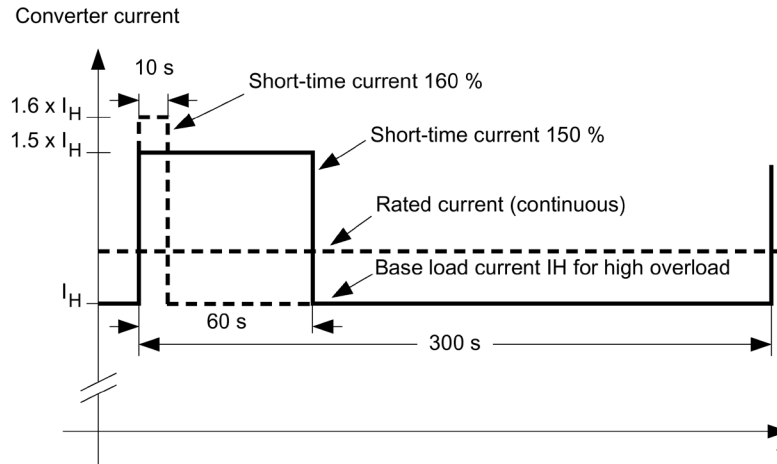


Figure 12-2 High overload

### 12.2.3 Data regarding the power loss in partial load operation

Power loss data for partial load operation is available in the Internet: Partial load operation (<https://support.industry.siemens.com/cs/ww/en/view/94059311>).

## 12.3 Technical data

### Note

#### Notes on the technical data

Current, voltage and power figures in these tables are rated values.

The cables to the device are protected by fuses of operating class gG.

The cable cross-sections have been determined for three-core copper cables routed horizontally in air at 40° C ambient temperature (according to DIN VDE 0276-1000 and IEC 60364-5-52) with a permissible operating temperature of 70° C (e.g. Protodur NYY or NYCWY) and the recommended conductor protection according to DIN VDE 0100 section 430 and IEC 60364-4-43.

### NOTICE

#### Material damage caused by impermissible cable temperatures

The improper laying of cables can produce short-circuits caused by damage of the insulation that result from excessive temperatures.

When the conditions differ from the above stated (cable routing, cable grouping, ambient temperature), the following instructions for routing the cables must be taken into account:

- The required cable cross-section depends on the amperage which flows through the cable.
- The permissible current loading of cables is defined, for example, in DIN VDE 0276-1000 and IEC 60364-5-52. It depends partly on ambient conditions such as temperature and partly on the type of routing. If the cables are routed individually, they will be cooled relatively well. If several cables are routed together, they may heat each other up. Please note the corresponding derating factors for these supplementary conditions in DIN VDE 0276-1000 and IEC 60364-5-52.

### 12.3.1 Cabinet devices version A, 660 V - 690 V 3 AC

Table 12- 7 Version A, 660 ... 690 V 3 AC, Part 1

Article number	6SL3710-	2GH41-8EA3	2GH42-0EA3	2GH42-2EA3
<b>Unit rating</b> - for I <sub>L</sub> at 50 Hz 690 V <sup>1)</sup> - for I <sub>H</sub> at 50 Hz 690 V <sup>1)</sup>	kW kW	1750 1500	1950 1750	2150 1950
<b>Output current</b> - Rated current I <sub>N</sub> - Base load current I <sub>L</sub> <sup>2)</sup> - Base load current I <sub>H</sub> <sup>3)</sup>	A A A	1729 1720 1547	1948 1940 1742	2158 2150 1930
<b>Input current</b> - Rated input current <sup>4)</sup> - Input current, max. - Current requirements for 24 V DC auxiliary supply	A A A	1800 2765 4.7	2030 3115 4.7	2245 3450 4.7
<b>Supply voltages</b> - Line voltage - Line frequency - Electronic power supply	V <sub>ACrms</sub> Hz V <sub>DC</sub>	660 V 3 AC -10 % to 690 V 3 AC +10 % (-15 % < 1 min) 47 ... 63 24 (20.4 ... 28.8)		
<b>Power loss</b>	kW	35	38	40
<b>Cooling air requirement</b>	m <sup>3</sup> /s	3.67	3.67	3.67
<b>Sound pressure level L<sub>pA</sub></b> (1 m) at 50/60 Hz	dB(A)	75/78	75/78	75/78
<b>Line connection</b> - Recommended: IEC <sup>4)</sup> - maximum: IEC - Fixing screw	mm <sup>2</sup> mm <sup>2</sup>	Per sub-cabinet: 4 x 150 8 x 240 M12 (4 holes)	Per sub-cabinet: 4 x 150 8 x 240 M12 (4 holes)	Per sub-cabinet: 4 x 150 8 x 240 M12 (4 holes)
<b>Motor connection</b> - Recommended: IEC <sup>5)</sup> - maximum: IEC - Fixing screw	mm <sup>2</sup> mm <sup>2</sup>	Per sub-cabinet: 3 x 185 6 x 240 M12 (3 holes)	Per sub-cabinet: 3 x 185 6 x 240 M12 (3 holes)	Per sub-cabinet: 3 x 185 6 x 240 M12 (3 holes)
<b>Protective conductor connection</b> Fixing screw		Per sub-cabinet: M12 (18 holes)	Per sub-cabinet: M12 (18 holes)	Per sub-cabinet: M12 (18 holes)
<b>Max. motor cable length</b> shielded / unshielded	m	300 / 450	300 / 450	300 / 450
<b>Dimensions (standard version)</b> - Width - Height - Depth	mm mm mm	3600 2000 600	3600 2000 600	3600 2000 600
<b>Basic Line Module frame size</b>		GB	GB	GB
<b>Motor Module frame size</b>		JX	JX	JX
<b>Weight (without options), approx.</b>	kg	3010	3010	3070
<b>Recommended protection</b> - Line protection (with option L26) Rated current frame size to IEC 60269 - Line and semiconductor protection (without option L26) Rated current Frame size to IEC 60269	A  A	Per sub-cabinet: 3NA3365-6 2 x 500 3 Per sub-cabinet: 3NE1435-2 2 x 560 3	Per sub-cabinet: 3NA3362-6 3 x 425 3 Per sub-cabinet: 3NE1436-3 2 x 630 3	Per sub-cabinet: 3NA3365-6 3 x 500 3 Per sub-cabinet: 3NE1334-2 3 x 500 2



Article number	6SL3710-	2GH41-8EA3	2GH42-0EA3	2GH42-2EA3
Maximum short-circuit current $I_{cc}$ acc. to IEC <sup>6)</sup>	kA	2 x 85	2 x 85	2 x 85
Minimum short-circuit current <sup>7)</sup>	kA	2 x 1.8	2 x 2	2 x 2.3

- 1) Rated output of a typical 6-pole standard induction motor based on  $I_L$  or  $I_H$  at 690 V 3 AC 50 Hz.
- 2) The base-load current  $I_L$  is based on a duty cycle of 110% for 60 s or 150% for 10 s with a duty cycle duration of 300 s (see "Overload capability").
- 3) The base-load current  $I_H$  is based on a duty cycle of 150% for 60 s or 160% for 10 s with a duty cycle duration of 300 s (see "Overload capability").
- 4) The current values given here are based on the rated output current.
- 5) The recommendations for the North American market in AWG or MCM must be taken from the appropriate NEC (National Electrical Code) or CEC (Canadian Electrical Code) standards.
- 6) In conjunction with the specified fuses or circuit breakers.
- 7) Minimum current required for reliably triggering protective devices.

12.3 Technical data

Table 12- 8 Version A, 660 ... 690 V 3 AC, Part 2

Article number	6SL3710-	2GH42-4EA3	2GH42-7EA3	
<b>Unit rating</b> - for I <sub>L</sub> at 50 Hz 690 V <sup>1)</sup> - for I <sub>H</sub> at 50 Hz 690 V <sup>1)</sup>	kW kW	2400 2150	2700 2400	
<b>Output current</b> - Rated current I <sub>N</sub> - Base load current I <sub>L</sub> <sup>2)</sup> - Base load current I <sub>H</sub> <sup>3)</sup>	A A A	2413 2390 2158	2752 2685 2463	
<b>Input current</b> - Rated input current <sup>4)</sup> - Input current, max. - Current requirements for 24 V DC auxiliary supply	A A A	2510 3860 4.7	2865 4400 6.0	
<b>Supply voltages</b> - Line voltage - Line frequency - Electronic power supply	V <sub>ACrms</sub> Hz V <sub>DC</sub>	660 V 3 AC -10 % to 690 V 3 AC +10 % (-15 % < 1 min) 47 ... 63 24 (20.4 ... 28.8)		
<b>Power loss</b>	kW	46	52	
<b>Cooling air requirement</b>	m <sup>3</sup> /s	3.67	5.15	
<b>Sound pressure level</b> L <sub>pA</sub> (1 m) at 50/60 Hz	dB(A)	75/78	75/78	
<b>Line connection</b> - Recommended: IEC <sup>4)</sup> - maximum: IEC - Fixing screw	mm <sup>2</sup> mm <sup>2</sup>	Per sub-cabinet: 4 x 150 8 x 240 M12 (4 holes)	Per sub-cabinet: 4 x 150 8 x 240 M12 (4 holes)	
<b>Motor connection</b> - Recommended: IEC <sup>5)</sup> - maximum: IEC - Fixing screw	mm <sup>2</sup> mm <sup>2</sup>	Per sub-cabinet: 3 x 185 6 x 240 M12 (3 holes)	Per sub-cabinet: 3 x 185 6 x 240 M12 (3 holes)	
<b>Protective conductor connection</b> Fixing screw		Per sub-cabinet: M12 (18 holes)	Per sub-cabinet: M12 (18 holes)	
<b>Max. motor cable length</b> shielded / unshielded	m	300 / 450	300 / 450	
<b>Dimensions</b> (standard version) - Width - Height - Depth	mm mm mm	3600 2000 600	4400 2000 600	
<b>Basic Line Module frame size</b>		GD	GD	
<b>Motor Module frame size</b>		JX	JX	
<b>Weight</b> (without options), approx.	kg	3860	4580	
<b>Recommended protection</b> - Line protection (with option L26) Rated current frame size to IEC 60269 - Line and semiconductor protection (without option L26) Rated current Frame size to IEC 60269	A   A	Per sub-cabinet: 3NA3365-6 3 x 500 3 Per sub-cabinet: 3NE1334-2 3 x 500 2	Per sub-cabinet: 3NA3372 3 x 630 3 Per sub-cabinet: 3NE1436-3 3 x 630 3	

Article number	6SL3710-	2GH42-4EA3	2GH42-7EA3	
Maximum short-circuit current $I_{cc}$ acc. to IEC <sup>6)</sup>	kA	2 x 85	2 x 85	
Minimum short-circuit current <sup>7)</sup>	kA	2 x 2.5	2 x 2.5	

- 1) Rated output of a typical 6-pole standard induction motor based on  $I_L$  or  $I_H$  at 690 V 3 AC 50 Hz.
- 2) The base-load current  $I_L$  is based on a duty cycle of 110% for 60 s or 150% for 10 s with a duty cycle duration of 300 s (see "Overload capability").
- 3) The base-load current  $I_H$  is based on a duty cycle of 150% for 60 s or 160% for 10 s with a duty cycle duration of 300 s (see "Overload capability").
- 4) The current values given here are based on the rated output current.
- 5) The recommendations for the North American market in AWG or MCM must be taken from the appropriate NEC (National Electrical Code) or CEC (Canadian Electrical Code) standards.
- 6) In conjunction with the specified fuses or circuit breakers.
- 7) Minimum current required for reliably triggering protective devices.



## Appendix

### A.1 Environmental compatibility



For environmentally friendly recycling and disposal of your old device, please contact a company certified for the disposal of old electrical and electronic devices and dispose of the device in accordance with the regulations in your country.

### A.2 List of abbreviations

#### Note

The following list of abbreviations includes all abbreviations and their meanings used in the entire SINAMICS family of drives.

Abbreviation	Derivation of abbreviation	Meaning
<b>A</b>		
A...	Alarm	Warning
AC	Alternating Current	Alternating current
ADC	Analog Digital Converter	Analog digital converter
AI	Analog Input	Analog input
AIM	Active Interface Module	Active Interface Module
ALM	Active Line Module	Active Line Module
AO	Analog Output	Analog output
AOP	Advanced Operator Panel	Advanced Operator Panel
APC	Advanced Positioning Control	Advanced Positioning Control
AR	Automatic Restart	Automatic restart
ASC	Armature Short-Circuit	Armature short-circuit
ASCII	American Standard Code for Information Interchange	American coding standard for the exchange of information
AS-i	AS-Interface (Actuator Sensor Interface)	AS-Interface (open bus system in automation technology)
ASM	Asynchronmotor	Induction motor
AVS	Active Vibration Suppression	Active load vibration damping
<b>B</b>		
BB	Betriebsbedingung	Operation condition
BERO	-	Contactless proximity switch
BI	Binector Input	Binector input
BIA	Berufsgenossenschaftliches Institut für Arbeitssicherheit	BG Institute for Occupational Safety and Health
BICO	Binector Connector Technology	Binector connector technology
BLM	Basic Line Module	Basic Line Module

## A.2 List of abbreviations

Abbreviation	Derivation of abbreviation	Meaning
BO	Binector Output	Binector output
BOP	Basic Operator Panel	Basic operator panel
<b>C</b>		
C	Capacitance	Capacitance
C...	-	Safety message
CAN	Controller Area Network	Serial bus system
CBC	Communication Board CAN	Communication Board CAN
CBE	Communication Board Ethernet	PROFINET communication module (Ethernet)
CD	Compact Disc	Compact disc
CDS	Command Data Set	Command data set
CF Card	CompactFlash Card	CompactFlash card
CI	Connector Input	Connector input
CLC	Clearance Control	Clearance control
CNC	Computerized Numerical Control	Computer-supported numerical control
CO	Connector Output	Connector output
CO/BO	Connector Output/Binector Output	Connector/binector output
COB-ID	CAN Object-Identification	CAN Object Identification
CoL	Certificate of License	Certificate of License
COM	Common contact of a change-over relay	Center contact of a change-over contact
COMM	Commissioning	Commissioning
CP	Communication Processor	Communications processor
CPU	Central Processing Unit	Central processing unit
CRC	Cyclic Redundancy Check	Cyclic redundancy check
CSM	Control Supply Module	Control Supply Module
CU	Control Unit	Control Unit
CUA	Control Unit Adapter	Control Unit Adapter
CUD	Control Unit DC	Control Unit DC
<b>D</b>		
DAC	Digital Analog Converter	Digital analog converter
DC	Direct Current	Direct current
DCB	Drive Control Block	Drive Control Block
DCBRK	DC Brake	DC braking
DCC	Drive Control Chart	Drive Control Chart
DCN	Direct Current Negative	Direct current negative
DCP	Direct Current Positive	Direct current positive
DDC	Dynamic Drive Control	Dynamic Drive Control
DDS	Drive Data Set	Drive Data Set
DI	Digital Input	Digital input
DI/DO	Digital Input/Digital Output	Digital input/output, bidirectional
DMC	DRIVE-CLiQ Hub Module Cabinet	DRIVE-CLiQ Hub Module Cabinet
DME	DRIVE-CLiQ Hub Module External	DRIVE-CLiQ Hub Module External
DMM	Double Motor Module	Double Motor Module
DO	Digital Output	Digital output
DO	Drive Object	Drive object
DP	Decentralized Peripherals	Distributed I/O
DPRAM	Dual Ported Random Access Memory	Dual-Port Random Access Memory

Abbreviation	Derivation of abbreviation	Meaning
DQ	DRIVE-CLiQ	DRIVE-CLiQ
DRAM	Dynamic Random Access Memory	Dynamic Random Access Memory
DRIVE-CLiQ	Drive Component Link with IQ	Drive Component Link with IQ
DSC	Dynamic Servo Control	Dynamic Servo Control
DSM	Doppelsubmodul	Double submodule
DTC	Digital Time Clock	Timer
<b>E</b>		
EASC	External Armature Short-Circuit	External armature short-circuit
EDS	Encoder Data Set	Encoder data set
EEPROM	Electrically Erasable Programmable Read-Only Memory	Electrically Erasable Programmable Read-Only Memory
EGB	Elektrostatisch gefährdete Baugruppen	Electrostatically sensitive devices
EIP	EtherNet/IP	EtherNet Industrial Protocol (real-time Ethernet)
ELCB	Earth Leakage Circuit Breaker	Residual current operated circuit breaker
ELP	Earth Leakage Protection	Ground-fault monitoring
EMC	Electromagnetic Compatibility	Electromagnetic compatibility
EMF	Electromotive Force	Electromotive force
EMK	Elektromotorische Kraft	Electromotive force
EMV	Elektromagnetische Verträglichkeit	Electromagnetic compatibility
EN	Europäische Norm	European standard
EnDat	Encoder-Data-Interface	Encoder interface
EP	Enable Pulses	Pulse enable
EPOS	Einfachpositionierer	Basic positioner
ES	Engineering System	Engineering system
ESB	Ersatzschaltbild	Equivalent circuit diagram
ESD	Electrostatic Sensitive Devices	Electrostatically sensitive devices
ESM	Essential Service Mode	Essential service mode
ESR	Extended Stop and Retract	Extended stop and retract
<b>F</b>		
F...	Fault	Fault
FAQ	Frequently Asked Questions	Frequently Asked Questions
FBLOCKS	Free Blocks	Free function blocks
FCC	Function Control Chart	Function control chart
FCC	Flux Current Control	Flux current control
FD	Function Diagram	Function diagram
F-DI	Failsafe Digital Input	Fail-safe digital input
F-DO	Failsafe Digital Output	Fail-safe digital output
FEPRM	Flash-EPROM	Non-volatile write and read memory
FG	Function Generator	Function generator
FI	-	Fault current
FOC	Fiber-Optic Cable	Fiber-optic cable
FP	Funktionsplan	Function diagram
FPGA	Field Programmable Gate Array	Field Programmable Gate Array
FW	Firmware	Firmware
<b>G</b>		
GB	Gigabyte	Gigabyte

Abbreviation	Derivation of abbreviation	Meaning
GC	Global Control	Global control telegram (broadcast telegram)
GND	Ground	Reference potential for all signal and operating voltages, usually defined as 0 V (also referred to as M)
GSD	Gerätstammdatei	Generic Station Description: Describes the features of a PROFIBUS slave
GSV	Gate Supply Voltage	Gate supply voltage
GUID	Globally Unique Identifier	Globally Unique Identifier
<b>H</b>		
HF	High frequency	High frequency
HFD	Hochfrequenzdrossel	Radio frequency reactor
HLA	Hydraulic Linear Actuator	Hydraulic linear actuator
HLG	Hochlaufgeber	Ramp-function generator
HM	Hydraulic Module	Hydraulic Module
HMI	Human Machine Interface	Human Machine Interface
HTL	High-Threshold Logic	Logic with high interference threshold
HW	Hardware	Hardware
<b>I</b>		
i. V.	In Vorbereitung	Under development: This property is currently not available
I/O	Input/Output	Input/output
I2C	Inter-Integrated Circuit	Internal serial data bus
IASC	Internal Armature Short-Circuit	Internal armature short-circuit
IBN	Inbetriebnahme	Commissioning
ID	Identifier	Identification
IE	Industrial Ethernet	Industrial Ethernet
IEC	International Electrotechnical Commission	International Electrotechnical Commission
IF	Interface	Interface
IGBT	Insulated Gate Bipolar Transistor	Insulated gate bipolar transistor
IGCT	Integrated Gate-Controlled Thyristor	Semiconductor power switch with integrated control electrode
IL	Impulslöschung	Pulse suppression
IP	Internet Protocol	Internet Protocol
IPO	Interpolator	Interpolator
IT	Isolé Terre	Non-grounded three-phase line supply
IVP	Internal Voltage Protection	Internal voltage protection
<b>J</b>		
JOG	Jogging	Jogging
<b>K</b>		
KDV	Kreuzweiser Datenvergleich	Data cross-check
KHP	Know-how protection	Know-how protection
KIP	Kinetische Pufferung	Kinetic buffering
Kp	-	Proportional gain
KTY84-130	-	Temperature sensor
<b>L</b>		
L	-	Symbol for inductance
LED	Light Emitting Diode	Light emitting diode



Abbreviation	Derivation of abbreviation	Meaning
LIN	Linearmotor	Linear motor
LR	Lageregler	Position controller
LSB	Least Significant Bit	Least significant bit
LSC	Line-Side Converter	Line-side converter
LSS	Line-Side Switch	Line-side switch
LU	Length Unit	Length unit
LWL	Lichtwellenleiter	Fiber-optic cable
<b>M</b>		
M	-	Symbol for torque
M	Masse	Reference potential for all signal and operating voltages, usually defined as 0 V (also referred to as GND)
MB	Megabyte	Megabyte
MCC	Motion Control Chart	Motion Control Chart
MDI	Manual Data Input	Manual data input
MDS	Motor Data Set	Motor data set
MLFB	Maschinenlesbare Fabrikatebezeichnung	Machine-readable product code
MM	Motor Module	Motor Module
MMC	Man-Machine Communication	Man-machine communication
MMC	Micro Memory Card	Micro memory card
MSB	Most Significant Bit	Most significant bit
MSC	Motor-Side Converter	Motor-side converter
MSCY_C1	Master Slave Cycle Class 1	Cyclic communication between master (class 1) and slave
MSR	Motorstromrichter	Motor-side converter
MT	Messtaster	Probe
<b>N</b>		
N. C.	Not Connected	Not connected
N...	No Report	No report or internal message
NAMUR	Normenarbeitsgemeinschaft für Mess- und Regeltechnik in der chemischen Industrie	Standardization association for measurement and control in chemical industries
NC	Normally Closed (contact)	NC contact
NC	Numerical Control	Numerical control
NEMA	National Electrical Manufacturers Association	Standardization association in USA (United States of America)
NM	Nullmarke	Zero mark
NO	Normally Open (contact)	NO contact
NSR	Netzstromrichter	Line-side converter
NTP	Network Time Protocol	Standard for synchronization of the time of day
NVRAM	Non-Volatile Random Access Memory	Non-volatile read/write memory
<b>O</b>		
OA	Open Architecture	Software component which provides additional functions for the SINAMICS drive system
OAIF	Open Architecture Interface	Version of the SINAMICS firmware as of which the OA application can be used
OASP	Open Architecture Support Package	Expands the commissioning tool by the corresponding OA application
OC	Operating Condition	Operation condition

Abbreviation	Derivation of abbreviation	Meaning
OCC	One Cable Connection	One-cable technology
OEM	Original Equipment Manufacturer	Original equipment manufacturer
OLP	Optical Link Plug	Bus connector for fiber-optic cable
OMI	Option Module Interface	Option Module Interface
<b>P</b>		
p...	-	Adjustable parameters
P1	Processor 1	CPU 1
P2	Processor 2	CPU 2
PB	PROFIBUS	PROFIBUS
PcCtrl	PC Control	Master control
PD	PROFIdrive	PROFIdrive
PDC	Precision Drive Control	Precision Drive Control
PDS	Power unit Data Set	Power unit data set
PDS	Power Drive System	Drive system
PE	Protective Earth	Protective ground
PELV	Protective Extra Low Voltage	Safety extra-low voltage
PFH	Probability of dangerous failure per hour	Probability of dangerous failure per hour
PG	Programmiergerät	Programming device
PI	Proportional Integral	Proportional integral
PID	Proportional Integral Differential	Proportional integral differential
PLC	Programmable Logical Controller	Programmable logic controller
PLL	Phase-Locked Loop	Phase-locked loop
PM	Power Module	Power Module
PMI	Power Module Interface	Power Module Interface
PMSM	Permanent-magnet synchronous motor	Permanent-magnet synchronous motor
PN	PROFINET	PROFINET
PNO	PROFIBUS Nutzerorganisation	PROFIBUS user organization
PPI	Point to Point Interface	Point-to-point interface
PRBS	Pseudo Random Binary Signal	White noise
PROFIBUS	Process Field Bus	Serial data bus
PS	Power Supply	Power supply
PSA	Power Stack Adapter	Power Stack Adapter
PT1000	-	Temperature sensor
PTC	Positive Temperature Coefficient	Positive temperature coefficient
PTP	Point To Point	Point-to-point
PWM	Pulse Width Modulation	Pulse width modulation
PZD	Prozessdaten	Process data
<b>Q</b>		
<b>R</b>		
r...	-	Display parameters (read-only)
RAM	Random Access Memory	Memory for reading and writing
RCCB	Residual Current Circuit Breaker	Residual current operated circuit breaker
RCD	Residual Current Device	Residual current device
RCM	Residual Current Monitor	Residual current monitor
REL	Reluctance motor textile	Reluctance motor textile
RESM	Reluctance synchronous motor	Synchronous reluctance motor

Abbreviation	Derivation of abbreviation	Meaning
RFG	Ramp-Function Generator	Ramp-function generator
RJ45	Registered Jack 45	Term for an 8-pin socket system for data transmission with shielded or non-shielded multi-wire copper cables
RKA	Rückkühlanlage	Cooling unit
RLM	Renewable Line Module	Renewable Line Module
RO	Read Only	Read only
ROM	Read-Only Memory	Read-only memory
RPDO	Receive Process Data Object	Receive Process Data Object
RS232	Recommended Standard 232	Interface standard for cable-connected serial data transmission between a sender and receiver (also known as EIA232)
RS485	Recommended Standard 485	Interface standard for a cable-connected differential, parallel, and/or serial bus system (data transmission between a number of senders and receivers, also known as EIA485)
RTC	Real Time Clock	Real-time clock
RZA	Raumzeigerapproximation	Space-vector approximation
<b>S</b>		
S1	-	Continuous operation
S3	-	Intermittent duty
SAM	Safe Acceleration Monitor	Safe acceleration monitoring
SBC	Safe Brake Control	Safe brake control
SBH	Sicherer Betriebshalt	Safe operating stop
SBR	Safe Brake Ramp	Safe brake ramp monitoring
SBT	Safe Brake Test	Safe brake test
SCA	Safe Cam	Safe cam
SCC	Safety Control Channel	Safety Control Channel
SCSE	Single Channel Safety Encoder	Single-channel safety encoder
SD Card	SecureDigital Card	Secure digital memory card
SDC	Standard Drive Control	Standard Drive Control
SDI	Safe Direction	Safe motion direction
SE	Sicherer Software-Endschalter	Safe software limit switch
SESM	Separately-excited synchronous motor	Separately excited synchronous motor
SG	Sicher reduzierte Geschwindigkeit	Safely limited speed
SGA	Sicherheitsgerichteter Ausgang	Safety-related output
SGE	Sicherheitsgerichteter Eingang	Safety-related input
SH	Sicherer Halt	Safe stop
SI	Safety Integrated	Safety Integrated
SIC	Safety Info Channel	Safety Info Channel
SIL	Safety Integrity Level	Safety Integrity Level
SITOP	-	Siemens power supply system
SLA	Safely-Limited Acceleration	Safely limited acceleration
SLM	Smart Line Module	Smart Line Module
SLP	Safely-Limited Position	Safely Limited Position
SLS	Safely-Limited Speed	Safely limited speed
SLVC	Sensorless Vector Control	Sensorless vector control

Abbreviation	Derivation of abbreviation	Meaning
SM	Sensor Module	Sensor Module
SMC	Sensor Module Cabinet	Sensor Module Cabinet
SME	Sensor Module External	Sensor Module External
SMI	SINAMICS Sensor Module Integrated	SINAMICS Sensor Module Integrated
SMM	Single Motor Module	Single Motor Module
SN	Sicherer Software-Nocken	Safe software cam
SOS	Safe Operating Stop	Safe operating stop
SP	Service Pack	Service pack
SP	Safe Position	Safe position
SPC	Setpoint Channel	Setpoint channel
SPI	Serial Peripheral Interface	Serial peripheral interface
SPS	Speicherprogrammierbare Steuerung	Programmable logic controller
SS1	Safe Stop 1	Safe Stop 1 (time-monitored, ramp-monitored)
SS1E	Safe Stop 1 External	Safe Stop 1 with external stop
SS2	Safe Stop 2	Safe Stop 2
SS2E	Safe Stop 2 External	Safe Stop 2 with external stop
SSI	Synchronous Serial Interface	Synchronous serial interface
SSL	Secure Sockets Layer	Encryption protocol for secure data transfer (new TLS)
SSM	Safe Speed Monitor	Safe feedback from speed monitor
SSP	SINAMICS Support Package	SINAMICS support package
STO	Safe Torque Off	Safe torque off
STW	Steuerwort	Control word
<b>T</b>		
TB	Terminal Board	Terminal Board
TEC	Technology Extension	Software component which is installed as an additional technology package and which expands the functionality of SINAMICS (previously OA application)
TIA	Totally Integrated Automation	Totally Integrated Automation
TLS	Transport Layer Security	Encryption protocol for secure data transfer (previously SSL)
TM	Terminal Module	Terminal Module
TN	Terre Neutre	Grounded three-phase line supply
T <sub>n</sub>	-	Integral time
TPDO	Transmit Process Data Object	Transmit Process Data Object
TSN	Time-Sensitive Networking	Time-Sensitive Networking
TT	Terre Terre	Grounded three-phase line supply
TTL	Transistor-Transistor-Logic	Transistor-transistor logic
T <sub>v</sub>	-	Rate time
<b>U</b>		
UL	Underwriters Laboratories Inc.	Underwriters Laboratories Inc.
UPS	Uninterruptible Power Supply	Uninterruptible power supply
USV	Unterbrechungsfreie Stromversorgung	Uninterruptible power supply
UTC	Universal Time Coordinated	Universal time coordinated
<b>V</b>		
VC	Vector Control	Vector control

Abbreviation	Derivation of abbreviation	Meaning
Vdc	-	DC link voltage
VdcN	-	Partial DC link voltage negative
VdcP	-	Partial DC link voltage positive
VDE	Verband Deutscher Elektrotechniker	Verband Deutscher Elektrotechniker [Association of German Electrical Engineers]
VDI	Verein Deutscher Ingenieure	Verein Deutscher Ingenieure [Association of German Engineers]
VPM	Voltage Protection Module	Voltage Protection Module
Vpp	Volt peak to peak	Volt peak to peak
VSM	Voltage Sensing Module	Voltage Sensing Module
<b>W</b>		
WEA	Wiedereinschaltautomatik	Automatic restart
WZM	Werkzeugmaschine	Machine tool
<b>X</b>		
XML	Extensible Markup Language	Extensible markup language (standard language for Web publishing and document management)
<b>Y</b>		
<b>Z</b>		
ZK	Zwischenkreis	DC link
ZM	Zero Mark	Zero mark
ZSW	Zustandswort	Status word

## A.3 Parameter macros

### Parameter macro p0015 = G150 cabinet unit

This macro is used to make default settings for operating the cabinet unit.

Table A- 1 Parameter macro p0015 = G150 cabinet unit

Sink			Source		
Parameters	Description	DO	Parameters	Description	DO
p0400[0]	Encoder type selection	Vector	9999	User-defined	Vector
p0404[0]	Encoder configuration	Vector	200008h		Vector
p0405[0]	Square-wave encoder track A/B	Vector	9h	Bipolar, like A/B track	Vector
p0408[0]	Rotary encoder pulse no.	Vector	1024	1024 pulses per revolution	Vector
p0420[0]	Encoder connection	Vector	0x2	Encoder connection = terminal	Vector
p0500	Technology application	Vector	1	Pumps, fans	Vector
p0600	Motor temperature sensor for monitoring	Vector	0	No sensor	Vector
p0601	Motor temperature sensor type	Vector	0	No sensor	Vector
p0603	CI: Motor temperature	Vector	r4105	Sensor on TM31	TM31
p0604	Motor overtemperature alarm threshold	Vector	120	120 °C	Vector
p0605	Motor overtemperature fault threshold	Vector	155	155 °C	Vector
p0606	Motor overtemperature timer	Vector	0	0 s	Vector
p0610	Response to motor overtemperature condition	Vector	12	Messages, no reduction of I_max, temperature saved	Vector
p0700[0]	Macro binector input (BI)	Vector	70005	PROFIdrive	Vector
p0864	BI: Infeed operation	Vector	1		Vector
p1000[0]	Macro connector inputs (CI) for speed setpoints	Vector	100001	PROFIdrive	Vector
p1001	CO: Fixed speed setpoint 1	Vector	300	300 rpm	Vector
p1002	CO: Fixed speed setpoint 2	Vector	600	600 rpm	Vector
p1003	CO: Fixed speed setpoint 3	Vector	1500	1500 rpm	Vector
p1083	CO: Speed limit in positive direction of rotation	Vector	6000	6000 rpm	Vector
p1086	CO: Speed limit in negative direction of rotation	Vector	-6000	-6000 rpm	Vector
p1115	Ramp-function generator selection	Vector	1	Extended ramp-function generator	Vector
p1120	Ramp-function generator ramp-up time	Vector	20	20 s	Vector
p1121	Ramp-function generator ramp-down time	Vector	30	30 s	Vector
p1135	OFF3 ramp-down time	Vector	10	10 s	Vector
p1200	Flying restart operating mode	Vector	0	Flying restart not active	Vector
p1240	Vdc controller configuration	Vector	1	Vdc-max controller enabled	Vector
p1254	Vdc controller automatic ON level detection	Vector	1	Automatic detection enabled	Vector
p1280	Vdc controller configuration (V/f)	Vector	1	Vdc-max controller enabled	Vector

Sink			Source		
Parameters	Description	DO	Parameters	Description	DO
p1300	Open-loop/closed-loop control operating mode	Vector	20	Encoderless speed control	Vector
p1911	Number of phases to be identified	Vector	1	1 phase	Vector
p2051[0]	CI: PROFIBUS PZD send word	Vector	r2089[0]	ZSW1	Vector
p2051[1]	CI: PROFIBUS PZD send word	Vector	r0063[0]	n-act unsmoothed	Vector
p2051[2]	CI: PROFIBUS PZD send word	Vector	r0068[0]	l-act unsmoothed	Vector
p2051[3]	CI: PROFIBUS PZD send word	Vector	r0080[0]	M-act unsmoothed	Vector
p2051[4]	CI: PROFIBUS PZD send word	Vector	r0082[0]	P-act unsmoothed	Vector
p2051[5]	CI: PROFIBUS PZD send word	Vector	r2131	FAULT	Vector
p2080[0]	BI: PROFIBUS send status word 1	Vector	r0899.0	Ready for switching on	Vector
p2080[1]	BI: PROFIBUS send status word 1	Vector	r0899.1	Ready for operation	Vector
p2080[2]	BI: PROFIBUS send status word 1	Vector	r0899.2	Operation	Vector
p2080[3]	BI: PROFIBUS send status word 1	Vector	r2139.3	Fault	Vector
p2080[4]	BI: PROFIBUS send status word 1	Vector	r0899.4	No OFF2	Vector
p2080[5]	BI: PROFIBUS send status word 1	Vector	r0899.5	No OFF3	Vector
p2080[6]	BI: PROFIBUS send status word 1	Vector	r0899.6	Switching on inhibited	Vector
p2080[7]	BI: PROFIBUS send status word 1	Vector	r2139.7	Alarm active	Vector
p2080[8]	BI: PROFIBUS send status word 1	Vector	r2197.7	No setpoint/actual value deviation	Vector
p2080[9]	BI: PROFIBUS send status word 1	Vector	r0899.9	Control request	Vector
p2080[10]	BI: PROFIBUS send status word 1	Vector	r2199.1	Comparison value reached	Vector
p2080[11]	BI: PROFIBUS send status word 1	Vector	r1407.7	M/I/P limiting not active	Vector
p2080[12]	BI: PROFIBUS send status word 1	Vector	0		Vector
p2080[13]	BI: PROFIBUS send status word 1	Vector	r2129.14	No alarm for motor overtemperature	Vector
p2080[14]	BI: PROFIBUS send status word 1	Vector	r2197.3	Clockwise	Vector
p2080[15]	BI: PROFIBUS send status word 1	Vector	r2129.15	No Therm. alarm Power unit overload	Vector
p2088	PROFIBUS Invert status word	Vector	B800h		Vector
p2128[14]	Select fault/alarm code for trigger	Vector	7910	A7910: Alarm, motor overtemperature	Vector
p2128[15]	Select fault/alarm code for trigger	Vector	5000	A5000: Therm. alarm Power unit overload	Vector
p2153	Time constant revolutions actual value filter	Vector	20	20 ms	Vector
p4053[0]	TM31 analog inputs, smoothing time constant	TM31	0	0 ms	TM31
p4053[1]	TM31 analog inputs, smoothing time constant	TM31	0	0 ms	TM31
p4056[0]	Type of analog inputs	TM31	2	Current 0...20 mA	TM31
p4056[1]	Type of analog inputs	TM31	2	Current 0...20 mA	TM31
p4076[0]	Type of analog outputs	TM31	0	Current 0...20 mA	TM31
p4076[1]	Type of analog outputs	TM31	0	Current 0...20 mA	TM31
p4071[0]	Signal analog output 0	TM31	r0063	Actual speed value smoothed	Vector
p4071[1]	Signal analog output 1	TM31	r0068	Absolute current actual value	Vector
p4100	Type of temperature sensor	TM31	0	Evaluation disabled	TM31
p4102[0]	Alarm threshold, temperature sensing	TM31	251 °C	When this value is exceeded, alarm A35211 is triggered.	TM31

Sink			Source		
Parameters	Description	DO	Parameters	Description	DO
p4102[1]	Fault threshold for temperature sensing	TM31	251 °C	When this value is exceeded, fault F35207 is triggered.	TM31
p7003	Winding system	Vector	1	Separate winding systems	Vector

### Parameter macro p0700 = 5: PROFIdrive (70005)

This macro is used to set the PROFIdrive interface as the default command source.

Table A-2 Parameter macro p0700 = 5: PROFIdrive

Sink			Source		
Parameters	Description	DO	Parameters	Description	DO
p0840[0]	ON/OFF1	Vector	r2090.0	PZD 1 bit 0	Vector
p0844[0]	No OFF2_1	Vector	r2090.1	PZD 1 bit 1	Vector
p0845[0]	No OFF2_2	Vector	r0722.3	CU DI3	CU
p0848[0]	No OFF3_1	Vector	r2090.2	PZD 1 bit 2	Vector
p0849[0]	No OFF3_2	Vector	r0722.2	CU DI2	CU
p0806	Inhibit LOCAL mode	Vector	0		Vector
p0810	Changeover CDS bit 0	Vector	0		Vector
p0852	Enable operation	Vector	r2090.3	PZD 1 bit 3	Vector
p0854	Control request	Vector	r2090.10	PZD 1 bit 10	Vector
p0922	PROFIdrive PZD telegram selection	Vector	999	Free telegram configuration	
p1020	FSW bit 0	Vector	0		Vector
p1021	FSW bit 1	Vector	0		Vector
p1035	MOP raise	Vector	r2090.13	PZD 1 bit 13	Vector
p1036	MOP lower	Vector	r2090.14	PZD 1 bit 14	Vector
p1113	Setpoint inversion	Vector	r2090.11	PZD 1 bit 11	Vector
p1140	Enable RFG	Vector	r2090.4	PZD 1 bit 4	Vector
p1141	Continue RFG	Vector	r2090.5	PZD 1 bit 5	Vector
p1142	Enable nsetp	Vector	r2090.6	PZD 1 bit 6	Vector
p2103	Acknowledge fault 1	Vector	r2090.7	PZD 1 bit 7	Vector
p2104	Acknowledge fault 2	Vector	r4022.3	TM31 DI3	TM31
p2106	Ext. fault_1	Vector	r0722.1	CU DI1	CU
p2107	Ext. fault_2	Vector	1		Vector
p2112	Ext. alarm_1	Vector	r0722.0	CU DI0	CU
p2116	Ext. alarm_2	Vector	1		Vector
p0738	DI/DO8	CU	1	+24 V	CU
p0748.8	Invert DI/DO8	CU	0	Not inverted	
p0728.8	Set DI/DO8 input or output	CU	1	Output	
p0739	DI/DO9	CU	1	+24 V	CU
p0748.9	Invert DI/DO9	CU	0	Not inverted	
p0728.9	Set DI/DO9 input or output	CU	1	Output	
p0740	DI/DO10	CU	1	+24 V	CU
p0748.10	Invert DI/DO10	CU	0	Not inverted	



Sink			Source		
Parameters	Description	DO	Parameters	Description	DO
p0728.10	Set DI/DO10 input or output	CU	1	Output	
p0741	DI/DO11	CU	1	+24 V	CU
p0748.11	Invert DI/DO11	CU	0	Not inverted	
p0728.11	Set DI/DO11 input or output	CU	1	Output	
p0742	DI/DO12	CU	1	+24 V	CU
p0748.12	Invert DI/DO12	CU	0	Not inverted	
p0728.12	Set DI/DO12 input or output	CU	1	Output	
p0743	DI/DO13	CU	r0899.6	Switching on inhibited	Vector
p0748.13	Invert DI/DO13	CU	1	Inverted	
p0728.13	Set DI/DO13 input or output	CU	1	Output	
p0744	DI/DO14	CU	1	+24 V	CU
p0748.14	Invert DI/DO14	CU	0	Not inverted	
p0728.14	Set DI/DO14 input or output	CU	1	Output	
p0745	DI/DO15	CU	r2138.7	Ack. fault	Vector
p0748.15	Invert DI/DO15	CU	0	Not inverted	
p0728.15	Set DI/DO15 input or output	CU	1	Output	
p2103	Acknowledge fault 1	TM31	r2090.7	PZD 1 bit 7	Vector
p2104	Acknowledge fault 2	TM31	r4022.3	TM31 DI3	TM31
p4030	DO0	TM31	r0899.11	Pulses enabled	Vector
p4031	DO1	TM31	r2139.3	Fault	Vector
p4048.1	Invert DO1	TM31	1	Inverted	
p4038	DO8	TM31	r0899.0	Ready for switching on	Vector
p4028.8	Set DI/DO8 input or output	TM31	1	Output	
p4039	DO9	TM31	0		TM31
p4028.9	Set DI/DO9 input or output	TM31	0	Input	
p4040	DO10	TM31	0		TM31
p4028.10	Set DI/DO10 input or output	TM31	0	Input	
p4041	DO11	TM31	0		TM31
p4028.11	Set DI/DO11 input or output	TM31	0	Input	

**Parameter macro p0700 = 6: Terminal block TM31 (70006)**

This macro is used to set customer terminal block TM31 as the command source.

Table A-3 Parameter macro p0700 = 6: Terminal block TM31

Sink			Source		
Parameter	Description	DO	Parameter	Description	DO
p0840[0]	ON/OFF1	Vector	r4022.0	TM31 DI0	TM31
p0844[0]	No OFF2_1	Vector	1		CU
p0845[0]	No OFF2_2	Vector	r0722.3	CU DI3	CU
p0848[0]	No OFF3_1	Vector	1		Vector
p0849[0]	No OFF3_2	Vector	r0722.2	CU DI2	CU
p0806	Inhibit LOCAL mode	Vector	0		Vector
p0810	Changeover CDS bit 0	Vector	0		Vector
p0852	Enable operation	Vector	r4022.4	TM31 DI4	TM31
p0854	Control request	Vector	1		Vector
p0922	PROFIdrive PZD telegram selection	Vector	999	Free telegram configuration	
p1020	FSW bit 0	Vector	r4022.1	TM31 DI1	TM31
p1021	FSW bit 1	Vector	r4022.2	TM31 DI2	TM31
p1035	MOP raise	Vector	r4022.1	TM31 DI1	TM31
p1036	MOP lower	Vector	r4022.2	TM31 DI2	TM31
p1113	Direction of rotation reversal	Vector	0		TM31
p1140	Enable RFG	Vector	1		Vector
p1141	Start RFG	Vector	1		Vector
p1142	Enable nsetp	Vector	1		Vector
p2103	Acknowledge fault 1	Vector	0		Vector
p2104	Acknowledge fault 2	Vector	r4022.3	TM31 DI3	TM31
p2106	Ext. fault_1	Vector	r0722.1	CU DI1	CU
p2107	Ext. fault_2	Vector	1		Vector
p2112	Ext. alarm_1	Vector	r0722.0	CU DI0	CU
p2116	Ext. alarm_2	Vector	1		Vector
p0738	DI/DO8	CU	1	+24 V	CU
p0748.8	Invert DI/DO8	CU	0	Not inverted	
p0728.8	Set DI/DO8 input or output	CU	1	Output	
p0739	DI/DO9	CU	1	+24 V	CU
p0748.9	Invert DI/DO9	CU	0	Not inverted	
p0728.9	Set DI/DO9 input or output	CU	1	Output	
p0740	DI/DO10	CU	1	+24 V	CU
p0748.10	Invert DI/DO10	CU	0	Not inverted	
p0728.10	Set DI/DO10 input or output	CU	1	Output	
p0741	DI/DO11	CU	1	+24 V	CU
p0748.11	Invert DI/DO11	CU	0	Not inverted	
p0728.11	Set DI/DO11 input or output	CU	1	Output	
p0742	DI/DO12	CU	1	+24 V	CU
p0748.12	Invert DI/DO12	CU	0	Not inverted	
p0728.12	Set DI/DO12 input or output	CU	1	Output	

Sink			Source		
Parameter	Description	DO	Parameter	Description	DO
p0743	DI/DO13	CU	r0899.6	Power-on inhibit active	Vector
p0748.13	Invert DI/DO13	CU	1	Inverted	
p0728.13	Set DI/DO13 input or output	CU	1	Output	
p0744	DI/DO14	CU	1	+24 V	CU
p0748.14	Invert DI/DO14	CU	0	Not inverted	
p0728.14	Set DI/DO14 input or output	CU	1	Output	
p0745	DI/DO15	CU	r2138.7	Ackn fault	Vector
p0748.15	Invert DI/DO15	CU	0	Not inverted	
p0728.15	Set DI/DO15 input or output	CU	1	Output	
p2103	Acknowledge fault 1	TM31	0		TM31
p2104	Acknowledge fault 2	TM31	r4022.3	TM31 DI3	TM31
p4030	DO0	TM31	r0899.11	Pulses enabled	Vector
p4031	DO1	TM31	r2139.3	Fault	Vector
p4048.1	Invert DO1	TM31	1	Inverted	
p4038	DO8	TM31	r0899.0	Ready to start	Vector
p4028.8	Set DI/DO8 input or output	TM31	1	Output	
p4039	DO9	TM31	0		TM31
p4028.9	Set DI/DO9 input or output	TM31	0	Input	
p4040	DO10	TM31	0		TM31
p4028.10	Set DI/DO10 input or output	TM31	0	Input	
p4041	DO11	TM31	0		TM31
p4028.11	Set DI/DO11 input or output	TM31	0	Input	

**Parameter macro p0700 = 7: NAMUR (70007)**

This macro is used to set the NAMUR terminal block as the default command source.

Table A- 4 Parameter macro p0700 = 7: NAMUR

Sink			Source		
Parameter	Description	DO	Parameter	Description	DO
p0840[0]	ON/OFF1	Vector	r4022.0	TM31 DI0	TM31
p0844[0]	No OFF2_1	Vector	r4022.4	TM31 DI4	TM31
p0845[0]	No OFF2_2	Vector	r0722.3	CU DI3	CU
p0848[0]	No OFF3_1	Vector	r4022.5	TM31 DI5	TM31
p0849[0]	No OFF3_2	Vector	1		Vector
p0806	Inhibit LOCAL mode	Vector	0		Vector
p0810	Changeover CDS bit 0	Vector	0		Vector
p0852	Enable operation	Vector	1		Vector
p0854	Control request	Vector	1		Vector
p0922	PROFIdrive PZD telegram selection	Vector	999	Free telegram configuration	
p1020	FSW bit 0	Vector	r4022.1	TM31 DI1	TM31
p1021	FSW bit 1	Vector	r4022.2	TM31 DI2	TM31
p1035	MOP raise	Vector	r4022.1	TM31 DI1	TM31
p1036	MOP lower	Vector	r4022.2	TM31 DI2	TM31
p1113	Direction of rotation reversal	Vector	r4022.6	TM31 DI6	TM31
p1140	Enable RFG	Vector	1		Vector
p1141	Start RFG	Vector	1		Vector
p1142	Enable nsetp	Vector	1		Vector
p2103	Acknowledge fault 1	Vector	0		Vector
p2104	Acknowledge fault 2	Vector	r4022.3	TM31 DI3	TM31
p2106	Ext. fault_1	Vector	r0722.1	CU DI1	CU
p2107	Ext. fault_2	Vector	1		Vector
p2112	Ext. alarm_1	Vector	r0722.0	CU DI0	CU
p2116	Ext. alarm_2	Vector	1		Vector
p0738	DI/DO8	CU	1	+24 V	CU
p0748.8	Invert DI/DO8	CU	0	Not inverted	
p0728.8	Set DI/DO8 input or output	CU	1	Output	
p0739	DI/DO9	CU	1	+24 V	CU
p0748.9	Invert DI/DO9	CU	0	Not inverted	
p0728.9	Set DI/DO9 input or output	CU	1	Output	
p0740	DI/DO10	CU	1	+24 V	CU
p0748.10	Invert DI/DO10	CU	0	Not inverted	
p0728.10	Set DI/DO10 input or output	CU	1	Output	
p0741	DI/DO11	CU	1	+24 V	CU
p0748.11	Invert DI/DO11	CU	0	Not inverted	
p0728.11	Set DI/DO11 input or output	CU	1	Output	
p0742	DI/DO12	CU	1	+24 V	CU
p0748.12	Invert DI/DO12	CU	0	Not inverted	
p0728.12	Set DI/DO12 input or output	CU	1	Output	

Sink			Source		
Parameter	Description	DO	Parameter	Description	DO
p0743	DI/DO13	CU	r0899.6	Power-on inhibit active	Vector
p0748.13	Invert DI/DO13	CU	1	Inverted	
p0728.13	Set DI/DO13 input or output	CU	1	Output	
p0744	DI/DO14	CU	1	+24 V	CU
p0748.14	Invert DI/DO14	CU	0	Not inverted	
p0728.14	Set DI/DO14 input or output	CU	1	Output	
p0745	DI/DO15	CU	r2138.7	Ackn fault	Vector
p0748.15	Invert DI/DO15	CU	0	Not inverted	
p0728.15	Set DI/DO15 input or output	CU	1	Output	
p2103	Acknowledge fault 1	TM31	0		TM31
p2104	Acknowledge fault 2	TM31	r4022.3	TM31 DI3	TM31
p4030	DO0	TM31	r0899.11	Pulses enabled	Vector
p4031	DO1	TM31	r2139.3	Fault	Vector
p4048.1	Invert DO1	TM31	1	Inverted	
p4038	DO8	TM31	r0899.0	Ready to start	Vector
p4028.8	Set DI/DO8 input or output	TM31	1	Output	
p4039	DO9	TM31	0		TM31
p4028.9	Set DI/DO9 input or output	TM31	0	Input	
p4040	DO10	TM31	0		TM31
p4028.10	Set DI/DO10 input or output	TM31	0	Input	
p4041	DO11	TM31	0		TM31
p4028.11	Set DI/DO11 input or output	TM31	0	Input	

**Parameter macro p0700 = 10: PROFIdrive NAMUR (70010)**

This macro is used to set the PROFIdrive NAMUR interface as the default command source.

Table A- 5 Parameter macro p0700 = 10: PROFIdrive NAMUR

Sink			Source		
Parameters	Description	DO	Parameters	Description	DO
p0840[0]	ON/OFF1	Vector	0	Assignment with p0922 = 20	Vector
p0844[0]	No OFF2_1	Vector	1	Assignment with p0922 = 20	Vector
p0845[0]	No OFF2_2	Vector	r0722.3	CU DI3	CU
p0848[0]	No OFF3_1	Vector	0	Assignment with p0922 = 20	Vector
p0849[0]	No OFF3_2	Vector	1		Vector
p0806	Inhibit LOCAL mode	Vector	0		Vector
p0810	Changeover CDS bit 0	Vector	0		Vector
p0852	Enable operation	Vector	1	Assignment with p0922 = 20	Vector
p0854	Control request	Vector	1	Assignment with p0922 = 20	Vector
p0922	PROFIdrive PZD telegram selection	Vector	20	PROFIdrive NAMUR	
p1020	FSW bit 0	Vector	0		Vector
p1021	FSW bit 1	Vector	0		Vector
p1035	MOP raise	Vector	0		Vector
p1036	MOP lower	Vector	0		Vector
p1113	Direction of rotation reversal	Vector	0	Assignment with p0922 = 20	Vector
p1140	Enable RFG	Vector	1	Assignment with p0922 = 20	Vector
p1141	Start RFG	Vector	1	Assignment with p0922 = 20	Vector
p1142	Enable nsetp	Vector	1	Assignment with p0922 = 20	Vector
p2103	Acknowledge fault_1	Vector	0	Assignment with p0922 = 20	Vector
p2104	Acknowledge faults_2	Vector	0		Vector
p2106	Ext. fault_1	Vector	r0722.1	CU DI1	CU
p2107	Ext. fault_2	Vector	1		Vector
p2112	Ext. alarm_1	Vector	r0722.0	CU DI0	CU
p2116	Ext. alarm_2	Vector	1		Vector
p0738	DI/DO8	CU	1	+24 V	CU
p0748.8	Invert DI/DO8	CU	0	Not inverted	
p0728.8	Set DI/DO8 input or output	CU	1	Output	
p0739	DI/DO9	CU	1	+24 V	CU
p0748.9	Invert DI/DO9	CU	0	Not inverted	
p0728.9	Set DI/DO9 input or output	CU	1	Output	
p0740	DI/DO10	CU	1	+24 V	CU
p0748.10	Invert DI/DO10	CU	0	Not inverted	
p0728.10	Set DI/DO10 input or output	CU	1	Output	
p0741	DI/DO11	CU	1	+24 V	CU
p0748.11	Invert DI/DO11	CU	0	Not inverted	
p0728.11	Set DI/DO11 input or output	CU	1	Output	
p0742	DI/DO12	CU	1	+24 V	CU
p0748.12	Invert DI/DO12	CU	0	Not inverted	
p0728.12	Set DI/DO12 input or output	CU	1	Output	

Sink			Source		
Parameters	Description	DO	Parameters	Description	DO
p0743	DI/DO13	CU	r0899.6	Switching on inhibited	Vector
p0748.13	Invert DI/DO13	CU	1	Inverted	
p0728.13	Set DI/DO13 input or output	CU	1	Output	
p0744	DI/DO14	CU	1	+24 V	CU
p0748.14	Invert DI/DO14	CU	0	Not inverted	
p0728.14	Set DI/DO14 input or output	CU	1	Output	
p0745	DI/DO15	CU	r2138.7	Ack. fault	Vector
p0748.15	Invert DI/DO15	CU	0	Not inverted	
p0728.15	Set DI/DO15 input or output	CU	1	Output	
p2103	Acknowledge fault 1	TM31	0		TM31
p2104	Acknowledge fault 2	TM31	0		TM31
p4030	DO0	TM31	0		Vector
p4031	DO1	TM31	0		Vector
p4038	DO8	TM31	0		Vector
p4028.8	Set DI/DO8 input or output	TM31	0	Input	
p4039	DO9	TM31	0		TM31
p4028.9	Set DI/DO9 input or output	TM31	0	Input	
p4040	DO10	TM31	0		TM31
p4028.10	Set DI/DO10 input or output	TM31	0	Input	
p4041	DO11	TM31	0		TM31
p4028.11	Set DI/DO11 input or output	TM31	0	Input	

### Parameter macro p1000 = 1: PROFIdrive (100001)

This macro is used to set the default setpoint source via PROFIdrive.

Table A- 6 Parameter macro p1000 = 1: PROFIdrive

Sink			Source		
Parameter	Description	DO	Parameter	Description	DO
p1070	Main setpoint	Vector	r2050[1]	PROFIdrive PZD2	Vector
p1071	Main setpoint scaling	Vector	1	100 %	Vector
p1075	Supplementary setpoint	Vector	0		Vector
p1076	Supplementary setpoint scaling	Vector	1	100 %	Vector

**Parameter macro p1000 = 2: TM31 terminals (100002)**

This macro is used to set analog input 0 on customer terminal block TM31 as the setpoint source.

Table A- 7 Parameter macro p1000 = 2: TM31 terminals

Sink			Source		
Parameter	Description	DO	Parameter	Description	DO
p1070	Main setpoint	Vector	r4055	AIO TM31	TM31
p1071	Main setpoint scaling	Vector	1	100 %	Vector
p1075	Supplementary setpoint	Vector	0		Vector
p1076	Supplementary setpoint scaling	Vector	1	100 %	Vector

**Parameter macro p1000 = 3: Motorized potentiometer (100003)**

This macro is used to set the motorized potentiometer as the setpoint source.

Table A- 8 Parameter macro p1000 = 3: Motorized potentiometer

Sink			Source		
Parameter	Description	DO	Parameter	Description	DO
p1070	Main setpoint	Vector	r1050	Motorized potentiometer	Vector
p1071	Main setpoint scaling	Vector	1	100 %	Vector
p1075	Supplementary setpoint	Vector	0		Vector
p1076	Supplementary setpoint scaling	Vector	1	100 %	Vector

**Parameter macro p1000 = 4: Fixed setpoint (100004)**

This macro is used to set the fixed setpoint as the setpoint source.

Table A- 9 Parameter macro p1000 = 4: Fixed setpoint

Sink			Source		
Parameter	Description	DO	Parameter	Description	DO
p1070	Main setpoint	Vector	r1024	Active fixed setpoint	Vector
p1071	Main setpoint scaling	Vector	1	100 %	Vector
p1075	Supplementary setpoint	Vector	0		Vector
p1076	Supplementary setpoint scaling	Vector	1	100 %	Vector



# Index

"

"Siemens Industry Online Support" App, 5

## 3

3-mass model, 617

## A

A7850 – External alarm 1, 641

Accessory kit

Original roof screws, 50

Acknowledging faults at the AOP, 306

Actual speed value filter, 456

Acyclic communication, 319

Determining drive object numbers, 327

Error values in parameter responses, 324

Parameter request and parameter response, 321

Parameter request and response, 322

Additional customer terminal block TM31 (option G61), 164

Additional SMC30 Sensor Module (option K52), 163

Alarms, 641

Analog inputs, 112, 280

Analog outputs, 113, 480

AOP

Setpoint ramp-down time, 305

Setpoint ramp-up time, 305

Starting setpoint, 305

AOP setpoint, 305

AOP30, 238

Application classes, 313

Armature short-circuit braking

external, 521

internal, 523

Assigning the SINAMICS password

Web server, 576

Automatic restart, 505

Automatic speed controller optimization, 486

Auxiliary power supply, 230 V AC (option K74), 172

Auxiliary supply, 90

230 V AC, 90

Auxiliary Voltage, 114

## B

B00, 190

B02, 192

B03, 192

Basic commissioning

Additional settings, 229

Enter the motor data, 242

Entering the basic parameters, 247

Entering the encoder data, 244

Motor identification, 249

Selecting the motor type, 242

Basic information

BICO technology, 265

Binector input (BI), 266

Binector output (BO), 266

Command data set (CDS), 260

Connector input (CI), 266

Connector output (CO), 266

Copy motor data set (MDS), 264

Copying the command data set (CDS), 264

Copying the drive data set (DDS), 264

Data sets, 259

Drive data set (DDS), 261

Drive objects, 258

Encoder data set (EDS), 262

Interconnecting signals, 267

Motor data set (MDS), 263

Parameter categorization, 256

Parameter types, 255

Parameters, 255

Basic information about the drive system, 255

BICO technology, 265

Interconnecting signals, 267

Bimetallic NC contact, 613

Binector input (BI), 266

Binector output (BO), 266

Blocking protection, 608

brake control

Extended, 591

Simple, 539

Braking unit 50 kW (option L62), 130

Bypass

Bypass with synchronizer with degree of overlapping, 582

- Bypass with synchronizer without degree of overlapping, 585
- Without synchronization, 588

Bypass function, 580

## C

- Cabinet anti-condensation heating (option L55), 126
- Cabinet lighting with service socket (option L50), 125
- Cable and screw terminals, 647
- Cable lengths, 81
- Cable lugs, 79
  - 2 cable lugs per phase, 80
  - Back-to-back, 80
- CAN bus, 141
- CBC10, 141
- CBC10 Communication Board
  - CAN bus, 141
- CBE20, 144
- CDS (command data set), 260
  - Copy, 264
- CDS changeover via AOP, 307
- Center of gravity of the cabinet, 49
- Certifications, 6
- Changing the language, 302
- Changing the SINAMICS password
  - Web server, 576
- Checklist
  - Electrical installation, 61
  - Mechanical installation, 42
- Circuit breaker, 88
- Cleaning, 646
- Closed-loop torque control, 470
- Command data set, 260
- Command sources
  - General information, 254
  - NAMUR, 276
  - PROFIdrive, 272
  - PROFIdrive NAMUR, 278
  - TM31 terminals, 274
- Communication
  - Communication services, 421
  - I&M, 376
  - Used port numbers, 421
  - via EtherNet/IP, 391
  - via Modbus TCP, 407
  - via PROFIBUS, 345
  - via PROFIdrive, 311
  - via PROFINET, 356
  - via SINAMICS Link, 378
- Communication Board Ethernet CBE20 (option G33), 144

- Communication interfaces
  - Parallel operation, 423
- Connecting the DC link, 75
- Connecting the DRIVE-CLiQ cables, 78
- Connecting the power supply and the signal cables, 78
- Connecting transport units, 51
- Connection cross-sections, 81
- Connection for External Auxiliary Equipment (Option L19), 121
- Connector input (CI), 266
- Connector output (CO), 266
- Control Interface Module
  - Frame size GB/GD, replacement, 652
  - Frame size JX, replacement, 654
- Control Unit CU320-2 DP, 91, 91
- Control Unit CU320-2 PN, 178
- Control via PROFIBUS, 348
- Crane transport aids, 49
  - Removal, 50
- CU320-2 DP, 91
- CU320-2 PN, 178
- CU320-2 PN Control Unit, 178
- Current controller adaptation, 475
- Current setpoint filters, 474
- Customer terminal block, 107
- Customer terminal block TM31 (option G60), 163
- Cyclic communication, 315

## D

- Data matrix code, 34
- Data sets, 259
- Data transfer
  - PROFINET, 363
- Date of manufacture, 35
- DC braking, 524
- DC fuses
  - Frame size JX, replacement, 665
- DCC, 28, 427
- DCP flashing, 362
- DDS (drive data set), 261
  - Copy, 264
- Declaration of conformity
  - EMC directive, 6
  - Machinery directive, 6
- Decrease Key, 305
- Deleting the SINAMICS password
  - Web server, 577
- Derating behavior at increased pulse frequency, 530
- Derating data, 680
  - Current derating as a function of the pulse frequency, 682

- Installation altitudes between 2000 m and 5000 m above sea level, 680
  - Permissible output current as a function of the ambient temperature, 680
  - Reduce the ambient temperature and the output current, 681
  - Using an isolating transformer, 682
  - Design, 29
  - Determining drive object numbers, 327
  - Determinism, 357
  - Diagnostics, 628
    - LEDs, 628
    - Parameter, 636
  - Diagnostics channels, 333
  - Digital inputs, 110, 111
  - Digital inputs/outputs, 95, 97, 115, 182, 184
  - Digital outputs, 483
  - Direction of motor rotation, 84
  - Direction reversal, 431, 536
  - Disconnect the basic interference suppression module, 87
  - Disposal, 691
  - Downloading the firmware (operator panel), 675
  - Drive Control Chart, 427
  - Drive Control Chart (DCC), 28
  - Drive data set, 261
  - Drive objects, 258, 258
  - DRIVE-CLiQ interface, 94, 181
  - Droop Function, 466
  - du/dt filter plus Voltage Peak Limiter (option L10), 119
  - dv/dt filter compact plus Voltage Peak Limiter (Option L07), 117
- E**
- EDS (encoder data set), 262
  - Efficiency optimization, 494
    - Method 1, 495
    - Method 2, 496
  - EIP, 391
  - Electrical connection of units connected in parallel, 72
  - Electromagnetic compatibility
    - EMC compliant design, 70
    - Introduction, 68
    - Noise emissions, 69
    - Operational reliability and noise immunity, 68
  - Electromagnetic fields, 19
  - Electrostatic sensitive devices, 23
  - EMERGENCY OFF category 0 (option L57), 127
  - EMERGENCY OFF pushbutton (option L45), 124
  - EMERGENCY STOP category 1 (option L59), 128
  - EMERGENCY STOP category 1 (option L60), 129
- Encoder data set, 262
  - Encoder with gear factor, 251
  - Energy-saving display, 543
  - Error values in parameter responses, 324
  - Essential service mode, 557, 557
  - Ethernet interface, 146, 232
  - EtherNet/IP, 391
    - Activating X1400 (CBE20), 393
    - Activating X150 CU320-2 PN, 393
    - Commissioning the drive, 392
    - Connect the drive device, 392
    - Create generic I/O module, 391
    - Integrating the drive into an Ethernet network, 404
    - Make the communication settings, 393
  - Extended brake control, 591
  - Extended monitoring functions, 596
  - External alarm 1, 641
  - External fault 1, 642
  - External fault 2, 643
  - External fault 3, 643
  - External supply, 90
- F**
- F7860 – External fault 1, 642
  - F7861 – External fault 2, 643
  - F7862 – External fault 3, 643
  - Factory setting, 251
  - Fan
    - Frame size GB/GD, replacement, 661
    - Frame size JX, replacement, 663
  - Fan voltage, adjustment, 85
  - Fast magnetization, 497
  - Faults, 641
  - Faults and alarms, 308, 641
    - Forwarding, 271
    - Propagation, 271
  - Faults and alarms, 308, 641
  - Features, 27
  - Field of applications, 27
  - Filtermatten, Austausch, 651
  - Firmware update, 674
  - Firmware, updating, 674
  - Fixed setpoints, 283
  - Fixed speed setpoints, 283
  - Floor levelness, 44
  - Flying restart, 508
    - Fast flying restart, 512
    - Fast flying restart with voltage acquisition via VSM10, 513
      - with encoder, 513
      - without encoder, 510

Forming the DC-link capacitors, 672

Friction characteristic curve, 519

Fuse

Auxiliary power supply (-F11 / -F12), 667

Fan -T1 -F10 / -T1 -F11, 667

Internal 230 V AC supply (-F21), 667

NH fuse, replacement, 668

**G**

G20, 141

G33, 144

G51, 147

G60, 163

G61, 164

G62, 164

Gear factor, 251

General Data Protection Regulation, 6

Ground fault test, 515

**H**

High overload, 684

**I**

I&M, 376

I2t motor model, 615

Identification & Maintenance, 376

IF1, 423

IF2, 423

Increase Key, 305

Increasing the output frequency, 527

Installation

Connection to the foundation, 51

Lifting the cabinet off the transport pallet, 48

Installation device, 648

Installation location, 43

Insulation Monitor (Option L87), 139

IO controller, 356

IO Device, 356

IO supervisor, 356

IT system, 87

**J**

Jog, 305

JOG, 305

**K**

K01, 171

K50, 153

K51, 162

K52, 163

K74, 172

K82, 173

K82, Terminal Module for activating Safe Torque Off and Safe STOP 1, 173

K87, 175

K88, 176

K95, 178

Kinetic buffering, 501

Knife fuse

Replacement, 668

Know-how protection, 548

Activating, 551

Changing the password, 553

Deactivate, 552

Load to file system, 554

OEM exception list, 553

KTY, 613

**L**

L07, 117

L10, 119

L19, 121

L21, 123

L45, 124

L50, 125

L55, 126

L57, 127

L59, 128

L60, 129

L62, 130

L83, 137

L84, 137

L86, 138

L87, 139

List of abbreviations, 691

Load monitoring, 596

LOCAL/REMOTE key, 303

Lock AOP LOCAL Mode, 306

Low overload, 683

**M**

M21, 56

M23, 57

M43, 57

- M54, 57
  - Maintenance, 646, 646
  - Maintenance and servicing, 645
  - MBAP, 413
  - MDS (motor data set), 263
    - Copy, 264
  - Mechanical installation
    - Checklist, 42
  - Media redundancy, 366
  - Memory card
    - Slot, 105, 189
  - Menu
    - AOP diagnostics, 300
    - AOP30 settings, 293
    - Basic Commissioning, 290
    - Battery status, 301
    - Battery symbol, 300
    - Commissioning / service, 290
    - Complete commissioning, 290
    - Control settings, 293
    - Curve recorder, 291
    - Curve recorder settings, 297
    - Database contents, 301
    - Database statistics, 302
    - Database version, 300
    - Date format, 299
    - Define operation screen, 293
    - Device commissioning, 291
    - Display settings, 293
    - DO name display mode, 299
    - Drive commissioning, 290
    - Drive diagnostics, 291
    - Fault/alarm memory, 289
    - Keyboard test, 301
    - LED test, 302
    - Motor identification, 290
    - Operation screen, 287
    - readme.oss, 300
    - Reset AOP settings, 300
    - Reset fan operating time, 291
    - Scaling to motor current, 299
    - Screenshots, 301
    - Setting the date, 297
    - Setting the time, 297
    - Software Version, 300
    - Sprachauswahl/Language selection, 302
    - Structure, 286
  - Minimum cable lengths, 83
  - Minimum speed, 432
  - Modbus Application Header, 413
  - Modbus TCP, 407
    - Activate via interface X1400, 409
    - Activate via interface X150, 408
    - Communication via data set 47, 416
    - Function codes used, 413
    - Mapping tables, 410
    - Modbus register to the parameters of the Control Unit, 410
    - Parameterizing communication for X1400, 410
    - Parameterizing communication for X150, 409
    - Read and write access, 413
    - Reading and writing parameters, 415
  - Moment of inertia estimator, 598
    - Accelerated estimation, 601
    - Speed controller adaptation, 601
  - Monitoring Functions, 604
  - Motor changeover/selection, 516
  - Motor data identification, 487
  - Motor data set, 263
  - Motor identification, 486
  - Motorized potentiometer, 282
  - Mounting
    - Canopies and hoods, 54
    - Canopy to increase the degree of protection to IP21, 56
    - Hood to increase the degree of protection to IP23/IP43/IP54, 57
- N**
- NAMUR
    - Outlet for external auxiliaries (option B03), 192
    - Separate 24 V DC power supply (option B02), 192
  - NAMUR terminal block (option B00), 190
  - NH fuse
    - Replacement, 668
- O**
- OFF key, 304
  - ON key, 304
  - Online operation with STARTER, 352
  - open actual speed value, 468
  - Operating hours counters, 533
  - Operation on a non-grounded system, 87
  - Operation screen, 287
  - Operator input inhibit / parameters inhibit key, 307
  - Operator panel, 238
    - Overview, 285
  - Option K95, 178
  - Option M90 (crane transport aids), 49
  - Option short codes, 35
  - Original roof screws, 50

- Outgoing section for external auxiliary equipment for NAMUR (option B03), 192
- Output terminals, 479
- Overload capability, 683
- Overload responses, 605
- Overvoltage limitation (option L21), 123

## P

- Parallel operation of communication interfaces, 423
- Parameter request and parameter response, 321
- Parameter request and response, 322
- Parameter reset, 251
  - Parameter reset via STARTER, 252
  - Resetting Parameters via AOP30, 251
- Parameterization errors, 310
- Partial load operation, 684
- PE busbar
  - Connecting, 73
- Permanent-magnet synchronous motors, 476
- Power block
  - Crane lifting lugs, 649
  - Frame size GB/GD, replacement, 656
  - Frame size JX, replacement, 659
- Power connections, 79
  - Connecting the motor and power cables, 83
- Pre-control, 602
- Preparation
  - Mechanical installation, 43
- PROFIBUS, 341, 345
  - Address switches, 101, 349
  - Bus terminating resistor, 100, 343
  - Connectors, 100, 342
  - Diagnostics, 336
  - DPMC1 and DPMC2, 346
  - Master Classes 1 and 2, 346
  - Setting the address, 101, 348
  - Setting the PROFIBUS Address, 348
- PROFIBUS connection, 99, 341
- PROFIBUS diagnostics data, 336
  - Channel-related diagnostics, 339
  - Data sets DS0/DS1 and diagnostics alarm, 340
  - Identifier-related diagnostics, 338
  - Standard diagnostics, 337
  - Status messages/module status, 338
- PROFIdrive, 311
  - Acyclic communication, 319
  - Application classes, 313
  - Communication types, 312
  - Controller, 312
  - Cyclic communication, 315
  - Device classes, 311

- Drive unit, 312
- Message classes, 333
- Message classes for PROFINET, 334
- PROFIBUS message classes, 336
- Supervisor, 312
- PROFenergy, 370
  - Certification, 370
  - Commands, 373
- PROFINET
  - Connection channels, 364
  - Data transfer, 363
  - Diagnostics, 334
  - Structure example of a system redundancy, 368
  - System redundancy, 367
- PROFINET interface, 187
- PROFINET IO, 345, 356
  - Addresses, 358
  - Device name (NameOfStation), 360
  - Dynamic IP address assignment, 361
  - Identification & Maintenance, 376
  - IP address, 359
  - IP address assignment, 359
  - MAC address, 358
  - RT and IRT, 357
- PROFINET IO with IRT, 358
- PROFINET IO with RT, 357
- Propagation, 271
- Propagation type, 271
- Protecting power components, 604
- Protective functions, 604
- PT100, 613
- PT100 evaluation unit (option L86), 138
- PT1000, 613
- PTC, 613
- Pulse frequency wobbling, 531

## Q

- Quality, 28

## R

- Ramp-function generator, 434
- Ramp-function generator tracking, 435
- Rating plate
  - Date of manufacture, 35
- Real-time communication, 357
- Recycling, 691
- Reference model, 463
- Relay outputs, 116

- Replacement
  - Automatic firmware update, 673
  - Control Interface Module, frame size GB/GD, 652
  - Control Interface Module, frame size JX, 654
  - Crane lifting lugs, 649
  - DC fuses, frame size JX, 665
  - Error messages, 673
  - Fan, frame size JX, 663
  - Fan, frame sizes GB/GD, 661
  - Filter mats, 651
  - Installation device, 648
  - Operator panel, 670
  - Operator panel battery, 670
  - Power block, frame size JX, 659
  - Power block, frame sizes GB/GD, 656
- Replacing components, 651
- Replacing the Backup Battery of the Cabinet Operator Panel, 670
- Replacing the cabinet operator panel, 670
- Residual risks, 25
- Resonance damping, 444
- Ring topology, 366
  - Scalance, 366
- Rotating measurement, 491
  - Shortened, 493
- Runtime, 533
  
- S**
- S5 – Selector for voltage/current AI0, AI1, 113
- Safe Brake Adapter, 176
  - 230 VAC, 176
- Safe Brake Adapter 230 VAC (option K88), 176
- Safe Brake Control, 176
- Safety instructions
  - Electromagnetic fields, 19
  - Electrostatic sensitive devices, 23
  - General safety instructions, 17
- Safety Integrated, 6
- Safety license for one axis (option K01), 171
- Saving the parameters permanently, 310
- SBC (Safe Brake Control), 176
- Separate 24 V DC power supply for NAMUR (option B02), 192
- Sequence of objects in the telegram, 347
- Serial interface (RS232), 103, 186
- Service, 28
- Setpoint addition, 430
- Setpoint channel, 430
- Setpoint sources, 280
  - Analog inputs, 280
  - Fixed speed setpoints, 283
  - General information, 254
  - Motorized potentiometer, 282
- Setting the PROFIBUS Address, 348
- Shield support, 107
- Shipping and handling monitors, 45
  - Shock indicator, 45
  - Tilt indicator, 45
- Shock indicator, 45
- Short-circuit test, 515
- Shortened rotating measurement, 493
- Siemens Industry Online Support
  - App, 5
- Signal connections, 107
- Simple brake control, 539
- Simulation operation, 534
- SINAMICS Link, 378
  - Activation, 385
  - Bus cycle, 379
  - Commissioning, 381
  - Communication failure, 388
  - Configuration example, 386
  - Diagnostics, 388
  - Preconditions, 378
  - Receive data, 378
  - Receiving data, 384
  - Send data, 378
  - Sending data, 382
  - Synchronous cycle, 379
  - Topology, 380
  - Transmission time, 379
- Skip frequency bands, 432
- Slip compensation, 445
- SMC30, 153
- SMC30 Sensor Module Cabinet-Mounted (option K50), 153
- SMC30: connection examples,
- Speed controller, 457
- Speed controller adaptation, 464
- Speed controller optimization, 491
- Speed controller pre-control, 460
- Speed limitation, 433
- Stall protection, 609
- STARTER, 194
  - Access point, 230
  - Commissioning, 197
  - Creating a project, 197
  - DEVICE, 231
  - Installation, 196
  - Online operation via PROFINET, 352
  - S7ONLINE, 231
  - Target device selection, 230

- Transferring the drive project, 231
- User interface, 196
- STARTER via Ethernet, 232
  - Parameter, 237
  - Setting the IP Address of the drive, 234
  - Setting the IP address of the PG/PC interface, 233
- Starting the web server, 571
- Stationary measurement, 487
- Storage, 41
- Switching between clockwise and counter-clockwise rotation, 304
- Synchronization, 542
- System redundancy, 267
  - Configuring, 368
  - Diagnostics LEDs, 368
  - Example, 368

## T

- TB30, 164
- Technical data, 685
  - General, 678
  - Version A, 660 ... 690 V 3 AC, 686
- Technology controller, 578
- Telegram selection, user defined, 316
- Telegrams
  - Sequence of objects, 347
- Telegrams and process data, 316
- Temperature sensor, 113
- Temperature sensor connection
  - Control Interface Module, 612
  - Sensor Module, 611
  - TM31, 610
- Temperature sensor evaluation, 610
  - 3-mass model, 617
  - Bimetallic NC contact, 613
  - I2t motor model, 615
  - KTY, 613
  - PT100, 613
  - PTC, 613
  - Wire-breakage monitoring, 614
- Terminal Board TB30 (option G62), 164
- Terminal Module TM150, 147
- Test pulse evaluation, 515
- Thermal monitoring, 605
- Thermal motor models, 614
- Thermal motor protection, 610
- Thermistor Motor Protection Unit (Option L83/L84), 137
- Tightening torques, 647
- Tilt indicator, 45

- TM150, 147
  - Connecting, 148
  - Forming groups, 622
  - Protective conductor connection and shield support, 150
  - Sensor failure in a group, 624
  - Smoothing time for temperature channels, 624
  - Temperature evaluation, 623
  - Temperature measurement, 619
  - Temperature sensor types, 620
- TM31, 107, 163
- TM31, connection overview, 109
- TM31, front view, 108
- TM54F, 175
- TM54F Terminal Module, 175
- TM54F Terminal Module (option K87), 175
- Tool, 47, 66, 647
- Torque limiting, 472
- Transport, 39
- Transport eyebolts, 49
- Transport units
  - Connecting the DC link, 75
  - Connecting the DRIVE-CLiQ nodes, 78
  - Connecting the signal cables, 78
  - Connecting the voltage supply, 78
  - electrical connection, 72
- Type plate, 33
  - Option short codes, 35

## U

- U/f control, 438
- Ungrounded system, 87
- Unit changeover, 537
- Unpacking, 47

## V

- Vdc control, 500
- Vdc\_max control, 503
- Vdc\_min control, 501
- Vector control
  - sensorless, 448
  - with encoder, 455
- Vector speed/torque control with/without encoder, 447
- Ventilation, 646
- Voltage boost, 441
  - at startup, 443
  - During acceleration, 443
  - Permanent, 442
- VSM10, 162



VSM10 Voltage Sensing Module (option K51), 162

## W

Web server, 561

Assigning the SINAMICS password, 576

Changing the SINAMICS password, 576

Configuring user accounts, 575

Deleting the SINAMICS password, 577

Login, 571

Logout, 575

Saving settings, 574

User-defined Web pages, 570

Web sites of third-party companies, 6

Wire-breakage monitoring, 614

Wiring principle, 31

Write protection, 546

## X

X100, 94, 181

X101, 94, 181

X102, 94, 181

X103, 94, 181

X122, 95, 182

X126, 99

X127, 102, 185

X132, 97, 184

X140, 103, 186

X1400, 146

X150, 187

X451 (CAN bus), 143

X452 (CAN bus), 143

X520, 110

SMC30, 157

X521, 112

SMC30, 159

X522, 113

X530, 111

X531

SMC30, 159

X540, 114

X541, 115

X542, 116

## Further information

Siemens:

[www.siemens.com](http://www.siemens.com)

Industry Online Support (service and support):

[www.siemens.com/online-support](http://www.siemens.com/online-support)

IndustryMall:

[www.siemens.com/industrymall](http://www.siemens.com/industrymall)

Siemens AG

Digital Industries

Motion Control

P.O. Box 3180

D-91050 Erlangen

Germany

Scan the QR-Code  
for product  
information

