

# Operation and Maintenance Manual


InRow<sup>®</sup> Chilled Water Air Conditioners

InRow<sup>®</sup> RP

ACRP500, ACRP501, ACRP502

990-2892D-001

Publication Date: April 2015

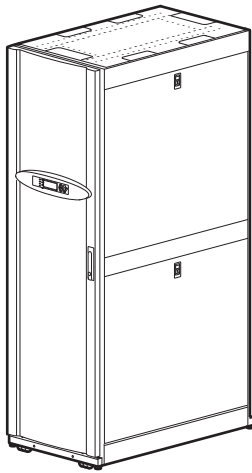

## Schneider Electric IT Corporation Legal Disclaimer

The information presented in this manual is not warranted by the Schneider Electric IT Corporation to be authoritative, error free, or complete. This publication is not meant to be a substitute for a detailed operational and site specific development plan. Therefore, Schneider Electric IT Corporation assumes no liability for damages, violations of codes, improper installation, system failures, or any other problems that could arise based on the use of this Publication.

The information contained in this Publication is provided as is and has been prepared solely for the purpose of evaluating data center design and construction. This Publication has been compiled in good faith by Schneider Electric IT Corporation. However, no representation is made or warranty given, either express or implied, as to the completeness or accuracy of the information this Publication contains.

**IN NO EVENT SHALL SCHNEIDER ELECTRIC IT CORPORATION, OR ANY PARENT, AFFILIATE OR SUBSIDIARY COMPANY OF SCHNEIDER ELECTRIC IT CORPORATION OR THEIR RESPECTIVE OFFICERS, DIRECTORS, OR EMPLOYEES BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS, CONTRACT, REVENUE, DATA, INFORMATION, OR BUSINESS INTERRUPTION) RESULTING FROM, ARISING OUT, OR IN CONNECTION WITH THE USE OF, OR INABILITY TO USE THIS PUBLICATION OR THE CONTENT, EVEN IF SCHNEIDER ELECTRIC IT CORPORATION HAS BEEN EXPRESSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SCHNEIDER ELECTRIC IT CORPORATION RESERVES THE RIGHT TO MAKE CHANGES OR UPDATES WITH RESPECT TO OR IN THE CONTENT OF THE PUBLICATION OR THE FORMAT THEREOF AT ANY TIME WITHOUT NOTICE.**

Copyright, intellectual, and all other proprietary rights in the content (including but not limited to software, audio, video, text, and photographs) rests with Schneider Electric It Corporation or its licensors. All rights in the content not expressly granted herein are reserved. No rights of any kind are licensed or assigned or shall otherwise pass to persons accessing this information.

This Publication shall not be for resale in whole or in part.

# Table of Contents

General Information .....	1
Important Safety Information .....	1
Commissioning .....	2
Checklists .....	2
Initial inspection checklist .....	2
Electrical inspection checklist .....	3
Mechanical inspection checklist .....	3
User interface inspection checklist .....	4
Start-up inspection checklist .....	5
Final inspection checklist .....	5
Operation .....	6
Display Interface .....	6
Using the Display .....	7
Scrolling status screens .....	7
Main menu screens .....	7
Navigating the main menu .....	7
Navigating sub-menus .....	8
Using the Path statement .....	8
Password entry .....	8
Start the cooling unit .....	9
Stop the cooling unit .....	10
General Configuration .....	11
Cooling unit configuration .....	11
Contacts .....	12
View the state of input and output contacts .....	12
Edit the normal state of input and output contacts .....	12
Cooling Group Configuration .....	13
Configure the cooling group .....	13
Identify the cooling unit .....	14
Configure Modbus .....	14

Control the Environment .....	15
How the modes of operation work .....	15
Setpoints .....	16
PID settings .....	17
Tune the PID loop .....	18
Run hours .....	19
Humidity control .....	19
Reheat control .....	19
Thresholds .....	19
Service intervals .....	20
Display Settings .....	21
Password & timeout .....	21
Date & time .....	21
Adjust display .....	21
Display units .....	22
Network Configuration .....	22
Configure the network .....	22
View Status Readings .....	23
Scrolling status screens .....	23
Cooling unit status .....	23
Cooling group status .....	24
About the cooling unit .....	24
Event Log .....	25
View event log .....	25
Clear event log .....	25
Respond to Alarms .....	25
View active alarms .....	25
Clear active alarms .....	25
Alarm messages and suggested actions .....	25

## Network Management Card .....29

Quick Configuration .....	29
Overview .....	29
TCP/IP configuration methods .....	29
Schneider Electric Device IP Configuration Wizard .....	29
.ini file utility .....	30
BOOTP & DHCP configuration .....	30
Local access to the control console .....	31
Remote access to the control console .....	31
Control console .....	32

Access a Configured Network Management Card . . . . .	33
Overview . . . . .	33
Web interface . . . . .	33
Telnet and SSH . . . . .	33
Simple Network Management Protocol (SNMP) . . . . .	34
FTP/SCP . . . . .	34
Modbus . . . . .	34
Recover From a Lost Password . . . . .	35
<b>Maintenance . . . . .</b>	<b>36</b>
Monthly Preventive Maintenance . . . . .	36
Environment . . . . .	36
Cleanliness . . . . .	36
Mechanical . . . . .	37
Electrical . . . . .	37
Quarterly Preventive Maintenance . . . . .	38
Mechanical . . . . .	38
Functional . . . . .	38
Semi-Annual Preventive Maintenance . . . . .	38
Cleanliness . . . . .	38
<b>Troubleshooting . . . . .</b>	<b>39</b>



# General Information

---

## Important Safety Information

Read the instructions carefully to become familiar with the equipment before trying to install, operate, service, or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a Danger or Warning safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **⚠ DANGER**

**DANGER** indicates an imminently hazardous situation which, if not avoided, **will result in** death or serious injury.

### **⚠ WARNING**

**WARNING** indicates a potentially hazardous situation which, if not avoided, **can result in** death or serious injury.

### **⚠ CAUTION**

**CAUTION** indicates a potentially hazardous situation which, if not avoided, **can result in** minor or moderate injury.

### **NOTICE**

**NOTICE** addresses practices not related to physical injury including certain environmental hazards, potential damage or loss of data.

# Commissioning

---

After installation, complete the following checklists to verify that all components are working properly and that the equipment is ready to begin operation.

## Checklists

### Initial inspection checklist

The initial inspection ensures that the equipment has been properly installed, the location of the cooling unit has been properly prepared and the cooling unit is free of damage.

<b>⚠ WARNING</b>
<b>FAN OUTLET</b>
Do not run service utilities in front of the fan outlet.
<b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>

<b>NOTICE</b>
<b>ROOM CONDITIONS</b>
<ul style="list-style-type: none"><li>• The room vapor barrier minimizes moisture infiltration. Without a vapor barrier, it will be difficult to maintain the humidity in the room.</li><li>• Do not introduce unconditioned outside air into the space.</li></ul>
<b>Failure to follow these instructions can result in equipment damage.</b>

#### Ensure that:

- 
- The installation procedure is complete according to the requirements of this installation manual.

---

  - The walls, floor, and ceiling of the room where the cooling unit is located are sealed with a vapor barrier.

---

  - There is no evidence of damage to the cooling unit.

---

  - The clearance around the equipment is in accordance with local and national codes and regulations as well as this installation manual.

---

  - The cooling unit is level and joined to the adjacent racks

---

  - The cooling unit is not installed at the open end of a row.

---



## Electrical inspection checklist

The electrical inspection verifies that all electrical connections are secure and correct and that the equipment is properly grounded.

<b>⚠ ⚠ DANGER</b>
<b>HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH</b>
<ul style="list-style-type: none"><li>• Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.</li><li>• This equipment must be installed and serviced by qualified personnel only.</li><li>• Turn off all power supplying this equipment before working on or inside the equipment.</li><li>• Always use a properly rated voltage sensing device to confirm power is off.</li><li>• Replace all devices, doors, and covers before turning on power to this equipment.</li></ul>
<b>Failure to follow these instructions will result in death or serious injury.</b>

<b>⚠ ⚠ WARNING</b>
<b>ELECTRICAL HAZARD</b>
<ul style="list-style-type: none"><li>• Electrical service must conform to local and national electrical codes and regulations.</li><li>• The equipment must be grounded.</li></ul>
<b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>

### Ensure that the:

- |                          |   |
|--------------------------|---|
| <input type="checkbox"/> | Incoming voltages match the phase and voltage listing on the nameplate.   |
| <input type="checkbox"/> | Electrical wiring complies with local and national codes and regulations.   |
| <input type="checkbox"/> | Equipment is properly grounded.   |
| <input type="checkbox"/> | Front door is properly grounded.  |
| <input type="checkbox"/> | Electrical connections are tight, including contactors, terminal blocks, controllers, switches, relays, auxiliary devices, and field connections. |
| <input type="checkbox"/> | Circuit breakers are properly connected and securely attached to the DIN rail.  |

## Mechanical inspection checklist

The mechanical inspection verifies that all mechanical components and connections are secure. .

<b>NOTICE</b>
<b>PIPING INSTALLATION</b>
Failure to properly install piping may result in improper cooling unit operation or possible damage to the cooling unit or surrounding equipment.
<b>Failure to follow these instructions can result in equipment damage.</b>

**Ensure that the:**

- Condensate drain line is at least the size of the drain connection.

---

- Mechanical connections are tight.

---

- Fans are turning freely and the blades are not distorted or bent.

---

- Pipe fittings are tight.

---

- Air is bled from the water system. If air remains in the system, bleed it out now.

---

- Supply chilled water temperature is recorded.

---

- Chilled water flow is correct based on the performance requirements of the cooling unit.

---

- Field-installed traps and piping are in accordance with the installation manual. Strainers are in place in the chilled water supply loop. Proper piping practices have been followed.

---

- Piping is adequately supported and isolated when necessary.

---

- Field-installed service valves are open.

---

- Water outlet temperature sensor is positioned correctly. For top-connected cooling units, the wire with only a green wire tie is positioned in connector J23. For bottom-connected cooling units, the wire with both green and white wire ties is positioned in connector J23.

---

- Piping in the building and on the roof is properly insulated.

---

- Covers and guards are in place.

---

## User interface inspection checklist

The user interface inspection verifies that the sensors and internal communication links are installed properly. Check that the outdoor heat exchanger is connected to the cooling unit and to the other cooling units in the room if you are using cooling group controls.

**Ensure that:**

- An A-Link bus is connected to each cooling unit and a terminator is plugged into all unused A-Link connectors.

---

- The input contacts and output relays are connected correctly.

---

- The building management system is connected correctly and a terminator is installed in the final cooling unit.

---

- The temperature sensors located on the front of the equipment are connected correctly.

---

- The rack temperature sensors are installed correctly.

---

- The network port is connected correctly and an IP address has been assigned to the cooling unit.

---

- The optional rope water detection device is installed properly.

---

## Start-up inspection checklist

The start-up inspection ensures that the equipment is operating properly after the initial start-up. This inspection verifies that all modes of operation are working correctly and that the cooling unit is ready for normal operation.

### While the equipment is operating, ensure that:

- The cooling unit is free from malfunctions, including chilled water leaks, unusual vibrations, or other irregularities, in each mode of operation.

---

- The current draw of fan motors and transformers for the cooling operation is within the ratings of the respective circuit breakers.  
Record the current at the main power connection of the main circuit breaker.  
Record all current draws on the load side of any circuit breakers used for each device.  
Compare the circuit breaker setting for each device to the actual current measured and the full load amps of the device to verify that the current draws are acceptable.

---

- Feed B can supply power to all functions in the equipment.

---

- The cool, reheat, dehumidification, and humidification cycles engage.

---

- The correct water outlet temperature sensor is positioned in connector J23.

---

- Air filters are clean and free of debris. Replace air filters with Schneider Electric air filters only. (part number W875-201)

---

- The clogged filter alarm is operating properly.  
Cover 1/3 of the filter area to initiate the alarm.

---

## Final inspection checklist

The final inspection verifies that the system is clean, and the start-up form has been sent to Schneider Electric.

### Ensure that:

- The system is clean and free from debris.

---

- Packaging materials are disposed of properly.


---

- The start-up form was completed and sent to Schneider Electric.

---

# Operation

## Display Interface

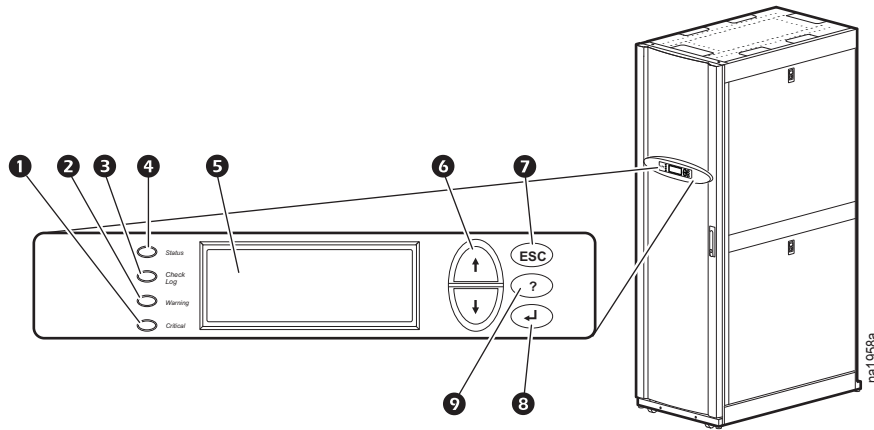

Item	Description	Function
1	Critical Alarm LED (red)	When lit, a critical alarm condition exists and requires your immediate attention.
2	Warning Alarm LED (yellow)	When lit, a warning alarm condition exists. Failure to correct this condition could cause a critical alarm.
3	Check Log LED (yellow)	When lit, at least one new event has been logged since the last time the log was checked. Only events that pertain to the operation of the cooling unit will activate the LED.
4	Status LED (green)	When lit, the cooling unit is receiving electrical power. When flashing green, the cooling unit is downloading firmware for the controller. This takes several minutes.
5	Liquid Crystal Display (LCD)	View alarms, status data, context-sensitive help, and modify configurable items.
6	Up and down arrow keys	Select menu items and access information.
7	ESC key	Return to previous screen or cancel current operation.
8	Enter key	Open menu items and input changes to cooling group level and cooling unit level settings.
9	Help key	Display context-sensitive help. Press the help key for information about each option on the screen and for instructions on performing tasks.

# Using the Display

Every time you apply power to the cooling unit, the display interface initializes, causing the LEDs to cycle and the alarm-tone to activate.

## Scrolling status screens

After start-up, the interface displays the firmware revision number of the display interface. The display interface then scrolls automatically and continuously through screens of status information. Press the up or down arrow key to interrupt the automatic scrolling and view a specific status screen. To return to the scrolling status screens, press ESC from one of the main menu screens.

Status Screen Name	Status Information Displayed
InRow RP	<ul style="list-style-type: none"> <li>• On/Standby</li> <li>• Unit identifier</li> <li>• Cooling Unit name</li> <li>• Cooling Unit location</li> </ul>
Group	<ul style="list-style-type: none"> <li>• Alarms/No Alarms</li> <li>• Cool Output (Cool Output) kW</li> <li>• Cool Setpt (Cool Setpoint) °C (or °F)</li> <li>• Max Rack (Maximum Rack Temperature) °C (or °F)</li> </ul>
Unit	<ul style="list-style-type: none"> <li>• Alarms/No Alarms</li> <li>• Cool Output kW</li> <li>• Max Rack In (Maximum Rack Inlet Temperature) °C (or °F)</li> <li>• Air Flow l/s (liters per second) or CFM (cubic feet per minute)</li> </ul>

## Main menu screens

On any top-level status screen, press the ENTER or ESC key to open the first main menu screen.

**NOTE:** Once a period of inactivity (at the keys of the display interface) exceeds the **Password Timeout** setting, the display interface returns to the scrolling status screens.





For information on setting the time-out duration, see “Password & timeout” on page 21.

All main menu choices are displayed on a series of six main menu screens.


## Navigating the main menu

**Selector arrow** Press the up or down arrow key to move the selector arrow ❶ to a main menu option. Press the ENTER key to view the selected sub-menu screen. In the example shown below, the selector arrow points to the **Set Date and Time** setting. To select that item, press the ENTER key.

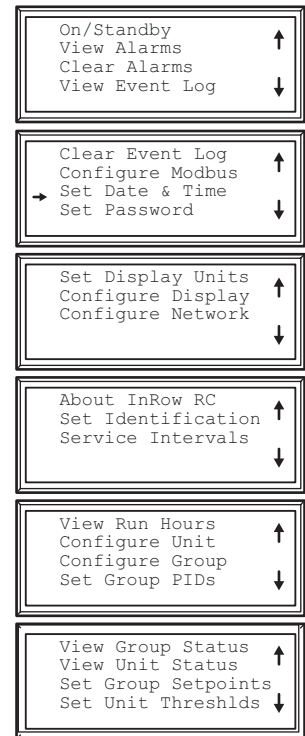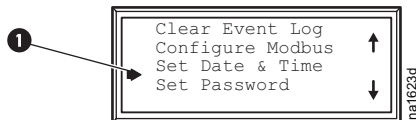


**NOTE:** If the selector arrow is on the top line of a main menu screen, press the up arrow key to move the selector arrow to the top line of the previous screen.

**Continue arrows:** Continue arrows ② indicate that additional options or settings are available on a menu or status screen. Press the up or down arrow key to view the additional items.

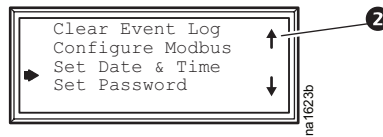

## Navigating sub-menus


Selecting a main menu option displays the sub-menu screen for that option. In this example, the selector arrow is on the top line of the **Set Date and Time** sub-menu screen.

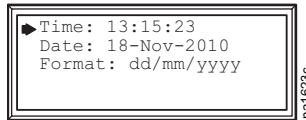

Use the up or down arrow key to move the selector arrow to an option, and press the ENTER key.

- **List of choices:** If the setting is a list of choices, an input arrow ③ displays next to the setting. Press the up or down arrow key to select the menu option to change. Then press the ENTER key to exit the input mode and save the setting. Press the ESC key to exit without saving.
- **Numbers or text fields:** If the setting is a number or text field, use the arrow keys to select the value of the first character, and press the ENTER key to move to the next character. Press the ENTER key after the last character is set to exit the input mode and save the setting. Press the ESC key to exit without saving. If an invalid value is entered, the display interface beeps and restores the previous valid value to the field.

**Input arrows** Input arrows ③ next to a selected setting indicate that the setting can be modified by pressing the up or down arrow key. Press the ENTER key to save the change or the ESC key to cancel the change.

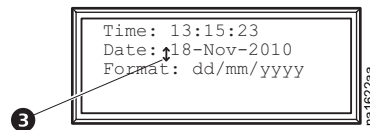

## Using the Path statement

Select the main- and sub-menu options specified in the path statement to view or configure a setting. The path statement lists the main- and sub-menu items you select to navigate to the item to view or modify. The parts of the path statement are defined below:

**Path: Main > Set Password > Change Passwords**

**Main >** Your starting point is the main menu.

**Set Password >** Scroll to and select this option from the main menu.

**Change Passwords >** Scroll to and select this option from the sub-menu.

Subsequent options are listed and defined under the path statement.

## Password entry

The cooling unit has two levels of password protection:

- **Device password** allows Device Users to change basic and environmental settings.
- **Admin password** allows all privileges granted for Device Users, and also allows the Administrator to modify settings that control the components in the cooling unit or change advanced options.

When you try to change a setting, the display interface prompts you to enter your Admin password. The default value for both the Device and Admin password is **apc** (lowercase). To enter your password, use the up or down arrow key to scroll through the available character set. Press the **ENTER** key to select the current character and move the cursor to the next character position. After selecting the last character of your password, press the **ENTER** key once more to submit your password.

Once the password is entered, it remains in effect until the period of inactivity exceeds the **Password Timeout** setting.



See “Password & timeout” on page 21.

**NOTE:** Passwords are case-sensitive.

## Start the cooling unit

### Path: Main > On/Standby

1. To start the cooling unit, press the **ENTER** key until the cursor is on the **Operation > On/Standby** menu item.
2. Press the **ENTER** key again to show the toggle state arrow to the right of **Operation**.
3. Use the up and down arrow keys to change from **Standby** to **On**.



See “Path: Main > Operation > Limit Access” below if you are prompted to enter a password before changing the On/Standby setting.

4. Press the **ENTER** key again to set the **On** position.
  - a. The fans will start.
  - b. The cooling unit will run according to the configured settings.

**NOTE:** **On/Standby** only affects the local cooling unit. You must set the **On/Standby** option for each cooling unit in the cooling group.

### Path: Main > Operation > Limit Access

The default setting for the **Limit Access** password protection option is **No**. If the **Limit Access** option has been set to **Yes**, you will be prompted to enter the Device password before a change can be made to the **On/Standby** setting.

## Stop the cooling unit

### **DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.
- This equipment must be installed and serviced by qualified personnel only.
- Turn off all power supplying this equipment before working on or inside the equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

**Failure to follow these instructions will result in death or serious injury.**

**NOTE:** The Standby option does not remove power from the cooling unit. You must disconnect power at the mains to remove power from the cooling unit.

1. To stop the cooling unit, press the **ENTER** key until the cursor is on the **Operation > On/Standby** menu item.
2. Press the **ENTER** key again to show the toggle state arrow to the right of **Operation**.
3. Use the up and down arrow keys to change from **On** to **Standby**.



See “Path: Main > Operation > Limit Access” on page 9 if you are prompted to enter a password before changing the On/Standby setting.

4. Press the **ENTER** key again to change the setting to **Standby**. The cooling unit will enter the standby mode.



# General Configuration

The cooling group configuration options are set during the commissioning of the cooling units in the cooling group.

<b>⚠ WARNING</b>
<b>HAZARD TO EQUIPMENT OR PERSONNEL</b>
All work must be performed by Schneider Electric qualified personnel.
<b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>

## Cooling unit configuration

**Path:** Main > Configure Unit > General

**Capacity:** Set the cooling capacity of the cooling unit:

- **Auto:** The cooling unit automatically controls its output under normal (default) conditions.
- **Max:** The cooling unit runs at full capacity.  
**NOTE:** Normal checks for cooling failures are disabled in the **Max** mode.

**Start-up Dly:** Enter a value for the delay. The start-up delay begins when the cooling unit is started and initialized. The cooling unit cannot begin operation until this delay expires. Use the start-up delay to restart equipment sequentially in your room after a scheduled downtime or a power outage.

**Idle on Fail:** When set to **Yes**, the cooling unit will enter idle mode if the cooling unit is unable to supply conditioned air. Set to **No** to disable the cooling unit from entering idle mode if a cooling failure is detected.

**Idle On Leak:** When set to **Yes**, the cooling unit will enter idle mode if a Water Detection Fault activates. Set to **No** to disable the cooling unit from entering idle mode if a leak is detected.

**NOTE:** The leak sensor (part number AP9325) is optional.

**NOTE:** There are three alarms that will cause the cooling unit to enter idle mode:

- Water Detection Fault (when **Idle On Leak** is set to **Yes**)
- Condensate Pan Full
- Cooling Failure (when **Idle On Fail** is set to **Yes**)



See “Alarm messages and suggested actions” on page 25 for more information on alarms.

**Bypass Vlv (Bypass Valve):** Select the setting that matches the physical status of the bypass valve (open or closed).

**Fluid Cal:** Causes the input valve to stay fully open to facilitate adjusting water flow through multiple cooling units.



See “Cooling Group Configuration” on page 13 for more information.

**Power Src:** Select Single for one power source or select Dual for two power sources.

**SecPwrCap:** Secondary Power Capability. Select Full to keep heaters and humidifier running. Select Reduced to turn heaters and humidifier off. This takes effect when the unit is configured with dual power source and the secondary power source is active.

# Contacts

## View the state of input and output contacts

**Path:** Main > Configure Unit > Discrete I/O

Each cooling unit supports a user-defined input contact and a user-defined output contact. Each contact monitors a sensor and responds to changes in the state of the sensor (open or closed).

**Input State:** Indicates the actual state of the input contact (open or closed). A cooling unit is **On** when the state is normal and in **Standby** when the state is not normal.

**Output State:** Indicates the actual state of the output contact (open or closed). An alarm will cause the output contact to change from the normal state.

## Edit the normal state of input and output contacts

**Path:** Main > Configure Unit > Discrete I/O > Normal State

You can set input contacts to cause alarm conditions based on a user-defined normal state. Output contacts can map internal alarms and events to outside devices.

**Input Norm:** Set the normal state of the contact (open or closed). The cooling unit changes its operating mode to **Standby** when the actual state differs from the normal state.

**Output Norm:** Set the normal state of the contact (open or closed). If the state of an alarm or event mapped to this contact changes from the normal state, the contact also changes state.

**Output Src:** Define the type of output alarm, either **Any Alarm** or **Critical**, that causes the output to change from its normal state.

# Cooling Group Configuration

Use the cooling group configuration settings to add cooling units to the group and to define group operation. The system automatically assigns the state of Backup to units in the group. A unit whose Role Override setting is set to ON will automatically be set as a Primary cooling unit. A unit in the Standby or Failed state is not considered a potential backup unit. The system periodically reviews the state of the units to maintain the proper number of ON and Backup units. If no units are available to assign to the Backup role, then the No Backup Units Available alarm is initiated.

<b>⚠ WARNING</b>
<b>HAZARD TO EQUIPMENT OR PERSONNEL</b>
All work must be performed by Schneider Electric qualified personnel.
<b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>

## Configure the cooling group

**Path:** Main > Configure Group

The **Configure Group** menu contains settings that identify the number of cooling units installed in this cooling group and the physical arrangement of those cooling units.

**Num Units:** Enter the number of cooling units in this cooling group. Up to 12 cooling units can be joined together to work as a single cooling group.

**Type:** Set the rack deployment strategy for the cooling units of this cooling group.

- **In-Row:** Air flow is not ducted. Hot aisle air is cooled, then shared by all loads in the row.
- **RACS:** (Rack Air Containment System). Air flow in the enclosure is controlled by a ducting system fitted to the enclosure.
- **HACS:** (Hot Aisle Containment System). Air flow in the room is controlled by enclosing the hot air aisle. The loads share an enclosed common hot aisle.
- **CACS:** (Cold Aisle Containment System). Air flow in the room is controlled by enclosing the cold air aisle. The loads share an enclosed common cold aisle.

**%Glycol:** The percentage of glycol used by the Cooling Group to cool the environment. Only qualified service personnel should make changes to this setting.

**Active Flow Control Lamp Test:** When enabled, the Active Flow Controller(s) LEDs will cycle through a red, green, and blue illumination pattern. (Not on unit.)

**Number of Active Flow Controllers:** Set the number of AFC units in the group (0-5).

**Altitude:** Set the altitude (in feet or meters) of the unit above sea level. This number is used to estimate the density of air and is a factor in pressure measurement.

**Max Fan Spd:** Set the maximum fan speed for the Group. The default is 100%, and is adjustable to 60%.



See "Fan Speed:" on page 23 for more information

## Identify the cooling unit

### Path: Main > Set Identification

The **Set Identification** menu contains settings that identify the name and location of the cooling unit.

**Unit Id:** Assign a unique identification number to this cooling unit. Range: 1 through 12.

**Name:** Assign a **Name**, up to 40 alpha-numeric characters, to the cooling unit.

**Location:** Enter the **Location**, up to 40 alpha-numeric characters, of the cooling unit.



**NOTE:** Only the first 19 characters (of the 40 that are possible to enter) will display on the display interface. You must use Telnet, the Control console, or the Web to access all 40 characters. See “Web interface” on page 33 for more information.

## Configure Modbus

### Path: Main > Configure Modbus

Use the **Configure Modbus** menu to set up communications between the cooling unit and the building management system.

**Modbus:** Enable or disable Modbus communication protocol.

**Target Id:** Each Modbus device must have a unique target identification number. Enter a unique number for this cooling unit.

**Baud Rate:** Set either 9600 bps or 19200 bps.

**Fixed settings:** 8 data bits, no parity, 1 stop bit. These settings cannot be modified.

# Control the Environment

The primary function of the cooling unit is to cool air from the hot aisle and deliver it to the cold aisle at the temperature setpoint. The control strategies employed by the cooling unit depend upon the deployment strategy of the cooling group.

In an in-row environment, the cooling unit supplies constant-temperature supply air to the common cold aisle. The fan speed is modulated to ensure that the desired volume of air reaches the IT equipment. The fan speed is determined by the difference between the cooling setpoint and the maximum rack air inlet temperature.

In a HACS or RACS environment, the cooling unit neutralizes the heat accumulated in the common hot aisle and expels it back into the surrounding environmental space while maintaining the desired temperature in the cold aisle.

In a CACS environment, the cooling unit supplies constant temperature supply air to the enclosed cold aisle. The fan speed is modulated to ensure that the required volume of air reaches the IT equipment.

## How the modes of operation work

**Cool:** Cooling control is varied based on configuration:

- **InRow:** The equipment maintains the supply air temperature setpoint by regulating the flow of chilled water through the cooling coil. The evaporator fan speed is controlled by comparing the rack inlet temperature to the cooling setpoint. As the rack temperature increases compared to the cooling setpoint the fans increase output to maintain the setpoint. As rack temperature decreases compared to the cooling setpoint the fans decrease output to maintain the setpoint.
- **RACS/HACS:** The supply air setpoint is maintained the same way as with the InRow configuration. When Active Flow Controller (AFC) devices are present, the controller utilizes differential pressure data supplied by the AFC(s) to supply the correct amount of airflow to the IT load. When AFC devices are not present the fan speed is controlled by the fan speed preference setting. The fan speed can be selected based on the temperature differential across the cooling unit. As return temperatures deviate from the fan speed preference setting, the fan speed increases to bring the temperature difference back down to the setpoint or decreases fan output to increase the unit temperature differential. By maintaining the desired temperature differential, the system matches the airflow requirements of the load.
- **CACS:** The equipment maintains the supply air temperature set point by regulating the flow of chilled water through the cooling coil. When AFC devices are present, the controller utilizes differential pressure data supplied by the AFC(s) to supply the correct amount of airflow to the IT load. When AFC devices are not present the evaporator fan speed is controlled by comparing the rack inlet temperature to the cooling set point. As the rack temperature increases compared to the cooling set point the fans increase output to maintain the set point. As rack temperature decreases compared to the cooling set point the fans decrease output to maintain the set point.

**Humidify:** The equipment contains an electric humidifier that injects steam into the air if the humidity is below the humidify setpoint. The controls use dew point as the process variable and select different setpoints based on configuration.

- **InRow/CACS:** The humidification setpoint and the cooling setpoint are used to calculate the dew point setpoint. A return air dew point is calculated from the return air temperature and humidity. The humidifier output is generated using a proportional controller using the return air dew point as the process variable. The proportionality constant is user programmable.
- **RACS/HACS:** This configuration uses a humidification setpoint and the supply air setpoint to calculate the dew point setpoint. A return air dew point is calculated from the return air temperature and humidity. The humidifier output is generated using a proportional controller using the return air dew point as the process variable. The proportionality constant is user programmable.

**Dehumidify:** The equipment removes humidity from the air passing through the cooling unit. A dehumidification demand is created when the return dew point temperature is greater than the dehumidification dew point setpoint plus a dead band and the fan speed is less than 80%. The dehumidification dew point setpoint is calculated using the user configurable dehumidifying setpoint %RH and either the Cooling set point temperature for InRow/CACS strategy or the Supply Air set point temperature for HACS/RACS strategy. The dehumidification mode of operation uses the heaters in stages to control the supply air temperature controller when the Reheat and Heat Assist are enabled. Otherwise, the dehumidification mode will use 62.0 F dew point temperature set point for the supply air temperature controller. The evaporator fans decrease to 40% output when in the dehumidification mode.

**Reheat:** The electric reheater heats the air passing through the cooling unit when the return air temperature is below the reheat setpoint. The return air temperature may be low while the unit is dehumidifying or if data center equipment is off and the environment is relatively cold. The reheat output is determined by the difference between the reheat setpoint and the cooling unit return air temperature (the reheat output increases as the return air temperature decreases).

The reheat output is managed by stages of 25%, 50%, 75% and 100% output. The reheaters will not engage at fan speeds below 50% output.

**Heat Assist:** Enabling heat assist improves low load temperature control as well as dehumidification. Heat assist allows the coils to stay colder without changing the temperature of the output air, assisting dehumidification and providing more stable cooling at a lower heat load.

**Fluid Calibration Mode:** Runs the cooling unit with the valve fully open and at minimum fan speed. This special mode is typically used to balance the fluid flow in multiple units or in one unit. This mode generates a critical alarm. The cooling unit will take some time to return to normal operation once the Fluid Calibration Mode is turned off.



See **Supply Air** and **Return Air** on page 23 for more information.

## Setpoints

### Path: Main > Set Group Setpoints

A setpoint is the target value that a cooling group tries to maintain in the rack. The default setpoints are appropriate for most cooling applications.

The setpoints for each mode must be within the following ranges:

- **Cool:** 18.0–25.0°C (64.4–90.0°F)
- **Supply Air:** 17.0–23.0°C (59.0–86.4°F)
- **Dehumid:** 35.0–80.0% RH
- **Dehumid DB** (Dehumidify Deadband): 2.0–10.0%
- **Humidify:** 20.0–50.0% RH
- **Reheat:** 10.0–18.0°C (50.0–64.4°F)
- **Fan Spd:** When the cooling unit is set to HACS or RACS mode, this property specifies the desired temperature difference (DT) across computer equipment from the following options. When the cooling unit is programmed for InRow, CACS, HACS or RACS with Fan Ctrl property set to Manual, this property defines the fixed fan speeds 60% - 100% that correspond to Fan Spd preference.

### Auto Settings

- Low = 16.7°C (30°F) DT
- Med-Low = 13.9°C (25°F) DT
- Med = 11.1°C (20°F) DT
- Med-High = 6.3°C (15°F) DT
- High = 5.6°C (10°F) DT

### Manual Settings

- 60% of maximum fan speed
- 70% of maximum fan speed
- 80% of maximum fan speed
- 90% of maximum fan speed
- 100% of maximum fan speed

- **Fan Cntrl:** This selection allows air flow to be controlled automatically by the cooling unit or manually by user-selected fan speed preference.
  - **Auto:** Air flow is automatically controlled by the cooling unit.
  - **Manual:** The air flow is fixed to 60%, 70%, 80%, 90%, or 100% to correspond to the value of the **Fan Speed Preference** property.

The **Supply Air** setpoint must be at least 1.1°C (2.0°F) above the **Reheat** setpoint. The **Dehumidify** setpoint must be at least 5% above the **Humidify** setpoint.

**NOTE:** The **Supply Air** setting is defined when the cooling group is commissioned. This task is performed by Schneider Electric authorized personnel only.

## PID settings

### Path: Main > Set Group PIDs

The Proportional plus Integral plus Derivative (PID) loop controls the output of the fans.

<b>⚠ WARNING</b>
<b>HAZARD TO EQUIPMENT OR PERSONNEL</b>
All work must be performed by Schneider Electric qualified personnel.
<b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>

**Gain (P):** The proportional multiplier (gain) for this mode or actuator. The proportional multiplier adjusts for the difference (error) between the measured value and the setpoint.

**Rate (I):** The integral multiplier (reset rate) for this mode or actuator. The integral multiplier adjusts for error measurement and the amount of time that the error has existed. The integral multiplier adds to or subtracts from the output in small increments to correct for the offset error caused by the proportional contribution.

**Deriv (D):** The derivative multiplier (derivative) for this mode or actuator. The derivative multiplier adjusts the output for rapid changes in the error, correcting for the rate of change of the error over time.

## Tune the PID loop

Tune the PID loop to optimize the performance of the cooling group.

<b>⚠ WARNING</b>
<b>HAZARD TO EQUIPMENT OR PERSONNEL</b>
All work must be performed by Schneider Electric qualified personnel.
<b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b>

1. Adjust the integral and derivative constants to zero and the proportional constant to 1.0.
2. Set the temperature setpoint value and start the cooling group.
3. When the temperature reaches a stable value, increase the proportional constant by 0.5. If the temperature does not respond to this change, adjust the setpoint.
4. Repeat step 3 until the temperature value starts to oscillate and the peak amplitude of the oscillations is constant.
5. Note the time, in minutes, between the peaks of the oscillations. This is the Ultimate Period,  $P_U$ .
6. Note the value of the proportional constant. This is the Ultimate Gain,  $G_U$ .
7. Compute the PID constants using the table below. Use the equations for that control method in the row to compute the values for each constant.

<b>Control Method</b>	<b>Proportional</b>	<b>Integral</b>	<b>Derivative</b>
P	$0.5 * G_U$	–	–
P + I	$0.45 * G_U$	$0.54 * G_U / P_U$	–
P + I + D	$0.6 * G_U$	$1.2 * G_U / P_U$	$0.075 * G_U * P_U$

8. Set each constant according to these calculations.

You may need to further tune the PID loop in the following ways to account for changes in the room load:

<b>Loop Behavior</b>	<b>PID Tuning Correction</b>
Slow response to temperature changes	Increase the proportional multiplier or increase the derivative multiplier.
Overcooling/undercooling after changes in the room load or changes in setpoint	Increase the derivative or the proportional multiplier.
Environmental temperature never reaches the setpoint	Increase the integral multiplier.
Overcooling/undercooling on constant room load	Decrease the integral multiplier.



## Run hours

The cooling unit records the number of hours each of its components has operated. When a component is replaced, use the **Reset Run Hours** option to reset the run hours for the displayed component to zero.

### Path: Main > View Run Hours

- **Air Filter**
  - Reset Run Hours
  - NOTE:** Replace air filters with Schneider Electric air filters only.
- **Fans**
  - Fan Number
    - Reset Run Hours
- **Condensate Pump**
  - Reset Run Hours
- **Heaters**
  - Heater Number
    - Reset Run Hours
- **Humidifier**
  - Reset Run Hours

## Humidity control

### Path: Main > Configure Unit > Humidity Control

- **Humidify:** Enable or disable the **Humidity** function.
- **Control:** Select Auto to enable the main controller to control the humidifier. Select **Drain** to drain the humidifier and then turn it off.
- **Dehumidify:** Enable or disable the **Dehumidify** function.

## Reheat control

### Path: Main > Configure Unit > Reheat Control

- Enable or disable the **Reheat** function.
- Enable or disable the **HeatAssist** function.

## Thresholds

Set alarms to alert you to threshold violations.

### Path: Main > Set Unit Thresholds

When the monitored input violates the unit threshold, an alarm will occur. Set thresholds for the following sensors:

- **Rack Inlet:** The temperature of the air entering the rack at the rack inlet sensor.
- **High Humid:** The relative humidity at which the high threshold alarm occurs.
- **Low Humid:** The relative humidity at which the low threshold alarm occurs.
- **Supply Air:** The average temperature of the air output from the cooling unit, measured by the upper and lower supply air temperature sensors.
- **Return Air:** The temperature of the air entering the cooling unit at the temperature sensor.
- **Inlet Fluid:** The temperature of the chilled water entering the cooling unit

## Service intervals

### Path: Main > Service Intervals

The service interval depends on environmental cleanliness. Each component interval setting has an alarm. If enabled, the alarm will sound when the component interval has elapsed. The alarm is cleared by selecting **Clear Alarms** in the main menu. Set the number of weeks to service the following:

- **Air Filter Interval:** The default is 18 weeks.
- **Humidifier Interval:** The default is 26 weeks.
- **Heater Interval:** The default is 52 weeks.
- **Condensate Pump Interval:** The default is 52 weeks.
- **Fan Interval:** The default is 52 weeks.

**NOTE:** The **Air Filter** interval alarm is enabled by default. The **Condensate Pump** and **Fan** interval alarms are disabled by default.

# Display Settings

Set display interface settings, including time and date, units, passwords, and time-out. You can also adjust the contrast, key click, beeper volume, and beep on alarm settings.

## Password & timeout

**Path: Main > Set Password**

**NOTE:** The default user password is **apc** (lowercase). See "Password entry" on page 8 for more information on how to enter the password.

**Change passwords:** Set the Admin and Device passwords.

1. Move the selector arrow next to the **Change Passwords** option and press the **ENTER** key.
2. Select the password to change (either **Admin** or **Device**).
3. Enter a new password (up to 8 characters).
4. Press the **ENTER** key to confirm.

**Timeout:** Set the length of time which can elapse when no keys are pressed before the display interface returns to the scrolling screen status. The password must then be entered to regain access.

**Invalidate:** Override the password timeout and require password entry immediately.

## Date & time

**Path: Main > Set Date & Time**

**Set the time:** Enter the correct time, and press the **ENTER** key. The **Time** is displayed on some status screens and is also used in the alarm and event logs to time-stamp events

**Set the date:** Enter the day, month, and year, and press the **ENTER** key. The **Date** is displayed on some status screens and is also used in the alarm and event logs to date-stamp events.

**Set the format:** Use the up or down arrow key to select the date **Format setting**.

- mm/dd/yyyy (11/16/2007) (Default)
- yyyy-mm-dd (2007-11-16)
- dd-mmm-yy (16-Nov-07)
- mmm-dd-yy (Nov-16-07)
- dd.mm.yyyy (16.11.2007)

## Adjust display

**Path: Main Menu > Configure Display**

**Contrast:** Adjust the visibility of the screen text. Lower numbered settings provide darker text; higher numbers provide lighter text. Settings range from 0–7.

**Key Click:** Enable or disable an audible tone every time a key is pressed on the display interface.

**Beeper Volume:** Set the volume of the display interface alarm tone, and for the audible tone that sounds every time a key is pressed on the display interface.

**Beep On Alarm:** Set the cooling unit to sound an audible tone every 30 seconds when a new alarm occurs. Silence the audible tone by pressing any key on the display interface. When the alarm clears itself, the tone will stop on its own.

## Display units

### Path: Main Menu > Set Display Units

Set the units of measure for the cooling unit to either US or Metric.

## Network Configuration

The cooling unit is shipped with a Network Management Card (NMC) that enables you to manage the cooling unit over your network. Configure the network settings for the Network Management Card from the display interface. The management card allows remote control and configuration of the cooling unit.

### Configure the network

#### Path: Main > Configure Network

**MAC Address:** Displays the unique network identifier assigned to the Network Management Card of the cooling unit installed in the cooling unit at the factory.

**IP Address:** You will be prompted to enter an Admin password. Enter the password and press **ENTER** to return to the **IP** screen. Press **ENTER** again to change the following settings for Manual boot mode only.

- **IP:** Enter the IP address assigned to the Network Management Card of the cooling unit.
- **SM:** Enter the subnet mask for the Network Management Card of the cooling unit.
- **GW:** Enter the default gateway for the Network Management Card of the cooling unit.

**Boot Mode:** Set the method by which the Network Management Card of the cooling unit will acquire its network settings.

- **Manual:** Enter the IP Address, subnet mask, and default gateway using the **IP Address** menu.
- **BootP:** Set the Network Management Card of the cooling unit to obtain its network settings from a BOOTP server.
- **DHCP:** Set the Network Management Card of the cooling unit to obtain its network settings from a DHCP server.



By default, DHCP requires a Schneider Electric cookie before it will accept an IP address. See “DHCP:” on page 30 for more information.

- **BootPDHCP:** Set the Network Management Card of the cooling unit to search for its network settings from either a BOOTP or a DHCP server.

# View Status Readings

The display interface has several options for viewing the status of the cooling unit, the cooling group to which the cooling unit belongs, and the environment being controlled. The status readings for the cooling unit are available under the **View Unit Status** option in the main menu, and status readings for the cooling group are available under the **View Group Status** option on the main menu or on the scrolling status screens.

## Scrolling status screens

When the display interface is idle, it scrolls through screens of status information. Press the up or down arrow key to interrupt the automatic scrolling and view a specific status screen.

## Cooling unit status

### Path: Main > View Unit Status

View information specific to this cooling unit.

**Op Mode (Operating):** The cooling unit is in one of the following modes:

- **On:** The cooling unit is cooling.
- **PreStart:** The cooling unit is initializing and establishing communication with the controller. During PreStart, the valve of the cooling unit opens at 35%. The fans will start at 30% and stay on at that rate for 10 minutes.
- **Standby:** The cooling unit is receiving power but not enabled for cooling.
- **Idle:** The cooling unit is not operating in normal mode due to active alarms.



For more information, see “Idle On Leak:” on page 11.

**Cool Outpt (Output):** The actual cooling output of the cooling unit.

**Cool Demnd (Demand):** The amount of cooling that the heat load currently requires.

**Supply Air:** The average temperature of the air leaving the cooling unit, as measured by the upper and lower supply air temperature sensors.

**Return Air:** The temperature of the air entering the cooling unit.

**Max Rack In (Maximum):** The highest reading of the three rack inlet temperature sensors determines the rack temperature.

**Power Source:** The source of power to the cooling unit.

**Rack In #n:** The temperature of the air entering the rack at the remote temperature sensor.

**Fluid In:** The temperature of the chilled water as it enters the cooling coil.

**Fluid Out:** The temperature of the chilled water as it leaves the cooling coil.

**Fluid Flow:** The amount of chilled water that flows through the cooling unit.

**Fluid Vlv Pos (Fluid Valve Position):** The position of the valve that controls how much chilled water enters the cooling unit.

**Air Flow :**The amount of air required to maintain the setpoint temperature.

**Fan Speed:** The speed of the fans that regulate the air flow through the cooling unit.

**Filter DP (Differential Pressure):** The filter differential pressure displayed in inches water column or in Pascals.

**Sply Humid (Supply Humidity):** The humidity of the air leaving the cooling unit.

**Retn Humid (Return Humidity):** The humidity of the air entering the cooling unit.

**Humid Outpt (Humidity Output):** The actual percent of maximum humidification output of the cooling unit.

**Dehumid Dmd (Dehumidify Demand):** The percent of maximum dehumidification that the computer equipment currently requires.

**Dehum Outpt (Dehumidify Output):** The actual percent of maximum dehumidification output of the cooling unit.

**Reheat Dmd (Reheat Demand):** The percent of maximum reheating that the computer equipment currently requires.

**Reheat Outpt (Reheat Output):** The actual percent of maximum reheating of the cooling unit.

**Humidifier Current:** The current draw of the humidifier canister.

**Humidifier Conduct (Conductivity):** The conductivity of the water in the humidifier canister.

## Cooling group status

**Path: Main > View Group Status**

View information about the cooling group.

**Cool Output:** The combined output of the cooling group.

**Cool Demnd (Demand):** The cooling output required to meet the current heat load of the conditioned space.

**Cool Setpt (Setpoint):** The temperature you set to maintain the room environment.

**Max Rack (Maximum):** The highest rack temperature reported by any cooling unit in the cooling group.

**Min Rack (Minimum):** The lowest rack temperature reported by any cooling unit in the cooling group.

**Air Flow:** The combined airflow output of the cooling units in the cooling group.

**Humid Dmd (Demand):** The percent of maximum dehumidification that is currently required.

**Humid Act (Actual):** The actual percent of maximum humidification of the cooling group.

**Reheat Dmd (Demand):** The percent of maximum reheating that is currently required.

**Reheat Act (Actual):** The actual percent of maximum reheating output of the cooling group.

**Dewpoint Temperature:** The average group dew point temperature.

## About the cooling unit

**Path: Main > About InRow RP**

View identifying information that is helpful when obtaining service:

- **Model:** Model number
- **S/N:** Serial number
- **F/W:** Display interface firmware revision
- **H/W:** Hardware revision
- **Made:** Date of manufacture
- **RP APP:** Application version
- **AOS Ver:** OS version

# Event Log

The event log saves status information and a message each time a change in the cooling group is detected. Alarms and events are recorded in the log and displayed on the active alarms screen. Status events (informational) and system configuration changes are only displayed in the event log.

## View event log

### Path: Main > View Event Log

The event log keeps a record of all alarms and events. The screen displays the following:

- The name of the event.
- The time and date the event occurred.

Use the arrow keys to scroll through the list of events and display the date and time for each event.

## Clear event log

### Path: Main > Clear Event Log

A confirmation screen is displayed when you select this option. Enter the Admin password to erase the log. Select **Yes** to erase all of the events in the log. Select **No** to return to the main screen.

# Respond to Alarms

When an alarm is triggered, the cooling unit alerts you through the display by the following methods:

- Active alarm screen entry on scrolling status screens
- LEDs on the front panel display
- An optional audible alarm every 30 seconds, if enabled

## View active alarms

### Path: Main > View Alarms

The **View Alarms** screen provides the number of alarms, the severity, and a brief description of the alarm. Press the arrow keys to view the rest of the list.

## Clear active alarms

### Path: Main > Clear Alarms

A confirmation screen is displayed when you select this option. Enter the Admin password to clear the alarm list. Select **Yes** to clear all of the alarms in the list. Select **No** to return to the main screen. If the conditions that caused the alarm still exist, those conditions cause the alarm to be regenerated.

## Alarm messages and suggested actions

Alarm Message	Severity	Action Required
Air Filter Clogged	Warning	<ul style="list-style-type: none"><li>• Clean or replace the air filter.</li><li>• If the problem persists, contact Schneider Electric Customer Support.</li></ul>
Air Filter Run Hours Violation	Warning	<ul style="list-style-type: none"><li>• Reset the <b>Air Filter Run Hours</b> after the air filter is cleaned or replaced.</li></ul>
Active Flow Controller Sensor Fault	Warning	<ul style="list-style-type: none"><li>• A hardware failure exists.</li><li>• For assistance, contact Schneider Electric Customer Support.</li></ul>
A-Link Isolation Relay Fault	Critical	<ul style="list-style-type: none"><li>• For assistance, contact Schneider Electric Customer Support.</li></ul>

<b>Alarm Message</b>	<b>Severity</b>	<b>Action Required</b>
Coil Fluid Valve Actuator Fault	Critical	<ul style="list-style-type: none"> <li>• A hardware failure exists.</li> <li>• For assistance, contact Schneider Electric Customer Support.</li> </ul>
Check Condensate Management System Exists	Warning	<ul style="list-style-type: none"> <li>• The condensate pump is running.</li> <li>• For assistance, contact Schneider Electric Customer Support.</li> </ul>
Condensate Pan Full	Critical	<ul style="list-style-type: none"> <li>• Make sure the floats are operating correctly.</li> <li>• Clear debris from the condensate pan and drain lines.</li> <li>• Replace the sensor.</li> <li>• For assistance, contact Schneider Electric Customer Support.</li> </ul>
Condensate Pump Run Hours Violation	Warning	<ul style="list-style-type: none"> <li>• At the display interface, reset the <b>Condensate Pump Run Hours</b> in the <b>View Run Hours</b> screen after the appropriate maintenance for the device has been performed.</li> </ul>
Cooling Failure	Critical	<ul style="list-style-type: none"> <li>• Make sure the chiller is operating properly.</li> <li>• For assistance, contact Schneider Electric Customer Support.</li> </ul>
EcoAisle Door Open	Warning	<ul style="list-style-type: none"> <li>• Verify the EcoAisle door is shut properly. If the problem persists, contact Schneider Electric technical support.</li> </ul>
Entering Fluid High Temperature Violation	Warning	<ul style="list-style-type: none"> <li>• Make sure the chiller is operating properly.</li> <li>• At the display interface, make sure the Inlet Fluid threshold is set correctly in the <b>Set Unit Thresholds</b> screen.</li> <li>• If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
Entering Fluid Temperature Sensor Fault	Warning	<ul style="list-style-type: none"> <li>• Make sure the sensor is connected properly.</li> <li>• If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
External Communication Fault	Critical	<ul style="list-style-type: none"> <li>• A hardware failure exists.</li> <li>• For assistance, contact Schneider Electric Customer Support.</li> </ul>
Fan #n Fault	Warning	<ul style="list-style-type: none"> <li>• A hardware failure exists.</li> <li>• For assistance, contact Schneider Electric Customer Support.</li> </ul>
Fan #n Run Hours Violation	Warning	<ul style="list-style-type: none"> <li>• At the display interface, reset the <b>Fans</b> run hours in the <b>View Run Hours</b> screen after the appropriate maintenance for the device has been performed.</li> </ul>
Filter Sensor Fault	Warning	<ul style="list-style-type: none"> <li>• A hardware failure exists.</li> <li>• For assistance, contact Schneider Electric Customer Support.</li> </ul>
Fluid Calibration Active	Critical	<ul style="list-style-type: none"> <li>• The cooling unit is in fluid calibration mode. See “Fluid Calibration Mode:” on page 16 for more information.</li> </ul>
Fluid Flowmeter Comm Fault	Warning	<ul style="list-style-type: none"> <li>• Make sure the sensor is connected properly.</li> <li>• If the problem persists, contact Schneider Electric Customer Service.</li> </ul>
Frequent Humidifier Faults	Warning	<ul style="list-style-type: none"> <li>• For assistance, contact Schneider Electric Customer Support.</li> </ul>
Group Communication Lost	Warning	<ul style="list-style-type: none"> <li>• Make sure the number of cooling units in the group is configured properly, and the A-Link connections between cooling units are correct.</li> <li>• Make sure the system is receiving power and is connected properly.</li> <li>• If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
Heater #n Fault	Warning	<ul style="list-style-type: none"> <li>• A hardware failure exists. Contact Schneider Electric Customer Support for assistance.</li> </ul>



<b>Alarm Message</b>	<b>Severity</b>	<b>Action Required</b>
Heater #n Run Hours Violation	Warning	<ul style="list-style-type: none"> <li>At the display interface, reset the heaters run hours in the View Run Hours screen after performing the appropriate maintenance on the heater.</li> </ul>
Humidifier Communication Fault	Warning	<ul style="list-style-type: none"> <li>A hardware failure exists. Contact Schneider Electric Customer Support for assistance.</li> </ul>
Humidifier Cylinder Full When Unit Off	Warning	<ul style="list-style-type: none"> <li>Contact Schneider Electric Customer Support for assistance.</li> </ul>
Humidifier Drain Fault	Warning	<ul style="list-style-type: none"> <li>A hardware failure exists. Contact Schneider Electric Customer Support for assistance.</li> </ul>
Humidifier Excessive Output Reduction Alarm	Warning	<ul style="list-style-type: none"> <li>A hardware failure exists. Contact Schneider Electric Customer Support for assistance.</li> </ul>
Humidifier Run Hours Violation	Warning	<ul style="list-style-type: none"> <li>Perform preventive maintenance on the humidifier.</li> <li>Contact Schneider Electric Customer Support for assistance.</li> </ul>
Humidifier Water Conductivity Too High	Warning	<ul style="list-style-type: none"> <li>Contact Schneider Electric Customer Support for assistance.</li> </ul>
Humidity High Violation	Warning	<ul style="list-style-type: none"> <li>Make sure the humidity alarm limits are set correctly in the <b>Set Unit Thresholds</b> screen.</li> </ul>
Humidity Low Violation	Warning	<ul style="list-style-type: none"> <li>Make sure the humidity alarm limits are set correctly in the <b>Set Unit Thresholds</b> screen.</li> </ul>
Insufficient Airflow	Warning	<ul style="list-style-type: none"> <li>Verify the air ports are clear of obstructions and there is sufficient cooling capacity for the load.</li> <li>If the problem persists, contact Schneider Electric technical support.</li> </ul>
Internal Communication Fault	Critical	<ul style="list-style-type: none"> <li>A hardware failure exists.</li> <li>For assistance, contact Schneider Electric Customer Support.</li> </ul>
Leaving Fluid Temperature Sensor Fault	Warning	<ul style="list-style-type: none"> <li>Make sure the sensor is connected properly.</li> <li>If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
On Standby: Input Contact Fault	Warning	<ul style="list-style-type: none"> <li>At the display interface, make sure the <b>Input Normal State</b> is defined correctly in the <b>Set Unit Thresholds</b> screen.</li> <li>Clear the problem that caused the input contact switch to change from its normal state.</li> <li>If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
Power Supply Feed A Fault	Warning	<ul style="list-style-type: none"> <li>Make sure the power source is connected properly and the power is on.</li> <li>If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
Rack Inlet #n High Temperature Violation	Critical	<ul style="list-style-type: none"> <li>Make sure the temperature sensor is connected and placed properly.</li> <li>Make sure the <b>Rack Inlet</b> threshold is set correctly in the <b>Set Unit Thresholds</b> screen.</li> <li>If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
Rack Inlet #n Temperature Sensor Fault	Critical	<ul style="list-style-type: none"> <li>Make sure the sensors are connected properly.</li> <li>If the problem persists, replace the sensor, or contact Schneider Electric Customer Support.</li> </ul>
Replace Humidifier Cylinder Alarm	Warning	<ul style="list-style-type: none"> <li>Replace the humidifier cylinder.</li> <li>Contact Schneider Electric Customer Support for assistance.</li> </ul>

<b>Alarm Message</b>	<b>Severity</b>	<b>Action Required</b>
Return Air High Temperature Violation	Warning	<ul style="list-style-type: none"> <li>• Make sure the <b>Return Air</b> threshold is set correctly in the <b>Set Unit Thresholds</b> screen.</li> <li>• If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
Return Air Sensor Fault	Critical	<ul style="list-style-type: none"> <li>• Make sure the sensor is connected properly.</li> <li>• Replace the sensor.</li> <li>• If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
Return Humidity Sensor fault	Warning	<ul style="list-style-type: none"> <li>• Make sure the sensor is connected properly.</li> <li>• Contact Schneider Electric Customer Support for assistance.</li> </ul>
Supply Air High Temperature Violation	Warning	<ul style="list-style-type: none"> <li>• Make sure the temperature sensor is connected properly.</li> <li>• Make sure the <b>Supply Air</b> threshold is set correctly in the <b>Set Unit Thresholds</b> screen.</li> <li>• If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
Supply Air Sensor Fault (upper or lower)	Critical	<ul style="list-style-type: none"> <li>• Make sure the faulty sensor is connected properly.</li> <li>• Replace the sensor.</li> <li>• If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
Supply Humidity Sensor Fault	Warning	<ul style="list-style-type: none"> <li>• Make sure the sensor is connected properly.</li> <li>• Replace the sensor.</li> <li>• If the problem persists, contact Schneider Electric Customer Support.</li> </ul>
Unexpected Number of Active Flow Controllers	Warning	<ul style="list-style-type: none"> <li>• Verify physical number of AFC units matches the number shown in the Number of Active Flow Controllers setting.</li> <li>• If the problem persists, contact Schneider Electric technical support.</li> </ul>
Water Detection Fault	Warning	<ul style="list-style-type: none"> <li>• Identify and isolate the source of the leak.</li> <li>• For assistance, contact Schneider Electric Customer Support.</li> </ul>
Water Detection Shutdown	Critical	<ul style="list-style-type: none"> <li>• System is configured to shut down when a leak has been detected. Identify the source of the leak.</li> <li>• For assistance, contact Schneider Electric Customer Support.</li> </ul>

# Network Management Card

---

## Quick Configuration

The cooling unit is shipped with a Network Management Card that enables the cooling unit to be managed over a network. Configure the Network Management Card to control this cooling unit through a network.

### Overview

You must configure the following TCP/IP settings before the Network Management Card can operate on a network:

- IP address of the Network Management Card
- Subnet mask
- Default gateway

**NOTE:** Never use the loopback address (127.0.0.1) as the default gateway address for the Network Management Card. Doing so will disable the card and will require you to reset TCP/IP settings to their defaults using a local serial login.

**NOTE:** If a default gateway is unavailable, use the IP address of a computer that is located on the same subnet as the Network Management Card and that is usually running. The Network Management Card uses the default gateway to test the network when traffic is very light.



See “Watchdog Features” in the “Introduction” of the *User’s Guide* for more information about the watchdog role of the default gateway.

## TCP/IP configuration methods

Use one of the following methods to define the TCP/IP settings needed by the Network Management Card:

- Schneider Electric Device IP Configuration Wizard (See “Schneider Electric Device IP Configuration Wizard” on this page.)
- BOOTP or DHCP server (See “BOOTP & DHCP configuration” on page 30.)
- Local computer (see “Local access to the control console” on page 31.)
- Networked computer (See “Remote access to the control console” on page 31.)

## Schneider Electric Device IP Configuration Wizard

You can use the Schneider Electric Device IP Configuration Wizard at a computer running Windows® 2000, Windows Server 2003, or Windows XP to configure a Network Management Card.

**NOTE:** Most software firewalls must be temporarily disabled for the Wizard to discover unconfigured Network Management Cards.



To configure one or more Network Management Cards from a user configuration file, see the User Guide available on the Schneider Electric Web site: [www.schneider-electric.com](http://www.schneider-electric.com).

1. Download the Device IP Configuration Wizard from the Schneider Electric Web site: [www.schneider-electric.com](http://www.schneider-electric.com).
2. Install and run the Device IP Configuration Wizard.
3. Follow the on-screen instructions.

**NOTE:** If you leave the option Start a Web browser when finished enabled, you can use `apc` (the default) for both the user name and password.

## .ini file utility

You can use the .ini file export utility to export .ini file settings from configured Network Management Cards to one or more unconfigured Network Management Cards. The utility and documentation are available on the Schneider Electric Web site, [www.schneider-electric.com](http://www.schneider-electric.com).

## BOOTP & DHCP configuration

The default TCP/IP configuration setting, **BOOTP & DHCP**, assumes that a properly configured BOOTP or DHCP server is available to provide TCP/IP settings to Network Management Cards. The Network Management Card first attempts to discover a properly configured BOOTP server, and then a DHCP server. It repeats this pattern until it discovers a BOOTP or DHCP server.



If neither of these servers is available, see “Local access to the control console” on page 31, or “Remote access to the control console” on page 31 to configure the needed TCP/IP settings.



A user configuration (.ini) file can function as a BOOTP or DHCP boot file. For more information, see the TCP/IP configuration section of the *User Guide*, available from the Schneider Electric Web site, [www.schneider-electric.com](http://www.schneider-electric.com).

**BOOTP:** For the Network Management Card to use a BOOTP server to configure its TCP/IP settings, it must find a properly configured RFC951-compliant BOOTP server.

1. In the BOOTPTAB file of the BOOTP server, enter the MAC address of the Network Management Card, and the IP addresses of the subnet mask, and default gateway, and an optional bootup file name. Look for the MAC address on the display interface (**Path: Main > Configure Network**) or on the label on the back of the Network Management Card.
2. When the Network Management Card reboots, the BOOTP server provides it with the TCP/IP settings.
  - If you specified a bootup file name, the Network Management Card attempts to transfer that file from the BOOTP server using TFTP or FTP. The Network Management Card assumes all settings specified in the bootup file.
  - If you did not specify a bootup file name, you can configure the other settings of the Network Management Card remotely through its Web interface or control console; user name and password are both `apc`, by default.



See your BOOTP server documentation to create a bootup file.

**DHCP:** You can use a RFC2131/RFC2132-compliant DHCP server to configure the TCP/IP settings for the Network Management Card.



This section summarizes communication between the Network Management Card and a DHCP server. For more detail about how a DHCP server can configure the network settings for a Network Management Card, see “DHCP Configuration” in the *User Guide*.

1. A Network Management Card sends out a DHCP request that uses the following to identify itself:
  - A Vendor Class Identifier (APC by default)
  - A Client Identifier (by default, the MAC address value of the Network Management Card)
  - A User Class Identifier (by default, the identification of the application firmware of the Network Management Card)
2. A properly configured DHCP server responds with a DHCP offer that includes all of the settings that the Network Management Card needs for network communication. The DHCP offer also includes the Vendor Specific Information option (DHCP option 43). By default, the Network Management Card will ignore DHCP offers that do not encapsulate the Schneider Electric cookie in the Vendor Specific Information option using the following hexadecimal format:

Option 43 = 01 04 31 41 50 43

where

- the first byte (01) is the code
- the second byte (04) is the length
- the remaining bytes (31 41 50 43) are the Schneider Electric cookie



See your DHCP server documentation to add code to the Vendor Specific Information option.

To change the control console **DHCP Cookie Is** setting, use the **Advanced** option in the TCP/IP menu. See “Remote access to the control console” on page 31.

To disable the requirement that a DHCP offer include the Schneider Electric cookie, use the **DHCP Cookie Is** setting in the control console:

**Network > TCP/IP > Boot Mode > DHCP only > Advanced > DHCP Cookie Is.**

## Local access to the control console

You can use a computer connected to the serial port on the main board holding the Network Management Card to access the control console.

1. Select a serial port at the local computer, and disable any service that uses that port.
2. Use the configuration cable to connect the selected port to the serial port on the main board holding the Network Management Card. Use either 940-0103, the 6-ft (1.8-m) cable that came with your UPS, or AP9804 (990-1524), the 15-ft (4.6-m) cable available from Schneider Electric.
3. Run a terminal program (such as HyperTerminal) and configure the selected port for 9600 or 19200 bps, 8 data bits, no parity, 1 stop bit, and no flow control. Save the changes.
4. Press ENTER to display the **User Name** prompt.
5. Use **apc** for the user name and password.



See “Control console” on page 32 to finish the configuration.

## Remote access to the control console

From any computer on the same subnet as the Network Management Card, you can use ARP and Ping to assign an IP address to a Network Management Card, and then use Telnet to access the control console of that Network Management Card and configure the needed TCP/IP settings.

**NOTE:** After the IP address of the Network Management Card is configured, you can use Telnet without first using ARP and Ping to access that Network Management Card.

1. Use the MAC address for the Network Management Card in the ARP command to define the IP address. For example, to define an IP address of 156.205.14.141 for a Network Management Card that has a MAC address of 00 c0 b7 63 9f 67, use one of the following commands:

– Windows command format:

```
arp -s 156.205.14.141 00-c0-b7-63-9f-67
```

– LINUX command format:

```
arp -s 156.205.14.141 00:c0:b7:63:9f:67
```

**NOTE:** The MAC address is available on the display interface at:

**Path: Main > Configure Network** or look at the label on the back of the Network Management Card for the MAC address.

2. Use Ping with a size of 113 bytes to assign the IP address defined by the ARP command. For the IP address defined in step 1, use one of the following Ping commands:

– Windows command format:

```
ping 156.205.14.141 -l 113
```

– LINUX command format:

```
ping 156.205.14.141 -s 113
```

3. Use Telnet to access the Network Management Card at its newly assigned IP address. For example:

```
telnet 156.205.14.141
```

4. Use **apc** for both user name and password.



See “Control console” on page 32 to finish the configuration.

## Control console

After you log on at the control console, as described in “Local access to the control console” on page 31 or “Remote access to the control console” on page 31:

1. Choose **Network** from the **Control Console** menu.
2. Choose **TCP/IP** from the **Network** menu.
3. If you are not using a BOOTP or DHCP server to configure the TCP/IP settings, select the **Boot Mode** menu and then select **Manual boot mode**.
4. Set the **System IP**, **Subnet Mask**, and **Default Gateway** address values. (Changes will take effect when you log out.)
5. Press ENTER to return to the **TCP/IP** menu.
6. Press CTRL+C to exit to the **Control Console** menu.
7. Log out (option 4 in the **Control Console** menu).

**NOTE:** If you disconnected a cable from the local computer during the procedure described in “Local access to the control console” on page 31, reconnect that cable and restart the associated service.

# Access a Configured Network Management Card

## Overview

After the Network Management Card is running on your network, you can access the configured Network Management Card through the following interfaces:

- Web interface (HTTP or HTTPS protocol)
- Telnet or Secure SHell (SSH)
- SNMP
- FTP or Secure CoPy (SCP) to upgrade firmware
- Modbus



For more information on the interfaces, see the *User Guide*.

## Web interface

Use Microsoft® Internet Explorer® (IE) 5.5 and higher (on Windows® operating systems only), Mozilla-based browsers that support Firefox 1.x (on all operating systems), or Netscape® 7.x and higher (on all operating systems) to access the Web interface of the cooling unit. Other commonly available browsers also may work but have not been fully tested by Schneider Electric.

You can use either of the following protocols when you use the Web interface:

- The HTTP protocol (enabled by default), which provides authentication by user name and password but no encryption.
- The HTTPS protocol, which provides extra security through Secure Sockets Layer (SSL); encrypts user names, passwords, and data being transmitted; and authenticates the Network Management Card by means of digital certificates.

To access the Web interface and configure the security of your device on the network:

1. Address the Network Management Card by its IP address or DNS name (if configured).
2. Enter the user name and password (by default, **apc** and **apc** for an Administrator).
3. To enable or disable the HTTP or HTTPS protocols, use the **Network** menu on the **Administration** tab, and select the **access** option under the **Web** heading on the left navigation menu.



For more information on selecting and configuring network security, see the *Security Handbook*, available on the Schneider Electric Web site, [www.schneider-electric.com](http://www.schneider-electric.com).

## Telnet and SSH

You can access the control console through Telnet or Secure SHell (SSH), depending on which is enabled. Select the **Administration** tab, the **Network** option on the top menu bar, and then the **access** option under **Console** on the left navigation menu. By default, Telnet is enabled. Enabling SSH automatically disables Telnet.

**Telnet for basic access** Telnet provides the basic security of authentication by user name and password, but not the high-security benefits of encryption. To use Telnet to access the control console of the Network Management Card:

1. At a command prompt, use the following command line, and press ENTER:

```
telnet address
```

As *address*, use the IP address of the Network Management Card or DNS name (if configured).

2. Enter the user name and password (by default, **apc** and **apc** for an Administrator, or **device** and **apc** for a Device User).

**SSH for high-security access** If you use the high security of SSL for the Web interface, use Secure Shell (SSH) for access to the control console. SSH encrypts user names, passwords, and transmitted data.

The interface, user accounts, and user access rights are the same whether you access the control console through SSH or Telnet, but to use SSH, you must first configure SSH and have an SSH client program installed on your computer.



See the *User's Guide* for more information on configuring and using SSH.

## Simple Network Management Protocol (SNMP)

**SNMPv1 only:** After you add the PowerNet<sup>®</sup> MIB to a standard SNMP MIB browser, you can use that browser to access the Network Management Card. All user names, passwords, and community names for SNMP are transferred over the network as plain text. The default read community name is **public**; the default read/write community name is private.

**SNMPv3 only:** For SNMP GETs, SETs, and trap receivers, SNMPv3 uses a system of user profiles to identify users. An SNMPv3 user must have a user profile assigned in the MIB software program to perform GETs and SETs, browse the MIB, and receive traps. The default settings are **no authentication** and **no privacy**.

**NOTE:** To use SNMPv3, you must have a MIB program that supports SNMPv3.

**NOTE:** The Network Management Card supports only MD5 authentication and DES encryption.

**SNMPv1 and SNMPv3:** To use StruXureWare Data Center Expert to manage the Network Management Card, you must have SNMPv1 enabled in the unit interface. Read access allows InfraStruXure devices to receive traps. Write access is required while you set the InfraStruXure device as a trap receiver.

To enable or disable SNMP access, you must be an Administrator. Select the **Administration** tab, select the **Network** menu on the top menu bar, and use the **access** option under **SNMPv1** or **SNMPv3** on the left navigation menu.

## FTP/SCP

You can use FTP (enabled by default) or Secure CoPy (SCP) to transfer downloaded firmware to the Network Management Card, or to access a copy of the event or data logs of the cooling unit. SCP provides the higher security of encrypted data transmission and is enabled automatically when you enable SSH.

To use StruXureWare Data Center Expert to manage the Network Management Card, you must have the **FTP Server** enabled in the Network Management Card. To enable or disable **FTP Server** access, you must be an Administrator. On the **Administration** tab, select the **Network** menu on the top menu bar, and use the **FTP server** option on the left navigation menu.



In the *User Guide*, see the following sections:

- To transfer firmware, see "File Transfers."
- To retrieve a copy of the event or data log, see "Use FTP or SCP to retrieve log files."

## Modbus

Modbus lets you view the Network Management Card through the interface of your building management system.

The Modbus interface supports 2-wire RS-485, plus ground.



**NOTE:** Modbus can be configured to run at either 9600 or 19200 bps. It is already configured for 8 data bits, no parity, and 1 stop bit, which are not changeable.



To access the Modbus register map, go to the Schneider Electric Web site, [www.schneider-electric.com](http://www.schneider-electric.com).

## Recover From a Lost Password

You can use a local computer (a computer that connects to the Network Management Card through the serial port) to access the control console.

1. Select a serial port at the local computer, and disable any service that uses that port.
2. Connect the provided RS-232 configuration cable to the selected port on the computer and to the RS-232 console port at the Network Management Card.
3. Run a terminal program (such as HyperTerminal) on your computer and configure the selected port for 9600 bps, 8 data bits, no parity, 1 stop bit, and no flow control.
4. Press **ENTER**, repeatedly if necessary, to display the **User Name** prompt. If you are unable to display the **User Name** prompt, verify the following:
  - The serial port is not in use by another application.
  - The terminal settings are correct as specified in step 3.
  - The correct cable is being used as specified in step 2.
5. Press the **RESET** switch. The Status LED will flash alternately orange and green. Press the **RESET** button a second time immediately while the LED is flashing to reset the user name and password to their defaults temporarily.
6. Press **ENTER** as many times as necessary to redisplay the **User Name** prompt, then use the default, **apc**, for the user name and password. (If you take longer than 30 seconds to log on after the **User Name** prompt is redisplayed, you must repeat step 5 and log on again.)
7. From the **Control Console** menu, select **System**, then **User Manager**.
8. Select **Administrator**, and change the **User Name** and **Password** settings, both of which are now defined as **apc**.
9. Press **CTRL+C**, log off, reconnect any serial cable you disconnected, and restart any service you disabled.

# Maintenance

---

## Monthly Preventive Maintenance

Photocopy the following pages and use them during the maintenance procedures. After they have been completed, save them for future reference.

Prepared By: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date: \_\_\_\_\_

### Environment

- In what type of room is the cooling unit located?

\_\_\_\_\_

- Is the cooling unit maintaining the temperature setpoint?

\_\_\_\_\_

Temperature setpoint \_\_\_\_\_

- Is there visible damage to the cooling unit (dents, scratches)?

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

- Check the environmental damage (dirt, dust, debris, liquid stains) around the cooling unit installation area?

\_\_\_\_\_

\_\_\_\_\_

- Record the room temperature near the return of the cooling unit.

Temperature: \_\_\_\_\_

- Record the alarm history for the last month.

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

### Cleanliness

- Check the condition of the air filters. Change if necessary.

- Check for accumulation of debris in the drain pan. Clean as required.

## Mechanical

<b>⚠ ⚠ DANGER</b>
<b>HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH</b>
<ul style="list-style-type: none"><li>• Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.</li><li>• This equipment must be installed and serviced by qualified personnel only.</li><li>• Turn off all power supplying this equipment before working on or inside the equipment.</li><li>• Always use a properly rated voltage sensing device to confirm power is off.</li><li>• Replace all devices, doors, and covers before turning on power to this equipment.</li></ul>
<b>Failure to follow these instructions will result in death or serious injury.</b>

- Check the fans. All components should be moving freely with no signs of binding or damages.
- Verify that the condensate line is flowing freely.

## Electrical

<b>⚠ ⚠ DANGER</b>
<b>HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH</b>
<ul style="list-style-type: none"><li>• Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.</li><li>• This equipment must be installed and serviced by qualified personnel only.</li><li>• Turn off all power supplying this equipment before working on or inside the equipment.</li><li>• Always use a properly rated voltage sensing device to confirm power is off.</li><li>• Replace all devices, doors, and covers before turning on power to this equipment.</li></ul>
<b>Failure to follow these instructions will result in death or serious injury.</b>

- Inspect the electrical panel for tight connections and for overheated connections from loose contact terminals.
- Confirm the incoming main voltage matches the cooling unit nameplate. The measurement should be within 10% of the nameplate listing.

# Quarterly Preventive Maintenance

\* Perform all the Monthly Preventive Maintenance items and the items below.



Prepared By: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date: \_\_\_\_\_

## Mechanical

  <b>DANGER</b>
<b>HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH</b>
<ul style="list-style-type: none"><li>• Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.</li><li>• This equipment must be installed and serviced by qualified personnel only.</li><li>• Turn off all power supplying this equipment before working on or inside the equipment.</li><li>• Always use a properly rated voltage sensing device to confirm power is off.</li><li>• Replace all devices, doors, and covers before turning on power to this equipment.</li></ul>
<b>Failure to follow these instructions will result in death or serious injury.</b>

- Verify that the fan hardware is tight.
- Clean the condensate drain line.
- Clean the dust from door perforations.
- Clean the dust from fan bezels.

## Functional

- Verify that the cooling operation mode is functioning properly.

## Semi-Annual Preventive Maintenance

\* Perform all the Monthly Preventive Maintenance items and the items below.

Prepared By: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date: \_\_\_\_\_

## Cleanliness

- Check the cleanliness of the evaporator coil. Clean if required.

# Troubleshooting

<b>Problem</b>	<b>Possible Cause</b>	<b>Corrective Action</b>
Controls erratic or inoperative	<ul style="list-style-type: none"> <li>• Inlet temperature to cooling unit is higher than rated maximum temperature</li> </ul>	<ul style="list-style-type: none"> <li>• Reduce the load or add additional cooling equipment.</li> </ul>
Fans fail to start	<ul style="list-style-type: none"> <li>• Cooling unit shutdown due to an external command</li> <li>• Single fan fails to start</li> </ul>	<ul style="list-style-type: none"> <li>• Temporarily remove the input contact cable, if it is connected.</li> <li>• Verify that the fan circuit breaker is ON.</li> </ul>
Cooling unit cannot obtain setpoint	<ul style="list-style-type: none"> <li>• Improper placement of remote temperature sensor</li> <li>• Dirty filter</li> <li>• Dirty coil</li> <li>• Valve/actuator malfunction</li> <li>• Application error</li> <li>• Entering water temperature is too high</li> <li>• Heat load is too far away</li> </ul>	<ul style="list-style-type: none"> <li>• Verify that the remote temperature sensor is properly located in the cold aisle.</li> <li>• Clean the filter.</li> <li>• Clean the coil.</li> <li>• Fully open the valve.</li> <li>• Contact Schneider Electric at a number located on the rear of this manual.</li> <li>• Verify that the temperature of the Cooling Unit water supply is within the specified range.</li> <li>• Place the cooling unit closer to the heat load.</li> </ul>
Water carryover	<ul style="list-style-type: none"> <li>• Improper fan speed selected</li> <li>• Inlet water temperature is too low</li> <li>• Room humidity is too high/low</li> </ul>	<ul style="list-style-type: none"> <li>• RACS and HACS modes only: Select the next-highest fan speed setting. For example, change the fan speed setting from Low to Med/Low.</li> <li>• Verify that the temperature of the inlet water is within the specified range.</li> <li>• Improve room sealing.</li> </ul>
Temperature control not tight enough	<ul style="list-style-type: none"> <li>• Improper placement of remote temperature sensor</li> </ul>	<ul style="list-style-type: none"> <li>• Verify that the remote temperature sensor is properly located in the cold aisle.</li> </ul>
Water on outside of cooling unit	<ul style="list-style-type: none"> <li>• Condensate drain hose is not connected or not properly routed outside the cooling unit</li> <li>• Leak in drain system</li> <li>• Cooling unit not leveled properly</li> <li>• Damaged piping insulation</li> </ul>	<ul style="list-style-type: none"> <li>• Verify that the condensate drain hose is properly connected to the pump and properly routed outside of the cooling unit.</li> <li>• Verify that the condensate drain line does not exceed 5.4 m (18 ft) lift and 18.3 m (60.0 ft) horizontal run.</li> <li>• Locate and repair the leak.</li> <li>• Adjust the leveling feet of the cooling unit.</li> <li>• Identify damaged area and repair the insulation.</li> </ul>
Fluid valve not responsive	<ul style="list-style-type: none"> <li>• Actuator not connected properly</li> <li>• Actuator and shaft not rotating together</li> <li>• Rotary switch on the bottom of the actuator is set incorrectly</li> </ul>	<ul style="list-style-type: none"> <li>• Verify that the actuator is connected properly.</li> <li>• Tighten the linkage screw on the actuator shaft.</li> <li>• Confirm that the rotary switch is pointing toward the front of the cooling unit.</li> </ul>

<b>Problem</b>	<b>Possible Cause</b>	<b>Corrective Action</b>
Display interface not operational, but cooling unit operates	<ul style="list-style-type: none"> <li>• Display interface not connected properly</li> </ul>	<ul style="list-style-type: none"> <li>• Verify that the display interface cable is connected properly.</li> </ul>
Incorrect air pressure	<ul style="list-style-type: none"> <li>• False filter clogs</li> </ul>	<ul style="list-style-type: none"> <li>• Verify that the ends of the clear plastic air tubes are not obstructed.</li> <li>• Verify that the clear plastic air tubes are connected to the controller.</li> <li>• Verify that the clear plastic air tubes are not pinched.</li> </ul>
Alarms do not show up on monitoring equipment (Customer Output Contact)	<ul style="list-style-type: none"> <li>• External monitoring equipment is not receiving power or is not functioning properly</li> </ul>	<ul style="list-style-type: none"> <li>• Confirm that power, if required, is being supplied to the external equipment.</li> <li>• If the cooling unit (+12 V or +24 V) is providing power to the external equipment, verify that the external equipment is <math>\leq 50</math> mA.</li> <li>• Test the external equipment by bypassing the customer output contact.</li> <li>• Verify Customer Output Contact settings. See “Contacts” on page 12.</li> </ul>
Cooling unit does not shut down on command	<ul style="list-style-type: none"> <li>• Drive voltage</li> </ul>	<ul style="list-style-type: none"> <li>• Verify that there is a drive voltage entering the input of the cooling unit. You may use the available +12 V or +24 V. You must also use the ground.</li> <li>• Verify Customer Input Contact settings. See “Contacts” on page 12.</li> </ul>
No communication with building management system (BMS) port	<ul style="list-style-type: none"> <li>• Improper connection</li> </ul>	<ul style="list-style-type: none"> <li>• Confirm that the cooling unit is connected to the BMS port and not to the Control port.</li> <li>• Make sure that the wire polarity is correct. Using a DC voltmeter, test the signal with no transmissions in progress. Expect the voltage at pin 2 to be greater than at pin 1 by at least 200 mV. Measure the cooling unit with the cable disconnected, and then measure it again with the cable connected. If the signal is less than 200 mV, the cooling unit may be reverse-wired.</li> <li>• Make sure that every cooling unit has either two sets of wires in its connector or one set of wires and a terminating resistor of 100 to 120 ohms.</li> </ul>
Cooling units are not communicating with each other	<ul style="list-style-type: none"> <li>• A-Link failure</li> </ul>	<ul style="list-style-type: none"> <li>• Verify that the first and last cooling units have one cable and a terminator.</li> <li>• Verify that every other cooling unit has two cables.</li> <li>• Confirm that the A-Link cables are connected to the A-Link ports and that a network cable is connected to the network port.</li> <li>• Verify that the number of cooling units in the cooling group matches the group number setting.</li> </ul>
Output air is 17°C (62°F) and fans are running at a very high rate of speed.	<ul style="list-style-type: none"> <li>• Upper or lower supply air sensor</li> </ul>	<ul style="list-style-type: none"> <li>• Either upper or lower supply air temperature sensor has a fault. Verify that both supply air temperature sensors are installed and working properly.</li> </ul>



# Worldwide Customer Support

Customer support for this or any other product is available at no charge in any of the following ways:

- Visit the Schneider Electric Web site to access documents in the Schneider Electric Knowledge Base and to submit customer support requests.
  - **www.schneider-electric.com** (Corporate Headquarters)  
Connect to localized Schneider Electric Web sites for specific countries, each of which provides customer support information.
  - **www.schneider-electric.com/support/**  
Global support searching Schneider Electric Knowledge Base and using e-support.
- Contact the Schneider Electric Customer Support Center by telephone or e-mail.
  - Local, country-specific centers: go to **www.schneider-electric.com > Support > Operations around the world** for contact information.

For information on how to obtain local customer support, contact the representative or other distributors from whom you purchased your product.

As standards, specifications, and designs change from time to time, please ask for confirmation of the information given in this publication.

© 2015 Schneider Electric. All Rights Reserved.

The Schneider Electric logo is a trademark owned by Schneider Electric Industries SAS or its affiliated companies. All other trademarks are the property of their respective owners.