

# INVERTER OPTION CATALOG



# GLOBAL IMPACT OF MITSUBISHI ELECTRIC



Through Mitsubishi Electric's vision, "Changes for the Better" are possible for a brighter future.

## ***Changes for the Better***

"Changes for the Better" represents the Mitsubishi Electric Group's attitude to "always strive to achieve something better", as we continue to change and grow. Each one of us shares a strong will and passion to continuously aim for change, reinforcing our commitment to creating "an even better tomorrow".

Mitsubishi Electric is involved in many areas including the following:

### **Energy and Electric Systems**

A wide range of power and electrical products from generators to large-scale displays.

### **Electronic Devices**

A wide portfolio of cutting-edge semiconductor devices for systems and products.

### **Home Appliance**

Dependable consumer products like air conditioners and home entertainment systems.

### **Information and Communication Systems**

Commercial and consumer-centric equipment, products and systems.

### **Industrial Automation Systems**


Maximizing productivity and efficiency with cutting-edge automation technology.

The Mitsubishi Electric Group is actively solving social issues, such as decarbonization and labor shortages, by providing production sites with energy-saving equipment and solutions that utilize automation systems, thereby helping towards a sustainable society.



|   |           |
|---|-----------|
| <b>Option lineup</b>  | <b>4</b>  |
| <b>Connection example</b>   | <b>6</b>  |
| <b>Option list</b>  | <b>7</b>  |
| <b>Plug-in option (control function expansion/additional I/O)</b> | <b>11</b> |
| <b>Plug-in option (for communication)</b>                         | <b>21</b> |
| <b>Control terminal option</b>                                    | <b>25</b> |
| <b>Dedicated cable option</b>                                     | <b>31</b> |
| <b>Operation panel option</b>                                     | <b>33</b> |
| <b>Software</b>   | <b>35</b> |
| <b>Reactor</b>  | <b>37</b> |
| <b>Braking option</b>   | <b>39</b> |
| <b>Noise filter</b>   | <b>57</b> |
| <b>Output filter</b>  | <b>62</b> |
| <b>Structure option</b>   | <b>64</b> |
| <b>Other options</b>  | <b>71</b> |

# A Wide Variety of Options Which Improve Such as Installation Attachments, Are

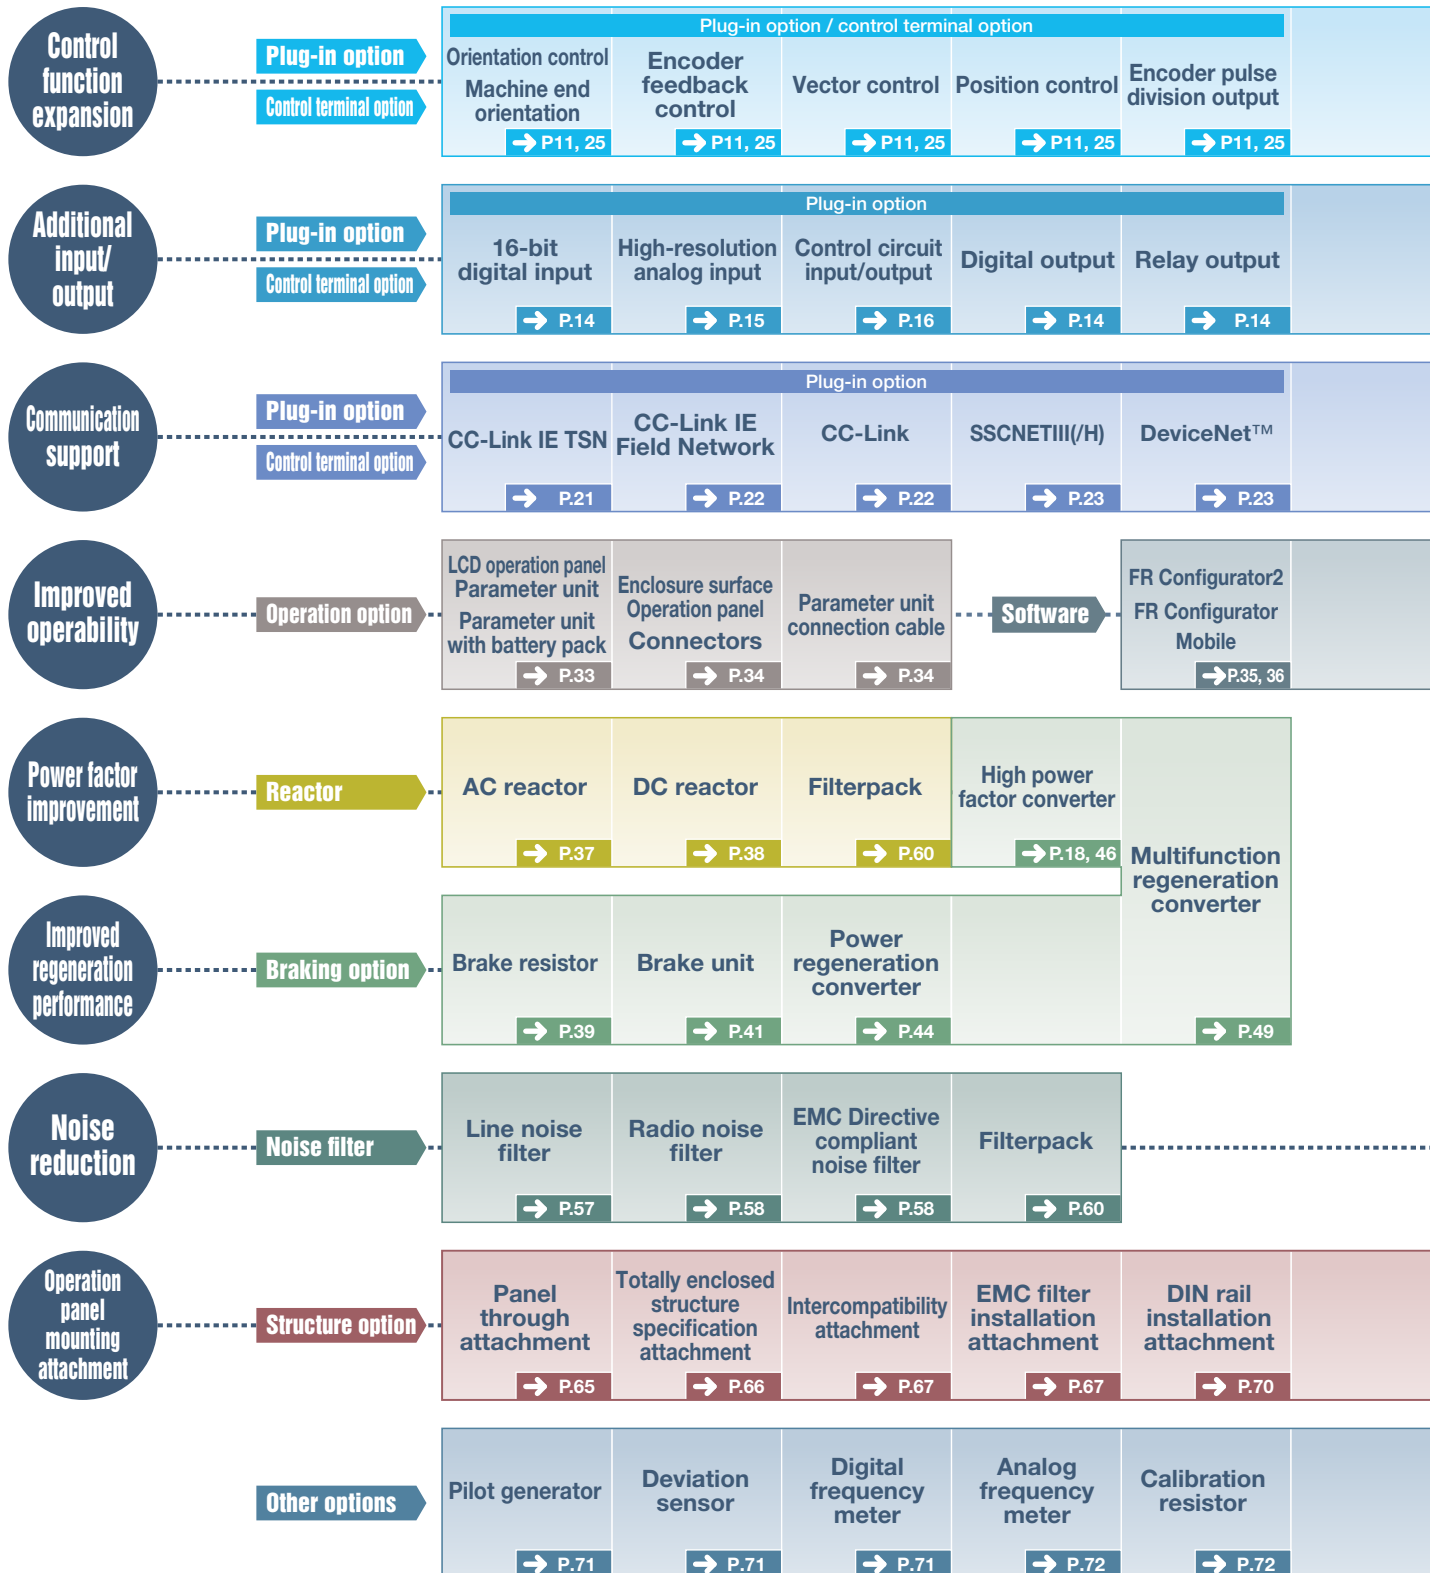

# Function and Performance, Available for the FR Series Lineup.

|  |   |  |  |                                |                                  |
|--|---|--|--|--------------------------------|----------------------------------|
| <b>Motor thermistor interface</b><br>→ P.15            | <b>Plug-in option</b>   |  | <b>Changeover between inverter and high power factor converter</b><br>→ P.18 | <b>Dedicated cable option</b>  | <b>Encoder cable</b><br>→ P.31   |
|  | <b>Phase-synchronized bypass switching function</b><br>→ P.17 | <b>24VDC input</b><br>→ P.15                         |  |                                |                                  |
| <b>Plug-in option</b>                                  |   | <b>Control terminal option</b>                       |  | <b>Dedicated cable option</b>  | <b>SSCNETIII cable</b><br>→ P.32 |
| <b>Analog output Coded analog output</b><br>→ P.14, 15 | <b>24VDC input</b><br>→ P.15                                  | <b>Power supply output for encoder</b><br>→ P.25, 28 | <b>Screw type terminal block</b><br>→ P.27                                   |                                |                                  |
| <b>PROFIBUS-DP</b><br>→ P.23                           | <b>Plug-in option</b>   |  | <b>EtherCAT EtherNet/IP PROFINET PROFIBUS-DP(DP-V1)</b><br>→ P.24            | <b>Control terminal option</b> | <b>Dedicated cable option</b>    |
| <b>LONWORKS®</b><br>→ P.24                             | <b>FL remote</b><br>→ P.24                                    | <b>RS-485</b><br>→ P.29                              |  |                                |                                  |

**USB cable**  
→ P.36

## 800 series inverters



For the FR-E800 (IP66/IP67 model), available options are limited due to the product structure. (For details, refer to page 7.)

### Output filter

|   |                                   |
|---|-----------------------------------|
| <b>Surge voltage suppression filter</b><br>→ P.62 | <b>Sine wave filter</b><br>→ P.63 |
|---|-----------------------------------|




## 700 series inverters

|  |   |
|--|---|
| <b>Attachments for installation inside the enclosure for FR-A872</b><br>→ P.64 | <b>FR-E846 dedicated protective cover</b><br>→ P.64 |
|--|---|

**Frequency setting potentiometer  
Pointer scale  
Knob**  
→ P.72

# Connection example

This diagram shows the connection of main optional devices with the inverter. All devices in the connection diagram below are not necessarily connected. Select necessary options referring to the table below and descriptions.

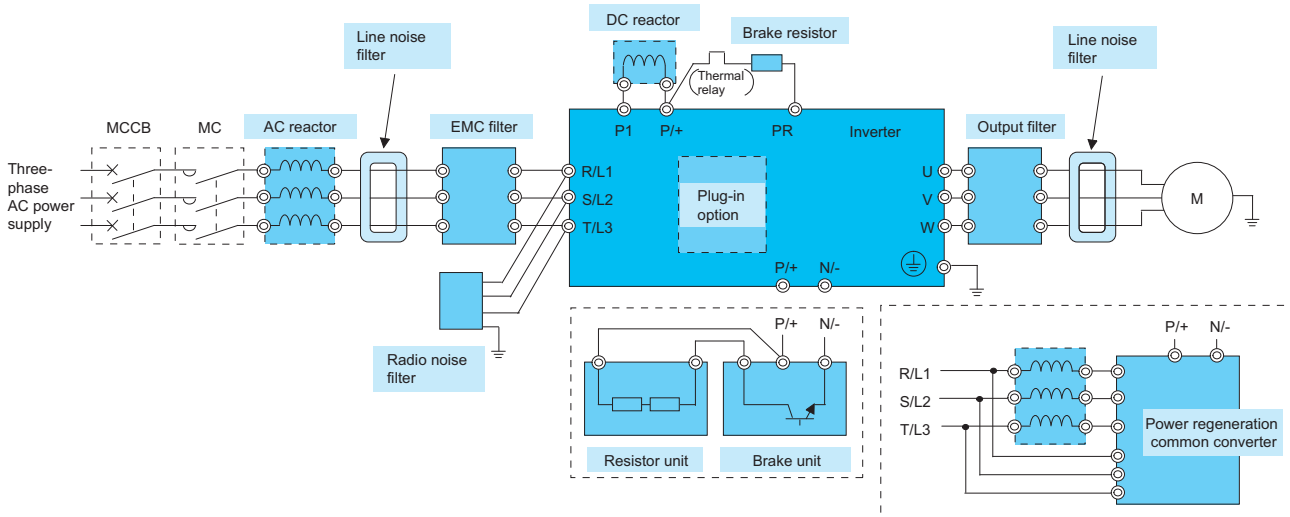

| Reactor   | Noise filter   |  | Braking unit  |   |  | Output filter  | Plug-in option   |
|---|--|--|---|---|--|--|--|
|   | AC reactor<br>DC reactor   | Line noise filter<br>Radio noise filter                  | EMC filter  | Brake resistor  | Brake unit<br>Resistor unit  |  |  |
| Use when power harmonic measures are required, the power factor is to be improved or the inverter is installed under a large power supply system. | Use to reduce the electromagnetic noise generated from the inverter. | Use this EMC filter to comply with the EU EMC Directive. | Increases the braking capability of the inverter which has a built-in brake transistor. | Increases the braking capability more than the brake resistor. The inverter without a built-in brake transistor can be connected. | Returns regeneration energy to the power supply, enabling continuous regeneration operation. A high power factor converter whose power factor is 1 is available. | Limits surge voltage supplied to the motor terminal. | Mounts to the inverter to expand functions and make communication. |

# Option list

## 800 series

O: Compatible x: Incompatible

| Name   | Type                                      | Applicable inverter     |                         |                         |                                    | Refer to Page        |
|--|---|-------------------------|-------------------------|-------------------------|------------------------------------|----------------------|
|  |   | FR-A800                 | FR-A800 Plus            | FR-F800                 | FR-E800<br>(other than FR-E806-18) |                      |
| <b>Plug-in option (control function expansion, additional input/output)</b>  |   |                         |                         |                         |                                    |                      |
| Orientation control  | FR-A8AP (E kit)                           | O                       | O                       | x                       | O (E kit type)                     | 11                   |
| Encoder feedback control   | FR-A8APR                                  | O                       | O                       | x                       | x                                  | 12                   |
| Vector control   | FR-A8APS                                  | O                       | O                       | x                       | x                                  | 13                   |
| Orientation control<br>Encoder feedback control<br>Vector control<br>Position control<br>Encoder pulse division output | FR-A8AL                                   | O                       | O                       | x                       | x                                  | 11                   |
| Orientation control, Encoder feedback control, Vector control  | FR-A8APA                                  | O                       | O *1                    | x                       | x                                  | 13                   |
| Encoder pulse divider  | FR-A8APD *3                               | O                       | O *1                    | x                       | x                                  | 12                   |
| 16-bit digital input   | FR-A8AX (E kit)                           | O                       | O                       | O                       | O (E kit type)                     | 14                   |
| Analog output (2 terminals)  | FR-A8AY (E kit)                           | O                       | O                       | O                       | O (E kit type)                     | 14                   |
| Digital output (7 terminals)   | FR-A8AY (E kit)                           | O                       | O                       | O                       | O (E kit type)                     | 14                   |
| Relay output (3 terminals)   | FR-A8AR (E kit)                           | O                       | O                       | O                       | O (E kit type)                     | 14                   |
| Coded analog output<br>High-resolution analog input<br>Motor thermistor interface                                      | FR-A8AZ                                   | O                       | O                       | x                       | x                                  | 15                   |
| 24 VDC input   | FR-E8DS E kit                             | Equipped as standard    | Equipped as standard    | Equipped as standard    | O                                  | 15                   |
| Additional control circuit input/output  | FR-E8AXY E kit                            | x                       | x                       | x                       | O                                  | 16                   |
| Phase-synchronized bypass switching  | FR-A8AVP                                  | O                       | O *1                    | O                       | x                                  | 17                   |
| Changeover between inverter and high power factor converter  | FR-A8AVP                                  | O *4                    | O *1*4                  | x                       | x                                  | 18                   |
| <b>Plug-in option (for communication)</b>  |   |                         |                         |                         |                                    |                      |
| RS-485   | PU connector (inverter)                   | Equipped as standard    | Equipped as standard    | Equipped as standard    | Equipped as standard *5            | —                    |
|  | Dedicated terminal (inverter)             | Equipped as standard *5 | Equipped as standard *5 | Equipped as standard *5 | FR-E8TR*5                          | —                    |
| USB  | USB host                                  | A connector             | Equipped as standard    | Equipped as standard    | Equipped as standard               | x                    |
|  | USB device                                | Mini B connector        | Equipped as standard    | Equipped as standard    | Equipped as standard               | Equipped as standard |
| CC-Link IE TSN   | FR-A8NCG                                  | O                       | O *1                    | O                       | x                                  | 21                   |
|  | Built-in                                  | FR-A800-GN              | x                       | x                       | FR-E800-E (EPA/EPB)*6              | 21                   |
| CC-Link IE Field Network   | FR-A8NCE                                  | O *7                    | O                       | O                       | x                                  | 22                   |
|  | Built-in                                  | FR-A800-GF              | x                       | x                       | FR-E800-E (EPA/EPB)*6              | 22                   |
| CC-Link  | FR-A8NC (E kit)                           | O *7                    | O                       | O                       | O (E kit type)                     | 22                   |
| SSCNETIII(/H)  | FR-A8NS                                   | O *7                    | O *1                    | x                       | x                                  | 23                   |
| DeviceNet™   | FR-A8ND (E kit)                           | O *7                    | O                       | O                       | O (E kit type)                     | 23                   |
| PROFIBUS-DP  | FR-A8NP (E kit)                           | O *7                    | O                       | O                       | O (E kit type)                     | 23                   |
| LONWORKS®  | FR-A8NL                                   | x                       | x                       | O                       | x                                  | 24                   |
| FL remote  | FR-A8NF                                   | O *7                    | O *2                    | O                       | x                                  | 24                   |
| EtherCAT   | A8NECT_2P (HMS Industrial Networks AB) *8 | O                       | O                       | O                       | x                                  | 24                   |
|  | Built-in                                  | x                       | x                       | x                       | FR-E800-E(EPC)*6                   | —                    |
| EtherNet/IP  | A8NEIP_2P (HMS Industrial Networks AB) *8 | O                       | O                       | O                       | x                                  | 24                   |
|  | Built-in                                  | x                       | x                       | x                       | FR-E800-E(EPA)*6                   | —                    |
| PROFINET   | A8NPRT_2P (HMS Industrial Networks AB) *8 | O                       | O                       | O                       | x                                  | 24                   |
|  | Built-in                                  | x                       | x                       | x                       | FR-E800-E(EPB)*6                   | —                    |
| PROFIBUS-DP(DP-V1)   | A8NDPV1 (HMS Industrial Networks AB) *8   | O                       | O                       | O                       | x                                  | 24                   |
| <b>Control terminal option</b>   |   |                         |                         |                         |                                    |                      |
| Vector control terminal block  | FR-A8TP                                   | O                       | O                       | x                       | x                                  | 25                   |
| Screw terminal block   | FR-A8TR                                   | O *5                    | O *5                    | O *5                    | x                                  | 26                   |
| Screw type terminal block  | FR-E8TE7                                  | x                       | x                       | x                       | O *5                               | 27                   |
| RS-485 2-port terminal block   | FR-E8TR                                   | x                       | x                       | x                       | O *5                               | 29                   |
| <b>Dedicated cable option</b>  |   |                         |                         |                         |                                    |                      |
| Encoder cable  | FR-V7CBL[ ]                               | O                       | O                       | x                       | O                                  | 31                   |
|  | FR-JCBL[ ]                                | O                       | O                       | x                       | O                                  | 31                   |
| SSCNET III cable   | MR-J3BUS[ ]M-[ ]                          | O                       | O                       | x                       | x                                  | 32                   |
| <b>Operation option</b>  |   |                         |                         |                         |                                    |                      |
| LCD operation panel  | FR-LU08                                   | O                       | O                       | O                       | O *5                               | 33                   |
| Parameter unit   | FR-PU07                                   | O                       | O                       | O                       | O *5                               | 33                   |
|  | FR-PU07BB                                 | O                       | O                       | O                       | O *5                               | 33                   |
| Enclosure surface operation panel  | FR-PA07                                   | x                       | x                       | x                       | O *5                               | 34                   |
| Parameter unit connection cable  | FR-CB20[ ]                                | O                       | O                       | O                       | O *5                               | 34                   |
| Operation panel connection connector   | FR-ADP                                    | O                       | O                       | O                       | x                                  | 34                   |

# Option list

O: Compatible x: Incompatible

| Name  | Type            | Applicable inverter                     |                                  |                                  |                                 | Refer to Page |   |
|---|-----------------|---|----------------------------------|----------------------------------|---------------------------------|---------------|---|
|   |                 | FR-A800                                 | FR-A800 Plus                     | FR-F800                          | FR-E800 (other than FR-E806*18) |               |   |
| <b>Software</b>   |                 |   |                                  |                                  |                                 |               |   |
| FR Configurator2  | SW1DND-FRC2     | O                                       | O                                | O                                | O                               | 35            |   |
| FR Configurator Mobile  | —               | FR-A800-E                               | FR-A800-E                        | FR-F800-E                        | FR-E800-E/SCE                   | 36            |   |
| USB cable   | MR-J3USBCBL3M   | O                                       | O                                | O                                | O                               | 36            |   |
| <b>Reactor</b>  |                 |   |                                  |                                  |                                 |               |   |
| AC reactor  | FR-HAL          | O                                       | O                                | O                                | O                               | 37            |   |
| DC reactor  | FR-HEL          | O                                       | O                                | O                                | O                               | 38            |   |
| <b>Braking option</b>   |                 |   |                                  |                                  |                                 |               |   |
| Brake resistor  | MRS, MYS        | x                                       | x                                | x                                | O *9                            | 39            |   |
| High-duty brake resistor                                      | FR-ABR          | O *9                                    | O *9                             | x                                | O *9                            | 39            |   |
| Brake unit  | FR-BU2          | O *10                                   | O *10                            | O *10                            | O *10                           | 41            |   |
| Resistor  | GRZG            | O                                       | O                                | O                                | O                               | 41            |   |
|   | FR-BR           | O                                       | O                                | O                                | O                               | 41            |   |
| Resistor unit   | MT-BR5          | O                                       | O                                | O                                | x                               | 41            |   |
|   | FR-BR           | O                                       | O                                | O                                | O                               | 41            |   |
| Power regeneration converter                                  | MT-RC           | O                                       | O                                | O                                | x                               | 44            |   |
| High power factor converter                                   | FR-HC2          | O                                       | O                                | O                                | O *5                            | 46            |   |
| Multifunction regeneration converter                          | FR-XC           | O                                       | O                                | O                                | O *11                           | 49            |   |
| <b>Noise filter</b>   |                 |   |                                  |                                  |                                 |               |   |
| Line noise filter   | FR-BSF01        | O *12                                   | O *12                            | O *12                            | O                               | 57            |   |
|   | FR-BLF          | O *12                                   | O *12                            | O *12                            | O                               | 57            |   |
| Radio noise filter  | FR-BIF          | Corresponding filter is built-in        | Corresponding filter is built-in | Corresponding filter is built-in | O                               | 58            |   |
| EMC Directive compliant EMC filter                            | Built-in filter | Standard equipped (2nd Environment) *13 |                                  |                                  |                                 | x             | — |
|   | SF□□            | x                                       | x                                | x                                | O                               | 58            |   |
|   | FR-E5NF         | x                                       | x                                | x                                | O                               | 58            |   |
|   | FR-S5NFSA       | x                                       | x                                | x                                | O                               | 58            |   |
| Filterpack (DC reactor/noise filter)                          | FR-BFP2         | x                                       | x                                | x                                | O                               | 60            |   |
| <b>Output filter</b>  |                 |   |                                  |                                  |                                 |               |   |
| Surge voltage suppression filter                              | FR-ASF          | O *14                                   | O *14                            | O *14                            | O *14                           | 62            |   |
|   | FR-BMF          | O *14                                   | O *14                            | O *14                            | O *14                           | 62            |   |
| Sine wave filter  | Reactor         | MT-BSL(-HC)                             | O *15                            | O *15                            | x                               | 63            |   |
|   | Capacitor       | MT-BSC                                  | O *15                            | O *15                            | O *15                           | 63            |   |
| <b>Structure option</b>                                       |                 |   |                                  |                                  |                                 |               |   |
| Attachments for installation inside the enclosure for FR-A872 | FR-A8CW         | O *16                                   | x                                | x                                | x                               | 64            |   |
|   | FR-A8SR         | O *16                                   | x                                | x                                | x                               | 64            |   |
|   | FR-A8CU         | O *16                                   | x                                | x                                | x                               | 64            |   |
| FR-E846 dedicated protective cover                            | FR-E8PC         | x                                       | x                                | x                                | x *19                           | 64            |   |
| Panel through attachment                                      | FR-A8CN         | O                                       | O                                | O                                | x                               | 65            |   |
|   | FR-E8CN         | x                                       | x                                | x                                | O                               | 65            |   |
| Control circuit terminal block intercompatibility attachment  | FR-A8TAT        | O                                       | O                                | O                                | x                               | 66            |   |
| Intercompatibility attachment                                 | FR-AAT          | O                                       | O                                | O                                | O                               | 67            |   |
|   | FR-A5AT         | O                                       | O                                | O                                | O                               | 67            |   |
|   | FR-E7AT         | x                                       | x                                | x                                | O                               | 67            |   |
|   | FR-F8AT         | x                                       | x                                | O                                | x                               | 67            |   |
|   | FR-E8AT         | x                                       | x                                | x                                | O                               | 67            |   |
| EMC filter installation attachment                            | FR-E5T          | x                                       | x                                | x                                | O                               | 67            |   |
| DIN rail installation attachment                              | FR-UDA          | x                                       | x                                | x                                | O *17                           | 70            |   |
| <b>Other options</b>  |                 |   |                                  |                                  |                                 |               |   |
| Pilot generator   | QVAH-10         | O                                       | O                                | O                                | O                               | 71            |   |
| Deviation sensor  | YVGC-500W-NS    | O                                       | O                                | O                                | O                               | 71            |   |
| Analog frequency meter  | YM-206NR1 1 mA  | O                                       | O                                | O                                | O *5                            | 72            |   |
| Calibration resistor  | RV24YN 10 kΩ    | O                                       | O                                | O                                | O                               | 72            |   |

- \*1 The option is not compatible with the FR-A800-R2R and FR-A800-AWH.
- \*2 The option is not compatible with the FR-A800-R2R.
- \*3 This product cannot be used on its own. Use it with the FR-A8AP or the FR-A8APA.
- \*4 The option is compatible with the FR-A842-315K to 500K.
- \*5 The option is not compatible with the FR-A800-E, FR-F800-E, FR-E800-E, and FR-E800-SCE.
- \*6 The network is supported by the inverter alone.
- \*7 The option is not compatible with the FR-A800-GF.
- \*8 For further details on supported models, contact your sales representative.
- \*9 Only models with a built-in brake transistor can be used.
- \*10 For the 200 V class 0.2K or lower, 400 V class 1.5K or lower, they cannot be used in combination with a brake unit.
- \*11 For the FR-E800-SCE (safety communication model), the common bus regeneration mode (with the FR-XC and the FR-XCL) and the harmonic suppression mode (with the FR-XC and the FR-XCB) are not available.
- \*12 For the 55K or lower, a corresponding appliance is built-in on the input side.
- \*13 The applicable standard depends on the built-in EMC filter.
- \*14 The filter can be used under V/F control or Advanced magnetic flux vector control.
- \*15 The filter can be used under V/F control.
- \*16 The option is compatible with the FR-A872-05690 to 07150 and the FR-CC2-N-450K to 630K.
- \*17 The option is compatible with the models with the 3.7kW or lower capacity.
- \*18 The following options are compatible with the FR-E806: FR-E8PC, FR-ABR, FR-BU2, FR-BR, FR-HAL, FR-BSF01, FR-BLF, FR-BIF, FR-ASF, and FR-BMF.
- \*19 The FR-E8PC is an option made for the FR-E806 inverter.



## ● 700 series

O: Compatible x: Incompatible

| Name   | Type                                      | Applicable inverter  |                      |                      |                      | Refer to Page |
|--|---|--|----------------------|----------------------|----------------------|---------------|
|  |   | FR-E700  | FR-F700PJ            | FR-D700              | FR-A701              |               |
| <b>Plug-in option (control function expansion, additional input/output)</b>  |   |  |                      |                      |                      |               |
| Orientation control<br>Encoder feedback control<br>Vector control  | FR-A7AP                                   | x  | x                    | x                    | O                    | 11            |
| Orientation control<br>Encoder feedback control<br>Vector control<br>Position control<br>Encoder pulse division output | FR-A7AL                                   | x  | x                    | x                    | O                    | 11            |
| 16-bit digital input   | FR-A7AX (E kit)                           | O (E kit type)   | x                    | x                    | O                    | 14            |
| Analog output (2 terminals)<br>Digital output (7 terminals)  | FR-A7AY (E kit)                           | O (E kit type)   | x                    | x                    | O                    | 14            |
| Relay output (3 terminals)   | FR-A7AR (E kit)                           | O (E kit type)   | x                    | x                    | O                    | 14            |
| Coded analog output<br>High-resolution analog input<br>Motor thermistor interface                                      | FR-A7AZ                                   | x  | x                    | x                    | O                    | 15            |
| 24 VDC input   | FR-E7DS                                   | O (for the FR-E700-SC only)  | x                    | x                    | x                    | 15            |
| <b>Plug-in option (for communication)</b>  |   |  |                      |                      |                      |               |
| RS-485   | PU connector (inverter)                   | Equipped as standard *1  | Equipped as standard | Equipped as standard | Equipped as standard | —             |
|  | Dedicated terminal (inverter)             | FR-E7TR  | x                    | x                    | Equipped as standard | —             |
| USB  | USB device                                | B connector  | x                    | x                    | Equipped as standard | —             |
|  |   | Mini B connector   | Equipped as standard | x                    | x                    | x             |
| CC-Link IE Field Network   | FR-A7NCE                                  | x  | x                    | x                    | O                    | 22            |
| CC-Link  | FR-A7NC (E kit)                           | O (E kit type)   | x                    | x                    | O                    | 22            |
|  | Built-in                                  | FR-E700-NC   | x                    | x                    | x                    | 22            |
| SSCNETIII  | FR-A7NS                                   | x  | x                    | x                    | O                    | 23            |
| DeviceNet™   | FR-A7ND (E kit)                           | O (E kit type)   | x                    | x                    | O                    | 23            |
| PROFIBUS-DP  | FR-A7NP (E kit)                           | O (E kit type)   | x                    | x                    | O                    | 23            |
| LONWORKS®  | FR-A7NL (E kit)                           | O (E kit type)   | x                    | x                    | O                    | 24            |
| FL remote  | FR-A7NF                                   | x  | x                    | x                    | O                    | 24            |
|  | Built-in                                  | FR-E700-NF   | x                    | x                    | x                    | 24            |
| EtherCAT   | E7NECT_2P (HMS Industrial Networks AB) *2 | FR-E700-TM only  | x                    | x                    | x                    | 24            |
| <b>Control terminal option</b>   |   |  |                      |                      |                      |               |
| 12 V control circuit terminal block with encoder power supply  | FR-A7PS                                   | x  | x                    | x                    | O                    | 28            |
| RS-485 2-port terminal block   | FR-E7TR                                   | O (for models with the standard control circuit terminal specification only) | x                    | x                    | x                    | 29            |
| <b>Dedicated cable option</b>  |   |  |                      |                      |                      |               |
| Encoder cable  | FR-V7CBL[ ]                               | x  | x                    | x                    | O                    | 31            |
|  | FR-JCBL[ ]                                | x  | x                    | x                    | O                    | 31            |
| SSCNET III cable   | MR-J3BUS[ ]M-[ ]                          | x  | x                    | x                    | O                    | 32            |
| <b>Operation option</b>  |   |  |                      |                      |                      |               |
| Parameter unit   | FR-PU07                                   | O *1   | O                    | O                    | O                    | 33            |
|  | FR-PU07BB                                 | O *1   | x                    | x                    | x                    | 33            |
| Enclosure surface operation panel  | FR-PA07                                   | O  | O                    | O                    | x                    | 34            |
| Parameter unit connection cable  | FR-CB20[ ]                                | O  | O                    | O                    | O                    | 34            |
| Operation panel connection connector   | FR-ADP                                    | x  | x                    | x                    | O                    | 34            |
| <b>Software</b>  |   |  |                      |                      |                      |               |
| FR Configurator2   | SW1DND-FRC2                               | O  | x                    | O                    | x                    | 35            |
|  | FR-SW3-SETUP-WE                           | O *3   | O                    | O                    | O                    | 36            |
| USB cable  | MR-J3USBCBL3M                             | O  | x                    | x                    | x                    | 36            |
| <b>Reactor</b>   |   |  |                      |                      |                      |               |
| AC reactor   | FR-HAL                                    | O  | O                    | O                    | x                    | 37            |
| DC reactor   | FR-HEL                                    | O  | O                    | O                    | x                    | 38            |


# Option list

O: Compatible x: Incompatible

| Name                                  | Type           | Applicable inverter |           |         |         | Refer to Page |
|---------------------------------------|----------------|---------------------|-----------|---------|---------|---------------|
|                                       |                | FR-E700             | FR-F700PJ | FR-D700 | FR-A701 |               |
| <b>Braking option</b>                 |                |                     |           |         |         |               |
| Brake resistor                        | MRS, MYS       | O *4                | O *4      | O *4    | x       | 39            |
| High-duty brake resistor              | FR-ABR         | O *4                | O *4      | O *4    | x       | 39            |
| Brake unit                            | FR-BU2         | O *5                | O *5      | O *5    | x       | 41            |
| Resistor                              | GRZG           | O                   | O         | O       | x       | 41            |
| Resistor unit                         | FR-BR          | O                   | O         | O       | x       | 41            |
| High power factor converter           | FR-HC2         | O                   | O         | O       | x       | 46            |
| Multifunction regeneration converter  | FR-XC          | O                   | O         | O       | x       | 49            |
| <b>Noise filter</b>                   |                |                     |           |         |         |               |
| Line noise filter                     | FR-BSF01       | O                   | O         | O       | O       | 57            |
|                                       | FR-BLF         | O                   | O         | O       | O       | 57            |
| Radio noise filter                    | FR-BIF         | O                   | O         | O       | O       | 58            |
| EMC Directive compliant EMC filter    | SF[]           | O                   | x         | O       | O       | 58            |
|                                       | FR-E5NF        | O                   | O         | O       | x       | 58            |
|                                       | FR-S5NFSA      | O                   | x         | O       | x       | 58            |
| Filterpack (DC reactor/noise filter)  | FR-BFP2        | O                   | O *6      | O       | x       | 60            |
| <b>Output filter</b>                  |                |                     |           |         |         |               |
| Surge voltage suppression filter      | FR-ASF         | O                   | O *8      | O       | O *7    | 62            |
|                                       | FR-BMF         | O                   | O *8      | O       | O *7    | 62            |
| <b>Structure option</b>               |                |                     |           |         |         |               |
| Panel through attachment              | FR-E7CN        | O                   | O         | O       | x       | 65            |
| Totally-enclosed structure attachment | FR-E7CV        | O *9                | x         | x       | x       | 66            |
| Intercompatibility attachment         | FR-AAT         | O                   | O         | O       | x       | 67            |
|                                       | FR-A5AT        | O                   | O         | O       | x       | 67            |
|                                       | FR-E7AT        | O                   | x         | x       | x       | 67            |
| EMC filter installation attachment    | FR-E5T         | O                   | O         | O       | x       | 67            |
| DIN rail installation attachment      | FR-UDA         | O *10               | O *10     | O *10   | x       | 70            |
| <b>Other options</b>                  |                |                     |           |         |         |               |
| Pilot generator                       | QVAH-10        | O                   | O         | O       | O       | 71            |
| Deviation sensor                      | YVGC-500W-NS   | O                   | O         | O       | O       | 71            |
| Analog frequency meter                | YM-206NRI 1 mA | O                   | O         | O       | O       | 72            |
| Calibration resistor                  | RV24YN 10 kΩ   | O                   | O         | O       | O       | 72            |


- \*1 PU connector is disabled for the FL remote communication model and the CC-Link communication model.
- \*2 For further details on supported models, contact your sales representative.
- \*3 FR Configurator is not compatible with FL remote communication models.
- \*4 Only models with a built-in brake transistor can be used.
- \*5 For the 200 V class 0.2K or lower, 400 V class 1.5K or lower, they cannot be used in combination with a brake unit.
- \*6 Filterpack (FR-BFP2) is enclosed for the FR-F7[]0PJ-[]KF inverters.
- \*7 The filter can be used under V/F control or Advanced magnetic flux vector control.
- \*8 The filter cannot be used during IPM motor control.
- \*9 The option is compatible with the FR-E720-0.1K to 7.5K only.
- \*10 The option is compatible with the models with the 3.7kW or lower capacity.

## Plug-in option (control function expansion/additional I/O)

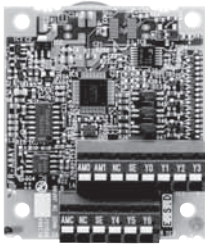

### 800 series plug-in option example: FR-A8AY

This option can be mounted in the 800 series inverter. Up to three options can be connected. (Max. number of connectable options depends on the model of inverter.)

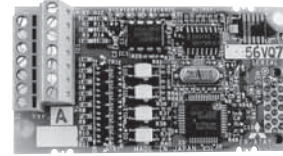

### 700 series plug-in option example: FR-A7AY

This option can be mounted in the 700 series inverter. FR-A701: 3 options max. FR-E700: 1 option max. The FR-E700 has "E kit" in the end of the name and sold as a package set with a dedicated front cover, etc. (standard control circuit terminal model)

If two of the same plug-in option are connected, only one will function.

|   |                             |                    |
|---|-----------------------------|--------------------|
| <b>Orientation control/encoder feedback control/vector control</b>  | FR-A8AP, FR-A8APR, FR-A8APA | (A800) (A800 Plus) |
|   | FR-A8AP E kit               | (E800)             |
| <b>Orientation control/encoder feedback control/vector control/position control/encoder pulse division output/machine end orientation control</b> | FR-A8AL                     | (A800) (A800 Plus) |
|   | FR-A7AL                     | (A701)             |
| <b>Orientation control/encoder feedback control/vector control/position control</b>   | FR-A8APS                    | (A800) (A800 Plus) |
| <b>Encoder pulse divider</b>  | FR-A8APD                    | (A800) (A800 Plus) |

| Option                  | Compatible encoder         | Compatible motor/encoder                         | Encoder power supply  | Pulse train input        | Encoder divider output  |                     |
|-------------------------|----------------------------|--|---|--------------------------|---|---------------------|
| Plug-in option *1       | FR-A8AP                    | Encoder (differential line driver/complementary) | Motor with encoder (SF-PR-SC)   | External                 | Pulse train + rotation direction sign   | Option (FR-A8APD)*2 |
|                         | FR-A7AP                    |  |   |                          |   | Not supported       |
|                         | FR-A8AL                    | Encoder (differential line driver/complementary) | Motor with encoder (SF-PR-SC)   | Internal (5 V/12 V/24 V) | Forward pulse train + reverse pulse train<br>Pulse train + rotation direction sign<br>A phase pulse train + B phase pulse train | Supported           |
|                         | FR-A7AL                    |  |   | External                 |   |                     |
|                         | FR-A8APR                   | Resolver   | Recommended encoder: TS2640N321E64 manufactured by Tamagawa Seiki Co., Ltd. | Not required             | Pulse train + rotation direction sign   | Not supported       |
|                         | FR-A8APS                   | EnDat  | Recommended encoder: ECN 1313/ECN 1325/EQN 1325 manufactured by HEIDENHAIN  | Internal (5 V)           | Pulse train + rotation direction sign   | Not supported       |
|                         | FR-A8APA                   | SinCos   | Compatible encoder: ERN 1387 manufactured by HEIDENHAIN                     | Internal (5 V)           | Pulse train + rotation direction sign   | Option (FR-A8APD)   |
| Control terminal option | FR-A8TP (refer to page 25) | Encoder (differential line driver/complementary) | Motor with encoder (SF-PR-SC)   | Internal (24 V)          | Pulse train + rotation direction sign   | Supported           |

\*1 Only one of the above options can be used at a time.

When multiple options are connected to the same inverter, the following options are given priority in descending order: FR-A8AL (FR-A7AL) > FR-A8APS > FR-A8APA > FR-A8APR > FR-A8AP (FR-A7AP).

\*2 The option is not compatible with the FR-E800 series.

|                                      |  |
|--------------------------------------|--|
| <b>Orientation control</b>           | : The inverter can adjust the stop position (Orientation control) using an encoder attached to a place such as the main shaft of the machine.  |
| <b>Encoder feedback control</b>      | : Under V/F control or Advanced magnetic flux vector control, the inverter output frequency is controlled so that the motor speed is constant to the load variation by detecting the motor speed with the encoder to perform feedback to the inverter. |
| <b>Vector control</b>                | : Closed loop vector control is possible when using a motor with an encoder.   |
| <b>Position control</b>              | : Position control can be performed by pulse train input.  |
| <b>Encoder pulse division output</b> | : Pulse input of encoder connected to the inverter is divided and output from the option terminal.   |

# Plug-in option (control function expansion/additional I/O)

## <<FR-A8AP, FR-A8AL, FR-A8APD, FR-A7AP, FR-A7AL>>

### ● Specifications


| Function   | Description                                       |   |   |
|--|---|---|---|
| Orientation control  | Repeated positioning accuracy                     | ±1.5°   |   |
|  | Permissible speed                                 | Encoder-mounted shaft speed (6000 r/min with 1024 pulse encoder)<br>The motor and encoder-mounted shaft should be coupled with a speed ratio of 1 to 1. |   |
| Encoder feedback control   | Speed variation ratio                             | ±0.1% (to the speed 3600 r/min)   |   |
| Vector control   | Speed control                                     | Speed control range   | 1:1500 (both driving/regeneration +1)   |
|  |   | Speed variation ratio   | ±0.01% (to the speed 3000 r/min)  |
|  |   | Speed response  | 130 Hz (30 Hz for FR-E800)  |
|  | Torque control                                    | Torque control range  | 1:50  |
|  |   | Absolute torque accuracy  | ±10% +2   |
|  |   | Repeated torque accuracy  | ±5% +2  |
|  | Position control (available for FR-A8AL, FR-A7AL) | Pulse input type  | Forward rotation pulse train + reverse rotation pulse train<br>Pulse train + sign A phase pulse train + B phase pulse train |
|  |   | Repeated positioning accuracy   | ±1.5° (motor shaft end)   |
|  |   | Power supply  | 24 V power supply output for interface driver is provided   |
|  |   | Maximum input pulse frequency   | Differential line receiver: 500k pulses/s<br>Open collector: 200k pulses/s  |
| Encoder pulse division output (available for FR-A8AL, FR-A8APD, FR-A7AL) | Output circuit method                             | Open collector and differential line driver   |   |
|  | Permissible load                                  | Open collector output: 24 VDC, max 50 mA<br>Differential line driver output: 40 mA  |   |
| Machine end orientation control (available for FR-A8AL, FR-A7AL)         | Repeated positioning accuracy                     | ±1.5°   |   |
|  | Permissible speed                                 | Encoder-mounted shaft speed (6000 r/min)  |   |

- \*1 Regeneration unit (option) is necessary for regeneration.
- \*2 With online auto tuning (adaptive magnetic flux observer), dedicated motor, rated load
- \*3 FR-A7AL uses two option connectors of an inverter. When using FR-A7AL, only one more built-in option can be used.

#### (Applicable machine end encoder)

- Differential line driver or complementary
- 1000P/R to 4096P/R
- A separate power supply of 5V/12 V/15 V/24 V is necessary according to the encoder power specification. The FR-A8AL has power supply terminals (5 V/12 V/24 V).

### ● Connection diagram (Sink logic)

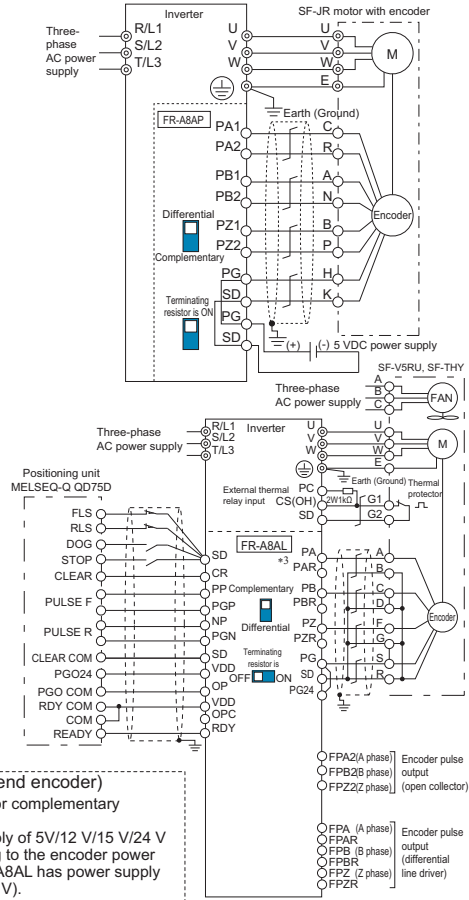


## <<FR-A8APR>>

### ● Specifications

| Function                            | Description                   |   |  |
|-------------------------------------|-------------------------------|---|--|
| Orientation control                 | Repeated positioning accuracy | ±1.5°<br>Depends on the load torque, moment of inertia of the load or orientation, creep speed, position loop switching position, etc.  |  |
|                                     | Permissible speed             | Resolver-mounted shaft speed (6000 r/min).<br>The drive shaft and resolver-mounted shaft must be coupled directly or via a belt without any slip. Gear changing shafts cannot be applied. |  |
| Resolver (encoder) feedback control | Speed variation ratio         | ±0.1% (100% means 3600 r/min)   |  |
| Vector control                      | Speed control                 | Speed control range   | 1:1500 (both driving/regeneration +1)        |
|                                     |                               | Speed variation ratio   | ±0.01% (100% means 3000 r/min)               |
|                                     |                               | Speed response  | 20 Hz (40 Hz during fast-response operation) |
|                                     |                               | Maximum speed   | 400 Hz                                       |
|                                     | Torque control                | Torque control range  | 1: 50  |
|                                     |                               | Absolute torque accuracy  | ±10% +2                                      |
|                                     |                               | Repeated torque accuracy  | ±5% +2                                       |
|                                     | Position control              | Repeated positioning accuracy   | ±1.5° (at motor shaft end)                   |
|                                     |                               | Maximum input pulse frequency   | 100k pulses/s (Terminal JOG)                 |
|                                     |                               | Positioning feedback pulse  | 4096 pulses/rev                              |
|                                     | Electronic gear setting       | 1/50 to 20  |  |
|                                     | In-position width             | 0 to 32767 pulses   |  |
|                                     | Error excess                  | 0 to 400k pulses  |  |

- \*1 Regeneration unit (option) is necessary for regeneration
- \*2 With online auto tuning (adaptive magnetic flux observer), dedicated motor, rated load

### ● Connection diagram

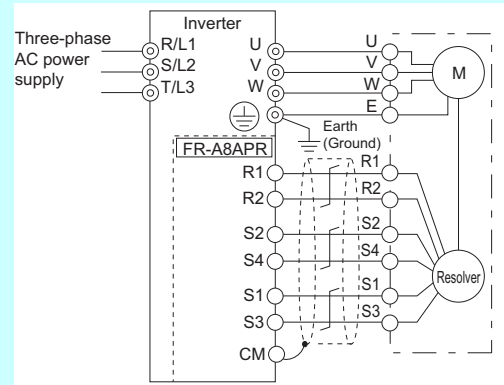


# Plug-in option (control function expansion/additional I/O)

## <<FR-A8APS>>

### ●Specifications

| Function                 |                               | Description   |  |
|--------------------------|-------------------------------|---|--|
| Orientation control      | Repeated positioning accuracy | ±1.5°<br>Depends on the load torque, moment of inertia of the load or orientation, creep speed, position loop switching position, etc.  |  |
|                          | Permissible speed             | Rotation speed of the EnDat interface encoder-mounted shaft<br>The drive shaft and encoder-mounted shaft must be coupled directly or via a belt (with the speed ratio of 1:1) without any mechanical looseness or slip. Gear changing shafts cannot be applied. |  |
| Encoder feedback control | Speed variation ratio         | ±0.1% (100% means 3600 r/min)   |  |
| Vector control           | Speed control                 | Speed control range   | 1:1500 (both driving/regeneration *1)  |
|                          |                               | Speed variation ratio   | ±0.01% (100% means 3000 r/min)   |
|                          |                               | Speed response  | 300 rad/s (analog command input)<br>Note that the internal response is 600 rad/s (with model adaptive speed control) |
|                          |                               | Maximum speed   | 400 Hz   |
|                          | Torque control                | Torque control range  | 1: 50  |
|                          |                               | Absolute torque accuracy  | ±10% *2  |
|                          |                               | Repeated torque accuracy  | ±5% *2   |
|                          | Position control              | Repeated positioning accuracy   | ±1.5° (at motor shaft end)   |
|                          |                               | Maximum input pulse frequency   | 100k pulses/s (Terminal JOG)   |
|                          |                               | Positioning feedback pulse  | Different depending on the encoder resolution  |
|                          |                               | Electronic gear setting   | 1/50 to 20   |
|                          |                               | In-position width   | 0 to 32767 pulses  |
| Error excess             | 0 to 400k pulses              |   |  |

### ●Connection diagram

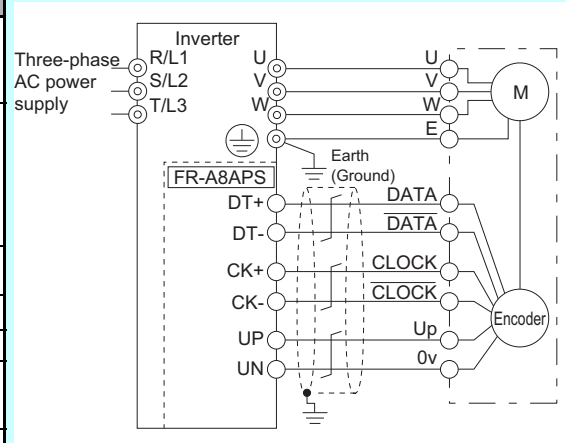

\*1 Regeneration unit (option) is necessary for regeneration.


\*2 With online auto tuning (adaptive magnetic flux observer), dedicated motor, rated load

## <<FR-A8APA>>

### ●Specifications

| Function            |                               | Description  |  |
|---------------------|-------------------------------|--|--|
| Orientation control | Repeated positioning accuracy | ±1.5°<br>Depends on the load torque, moment of inertia of the load or orientation, creep speed, position loop switching position, etc. |  |
|                     | Encoder feedback control      | Speed variation ratio  | ±0.1% (100% means 3600 r/min)  |
| Vector control      | Speed control                 | Speed control range  | 1:1500 (both driving/regeneration *1)  |
|                     |                               | Speed variation ratio  | ±0.01% (100% means 3000 r/min)   |
|                     |                               | Speed response   | 300 rad/s (analog command input)<br>Note that the internal response is 600 rad/s (with model adaptive speed control) |
|                     | Torque control                | Torque control range   | 1: 50  |
|                     |                               | Absolute torque accuracy   | ±10% *2  |
|                     |                               | Repeated torque accuracy   | ±5% *2   |
|                     | Position control              | Repeated positioning accuracy  | ±1.5° (at motor shaft end)   |
|                     |                               | Maximum input pulse frequency  | 100k pulses/s (Terminal JOG)   |
|                     |                               | Positioning feedback pulse   | Different depending on the encoder resolution  |
|                     |                               | Electronic gear setting  | 1/50 to 20   |
|                     |                               | In-position width  | 0 to 32767 pulses  |
|                     |                               | Error excess   | 0 to 400k pulses   |

### ●Connection diagram

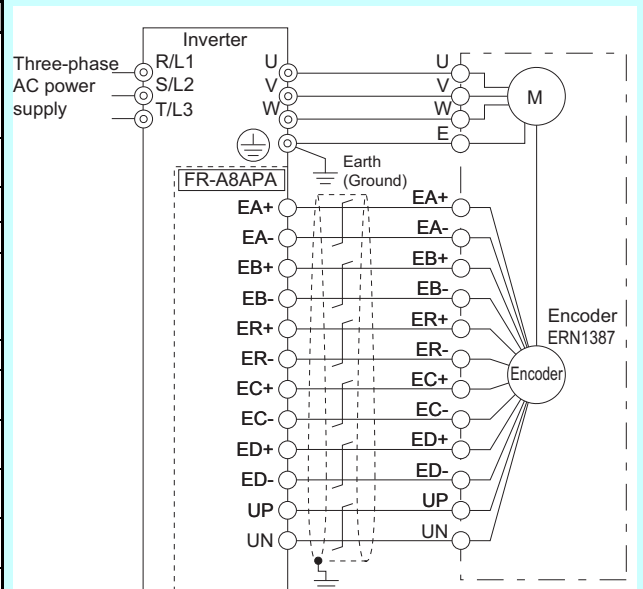

\*1 Regeneration unit (option) is necessary for regeneration.

\*2 With online auto tuning (adaptive magnetic flux observer), dedicated motor, rated load

# Plug-in option (control function expansion/additional I/O)

## 16-bit digital input


FR-A8AX (A800) (A800 Plus) (F800) FR-A8AX E kit (E800)  
FR-A7AX (A701) FR-A7AX E kit (E700)

**Digital input** Frequency setting of the inverter can be performed using a digital signal such as BCD code or binary code from controller.

### ●Specifications

| Function      | Description               |   |
|---------------|---------------------------|---|
| Digital input | Digital input signal type | BCD code 3 digits or 4 digits<br>Binary 12 bits or binary 16 bits |
|               | Input specifications      | Contact signal or open collector input                            |

### ●Connection diagram

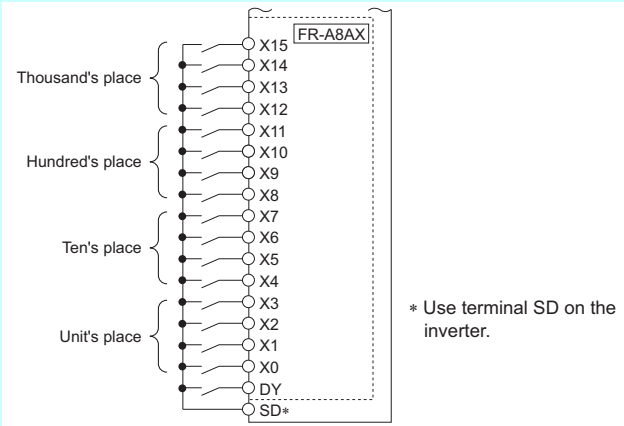

## Analog output/digital output

FR-A8AY (A800) (A800 Plus) (F800) FR-A8AY E kit (E800)  
FR-A7AY (A701) FR-A7AY E kit (E700)


**Digital output** Output signal (RUN, SU, etc.) provided with the inverter as standard can be output from the open collector terminal.

**Analog output** Analog signals such as the output frequency and output current can be output from the voltage output terminal (AM0) and current output terminal (AM1).

### ●Specifications

| Function       | Description                          |   |
|----------------|--------------------------------------|---|
| Digital output | Open collector output specifications | Permissible load 24 VDC 0.1 A   |
|                | Circuit logic                        | Same as the inverter (sink when shipped from factory)   |
| Analog output  | Output signal                        | Voltage output (across terminals AM0-AMC)<br>FR-A8AY: 0 to ±10 VDCMAX<br>FR-A7AY: 0 to 10 VDCMAX<br>Current output (across terminals AM1-AMC)<br>0 to 20 mADC |
|                | Wiring length                        | Maximum 10 m  |

### ●Connection diagram

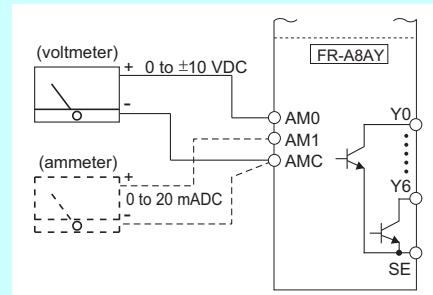

## Relay output


FR-A8AR (A800) (A800 Plus) (F800) FR-A8AR E kit (E800)  
FR-A7AR (A701) FR-A7AR E kit (E700)

**Relay output** You can select any three output signals (RUN, SU, IPF, etc.) available with an inverter as standard, and output them as relay contact (1C) signals.

### ●Specifications

| Function     | Description      |                                      |
|--------------|------------------|--------------------------------------|
| Relay output | Contact capacity | AC230 V... 0.3 A<br>DC30 V ... 0.3 A |

### ●Connection diagram

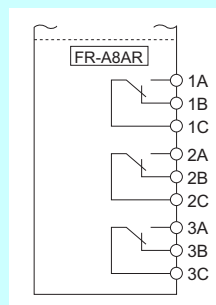

## Plug-in option (control function expansion/additional I/O)

### Coded analog output/high-resolution analog input/ motor thermistor interface

FR-A8AZ (A800) (A800 Plus)


FR-A7AZ (A701)

- Coded analog output**      Outputting 0 to  $\pm 10$  VDC enables output frequency, output voltage, etc. to be monitored with a DC voltage meter.
- High-resolution analog input**      Inputting 0 to  $\pm 10$  VDC voltage enables speed command, torque limit command, torque command, etc.
- Motor thermistor interface**      When using the vector inverter motor equipped with a thermistor (SF-V5RU□□KT) or the high-performance energy-saving three-phase motor with encoder (SF-PR-SC□A-FV), the inverter can receive feedback (detected temperature) from the motor-side thermistor. The feedback is used to reduce the fluctuation of output torque.

#### ●Specifications

| Function                     | Description                  |  |
|------------------------------|------------------------------|--|
| Coded analog output          | Output signal                | Voltage output (between terminal DA1 to 5); -10 V to +10 VDC |
|                              | Resolution                   | -10V to +10 V/16 bits  |
| High resolution analog input | Input resistance             | 10 kW  |
|                              | Maximum input voltage        | $\pm 20$ VDC   |
| Motor thermistor interface   | Detectable motor temperature | -50 °C to 200 °C   |
|                              | Torque accuracy              | $\pm 3\%$  |

#### ●Connection diagram

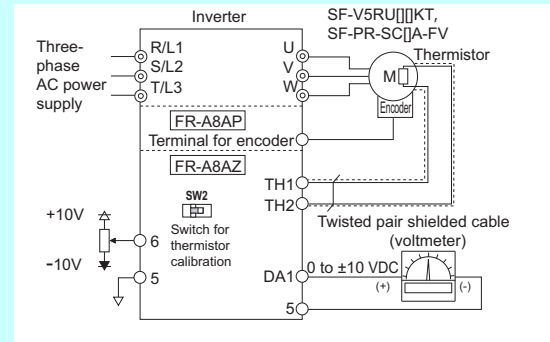

### 24 VDC input

FR-E8DS E kit (E800)

FR-E7DS (E700)


Supports FR-E700-SC only.

Instead of the main circuit power supply, external power can be supplied to an inverter. Connect the 24 V external power supply across terminals +24 and SD. The 24 V external power supply enables I/O terminal operation, operation panel displays, and control functions even while the inverter's main circuit power supply is OFF. When the main circuit power supply is turned ON, the power supply changes from the 24 V external power supply to the main circuit power supply.

#### ●Specifications

| Function     | Description   |                    |
|--------------|---------------|--------------------|
| 24 VDC input | Input voltage | 23.5 V to 26.5 VDC |
|              | Input current | 0.7 A or lower     |

#### ●Connection diagram

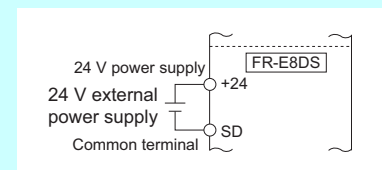

## Additional control circuit input/output

FR-E8AXY E kit E800

Input/output terminals can be added.


This option is useful when additional physical terminals are required, such as when an inverter with less input/ output terminals such as the FR-E800-E (Ethernet model) or the FR-E800-SCE (safety communication model) is used.

### ●Specifications

| Type              | Terminal symbol                      | Common  | Terminal function description / rated specification   |
|-------------------|--------------------------------------|---|---|
| Digital input     | X1 to X7 (7 terminals*1)             | SD (sink (negative common))<br>24V (source (positive common)) | Input resistance: 4.7 kΩ<br>Voltage when contacts are open: 21 to 26 VDC<br>Current when contacts are short-circuited: 4 to 6 mADC  |
|                   | S/S (Sink/source switching terminal) | —   | When the sink logic is selected<br>When using internal power supply: Connected to terminal 24V<br>When using external power supply: Connected to the positive terminal of the external power supply<br>When the source logic is selected<br>When using internal power supply: Connected to terminal SD<br>When using external power supply: Connected to the negative terminal of the external power supply |
| Pulse train input | X7 (1 terminal*1)                    | SD (sink (negative common))<br>24V (source (positive common)) | Input resistance: 2 kΩ<br>Current when contacts are short-circuited: 8 to 13 mADC<br>Maximum input pulse: 100k pulses/s   |
| Analog input      | 1 (1 terminal)                       | 5*2   | Input resistance: 10 to 11 kΩ<br>Input voltage range: 0 to ±10 VDC<br>Permissible maximum voltage: ±20 VDC  |
| Digital output    | Y1, Y2 (2 terminals)                 | SE  | Permissible load: 24 VDC (27 VDC at maximum) 0.1 A<br>(The voltage drop is 3.4 V at maximum while the signal is ON.)  |
| Analog output     | AM1 (1 terminal)                     | 5*2   | Output signal: 0 to ±10 VDC max. (across terminals AM1 and 5)<br>Output resolution: 3 mV<br>Applicable meter: DC voltmeter<br>Full-scale ±10 V (internal impedance: 10 kΩ or more)<br>Wiring length: maximum 10 m   |

- \*1 The function of terminal X7 can be switched between digital input and pulse train input using the parameter.
- \*2 Terminal 5 is a dual-purpose terminal, used for analog input or analog output. (One terminal is provided.)

### ●Connection diagram (sink logic)

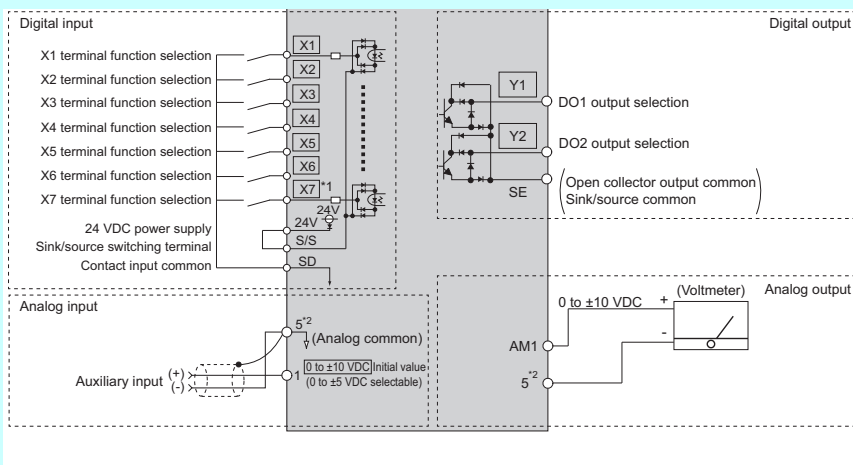

- \*1 The function of terminal X7 can be switched between digital input and pulse train input using the parameter.
- \*2 Terminal 5 is a dual-purpose terminal, used for analog input or analog output. (One terminal is provided.)



# Plug-in option (control function expansion/additional I/O)


## Phase-synchronized bypass switching

FR-A8AVP A800 A800 Plus F800


The phase-synchronized bypass switching function permits smooth switching of the motor power supply from the inverter output power to the commercial power. The shock caused by the switch is suppressed because the inverter output voltage phase is synchronized with the commercial power voltage phase. Use with a phase detection transformer box (FR-A8VPB-H).

### ●Connection diagram

<<Example for the standard model or IP55 compatible model of the FR-A800 series inverter>>

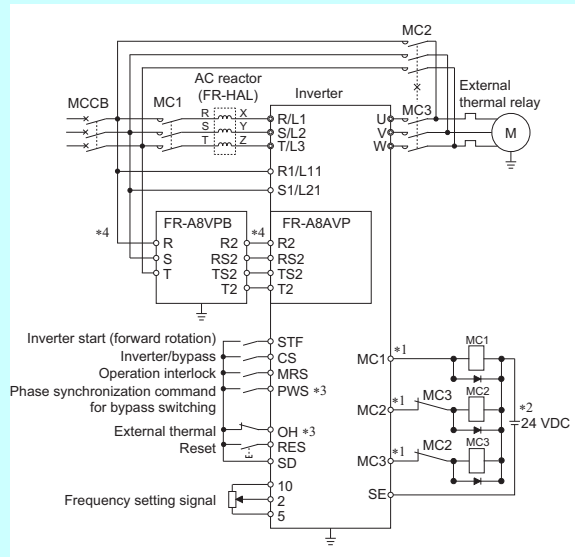

<<Example for the separated converter type of the FR-A800 series inverter>>

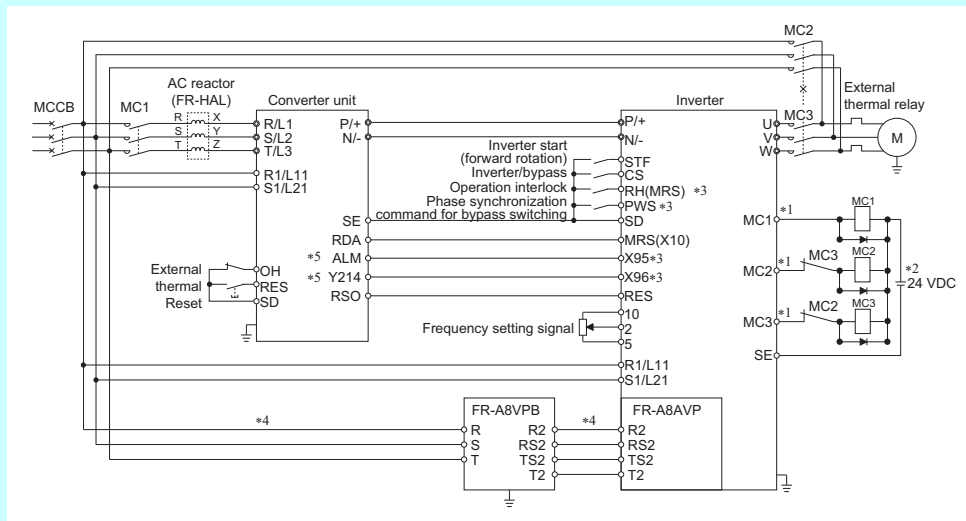

- \*1 Be careful of the capacity of the sequence output terminals. The applied terminals differ depending on the settings of Pr.190 to Pr.196 (Output terminal function selection).

| Output terminal capacity  | Output terminal permissible load |
|---|----------------------------------|
| Open collector output of inverter (RUN, SU, IPF, OL, FU)                            | 24 VDC 0.1 A                     |
| Inverter relay output (A1-C1, B1-C1, A2-B2, B2-C2)<br>Relay output option (FR-A8AR) | 230 VAC 0.3 A<br>30 VDC 0.3 A    |

- \*2 When connecting a DC power supply, insert a protective diode. When connecting an AC power supply, use the relay output option (FR-A8AR), and use contact outputs.  
\*3 The applied terminals differ depending on the settings of Pr.180 to Pr.189 (Input terminal function selection).  
\*4 Use the wires satisfying the following requirements for each wiring location.

| Wiring location   | Wire gauge (mm <sup>2</sup> ) | Total wiring length |
|---|-------------------------------|---------------------|
| Wiring between the power supply and the phase detection transformer box | 2                             | 10 m or less        |
| Wiring between the phase detection transformer box and the inverter     | 0.75 to 1.25                  | 5 m or less         |

- \*5 To use the signal, assign the function to the output terminal using Pr.190 to Pr.195 (Output terminal function selection) in the converter unit. Always set the negative logic for the ALM signal.

## Plug-in option (control function expansion/additional I/O)

### Changeover between inverter and high power factor converter

FR-A8AVP A800 A800 Plus

Certain inverters can be changed to high power factor converters by installing the FR-A8AVP and configuring its parameters. The following options are needed to use the converter: phase detection transformer box, dedicated filter reactor, dedicated reactor for PWM control, dedicated filter capacitor, inrush current limit resistor. The converter can be changed back to an inverter.

#### ●Option lineup for the converter

| Peripheral device | Component model | Name                              |
|-------------------|-----------------|-----------------------------------|
| FR-A8VPB-H        | FR-A8VPB-H      | Phase detection transformer box   |
| FR-A8BL1-H[]      | FR-A8BL1-H[]    | Dedicated filter reactor          |
| FR-A8BL2-H[]      | FR-A8BL2-H[]    | Dedicated reactor for PWM control |
| FR-A8BC-H[]       | FR-A8BC-H[]     | Dedicated filter capacitor        |

| Peripheral device | Component model    | Name   |
|-------------------|--------------------|--|
| FR-A8MC-H[]       |                    | Dedicated circuit parts for inrush current protection                      |
|                   | BKO-CA2573H01      | Inrush current limit resistor (without thermostat)                         |
|                   | BKO-CA2573H11      | Inrush current limit resistor (with thermostat)                            |
|                   | BKO-CA2571H01      | Stepdown transformer for power source of magnetic contactor (400 to 220 V) |
|                   | S-N400 AC200V 2A2B | Inrush current limit magnetic contactor                                    |
|                   | SR-T5 AC200V 5A    | Buffer relay   |
|                   | MYQ4Z AC200/220    | Mini relay   |
|                   | PYF14T             | Mini relay terminal block  |
| PYC-A1            | Mini relay clip    |  |

#### ●Converter rated specifications

| Model FR-A842-[]                               | 07700                                     | 08660 | 09620 | 10940 | 12120 |
|--|---|-------|-------|-------|-------|
|  | 315K                                      | 355K  | 400K  | 450K  | 500K  |
| Applicable inverter capacity (kW)              | 315                                       | 355   | 400   | 450   | 500   |
| Rated output capacity *1                       | 375                                       | 423   | 476   | 536   | 595   |
| Rated voltage (V) *2*3                         | Three-phase 380 to 500 V 50 Hz/60 Hz *6*7 |       |       |       |       |
| Rated current (A)                              | 564                                       | 636   | 716   | 806   | 895   |
| Overload current rating*4                      | 150% 60s                                  |       |       |       |       |
| Permissible power supply voltage fluctuation   | 323 to 506 V 50 Hz/60 Hz                  |       |       |       |       |
| Permissible power supply frequency fluctuation | ±5%                                       |       |       |       |       |
| Input power factor                             | 0.99 or more (when load ratio is 100%)    |       |       |       |       |
| Power supply capacity (kVA)                    | 456                                       | 515   | 580   | 652   | 724   |
| Protective structure of the converter *5       | Open type (IP00)                          |       |       |       |       |
| Cooling system                                 | Forced air                                |       |       |       |       |
| Approx. mass (kg)                              | 163                                       | 163   | 243   | 243   | 243   |

\*1 DC output capacity when the input voltage is 400 VAC. Multiple ratings are not supported.

\*2 Change the stepdown transformer tap according to the input voltage.

\*3 The output voltage is approx. 594 VDC at an input voltage of 400 VAC, approx. 653 VDC at 440 VAC, and approx. 742 VDC at 500 VAC.

\*4 The percentage of the overload current rating is the ratio of the overload current to the converter's rated input current. For repeated duty, allow time for the temperatures of the converter and the inverter to return to or below the temperatures under 100% load.


\*5 FR-DU08: IP40 (except for the PU connector)

\*6 The permissible voltage imbalance ratio is 3% or less. (Imbalance ratio = (highest voltage between lines - average voltage between three lines) / average voltage between three lines × 100)

\*7 The rated voltage when connecting a motor to the FR-A840-02160(75K) and FR-F840-02160(90K) or higher. If connecting a motor to inverters other than those mentioned above, the rated voltage is 380 to 480 V.

## Plug-in option (control function expansion/additional I/O)

### ● Connection diagram

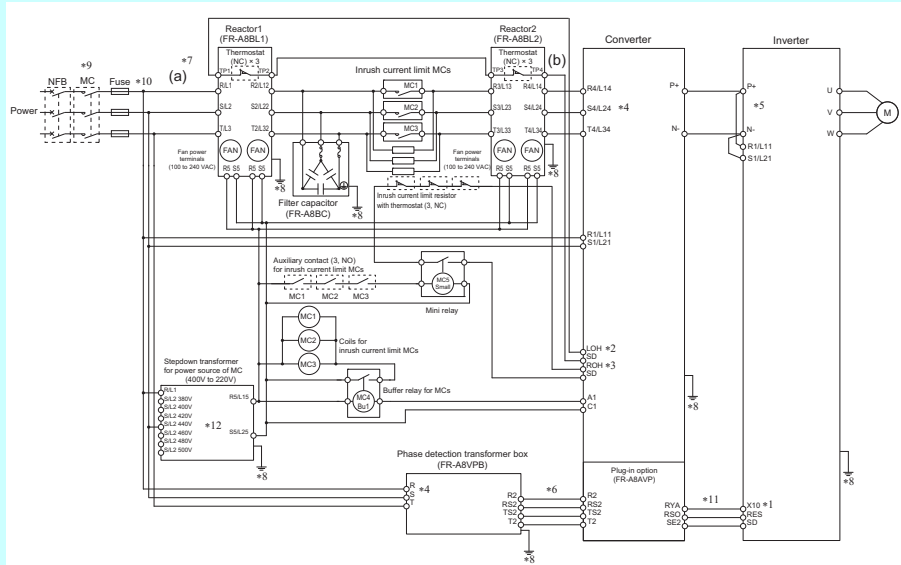


- \*1 Use the Input terminal function selection to assign the X10 signal to a terminal. The signal is assigned to terminal MRS in the initial status.
- \*2 The LOH signal function is assigned to terminal RT in the initial status. Set "33" in any of **Pr.178 to Pr.189 (Input terminal function selection)** to assign the LOH signal to another terminal.
- \*3 The ROH signal function is assigned to terminal AU in the initial status. Set "34" in any of **Pr.178 to Pr.189 (input terminal function selection)** to assign the ROH signal to another terminal.
- \*4 Confirm the correct voltage phase sequence between the converter (terminals R4/L14, S4/L24, and T4/L34) and the phase detection transformer box (terminals R, S, and T).
- \*5 Do not install any MCCB between the inverter and the converter (P to P and N to N). Connecting opposite polarity of terminals P and N will damage the converter and the inverter.
- \*6 Always connect terminals R2, RS2, TS2, and T2 of the FR-A8AVP installed on the converter and the identically-named terminals of the phase detection transformer box. If the inverter is operated without connecting between the terminals, the converter will be damaged.
- \*7 Do not install an MCCB or MC between the reactor 1 input terminals (R/L1, S/L2, and T/L3) (a) and the converter input terminals (R4/L14, S4/L24, and T4/L34) (b) except for those specified in the connection diagram. Doing so disrupts proper operation.
- \*8 Securely perform grounding (earthing) by using the grounding (earthing) terminal.
- \*9 Install an MC for each phase.
- \*10 Install the UL listed fuse (specified in the Instruction Manual of the FR-A842 converter) to meet the UL/cUL standards.
- \*11 Always connect terminal RYA on the FR-A8AVP (installed on the converter) and the inverter terminal to which the X10 signal is assigned, and connect terminal SE2 on the FR-A8AVP and the inverter terminal SD (terminal PC in the source logic). Failure to do so may lead to damage of the converter.
- \*12 Select a terminal S/L2 according to the input voltage.

# Plug-in option (control function expansion/additional I/O)

## ● Outline dimension drawings


### <<FR-A8BL1-H315K to H500K>>

This is an example of the outer appearance, which differs depending on the model.

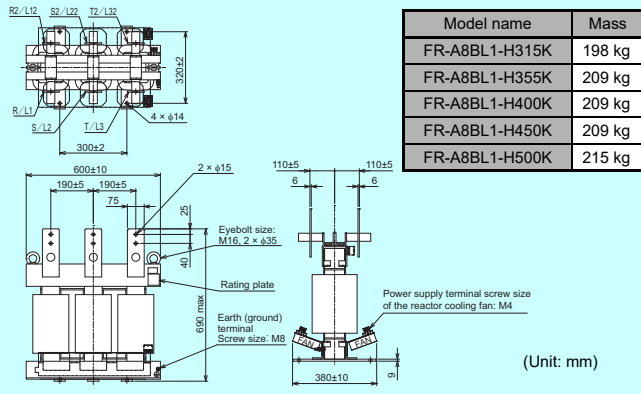


### <<FR-A8BL2-H315K to H500K>>

This is an example of the outer appearance, which differs depending on the model.

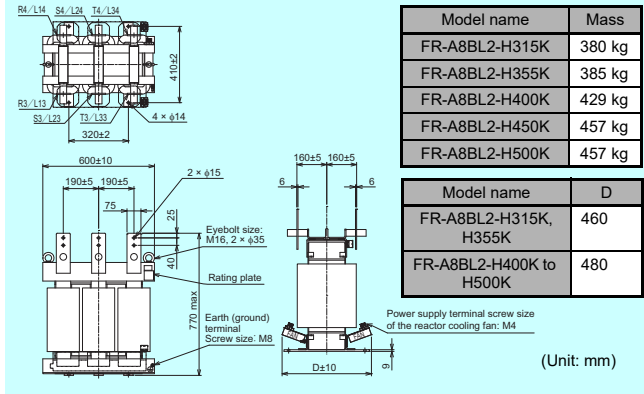


### <<FR-A8VPB-H>>

#### Outline dimension drawings

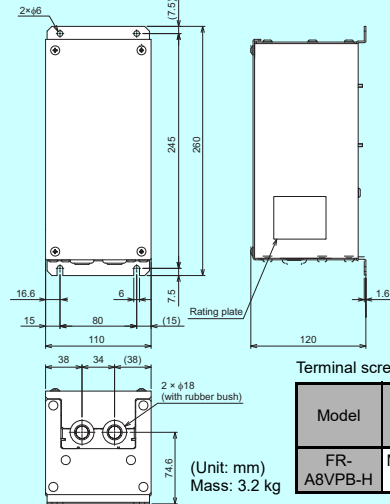


#### Terminal block




#### Terminal screw size

| Model      | Terminals R, S, T, R2, RS2, TS2, and T2 | Earth (ground) terminal |
|------------|---|-------------------------|
| FR-A8VPB-H | M3.5                                    | M3.5                    |


### <<FR-A8BC-H400K>>

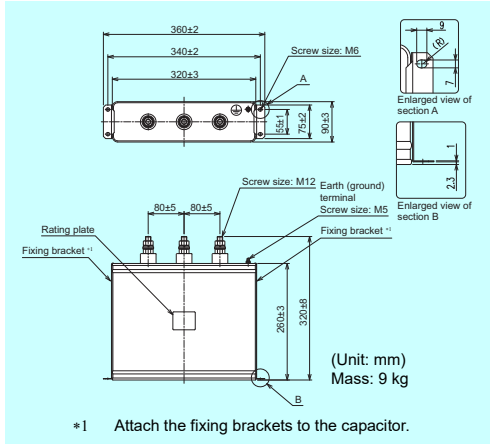


### <<FR-A8BC-H500K>>

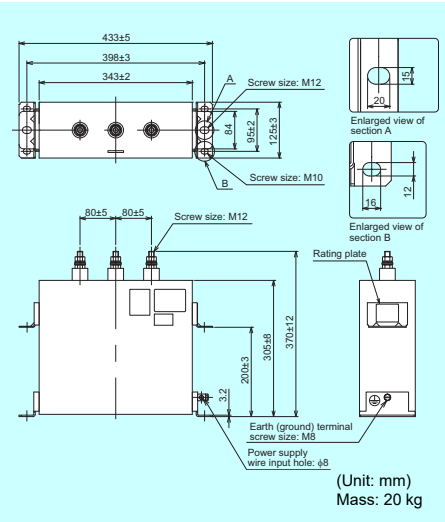


### <<FR-A8MC-H355K, H500K>>

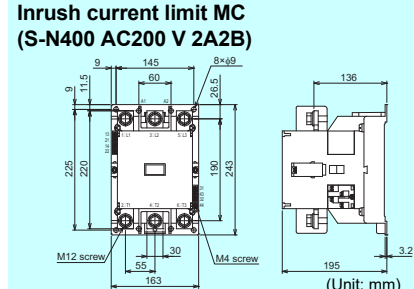

#### Mini relay terminal block

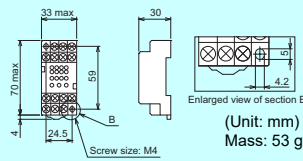


#### Buffer relay (SR-T5 AC200 V 5 A)

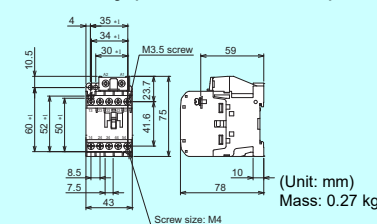


\*1 The position of the upper-left mounting hole is selectable. Combinations of the horizontal and vertical dimensions are as follows: 35 and 60, 30 and 60, 34 and 52, 35 and 50-52.


#### MC power supply stepdown transformer (BKO-CA2571H01)

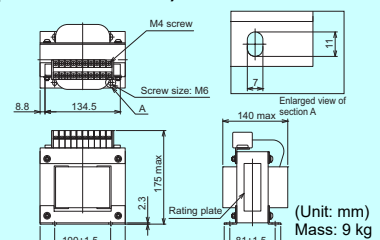


#### Mini relay (MYQ4Z AC200/220)

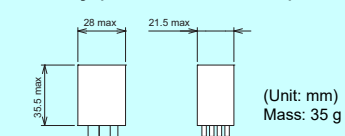

#### Inrush current limit resistor with thermostat (BKO-CA2573H11) without thermostat (BKO-CA2573H01)

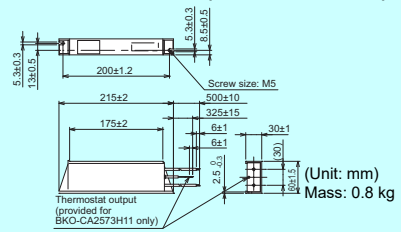


## Plug-in option (for communication)

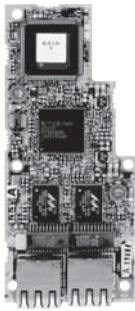

### 800 series plug-in option example: FR-A8NCE

This option can be mounted in the 800 series inverter.  
The FR-A800 series has an inverter with communication function.

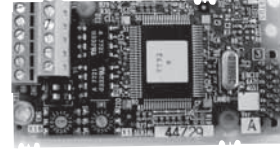

### 700 series plug-in option example: FR-A7NP

This option can be mounted in the 700 series inverter. Some of the plug-in options of the FR-E700 series have "E-kit" attached to their names. This denotes that the option is sold as a kit and comes with a dedicated front cover (standard control circuit terminal model). The FR-E700 series also has an inverter with communication function.

For the communication option, only one option is connectable.

## CC-Link IE TSN communication

FR-A8NCG (A800) (A800 Plus) (F800)  
Built-in FR-A800-GN (A800)

Data can be transmitted to IT systems while performing real-time cyclic communication control. Real-time monitoring using time synchronization enables trouble analysis right after an error has occurred.

### ●Specifications

| Item                                | Description   |           |
|-------------------------------------|---|-----------|
| Transmission speed                  | 1 Gbps/100 Mbps   |           |
| Minimum synchronization cycle       | 125.00 μs   |           |
| CC-Link IE TSN authentication class | B   |           |
| Communication method                | Time sharing method   |           |
| Synchronization function            | Compliant with IEEE 802.1AS and IEEE 1588v2   |           |
| Maximum number of connected units   | 121 units (sum of master and remote stations)   |           |
| Topology                            | Line, star*1, ring*2, or a combination of line and star   |           |
| Connection cable                    | Ethernet cable (IEEE 802.3 1000BASE-T compliant cable or ANSI/TIA/EIA-568-B (Category 5e) compliant shielded 4-pair branched cable) |           |
| Connector                           | Shielded RJ-45  |           |
| Node type                           | Remote station  |           |
| Maximum distance between nodes      | 100 m   |           |
| Maximum number of branches          | No upper limit within the same Ethernet system  |           |
| Maximum cyclic size (of one node)   | RX  | 64 bits   |
|                                     | RY  | 64 bits   |
|                                     | RWr   | 128 words |
|                                     | RWw   | 128 words |

- \*1 To connect only the authentication class B devices in star topology when the communication speed of the master station is 1 Gbps, use a CC-Link IE TSN compatible switching hub (TSN switching hub).
- \*2 Ring topology will be supported later.

## Plug-in option (for communication)

### CC-Link IE Field Network communication

FR-A8NCE (A800) (A800 Plus) (F800)  
 Built-in FR-A800-GF (A800)  
 FR-A7NCE (A701)

Gigabit transmission (1 Gbps) enables super-high speed communication.

Network configuration is flexible with different types of topologies.

CC-Link IE Field Network uses widely available Ethernet components, such as Ethernet cables and connectors.

#### ● Specifications

| Item                              | Description   |           |
|-----------------------------------|---|-----------|
| Type                              | Inverter plug-in option type, RJ-45 connector connection method   |           |
| Power supply                      | Supplied from the inverter  |           |
| Transmission speed                | 1 Gbps  |           |
| Communication method              | Token passing   |           |
| Number of units connected         | 120 units at max. (64 units when all stations are inverters handling 128-word transmissions.)<br>Different devices can be connected together. |           |
| Maximum distance between nodes    | 100 m   |           |
| Maximum number of branches        | No upper limit within the same Ethernet system  |           |
| Topology                          | Line, star, ring, or a combination of line and star   |           |
| Connection cable                  | Ethernet cable<br>(IEEE 802.3 1000BASE-T compliant cable or ANSI/TIA/EIA-568-B (Category 5e) compliant shielded 4-pair branched cable)        |           |
| Connector                         | Shielded RJ-45  |           |
| Node type                         | Intelligent device station  |           |
| Maximum cyclic size (of one node) | RX  | 64 bits   |
|                                   | RY  | 64 bits   |
|                                   | RWr   | 128 words |
|                                   | RWw   | 128 words |

### CC-Link communication

FR-A8NC (A800) (A800 Plus) (F800) FR-A8NC E kit (E800)  
 FR-A7NC (A701) FR-A7NC E kit (E700)  
 Built-in FR-E700-NC (E700)

Has a maximum communication speed of 10 Mbps. Because the system employs the bus connection method, even if a module system fails due to power off, it will not affect the communication with other normal modules.

#### ● Specifications

| Item                          | Description   |
|-------------------------------|---|
| Network topology              | Bus   |
| Station type                  | Remote device station   |
| Number of connectable devices | 42 units maximum (occupy 1 station/unit), can be shared with other models       |
| Supported version             | Ver. 2.00 supported   |
| Communication speed           | Selectable from among 156 kbps/625 kbps/2.5 Mbps/5 Mbps/10 Mbps                 |
| Overall extension             | 1200 m/600 m/200 m/150 m/100 m (corresponding to the above communication speed) |
| Connection cable              | Twisted pair cable  |

## SSCNET III(/H) communication

FR-A8NS (A800) (A800 Plus)  
FR-A7NS (A701)

By communication with the Mitsubishi Electric motion controller, inverter operation and monitoring from the program on the motion controller are enabled. (SSCNET III/H communication is supported by the FR-A8NS only.)

SSCNET III(/H), which is optical network, realizes reduction in wiring length, reliability improvement, synchronous control performance improvement, and multi-axis batch control using a motion controller.

To use vector control with FR-A800 series inverters, one of the following options is required: FR-A8AP, FR-A8AL, FR-A8APR, FR-A8APS, FR-A8APA, FR-A8TP. To use vector control with FR-A700 series inverters, one of the following options is required: FR-A7AP or FR-A7AL.

### ●Specifications

| Item                             | SSCNET III   | SSCNET III/H                         |
|----------------------------------|--|--------------------------------------|
| Compatible options               | FR-A8NS, FR-A7NS   | FR-A8NS                              |
| Communication speed              | 50 Mbps for two-way  | 150 Mbps for two-way                 |
| Wiring distance between stations | Up to 50 m   | Up to 100 m                          |
| Overall length                   | Up to 800 m  | Up to 1600 m                         |
| Selectable calculation cycle     | 0.444 ms, 0.888 ms or more   | 0.222 ms, 0.444 ms, 0.888 ms or more |
| Number of connectable devices    | 16 axis maximum  |                                      |
| Connection cable                 | SSCNET III cable (refer to page 32)<br>MR-J3BUS[M] (0.15 m, 0.3 m, 0.5 m, 1 m, 3 m): standard code for enclosure<br>MR-J3BUS[M-A] (5 m, 10 m, 20 m): standard cable for outside enclosure<br>MR-J3BUS[M-B] (30 m, 40 m, 50 m): long-distance cable |                                      |

There are some restrictions on the SSCNET III communication according to the setting of calculation cycle.

| Calculation cycle | Restrictions for the SSCNET III communication  |
|-------------------|--|
| 0.222 ms          | Not applicable.  |
| 0.444 ms          | Up to 8 axes controlled in a system.*1<br>Set the axis number between 0 to 7 using the axis number switch on the FR-A8NS/FR-A7NS.<br>An inverter set as the axis number between 8 to F cannot be recognized. |
| 0.888ms or more   | No restriction.  |

\*1 If this calculation cycle is set for the system requiring 9 axes or more, the calculation cycle of 0.888 ms is applied.

## DeviceNet™ communication

FR-A8ND (A800) (A800 Plus) (F800) FR-A8ND E kit (E800)  
FR-A7ND (A701) FR-A7ND E kit (E700)

DeviceNet employs CAN (Controller Area Network) and is widely used in the automotive industry.

### ●Specifications

| Item                          | Description  |
|-------------------------------|--|
| Network topology              | Bus (trunk line · branch line)   |
| Number of connectable devices | 64 inverters (including master)  |
| Communication speed           | Selectable from among 125 kbps/250 kbps/500 kbps                         |
| Overall extension             | 500 m/250 m/100 m (corresponding to the above communication speed)       |
| Connection cable              | DeviceNet standard thick cable or thin cable (5 wire twisted pair cable) |

## PROFIBUS-DP communication

FR-A8NP (A800) (A800 Plus) (F800) FR-A8NP E kit (E800)  
FR-A7NP (A701) FR-A7NP E kit (E700)

Has a maximum communication speed of 12 Mbps. Widely used in FA operations of the automotive and transportation industries.

### ●Specifications

| Item                          | Description   |
|-------------------------------|---|
| Network topology              | Bus   |
| Number of connectable devices | 126 inverters (including master and repeater)   |
| Communication speed           | 9.6 kbps, 19.2 kbps, 93.75 kbps/187.5 kbps/500 kbps, 1.5 Mbps/3.0 Mbps, 6.0 Mbps, 12.0 Mbps |
| Overall extension             | 1200 m/600 m/200 m/100 m (corresponding to the above communication speed)                   |
| Connection cable              | Profibus communication cable  |

## Plug-in option (for communication)

### LONWORKS® communication

FR-A8NL (F800)  
FR-A7NL (A701) FR-A7NL Ekit (E700)

Decentralized control without master assures that the whole system will not stop even if any of the station fails. In addition, communication traffic can be restricted.

#### ●Specifications

| Item                          | Description  |
|-------------------------------|--|
| Network topology              | Bus, free topology   |
| Number of nodes occupied      | One inverter occupies one node.                            |
| Number of connectable devices | 64 units maximum including inverters in the same segment   |
| Communication speed           | 78 kbps  |
| Overall extension             | Free topology: 500 m maximum, bus topology: 2700 m maximum |
| Connection cable              | Twisted pair cable   |

### FL remote communication

FR-A8NF (A800) (A800 Plus) (F800)  
FR-A7NF (A701)  
Built-in FR-E700-NF (E700)

A high speed communication of 100Mbps is obtained with an Ethernet-based network.

#### ●Specifications

| Item                          | Description  |
|-------------------------------|--|
| Network topology              | Star (connection with a hub in the center), Star bus (connection with multiple hubs) |
| Number of connectable devices | 64 units   |
| Communication speed           | 10 Mbps/100 Mbps (auto detection)  |
| Overall extension             | 2000 m (Between node-hub: 100 m maximum, between hubs: 100 m maximum)                |
| Connection cable              | FL-net dedicated cable   |

### Other communication options

Communication is also possible using the following options manufactured by HMS Industrial Networks AB. Please contact your sales representative for information on supported models.

#### ●EtherCAT® communication

A8NECT\_2P

E7NECT\_2P: FR-E700-TM only.

#### ●EtherNet/IP communication

A8NEIP\_2P

#### ●PROFINET communication

A8NPRT\_2P

#### ●PROFIBUS-DP communication (DP-V1)

A8NDPV1



# Control terminal option

## Vector control terminal block

FR-A8TP (A800) (A800 Plus)

Use the option in exchange with standard control circuit terminals. The 24 VDC power supply can be used for the encoder of the SF-V5RU.

### ●Control terminal specifications

#### <<Input signal>>

| Function       | Terminal symbol | Common   | Terminal name   | Rated specification  |
|----------------|-----------------|--|---|--|
| Contact input  | D11 to D14      | SD (sink (negative common))<br>PC (source (positive common)) | Digital input terminal 1 to 4                                   | Input resistance: 4.7 kΩ<br>Voltage when contacts are open: 21 to 27 VDC<br>Current when contacts are short-circuited: 4 to 6 mADC<br>When terminal D14 is used as a pulse train input terminal: Input resistance: 2 kΩ<br>When contacts are short-circuited: 8 to 13 mADC |
|                | OH              |  | Thermal protector input   | Input resistance: 940 Ω<br>Voltage when contacts are open: 21 to 27 VDC<br>Current when contacts are short-circuited: 140 to 180 mADC  |
| Encoder signal | PA3             | Differential line driver: —<br>Complementary: SD             | Control terminal option / A-phase signal input terminal         | Differential line driver/<br>Complementary   |
|                | PAR3            |  | Control terminal option / A-phase inverse signal input terminal | Differential line driver   |
|                | PB3             |  | Control terminal option / B-phase signal input terminal         | Differential line driver/<br>Complementary   |
|                | PBR3            |  | Control terminal option / B-phase inverse signal input terminal | Differential line driver   |
|                | PZ3             |  | Control terminal option / Z-phase signal input terminal         | Differential line driver/<br>Complementary   |
|                | PZR3            |  | Control terminal option / Z-phase inverse signal input terminal | Differential line driver   |
|                | PG              | SD   | Encoder power supply terminal (positive side)                   | —  |


Specifications are the same as those of the standard control circuit terminals for the input signals (STF, STR, RES, SD, PC, 10E, 2, 1, 5, and +24) and the output signals (A, B, C, AM, S1, S2, SIC, So (SO), and SOC).

#### <<Output signal>>

| Function                      | Terminal symbol | Common | Terminal name   | Rated specification  |
|-------------------------------|-----------------|--------|---|--|
| Open collector                | DO1 to DO3      | SE     | Digital output terminal 1 to 3  | Open collector output<br>Permissible load: 24 to 27 VDC, 0.1 A         |
| Encoder pulse dividing output | FPA5            | SD     | Control terminal option / Encoder A-phase output terminal                             | Open collector output<br>Permissible load: 24 to 27 VDC, maximum 50 mA |
|                               | FPB5            |        | Control terminal option / Encoder B-phase output terminal                             |  |
|                               | FPZ5            |        | Control terminal option / Encoder Z-phase output terminal                             |  |
|                               | FPA4            | —      | Control terminal option / Encoder differential A-phase output terminal                | Differential line driver output<br>Permissible load: 40 mA             |
|                               | FPAR4           |        | Control terminal option / Encoder differential A-phase inverse signal output terminal |  |
|                               | FPB4            |        | Control terminal option / Encoder differential B-phase output terminal                |  |
|                               | FPBR4           |        | Control terminal option / Encoder differential B-phase inverse signal output terminal |  |
|                               | FPZ4            |        | Control terminal option / Encoder differential Z-phase output terminal                |  |
|                               | FPZR4           |        | Control terminal option / Encoder differential Z-phase inverse signal output terminal |  |
|                               | PG24            |        | SD  |  |


# Control terminal option

## Terminal layout

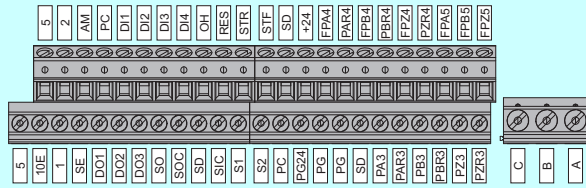

Tightening torque: 0.5 N·m to 0.6 N·m (terminals A, B, and C)  
 0.22 N·m to 0.25 N·m (terminals other than described above)  
 Small flat-blade screwdriver (Tip thickness: 0.4 mm / tip width: 2.5 mm)

## Terminal connection diagram (sink logic)

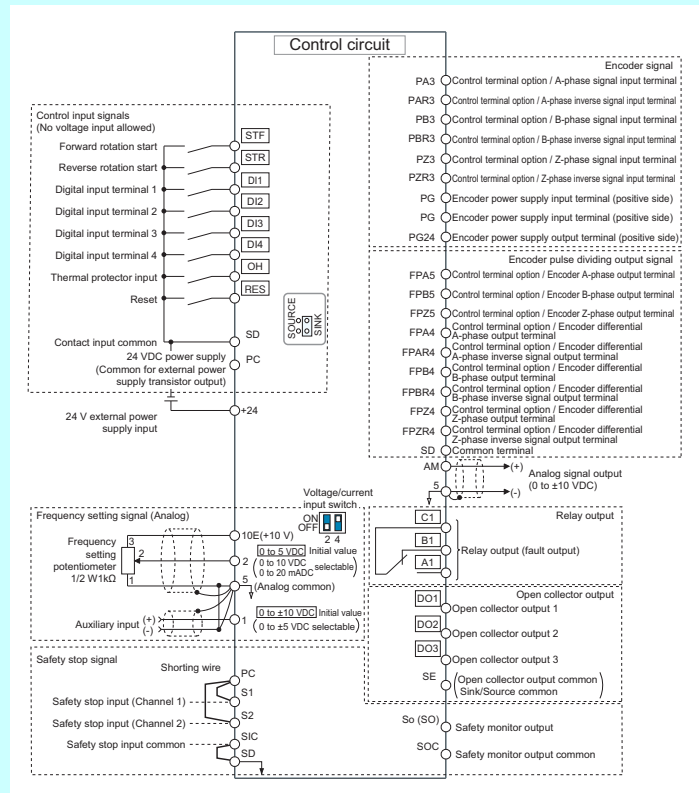


## Screw terminal block

FR-A8TR (A800) (A800 Plus) (F800)

The option replaces the standard control circuit terminal block.

## Terminal layout



Terminal screw size: M3.5  
 Tightening torque: 1.2 N·m  
 Recommended cable gauge: 0.75 mm<sup>2</sup>

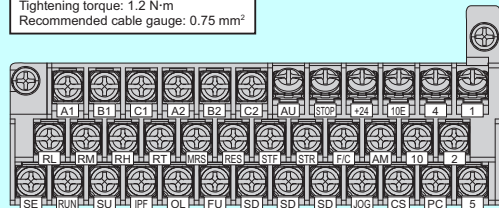

## Restrictions for the FR-A8TR

As compared with the standard control circuit terminal block, the FR-A8TR has the following restrictions.

- Terminals +24, 10E, 4, STOP, and AU cannot be used when using the plug-in option FR-A8NS.
- Because the height is restricted, two wires cannot be wired to upper-row terminals (except for terminals A1, B1, C1, A2, B2, and C2) and middle-row terminals on the terminal block.
- The safety stop function is not available.
- For the connection to terminal 1, use a screwdriver with a diameter of 4 mm or less. To avoid contact with the front cover fixing area, put the screwdriver upright relative to the terminal screw surface.
- Not compatible with the FR-A800-E or FR-F800-E.

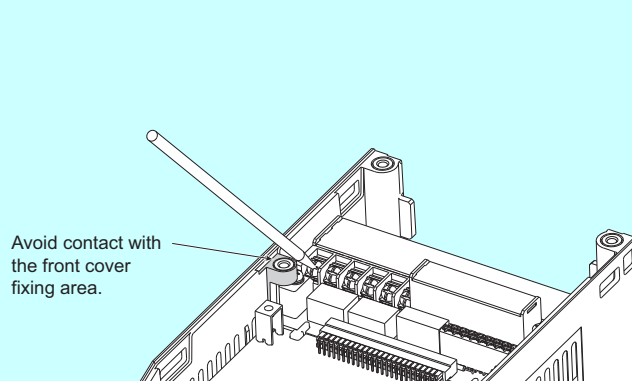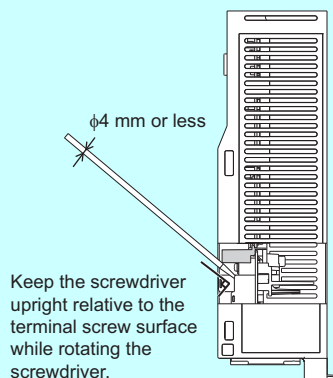

**Screw type terminal block**

FR-E8TE7 E800

This option has the screw type terminal block.


This option is useful for the replacement of the FR-E700 (standard control circuit terminal model) with the FR-E800.

As the removable FR-E8TE7 can be easily attached to replace the inverter's standard control circuit terminal block, it can be used immediately after the purchase of the inverter.

**Control terminal specifications**


| Terminal symbol              | Common         | Terminal name                                      | Rated specification  |
|------------------------------|----------------|--|--|
| Frequency setting            | 10             | Power supply for a frequency setting potentiometer | 5 ±0.5 VDC<br>Permissible load current: 10 mA  |
|                              | 2              | Frequency setting (voltage)                        | Input resistance: 10 to 11 kΩ<br>Maximum permissible voltage: 20 VDC   |
|                              | 4              | Frequency setting (current)                        | For current input, Input resistance: 245 ±5 Ω<br>For voltage input, Input resistance: 10 to 11 kΩ<br>Maximum permissible voltage: 20 VDC |
| Input signal (contact input) | STF*2          | SD (sink (negative common))                        | Forward rotation start   |
|                              | STR*2          | PC (source (positive common))                      | Reverse rotation start   |
|                              | RH, RM, RL*2   | SE   | Multi-speed selection  |
|                              | MRS*2          |  | Output stop  |
|                              | RES*2          |  | Reset  |
|                              |                |  |  |
| Output signal                | Relay          | A, B, C<br>*3*4                                    | Relay output (fault output)  |
|                              | Open collector | RUN*3  | Inverter running   |
|                              |                | FU*3   | Frequency detection  |
| Pulse                        | FM             | SD   | For meter  |
|                              |                |  | Permissible load current: 1 mA<br>1440 pulses/s at 60 Hz   |
| Communication                | RS-485         |  | PU connector   |

**Terminal layout**

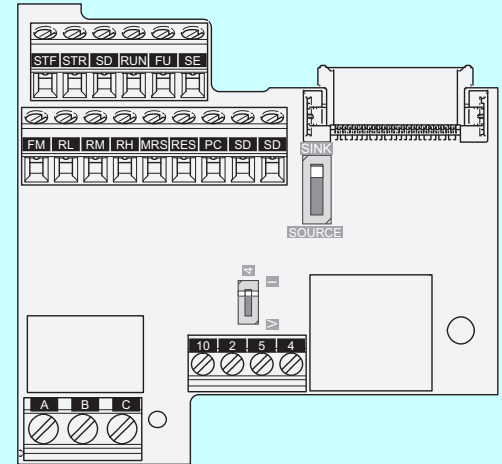

- \*1 For details of Pr.73, Pr.267, refer to the FR-E800 Instruction Manual (Function).
- \*2 Terminal functions can be selected using Pr.178 to Pr.184 (Input terminal function selection). (Refer to the FR-E800 Instruction Manual (Function).)
- \*3 Terminal functions can be selected using Pr.190 to Pr.192 (Output terminal function selection). (Refer to the FR-E800 Instruction Manual (Function).)
- \*4 To comply with the Low Voltage Directive (conforming standard EN 61800-5-1) and UL or cUL standards (conforming standard UL 61800-5-1), the operating capacity of the relay outputs (terminal symbols A, B, and C) should be 30 VDC, 0.3 A. (Relay output has basic isolation from the inverter internal circuit.)

**Connection diagram (sink logic)**

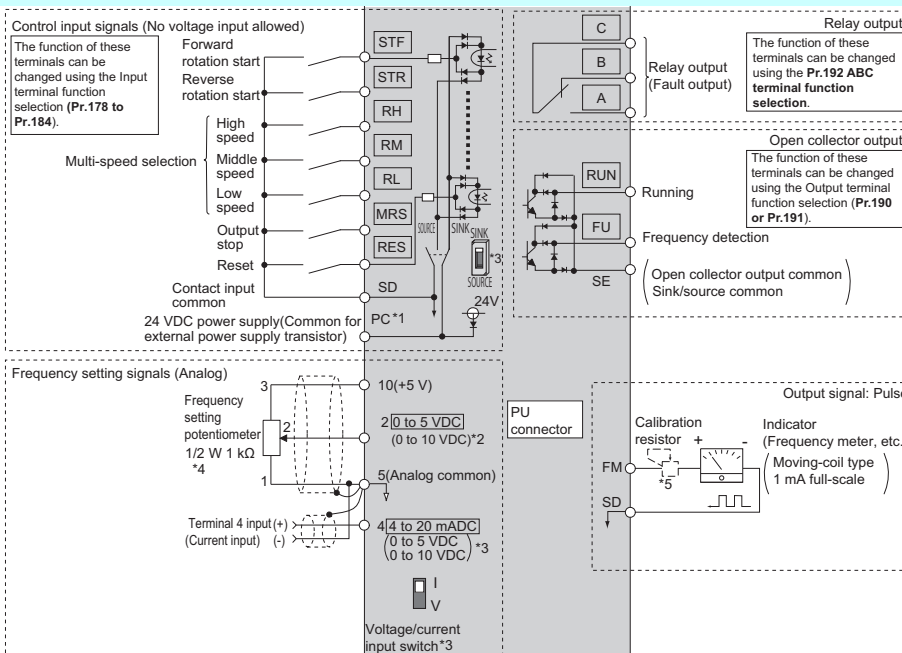

- \*1 To use terminals PC and SD for a 24 VDC power supply, check the wiring to avoid short circuit between these terminals.
- \*2 Terminal input specifications can be changed by analog input specification switchover (Pr.73). This terminal is used for voltage input only.
- \*3 Terminal input specifications can be changed by analog input specification switchover (Pr.267). To select voltage input (0 to 5 V / 0 to 10 V), set the voltage/current input switch to the "V" position. To select current input (4 to 20 mA), set the voltage/current input switch to the "I" position (initial setting). To use terminal 4 (current input at initial setting), assign "4" to any parameter from Pr.178 to Pr.184 (Input terminal function selection) before turning ON the AU signal.
- \*4 It is recommended to use 2 W 1 kΩ when the frequency setting signal is changed frequently.
- \*5 Not required when calibrating the scale with the operation panel.

# Control terminal option

## Control circuit terminal block with 12V encoder power supply FR-A7PS A701


Use the option in exchange with standard control circuit terminals. This option enables the inverter to supply the 12 V power source for the encoder.

### ●Specifications

| Terminal Symbol | Common | Terminal Name                                 | Rated Specifications                                  |
|-----------------|--------|---|---|
| PG12            | SD     | Encoder power supply terminal (Positive side) | 12 VDC±10%<br>Permissible maximum load current 150 mA |

The control circuit terminal specifications not shown above are the same as the specifications of the standard terminal block.


### ●Terminal layout

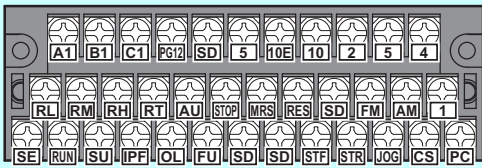

### ●Main differences and compatibilities with the standard terminal block

| Standard Terminal Block                                       | FR-A7PS  |
|---|--|
| Without 12 VDC power supply for encoder                       | With 12 VDC power supply for encoder             |
| Two relay contact terminals (terminal A1, B1, C1, A2, B2, C2) | One relay contact terminal (terminal A1, B1, C1) |
| <b>Pr. 196 ABC2 terminal function selection</b>               | The Pr. 196 setting is invalid.                  |
| One terminal 5  | Two terminal 5                                   |

### ●Wiring example of FR-A7AP (Sink logic)

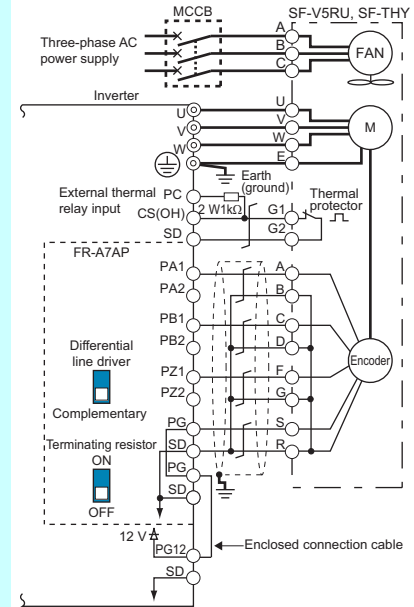

RS-485 2-port terminal block

FR-E8TR E800

FR-E7TR E700

Use the option in exchange with standard control circuit terminals. (This option cannot be used simultaneously with the operation panel (FR-PA07) or parameter unit (FR-PU07).) This terminal block enables RS-485 communication. Multi-drop connection can be easily performed with separate input and output terminals.


<<FR-E8TR>>

●Control terminal specifications


| Terminal symbol              | Common   | Terminal name     | Rated specification  |  |
|------------------------------|--|-------------------|--|--|
| RS-485 communication         | —  | SDA (2 terminals) | Inverter send +  |  |
|                              |  | SDB (2 terminals) | Inverter send -  |  |
|                              |  | RDA (2 terminals) | Inverter receive +   |  |
|                              |  | RDB (2 terminals) | Inverter receive -   |  |
| Frequency setting            | SG   | 10                | Power supply for a frequency setting potentiometer<br>5 ±0.5 VDC<br>Permissible load current: 10 mA  |  |
|                              |  | 2                 | Frequency setting (voltage) / common terminal<br>Input resistance: 10 to 11 kΩ<br>Maximum permissible voltage: 20 VDC<br>When selecting SG: Common terminal  |  |
|                              |  | 4                 | Frequency setting (current)<br>For current input, Input resistance 245 ±5 Ω<br>Permissible maximum current: 30 mA<br>For voltage input, Input resistance: 10 to 11 kΩ<br>Maximum permissible voltage: 20 VDC |  |
| Input signal (contact input) | SD (sink (negative common))<br>PC (source (positive common)) | STF*2             | Forward rotation start   |  |
|                              |  | STR*2             | Reverse rotation start   |  |
|                              |  | RH, RM, RL*2      | Multi-speed selection  |  |
|                              |  | MRS*2             | Output stop  |  |
|                              |  | RES*2             | Reset  |  |
|                              |  |                   |  | Input resistance: 4.7 kΩ<br>Voltage when contacts are open: 21 to 26 VDC<br>Current when contacts are short-circuited: 4 to 6 mADC       |
| Output signal                | A, B, C<br>*3*4  | Relay             | Relay output (fault output)<br>Contact capacity: 230 VAC<br>0.3 A (power factor = 0.4)<br>30 VDC 0.3 A   |  |
|                              |  | Open collector    | RUN*3<br>FU*3<br>SE  | Inverter running<br>Permissible load: 24 VDC (27 VDC at maximum)<br>0.1 A (The voltage drop is 3.4 V at maximum while the signal is ON.) |
|                              |  | Pulse             | FM<br>SD   | For meter<br>Permissible load current: 1 mA 1440 pulses/s at 60 Hz   |

- \*1 For details of Pr.73, Pr.267, refer to the FR-E800 Instruction Manual (Function).
- \*2 Terminal functions can be selected using Pr.178 to Pr.184 (Input terminal function selection). (Refer to the FR-E800 Instruction Manual (Function).)
- \*3 Terminal functions can be selected using Pr.190 to Pr.192 (Output terminal function selection). (Refer to the FR-E800 Instruction Manual (Function).)
- \*4 To comply with the Low Voltage Directive (conforming standard EN 61800-5-1) and UL or cUL standards (conforming standard UL 61800-5-1), the operating capacity of the relay outputs (terminal symbols A, B, and C) should be 30 VDC, 0.3 A. (Relay output has basic isolation from the inverter internal circuit.)

●Terminal layout

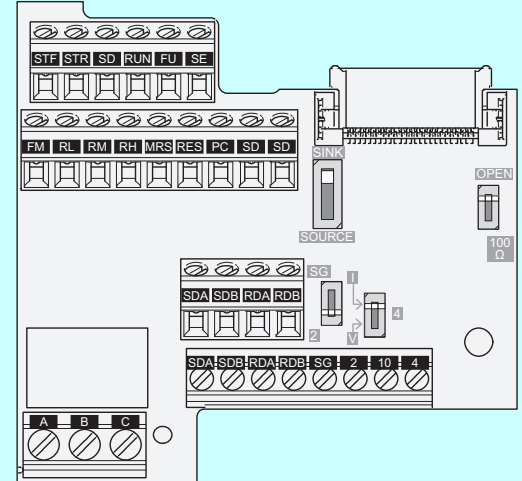

●Connection diagram (sink logic)

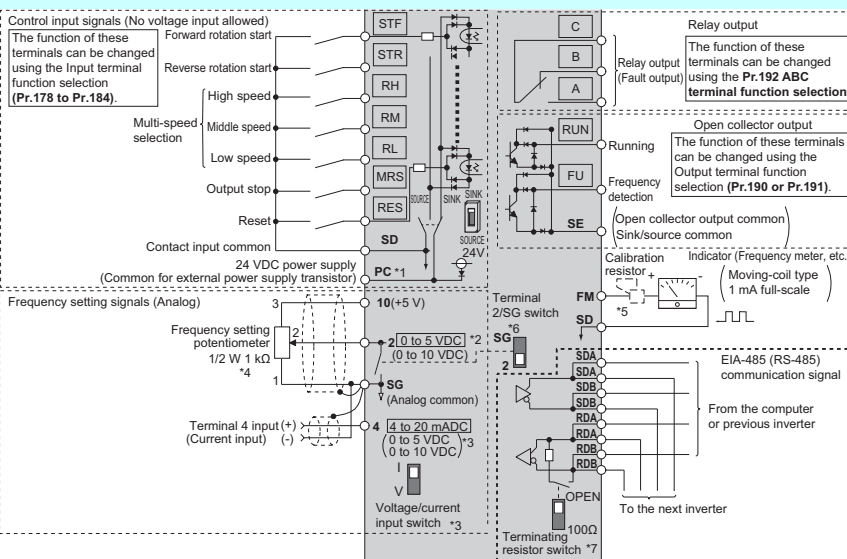

- \*1 To use terminals PC and SD for a 24 VDC power supply, check the wiring to avoid short circuit between these terminals.
- \*2 Terminal input specifications can be changed by analog input specification switchover (Pr.73). This terminal is used for voltage input only.
- \*3 Terminal input specifications can be changed by analog input specification switchover (Pr.267). To select voltage input (0 to 5 V / 0 to 10 V), set the voltage/current input switch to the "V" position. To select current input (4 to 20 mA), set the voltage/current input switch to the "I" position (initial setting). To use terminal 4 (current input at initial setting), assign "4" to any parameter from Pr.178 to Pr.184 (Input terminal function selection) before turning ON the AU signal.
- \*4 It is recommended to use 2 W 1 kΩ when the frequency setting signal is changed frequently.
- \*5 Not required when calibrating the scale with the operation panel.
- \*6 Set the switch to the SG position to pass a shielded wire across terminal SG.
- \*7 Set only the terminating resistor switch of the remotest inverter to the "100 Ω" position.


# Control terminal option

<<FR-E7TR>>


## ●Control terminal specifications

| Terminal Symbol               | Common  | Terminal Name                               | Rated Specifications   |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
|-------------------------------|---|---|--|--|-------------|------------------------|--|---------------------|------------------|-------------------------------|------------------|---------------------|---------------------------|----------------------|--------------------|----------------------|---|
| RS-485 communication          | —   | Inverter send+                              | <table border="1"> <thead> <tr> <th>Item</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Communication protocol</td> <td>Mitsubishi inverter protocol (computer link communication), MODBUS<sup>®</sup>RTU protocol</td> </tr> <tr> <td>Conforming standard</td> <td>EIA-485 (RS-485)</td> </tr> <tr> <td>Number of connectable devices</td> <td>32 units maximum</td> </tr> <tr> <td>Communication speed</td> <td>4800/9600/19200/38400 bps</td> </tr> <tr> <td>Communication method</td> <td>Half-duplex system</td> </tr> <tr> <td>Terminating resistor</td> <td>100 Ω (valid/invalid can be changed with a terminating resistor switch)</td> </tr> </tbody> </table> | Item   | Description | Communication protocol | Mitsubishi inverter protocol (computer link communication), MODBUS <sup>®</sup> RTU protocol | Conforming standard | EIA-485 (RS-485) | Number of connectable devices | 32 units maximum | Communication speed | 4800/9600/19200/38400 bps | Communication method | Half-duplex system | Terminating resistor | 100 Ω (valid/invalid can be changed with a terminating resistor switch) |
|                               |   | Item  |  | Description  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
|                               |   | Communication protocol                      |  | Mitsubishi inverter protocol (computer link communication), MODBUS <sup>®</sup> RTU protocol |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
|                               |   | Conforming standard                         |  | EIA-485 (RS-485)   |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
| Number of connectable devices | 32 units maximum  |   |  |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
| Communication speed           | 4800/9600/19200/38400 bps   |   |  |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
| Communication method          | Half-duplex system  |   |  |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
| Terminating resistor          | 100 Ω (valid/invalid can be changed with a terminating resistor switch) |   |  |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
| SDA (2 terminals)             | Inverter send-  |   |  |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
| SDB (2 terminals)             | Inverter receive+   |   |  |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
| RDA (2 terminals)             | Inverter receive-   |   |  |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
| RDB (2 terminals)             |   |   |  |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
| Frequency setting             | SG  | Frequency setting power supply              | 5.2 VDC±0.2 V<br>Permissible load current 10 mA  |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
|                               |   | Frequency setting (voltage)/Common terminal | When voltage is input: input resistance 10 kΩ±1 kΩ<br>Permissible maximum load voltage 20 VDC<br>When selected with SG: common terminal  |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |
|                               |   | Frequency setting (current)                 | When current is input: input resistance 233 Ω±5 Ω<br>Permissible load current 30 mA<br>When voltage is input: input resistance 10 kΩ±1 kΩ<br>Permissible maximum load voltage 20 VDC   |  |             |                        |  |                     |                  |                               |                  |                     |                           |                      |                    |                      |   |

## ●Terminal connection diagram

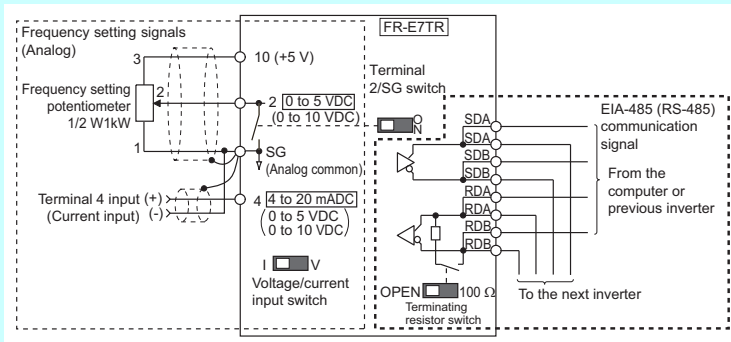

## ●Terminal layout

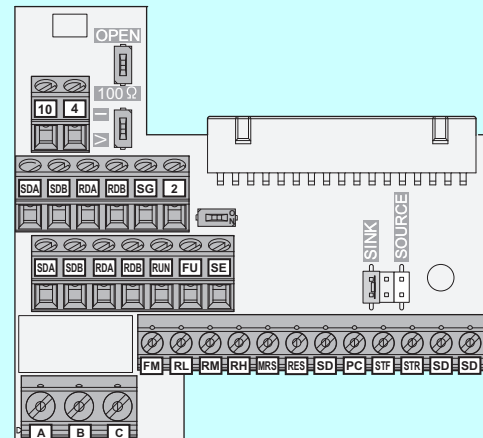

# Dedicated cable option

## Encoder cable

FR-V7CBL□□ (A800) (A800 Plus) (E800) (A701)

FR-JCBL□□ (A800) (A800 Plus) (E800) (A701)



Dedicated cable for connecting encoder signal from the motor to the inverter.

### ●Outline dimension drawings, connection diagram

<<FR-V7CBL□□>>

Motor: SF-PR-SC\*1/SF-V5RU

Option: FR-A8AP/FR-A8AL/FR-A8TP/FR-A7AP/FR-A7AL

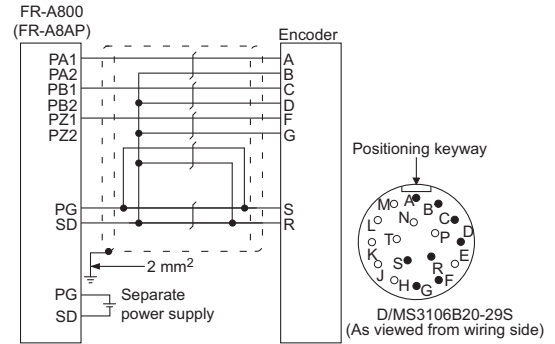
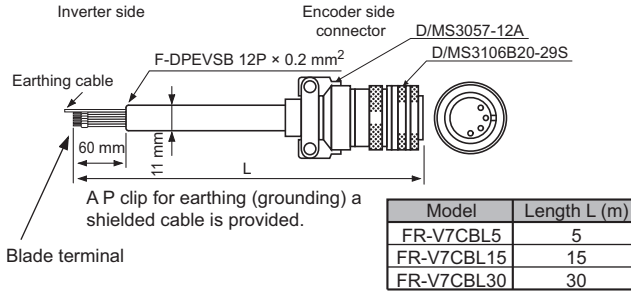


\*1 When using the SF-PR(F)O-SC and the SF-PRP-SC, use the FR-B4CBL. As the FR-B4CBL is not outdoor type or dustproof/waterproof type cable, use a conduit for wiring.

<<FR-JCBL□□>>

Motor: SF-JR with encoder

Option: FR-A8AP/FR-A8AL/FR-A8TP/FR-A7AP/FR-A7AL

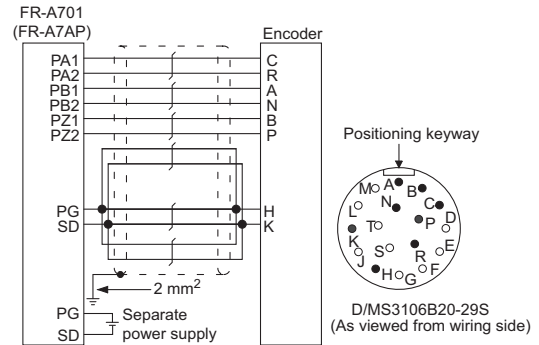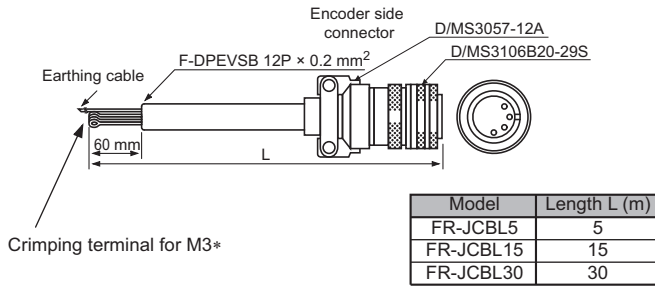

\* Change to blade terminal when used with the FR-A8AP/FR-A8AL/FR-A8TP/FR-A7AP/FR-A7AL.

# Dedicated cable option

## SSCNET III cable

MR-J3BUS[M(-A, -B) A800 A800 Plus A701

Dedicated cables are available for SSCNET III(H) connection. The cables can be used for the inverter with the following plug-in options.

800 series: FR-A8NS

700 series: FR-A7NS

### ●Specifications

| Model*1              |                               | MR-J3BUS[M   |          | MR-J3BUS[M-A   |  | MR-J3BUS[M-B   |  |
|----------------------|-------------------------------|--|----------|--|--|--|--|
| Applications         |                               | Standard code for enclosure  |          | Standard cable for outside enclosure                       |  | Long distance cable  |  |
| Flexing life         |                               | Standard   |          | Standard   |  | High flexion   |  |
| Length (m)           |                               | 0.15   | 0.3 to 3 | 5 to 20  |  | 30 to 50   |  |
| Optical cable (code) | Minimum bending radius (mm)*2 | 25   |          | Reinforced sheath portion of cable: 50<br>Code section: 25 |  | Reinforced sheath portion of cable: 50<br>Code section: 30 |  |
|                      | Tension strength              | 70 N   | 140 N    | 420 N<br>(Reinforced sheath portion of cable)              |  | 980 N<br>(Reinforced sheath portion of cable)              |  |
|                      | Operating temperature range*3 | -40 to 80 °C   |          |  |  | -20 to 70 °C   |  |
|                      | Atmosphere                    | Indoor (avoid direct sunlight)<br>No medium nor oil should be attached |          |  |  |  |  |
| Appearance (mm)      |                               |  |          |  |  |  |  |

\*1 [ ] of model indicates the cable length.


| Symbol     | 015  | 03  | 05  | 1 | 3 | 5 | 10 | 20 | 30 | 40 | 50 |
|------------|------|-----|-----|---|---|---|----|----|----|----|----|
| Length (m) | 0.15 | 0.3 | 0.5 | 1 | 3 | 5 | 10 | 20 | 30 | 40 | 50 |

\*2 Make sure to lay the cable with greater radius than the minimum bend radius. Do not press the cable to edges of equipment or others.


\*3 This operating temperature range is the value for optical cable (code) only. The temperature conditions of the connector section is the same as the inverter.

### ●Outline dimension drawings

#### <<MR-J3BUS015M>>

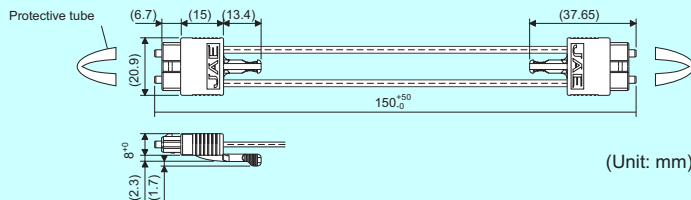


#### <<MR-J3BUS03M to MR-J3BUS3M>>

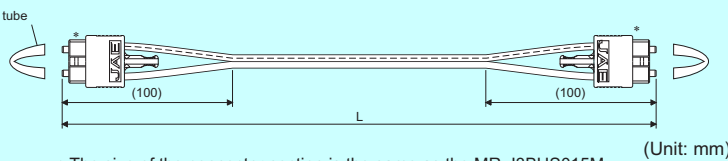

\* The size of the connector section is the same as the MR-J3BUS015M.

| Cable Model  | MR-J3BUS03M | MR-J3BUS05M | MR-J3BUS1M | MR-J3BUS3M |
|--------------|-------------|-------------|------------|------------|
| Length L (m) | 0.3         | 0.5         | 1          | 3          |

#### <<MR-J3BUS5M-A to MR-J3BUS20M-A, MR-J3BUS30M-B to MR-J3BUS50M-B>>

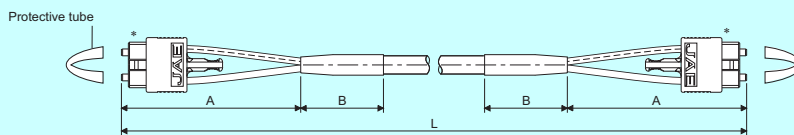

\* The size of the connector section is the same as the MR-J3BUS015M.

| Cable Model   | MR-J3BUS5M-A | MR-J3BUS10M-A | MR-J3BUS20M-A | MR-J3BUS30M-B | MR-J3BUS40M-B | MR-J3BUS50M-B |
|---------------|--------------|---------------|---------------|---------------|---------------|---------------|
| Length A (mm) | 100          |               |               | 150           |               |               |
| Length B (mm) | 30           |               |               | 50            |               |               |
| Length L (m)  | 5            | 10            | 20            | 30            | 40            | 50            |



# Operation panel option

## LCD operation panel

FR-LU08(-01) A800 A800 Plus F800 E800

The option is not compatible with the FR-E800-E, FR-E800-SCE and FR-E806.

The LCD operation panel is capable of displaying text and menus.

### ●Features

- Replacement with the operation panel (FR-DU08) and installation on the enclosure surface using a connection cable (FR-CB2) are possible. (To connect the FR-LU08, an optional operation panel connection connector (FR-ADP) is required.)
- Parameter settings for up to three inverters can be stored.  
(For the FR-E800 series, parameter settings of one inverter can be stored.)
- When the FR-LU08 is connected to the inverter, the internal clock of the inverter can be synchronized with the clock of FR-LU08. (Real time clock function)  
With a battery (CR1216), the FR-LU08 time count continues even if the main power of the inverter is turned OFF. (The time count of the inverter internal clock does not continue when the inverter power is turned OFF.)
- The FR-LU08-01 meets the IP55 rating (except for the PU connector).



FR-LU08

## Parameter unit

FR-PU07 ALL

The option is not compatible with the FR-E800-E, FR-E800-SCE and FR-E806.

Interactive parameter unit with LCD display.

### ●Features

- Remove an operation panel to connect a parameter unit.
- Setting functionality such as direct input method with a numeric keypad, operation status indication, and help function are usable.
- Eight languages can be displayed.
- The FR-PU07 can store parameter settings of up to three inverters.  
(For the FR-A800, FR-A800 Plus, FR-F800, and FR-E800 series, parameter settings of one inverter can be stored.)



FR-PU07

## Parameter unit with battery pack FR-PU07BB(-L) A800 A800 Plus F800 E800 A701 E700

The option is not compatible with the FR-E800-E, FR-E800-SCE and FR-E806.

This parameter unit enables parameter setting without connecting the inverter to power supply.

Uses 4 × AA batteries. Can also be powered by an external 100 VAC power supply.

### ●Specifications

| Item                | Description   |                   |                    |                   |  |                    |                    |                              |                    |
|---------------------|---|-------------------|--------------------|-------------------|--|--------------------|--------------------|------------------------------|--------------------|
| Power supply        | • When driven by batteries  |                   |                    |                   | AA batteries four<br>(nickel hydride(NiMH)/alkali)       |                    |                    |                              |                    |
|                     | • When driven by external power supply<br>(100 VAC)   |                   |                    |                   | AC adaptor *1  |                    |                    |                              |                    |
|                     | • When power is applied to the inverter   |                   |                    |                   | Power is supplied from the PU connector of the inverter. |                    |                    |                              |                    |
| Battery life *2     |   |                   |                    |                   | Alkaline battery   |                    |                    | Nickel metal hydride battery |                    |
|                     |   | A800/<br>F800     | E800               | A701              | E700   | A800/<br>F800      | E800               | A701                         | E700               |
|                     | Battery life  | Approx.<br>90 min | Approx.<br>260 min | Approx.<br>90 min | Approx.<br>260 min                                       | Approx.<br>120 min | Approx.<br>340 min | Approx.<br>120 min           | Approx.<br>340 min |
|                     | Battery exhaustion warning lamp color changing start time<br>From green to orange<br>(at lowering of battery power) |                   |                    |                   | Approx. 10 min before                                    |                    |                    | Approx. 10 min before        |                    |
| Switch / connector  | Battery ON/OFF switch<br>Modular connector for inverter connection and connector for AC adaptor connection          |                   |                    |                   |  |                    |                    |                              |                    |
| Display functions   | Alarm LED for battery exhaustion, Other display is the same as the FR-PU07.   |                   |                    |                   |  |                    |                    |                              |                    |
| Provided appliances | AA alkali battery (for operation check) four *3   |                   |                    |                   | Connection cable (FR-CB203) one                          |                    |                    |                              |                    |



FR-PU07BB(-L)

\*1 Use an AC adapter with the following specifications.

| Output specifications | Rated voltage | 5.0 VDC±5% or less           |
|-----------------------|---------------|------------------------------|
|                       | Rated current | 2 A or more                  |
|                       | Polarity      | Plus polarity in the center. |
|                       | Plug          | JEITA RC-5320A compliant     |

\*2 The battery life is a reference value. It differs depending on the battery and the usage.

\*3 Batteries are not included in FR-PU07BB-L.

## Operation panel option

### Operation panel connection connector Enclosure surface operation panel



FR-ADP (A800) (A800 Plus) (F800) (A701)  
FR-PA07 (E800) (E700) (F700PJ) (D700)

The option is not compatible with the FR-E800-E, FR-E800-SCE and FR-E806.

**FR-ADP** Use this connector to mount an operation panel, which is detached from a 800 series or FR-A701 series inverter, to an enclosure surface.

**FR-PA07** This operation panel can be mounted to an enclosure surface to enable inverter operation and monitoring of frequency, etc. (This product does not have the parameter copy function.)

#### ●Appearance diagram

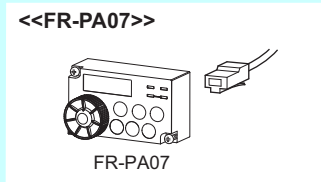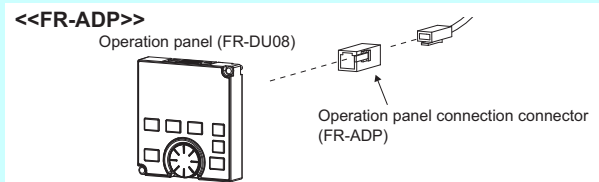

### Parameter unit connection cable

FR-CB20□ (ALL)

The option is not compatible with the FR-E800-E, FR-E800-SCE and FR-E806.

This cable is for connection of operation panel or parameter unit.

#### ●Specifications

| Model    | Length |
|----------|--------|
| FR-CB201 | 1 m    |
| FR-CB203 | 3 m    |
| FR-CB205 | 5 m    |

# Software

## FR Configurator2

SW1DND-FRC2 (A800) (A800 Plus) (F800) (E800) (E700)

This product contains FR-SW3-SETUP-WE and FR-SW1-SETUP-WE software.

From inverter startup to maintenance, this versatile software allows the user to specify settings easily at the computer.

### <<SW1DND-FRC2>>

The connection with a personal computer can be easily established with a USB cable.

By loading trace data and parameter settings copied to a USB memory device into FR Configurator2, analysis and adjustments can be carried out with ease away from the equipment.

Connected inverters are displayed in tree view format. Windows for each function can be accessed by changing the tab for maximum efficiency.


The Developer function is used for creating sequence programs and writing them to the inverter to enable the use of the PLC function of the inverter.

### ●Specifications (compatible operating systems)

Windows® 11 (Home, Pro, Enterprise), Windows® 10 (Home, Pro, Enterprise, IoT Enterprise (64-bit))

### ●Function

- System settings (available in the free trial version)
- Test operation (available in the free trial version)
- Conversion function (available in the free trial version)
- Ethernet parameter setting (available in the free trial version)
- Parameter list (available in the free trial version)
- USB memory parameter copy file edit
- Batch monitor function
- Offline auto tuning
- Diagnosis (fault history) (available in the free trial version)
- AI fault diagnosis
- Help (available in the free trial version)
- Graph function
- Service life check (available in the free trial version)
- Developer function
- Firmware Update Tool (available in the free trial version)

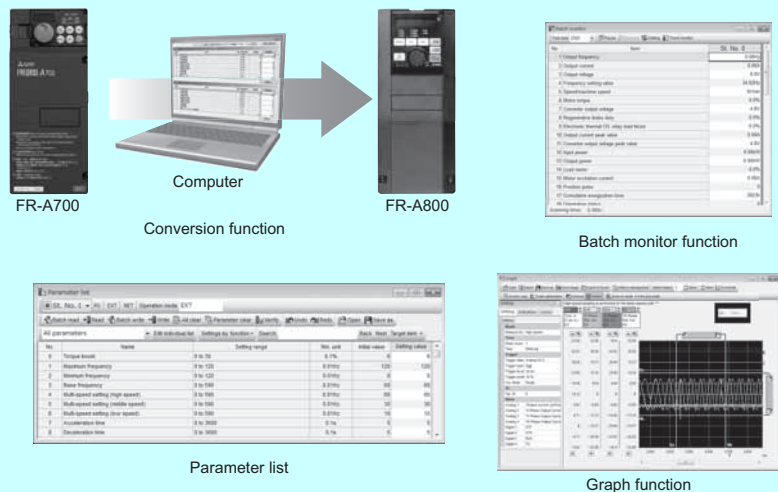

The free trial version with limited functions can be downloaded at Mitsubishi Electric FA Global Website.

| Function           | Free trial version |
|--------------------|--------------------|
| Parameter list     | ○                  |
| Diagnosis          | ○                  |
| AI fault diagnosis | ×                  |
| Graph              | ×                  |
| Batch monitor      | ×                  |
| Test operation     | ○                  |
| Convert            | ○                  |
| Developer          | ×                  |

| Function                            | Free trial version |
|-------------------------------------|--------------------|
| USB memory parameter copy file edit | ×                  |
| Ethernet parameter setting          | ○                  |
| iQSS backup file conversion         | ○                  |
| Firmware Update Tool                | ○                  |
| Help                                | ○                  |

A full functional trial version, which has the same functionality as the release version, is also offered for a limited period of 30 days.

## Software

### <<FR-SW3-SETUP-WE>>

It is connected to the inverter through RS-485 communication. The FR-A701 and E700 series inverters can be easily connected to the personal computer with USB cable.

Use FR-SW3-SETUP-WE (CC-Link seamless) to facilitate setups via CC-Link communication.

#### ●Specifications

| Type                | FR-SW3-SETUP-WJ   | FR-SW3-SETUP-WJ (CC-Link seamless) |
|---------------------|---|------------------------------------|
| Supported inverters | FR-A701, FR-E700 *1, FR-F700PJ, FR-D700   | FR-A701, FR-E700 *1                |
| Supported OS        | Windows® 10, Windows® 8.1, Windows® 8.1 (Pro, Enterprise), Windows® 8, Windows® 7 (32-bit, 64-bit), Windows Vista® SP1 or more (32-bit) |                                    |

\*1 Excluding the FR-E700-NF and FR-E700-NE.

#### ●Function

- Parameter read, write
- Inverter operating status monitor
- Test operation
- High speed graph function with minimum of 1 ms sampling (only in case of USB cable connection \*2)
- Easy setup function
- Convert function which automatically converts parameters of the conventional series inverters to the 700 series inverters \*2
- I/O terminal function assignment function \*2
- Life check function

\*2 Not supported by FR-SW3-SETUP-WE (CC-Link seamless).

## FR Configurator Mobile

A800 A800 Plus F800 E800


Wireless access with inverters from a remote location enables setting or changing of parameters, starting and stopping, and monitoring on the screen of mobile devices.

Users can easily monitor the inverter operation by checking data such as the running frequency and status of input and output terminals at a glance in one screen.

Wireless communication equipment must be prepared in the system that includes the inverter.

#### ●Compatible inverters

FR-A800-E, FR-F800-E, FR-E800-E, FR-E800-SCE

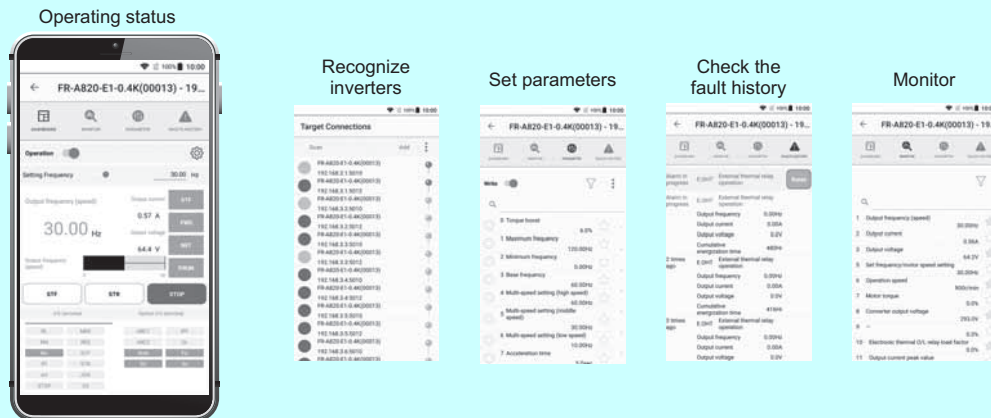

## USB cable



MR-J3USBCBL3M A800 A800 Plus F800 E800 E700

USB cable for communication with the inverter using the USB port of the PC.

(Since a USB connector for the FR-A701 series inverter is B connector, this cable cannot be used.)

#### ●Appearance diagram

<<MR-J3USBCBL3M>>

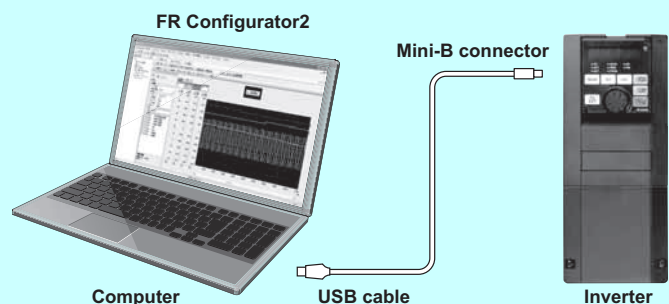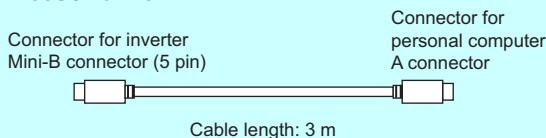

# Reactor


## AC reactor

FR-HAL (A800) (A800 Plus) (F800) (E800) (E700) (F700PJ) (D700)

An AC reactor connected on the input side of the inverter improves power factor and reduces harmonic currents on the input side.

### ●Specifications

| Model FR-HAL-□□                   | 200 V  | 400 V   |
|-----------------------------------|--|---|
|                                   | 0.4K to 110K*1   | H0.4K to H560K*1  |
| Power factor improvement effect*2 | Power factor at power supply: About 88% (92.3%*3) with 100% load   |   |
| Vibration                         | 5.9 m/s <sup>2</sup> or less<br>10 to 55 Hz (directions of X, Y, Z axes)   | H110K or lower: 5.9 m/s <sup>2</sup> or less<br>H185K or higher: 2.9 m/s <sup>2</sup> or less<br>10 to 55 Hz (directions of X, Y, Z axes) |
| Installation procedure            | (H)55K or lower: horizontal plane installation or vertical plane installation<br>(H)75K or higher: horizontal plane installation |   |

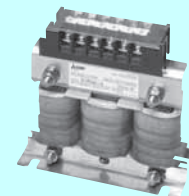


FR-HAL

- \*1 Refer to the model in the table of outline dimension drawing for details of capacity.
- \*2 Power factor stated above is the value when considering the power supply impedance is 1%. The value changes according to the power supply capacity and power supply impedance. The load is considered as 100% when the fundamental current value specified in JEM-TR201 is 100%. The power factor improving effect is slightly lower when the motor below 0.4 kW is used.
- \*3 Improved power factor is about 88%. (It is 92.3% when calculated by applying 1 power factor to the reference waveform according to the Architectural Standard Specifications (Electrical Installation) (2013 revisions) supervised by the Ministry of Land, Infrastructure, Transport and Tourism of Japan.)


### ●Selection

- Make selection according to the applicable motor capacity. (When the inverter capacity is larger than the motor capacity, make selection according to the motor capacity.)
- When the inverter is connected under a large-capacity power transformer (1000 kVA or more transformer) or when a power capacitor is to be switched over, an excessive peak current may flow in the power input circuit, damaging the inverter. Be sure to install an AC reactor in such a case.

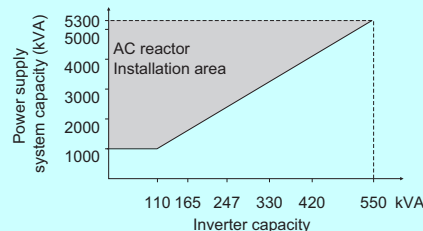


<Selection of reactor when using the large-capacity power transformer>

### ●Connection diagram

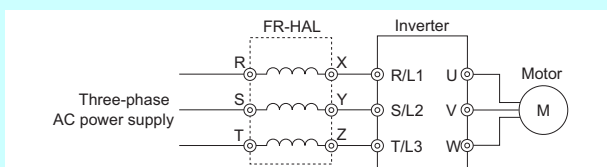

### ●Outline dimension drawings

- The appearance of a typical model. The shape differs according to each model.
- W1 and D1 indicate distances between installation holes. The installation hole size is indicated by d.
- Keep enough clearance around the reactor because it heats up. (Keep a clearance of minimum 10cm each on top and bottom and minimum 5cm each on right and left regardless of the installation orientation.)

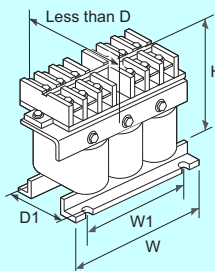

(Unit: mm)

| Model | W     | W1  | H   | D   | D1  | d   | Mass (kg) | Model | W     | W1     | H   | D   | D1  | d    | Mass (kg) |    |      |
|-------|-------|-----|-----|-----|-----|-----|-----------|-------|-------|--------|-----|-----|-----|------|-----------|----|------|
|       |       |     |     |     |     |     |           |       |       |        |     |     |     |      |           |    |      |
| 200 V | 0.4K  | 104 | 84  | 99  | 72  | 40  | M5        | 0.6   | 400 V | H0.4K  | 135 | 120 | 115 | 59.6 | 45        | M4 | 1.5  |
|       | 0.75K | 104 | 84  | 99  | 74  | 44  | M5        | 0.8   |       | H0.75K | 135 | 120 | 115 | 59.6 | 45        | M4 | 1.5  |
|       | 1.5K  | 104 | 84  | 99  | 77  | 50  | M5        | 1.1   |       | H1.5K  | 135 | 120 | 115 | 59.6 | 45        | M4 | 1.5  |
|       | 2.2K  | 115 | 40  | 115 | 77  | 57  | M6        | 1.5   |       | H2.2K  | 135 | 120 | 115 | 59.6 | 45        | M4 | 1.5  |
|       | 3.7K  | 115 | 40  | 115 | 83  | 67  | M6        | 2.2   |       | H3.7K  | 135 | 120 | 115 | 70.6 | 57        | M4 | 2.5  |
|       | 5.5K  | 115 | 40  | 115 | 83  | 67  | M6        | 2.3   |       | H5.5K  | 160 | 145 | 150 | 72   | 55        | M4 | 3.5  |
|       | 7.5K  | 130 | 50  | 135 | 100 | 86  | M6        | 4.2   |       | H7.5K  | 160 | 145 | 150 | 91   | 75        | M4 | 5.0  |
|       | 11K   | 160 | 75  | 164 | 111 | 92  | M6        | 5.2   |       | H11K   | 160 | 145 | 146 | 91   | 75        | M4 | 6.0  |
|       | 15K   | 160 | 75  | 167 | 126 | 107 | M6        | 7.0   |       | H15K   | 220 | 200 | 195 | 105  | 70        | M5 | 9.0  |
|       | 18.5K | 160 | 75  | 128 | 175 | 107 | M6        | 7.1   |       | H18.5K | 220 | 200 | 212 | 155  | 70        | M5 | 9.0  |
|       | 22K   | 185 | 75  | 150 | 158 | 87  | M6        | 9.0   |       | H22K   | 220 | 200 | 212 | 155  | 70        | M5 | 9.5  |
|       | 30K   | 185 | 75  | 150 | 168 | 87  | M6        | 9.7   |       | H30K   | 220 | 200 | 212 | 153  | 75        | M5 | 11   |
|       | 37K   | 210 | 75  | 175 | 174 | 82  | M6        | 12.9  |       | H37K   | 220 | 200 | 211 | 160  | 100       | M5 | 12.5 |
|       | 45K   | 210 | 75  | 175 | 191 | 97  | M6        | 16.4  |       | H45K   | 280 | 255 | 242 | 165  | 80        | M6 | 15   |
| 55K   | 210   | 75  | 175 | 201 | 97  | M6  | 17.4      | H55K  | 280   | 255    | 242 | 170 | 90  | M6   | 18        |    |      |
| 75K   | 240   | 150 | 210 | 213 | 109 | M8  | 23        | H75K  | 205   | 75     | 170 | 208 | 105 | M6   | 20        |    |      |
| 110K  | 330   | 170 | 325 | 258 | 127 | M10 | 40        | H110K | 240   | 150    | 225 | 220 | 99  | M8   | 28        |    |      |
|       |       |     |     |     |     |     |           | H185K | 330   | 170    | 325 | 270 | 142 | M10  | 55        |    |      |
|       |       |     |     |     |     |     |           | H280K | 330   | 170    | 325 | 320 | 192 | M10  | 80        |    |      |
|       |       |     |     |     |     |     |           | H355K | 330   | 170    | 325 | 340 | 192 | M10  | 80        |    |      |
|       |       |     |     |     |     |     |           | H560K | 450   | 300    | 540 | 635 | 345 | M12  | 190       |    |      |

# Reactor


## DC reactor

FR-HEL (A800) (A800 Plus) (F800) (E800) (E700) (F700PJ) (D700)

A DC reactor connected on the DC side of the inverter improves power factor and reduces harmonic currents on the input side.

### ● Specifications

| Type FR-HEL-□□                    | 200 V  | 400 V            |
|-----------------------------------|--|------------------|
|                                   | 0.4K to 110K*1   | H0.4K to H355K*1 |
| Power factor improvement effect*2 | Power factor at power supply: About 93% (94.4%*3)  |                  |
| Vibration                         | 5.9 m/s <sup>2</sup> or less, 10 to 55 Hz (directions of X, Y, Z axes)   |                  |
| Installation procedure            | (H) 55K or lower: Horizontal installation or vertical installation<br>(H) 75K or higher: Horizontal installation |                  |

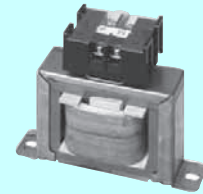

FR-HEL


- \*1 Refer to the type in the table of outline dimension drawing for details of capacity.
- \*2 Power factor stated above is the value when considering the power supply impedance is 1%. The value changes according to the power supply capacity and power supply impedance. The load is considered as 100% when the fundamental current value specified in JEM-TR201 is 100%. The power factor improving effect is slightly lower when the motor below 0.4kW is used.
- \*3 Improved power factor is about 93%. (It is 94.4% when calculated by applying 1 power factor to the reference waveform according to the Architectural Standard Specifications (Electrical Installation) (2013 revisions) supervised by the Ministry)

### ● Selection

- Make selection according to the applicable motor capacity. (When the inverter capacity is larger than the motor capacity, make selection according to the motor capacity.)
- For the 75K or higher inverters, or whenever a 75kW or higher motor is used, always connect a DC reactor.

### ● Connection diagram


- Connect the reactor to terminal P1 and P of the inverter. Make sure to remove a jumper across terminal P1-P before connecting. (A failure to do so will produce no power factor improving effect.)
- The wiring length between the reactor and inverter should be 5m maximum and minimized.

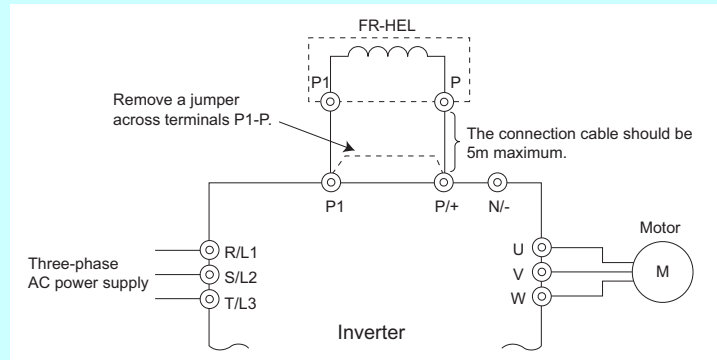


### ● Outline dimension drawings

- The appearance of a typical model. The shape differs according to each model.
- W1 and D1 indicate distances between installation holes. The installation hole size is indicated by d.
- Keep enough clearance around the reactor because it heats up. (Keep a clearance of minimum 10cm each on top and bottom and minimum 5 cm each on right and left regardless of the installation orientation.)


(Unit: mm)

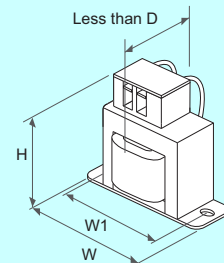

FR-HEL-0.4K to 2.2K  
FR-HEL-H0.4K

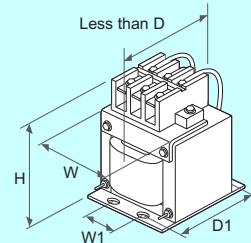

FR-HEL-3.7K to 55K  
FR-HEL-H0.75K to H55K

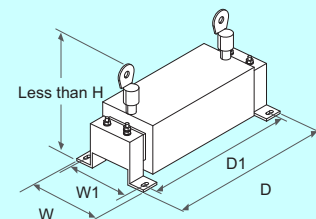

FR-HEL-75K to 110K  
FR-HEL-H75K to H355K

| Model | W   | W1  | H   | D   | D1  | d  | Mass (kg) | Model  | W   | W1  | H   | D   | D1  | d   | Mass (kg) |
|-------|-----|-----|-----|-----|-----|----|-----------|--------|-----|-----|-----|-----|-----|-----|-----------|
| 0.4K  | 70  | 60  | 71  | 61  | —   | M4 | 0.34      | H0.4K  | 90  | 75  | 77  | 60  | —   | M5  | 0.6       |
| 0.75K | 85  | 74  | 81  | 61  | —   | M4 | 0.5       | H0.75K | 66  | 50  | 100 | 70  | 48  | M4  | 0.85      |
| 1.5K  | 85  | 74  | 81  | 70  | —   | M4 | 0.7       | H1.5K  | 66  | 50  | 100 | 80  | 54  | M4  | 1         |
| 2.2K  | 85  | 74  | 81  | 70  | —   | M4 | 0.8       | H2.2K  | 76  | 50  | 110 | 80  | 54  | M4  | 1.3       |
| 3.7K  | 77  | 55  | 92  | 82  | 56  | M4 | 1.4       | H3.7K  | 86  | 55  | 128 | 95  | 69  | M4  | 2.3       |
| 5.5K  | 77  | 55  | 92  | 92  | 66  | M4 | 1.7       | H5.5K  | 96  | 60  | 136 | 100 | 75  | M5  | 3         |
| 7.5K  | 86  | 60  | 122 | 98  | 73  | M4 | 2.3       | H7.5K  | 96  | 60  | 136 | 105 | 80  | M5  | 3.5       |
| 11K   | 105 | 64  | 138 | 112 | 78  | M6 | 3.1       | H11K   | 105 | 75  | 137 | 110 | 85  | M5  | 4.5       |
| 15K   | 105 | 64  | 142 | 115 | 83  | M6 | 3.8       | H15K   | 105 | 75  | 152 | 125 | 95  | M5  | 5         |
| 18.5K | 105 | 64  | 93  | 165 | 93  | M6 | 4.1       | H18.5K | 114 | 75  | 162 | 120 | 80  | M5  | 5         |
| 22K   | 105 | 64  | 93  | 175 | 103 | M6 | 4.8       | H22K   | 133 | 90  | 180 | 120 | 75  | M5  | 6         |
| 30K   | 114 | 72  | 100 | 200 | 100 | M6 | 6.7       | H30K   | 133 | 90  | 180 | 120 | 80  | M5  | 6.5       |
| 37K   | 133 | 86  | 117 | 195 | 97  | M6 | 8.1       | H37K   | 133 | 90  | 184 | 155 | 100 | M5  | 8.5       |
| 45K   | 133 | 86  | 117 | 205 | 107 | M6 | 9.4       | H45K   | 133 | 90  | 184 | 170 | 110 | M5  | 10        |
| 55K   | 153 | 126 | 132 | 209 | 121 | M6 | 11.0      | H55K   | 152 | 105 | 203 | 170 | 106 | M6  | 11.5      |
| 75K   | 150 | 130 | 190 | 340 | 310 | M6 | 17        | H75K   | 140 | 120 | 185 | 320 | 295 | M6  | 16        |
| 90K   | 150 | 130 | 200 | 340 | 310 | M6 | 19        | H90K   | 150 | 130 | 190 | 340 | 310 | M6  | 20        |
| 110K  | 175 | 150 | 200 | 400 | 365 | M8 | 20        | H110K  | 150 | 130 | 195 | 340 | 310 | M6  | 22        |
|       |     |     |     |     |     |    |           | H132K  | 175 | 150 | 200 | 405 | 370 | M8  | 26        |
|       |     |     |     |     |     |    |           | H160K  | 175 | 150 | 205 | 405 | 370 | M8  | 28        |
|       |     |     |     |     |     |    |           | H185K  | 175 | 150 | 240 | 405 | 370 | M8  | 29        |
|       |     |     |     |     |     |    |           | H220K  | 175 | 150 | 240 | 405 | 370 | M8  | 30        |
|       |     |     |     |     |     |    |           | H250K  | 190 | 165 | 250 | 440 | 400 | M8  | 35        |
|       |     |     |     |     |     |    |           | H280K  | 190 | 165 | 255 | 440 | 400 | M8  | 38        |
|       |     |     |     |     |     |    |           | H315K  | 210 | 185 | 250 | 495 | 450 | M10 | 42        |
|       |     |     |     |     |     |    |           | H355K  | 210 | 185 | 250 | 495 | 450 | M10 | 46        |


## Braking option

### Brake resistor High-duty brake resistor

MRS, MYS (E800) (E700) (F700PJ) (D700)  
FR-ABR (A800) (A800 Plus) (E800) (E700) (F700PJ) (D700)

Only models with a built-in brake transistor can be used.

Larger value of the regenerative brake duty can be set by connecting this high-duty brake resistor to the inverter.

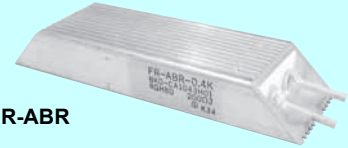

FR-ABR

### Specifications

| Model MRS Type, MYS Type          | 200 V      |            |           |           |              |
|-----------------------------------|------------|------------|-----------|-----------|--------------|
|                                   | MRS120W200 | MRS120W100 | MRS120W60 | MRS120W40 | MYS220W50 *2 |
| Applicable inverter capacity (kW) | 0.4        | 0.75       | 1.5, 2.2  | 2.2, 3.7  | 3.7          |
| Permissible duty *1               | 3%ED       |            |           |           | 6%ED         |
| Resistance value (Ω)              | 200        | 100        | 60        | 40        | 50 (×1/2)    |

| Model FR-ABR-□□                   | 200 V    |       |          |          |      |      |      |           |           |
|-----------------------------------|----------|-------|----------|----------|------|------|------|-----------|-----------|
|                                   | 0.4K     | 0.75K | 2.2K     | 3.7K     | 5.5K | 7.5K | 11K  | 15K *2    | 22K *2    |
| Applicable inverter capacity (kW) | 0.4      | 0.75  | 1.5, 2.2 | 3.7      | 5.5  | 7.5  | 11   | 15        | 18.5, 22  |
| Braking torque                    | 150% 5 s |       |          | 100% 5 s |      |      |      |           |           |
| Permissible duty *1               | 10%ED    |       |          |          |      |      | 6%ED |           |           |
| Resistance value (Ω)              | 200      | 100   | 60       | 40       | 25   | 20   | 13   | 18 (×1/2) | 13 (×1/2) |
| Approximate mass (kg)             | 0.2      | 0.4   | 0.5      | 0.8      | 1.3  | 2.2  | 3.5  | 2.4 (×2)  | 3.3 (×2)  |

| Model FR-ABR-□□                   | 400 V    |        |       |       |       |       |       |      |          |           |
|-----------------------------------|----------|--------|-------|-------|-------|-------|-------|------|----------|-----------|
|                                   | H0.4K    | H0.75K | H1.5K | H2.2K | H3.7K | H5.5K | H7.5K | H11K | H15K *3  | H22K *2   |
| Applicable inverter capacity (kW) | 0.4      | 0.75   | 1.5   | 2.2   | 3.7   | 5.5   | 7.5   | 11   | 15       | 18.5, 22  |
| Braking torque                    | 100% 5 s |        |       |       |       |       |       |      |          |           |
| Permissible duty *1               | 10%ED    |        |       |       |       |       |       | 6%ED |          |           |
| Resistance value (Ω)              | 1200     | 700    | 350   | 250   | 150   | 110   | 75    | 52   | 18 (×2)  | 52 (×1/2) |
| Approximate mass (kg)             | 0.2      | 0.2    | 0.4   | 0.5   | 0.8   | 1.3   | 2.2   | 3.2  | 2.4 (×2) | 3.3 (×2)  |

\*1 The permissible duty indicates braking capability including the motor loss, and thereby the actual duty of the resistor is slightly smaller.

\*2 Use two units in parallel.

\*3 Use two units in series. FR-ABR-15K is indicated on the resistor (same resistor as the 200 V class 15K).

### Selection

- Make selection according to the applicable motor capacity of the above specifications.
- The model with built-in brake resistor and external brake resistor.


| Inverter                 |                | Built-in Brake Resistor | External Brake Resistor<br>(built-in brake transistor) |
|--------------------------|----------------|-------------------------|--|
| FR-A800,<br>FR-A800 Plus | 0.4K to 7.5K   | ○                       | ○  |
|                          | 11K to 22K     | ×                       | ○  |
| FR-E800,<br>FR-E700      | 0.1K, 0.2K     | ×                       | ×  |
|                          | 0.4K or higher | ×                       | ○  |
| FR-F700PJ                | All capacities | ×                       | ○  |
| FR-D700                  | 0.1K, 0.2K     | ×                       | ×  |
|                          | 0.4K or higher | ×                       | ○  |

○: Available    ×: Not available

# Braking option


## ●Connection diagram

- Connect across terminals P and PR of the inverter.
- When using the model with a brake resistor inside, be sure to remove a jumper across terminals PX and PR. (Note that a jumper across terminals P1 and P should not be removed by mistake.)
- The temperature of the MRS type and MYS type brake resistor becomes 200 °C or more and the FR-ABR becomes 300 °C or more, care must be taken for installation and heat dissipation.
- The following sequence is recommended to prevent overheat and burnout of the brake resistor in case the brake transistor is damaged.

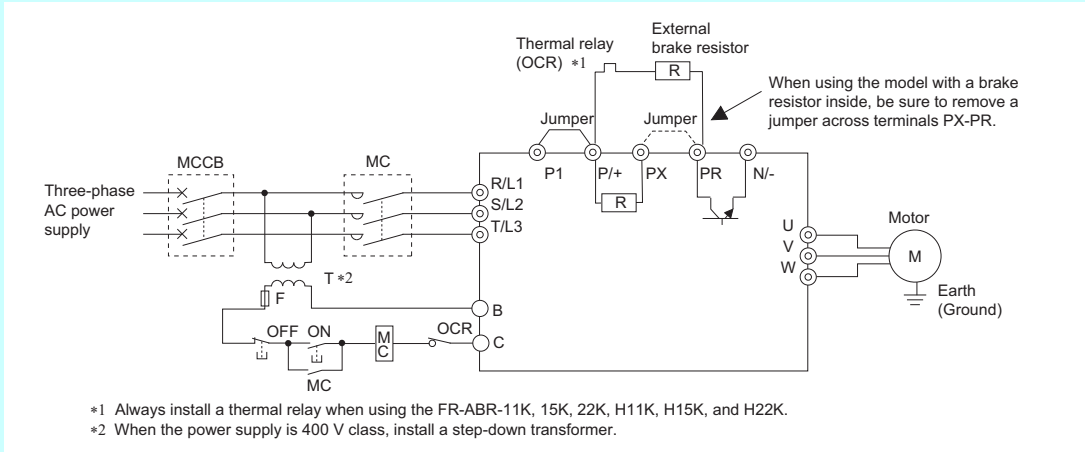


## ●Outline dimension drawings

### <<MRS type>>

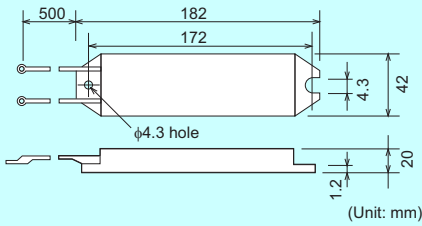


### <<MYS type>> \*

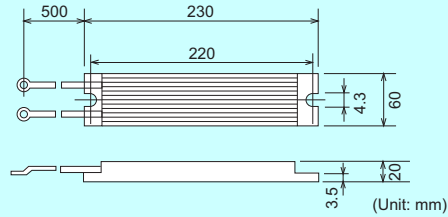


\* Outline dimension drawing of one resistor.

### <<FR-ABR>>

#### FR-ABR-0.4K to 7.5K, H0.4K to H7.5K

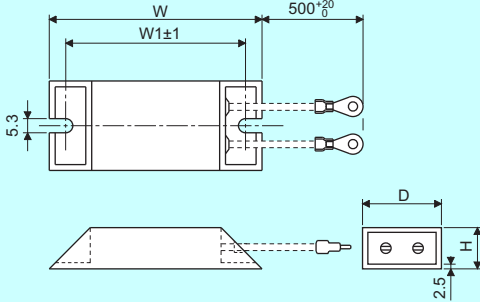

#### FR-ABR-11K to 22K, H11K to H22K

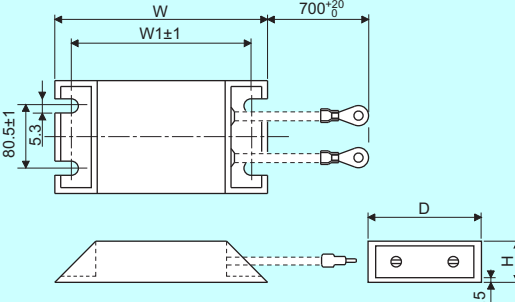

| Brake Resistor Model |              | Outline Dimension |     |    |     | Brake Resistor Model |               | Outline Dimension |     |     |     |
|----------------------|--------------|-------------------|-----|----|-----|----------------------|---------------|-------------------|-----|-----|-----|
|                      |              | W                 | W1  | H  | D   |                      |               | W                 | W1  | H   | D   |
| 200 V                | FR-ABR-0.4K  | 140               | 125 | 21 | 40  | 400 V                | FR-ABR-H0.4K  | 115               | 100 | 21  | 40  |
|                      | FR-ABR-0.75K | 215               | 200 | 21 | 40  |                      | FR-ABR-H0.75K | 140               | 125 | 21  | 40  |
|                      | FR-ABR-2.2K  | 240               | 225 | 26 | 50  |                      | FR-ABR-H1.5K  | 215               | 200 | 21  | 40  |
|                      | FR-ABR-3.7K  | 215               | 200 | 33 | 61  |                      | FR-ABR-H2.2K  | 240               | 225 | 26  | 50  |
|                      | FR-ABR-5.5K  | 335               | 320 | 33 | 61  |                      | FR-ABR-H3.7K  | 215               | 200 | 33  | 61  |
|                      | FR-ABR-7.5K  | 400               | 385 | 40 | 80  |                      | FR-ABR-H5.5K  | 335               | 320 | 33  | 61  |
|                      | FR-ABR-11K   | 400               | 385 | 50 | 100 |                      | FR-ABR-H7.5K  | 400               | 385 | 40  | 80  |
|                      | FR-ABR-15K*  | 300               | 285 | 50 | 100 |                      | FR-ABR-H11K   | 400               | 385 | 50  | 100 |
|                      | FR-ABR-22K*  | 400               | 385 | 50 | 100 |                      | FR-ABR-H15K*  | 300               | 285 | 50  | 100 |
|                      |              |                   |     |    |     | FR-ABR-H22K*         | 450           | 435               | 50  | 100 |     |

\* Outline dimension drawing of one resistor.



## Brake unit Discharging resistor or resistor unit

FR-BU2 (A800) (A800 Plus) (F800) (E800) (E700) (F700PJ) (D700)  
 GRZG (A800) (A800 Plus) (F800) (E800) (E700) (F700PJ) (D700)  
 FR-BR (A800) (A800 Plus) (F800) (E800) (E700) (F700PJ) (D700)  
 MT-BR5 (A800) (A800 Plus) (F800)

Braking options have larger braking capability than the external brake resistor. These options can be connected to the inverter with or without a built-in brake transistor. Select from three discharging resistors according to the required braking torque.

### ● Specifications

#### <<Brake unit>>

| Model<br>FR-BU2-[]            | 200V   |      |      |     |     |     | 400V  |      |      |      |      |           |       |  |
|-------------------------------|--|------|------|-----|-----|-----|-------|------|------|------|------|-----------|-------|--|
|                               | 1.5K   | 3.7K | 7.5K | 15K | 30K | 55K | H7.5K | H15K | H30K | H55K | H75K | H220K     | H280K |  |
| Applicable motor capacity     | Capacity of the motor to be used with differs according to the braking torque and duty (%ED)                         |      |      |     |     |     |       |      |      |      |      |           |       |  |
| Connected brake resistor      | GRZG type, FR-BR, MT-BR5 (Refer to the table below for combination.)   |      |      |     |     |     |       |      |      |      |      | MT-BR5 *1 |       |  |
| Multiple (parallel) operation | Up to 10 units (Note that torque generated is not more than the tolerable overcurrent amount of connected inverter.) |      |      |     |     |     |       |      |      |      |      |           |       |  |
| Approximate mass (kg)         | 0.9  | 0.9  | 0.9  | 0.9 | 1.4 | 2.0 | 0.9   | 0.9  | 1.4  | 2.0  | 2.0  | 13        | 13    |  |



FR-BU2

\*1 Please contact your sales representative to use a brake resistor other than MT-BR5.

#### <<Discharging Resistor>>

| Model GRZG type *2               | 200 V                |                       |                      |                      | 400 V                 |                      |                       |
|----------------------------------|----------------------|-----------------------|----------------------|----------------------|-----------------------|----------------------|-----------------------|
|                                  | GZG300W-50Ω (1 unit) | GRZG200-10Ω (3 units) | GRZG300-5Ω (3 units) | GRZG400-2Ω (6 units) | GRZG200-10Ω (3 units) | GRZG300-5Ω (4 units) | GRZG400-2Ω (6 units)  |
| Number of resistors              | 1                    | 3 in series (1 set)   | 4 in series (1 set)  | 6 in series (1 set)  | 6 in series (2 sets)  | 8 in series (2 sets) | 12 in series (2 sets) |
| Resistance value (Ω)             | 50                   | 30                    | 20                   | 12                   | 60                    | 40                   | 24                    |
| Continuous permissible power (W) | 100                  | 300                   | 600                  | 1200                 | 600                   | 1200                 | 2400                  |

#### <<Resistor unit>>

| Model FR-BR-[]                   | 200 V |      |      | 400 V |      |      | Model MT-BR5-[] | 200 V | 400 V |
|----------------------------------|-------|------|------|-------|------|------|-----------------|-------|-------|
|                                  | 15K   | 30K  | 55K  | H15K  | H30K | H55K |                 | 55K   | H75K  |
| Resistance value (Ω)             | 8     | 4    | 2    | 32    | 16   | 8    |                 | 2     | 6.5   |
| Continuous permissible power (W) | 990   | 1990 | 3910 | 990   | 1990 | 3910 |                 | 5500  | 7500  |
| Approximate mass (kg)            | 15    | 30   | 70   | 15    | 30   | 70   |                 | 70    | 65    |

\*2 The 1 set contains the number of units in the parentheses. For the 400V class, 2 sets are required.

### ● Table of combination of the brake unit and resistor unit

| Brake Unit Model |              | Discharging Resistor or Resistor Unit Model |                             |            |                  |
|------------------|--------------|---|-----------------------------|------------|------------------|
|                  |              | GRZG type                                   |                             | FR-BR      | MT-BR5           |
|                  |              | Model *1                                    | Number of connectable units |            |                  |
| 200 V class      | FR-BU2-1.5K  | GZG 300W-50 Ω (1 unit)                      | 1 unit                      | —          | —                |
|                  | FR-BU2-3.7K  | GRZG 200-10 Ω (3 units)                     | 3 in series (1 set)         | —          | —                |
|                  | FR-BU2-7.5K  | GRZG 300-5 Ω (4 units)                      | 4 in series (1 set)         | —          | —                |
|                  | FR-BU2-15K   | GRZG 400-2 Ω (6 units)                      | 6 in series (1 set)         | FR-BR-15K  | —                |
|                  | FR-BU2-30K   | —   | —                           | FR-BR-30K  | —                |
|                  | FR-BU2-55K   | —   | —                           | FR-BR-55K  | MT-BR5-55K       |
| 400 V class      | FR-BU2-H7.5K | GRZG 200-10 Ω (3 units)                     | 6 in series (2 sets)        | —          | —                |
|                  | FR-BU2-H15K  | GRZG 300-5 Ω (4 units)                      | 8 in series (2 sets)        | FR-BR-H15K | —                |
|                  | FR-BU2-H30K  | GRZG 400-2 Ω (6 units)                      | 12 in series (2 sets)       | FR-BR-H30K | —                |
|                  | FR-BU2-H55K  | —   | —                           | FR-BR-H55K | —                |
|                  | FR-BU2-H75K  | —   | —                           | —          | MT-BR5-H75K      |
|                  | FR-BU2-H220K | —   | —                           | —          | 3×MT-BR5-H75K *2 |
|                  | FR-BU2-H280K | —   | —                           | —          | 4×MT-BR5-H75K *2 |

\*1 The 1 set contains the number of units in the parentheses. For the 400V class, 2 sets are required.

\*2 The number before the model name explains the number of connectable units in parallel.

### ● Selection

#### <<When GRZG type is connected>>

| Power Supply Voltage | Motor(kW)<br>Braking Torque | 0.4         | 0.75        | 1.5          | 2.2         | 3.7             | 5.5              | 7.5             | 11               | 15              | 18.5             | 22               | 30 | 37              | 45 | 55 |
|----------------------|-----------------------------|-------------|-------------|--------------|-------------|-----------------|------------------|-----------------|------------------|-----------------|------------------|------------------|----|-----------------|----|----|
|                      |                             | 200 V class | 50% 30s     | FR-BU2-1.5K  |             | FR-BU2-3.7K     | FR-BU2-7.5K      | FR-BU2-15K      | 2×FR-BU2-15K *1  |                 | 3×FR-BU2-15K *1  |                  |    | 4×FR-BU2-15K *1 |    |    |
| 100% 30s             | FR-BU2-1.5K                 |             | FR-BU2-3.7K | FR-BU2-7.5K  | FR-BU2-15K  | 2×FR-BU2-15K *1 | 3×FR-BU2-15K *1  | 4×FR-BU2-15K *1 | 5×FR-BU2-15K *1  | 6×FR-BU2-15K *1 | 7×FR-BU2-15K *1  |                  |    |                 |    |    |
| 400 V class          | 50% 30s                     | — *2        |             | FR-BU2-H7.5K |             |                 | FR-BU2-H15K      | FR-BU2-H30K     |                  |                 | 2×FR-BU2-H30K *1 |                  |    |                 |    |    |
|                      | 100% 30s                    | — *2        |             | FR-BU2-H7.5K | FR-BU2-H15K | FR-BU2-H30K     | 2×FR-BU2-H30K *1 |                 | 3×FR-BU2-H30K *1 |                 |                  | 4×FR-BU2-H30K *1 |    |                 |    |    |

\*1 The number before the model name explains the number of connectable units in parallel.

\*2 The inverter of 1.5K or lower in the 400V class cannot be used in combination with a brake unit. To use in combination with a brake unit, use the inverter of 2.2K or higher.

# Braking option

## <<When the FR-BR is connected>>

%ED at short-time rating when braking torque is 100%



| Motor Capacity |             | 5.5kW | 7.5kW | 11kW | 15kW | 18.5kW | 22kW | 30kW | 37kW | 45kW | 55kW |
|----------------|-------------|-------|-------|------|------|--------|------|------|------|------|------|
| 200 V          | FR-BU2-15K  | 80    | 40    | 15   | 30   | —      | —    | —    | —    | —    | —    |
|                | FR-BU2-30K  | —     | —     | 65   | 30   | 25     | 15   | 10   | —    | —    | —    |
|                | FR-BU2-55K  | —     | —     | —    | —    | 90     | 60   | 30   | 20   | 15   | 10   |
| 400 V          | FR-BU2-H15K | 80    | 40    | 15   | 10   | —      | —    | —    | —    | —    | —    |
|                | FR-BU2-H30K | —     | —     | 65   | 30   | 25     | 15   | 10   | —    | —    | —    |
|                | FR-BU2-H55K | —     | —     | —    | —    | 90     | 60   | 30   | 20   | 15   | 10   |



Braking torque (%) at 10%ED in 15s

| Motor Capacity |             | 5.5kW | 7.5kW | 11kW | 15kW | 18.5kW | 22kW | 30kW | 37kW | 45kW | 55kW |
|----------------|-------------|-------|-------|------|------|--------|------|------|------|------|------|
| 200 V          | FR-BU2-15K  | 280   | 200   | 120  | 100  | 80     | 70   | —    | —    | —    | —    |
|                | FR-BU2-30K  | —     | —     | 260  | 180  | 160    | 130  | 100  | 80   | 70   | —    |
|                | FR-BU2-55K  | —     | —     | —    | —    | 300    | 250  | 180  | 150  | 120  | 100  |
| 400 V          | FR-BU2-H15K | 280   | 200   | 120  | 100  | 80     | 70   | —    | —    | —    | —    |
|                | FR-BU2-H30K | —     | —     | 260  | 180  | 160    | 130  | 100  | 80   | 70   | —    |
|                | FR-BU2-H55K | —     | —     | —    | —    | 300    | 250  | 180  | 150  | 120  | 100  |

$$\text{Regeneration load time factor (operating duty) \%ED} = \frac{t_b}{t_c} \times 100 \quad t_b < 15 \text{ s (continuous operating time)}$$

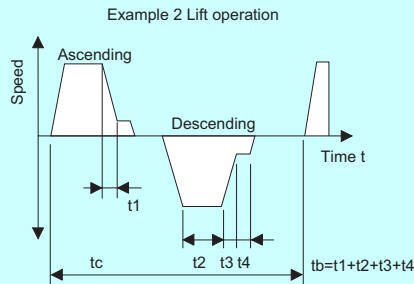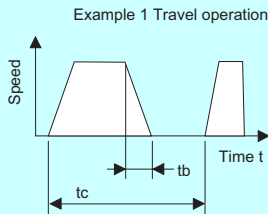

## <<When the MT-BR5 is connected>>

%ED at short-time rating when braking torque is 100%

| Motor Capacity             |   | 75kW | 90kW | 110kW | 132kW | 160kW | 185kW | 220kW | 250kW | 280kW | 315kW | 355kW | 375kW | 400kW | 450kW | 500kW | 560kW |
|----------------------------|---|------|------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 200V class<br>FR-BU2-55K   | 1 | 5    | —    | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     |
|                            | 2 | 20   | 15   | 10    | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     |
| 400V class<br>FR-BU2-H75K  | 1 | 10   | 5    | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     |
|                            | 2 | 40   | 25   | 20    | 10    | 5     | 5     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     |
| 400V class<br>FR-BU2-H220K | 1 | 80   | 60   | 40    | 25    | 15    | 10    | 10    | 5     | —     | —     | —     | —     | —     | —     | —     | —     |
|                            | 2 | —    | —    | —     | —     | —     | —     | 20    | 20    | 15    | 15    | 15    | 10    | 10    | 10    | 5     | —     |
| 400V class<br>FR-BU2-H280K | 1 | —    | 80   | 65    | 40    | 30    | 20    | 15    | 10    | 10    | 10    | 5     | —     | —     | —     | —     | —     |
|                            | 2 | —    | —    | —     | —     | —     | —     | —     | —     | —     | 20    | 20    | 15    | 15    | 15    | 10    | 10    |


Braking torque (%) at short-time rating in 15s

| Motor Capacity             |   | 75kW | 90kW | 110kW | 132kW | 160kW | 185kW | 220kW | 250kW | 280kW | 315kW | 355kW | 375kW | 400kW | 450kW | 500kW | 560kW |
|----------------------------|---|------|------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 200V class<br>FR-BU2-55K   | 1 | 70   | 60   | 50    | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     |
|                            | 2 | 150  | 120  | 100   | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     | —     |
| 400V class<br>FR-BU2-H75K  | 1 | 100  | 80   | 70    | 55    | 45    | 40    | 35    | 30    | 25    | 20    | 20    | 20    | —     | —     | —     | —     |
|                            | 2 | 150  | 150  | 135   | 110   | 90    | 80    | 70    | 60    | 50    | 45    | 40    | 40    | —     | —     | —     | —     |
| 400V class<br>FR-BU2-H220K | 1 | 200  | 200  | 150   | 150   | 135   | 115   | 100   | 80    | 55    | —     | —     | —     | —     | —     | —     | —     |
|                            | 2 | —    | —    | —     | —     | —     | —     | 190   | 170   | 150   | 150   | 140   | 120   | 110   | 100   | 90    | 80    |
| 400V class<br>FR-BU2-H280K | 1 | —    | —    | 200   | 200   | 150   | 150   | 150   | 125   | 100   | 70    | 60    | —     | —     | —     | —     | —     |
|                            | 2 | —    | —    | —     | —     | —     | —     | —     | —     | —     | 180   | 160   | 150   | 150   | 130   | 115   | 100   |

- \*1 The number explains the number of connectable units in parallel.
- \*2 To obtain a large braking torque, the motor has to have a torque characteristic that meets the braking torque. Check the torque characteristic of the motor.

## ● Connection diagram (Sink logic)

<<When the FR-BU2 and FR-BR are connected>>

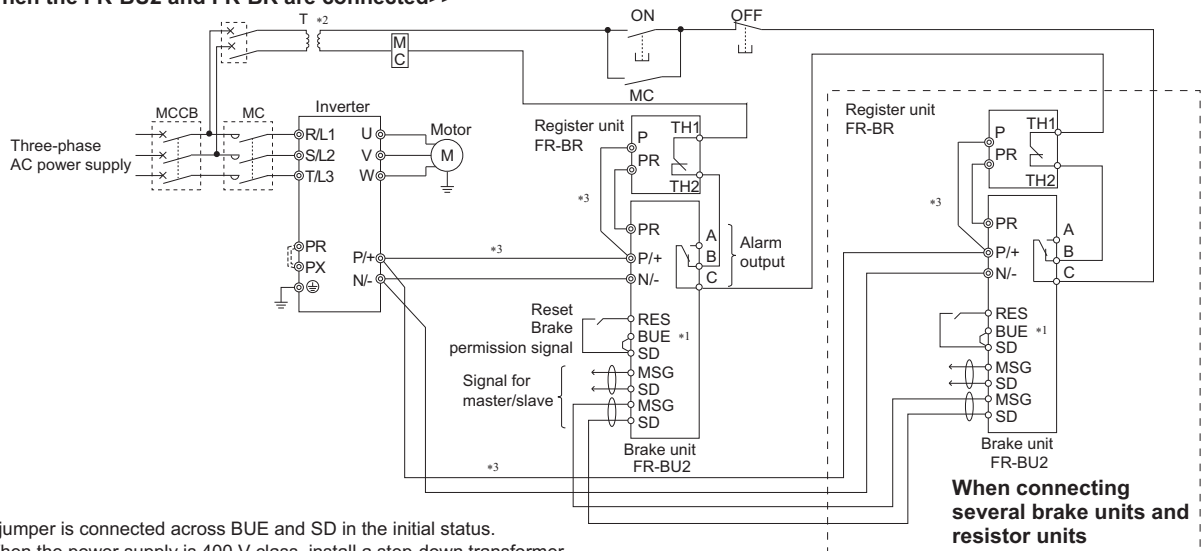


- \*1 A jumper is connected across BUE and SD in the initial status.
  - \*2 When the power supply is 400 V class, install a step-down transformer.
  - \*3 The wiring distance between the inverter, brake unit (FR-BU2) and resistor unit (FR-BR) should be within 5 m. If twisted wires are used, the distance should be within 10 m.
- When connecting several FR-BU2 to one inverter, connect P/+ of each FR-BU2 and of the inverter and N/- respectively. Do not pass wires from terminal P/+ and N/- of the FR-BU2 to terminals of other FR-BU2.

**When connecting several brake units and resistor units**

## ● Outline dimension drawings

<<FR-BU2>>

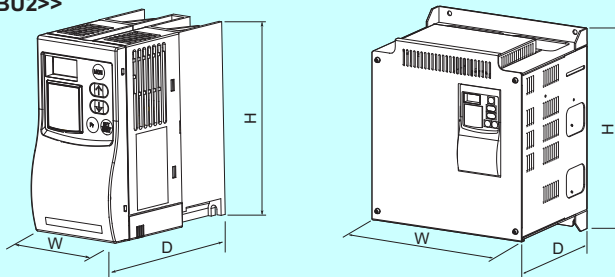


FR-BU2-1.5K to 55K  
FR-BU2-H7.5K to H75K

FR-BU2-H220K, H280K

(Unit: mm)

| Model               | W   | H   | D     |
|---------------------|-----|-----|-------|
| FR-BU2-1.5K to 15K  | 68  | 128 | 132.5 |
| FR-BU2-30K          | 108 | 128 | 129.5 |
| FR-BU2-55K          | 170 | 128 | 142.5 |
| FR-BU2-H7.5K, H15K  | 68  | 128 | 132.5 |
| FR-BU2-H30K         | 108 | 128 | 129.5 |
| FR-BU2-H55K, H75K   | 170 | 128 | 142.5 |
| FR-BU2-H220K, H280K | 250 | 300 | 200   |

<<GRZG type>>

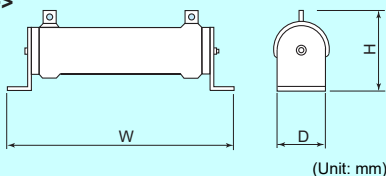


(Unit: mm)

| Model   | W   | H  | D  |
|---------|-----|----|----|
| GZG300W | 335 | 78 | 40 |
| GRZG200 | 306 | 55 | 26 |
| GRZG300 | 334 | 79 | 40 |
| GRZG400 | 411 | 79 | 40 |

- The maximum temperature rise of the discharging resistors is approximately 100 °C. Use heat-resistant wires to perform wiring and make sure that they will not make contact with resistors.
- Do not touch the discharging resistor while the power is ON or for about 10 minutes after the power supply turns OFF. Otherwise, electric shock may result.

<<FR-BR>>

(Unit: mm)

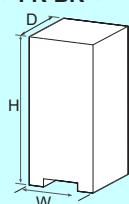


| Resistor Unit |     |     |     |
|---------------|-----|-----|-----|
| Model         | W   | H   | D   |
| FR-BR-15K     | 170 | 450 | 220 |
| FR-BR-30K     | 340 | 600 | 220 |
| FR-BR-55K     | 480 | 700 | 450 |
| FR-BR-H15K    | 170 | 450 | 220 |
| FR-BR-H30K    | 340 | 600 | 220 |
| FR-BR-H55K    | 480 | 700 | 450 |

- The temperature rise of the resistor unit is about a maximum of 100 °C. Therefore, use heat-resistant wires (such as glass wires).

<<MT-BR5>>

(Unit: mm)

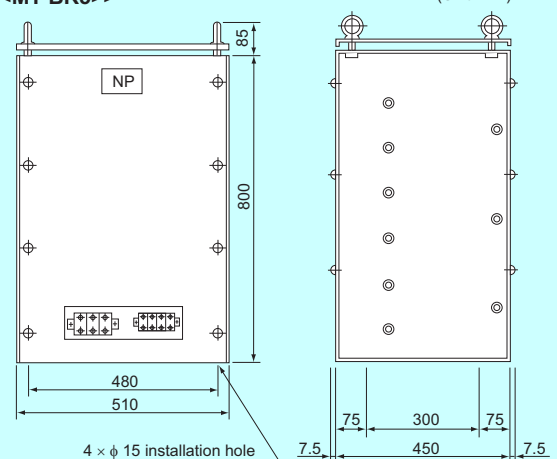

- Be sure to select the well-ventilated place for installation of the resistor unit. Ventilation is necessary when installing the resistor in a place, e.g. enclosure, where heat is not well diffused.
- The temperature rise of the resistor unit is about a maximum of 150 °C. Therefore, wire the cable so as not to touch the resistor. Also, separate a component, which is low in heat-resistant property, at least 40 to 50 cm from the resistors.
- The temperature of the resistor unit abnormally increases if the brake unit is operated exceeding the specified duty. Since the resistor unit may result in overheat if the temperature of the brake unit is left unchanged, switch off the inverter.

# Braking option

## Power regeneration converter

MT-RC A800 A800 Plus F800

A power regeneration converter allows energy generated at braking operation of the inverter to be regenerated to the power supply. Using a brake unit negates the need for a discharge resistor, saving space and energy as well as raising the peak brake torque.

### ●Specifications

| Model MT-RC-[]                                    | 400V                              |       |       |       |
|---|-----------------------------------|-------|-------|-------|
|   | H75K                              | H160K | H220K | H280K |
| Rated current (A) *1                              | 102                               | 218   | 300   | 382   |
| Rated input AC power supply                       | Three-phase 380 to 460 V 50/60 Hz |       |       |       |
| Permissible AC voltage fluctuation                | Three-phase 323 to 506 V 50/60 Hz |       |       |       |
| Approximate mass (kg)                             | 65                                | 98    | 155   | 235   |
| AC reactor type<br>MT-RCL-[] (standard accessory) | H75K                              | H160K | H220K | H280K |
| Approximate mass (kg)                             | 130                               | 240   | 410   | 580   |

\*1 The rated current indicates the current flow in the main circuit DC bus (terminal P/+, N/-).


### ●Selection

- 1) Select the unit according to the motor capacity and magnitude of the braking torque referring to the table below.
- 2) Do not use the MT-RC whose capacity is larger than the stated combination in the table below.  
(Even if the MT-RC larger in capacity is selected, continuous braking torque will not exceed 100% of the rated motor.)


Braking torque (%) at continuous rating (% value on the assumption that the rated motor torque is 100%.)

| Motor Capacity (kW) | 75  | 90   | 110  | 132  | 150  | 160  | 185  | 200  | 220  | 250  | 280  |
|---------------------|-----|------|------|------|------|------|------|------|------|------|------|
| Inverter model      | 75K | 110K | 110K | 160K | 160K | 160K | 220K | 220K | 220K | 280K | 280K |
| MT-RC-H75K          | 100 | 80   | 65   | 55   | 50   | 45   | 40   | 35   | 30   | 30   | 25   |
| MT-RC-H160K         | —   | 100  | 100  | 100  | 100  | 100  | 85   | 80   | 70   | 60   | 55   |
| MT-RC-H220K         | —   | —    | —    | —    | —    | —    | 100  | 100  | 100  | 85   | 75   |
| MT-RC-H280K         | —   | —    | —    | —    | —    | —    | —    | —    | —    | 100  | 100  |

### ●Connection diagram

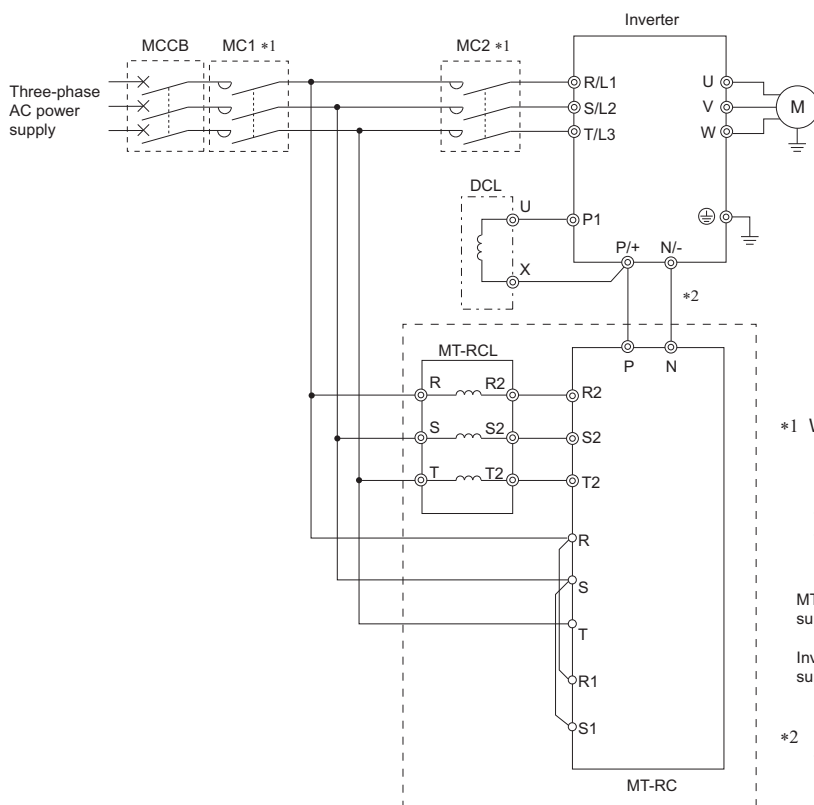


\*1 When connecting a power regeneration converter (MT-RC), install a magnetic contactor (MC) at the input side of the inverter so that power is supplied to the inverter after 1s or more has elapsed after powering ON the MT-RC. When power is supplied to the inverter prior to the MT-RC, the inverter and the MT-RC may be damaged or the MCCB may trip or be damaged.

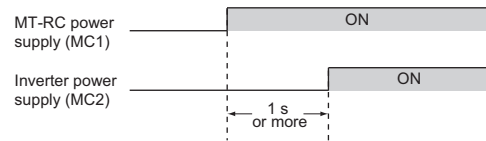

\*2 Keep the total wiring distance between the inverter and the power regenerative converter (MT-RC) within 5 m.

## ●Outline dimension drawings


<<MT-RC>>

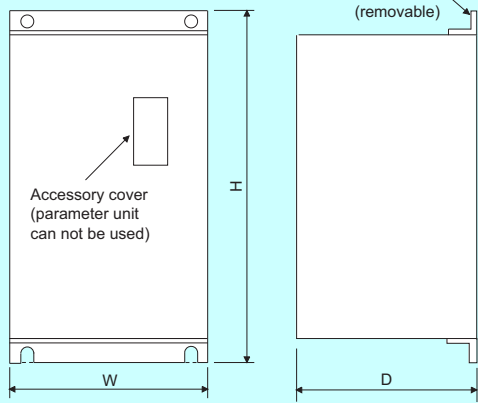

(Unit: mm)

|      | Model       | W   | H    | D   |
|------|-------------|-----|------|-----|
| 400V | MT-RC-H75K  | 480 | 740  | 360 |
|      | MT-RC-H160K | 498 | 1010 | 380 |
|      | MT-RC-H220K | 680 | 1010 | 380 |
|      | MT-RC-H280K | 790 | 1330 | 440 |

<<MT-RCL>>

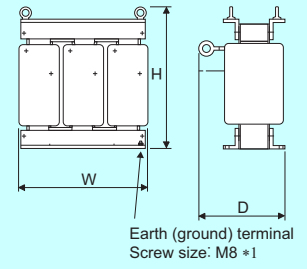

(Unit: mm)

|      | Model        | W   | H   | D   |
|------|--------------|-----|-----|-----|
| 400V | MT-RCL-H75K  | 390 | 385 | 358 |
|      | MT-RCL-H160K | 515 | 465 | 380 |
|      | MT-RCL-H220K | 630 | 655 | 565 |
|      | MT-RCL-H280K | 690 | 690 | 620 |

\*1 The terminal position differs according to the reactor capacity.



## High power factor converter

FR-HC2 ALL

A high power factor converter substantially suppresses power harmonics to realize the equivalent capacity conversion coefficient  $K_5 = 0$  in "the Harmonic Suppression Guidelines for Consumers Who Receive High Voltage or Special High Voltage" in Japan. Power regeneration function featured as standard enables common converter system operation with multiple inverters connected.

### ●Suppressions of power-supply harmonics

(Example) FR-HC2-7.5K  
(Environment) Load; 100% Power factor; 1

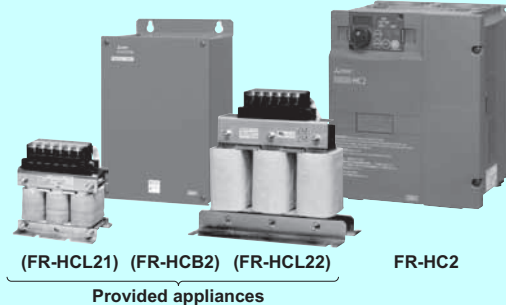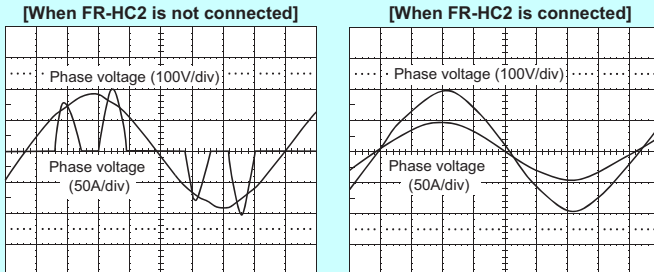


### ●Specifications

| Model FR-HC2-[] *2                           | 200 V   |           |          |          |          | 400 V                                |           |          |          |          |                                      |           |            |            |            |            |                                      |  |  |  |  |
|--|---|-----------|----------|----------|----------|--------------------------------------|-----------|----------|----------|----------|--------------------------------------|-----------|------------|------------|------------|------------|--------------------------------------|--|--|--|--|
|  | 7.5K  | 15K       | 30K      | 55K      | 75K      | H7.5K                                | H15K      | H30K     | H55K     | H75K     | H110K                                | H160K     | H220K      | H280K      | H400K      | H560K      |                                      |  |  |  |  |
| Applicable inverter capacity (kW) *1         | 3.7 to 7.5  | 7.5 to 15 | 15 to 30 | 30 to 55 | 37 to 75 | 3.7 to 7.5                           | 7.5 to 15 | 15 to 30 | 30 to 55 | 37 to 75 | 55 to 110                            | 90 to 160 | 110 to 220 | 160 to 280 | 200 to 400 | 280 to 560 |                                      |  |  |  |  |
| Rated input current (A)                      | 33  | 61        | 115      | 215      | 278      | 17                                   | 31        | 57       | 110      | 139      | 203                                  | 290       | 397        | 506        | 716        | 993        |                                      |  |  |  |  |
| Input power factor                           | 0.99 or more (when load factor is 100%)                           |           |          |          |          |                                      |           |          |          |          |                                      |           |            |            |            |            |                                      |  |  |  |  |
| Rated voltage                                | Three-phase 200 to 220 V 50 Hz/<br>three phase 200 to 230 V 60 Hz |           |          |          |          | Three-phase 380 to 460V 50 Hz/60 Hz  |           |          |          |          |                                      |           |            |            |            |            |                                      |  |  |  |  |
| Permissible power supply voltage fluctuation | Three-phase 170 to 242 V 50 Hz/<br>three phase 170 to 253 V 60 Hz |           |          |          |          | Three-phase 170 to 230 V 50 Hz/60 Hz |           |          |          |          | Three-phase 323 to 506 V 50 Hz/60 Hz |           |            |            |            |            | Three-phase 323 to 460 V 50 Hz/60 Hz |  |  |  |  |
| Approximate mass (kg)                        | 7   | 12        | 24       | 39       | 53       | 9                                    | 9         | 26       | 43       | 37       | 56                                   | 120       | 120        | 160        | 250        | 250        |                                      |  |  |  |  |
| Unit   | Provided appliances   |           |          |          |          |                                      |           |          |          |          |                                      |           |            |            |            |            |                                      |  |  |  |  |
| Provided appliances                          | 21.0  | 33.0      | 57.7     | 95.4     | 148.0    | 21.8                                 | 33.0      | 53.0     | 99.0     | 156.0    | 240.0                                | 349.0     | 462.0      | —          | —          | —          |                                      |  |  |  |  |

- \*1 Up to ten inverters may be connected to one high power factor converter. The capacity of the high power factor converter should always be higher than the sum of those of the inverters connected. Note that if the sum of the inverter capacities is less than half of the high power factor converter capacity, the high power factor converter may be used as a common converter or regenerative converter, but its capability to suppress power harmonics will decrease.
- \*2 When the FR-HC2-[] is ordered in Japan, the FR-HCL21, FR-HCL22, and FR-HCB2 (FR-HCL21, FR-HCL22, FR-HCC2, FR-HCR2, and FR-HCM2 for the H280K or higher) are provided as accompanying appliances. When the FR-HC2 is ordered in other countries, those appliances are not provided with the converter and to be ordered as required.


### ●Connection diagram

<<FR-HC2-7.5K to 75K, FR-HC2-H7.5K to H220K>>

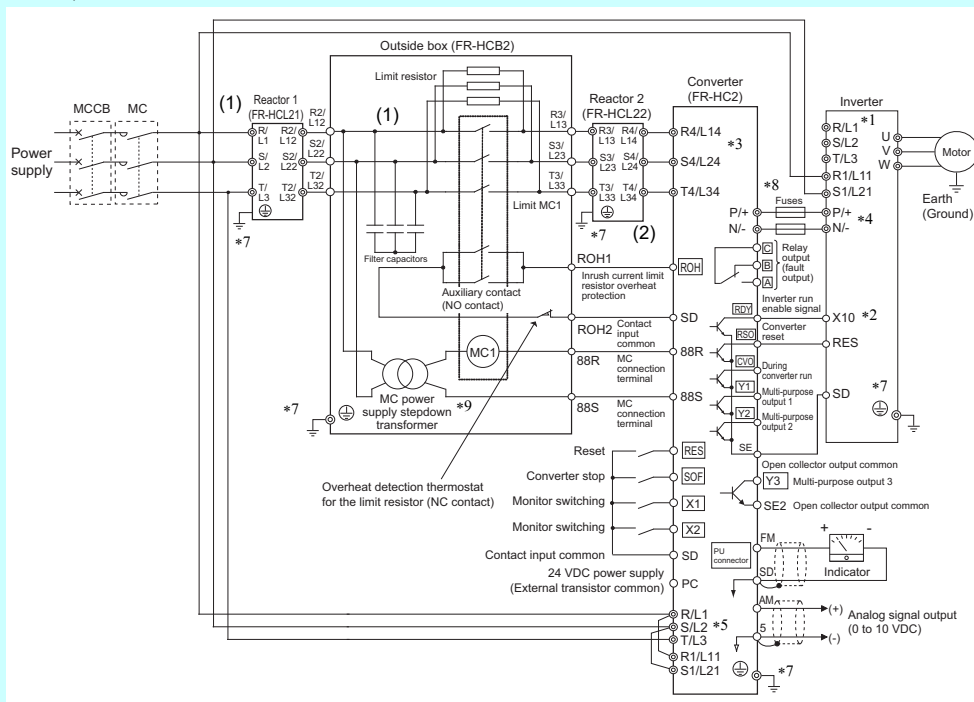


- \*1 Do not connect anything to the inverter power input terminals R/L1, S/L2 and T/L3. Incorrect connection will damage the inverter. Connecting opposite polarity of terminals P/+ and N/- will damage the converter and the inverter.
- \*2 Use input terminal function selection to assign the terminal used for the X10 signal.
- \*3 The power phases of terminals R4/L14, S4/L24, and T4/L34 and terminals R/L1, S/L2, and T/L3 must be matched.
- \*4 Do not insert MCCB between terminals P/+ and N/- (P and P, N and N).
- \*5 Always connect terminal R/L1, S/L2, T/L3 of the converter to the power supply. If the inverter is operated without connecting the terminals to the power supply, the converter will be damaged.
- \*6 Do not insert MCCB or MC between (1) (terminal R/L1, S/L2, and T/L3 input of the Reactor 1) and (2) (terminal R4/L14, S4/L24, and T4/L34 input of the converter) of the above diagram. It will not operate properly.
- \*7 Securely perform grounding (earthing).
- \*8 Installation of a fuse is recommended.
- \*9 The MC power supply stepdown transformer is only equipped in the 400 V class models.

## <<FR-HC2-H280K>>

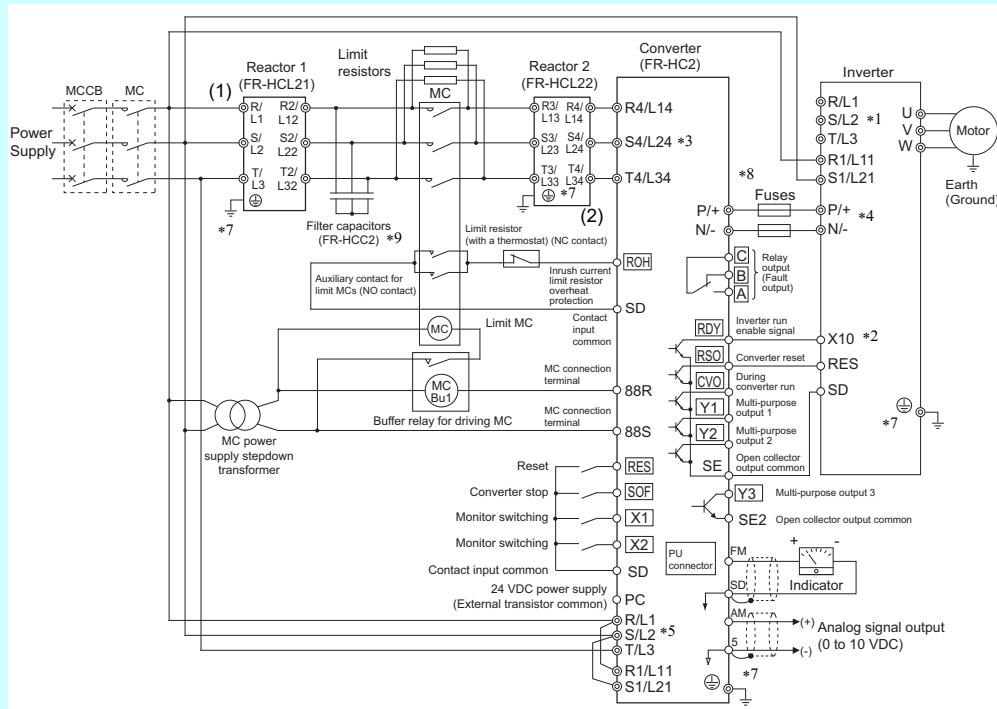

## <<FR-HC2-H400K, H560K>>

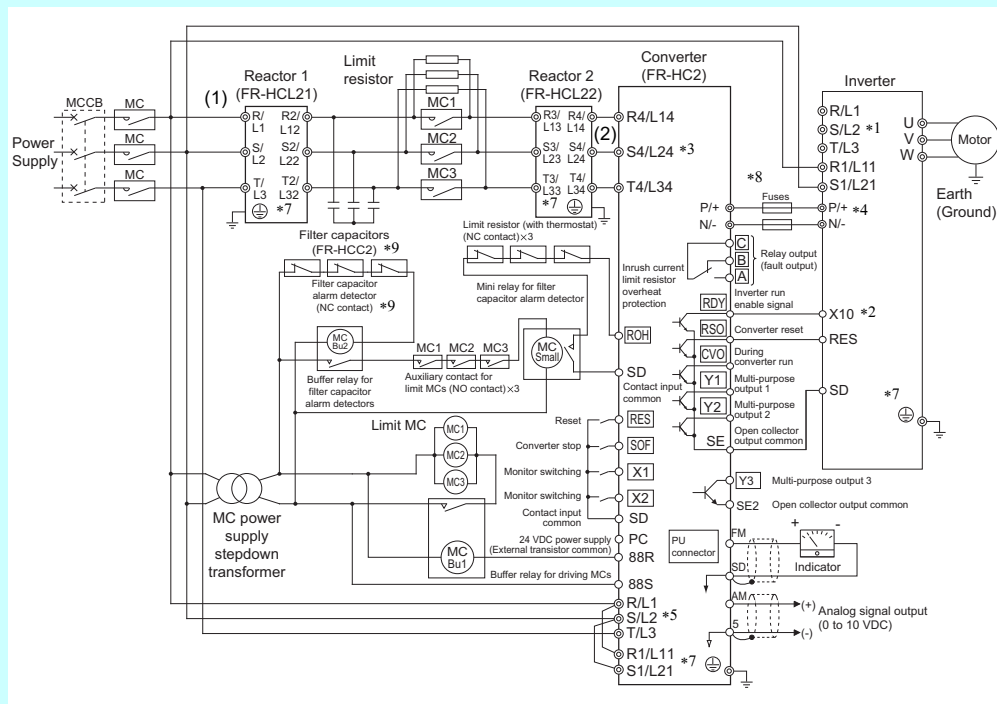

- \*1 Do not connect anything to the inverter power input terminals R/L1, S/L2 and T/L3. Incorrect connection will damage the inverter. Connecting opposite polarity of terminals P/+ and N/- will damage the converter and the inverter.
- \*2 Use input terminal function selection to assign the terminal used for the X10 signal.
- \*3 The power phases of terminals R4/L14, S4/L24, and T4/L34 and terminals R/L1, S/L2, and T/L3 must be matched.
- \*4 Do not insert MCCB between terminals P/+ and N/- (P and N, N and N).
- \*5 Always connect terminal R/L1, S/L2, T/L3 of the converter to the power supply. If the inverter is operated without connecting the terminals to the power supply, the converter will be damaged.
- \*6 Do not insert MCCB or MC between (1) (terminal R/L1, S/L2, and T/L3 input of the Reactor 1) and (2) (terminal R4/L14, S4/L24, and T4/L34 input of the converter) of the above diagram. It will not operate properly.
- \*7 Securely perform grounding (earthing).
- \*8 Installation of a fuse is recommended. (Not required for the FR-A802 or FR-F802 inverters.)
- \*9 The quantity of the filter capacitor and the filter capacitor alarm detector depends on the inverter capacity.


| Device                          | Quantity |      |      |
|---------------------------------|----------|------|------|
|                                 | 280K     | 400K | 560K |
| Filter capacitors               | 1        | 2    | 3    |
| Filter capacitor alarm detector | —        | 2    | 3    |

# Braking option

## ●Outline dimension drawings

(Unit: mm)

| Voltage | Capacity | High Power Factor Converter FR-HC2 |      |     | Reactor 1 FR-HCL21 |      |       | Reactor 2 FR-HCL22 |      |      | Outside Box FR-HCB2 |     |     |
|---------|----------|------------------------------------|------|-----|--------------------|------|-------|--------------------|------|------|---------------------|-----|-----|
|         |          | W                                  | H    | D   | W *1               | H *1 | D *1  | W *1               | H *1 | D *1 | W                   | H   | D   |
| 200V    | 7.5K     | 220                                | 260  | 170 | 132                | 150  | 100   | 237.5              | 230  | 140  | 190                 | 320 | 165 |
|         | 15K      | 250                                | 400  | 190 | 162                | 172  | 126   | 257.5              | 260  | 165  |                     |     |     |
|         | 30K      | 325                                | 550  | 195 | 195                | 210  | 150   | 342.5              | 305  | 180  | 270                 | 450 | 203 |
|         | 55K      | 370                                | 620  | 250 | 210                | 180  | 200.5 | 432.5              | 380  | 280  |                     |     |     |
|         | 75K      | 465                                | 620  | 300 | 240                | 215  | 215.5 | 474                | 460  | 280  | 400                 | 450 | 250 |
| 400V    | H7.5K    | 220                                | 300  | 190 | 132                | 140  | 100   | 237.5              | 220  | 140  |                     |     |     |
|         | H15K     | 220                                | 300  | 190 | 162                | 170  | 126   | 257.5              | 260  | 165  | 190                 | 320 | 165 |
|         | H30K     | 325                                | 550  | 195 | 182                | 195  | 101   | 342.5              | 300  | 180  |                     |     |     |
|         | H55K     | 370                                | 670  | 250 | 282.5              | 245  | 165   | 392.5              | 365  | 200  | 270                 | 450 | 203 |
|         | H75K     | 325                                | 620  | 250 | 210                | 175  | 210.5 | 430                | 395  | 280  | 300                 | 350 | 250 |
|         | H110K    | 465                                | 620  | 300 | 240                | 230  | 220   | 500                | 440  | 370  | 350                 | 450 | 380 |
|         | H160K    | 498                                | 1010 | 380 | 280                | 295  | 274.5 | 560                | 520  | 430  | 400                 | 450 | 440 |
|         | H220K    | 498                                | 1010 | 380 | 330                | 335  | 289.5 | 620                | 620  | 480  |                     |     |     |
|         | H280K*2  | 680                                | 1010 | 380 | 330                | 335  | 321   | 690                | 700  | 560  | —                   | —   | —   |
|         | H400K*2  | 790                                | 1330 | 440 | 402                | 460  | 550   | 632                | 675  | 705  | —                   | —   | —   |
|         | H560K*2  | 790                                | 1330 | 440 | 452                | 545  | 645   | 632                | 720  | 745  | —                   | —   | —   |

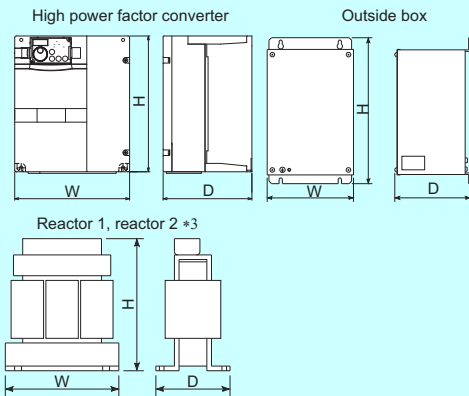

- \*1 The sizes indicated by W, H, and D are not the sizes of legs. These indicate sizes of whole reactors only.
- \*2 FR-HCB2 is not provided for H280K or higher. A filter capacitor and inrush current limit resistors are provided instead.
- \*3 Install reactors (FR-HCL21 and 22) on a horizontal surface.

## ●Fuse

For safety, installation of a fuse is recommended between a high power factor converter and an inverter. Select a fuse according to the capacity of the connected motor.  
Select a fuse from the table below, and install it to the P side and the N side between the high power factor converter and the inverter.

### <<Fuse selection table>>

Manufacturer: Mersen Japan K.K.  
Contact: Sun-Wa Technos Corporation

- \*1 Use the CUS102 (without fuse light melting indicator) or CUS102I (with fuse light melting indicator) fuse holders (2-pole type).
- \*2 When installing several fuses in parallel, leave 12mm or more between the fuses.

### <<200 V class>>

| Motor capacity (kW) | Rating (A) | Model                                   |
|---------------------|------------|---|
| 0.1                 | 5          | 6.900 CP GR 10.38 0005 (FR10GR69V5) *1  |
| 0.2                 | 10         | 6.900 CP GR 10.38 0010 (FR10GR69V10) *1 |
| 0.4                 | 16         | 6.900 CP GR 10.38 0016 (FR10GR69V16) *1 |
| 0.75                | 20         | 6.900 CP GR 10.38 0020 (FR10GR69V20) *1 |
| 1.5                 | 25         | 6.900 CP GR 10.38 0025 (FR10GR69V25) *1 |
| 2.2                 | 50         | 6.9 URD 30 TTF 0050                     |
| 3.7                 | 63         | 6.9 URD 30 TTF 0063                     |
| 5.5                 | 100        | 6.9 URD 30 TTF 0100                     |
| 7.5                 | 125        | 6.9 URD 30 TTF 0125                     |
| 11                  | 160        | 6.9 URD 30 TTF 0160                     |
| 15                  | 200        | 6.9 URD 30 TTF 0200                     |
| 18.5                | 250        | 6.9 URD 30 TTF 0250                     |
| 22                  | 315        | 6.9 URD 30 TTF 0315                     |
| 30                  | 400        | 6.9 URD 30 TTF 0400                     |
| 37                  | 500        | 6.9 URD 30 TTF 0500                     |
| 45                  | 630        | 6.9 URD 31 TTF 0630                     |
| 55                  | 700        | 6.9 URD 31 TTF 0700                     |
| 75                  | 800        | 6.9 URD 31 TTF 0800                     |

### <<400 V class>>

| Motor capacity (kW) | Rating (A) | Model                                       |
|---------------------|------------|---|
| 0.4                 | 12.5       | 6.900 CP GR 10.38 0012.5 (FR10GR69V12.5) *1 |
| 0.75                | 16         | 6.900 CP GR 10.38 0016 (FR10GR69V16) *1     |
| 1.5                 | 16         | 6.900 CP GR 10.38 0016 (FR10GR69V16) *1     |
| 2.2                 | 20         | 6.900 CP GR 10.38 0020 (FR10GR69V20) *1     |
| 3.7                 | 30         | 6.900 CP GR 10.38 0030 (FR10GR69V30) *1     |
| 5.5                 | 50         | 6.9 URD 30 TTF 0050                         |
| 7.5                 | 50         | 6.9 URD 30 TTF 0050                         |
| 11                  | 80         | 6.9 URD 30 TTF 0080                         |
| 15                  | 125        | 6.9 URD 30 TTF 0125                         |
| 18.5                | 125        | 6.9 URD 30 TTF 0125                         |
| 22                  | 160        | 6.9 URD 30 TTF 0160                         |
| 30                  | 200        | 6.9 URD 30 TTF 0200                         |
| 37                  | 250        | 6.9 URD 30 TTF 0250                         |
| 45                  | 315        | 6.9 URD 30 TTF 0315                         |
| 55                  | 350        | 6.9 URD 30 TTF 0350                         |
| 75                  | 450        | 6.9 URD 30 TTF 0450                         |
| 90                  | 500        | 6.9 URD 30 TTF 0500                         |
| 110                 | 550        | 6.9 URD 31 TTF 0550                         |

| Motor capacity (kW) | Rating (A) | Model  |
|---------------------|------------|--|
| 132                 | 630        | 6.9 URD 31 TTF 0630  |
| 160                 | 800        | 6.9 URD 31 TTF 0800  |
| 185                 | 900        | 6.9 URD 32 TTF 0900  |
| 220                 | 1000       | 6.9 URD 32 TTF 1000 or 6.9 URD 31 TTF 0630 × 2 in parallel *2  |
| 250                 | 1250       | 6.9 URD 33 TTF 1250 or 6.9 URD 31 TTF 0700 × 2 in parallel *2  |
| 280                 | 1400       | 6.9 URD 33 TTF 1400 or 6.9 URD 31 TTF 0800 × 2 in parallel *2  |
| 315                 | 1600       | 6.9 URD 232 TTF 1600 or 6.9 URD 31 TTF 0800 × 2 in parallel *2 |
| 355                 | 1800       | 6.9 URD 232 TTF 1800 or 6.9 URD 32 TTF 0900 × 2 in parallel *2 |
| 400                 | 1800       | 6.9 URD 232 TTF 1800 or 6.9 URD 32 TTF 0900 × 2 in parallel *2 |
| 450                 | 2500       | 6.9 URD 33 TTF 1250 × 2 in parallel *2                         |
| 500                 | 2700       | 6.9 URD 32 TTF 0900 × 3 in parallel *2                         |
| 560                 | 2700       | 6.9 URD 32 TTF 0900 × 3 in parallel *2                         |



**Multifunction regeneration converter**  
**Dedicated stand-alone reactor**  
**Dedicated box-type reactor**

FR-XC **ALL**  
 FR-XCL, FR-XCG **ALL**  
 FR-XCB **ALL**

One inverter can handle harmonic suppression and power regeneration.


Functions that match the application can be selected by combining the inverter/converter with the dedicated reactor FR-XCB (box-type) or FR-XCL/FR-XCG.

**Compact design offering a solution to harmonic problems**

The FR-XC series converter in use with the dedicated box-type reactor FR-XCB is classified as a self-excitation three-phase bridge circuit under the "Harmonic Suppression Guidelines for Specific Consumers" and achieves  $K_5 = 0$  (conversion factor for equivalent capacity).

**Up to 10 inverters connectable in common bus regeneration mode or in harmonic suppression mode**

Up to 10 inverters can be connected to a common converter. The power returned from an inverter during regenerative drive can be supplied to another inverter, which in turn saves energy.

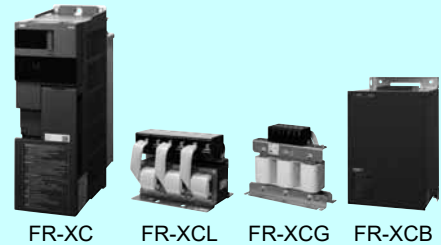

**Selectable regenerative power in power regeneration mode 2**

In power driving mode, the inverter supplies power. During regenerative driving, the FR-XC converter returns power to the power supply. The capacity of the FR-XC converter is selectable according to the desired regenerative power. Thus, the compact converter is applicable when the regenerative power is smaller than the inverter capacity, which allows cost reduction.

**●Combination**

**<<Combination in common bus regeneration mode>>**

• 200 V class

| Multifunction regeneration converter |                               | Dedicated stand-alone reactor |
|--------------------------------------|-------------------------------|-------------------------------|
| Model                                | Rated surrounding temperature | FR-XCL-[ ]K                   |
| FR-XC-7.5K                           | 50°C/40°C rating              | 7.5                           |
| FR-XC-11K                            |                               | 11                            |
| FR-XC-15K                            |                               | 15                            |
| FR-XC-18.5K-PWM                      |                               | 22                            |
| FR-XC-22K                            |                               | 30                            |
| FR-XC-22K-PWM                        |                               |                               |
| FR-XC-30K                            |                               | 37                            |
| FR-XC-37K                            |                               |                               |
| FR-XC-37K-PWM                        |                               |                               |
| FR-XC-55K                            |                               | 55                            |
| FR-XC-55K-PWM                        |                               |                               |

• 400 V class

| Multifunction regeneration converter |                               | Dedicated stand-alone reactor |
|--------------------------------------|-------------------------------|-------------------------------|
| Model                                | Rated surrounding temperature | FR-XCL-H[ ]K                  |
| FR-XC-H7.5K                          | 50°C/40°C rating              | 7.5                           |
| FR-XC-H11K                           |                               | 11                            |
| FR-XC-H15K                           |                               | 15                            |
| FR-XC-H18.5K-PWM                     |                               | 22                            |
| FR-XC-H22K                           |                               | 30                            |
| FR-XC-H22K-PWM                       |                               |                               |
| FR-XC-H30K                           |                               | 37                            |
| FR-XC-H37K                           |                               |                               |
| FR-XC-H37K-PWM                       |                               |                               |
| FR-XC-H55K                           |                               | 55                            |
| FR-XC-H55K-PWM                       |                               |                               |
| FR-XC-H75K                           | 50°C rating                   | 75                            |
| FR-XC-H75K-PWM                       | 40°C rating                   | 90                            |
| FR-XC-H160K                          | 50°C rating                   | 160                           |
| FR-XC-H160K-PWM                      | 40°C rating                   | 185                           |
| FR-XC-H220K                          | 50°C rating                   | 220                           |
| FR-XC-H220K-PWM                      | 40°C rating                   | 250                           |

| Multifunction regeneration converter |                               | Dedicated stand-alone reactor |
|--------------------------------------|-------------------------------|-------------------------------|
| Model                                | Rated surrounding temperature | FR-MCB-H[ ]                   |
| FR-XC-H75K                           | 50°C rating                   | 150                           |
| FR-XC-H75K-PWM                       | 40°C rating                   |                               |
| FR-XC-H160K                          | 50°C rating                   | 400                           |
| FR-XC-H160K-PWM                      | 40°C rating                   |                               |
| FR-XC-H220K                          | 50°C rating                   | 400                           |
| FR-XC-H220K-PWM                      | 40°C rating                   | 800                           |

**<<Combination in harmonic suppression mode>>**

• 200 V class

| Multifunction regeneration converter |                               | Dedicated stand-alone reactor |
|--------------------------------------|-------------------------------|-------------------------------|
| Model                                | Rated surrounding temperature | FR-XCB-[ ]K                   |
| FR-XC-18.5K-PWM                      | 50°C/40°C rating              | 18.5                          |
| FR-XC-22K                            |                               |                               |
| FR-XC-22K-PWM                        |                               | 22                            |
| FR-XC-30K                            |                               |                               |
| FR-XC-37K                            |                               | 37                            |
| FR-XC-37K-PWM                        |                               |                               |
| FR-XC-55K                            |                               | 55                            |
| FR-XC-55K-PWM                        |                               |                               |

• 400 V class

| Multifunction regeneration converter |                               | Dedicated stand-alone reactor |    |
|--------------------------------------|-------------------------------|-------------------------------|----|
| Model                                | Rated surrounding temperature | FR-XCB-H[ ]K                  |    |
| FR-XC-H18.5K-PWM                     | 50°C/40°C rating              | 18.5                          |    |
| FR-XC-H22K                           |                               |                               |    |
| FR-XC-H22K-PWM                       |                               | 22                            |    |
| FR-XC-H30K                           |                               |                               |    |
| FR-XC-H37K                           |                               | 37                            |    |
| FR-XC-H37K-PWM                       |                               |                               |    |
| FR-XC-H55K                           |                               | 55                            |    |
| FR-XC-H55K-PWM                       |                               |                               |    |
| FR-XC-H75K                           |                               | 50°C rating                   | 75 |
| FR-XC-H75K-PWM                       |                               | 40°C rating                   |    |
| FR-XC-H160K                          | 50°C rating                   | 160                           |    |
| FR-XC-H160K-PWM                      | 40°C rating                   |                               |    |
| FR-XC-H220K                          | 50°C rating                   | 220                           |    |
| FR-XC-H220K-PWM                      | 40°C rating                   |                               |    |

| Multifunction regeneration converter |                               | Dedicated stand-alone reactor |
|--------------------------------------|-------------------------------|-------------------------------|
| Model                                | Rated surrounding temperature | FR-MCB-H[ ]                   |
| FR-XC-H75K                           | 50°C rating                   | 150                           |
| FR-XC-H75K-PWM                       | 40°C rating                   |                               |
| FR-XC-H160K                          | 50°C rating                   | 400                           |
| FR-XC-H160K-PWM                      | 40°C rating                   |                               |
| FR-XC-H220K                          | 50°C rating                   | 400                           |
| FR-XC-H220K-PWM                      | 40°C rating                   |                               |

**<<Combination in power regeneration mode 2>>**

• 200 V class

| Multifunction regeneration converter |                               | Dedicated stand-alone reactor |
|--------------------------------------|-------------------------------|-------------------------------|
| Model                                | Rated surrounding temperature | FR-XCG-[ ]K                   |
| FR-XC-7.5K                           | 50°C/40°C rating              | 7.5                           |
| FR-XC-11K                            |                               | 11                            |
| FR-XC-15K                            |                               | 15                            |
| FR-XC-18.5K-PWM                      |                               | 22                            |
| FR-XC-22K                            |                               | 30                            |
| FR-XC-22K-PWM                        |                               |                               |
| FR-XC-30K                            |                               | 37                            |
| FR-XC-37K                            |                               |                               |
| FR-XC-37K-PWM                        |                               |                               |
| FR-XC-55K                            |                               | 55                            |
| FR-XC-55K-PWM                        |                               |                               |

• 400 V class

| Multifunction regeneration converter |                               | Dedicated stand-alone reactor |
|--------------------------------------|-------------------------------|-------------------------------|
| Model                                | Rated surrounding temperature | FR-XCG-H[ ]K                  |
| FR-XC-H7.5K                          | 50°C/40°C rating              | 7.5                           |
| FR-XC-H11K                           |                               | 11                            |
| FR-XC-H15K                           |                               | 15                            |
| FR-XC-H18.5K-PWM                     |                               | 22                            |
| FR-XC-H22K                           |                               | 30                            |
| FR-XC-H22K-PWM                       |                               |                               |
| FR-XC-H30K                           |                               | 37                            |
| FR-XC-H37K                           |                               |                               |
| FR-XC-H37K-PWM                       |                               |                               |
| FR-XC-H55K                           |                               | 55                            |
| FR-XC-H55K-PWM                       |                               |                               |
| FR-XC-H75K                           | 50°C rating                   | 75                            |
| FR-XC-H75K-PWM                       | 40°C rating                   | 90                            |
| FR-XC-H160K                          | 50°C rating                   | 132                           |
| FR-XC-H160K-PWM                      | 40°C rating                   | 160                           |
| FR-XC-H220K                          | 50°C rating                   | 185                           |
| FR-XC-H220K-PWM                      | 40°C rating                   | 220                           |

# Braking option

## <<Combination matrix of FR-XCCP and FR-XC(-PWM)>>

| Multifunction regeneration converter | Converter installation attachment for enclosure |
|--------------------------------------|---|
| Model                                | FR-XCCP[ ]                                      |
| FR-XC-7.5K FR-XC-H7.5K               | 01  |
| FR-XC-11K FR-XC-H11K                 |   |
| FR-XC-15K FR-XC-H15K                 | 02  |
| FR-XC-22K FR-XC-H22K                 |   |
| FR-XC-30K FR-XC-H30K                 | 03  |
| FR-XC-18.5K-PWM                      |   |
| FR-XC-H18.5K-PWM                     |   |
| FR-XC-22K-PWM                        |   |
| FR-XC-H22K-PWM                       |   |

## <<Combination matrix of FR-XCCU and FR-XC(-PWM)>>

| Multifunction regeneration converter | IP20 compatible attachment |
|--------------------------------------|----------------------------|
| Model                                | FR-XCCU[ ]                 |
| FR-XC-37K<br>FR-XC-37K-PWM           | 01                         |
| FR-XC-H55K<br>FR-XC-H55K-PWM         |                            |
| FR-XC-55K<br>FR-XC-55K-PWM           | 02                         |
| FR-XC-H37K<br>FR-XC-H37K-PWM         | 03                         |

## ●Specifications (Common bus regeneration mode)

### <<200V class>>

| Model                                      |   | FR-XC-[ ]K*1                          |                             |    |      |      |     |     | FR-XC-[ ]K-PWM*2 |      |     |     |     |
|--|---|---------------------------------------|-----------------------------|----|------|------|-----|-----|------------------|------|-----|-----|-----|
|  |   | 7.5                                   | 11                          | 15 | 22   | 30   | 37  | 55  | 18.5             | 22   | 37  | 55  |     |
| 50°C rating                                | Applicable inverter capacity (kW)           | 7.5                                   | 11                          | 15 | 22   | 30   | 37  | 55  | 22               | 30   | 37  | 55  |     |
|  | Applicable motor current (A)                | 33                                    | 46                          | 61 | 90   | 115  | 145 | 215 | 90               | 115  | 145 | 215 |     |
|  | Rated input current (A)                     | Power driving                         | 33                          | 47 | 63   | 92   | 124 | 151 | 223              | 92   | 124 | 151 | 223 |
|  |   | Regenerative driving                  | 26                          | 37 | 51   | 74   | 102 | 125 | 186              | 74   | 102 | 125 | 186 |
|  | Continuous rating / overload current rating |                                       | 100% continuous / 150% 60 s |    |      |      |     |     |                  |      |     |     |     |
| Power supply capacity (kVA)*3              |   | 17                                    | 20                          | 28 | 41   | 52   | 66  | 100 | 41               | 52   | 66  | 100 |     |
| 40°C rating                                | Applicable inverter capacity (kW)           | 7.5                                   | 11                          | 15 | 22   | 30   | 37  | 55  | 22               | 30   | 37  | 55  |     |
|  | Applicable motor current (A)                | 36                                    | 50                          | 67 | 99   | 127  | 160 | 236 | 99               | 127  | 160 | 236 |     |
|  | Rated input current (A)                     | Power driving                         | 36                          | 51 | 69   | 101  | 136 | 166 | 245              | 101  | 136 | 166 | 245 |
|  |   | Regenerative driving                  | 28                          | 40 | 56   | 81   | 112 | 138 | 204              | 81   | 112 | 138 | 204 |
|  | Continuous rating / overload current rating |                                       | 100% continuous / 150% 60 s |    |      |      |     |     |                  |      |     |     |     |
| Power supply capacity (kVA)*3              |   | 19                                    | 22                          | 31 | 45   | 57   | 73  | 110 | 45               | 57   | 73  | 110 |     |
| Power source                               | Rated input AC voltage/frequency            | Three-phase 200 to 240 V, 50/60 Hz*10 |                             |    |      |      |     |     |                  |      |     |     |     |
|  | Permissible AC voltage fluctuation          | Three-phase 170 to 264 V, 50/60 Hz    |                             |    |      |      |     |     |                  |      |     |     |     |
|  | Permissible frequency fluctuation           | ±5%                                   |                             |    |      |      |     |     |                  |      |     |     |     |
| Protection rating of structure (IEC 60529) |   | IP00*5                                |                             |    |      |      |     |     | IP00*6           |      |     |     |     |
| Cooling system                             |   | Forced air                            |                             |    |      |      |     |     |                  |      |     |     |     |
| Number of connectable inverters            |   | 10*8                                  |                             |    |      |      |     |     |                  |      |     |     |     |
| Approx. mass (kg)*9                        |   | 5                                     | 5                           | 6  | 10.5 | 10.5 | 28  | 38  | 10.5             | 10.5 | 28  | 38  |     |

### <<400V class>>

| Model                                      |   | FR-XC-H[ ]K*1                         |                             |    |      |      |    |     |  |     |     | FR-XC-[ ]K-PWM*2                      |            |    |  |     |     |     |     |
|--|---|---------------------------------------|-----------------------------|----|------|------|----|-----|--|-----|-----|---------------------------------------|------------|----|--|-----|-----|-----|-----|
|  |   | 7.5                                   | 11                          | 15 | 22   | 30   | 37 | 55  | 75                                       | 160 | 220 | 18.5                                  | 22         | 37 | 55                                       | 75  | 160 | 220 |     |
| 50°C rating                                | Applicable inverter capacity (kW)           | 7.5                                   | 11                          | 15 | 22   | 30   | 37 | 55  | 75                                       | 160 | 220 | 22                                    | 30         | 37 | 55                                       | 75  | 160 | 220 |     |
|  | Applicable motor current (A)                | 17                                    | 23                          | 31 | 44   | 57   | 71 | 110 | 144                                      | 325 | 432 | 44                                    | 57         | 71 | 110                                      | 144 | 325 | 432 |     |
|  | Rated input current (A)                     | Power driving                         | 18                          | 25 | 34   | 49   | 65 | 80  | 118                                      | 158 | 331 | 450                                   | 49         | 65 | 80                                       | 118 | 158 | 331 | 450 |
|  |   | Regenerative driving                  | 14                          | 20 | 27   | 39   | 54 | 66  | 98                                       | 135 | 288 | 396                                   | 39         | 54 | 66                                       | 98  | 135 | 288 | 396 |
|  | Continuous rating / overload current rating |                                       | 100% continuous / 150% 60 s |    |      |      |    |     |  |     |     |                                       |            |    |  |     |     |     |     |
| Power supply capacity (kVA)*4              |   | 17                                    | 20                          | 28 | 41   | 52   | 66 | 100 | 133                                      | 279 | 379 | 41                                    | 52         | 66 | 100                                      | 133 | 279 | 379 |     |
| 40°C rating                                | Applicable inverter capacity (kW)           | 7.5                                   | 11                          | 15 | 22   | 30   | 37 | 55  | 90                                       | 185 | 250 | 22                                    | 30         | 37 | 55                                       | 90  | 185 | 250 |     |
|  | Applicable motor current (A)                | 18                                    | 25                          | 34 | 48   | 63   | 78 | 120 | 180                                      | 361 | 481 | 48                                    | 63         | 78 | 120                                      | 180 | 361 | 481 |     |
|  | Rated input current (A)                     | Power driving                         | 20                          | 27 | 37   | 53   | 72 | 88  | 129                                      | 189 | 382 | 515                                   | 53         | 72 | 88                                       | 129 | 189 | 382 | 515 |
|  |   | Regenerative driving                  | 15                          | 21 | 29   | 42   | 59 | 72  | 107                                      | 162 | 333 | 450                                   | 42         | 59 | 72                                       | 107 | 162 | 333 | 450 |
|  | Continuous rating / overload current rating |                                       | 100% continuous / 150% 60 s |    |      |      |    |     |  |     |     |                                       |            |    |  |     |     |     |     |
| Power supply capacity (kVA)*4              |   | 19                                    | 22                          | 30 | 44   | 58   | 73 | 110 | 160                                      | 322 | 434 | 44                                    | 58         | 73 | 110                                      | 160 | 322 | 434 |     |
| Power source                               | Rated input AC voltage/frequency            | Three-phase 380 to 500 V, 50/60 Hz*10 |                             |    |      |      |    |     | Three-phase 380 to 500 V, 50/60 Hz*10+11 |     |     | Three-phase 380 to 500 V, 50/60 Hz*10 |            |    | Three-phase 380 to 500 V, 50/60 Hz*10+11 |     |     |     |     |
|  | Permissible AC voltage fluctuation          | Three-phase 323 to 550 V, 50/60 Hz    |                             |    |      |      |    |     |  |     |     |                                       |            |    |  |     |     |     |     |
|  | Permissible frequency fluctuation           | ±5%                                   |                             |    |      |      |    |     |  |     |     |                                       |            |    |  |     |     |     |     |
| Protection rating of structure (IEC 60529) |   | IP00*5                                |                             |    |      |      |    |     | IP20*5 (FR-XCB and FR-MCB included)      |     |     | IP00*6                                |            |    | IP20*7 (FR-XCB and FR-MCB included)      |     |     |     |     |
| Cooling system                             |   | Forced air                            |                             |    |      |      |    |     |  |     |     |                                       | Forced air |    |  |     |     |     |     |
| Number of connectable inverters            |   | 10*8                                  |                             |    |      |      |    |     |  |     |     |                                       |            |    |  |     |     |     |     |
| Approx. mass (kg)*9                        |   | 5                                     | 5                           | 6  | 10.5 | 10.5 | 28 | 28  | 45                                       | 96  | 96  | 10.5                                  | 10.5       | 28 | 28                                       | 45  | 96  | 96  |     |

- \*1 For the FR-XC-[ ]K, the common bus regeneration mode is selected initially. For the FR-XC-[ ]K-PWM, the harmonic suppression mode is selected initially.
- \*2 The harmonic suppression mode is selected initially. Set Pr.416 = "0" to select the common bus regeneration mode.
- \*3 Selection example for 220 V power supply voltage.
- \*4 Selection example for 440 V power supply voltage.
- \*5 IP00 for the FR-XCL.
- \*6 IP20 for the FR-XCB.
- \*7 IP00 when the side wiring cover of the FR-XC is removed.
- \*8 If you want to connect 11 or more inverters, contact your sales representative.
- \*9 Mass of the FR-XC alone.
- \*10 The permissible voltage imbalance ratio is 3% or less. (Unbalance factor = Max | Line voltage - Mean of three line voltages | / Mean of three line voltages × 100)
- \*11 The rated voltage of the FR-MCB is three-phase 380 to 480 V, 50/60 Hz.

● Specifications (Harmonic suppression mode)

<<200V class>>

| Model                                      |   | FR-XC-H[ ]K*1                           |      |     |     | FR-XC-[ ]K-PWM*1                        |      |     |     |
|--|---|---|------|-----|-----|---|------|-----|-----|
|  |   | 22                                      | 30   | 37  | 55  | 18.5                                    | 22   | 37  | 55  |
| 50°C rating                                | Applicable inverter capacity (kW)           | 18.5                                    | 22   | 37  | 55  | 18.5                                    | 22   | 37  | 55  |
|  | Applicable motor current (A)                | 76                                      | 90   | 145 | 215 | 76                                      | 90   | 145 | 215 |
|  | Rated input current (A)                     | 69                                      | 82   | 134 | 198 | 69                                      | 82   | 134 | 198 |
|  | Power/ regenerative driving                 |   |      |     |     |   |      |     |     |
|  | Continuous rating / overload current rating | 100% continuous / 150% 60 s             |      |     |     | 100% continuous / 150% 60 s             |      |     |     |
| Power supply capacity (kVA)*2              |   | 30                                      | 35   | 57  | 84  | 30                                      | 35   | 57  | 84  |
| 40°C rating                                | Applicable inverter capacity (kW)           | 18.5                                    | 22   | 37  | 55  | 18.5                                    | 22   | 37  | 55  |
|  | Applicable motor current (A)                | 83                                      | 99   | 160 | 236 | 83                                      | 99   | 160 | 236 |
|  | Rated input current (A)                     | 75                                      | 90   | 147 | 217 | 75                                      | 90   | 147 | 217 |
|  | Power/ regenerative driving                 |   |      |     |     |   |      |     |     |
|  | Continuous rating / overload current rating | 100% continuous / 150% 60 s             |      |     |     | 100% continuous / 150% 60 s             |      |     |     |
| Power supply capacity (kVA)*2              |   | 32                                      | 38   | 62  | 92  | 32                                      | 38   | 62  | 92  |
| Power source                               | Rated input AC voltage/frequency            | Three-phase 200 to 230 V, 50/60 Hz*6+11 |      |     |     | Three-phase 200 to 230 V, 50/60 Hz*6+11 |      |     |     |
|  | Permissible AC voltage fluctuation          | Three-phase 170 to 253 V, 50/60 Hz      |      |     |     | Three-phase 170 to 253 V, 50/60 Hz      |      |     |     |
|  | Permissible frequency fluctuation           | ±5%                                     |      |     |     | ±5%                                     |      |     |     |
| Input power factor                         |   | 0.99 or more (when load ratio is 100%)  |      |     |     | 0.99 or more (when load ratio is 100%)  |      |     |     |
| Protection rating of structure (IEC 60529) |   | IP00*4                                  |      |     |     | IP00*5                                  |      |     |     |
| Cooling system                             |   | Forced air                              |      |     |     | Forced air                              |      |     |     |
| Number of connectable inverters            |   | 10*8                                    |      |     |     | 10*8                                    |      |     |     |
| Approx. mass (kg)*9                        |   | 10.5                                    | 10.5 | 28  | 28  | 10.5                                    | 10.5 | 28  | 38  |

<<400V class>>


| Model                                      |   | FR-XC-[ ]K*1                            |      |    |     |                                     |     |     | FR-XC-[ ]K-PWM*1                        |      |    |     |                                     |     |     |
|--|---|---|------|----|-----|-------------------------------------|-----|-----|---|------|----|-----|-------------------------------------|-----|-----|
|  |   | 22                                      | 30   | 37 | 55  | 75                                  | 160 | 220 | 18.5                                    | 22   | 37 | 55  | 75                                  | 160 | 220 |
| 50°C rating                                | Applicable inverter capacity (kW)           | 18.5                                    | 22   | 37 | 55  | 75                                  | 160 | 220 | 18.5                                    | 22   | 37 | 55  | 75                                  | 160 | 220 |
|  | Applicable motor current (A)                | 38                                      | 44   | 71 | 110 | 144                                 | 325 | 432 | 38                                      | 44   | 71 | 110 | 144                                 | 325 | 432 |
|  | Rated input current (A)                     | 37                                      | 43   | 71 | 104 | 139                                 | 290 | 397 | 37                                      | 43   | 71 | 104 | 139                                 | 290 | 397 |
|  | Power/ regenerative driving                 |   |      |    |     |                                     |     |     |   |      |    |     |                                     |     |     |
|  | Continuous rating / overload current rating | 100% continuous / 150% 60 s             |      |    |     |                                     |     |     | 100% continuous / 150% 60 s             |      |    |     |                                     |     |     |
| Power supply capacity (kVA)*3              |   | 32                                      | 37   | 60 | 88  | 118                                 | 245 | 334 | 32                                      | 37   | 60 | 88  | 118                                 | 245 | 334 |
| 40°C rating                                | Applicable inverter capacity (kW)           | 18.5                                    | 22   | 37 | 55  | 90                                  | 185 | 250 | 18.5                                    | 22   | 37 | 55  | 90                                  | 185 | 250 |
|  | Applicable motor current (A)                | 42                                      | 48   | 78 | 120 | 180                                 | 361 | 481 | 42                                      | 48   | 78 | 120 | 180                                 | 361 | 481 |
|  | Rated input current (A)                     | 40                                      | 47   | 78 | 113 | 168                                 | 335 | 450 | 40                                      | 47   | 78 | 113 | 168                                 | 335 | 450 |
|  | Power/ regenerative driving                 |   |      |    |     |                                     |     |     |   |      |    |     |                                     |     |     |
|  | Continuous rating / overload current rating | 100% continuous / 150% 60 s             |      |    |     |                                     |     |     | 100% continuous / 150% 60 s             |      |    |     |                                     |     |     |
| Power supply capacity (kVA)*3              |   | 34                                      | 40   | 66 | 96  | 142                                 | 282 | 379 | 34                                      | 40   | 66 | 96  | 142                                 | 282 | 379 |
| Power source                               | Rated input AC voltage/frequency            | Three-phase 380 to 480 V, 50/60 Hz*7+11 |      |    |     |                                     |     |     | Three-phase 380 to 480 V, 50/60 Hz*7+11 |      |    |     |                                     |     |     |
|  | Permissible AC voltage fluctuation          | Three-phase 323 to 506 V, 50/60 Hz      |      |    |     |                                     |     |     | Three-phase 323 to 506 V, 50/60 Hz      |      |    |     |                                     |     |     |
|  | Permissible frequency fluctuation           | ±5%                                     |      |    |     |                                     |     |     | ±5%                                     |      |    |     |                                     |     |     |
| Input power factor                         |   | 0.99 or more (when load ratio is 100%)  |      |    |     |                                     |     |     | 0.99 or more (when load ratio is 100%)  |      |    |     |                                     |     |     |
| Protection rating of structure (IEC 60529) |   | IP00*4                                  |      |    |     | IP20*10(FR-XCB and FR-MCB included) |     |     | IP00*5                                  |      |    |     | IP20*10(FR-XCB and FR-MCB included) |     |     |
| Cooling system                             |   | Forced air                              |      |    |     |                                     |     |     | Forced air                              |      |    |     |                                     |     |     |
| Number of connectable inverters            |   | 10*8                                    |      |    |     |                                     |     |     | 10*8                                    |      |    |     |                                     |     |     |
| Approx. mass (kg)*9                        |   | 10.5                                    | 10.5 | 28 | 28  | 45                                  | 96  | 96  | 10.5                                    | 10.5 | 28 | 38  | 45                                  | 96  | 96  |

- \*1 For the FR-XC-[ ]K, the common bus regeneration mode is selected initially. For the FR-XC-[ ]K-PWM, the harmonic suppression mode is selected initially.
- \*2 Selection example for 220 V power supply voltage.
- \*3 Selection example for 440 V power supply voltage.
- \*4 IP00 for the FR-XCL.
- \*5 IP20 for the FR-XCB.
- \*6 The DC bus voltage is approx. 297 VDC at an input voltage of 200 VAC, approx. 327 VDC at 220 VAC, and approx. 342 VDC at 230 VAC.
- \*7 The DC bus voltage is approx. 594 VDC at an input voltage of 400 VAC, approx. 653 VDC at 440 VAC, and approx. 713 VDC at 480 VAC.
- \*8 If you want to connect 11 or more inverters, contact your sales representative.
- \*9 Mass of the FR-XC alone.
- \*10 IP00 when the side wiring cover of the FR-XC is removed.
- \*11 The permissible voltage imbalance ratio is 3% or less. (Unbalance factor = Max | Line voltage - Mean of three line voltages | / Mean of three line voltages × 100)


# Braking option

## ● Connection diagram (Common bus regeneration mode)

<<55K or lower>>

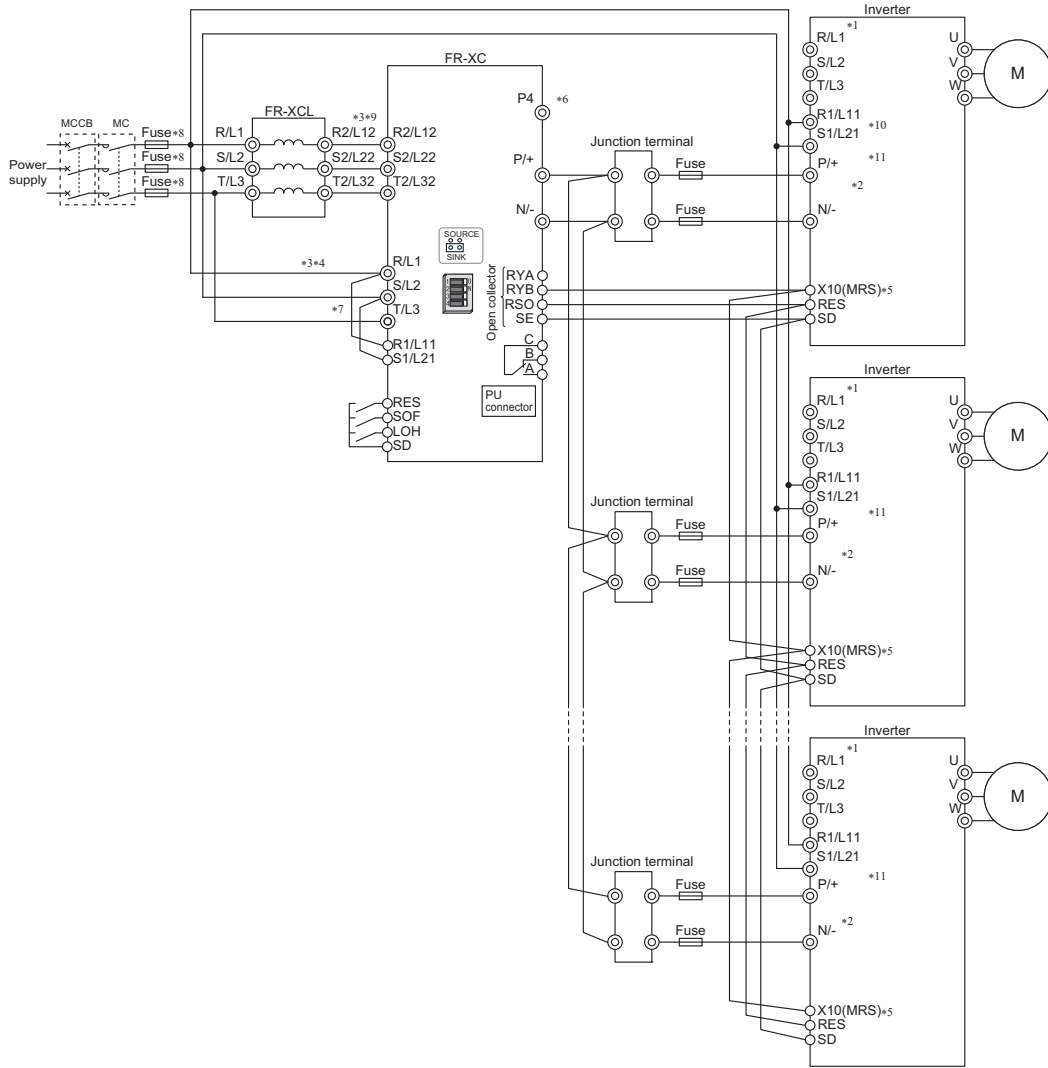


- \*1 Never connect the power supply to terminals R/L1, S/L2, and T/L3 on the inverter. Incorrect connection will damage the inverter and the converter.
- \*2 Connect between the inverter terminal P/+ and the converter terminal P/+ and between the inverter terminal N/- and the converter terminal N/- for polarity consistency. Connecting opposite polarity of terminals P/+ and N/- will damage the converter and the inverter.
- \*3 Confirm the correct phase sequence of three-phase current to connect between the reactor and the converter, and between the power supply and the converter (terminals R/L1, S/L2, and T/L3).  
Incorrect connection will damage the converter.
- \*4 Always connect between the power supply and terminals R/L1, S/L2, and T/L3 of the converter. Operating the inverter without connecting them will damage the converter.
- \*5 Assign the X10 signal to any of the input terminals.
- \*6 Do not connect anything to terminal P4.
- \*7 When using a separate power supply for the control circuit, remove each jumper at terminal R1/L11 and terminal S1/L21.
- \*8 Install the UL listed fuse (refer to the FR-XC Instruction Manual) on the input side of the reactor to meet the UL/cUL standards.
- \*9 Do not install an MCCB or MC between the reactor and the converter. Doing so disrupts proper operation.
- \*10 When the inverter has control circuit power supply terminals (R1/L11 and S1/L21), wire them as shown in the diagram. For inverters without terminals R1/L11 and S1/L21, wiring is not required.
- \*11 Instead of connecting the terminals to the AC power supply, the control circuit can be powered by connecting terminal R1/L11 to terminal P/+ and terminal S1/L21 to terminal N/-.

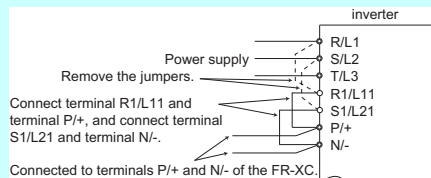


## ● Connection diagram (Harmonic suppression mode)

<<55K or lower>>

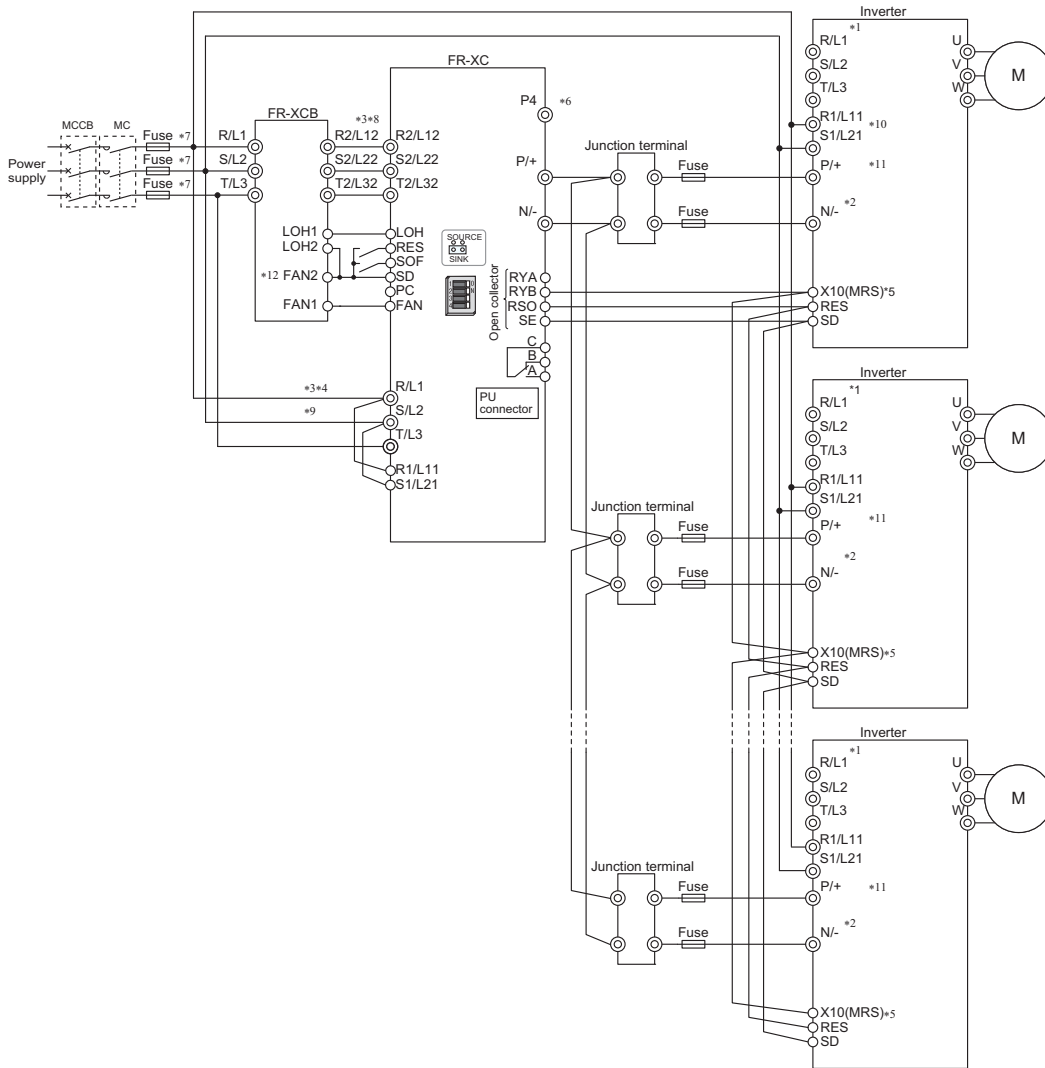

- \*1 Never connect the power supply to terminals R/L1, S/L2, and T/L3 on the inverter. Incorrect connection will damage the inverter and the converter.
- \*2 Connect between the inverter terminal P/+ and the converter terminal P/+ and between the inverter terminal N/- and the converter terminal N/- for polarity consistency. Connecting opposite polarity of terminals P/+ and N/- will damage the converter and the inverter.
- \*3 Confirm the correct phase sequence of three-phase current to connect between the reactor and the converter, and between the power supply and the converter (terminals R/L1, S/L2, and T/L3). Incorrect connection will damage the converter.
- \*4 Always connect between the power supply and terminals R/L1, S/L2, and T/L3 of the converter. Operating the inverter without connecting them will damage the converter.
- \*5 Assign the X10 signal to any of the input terminals.
- \*6 Do not connect anything to terminal P4.
- \*7 Install the UL listed fuse (refer to the FR-XC Instruction Manual) on the input side of the reactor to meet the UL/cUL standards.
- \*8 Do not install an MCCB or MC between the reactor and the converter. Doing so disrupts proper operation.
- \*9 When using a separate power supply for the control circuit, remove the jumpers connected to terminals R1/L11 and S1/L21.
- \*10 When the inverter has control circuit power supply terminals (R1/L11 and S1/L21), wire them as shown in the diagram. For inverters without terminals R1/L11 and S1/L21, wiring is not required.
- \*11 Instead of connecting the terminals to the AC power supply, the control circuit can be powered by connecting terminal R1/L11 to terminal P/+ and terminal S1/L21 to terminal N/-. In this case, do not connect the terminals to the AC power supply. Doing so will damage the inverter.

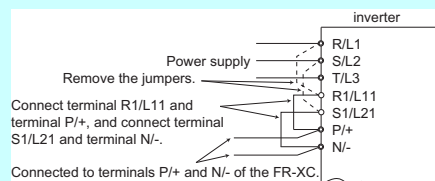

\*12 The terminal symbols differ depending on the manufacture year and month of the FR-XCB. (Refer to the FR-XC Instruction Manual.)

For details on the control modes, refer to the FR-XC catalog (L(NA)06116ENG).

Catalog ►




# Braking option

## ●Outline dimension drawings

This is an example of the outer appearance, which differs depending on the model.


### <<Multifunction regeneration converter FR-XC (-PWM)>>

•FR-XC-(H)7.5K, (H)11K, (H)15K

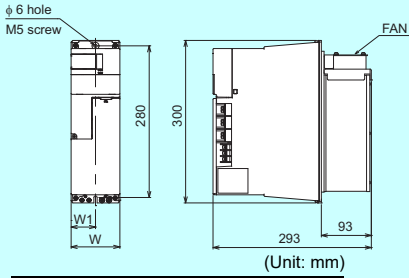


| Model                 | W   | W1 |
|-----------------------|-----|----|
| FR-XC-(H)7.5K, (H)11K | 90  | 45 |
| FR-XC-(H)15K          | 120 | 60 |

•FR-XC-(H)37K, (H)55K  
•FR-XC-(H)37K-PWM, (H)55K-PWM

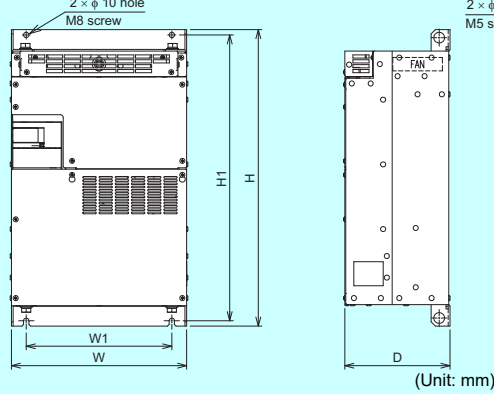


| Model  | W   | W1  | H   | H1  | D   |
|--|-----|-----|-----|-----|-----|
| FR-XC-(H)37K, H55K<br>FR-XC-(H)37K-PWM, H55K-PWM | 325 | 270 | 550 | 530 | 195 |
| FR-XC-55K<br>FR-XC-55K-PWM                       | 370 | 300 | 620 | 600 | 250 |

•FR-XC-(H)22K, (H)30K  
•FR-XC-(H)18.5K-PWM, (H)22K-PWM

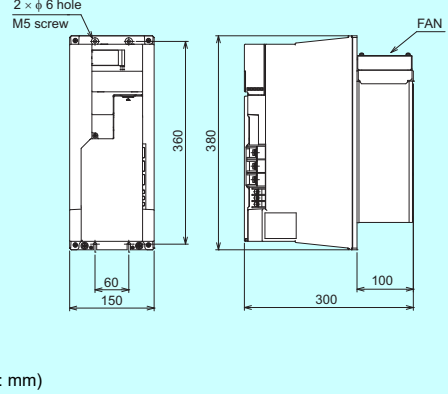


(Unit: mm)

•FR-XC-H75K  
•FR-XC-H75K-PWM

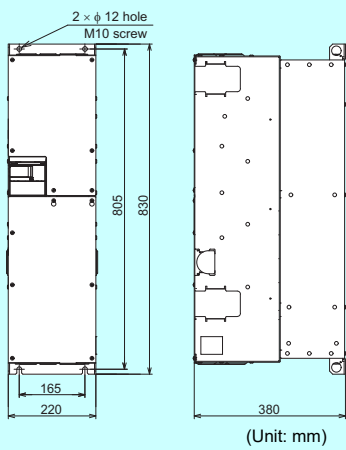


•FR-XC-H160K, H220K  
•FR-XC-H160K-PWM, 220K-PWM

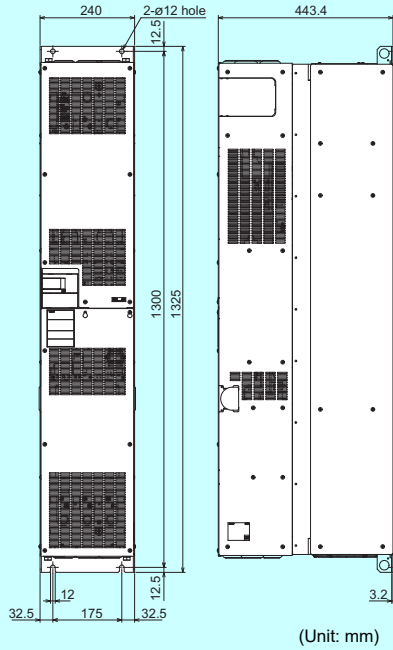


<<Dedicated stand-alone reactor FR-XCL>>

FR-XCL-FR-XCL-(H)7.5K, (H)11K, (H)15K, (H)22K, (H)30K, (H)37K, (H)55K, H75K, H90K

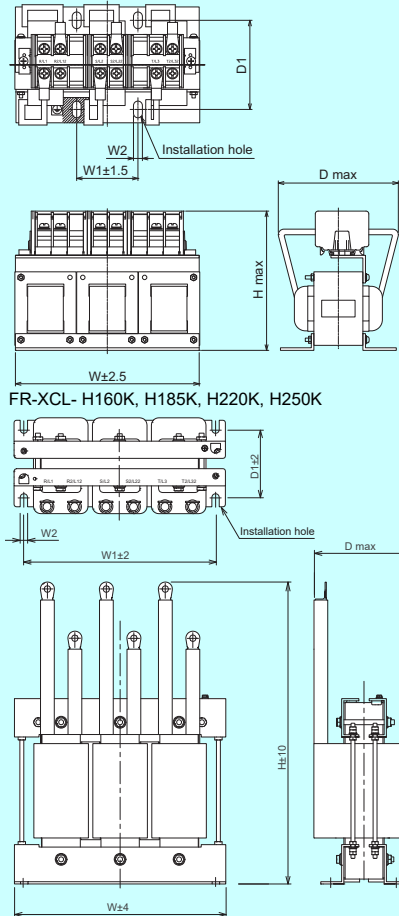

<<Dedicated stand-alone reactor FR-XCG>>

FR-XCG-(H)7.5K, (H)11K, (H)15K, (H)22K, (H)30K, (H)37K, (H)55K, H75K, H90K

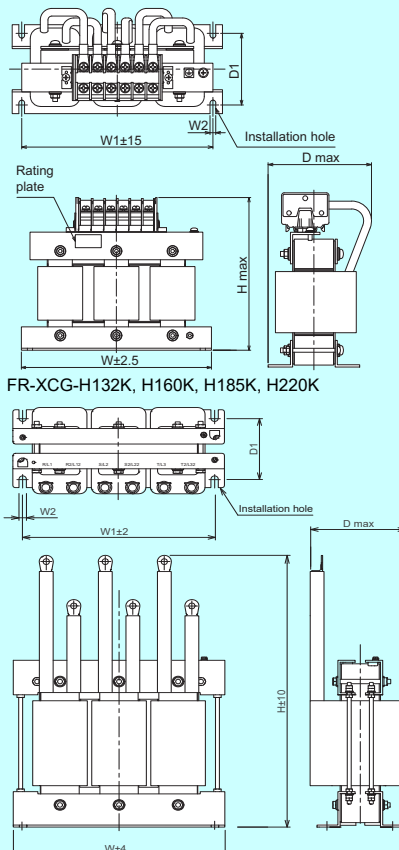

200 V class

(Unit: mm)

| Model       | W   | W1  | W2 | H   | D   | D1    | Mounting screw size | Terminal screw size | Mass    |
|-------------|-----|-----|----|-----|-----|-------|---------------------|---------------------|---------|
| FR-XCL-7.5K | 165 | 55  | 8  | 125 | 120 | 80±2  | M6                  | M5                  | 3.9 kg  |
| FR-XCL-11K  |     |     |    |     | 130 | 73±2  |                     | M5                  | 3.6 kg  |
| FR-XCL-15K  | 192 | 70  | 8  | 130 | 130 | 100±2 | M6                  | M6                  | 5.5 kg  |
| FR-XCL-22K  |     |     |    |     | 140 | 110±2 |                     | M6                  | 6.3 kg  |
| FR-XCL-30K  | 240 | 70  | 10 | 150 | 160 | 119±2 | M8                  | M10                 | 10.0 kg |
| FR-XCL-37K  | 248 | 200 | 10 | 190 | 240 | 120±5 | M8                  | M10                 | 12.0 kg |
| FR-XCL-55K  | 250 | 225 | 10 | 190 | 260 | 135±5 | M8                  | M10                 | 15.5 kg |

400 V class

(Unit: mm)

| Model        | W   | W1  | W2 | H   | D   | D1    | Mounting screw size | Terminal screw size | Mass     |
|--------------|-----|-----|----|-----|-----|-------|---------------------|---------------------|----------|
| FR-XCL-H7.5K | 165 | 55  | 8  | 125 | 120 | 73±2  | M6                  | M5                  | 3.7 kg   |
| FR-XCL-H11K  |     |     |    |     | 135 | 80±2  |                     | M5                  | 4.2 kg   |
| FR-XCL-H15K  | 240 | 70  | 8  | 150 | 150 | 109±2 | M6                  | M6                  | 6.0 kg   |
| FR-XCL-H22K  |     |     |    |     | 170 | 129±2 |                     | M6                  | 9.0 kg   |
| FR-XCL-H30K  | 220 | 200 | 10 | 190 | 230 | 120±5 | M8                  | M8                  | 12.0 kg  |
| FR-XCL-H55K  | 250 | 225 | 10 | 190 | 230 | 135±5 | M8                  | M8                  | 16.0 kg  |
| FR-XCL-H75K  | 300 | 270 | 10 | 335 | 200 | 140±2 | M8                  | M8                  | 50.0 kg  |
| FR-XCL-H90K  | 300 | 270 | 10 | 360 | 210 | 150±2 | M8                  | M8                  | 60.0 kg  |
| FR-XCL-H160K | 430 | 390 | 15 | 600 | 190 | 140   | M12                 | M12                 | 95.0 kg  |
| FR-XCL-H185K |     |     |    |     | 210 | 160   |                     | M12                 | 115.0 kg |
| FR-XCL-H220K | 500 | 460 | 15 | 640 | 210 | 160   | M12                 | M12                 | 150.0 kg |
| FR-XCL-H250K |     |     |    |     |     |       |                     | 660                 | 160      |

200 V class

(Unit: mm)

| Model       | W   | W1  | W2 | H   | D   | D1      | Mounting screw size | Terminal screw size | Mass  |
|-------------|-----|-----|----|-----|-----|---------|---------------------|---------------------|-------|
| FR-XCG-7.5K | 220 | 200 | 6  | 185 | 115 | 60±1.5  | M5                  | M5                  | 5 kg  |
| FR-XCG-11K  |     |     |    |     | 120 | 75±1.5  |                     | M5                  | 8 kg  |
| FR-XCG-15K  | 255 | 225 | 8  | 240 | 190 | 90±1.5  | M6                  | M6                  | 11 kg |
| FR-XCG-22K  |     |     |    |     | 140 | 85±1.5  |                     | M6                  | 16 kg |
| FR-XCG-30K  | 300 | 270 | 10 | 285 | 155 | 100±1.5 | M8                  | M10                 | 20 kg |
| FR-XCG-37K  |     |     |    |     | 180 | 130±1.5 |                     | M8                  | 25 kg |
| FR-XCG-55K  | 300 | 270 | 10 | 285 | 190 | 130±1.5 | M8                  | M10                 | 40 kg |

400 V class

(Unit: mm)


| Model        | W   | W1  | W2 | H   | D   | D1      | Mounting screw size | Terminal screw size | Mass     |
|--------------|-----|-----|----|-----|-----|---------|---------------------|---------------------|----------|
| FR-XCG-H7.5K | 220 | 200 | 6  | 185 | 115 | 60±1.5  | M5                  | M5                  | 5 kg     |
| FR-XCG-H11K  |     |     |    |     | 120 | 75±1.5  |                     | M5                  | 8 kg     |
| FR-XCG-H15K  | 255 | 225 | 8  | 240 | 130 | 90±1.5  | M6                  | M6                  | 11 kg    |
| FR-XCG-H22K  |     |     |    |     | 140 | 85±1.5  |                     | M6                  | 16 kg    |
| FR-XCG-H30K  | 300 | 270 | 10 | 285 | 180 | 100±1.5 | M8                  | M8                  | 20 kg    |
| FR-XCG-H37K  |     |     |    |     | 190 | 130±1.5 |                     | M8                  | 25 kg    |
| FR-XCG-H55K  | 300 | 270 | 10 | 335 | 200 | 140±2   | M8                  | M8                  | 40 kg    |
| FR-XCG-H75K  | 300 | 270 | 10 | 335 | 200 | 140±2   | M8                  | M8                  | 50 kg    |
| FR-XCG-H90K  | 300 | 270 | 10 | 360 | 210 | 150±2   | M8                  | M8                  | 60 kg    |
| FR-XCG-H132K | 430 | 390 | 15 | 560 | 195 | 140±2   | M12                 | M12                 | 80.0 kg  |
| FR-XCG-H160K |     |     |    |     | 600 | 190     |                     | M12                 | 95.0 kg  |
| FR-XCG-H185K | 500 | 460 | 15 | 650 | 210 | 160±2   | M12                 | M12                 | 115.0 kg |
| FR-XCG-H220K |     |     |    |     |     |         |                     | 160                 | 160      |

# Braking option

## <<Dedicated box-type reactor FR-XCB>>

FR-XCB-(H)55K or less

FR-XCB-H75K

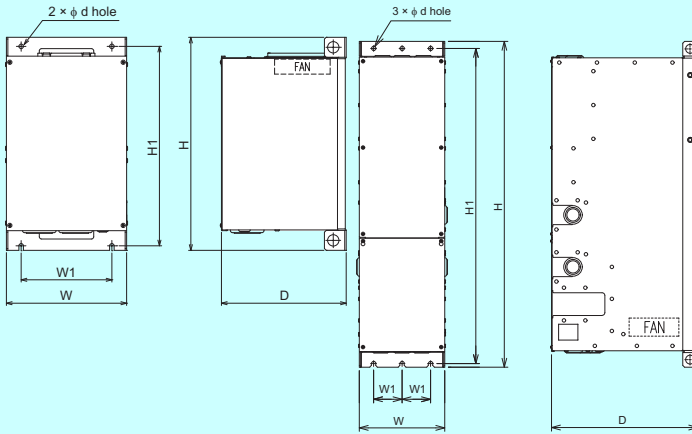

200 V class

(Unit: mm)


| Model        | W   | W1  | H   | H1  | D   | d  | Screw size | Mass    |
|--------------|-----|-----|-----|-----|-----|----|------------|---------|
| FR-XCB-18.5K | 265 | 200 | 470 | 440 | 275 | 10 | M8         | 26.0 kg |
| FR-XCB-22K   |     |     |     |     |     |    |            | 56.9 kg |
| FR-XCB-37K   |     |     |     |     |     |    |            | 68.5 kg |
| FR-XCB-55K   |     |     |     |     |     |    |            |         |

400 V class

(Unit: mm)

| Model         | W   | W1  | H   | H1  | D   | d  | Screw size | Mass     |
|---------------|-----|-----|-----|-----|-----|----|------------|----------|
| FR-XCB-H18.5K | 265 | 200 | 470 | 440 | 275 | 10 | M8         | 26.9 kg  |
| FR-XCB-H22K   |     |     |     |     |     |    |            | 63.0 kg  |
| FR-XCB-H37K   |     |     |     |     |     |    |            | 73.0 kg  |
| FR-XCB-H55K   |     |     |     |     |     |    |            |          |
| FR-XCB-H75K   | 240 | 80  | 915 | 885 | 410 | 12 | M10        | 120.0 kg |


FR-XCB-H160K, H220K

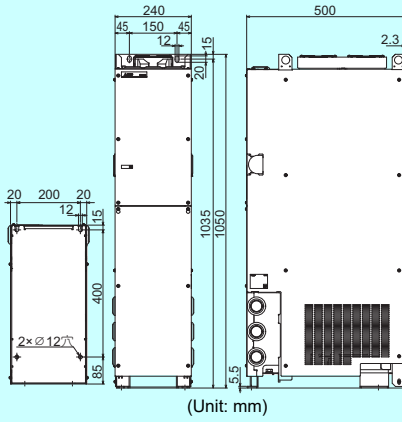

(Unit: mm)

| Model        | Mass     |
|--------------|----------|
| FR-XCB-H160K | 230.0 kg |
| FR-XCB-H220K | 260.0 kg |


## <<Dedicated contactor box FR-MCB>>

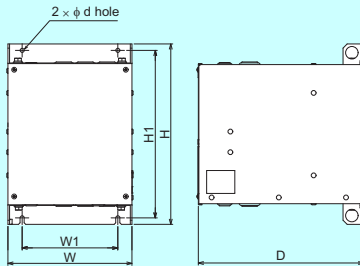

(Unit: mm)

| Model       | W   | W1  | H   | H1      | D   | d  | Screw size | Mass    |
|-------------|-----|-----|-----|---------|-----|----|------------|---------|
| FR-MCB-H150 | 240 | 185 | 350 | 325     | 320 | 8  | M6         | 17.0 kg |
| FR-MCB-H400 |     | 175 | 540 | 518     | 370 | 10 |            | 29.0 kg |
| FR-MCB-H800 |     | 880 | 858 | 51.0 kg |     |    |            |         |

## <<Converter installation enclosure attachment FR-XCCP>>

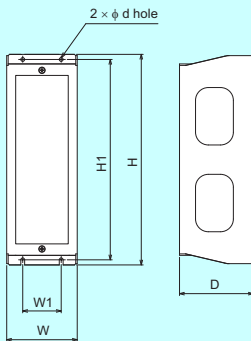

(Unit: mm)

| Model     | W   | W1  | H   | H1  | D   | d | Screw size |
|-----------|-----|-----|-----|-----|-----|---|------------|
| FR-XCCP01 | 110 | 60  | 330 | 314 | 115 | 6 | M5         |
| FR-XCCP02 | 130 | 90  |     | 120 |     |   |            |
| FR-XCCP03 | 160 | 120 | 410 | 396 | 116 | 7 | M6         |



# Noise filter

## Line noise filter

FR-BSF01 ALL FR-BLF ALL

RC5128ZZ (introduced product) A800 A800 Plus F800 A701

A filter is used to suppress radio noise and line noise emitted from the inverter power supply side or output side.

Introduced product: RC5128ZZ Manufacturer: Soshin Electric Co., Ltd.

### Specifications

| Model  | FR-BSF01  |     |       |    | FR-BLF                  |          |    |            | RC5128ZZ<br>(introduced product) |            |     |
|--|---|-----|-------|----|-------------------------|----------|----|------------|----------------------------------|------------|-----|
| Applicable inverter capacity                     | For small capacity inverter *1  |     |       |    | For general inverter *1 |          |    |            | For large capacity inverter *1   |            |     |
| Compatible wire size (mm <sup>2</sup> )          | 2, 3.5  | 5.5 | 8, 14 | 22 | 2 to 22                 | 30 to 60 | 80 | 100 to 150 | 100 to 125                       | 150 to 200 | 250 |
| Number of times of wire to be passed through (T) | 4   | 3   | 2     | 1  | 4                       | 3        | 2  | 1          | 3                                | 2          | 1   |
| Improvement effect                               | Greater effect between 0.5 to 5MHz. The greater the number of turns, the more effective result is obtained. |     |       |    |                         |          |    |            |                                  |            |     |
| Rated input AC power supply                      | Three phase 200 V 50 Hz/three phase 200/220 V 60 Hz   |     |       |    |                         |          |    |            |                                  |            |     |
|  | Three phase 400 V 50 Hz/three phase 400/440 V 60 Hz   |     |       |    |                         |          |    |            |                                  |            |     |
| Approximate mass (kg)                            | 0.2   |     |       |    | 1.2                     |          |    |            | 1.1                              |            |     |




FR-BLF

- \*1 Used up to the cable thickness (applicable wire size) less than the size of wire passing hole.
- \*2 For the 55K or lower models of the FR-A800, FR-A800 Plus, and FR-F800 series inverters, a corresponding appliance (common mode choke) is built-in on the input side.


### Connection diagram

- Ensure that each phase is wound one time in the same direction.
- When connecting to the input side, it is recommended that the wire should be turned three times or more (4T, 4 turns). The greater the number of turns, the more effective result is obtained.
- When using several line noise filters to make 4T or more, wind the phases (cables) together. Do not use different line noise filter for different phases.
- When using filters at the output side, do not wind the cable more than 4 turns (4T) for each filter as the filter may overheat.
- Do not wind earthing cable.
- When the wire size is too thick to wind, use more than four filters in series.

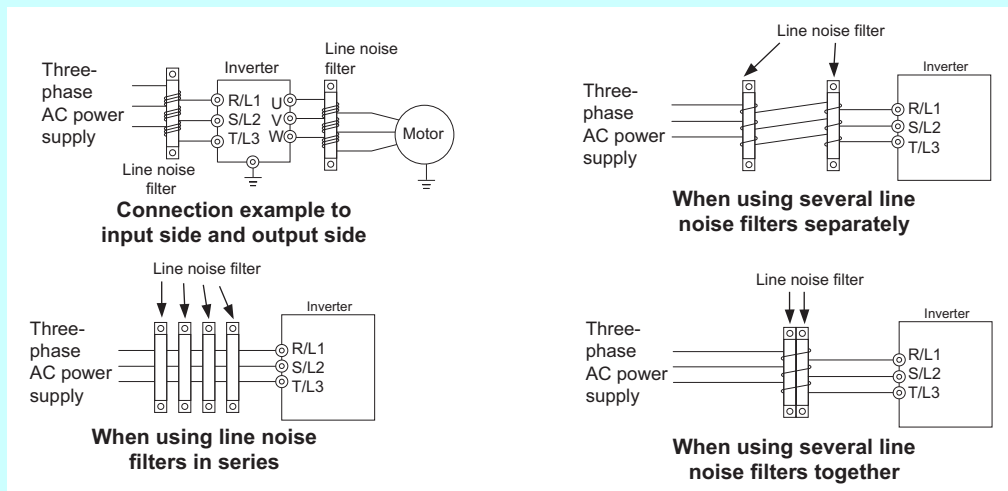


### Outline dimension drawings


<<FR-BSF01>>

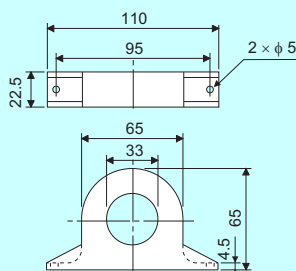

<<FR-BLF>>

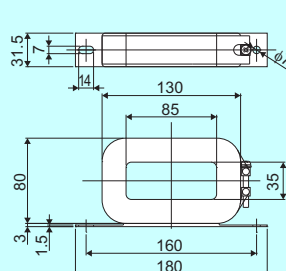

<<RC5128ZZ (introduced product)>>

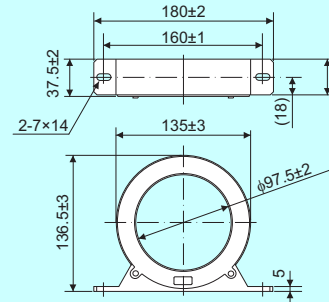

## Radio noise filter

FR-BIF (E800) (E700) (F700PJ) (D700)

A filter is used to suppress radio noise emitted from the inverter power supply side.

### ●Specifications

| Type                         | 200 V  | 400 V   |
|------------------------------|--|---|
|                              | FR-BIF   | FR-BIF-H  |
| Applicable inverter capacity | Usable regardless of the inverter capacity *   |   |
| Improvement effect           | Greater effect at 10 MHz or less (note that the effect differs according to region.) |   |
| Rated input AC power supply  | Three phase 200 V 50 Hz/<br>three phase 200/220 V 60 Hz                              | Three-phase 400 V 50 Hz/<br>three phase 400/440 V 60 Hz |
| Approximate mass (kg)        | 0.1  | 0.1   |


\* For the FR-A800, FR-A800 Plus, or FR-F800 series inverter, a corresponding filter (capacitive filter) is built-in.




FR-BIF-H

### ●Connection diagram

- Connect to the inverter input side. Connect the filter directly to the inverter input terminal.
- Since long connection wire reduces effect, the wire length should be minimized. Make sure to perform earthing with resistance of 100 Ω or less.
- When the filter is used in the inverter with the single-phase power input specification, cut the T-phase wire as short as possible and insulate the cut end securely.
- The maximum leakage current is about 4 mA (8 mA for the 400 V class). (The leakage current is equivalent to the current for one phase of the three-phase three-wire star-connection power supply.)

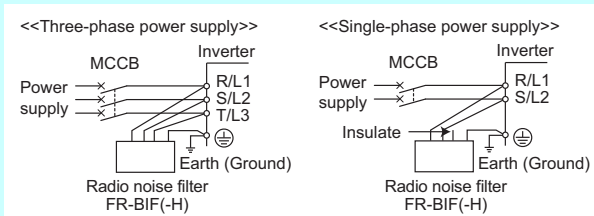

### ●Outline dimension drawings

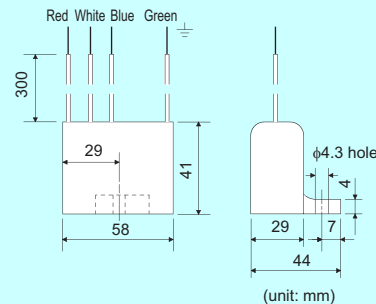

## EMC Directive compliant EMC filter

FR-E5NF (E800) (E700) (F700PJ) (D700) FR-S5NFSA (E800) (E700) (D700)

This EMC filter complies with the EU EMC Directive.

### ●Selection

- Select the appropriate noise filter based on the inverter and noise filter combinations shown below.

| FR-E800 Series Inverter Model |                       | EMC Filter Model |
|-------------------------------|-----------------------|------------------|
| Single phase<br>200 V class   | FR-E820S-0.1K to 0.4K | SF1320           |
|                               | FR-E820S-0.75K        | SF1321           |
|                               | FR-E820S-1.5K         | FR-S5NFSA-1.5K   |
|                               | FR-E820S-2.2K         | SF1309           |
| 200 V class                   | FR-E820-0.1K to 1.5K  | SF1306           |
|                               | FR-E820-2.2K, 3.7K    | SF1309           |
|                               | FR-E820-5.5K to 11K   | SF1260           |
|                               | FR-E820-15K           | SF1261           |
|                               | FR-E820-18.5K, 22K    | SF1262           |
| 400 V class                   | FR-E840-0.4K, 0.75K   | FR-E5NF-H0.75K   |
|                               | FR-E840-1.5K to 3.7K  | FR-E5NF-H3.7K    |
|                               | FR-E840-5.5K, 7.5K    | FR-E5NF-H7.5K    |
|                               | FR-E840-11K, 15K      | SF1175           |
|                               | FR-E840-18.5K, 22K    | SF1176           |


| FR-E700 Series Inverter Model |                       | EMC Filter Model |
|-------------------------------|-----------------------|------------------|
| Single phase<br>100 V class   | FR-E710W-0.1K to 0.4K | FR-S5NFSA-0.75K  |
|                               | FR-E710W-0.75K        | FR-S5NFSA-1.5K   |
| Single phase<br>200 V class   | FR-E720S-0.1K to 0.4K | SF1320           |
|                               | FR-E720S-0.75K        | SF1321           |
|                               | FR-E720S-1.5K         | FR-S5NFSA-1.5K   |
|                               | FR-E720S-2.2K         | SF1309           |
| 200 V class                   | FR-E720-0.1K to 1.5K  | SF1306           |
|                               | FR-E720-2.2K, 3.7K    | SF1309           |
|                               | FR-E720-5.5K to 11K   | SF1260           |
|                               | FR-E720-15K           | SF1261           |
| 400 V class                   | FR-E740-0.4K, 0.75K   | FR-E5NF-H0.75K   |
|                               | FR-E740-1.5K to 3.7K  | FR-E5NF-H3.7K    |
|                               | FR-E740-5.5K, 7.5K    | FR-E5NF-H7.5K    |
|                               | FR-E740-11K, 15K      | SF1175           |

| FR-F700PJ Series Inverter Model |                        | EMC Filter Model |
|---------------------------------|------------------------|------------------|
| 200 V class                     | FR-F720PJ-0.4K to 1.5K | SF1306           |
|                                 | FR-F720PJ-2.2K, 3.7K   | SF1309           |
|                                 | FR-F720PJ-5.5K to 11K  | SF1260           |
|                                 | FR-F720PJ-15K          | SF1261           |
| 400 V class                     | FR-F740PJ-0.4K, 0.75K  | FR-E5NF-H0.75K   |
|                                 | FR-F740PJ-1.5K to 3.7K | FR-E5NF-H3.7K    |
|                                 | FR-F740PJ-5.5K, 7.5K   | FR-E5NF-H7.5K    |
|                                 | FR-F740PJ-11K, 15K     | SF1175           |


| FR-D700 Series Inverter Model |                        | EMC Filter Model |
|-------------------------------|------------------------|------------------|
| Single phase<br>100 V class   | FR-D710W-0.1K to 0.4K  | FR-S5NFSA-0.75K  |
|                               | FR-D710W-0.75K         | FR-S5NFSA-1.5K   |
| Single phase<br>200 V class   | FR-D720S-0.1K to 0.75K | FR-S5NFSA-0.75K  |
|                               | FR-D720S-1.5K          | FR-S5NFSA-1.5K   |
|                               | FR-D720S-2.2K          | SF1309           |
| 200 V class                   | FR-D720-0.1K to 1.5K   | SF1306           |
|                               | FR-D720-2.2K, 3.7K     | SF1309           |
|                               | FR-D720-5.5K to 11K    | SF1260           |
|                               | FR-D720-15K            | SF1261           |
| 400 V class                   | FR-D740-0.4K, 0.75K    | FR-E5NF-H0.75K   |
|                               | FR-D740-1.5K to 3.7K   | FR-E5NF-H3.7K    |
|                               | FR-D740-5.5K, 7.5K     | FR-E5NF-H7.5K    |
|                               | FR-D740-11K, 15K       | SF1175           |

●Connection diagram

· Connect to the inverter input side. Refer to EMC Installation Guidelines (BCN-A21041-202/204) for details of wiring method.

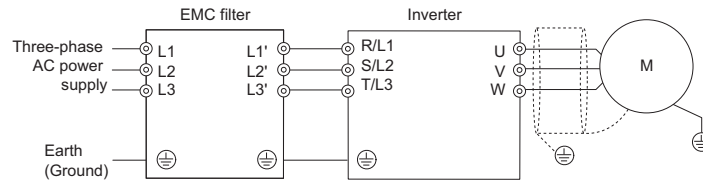

Connection diagram of three-phase power supply

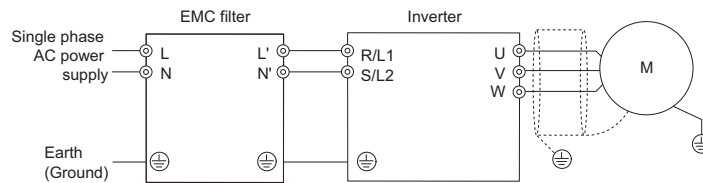


Connection diagram of single-phase power supply

\* Take the following measures to prevent a peripheral device malfunction or electric shock accident from occurring due to a leakage current.


- 1) Ground (earth) the EMC filter before connecting the power supply. In that case, make certain that grounding (earthing) is securely performed via the grounding (earthing) part of the panel.
- 2) Select the earth leakage circuit breaker or earth leakage relay in consideration of the EMC filter's leakage current. A leakage current breaker may not be used when leakage current of EMC filter become large. When using an earth leakage relay which has great sensitivity current or when not using a leakage circuit breaker and earth leakage relay, connect the equipment to the earth securely as shown in 1).

●Outline dimension drawings

| EMC Filter Model   |                 | Outline Dimension (mm) |     |      | Approximate Mass (kg) | Leakage Current Reference Value (mA) |
|--------------------|-----------------|------------------------|-----|------|-----------------------|--------------------------------------|
|                    |                 | W                      | H   | D    |                       |                                      |
| Single phase 100 V | FR-S5NFSA-0.75K | 70                     | 168 | 35   | 0.7                   | 4.5                                  |
| Single phase 200 V | FR-S5NFSA-1.5K  | 110                    | 168 | 35   | 1.1                   | 9.5                                  |
| Single phase 200 V | SF1320          | 70                     | 168 | 30.5 | 0.4                   | 10                                   |
|                    | SF1321          | 110                    | 168 | 36.5 | 0.6                   | 10                                   |
| Three phase 200 V  | SF1306          | 110                    | 200 | 36.5 | 0.7                   | 10                                   |
|                    | SF1309          | 200                    | 282 | 57   | 2.1                   | 15                                   |
| Three phase 400 V  | FR-E5NF-H0.75K  | 140                    | 210 | 46   | 1.1                   | 22.6                                 |
|                    | FR-E5NF-H3.7K   | 140                    | 210 | 46   | 1.2                   | 44.5                                 |
|                    | FR-E5NF-H7.5K   | 220                    | 210 | 47   | 2                     | 68.4                                 |

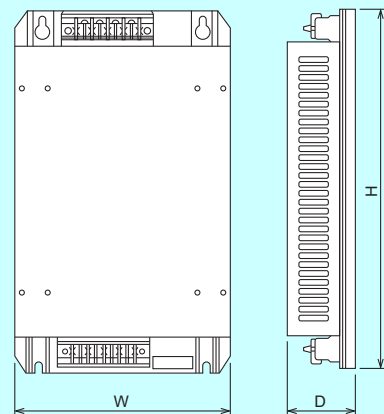

| EMC Filter Model  |        | Outline Dimension (mm) |     |    |    | Approximate Mass (kg) | Leakage Current Reference Value (mA) |
|-------------------|--------|------------------------|-----|----|----|-----------------------|--------------------------------------|
|                   |        | W                      | H   | D  | D1 |                       |                                      |
| Three phase 200 V | SF1260 | 222                    | 468 | 80 | 39 | 5                     | 440                                  |
|                   | SF1261 | 253                    | 600 | 86 | 38 | 9.3                   | 71                                   |
|                   | SF1262 | 303                    | 650 | 86 | 47 | 11                    | 71                                   |
| Three phase 400 V | SF1175 | 253                    | 530 | 60 | 35 | 4.7                   | 76                                   |
|                   | SF1176 | 303                    | 600 | 60 | 38 | 5.9                   | 108                                  |

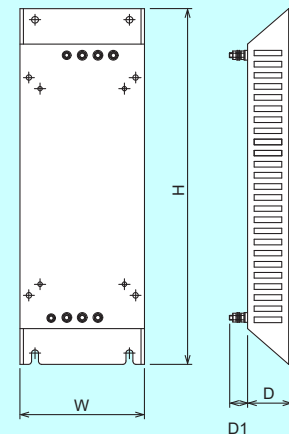

- \*1 The indicated leakage current is equivalent to the current for one phase of the three-phase three-wire star-connection power supply. For the three-phase three-wire delta-connection power supply, the value becomes approximately three times larger than the listed value.
- \*2 An installation intercompatibility attachment and an EMC filter installation attachment may be necessary to install the inverter. In such a case, note that the width equivalent to the intercompatibility attachment length increases.

# Noise filter

## Filterpack

FR-BFP2 E800 E700 F700PJ D700

Filterpack is enclosed for the FR-F7□0PJ-□KF inverters.

Power factor improving AC reactor, common mode choke, and capacitor type filter are combined into one as Filterpack.

Using the option, the inverter may conform to the Japanese guideline for reduction of harmonic emission.

The option is available for three-phase 200V/400V class inverters with 0.4K to 15K capacity.

Filterpack can be installed on the side or on the rear. (Rear panel installation is not available for FR-E720-5.5K, 7.5K, and FR-E740-0.4K to 3.7K.)

### ●Specifications

<<For three-phase 200 V class>>

| Model FR-BFP2-□K                           |                   | 0.4   | 0.75 | 1.5 | 2.2 | 3.7  | 5.5  | 7.5  | 11  | 15  |
|--|-------------------|---|------|-----|-----|------|------|------|-----|-----|
| Permissible inverter output current (A) *1 |                   | 2.5   | 4.2  | 7   | 10  | 16.5 | 23.8 | 31.8 | 45  | 58  |
| Approximate mass (kg)                      |                   | 1.3   | 1.4  | 2.0 | 2.2 | 2.8  | 3.8  | 4.5  | 6.7 | 7.0 |
| Power factor improving reactor             |                   | Install a DC reactor on the DC side. (93% to 95% of power supply power factor under 100% load (94.4% *2)) |      |     |     |      |      |      |     |     |
| Noise filter                               | Common mode choke | Install a ferrite core on the input side.   |      |     |     |      |      |      |     |     |
|  | Capacitive filter | About 4 mA of capacitor leakage current *3  |      |     |     |      |      |      |     |     |
| Protective structure (JEM1030)             |                   | Open type (IP00)  |      |     |     |      |      |      |     |     |




<<For three-phase 400V class>>

| Model FR-BFP2-H□K                          |                   | 0.4   | 0.75 | 1.5 | 2.2 | 3.7 | 5.5 | 7.5  | 11  | 15   |
|--|-------------------|---|------|-----|-----|-----|-----|------|-----|------|
| Permissible inverter output current (A) *1 |                   | 1.2   | 2.2  | 3.7 | 5   | 8.1 | 12  | 16.3 | 23  | 29.5 |
| Approximate mass (kg)                      |                   | 1.6   | 1.7  | 1.9 | 2.3 | 2.6 | 4.5 | 5.0  | 7.0 | 8.2  |
| Power factor improving reactor             |                   | Install a DC reactor on the DC side. (93% to 95% of power supply power factor under 100% load (94.4% *2)) |      |     |     |     |     |      |     |      |
| Noise filter                               | Common mode choke | Install a ferrite core on the input side.   |      |     |     |     |     |      |     |      |
|  | Capacitive filter | About 8 mA of capacitor leakage current *3  |      |     |     |     |     |      |     |      |
| Protective structure (JEM1030)             |                   | Open type (IP00)  |      |     |     |     |     |      |     |      |


- \*1 To use with an FR-E700 series inverter, select a capacity that makes the load (inverter output) current to be the same with the permissible inverter output current or lower.
- \*2 The values in parentheses are calculated by applying 1 power factor to the reference waveform in accordance with the Architectural Standard Specifications (Electrical Installation) (2013 revisions) supervised by the Ministry of Land, Infrastructure, Transport and Tourism of Japan.)
- \*3 The indicated leakage current is equivalent to the current for one phase of the three-phase three-wire star-connection power supply.

### ●Connection diagram

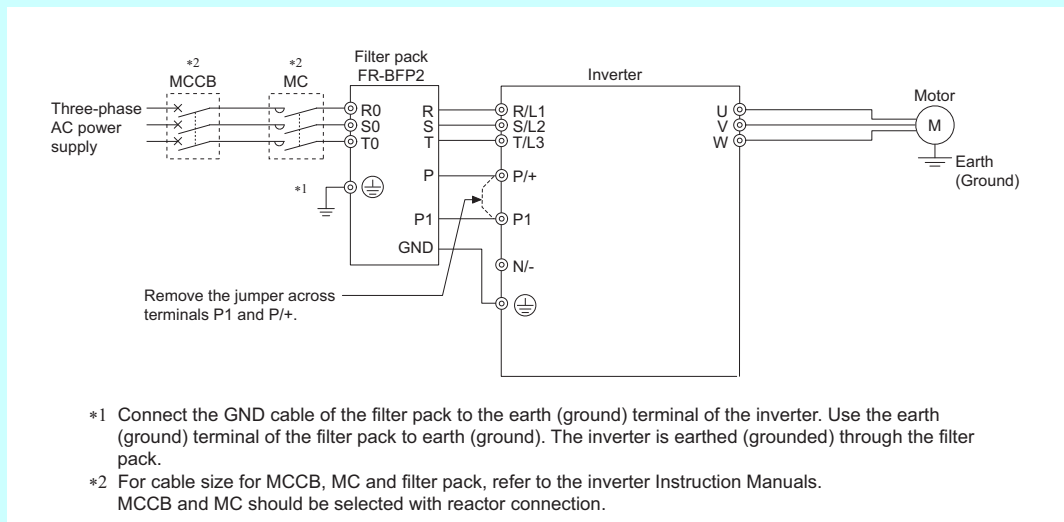

●Outline dimension drawings

- FR-BFP2-0.4K to 3.7K
- FR-BFP2-H0.4K to H3.7K

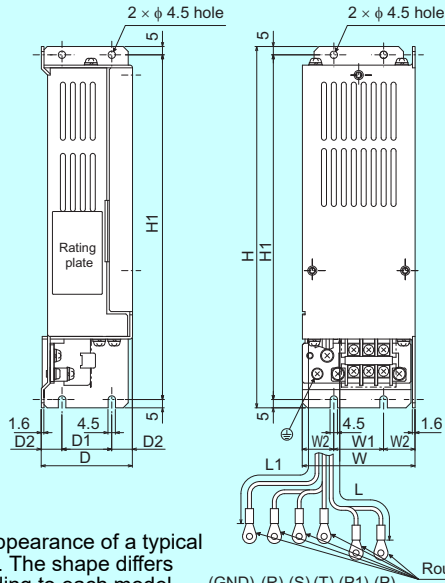

The appearance of a typical model. The shape differs according to each model.

(GND) (R) (S) (T) (P1) (P)

(Unit: mm)


|       |                  | Capacity | W   | W1   | W2  | H   | H1 | D  | D1   | D2  | L   | L1 |
|-------|------------------|----------|-----|------|-----|-----|----|----|------|-----|-----|----|
| 200 V | 0.4K, 0.75K      | 68       | 30  | 19   | 218 | 208 | 60 | 30 | 15   | 240 | 220 |    |
|       | 1.5K, 2.2K       | 108      | 55  | 26.5 | 188 | 178 | 80 | 55 | 12.5 | 200 | 220 |    |
|       | 3.7K             | 170      | 120 | 25   | 188 | 178 | 65 | 40 | 12.5 | 220 | 240 |    |
| 400 V | H0.4K, H0.75K *1 | 108      | 55  | 26.5 | 188 | 178 | 55 | 30 | 12.5 | 200 | 220 |    |
|       | H1.5K to H3.7K   | 108      | 55  | 26.5 | 188 | 178 | 80 | 55 | 12.5 | 200 | 220 |    |

\*1 The 400V class H0.4K and H0.75K have no slit.

\*2 L-bracket is required to install the option to the back of inverter.

L-bracket is not attached when shipped from the factory but is enclosed with the option.

- FR-BFP2-5.5K to 15K
- FR-BFP2-H5.5K to H15K

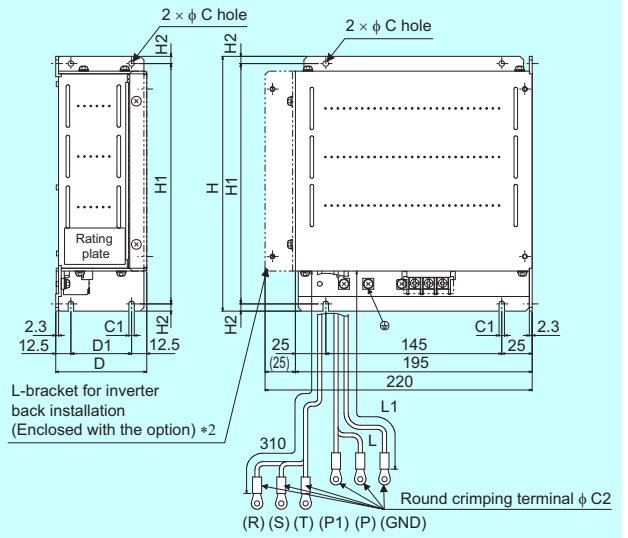

L-bracket for inverter back installation (Enclosed with the option) \*2

(R) (S) (T) (P1) (P) (GND)

(Unit: mm)

|       |              | Capacity | W   | W1  | W2 | H  | H1  | D   | D1  | D2  | L   | L1 |
|-------|--------------|----------|-----|-----|----|----|-----|-----|-----|-----|-----|----|
| 200 V | 5.5K, 7.5K   | 210      | 198 | 6   | 75 | 50 | 4.5 | 4.5 | 5.3 | 270 | 400 |    |
|       | 11K          | 320      | 305 | 7.5 | 85 | 60 | 6   | 6   | 5.3 | 280 | 280 |    |
|       | 15K          | 320      | 305 | 7.5 | 85 | 60 | 6   | 6   | 6.4 | 260 | 260 |    |
| 400 V | H5.5K, H7.5K | 210      | 198 | 6   | 75 | 50 | 4.5 | 4.5 | 4.3 | 270 | 400 |    |
|       | H11K         | 320      | 305 | 7.5 | 85 | 60 | 6   | 6   | 4.3 | 280 | 280 |    |
|       | H15K         | 320      | 305 | 7.5 | 85 | 60 | 6   | 6   | 6.4 | 260 | 260 |    |

# Output filter

## Surge voltage suppression filter

FR-ASF, FR-BMF

(A800) (A800 Plus) (F800) (E800) (E700) (F700PJ) (D700)

A surge voltage suppression filter limits surge voltage applied to motor terminals when driving the 400V class motor by the inverter. This filter cannot be used under vector control, Real sensorless vector control, and IPM motor control.



### Specifications

| Model<br>FR-ASF-□                              | 400V                                |            |            |          |            |          |          |
|--|-------------------------------------|------------|------------|----------|------------|----------|----------|
|  | H1.5K                               | H3.7K      | H7.5K      | H15K     | H22K       | H37K     | H55K     |
| Applicable motor capacity (kW)                 | 0.4 to 1.5                          | 2.2 to 3.7 | 5.5 to 7.5 | 11 to 15 | 18.5 to 22 | 30 to 37 | 45 to 55 |
| Rated input current (A)                        | 4.0                                 | 9.0        | 17.0       | 31.0     | 43.0       | 71.0     | 110.0    |
| Rated input AC voltage                         | Three-phase 380 V to 460 V 50/60 Hz |            |            |          |            |          |          |
| Maximum AC voltage fluctuation                 | Three-phase 506V 50 Hz/60 Hz        |            |            |          |            |          |          |
| Maximum frequency                              | 400 Hz                              |            |            |          |            |          |          |
| PWM frequency permissible range                | 0.5 kHz to 14.5 kHz                 |            |            |          |            |          |          |
| Maximum wiring length between the filter-motor | 300 m                               |            |            |          |            |          |          |
| Approximate mass (kg)                          | 8.0                                 | 11.0       | 20.0       | 28.0     | 38.0       | 59.0     | 78.0     |


| Model<br>FR-BMF-□                              | 400V                                 |          |            |          |
|--|--------------------------------------|----------|------------|----------|
|  | H7.5K                                | H15K     | H22K       | H37K     |
| Applicable motor capacity (kW)                 | 5.5 to 7.5                           | 11 to 15 | 18.5 to 22 | 30 to 37 |
| Rated input current (A)                        | 17.0                                 | 31.0     | 43.0       | 71.0     |
| Rated input AC voltage                         | Three-phase 380 to 480 V 50 Hz/60 Hz |          |            |          |
| Maximum AC voltage fluctuation                 | Three-phase 323 to 528V 50 Hz/60 Hz  |          |            |          |
| Maximum AC voltage fluctuation                 | 120 Hz                               |          |            |          |
| PWM frequency permissible range                | 2 kHz or less *                      |          |            |          |
| Maximum wiring length between the filter-motor | 100 m                                |          |            |          |
| Approximate mass (kg)                          | 5.5                                  | 9.5      | 11.5       | 19       |

\* Always set the inverter PWM frequency to 2 kHz or less.

### Connection diagram

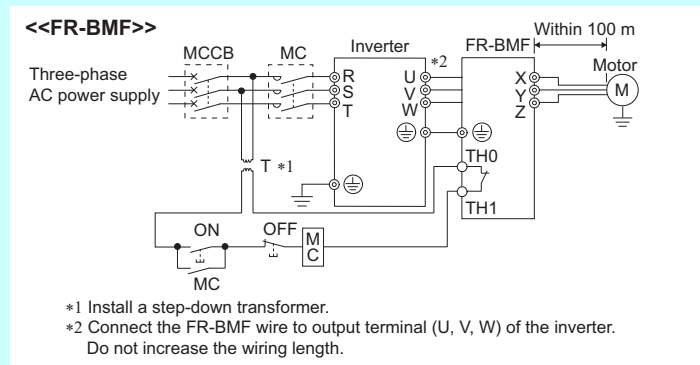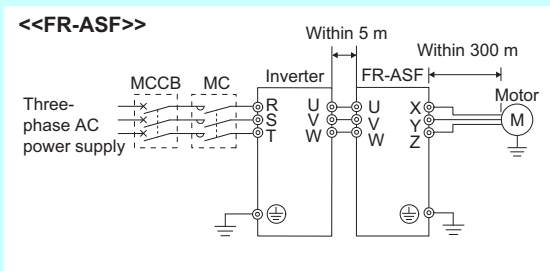

### <<FR-ASF>>

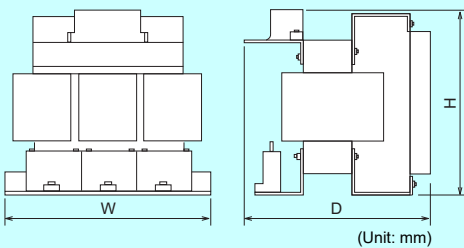


| Surge Voltage Suppression Filter Model | W *1 | H *1 | D *1 |
|--|------|------|------|
| FR-ASF-H1.5K                           | 221  | 193  | 160  |
| FR-ASF-H3.7K                           | 221  | 200  | 180  |
| FR-ASF-H7.5K                           | 281  | 250  | 215  |
| FR-ASF-H15K *2                         | 336  | 265  | 290  |
| FR-ASF-H22K *2                         | 336  | 345  | 354  |
| FR-ASF-H37K *2                         | 376  | 464  | 429  |
| FR-ASF-H55K *2                         | 396  | 464  | 594  |

\*1 Maximum size  
\*2 For the H15K or higher, the shape is partially different.


### <<FR-BMF>>

#### ● FR-BMF-H7.5K to H22K

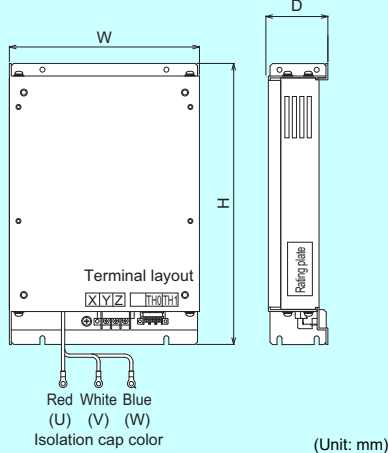

| Surge Voltage Suppression Filter Model | W   | H   | D   |
|--|-----|-----|-----|
| FR-BMF-H7.5K                           | 230 | 340 | 75  |
| FR-BMF-H15K, H22K                      | 260 | 500 | 100 |

#### ● FR-BMF-H37K

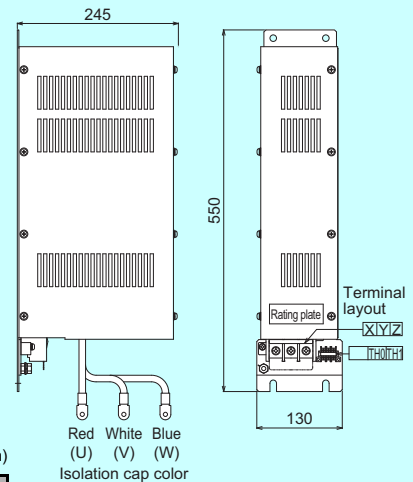

Sine wave filter

MT-BSL, MT-BSC (A800) (A800 Plus) (F800) (A701)

Installing the sine wave filter on the inverter output side converts the motor voltage/current into a nearly sine wave. Effects such as 1) acoustic noise reduction, 2) surgeless, and 3) reduction of the motor loss (use of standard motor) could be expected. Always use this filter under V/F control.

● Specifications

| Model                           | 200V   |     | 400V |       |       |       |       |
|---------------------------------|--|-----|------|-------|-------|-------|-------|
| MT-BSL-□□                       | 75K  | 90K | H75K | H110K | H150K | H220K | H280K |
| MT-BSC-□□                       | 75K  | 90K | H75K | H110K | —     | —     | —     |
| Maximum frequency               | 60 Hz  |     |      |       |       |       |       |
| PWM frequency permissible range | 2.5 kHz ±1   |     |      |       |       |       |       |
| Vibration                       | 5.9 m/s <sup>2</sup> or less, 10 to 55 Hz (directions of X, Y, Z axes) |     |      |       |       |       |       |
| Approximate mass (kg)           | Refer to the outline dimension drawing.                                |     |      |       |       |       |       |

\*1 Always set the inverter PWM frequency to 2.5 kHz.

● Selection


- Select an inverter with a rating one step above the capacity of the motor to be used. Note that an inverter with same kW with a motor can be used if the rated motor current × 1.1 is less than 90% of the inverter rated current.
- Use the MT-BSL-HC when using a sine wave filter with the FR-HC2.

| Motor Capacity (kW) *1 | Model              |                   |                         |                  |
|------------------------|--------------------|-------------------|-------------------------|------------------|
|                        | Reactor for filter | Rated current (A) | Capacitor for filter *2 |                  |
| 200V class             | 75                 | MT-BSL-75K        | 288                     | 1 × MT-BSC-75K   |
|                        | 90                 | MT-BSL-90K        | 346                     | 1 × MT-BSC-90K   |
| 400V class             | 75                 | MT-BSL-H75K(-HC)  | 144                     | 1 × MT-BSC-H75K  |
|                        | 90                 | MT-BSL-H110K(-HC) | 216                     | 1 × MT-BSC-H110K |
|                        | 110                | MT-BSL-H110K(-HC) | 216                     | 1 × MT-BSC-H110K |
|                        | 132                | MT-BSL-H150K(-HC) | 288                     | 2 × MT-BSC-H75K  |
|                        | 160                | MT-BSL-H220K(-HC) | 432                     | 2 × MT-BSC-H110K |
|                        | 185                | MT-BSL-H220K(-HC) | 432                     | 2 × MT-BSC-H110K |
|                        | 220                | MT-BSL-H220K(-HC) | 432                     | 2 × MT-BSC-H110K |
|                        | 250                | MT-BSL-H280K(-HC) | 576                     | 3 × MT-BSC-H110K |
| 280                    | MT-BSL-H280K(-HC)  | 576               | 3 × MT-BSC-H110K        |                  |

\*1 Assumes the use of a standard 4-pole motor.

\*2 When using several capacitors for filter, connect them in parallel as in the connection diagram.


● Connection diagram

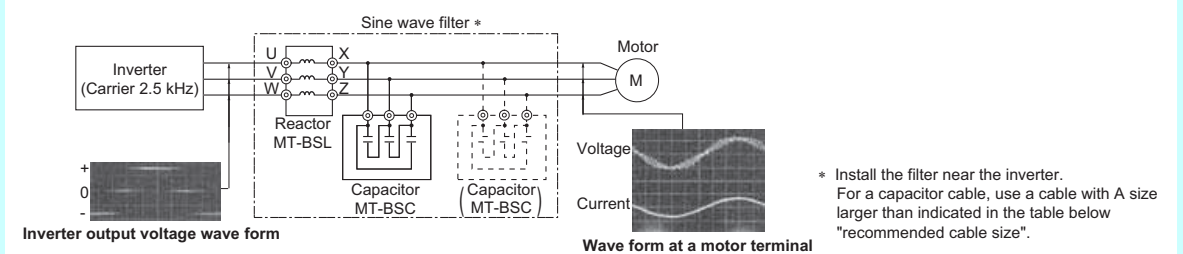


● Outline dimension drawings

- The appearance of a typical model. The shape differs according to each model.

<<MT-BSL>>

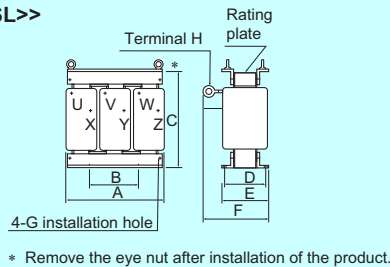

<<MT-BSC>>

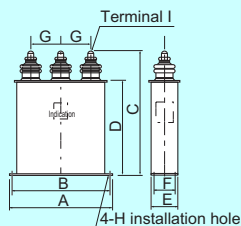

(Unit: mm)

| Model           | A               | B   | C   | D   | E   | F   | G   | H   | Mass (kg) |     |
|-----------------|-----------------|-----|-----|-----|-----|-----|-----|-----|-----------|-----|
| 200V class      | MT-BSL-75K      | 330 | 150 | 285 | 185 | 216 | 328 | M10 | M12       | 80  |
|                 | MT-BSL-90K      | 390 | 150 | 320 | 180 | 220 | 330 | M12 | M12       | 120 |
| 400V class      | MT-BSL-H75K     | 330 | 150 | 285 | 185 | 216 | 318 | M10 | M10       | 80  |
|                 | MT-BSL-H110K    | 390 | 150 | 340 | 195 | 235 | 368 | M12 | M12       | 140 |
|                 | MT-BSL-H150K    | 455 | 200 | 397 | 200 | 240 | 380 | M12 | M12       | 190 |
|                 | MT-BSL-H220K    | 495 | 200 | 405 | 250 | 300 | 420 | M12 | M12       | 240 |
|                 | MT-BSL-H280K    | 575 | 200 | 470 | 310 | 370 | 485 | M12 | M12       | 340 |
|                 | MT-BSL-H75K-HC  | 385 | 150 | 345 | 185 | 216 | 315 | M10 | M10       | 110 |
|                 | MT-BSL-H110K-HC | 420 | 170 | 400 | 195 | 235 | 370 | M12 | M12       | 180 |
|                 | MT-BSL-H150K-HC | 450 | 300 | 455 | 390 | 430 | 500 | M12 | M12       | 250 |
| MT-BSL-H220K-HC | 510             | 350 | 540 | 430 | 485 | 555 | M12 | M12 | 310       |     |
| MT-BSL-H280K-HC | 570             | 400 | 590 | 475 | 535 | 620 | M12 | M12 | 480       |     |

(Unit: mm)

| Model      | A            | B   | C   | D   | E   | F  | G  | H  | I  | Mass (kg) |     |
|------------|--------------|-----|-----|-----|-----|----|----|----|----|-----------|-----|
| 200V class | MT-BSC-75K   | 207 | 191 | 285 | 233 | 72 | 41 | 45 | φ7 | M8        | 3.9 |
|            | MT-BSC-90K   | 282 | 266 | 240 | 183 | 92 | 56 | 85 | φ7 | M12       | 5.5 |
| 400V class | MT-BSC-H75K  | 207 | 191 | 220 | 173 | 72 | 41 | 55 | φ7 | M6        | 3.0 |
|            | MT-BSC-H110K | 207 | 191 | 280 | 233 | 72 | 41 | 55 | φ7 | M6        | 4.0 |

\* Leave more than 25 mm space between capacitors.

Recommended cable size

The cable sizes between the Inverter and MT-BSL and between the MT-BSL and Motor should be the same as the U, V, W wiring size. The cable size to the MT-BSC is as table below.

| MT-BSC-75K         | MT-BSC-90K         | MT-BSC-H75K        | MT-BSC-H110K       |
|--------------------|--------------------|--------------------|--------------------|
| 38 mm <sup>2</sup> | 38 mm <sup>2</sup> | 22 mm <sup>2</sup> | 22 mm <sup>2</sup> |

# Structure option

## Attachments for installation inside the enclosure for FR-A872

FR-A8CW (A800)  
FR-A8SR (A800)  
FR-A8CU (A800)

The attachments are used with the FR-A872-05690 to 07150 and the FR-CC2-N-450K to 630K.

### Attachment for cable connection in the enclosure (FR-A8CW)

This attachment is used for cable connection for the inverter and the converter unit. Bus bar connection is also available for 12-phase rectification. This option provides IP20 protection for cable connection.

It is recommended to use the FR-A8SR slide rail with this option.

| Option model | Applicable model    |           |                        |                  |
|--------------|---------------------|-----------|------------------------|------------------|
|              | FR-A872             | FR-A872-P | FR-CC2-N               | FR-CC2-N-P       |
| FR-A8CW29-N  | -                   | -         | 450K, 500K, 560K, 630K | 450K, 500K, 560K |
| FR-A8CW39-N  | -                   | -         | 450K, 500K, 560K, 630K | 450K, 500K, 560K |
| FR-A8CW59-N  | 05690, 06470, 07150 |           | -                      | -                |

-: Cannot be used.

### Enclosure slide rail (FR-A8SR)

This attachment is used to facilitate the installation of the inverter and the converter unit in the enclosure, maintenance, and unit replacement when a fault occurs.

| Option model | Applicable model    |           |                        |                  |
|--------------|---------------------|-----------|------------------------|------------------|
|              | FR-A872             | FR-A872-P | FR-CC2-N               | FR-CC2-N-P       |
| FR-A8SR39    | -                   | -         | 450K, 500K, 560K, 630K | 450K, 500K, 560K |
| FR-A8SR59    | 05690, 06470, 07150 |           | -                      | -                |


-: Cannot be used.

### IP20 compliant attachment (FR-A8CU)

This attachment is used to provide IP20 protection for the inverter and the converter unit when they are connected with bus bars. The FR-A8CU79 provides IP20 protection for the main circuit terminals when the inverter and the converter unit are installed side by side.

| Option model | Applicable model    |           |                        |                  |
|--------------|---------------------|-----------|------------------------|------------------|
|              | FR-A872             | FR-A872-P | FR-CC2-N               | FR-CC2-N-P       |
| FR-A8CU39-N  | -                   | -         | 450K, 500K, 560K, 630K | 450K, 500K, 560K |
| FR-A8CU59-N  | 05690, 06470, 07150 |           | -                      | -                |
| FR-A8CU79-N  | 05690, 06470, 07150 | -         | 450K, 500K, 560K, 630K | -                |

-: Cannot be used.

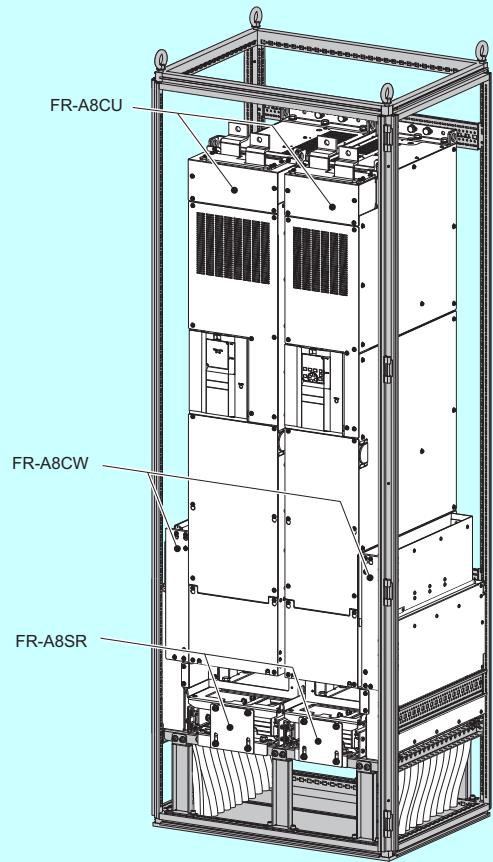


## FR-E846 dedicated protective cover

FR-E8PC (E800)

This protective cover is installed to a main circuit connector of the FR-E846 inverter (IP66/IP67 model) to prevent insertion/removal of the connector during power-on.

### ● Installation example

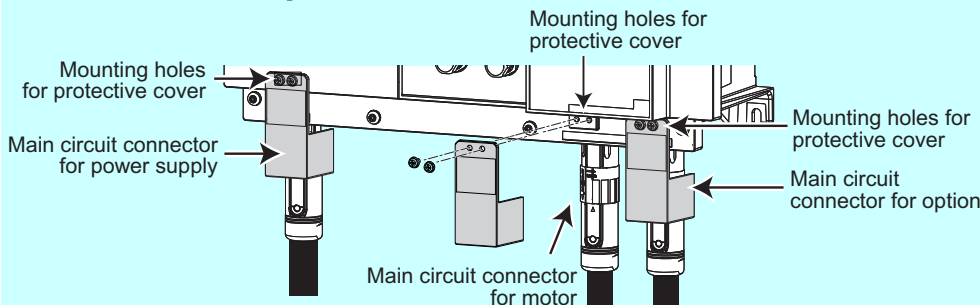

This product can also be installed to the main circuit connector for power supply and the main circuit connector for option. When installing this product to all of the three connectors, prepare three sets.



Panel through attachment

FR-A8CN (A800, A800 Plus, F800)  
 FR-E8CN (E800)  
 FR-E7CN (E700, F700PJ, D700)

With this attachment, the heat sink, which is the exothermic section of the inverter, can be placed outside of the enclosure. Since the heat generated in the inverter can be radiated to the rear of the enclosure, the enclosure can be downsized.

● Selection


| Attachment Model | Applicable Inverter                   |  |                                       |  |
|------------------|---------------------------------------|--|---------------------------------------|--|
|                  | FR-A820                               | FR-A840  | FR-F820                               | FR-F840  |
| FR-A8CN01        | 00105(1.5K), 00167(2.2K), 00250(3.7K) | 00023(0.4K), 00038(0.75K), 00052(1.5K), 00083(2.2K), 00126(3.7K) | 00105(2.2K), 00167(3.7K), 00250(5.5K) | 00023(0.75K), 00038(1.5K), 00052(2.2K), 00083(3.7K), 00126(5.5K) |
| FR-A8CN02        | 00340(5.5K), 00490(7.5K)              | 00170(5.5K), 00250(7.5K)   | 00340(7.5K), 00490(11K)               | 00170(7.5K), 00250(11K)  |
| FR-A8CN03        | 00630(11K)                            | 00310(11K), 00380(15K)   | 00630(15K)                            | 00310(15K), 00380(18.5K)   |
| FR-A8CN04        | 00770(15K), 00930(18.5K), 01250(22K)  | 00470(18.5K), 00620(22K)   | 00770(18.5K), 00930(22K), 01250(30K)  | 00470(22K), 00620(30K)   |
| FR-A8CN05        | 01540(30K)                            | 00770(30K)   | 01540(37K)                            | 00770(37K)   |
| FR-A8CN06        | 01870(37K), 02330(45K)                | 00930(37K), 01160(45K), 01800(55K)                               | 01870(45K), 02330(55K)                | 00930(45K), 01160(55K), 01800(75K)                               |
| FR-A8CN07        | 03160(55K)                            | —  | 03160(75K)                            | —  |
| FR-A8CN08        | 03800(75K), 04750(90K)                | 03250(110K), 03610(132K)   | 03800(90K), 04750(110K)               | 03250(132K), 03610(160K)   |
| FR-A8CN09        | —                                     | 02160(75K), 02600(90K)   | —                                     | 02160(90K), 02600(110K)  |

| Attachment Model | Applicable Inverter     |            |                        |                          |            |                         |                        |                        |                         |              |
|------------------|-------------------------|------------|------------------------|--------------------------|------------|-------------------------|------------------------|------------------------|-------------------------|--------------|
|                  | Three-phase 200 V class |            |                        | Single-phase 200 V class |            | Three-phase 400 V class |                        |                        | Three-phase 575 V class |              |
|                  | FR-E820                 | FR-E820    | FR-E820                | FR-E820S                 | FR-E820S   | FR-E840                 | FR-E840                | FR-E840                | FR-E860                 | FR-E860      |
| FR-E8CN01        | 1.5K(0080), 2.2K(0110)  | —          | —                      | 1.5K(0080)               | —          | —                       | —                      | —                      | —                       | —            |
| FR-E8CN02        | —                       | 3.7K(0175) | —                      | —                        | 2.2K(0110) | —                       | —                      | —                      | —                       | —            |
| FR-E8CN03        | —                       | —          | 5.5K(0240), 7.5K(0330) | —                        | —          | —                       | —                      | —                      | —                       | —            |
| FR-E8CN04        | —                       | —          | —                      | —                        | —          | 1.5K(0040)              | —                      | —                      | —                       | —            |
| FR-E8CN05        | —                       | —          | —                      | —                        | —          | —                       | 2.2K(0060), 3.7K(0095) | —                      | 0027, 0040              | —            |
| FR-E8CN06        | —                       | —          | —                      | —                        | —          | —                       | —                      | 5.5K(0120), 7.5K(0170) | —                       | 0061 to 0120 |

| Attachment Model | Applicable Inverter                        |                      |                      |                        |                                     |                      |
|------------------|--|----------------------|----------------------|------------------------|-------------------------------------|----------------------|
|                  | FR-E700                                    |                      | FR-F700PJ            |                        | FR-D700                             |                      |
|                  | 200 V class                                | 400 V class          | 200 V class          | 400 V class            | 200 V class                         | 400 V class          |
| FR-E7CN01        | FR-E720-1.5K, 2.2K<br>FR-E720S-0.75K, 1.5K | —                    | FR-F720PJ-1.5K, 2.2K | FR-F740PJ-1.5K to 3.7K | FR-D720-1.5K, 2.2K<br>FR-D720S-1.5K | FR-D740-1.5K to 3.7K |
| FR-E7CN02        | FR-E720-3.7K                               | —                    | FR-F720PJ-3.7K       | —                      | FR-D720-3.7K                        | —                    |
| FR-E7CN03        | FR-E720-5.5K, 7.5K                         | —                    | —                    | —                      | —                                   | —                    |
| FR-E7CN04        | FR-E720S-2.2K                              | FR-E740-1.5K to 3.7K | —                    | —                      | FR-D720S-2.2K                       | —                    |
| FR-E7CN05        | —  | FR-E740-5.5K, 7.5K   | FR-F720PJ-5.5K, 7.5K | FR-F740PJ-5.5K, 7.5K   | FR-D720-5.5K, 7.5K                  | FR-D740-5.5K, 7.5K   |
| FR-E7CN06        | FR-E720-11K, 15K                           | FR-E740-11K, 15K     | FR-F720PJ-11K, 15K   | FR-F740PJ-11K, 15K     | FR-D720-11K, 15K                    | FR-D740-11K, 15K     |

● Outline dimension drawings

- This attachment requires larger area for attachment.

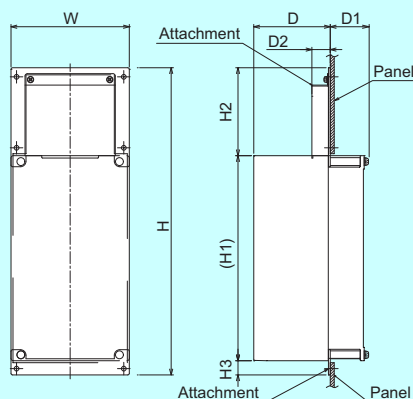

(Unit: mm)

| Type      | W     | H     | H1  | H2    | H3 | D     | D1    | D2   |
|-----------|-------|-------|-----|-------|----|-------|-------|------|
| FR-A8CN01 | 150   | 389.5 | 260 | 111.5 | 18 | 97    | 48.4  | 24.3 |
| FR-A8CN02 | 245   | 408.5 | 260 | 116.5 | 32 | 86    | 89.4  | 21.3 |
| FR-A8CN03 | 245   | 448.5 | 300 | 116.5 | 32 | 89    | 106.4 | 21.3 |
| FR-A8CN04 | 280   | 554   | 400 | 113.5 | 32 | 96.7  | 102.4 | 40.6 |
| FR-A8CN05 | 357   | 654   | 480 | 130   | 44 | 130.8 | 64.2  | 105  |
| FR-A8CN06 | 478.2 | 650   | 465 | 145   | 40 | 96    | 154   | 55   |
| FR-A8CN07 | 510.2 | 805   | 610 | 150   | 45 | 130   | 120   | 105  |
| FR-A8CN08 | 510.2 | 845   | 650 | 150   | 45 | 176.5 | 183.5 | 40   |
| FR-A8CN09 | 510.2 | 725   | 530 | 150   | 45 | 152.3 | 147.7 | 65   |

## Totally-enclosed structure attachment

FR-E7CV E700

Installing the attachment to the inverter changes the protective structure (JEM1030) of the inverter to the totally enclosed structure (IP40 equivalent).

### ● Specifications

| Item                        | Description   |
|-----------------------------|---|
| Surrounding air temperature | -10 °C to +40 °C  |
| Ambient humidity            | 90% RH or less (non-condensing)   |
| Atmosphere                  | Indoors (free from corrosive gas, flammable gas, oil mist, dust and dirt) |
| Altitude                    | Maximum 1,000 m   |
| Vibration                   | 5.9 m/s <sup>2</sup> or less at 10 to 55 Hz (directions of X, Y, Z axes)  |

### ● Selection


| Attachment Model | Applicable Inverter   |
|------------------|-----------------------|
|                  | FR-E700               |
| FR-E7CV01        | FR-E720-0.1K to 0.75K |
| FR-E7CV02        | FR-E720-1.5K, 2.2K    |
| FR-E7CV03        | FR-E720-3.7K          |
| FR-E7CV04        | FR-E720-5.5K, 7.5K    |

## Control circuit terminal block intercompatibility attachment

FR-A8TAT A800 A800 Plus F800

This attachment allows the conventional 700/500 series control circuit terminal blocks to be installed without removing any cables. This attachment is useful for replacing a conventional inverter with the 800 series inverter.

### ● Installation procedure

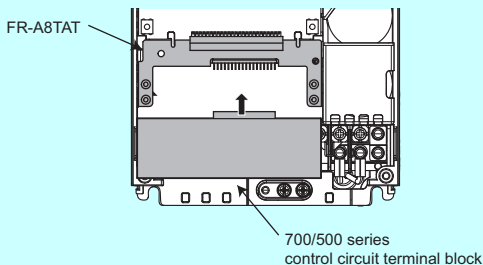

### ● Restrictions

- For using the control circuit terminal block of the 500 series, open or remove the cover of the control circuit terminal block. Otherwise, the front cover of the inverter may not close properly.
- Since the specifications of the control circuit terminals of the 700/500 series are different from those of the 800 series, certain functions of the inverter are restricted (refer to the table below).

|                        | Relay output 2 terminals | 24 V external power supply input terminal | Safety stop signal terminals |
|------------------------|--------------------------|---|------------------------------|
| FR-A500/F500 series    | ×                        | ×   | ×                            |
| FR-A700/F700(P) series | ○                        | ×   | ×                            |

○...Available, ×...Not available

- The FR-A8NC, FR-A8NCE, or FR-A8NS plug-in option cannot be installed.
- When using a plug-in option, connect the plug-in option using a cable that can be routed through the space between the front cover and the control circuit terminal block (700 series: 7 mm, 500 series: 0.8 mm).


**Intercompatibility attachment  
EMC filter installation attachment**

- FR-AAT, FR-A5AT (A800) (A800 Plus) (F800) (E800)  
 FR-E8AT (E800)  
 FR-E7AT (E800) (E700)  
 FR-E5T (E800) (E700) (F700PJ) (D700)  
 FR-F8AT (F800) (For FR-F820-75K)

When replacing with a new inverter, the attachment make the new inverter to be installed using holes of conventional model.

**●Specifications**

| Attachment Model | Installation Size of Mountable Model (W×H unit mm)  | Installation Size of Compatible Conventional Model (W×H unit mm) |
|------------------|---|--|
| FR-AAT01         | 1) 95 × 245 2) 125 × 245 3) 95 × 285 4) 125 × 285   | 200 × 280  |
| FR-AAT02         | 1) 125 × 245 2) 195 × 245 3) 125 × 285 4) 195 × 285 | 230 × 380  |
| FR-AAT03         | 1) 195 × 285 2) 230 × 380                           | 230 × 510  |
| FR-AAT04         | 1) 195 × 285 2) 230 × 380 3) 280 × 430              | 290 × 570  |
| FR-AAT05         | 1) 230 × 380 2) 280 × 430 3) 270 × 530              | 290 × 670  |
| FR-AAT06         | 1) 270 × 530 2) 380 × 525                           | 420 × 720  |
| FR-AAT07         | 1) 380 × 525 2) 410 × 675                           | 420 × 860  |
| FR-AAT08         | 1) 380 × 525  | 420 × 860  |
| FR-AAT09         | 1) 270 × 530  | 380 × 625  |
| FR-AAT21         | 1) 95 × 245   | 125 × 245  |
| FR-AAT22         | 1) 125 × 245  | 195 × 245  |
| FR-AAT23         | 1) 270 × 530  | 380 × 525  |
| FR-AAT24         | 1) 195 × 285  | 230 × 380  |
| FR-AAT27         | 1) 230 × 380  | 270 × 530  |
| FR-A5AT01        | 1) 95 × 245   | 95 × 285   |
| FR-A5AT02        | 1) 95 × 245 2) 125 × 245                            | 125 × 285  |
| FR-A5AT03        | 1) 125 × 245 2) 195 × 245                           | 195 × 285  |
| FR-A5AT04        | 1) 195 × 285 2) 230 × 380                           | 280 × 430  |
| FR-A5AT05        | 1) 380 × 525  | 410 × 675  |
| FR-E5T *         | 1) 96 × 118 2) 158 × 118                            | 188 × 138  |
| FR-E5T-02 *      | 1) 164 × 244  | 195 × 285  |

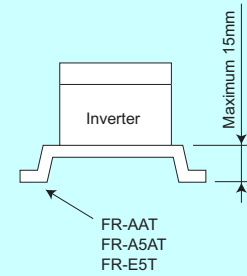

The depth increases after installation of the inverter when the attachment is used.

\*1 This is sold as the FR-E700 series, F700PJ series and D700 series attachment with EMC filter.

**●Selection**

<<Replacement with FR-A820>>

|   |              | FR-A820      |              |           |           |            |           |           |     |
|---|--------------|--------------|--------------|-----------|-----------|------------|-----------|-----------|-----|
|   |              | 0.4K/0.75K   | 1.5K to 3.7K | 5.5K/7.5K | 11K       | 15K to 22K | 30K       | 37K/45K   | 55K |
| Model name and capacity of conventional model | FR-A220E     | 0.4K/0.75K   | FR-A5AT01    | —         | —         | —          | —         | —         | —   |
|   |              | 1.5K to 3.7K | FR-A5AT02    | FR-A5AT02 | —         | —          | —         | —         | —   |
|   |              | 5.5K to 11K  | —            | FR-A5AT03 | FR-A5AT03 | ○          | —         | —         | —   |
|   |              | 15K          | —            | —         | FR-AAT02  | FR-AAT24   | ○         | —         | —   |
|   |              | 18.5K/22K    | —            | —         | —         | FR-A5AT04  | FR-A5AT04 | —         | —   |
|   |              | 30K          | —            | —         | —         | —          | FR-AAT27  | ○         | —   |
|   |              | 37K/45K      | —            | —         | —         | —          | —         | FR-AAT23  | ○   |
|   | 55K          | —            | —            | —         | —         | —          | —         | FR-A5AT05 | ○   |
|   | FR-A520/A720 | 0.4K/0.75K   | ○            | —         | —         | —          | —         | —         | —   |
|   |              | 1.5K to 3.7K | FR-AAT21     | ○         | —         | —          | —         | —         | —   |
|   |              | 5.5K/7.5K    | —            | FR-AAT22  | ○         | —          | —         | —         | —   |
|   |              | 11K          | —            | —         | FR-A5AT03 | ○          | —         | —         | —   |
|   |              | 15K to 22K   | —            | —         | —         | FR-AAT24   | ○         | —         | —   |
|   |              | 30K          | —            | —         | —         | —          | FR-AAT27  | ○         | —   |
| 37K/45K                                       |              | —            | —            | —         | —         | —          | FR-AAT23  | ○         |     |
| 55K   | —            | —            | —            | —         | —         | —          | FR-A5AT05 | ○         |     |

○: Mountable without an intercompatibility attachment  
 FR-A5AT□□, FR-AAT□□: Easily replaceable with a stated intercompatibility attachment.

## Structure option

### <<Replacement with FR-A840>>

|   |          | FR-A840      |           |           |           |           |            |           |
|---|----------|--------------|-----------|-----------|-----------|-----------|------------|-----------|
|   |          | 0.4K to 3.7K | 5.5K/7.5K | 11K/15K   | 18.5K/22K | 30K       | 37K to 55K |           |
| Model name and capacity of conventional model | FR-A240E | 0.4K to 3.7K | FR-A5AT02 | —         | —         | —         | —          | —         |
|   |          | 5.5K/7.5K    | FR-A5AT03 | FR-A5AT03 | —         | —         | —          | —         |
|   |          | 11K/15K      | —         | FR-AAT02  | FR-AAT24  | —         | —          | —         |
|   |          | 18.5K/22K    | —         | —         | FR-A5AT04 | FR-A5AT04 | —          | —         |
|   |          | 30K          | —         | —         | —         | FR-AAT27  | ○          | —         |
|   |          | 37K/45K      | —         | —         | —         | —         | FR-AAT23   | ○         |
|   |          | 55K          | —         | —         | —         | —         | —          | FR-A5AT05 |
|   | FR-A540  | 0.4K to 3.7K | ○         | —         | —         | —         | —          | —         |
|   |          | 5.5K/7.5K    | FR-AAT22  | ○         | —         | —         | —          | —         |
|   |          | 11K to 22K   | —         | FR-AAT02  | FR-AAT24  | ○         | —          | —         |
|   |          | 30K          | —         | —         | —         | FR-AAT27  | ○          | —         |
|   |          | 37K to 55K   | —         | —         | —         | —         | FR-AAT23   | ○         |
|   | FR-A740  | 0.4K to 3.7K | ○         | —         | —         | —         | —          | —         |
|   |          | 5.5K/7.5K    | FR-AAT22  | ○         | —         | —         | —          | —         |
|   |          | 11K/15K      | —         | FR-A5AT03 | ○         | —         | —          | —         |
|   |          | 18.5K/22K    | —         | —         | FR-AAT24  | ○         | —          | —         |
|   |          | 30K          | —         | —         | —         | FR-AAT27  | ○          | —         |
|   |          | 37K to 55K   | —         | —         | —         | —         | FR-AAT23   | ○         |

○: Mountable without an intercompatibility attachment

FR-A5AT[□], FR-AAT[□]: Easily replaceable with a stated intercompatibility attachment.

### <<Replacement with FR-F820>>

|   |            | FR-F820      |              |           |           |              |           |           |
|---|------------|--------------|--------------|-----------|-----------|--------------|-----------|-----------|
|   |            | 0.75K/1.5K   | 2.2K to 5.5K | 7.5K/11K  | 15K       | 18.5K to 30K | 37K       | 45K/55K   |
| Model name and capacity of conventional model | FR-A120E   | 0.75K        | FR-A5AT01    | —         | —         | —            | —         | —         |
|   |            | 1.5K to 3.7K | FR-A5AT02    | FR-A5AT02 | —         | —            | —         | —         |
|   |            | 5.5K to 11K  | —            | FR-A5AT03 | FR-A5AT03 | —            | —         | —         |
|   |            | 15K/18.5K    | —            | —         | FR-AAT02  | FR-AAT24     | ○         | —         |
|   |            | 22K/30K      | —            | —         | —         | FR-A5AT04    | FR-A5AT04 | —         |
|   |            | 37K          | —            | —         | —         | —            | FR-AAT27  | ○         |
|   |            | 45K          | —            | —         | —         | —            | —         | FR-AAT23  |
|   |            | 55K          | —            | —         | —         | —            | —         | —         |
|   | FR-F520    | 0.75K        | ○            | —         | —         | —            | —         | —         |
|   |            | 1.5K to 3.7K | FR-AAT21     | ○         | —         | —            | —         | —         |
|   |            | 5.5K/7.5K    | —            | FR-AAT22  | ○         | —            | —         | —         |
|   |            | 11K          | —            | FR-A5AT03 | FR-A5AT03 | —            | —         | —         |
|   |            | 15K to 22K   | —            | —         | FR-AAT02  | FR-AAT24     | ○         | —         |
|   |            | 30K          | —            | —         | —         | FR-A5AT04    | FR-A5AT04 | —         |
|   |            | 37K          | —            | —         | —         | —            | FR-AAT27  | ○         |
|   |            | 45K          | —            | —         | —         | —            | —         | FR-AAT23  |
|   | 55K        | —            | —            | —         | —         | —            | —         | FR-A5AT05 |
|   | FR-F720(P) | 0.75K/1.5K   | ○            | —         | —         | —            | —         | —         |
|   |            | 2.2K to 5.5K | FR-AAT21     | ○         | —         | —            | —         | —         |
|   |            | 7.5K/11K     | —            | FR-AAT22  | ○         | —            | —         | —         |
|   |            | 15K          | —            | FR-A5AT03 | FR-A5AT03 | ○            | —         | —         |
| 18.5K to 30K                                  |            | —            | —            | —         | FR-AAT24  | ○            | —         |           |
| 37K   | —          | —            | —            | —         | FR-AAT27  | ○            |           |           |
| 45K/55K                                       | —          | —            | —            | —         | —         | FR-AAT23     | ○         |           |

○: Mountable without an intercompatibility attachment

FR-A5AT[□], FR-AAT[□]: Easily replaceable with a stated intercompatibility attachment.

<<Replacement with FR-F840>>

|   |            | FR-F840       |           |           |           |           |           |   |
|---|------------|---------------|-----------|-----------|-----------|-----------|-----------|---|
|   |            | 0.75K to 5.5K | 7.5K/11K  | 15K/18.5K | 22K/30K   | 37K       | 45K/55K   |   |
| Model name and capacity of conventional model | FR-A140E   | 0.75K to 3.7K | FR-A5AT02 | —         | —         | —         | —         | — |
|   |            | 5.5K to 11K   | FR-A5AT03 | FR-A5AT03 | —         | —         | —         | — |
|   |            | 15K/18.5K     | —         | FR-AAT02  | FR-AAT24  | —         | —         | — |
|   |            | 22K           | —         | —         | FR-A5AT04 | FR-A5AT04 | —         | — |
|   |            | 30K           | —         | —         | —         | FR-AAT27  | —         | — |
|   |            | 37K/45K       | —         | —         | —         | —         | FR-AAT23  | ○ |
|   | 55K        | —             | —         | —         | —         | —         | FR-A5AT05 |   |
|   | FR-F540    | 0.75K to 3.7K | ○         | —         | —         | —         | —         | — |
|   |            | 5.5K to 11K   | FR-AAT22  | ○         | —         | —         | —         | — |
|   |            | 15K to 22K    | —         | FR-AAT02  | FR-AAT24  | ○         | —         | — |
|   |            | 30K/37K       | —         | —         | —         | FR-AAT27  | ○         | — |
|   | FR-F740(P) | 45K/55K       | —         | —         | —         | —         | FR-AAT23  | ○ |
|   |            | 0.75K to 5.5K | ○         | —         | —         | —         | —         | — |
|   |            | 7.5K/11K      | —         | ○         | —         | —         | —         | — |
|   |            | 15K/18.5K     | FR-A5AT03 | FR-A5AT03 | ○         | —         | —         | — |
|   |            | 22K/30K       | —         | —         | FR-AAT24  | ○         | —         | — |
|   |            | 37K           | —         | —         | —         | FR-AAT27  | ○         | — |
|   | 45K/55K    | —             | —         | —         | —         | FR-AAT23  | ○         |   |

○: Mountable without an intercompatibility attachment

FR-A5AT□□, FR-AAT□□: Easily replaceable with a stated intercompatibility attachment.

<<FR-F8AT>>

The FR-F8AT01 can be used for replacing FR-F520L-75K and FR-F720-75K with FR-F820-03160(75K).

<<Replacement of FR-E720 with FR-E820>>

|   |          | FR-E820      |      | FR-E820S     |           |
|---|----------|--------------|------|--------------|-----------|
|   |          | 0.1K to 2.2K | 3.7K | 0.1K to 1.5K | 2.2K      |
| Model name and capacity of conventional model | FR-E720  | 0.1K to 2.2K | ○    | —            | —         |
|   |          | 3.7K         | —    | FR-E8AT03    | —         |
|   | FR-E720S | 0.1K to 1.5K | —    | —            | ○         |
|   |          | 2.2K         | —    | —            | FR-E8AT04 |

○: Mountable without an intercompatibility attachment

<<Replacement of FR-E740 with FR-E840>>

|   |         | FR-E840      |           |
|---|---------|--------------|-----------|
|   |         | 0.4K to 1.5K | 2.2K/3.7K |
| Model name and capacity of conventional model | FR-E740 | 0.4K to 1.5K | FR-E7AT02 |
|   |         | 2.2K/3.7K    | ○         |

○: Mountable without an intercompatibility attachment

<<Replacement with FR-E720/FR-E820>>

|   |         | FR-E720/FR-E820 |           |           |
|---|---------|-----------------|-----------|-----------|
|   |         | 0.1K to 0.75K   | 1.5K      | 2.2K/3.7K |
| Model name and capacity of conventional model | FR-A024 | 0.1K to 0.75K   | FR-E7AT01 | —         |
|   |         | 1.5K            | —         | FR-E7AT02 |
|   |         | 2.2K/3.7K       | —         | FR-E7AT03 |

<<Replacement with FR-E740/FR-E840>>

|   |              | FR-E740/FR-E840 |              |           |
|---|--------------|-----------------|--------------|-----------|
|   |              | 0.4K/0.75K      | 1.5K to 3.7K |           |
| Model name and capacity of conventional model | FR-A044      | 0.4K/0.75K      | E740         | —         |
|   |              |                 | E840         | FR-E7AT02 |
|   | 1.5K to 3.7K | —               | FR-E7AT03    |           |

FR-E7AT□□: Easily replaceable with a stated intercompatibility attachment.

## DIN rail installation attachment

FR-UDA E800 E700 F700PJ D700

Use of attachment enables the inverter to be installed on DIN rail.


### ● Selection

- Select the model according to the applicable inverter capacity as shown in the following table.


| Inverter  |                          | Applicable Inverter Capacity |                        |                |
|-----------|--------------------------|------------------------------|------------------------|----------------|
|           |                          | FR-UDA01                     | FR-UDA02               | FR-UDA03       |
| FR-E800   | Single phase 200 V class | FR-E820-0.1K to 0.75K        | FR-E820-1.5K, 2.2K     | FR-E820-3.7K   |
|           | 200 V class              | FR-E820S-0.1K to 0.4K        | FR-E820S-0.75K, 1.5K   | FR-E820S-2.2K  |
| FR-E700   | Single phase 100 V class | FR-E710W-0.1K to 0.4K        | FR-E710W-0.75K         | —              |
|           | Single phase 200 V class | FR-E720S-0.1K to 0.4K        | FR-E720S-0.75K, 1.5K   | —              |
|           | 200 V class              | FR-E720-0.1K to 0.75K        | FR-E720-1.5K, 2.2K     | FR-E720-3.7K   |
| FR-F700PJ | 200 V class              | FR-F720PJ-0.4K, 0.75K        | FR-F720PJ-1.5K, 2.2K   | FR-F720PJ-3.7K |
|           | 400 V class              | —                            | FR-F740PJ-0.4K to 3.7K | —              |
| FR-D700   | Single phase 100 V class | FR-D710W-0.1K to 0.4K        | FR-D710W-0.75K         | —              |
|           | Single phase 200 V class | FR-D720S-0.1K to 0.75K       | FR-D720S-1.5K          | —              |
|           | 200 V class              | FR-D720-0.1K to 0.75K        | FR-D720-1.5K, 2.2K     | FR-D720-3.7K   |
|           | 400 V class              | —                            | FR-D740-0.4K to 3.7K   | —              |

### ● Approximate dimension


<<FR-UDA01>>

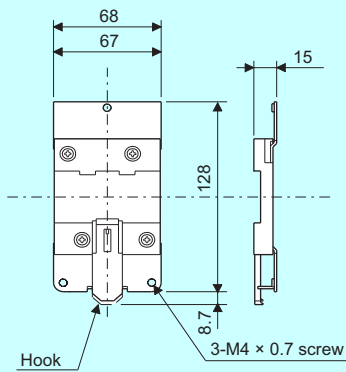

<<FR-UDA02>>

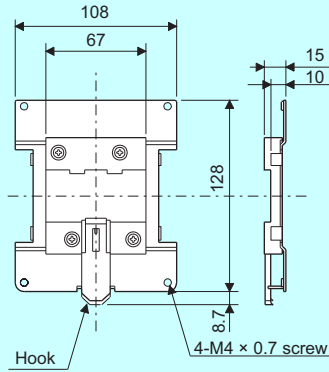

<<FR-UDA03>>

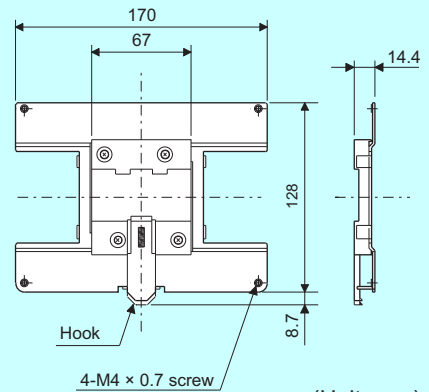

(Unit: mm)

# Other options

## Pilot generator

QVAH-10 ALL


AC voltage is output depending on the speed of the motor.

### ●Specifications

| Item            | Description                                     |
|-----------------|---|
| Output voltage  | 70 V/35 VAC at 2500 r/min                       |
| Output          | 10 W/5 W *1                                     |
| Linearity       | 1% or less                                      |
| Maximum speed   | 5000 r/min *2                                   |
| Number of poles | Single phase 24 poles                           |
| Rotation torque | At starting 0.14 N·m<br>During running 0.05 N·m |

- \*1 When outputting 10W between terminal U-V, output 1W or less between terminal U-0 (or 0-V).
- \*2 Operating at 2500 r/min or more degrades linearity.

### ●Outline dimension drawings

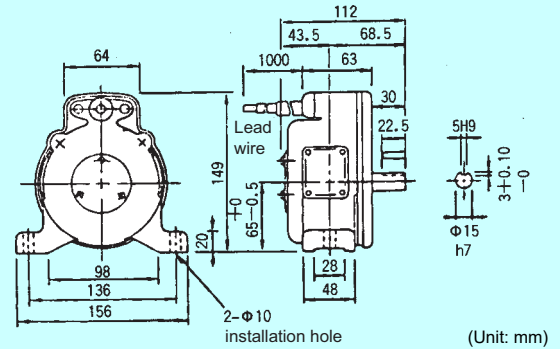

## Deviation sensor

VYGC-500W-NS ALL


This detector detects the angular displacement of motor shaft and output as AC voltage. It has a built-in limit switch for both end detection.

### ●Specifications

| Item                            | Description  |
|---------------------------------|--|
| Power supply voltage            | 200 V/220 VAC 50 Hz/60 Hz  |
| Contact capacity                | 250 VAC 6 A  |
| Used angular displacement *1    | ±60°   |
| Maximum angular displacement *2 | ±140° ±10°   |
| Maximum output voltage          | At 200 VAC input ... 82 VAC/90°<br>At 200 VAC input ... 90 VAC/90° |
| Rotation torque                 | 0.02 N·m or less   |

- \*1 Used angular displacement indicates the rotation angle until the limit switch operates.
- \*2 Maximum displacement angle indicates the maximum rotation angle of the machine (to the stopper) of the deviation sensor.

### ●Outline dimension drawings

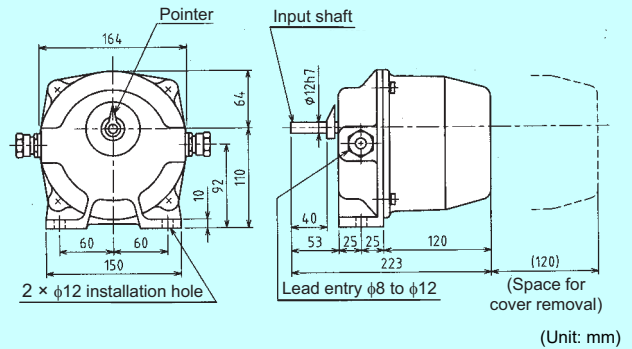

## Digital frequency meter

HZ-1N (introduced product) ALL

Connect the frequency meter between terminal FM-SD of the inverter to indicate the inverter output frequency by FM output (pulse).

Introduced product: HZ-1N \*

\* Please contact your sales representative or the nearest Mitsubishi FA Center.




HZ-1N (introduced product)

### ●Specifications

| Item                        | Description   |
|-----------------------------|---|
| Display digit               | 3 digits  |
| Minimum resolution          | 1 Hz  |
| Sampling period             | Approx. 166 ms  |
| Frequency display switching | 0 to 60 Hz, 0 to 120 Hz, 0 to 240 Hz switching function |
| Power supply voltage        | 100/200 VAC ±10% 50/60 Hz                               |

### ●Outline dimension drawings

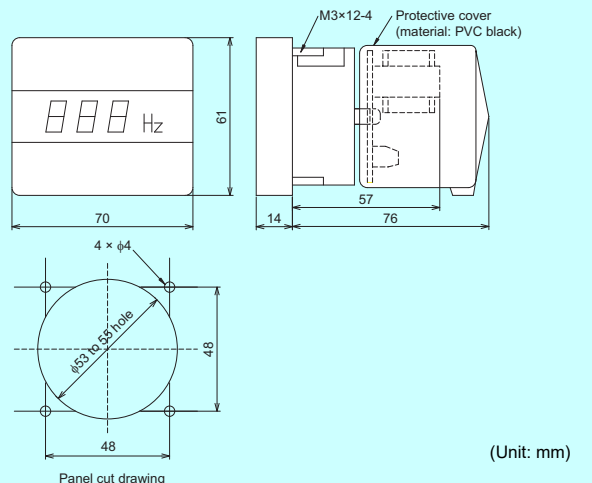

Analog frequency meter

YM-206NRI 1 mA ALL

KY-452 (introduced product) ALL

Connect a full-scale 1 mA ammeter to the inverter terminal FM-SD to display the inverter output frequency.

Introduced product: KY-452 \*

\* Please contact your sales representative or the nearest Mitsubishi FA center.

●Specifications

<<YM-206NRI 1 mA>>


| Item                   | Description                     |
|------------------------|---------------------------------|
| Principle of operation | Moving-coil type                |
| Scale specifications   | 0 to 65 Hz, 130 Hz double scale |

<<KY-452 (introduced product)>>

| Item                   | Description                          |
|------------------------|--------------------------------------|
| Principle of operation | Moving-coil type                     |
| Scale specifications   | 0 to 60 Hz, 0 to 120 Hz double scale |




YM-206NRI 1 mA

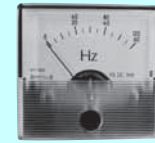


KY-452 (introduced product)

●Outline dimension drawings

<<YM-206NRI 1 mA>>

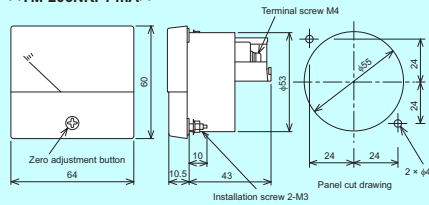

<<KY-452 (introduced product)>>

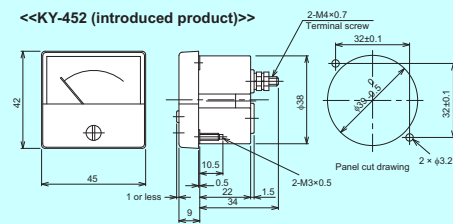

(Unit: mm)

Calibration resistor


RV24YN 10 kΩ ALL

Calibrate analog frequency meter with this variable resistor. Connect this resistor between the inverter and frequency meter to change the value of current flow. (It is not necessary when calibrating the meter from the operation panel/parameter unit.)

●Specifications

| Item                 | Description   |
|----------------------|---|
| Characteristic       | Carbon film variable resistor<br>1/3 W 10 kΩ B characteristic |
| Shaft rotation angle | 300° ±5°  |

●Outline dimension drawings

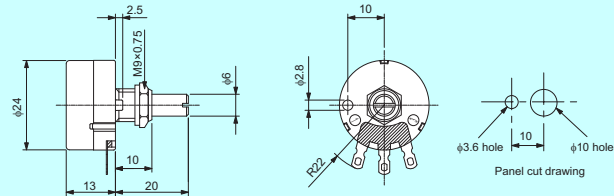

(Unit: mm)

Frequency setting potentiometer  
Pointer scale  
Knob

WA2W 1 kΩ (introduced product) ALL

MEM-40 (introduced product) ALL

K-3 (introduced product) ALL

WA2W-40SET-S (introduced product) ALL

Connect the variable resistor between terminal 10-2-5 of the inverter to set the inverter running frequency.


Introduced product: WA2W, MEM-40, K-3, WA2W-40SET-S \*

\* Please contact your sales representative or the nearest Mitsubishi FA center.


●Specifications

| Item                 | Description   |
|----------------------|---|
| Characteristic       | Wire wound variable resistor<br>2 W 1 kΩ B characteristic |
| Shaft rotation angle | 300° ±5°  |

●Outline dimension drawings

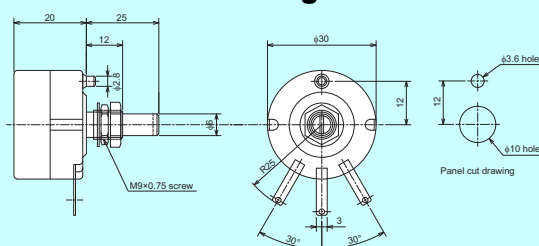

WA2W 1 kΩ (introduced product)

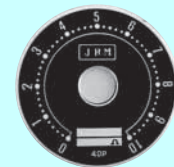

MEM-40 (introduced product)



K-3 (introduced product)

WA2W-40SET-S includes WA2W, MEM-40, and K-3.

(Unit: mm)










# Mitsubishi Electric's global FA network delivers reliable technologies and security around the world.

■ Production base   
 ● Development center   
 ● Global FA Center   
 ▲ Mechatronics showroom   
 ● Mitsubishi Electric sales office

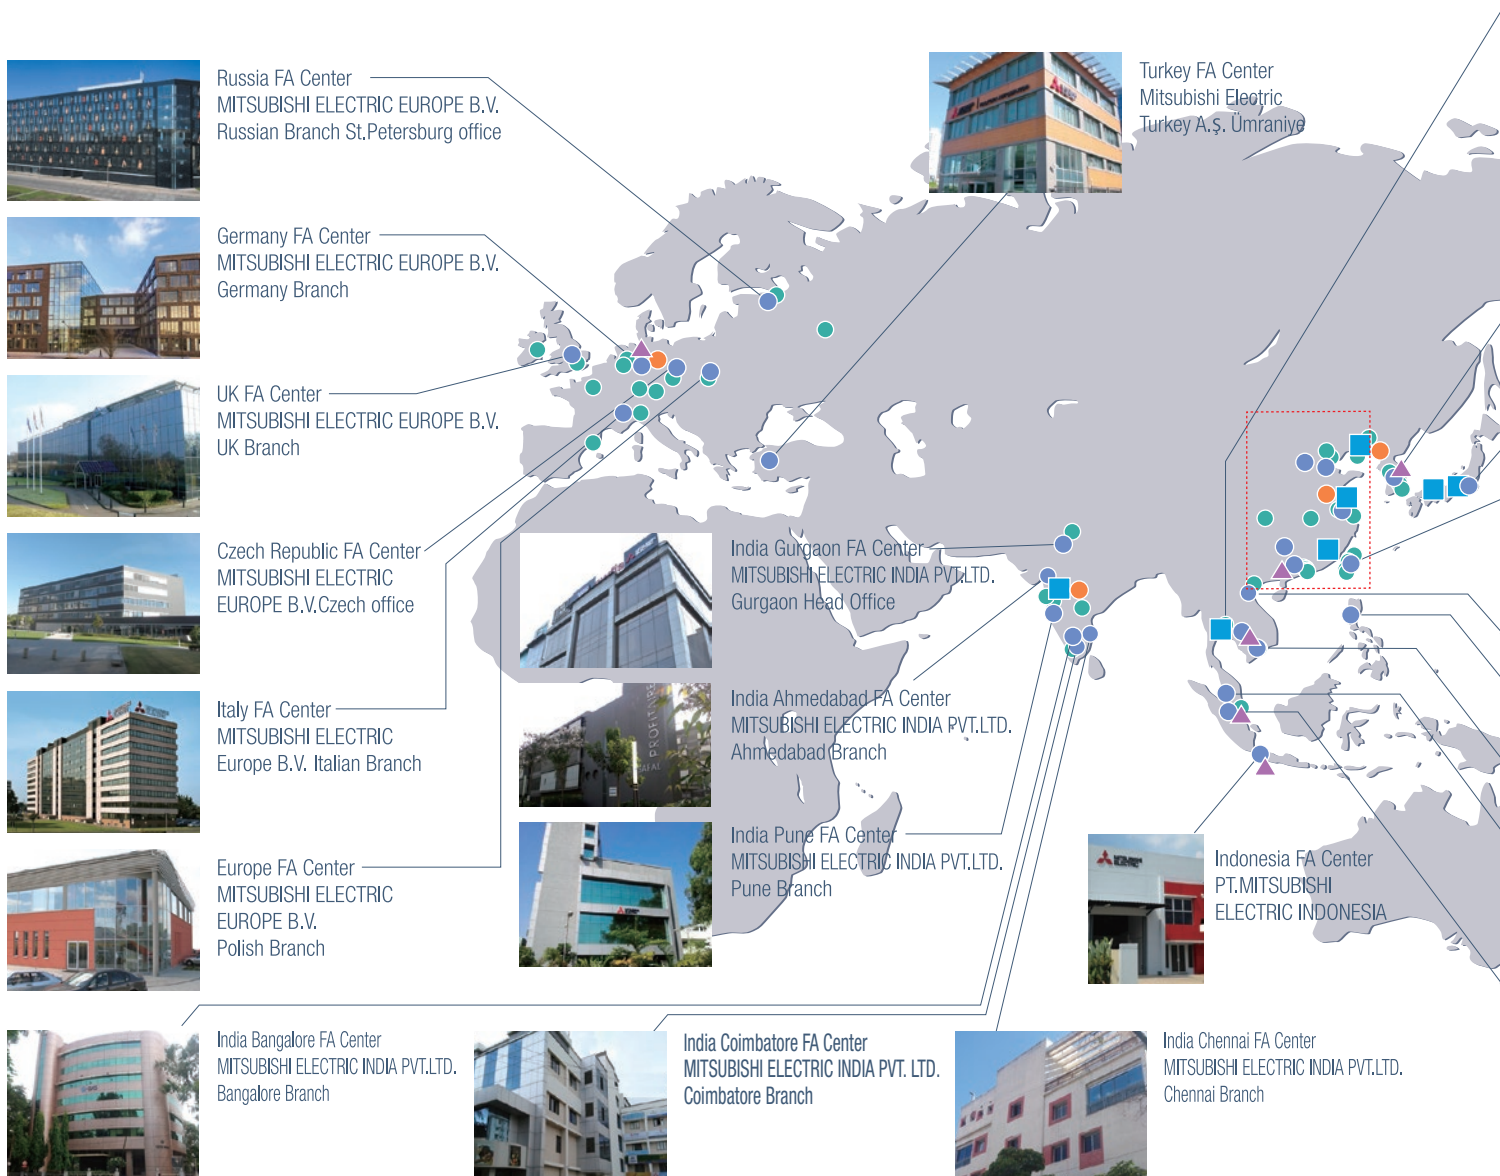

**Production bases** Under the lead of Nagoya Works, we form a powerful network to optimize our manufacturing processes.

## Domestic bases

### Nagoya Works



Shinshiro Factory  
Kani Factory

## Production bases overseas

**MDI** Mitsubishi Electric Dalian Industrial Products Co., Ltd.



**MEI** Mitsubishi Electric India Pvt.



**MEAMC** Mitsubishi Electric Automation Manufacturing (Changshu) Co., Ltd.

**MEATH** Mitsubishi Electric Automation (Thailand) Co., Ltd.

Thailand FA Center  
MITSUBISHI ELECTRIC FACTORY  
AUTOMATION (THAILAND) CO.,LTD



Korea FA Center  
MITSUBISHI ELECTRIC  
AUTOMATION KOREA CO.,LTD.



MITSUBISHI ELECTRIC CORPORATION  
Factory Automation Systems Group



Taichung FA Center  
MITSUBISHI ELECTRIC  
TAIWAN CO.,LTD



Taipei FA Center  
SETSUYO ENTERPRISE CO.,LTD



Philippines FA Center  
MELCO FACTORY AUTOMATION  
PHILIPPINES INC.



Hanoi FA center  
Mitsubishi Electric  
Vietnam  
Company Limited  
Hanoi Branch



Malaysia FA Center



Ho Chi Minh FA Center  
MITSUBISHI ELECTRIC  
VIETNAM COMPANY  
LIMITED



ASEAN FA Center  
MITSUBISHI ELECTRIC  
ASIA PTE.LTD.



Service bases are established around the world to provide the same services as in Japan globally. Overseas bases are opening one after another to support our customers' business expansion.


| Area     | Our overseas | FA centers |
|----------|--------------|------------|
| EMEA     | 39           | 7          |
| China    | 25           | 4          |
| Asia     | 49           | 16         |
| Americas | 19           | 6          |
| Total    | 132          | 33         |

-As of March 2021

North America FA Center  
MITSUBISHI ELECTRIC  
AUTOMATION,INC.



Mexico Monterrey FA Center  
Monterrey Office, Mitsubishi  
Electric Automation, Inc.

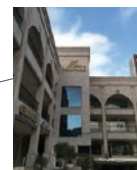


Mexico FA Center  
Querétaro Office, Mitsubishi  
Electric Automation, Inc.



Mexico City FA Center  
Mexico FA Center  
Mexico Branch, Mitsubishi  
Electric Automation, Inc.



Brazil FA Center  
Mitsubishi Electric do Brasil  
Comércio e Serviços Ltda.

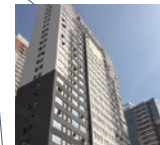

Brazil Votorantim FA Center  
MELCO CNC do Brasil  
Comércio e Serviços S.A.




## China

Beijing FA Center  
MITSUBISHI ELECTR  
AUTOMATION (CHINA)




Tianjin FA Center  
MITSUBISHI ELECTR  
AUTOMATION (CHINA)

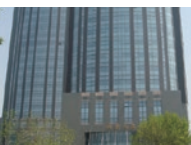

Guangzhou FA Center  
MITSUBISHI ELECTRIC  
AUTOMATION (CHINA)LTD.



Shanghai FA Center  
MITSUBISHI ELECTRIC  
AUTOMATION (CHINA) LTD.

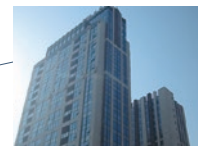

Shenzhen FA Center  
MITSUBISHI ELECTRIC  
AUTOMATION (CHINA) LTD.





# This solution solves customers' issues and concerns by enabling visualization and analysis that lead to improvements and increase availability at production sites.

Utilizing our FA and IT technologies and collaborating with e-F@ctory Alliance partners, we reduce the total cost across the entire supply chain and engineeringchain, and support the improvement initiatives and one-step-ahead manufacturing of our customers.



FA integrated solutions reduce total cost

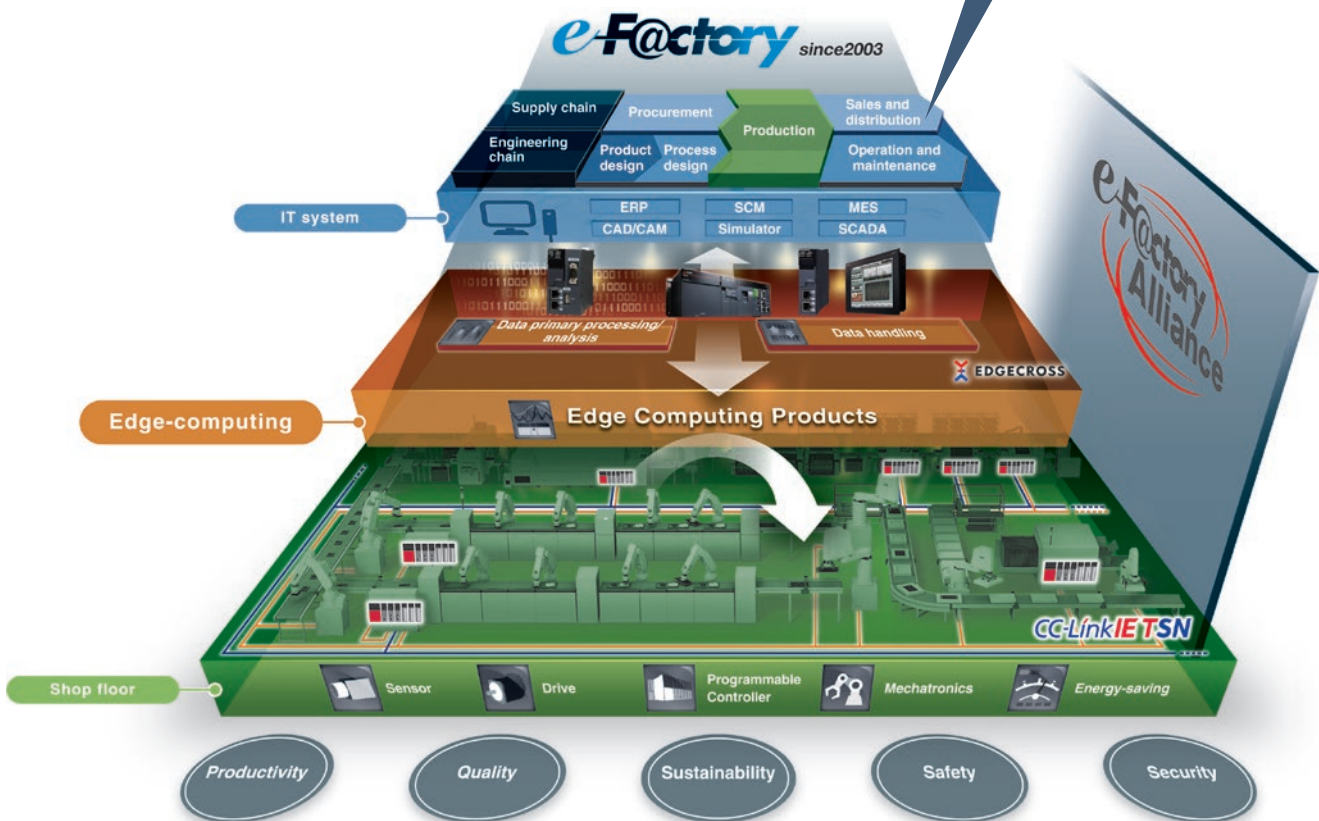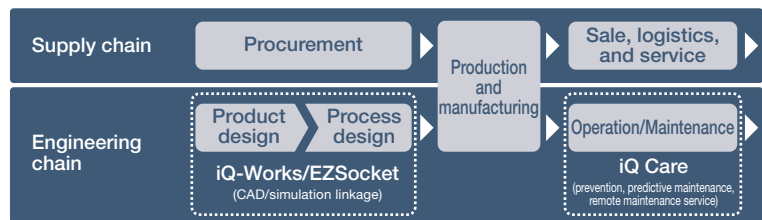


Overall production information is captured in addition to energy information, enabling the realization of efficient production and energy use (energy savings).

•Trademarks  
 PROFIBUS and PROFINET are either trademarks or registered trademarks of PROFIBUS & PROFINET International.  
 DeviceNet and EtherNet/IP are either trademarks or registered trademarks of ODVA.  
 LONWORKS is a registered trademark of Echelon Corporation in the U.S.A and other countries.  
 EnDat is a registered trademark of DR.JOHANNES HEIDENHAIN GmbH.  
 EtherCAT is a trademark of Beckhoff Automation GmbH.  
 MODBUS is a registered trademark of SCHNEIDER ELECTRIC USA, INC.  
 CC-Link IE TSN and CC-Link IE Field Network Basic are registered trademarks of CC-Link Partner Association.  
 App Store is a service mark of Apple Inc.

Google Play and the Google Play logo are trademarks of Google LLC.  
 Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.  
 The formal name of Windows Vista® is Microsoft® Windows Vista® operating system.  
 The formal name of Windows® 7 is Microsoft® Windows® 7 operating system.  
 The formal name of Windows® 8 is Microsoft® Windows® 8 operating system.  
 The formal name of Windows® 10 is Microsoft® Windows® 10 operating system.  
 The formal name of Windows® 11 is Microsoft® Windows® 11 operating system.  
 Other company and product names herein are the trademarks and registered trademarks of their respective owners.

**⚠ Safety Warning**  
 To ensure proper use of the products listed in this catalog, please be sure to read the instruction manual prior to use.

# YOUR SOLUTION PARTNER

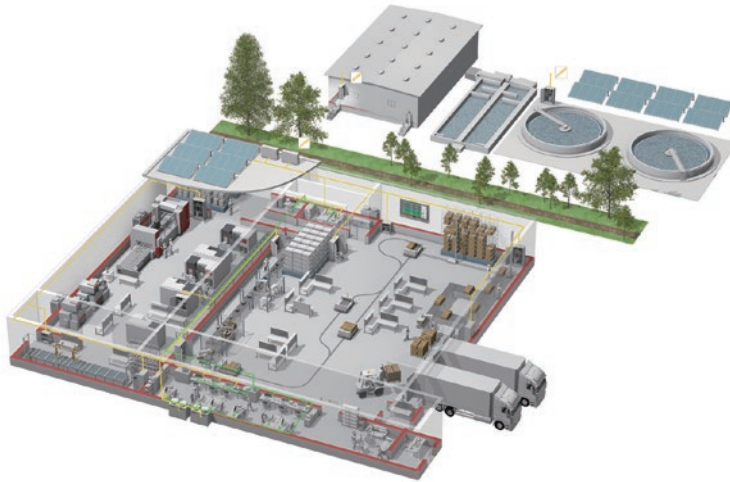

Mitsubishi Electric offers a wide range of automation equipment from PLCs and HMIs to CNC and EDM machines.

## A NAME TO TRUST

Since its beginnings in 1870, some 45 companies use the Mitsubishi name, covering a spectrum of finance, commerce and industry.

The Mitsubishi brand name is recognized around the world as a symbol of premium quality.

Mitsubishi Electric Corporation, established in 1921, is active in space development, transportation, semi-conductors, energy systems, communications and information processing, audio visual equipment and home electronics, building and energy management and automation systems, and has 183 factories, laboratories and offices worldwide in over 140 countries.

This is why you can rely on Mitsubishi Electric automation solution - because we know first hand about the need for reliable, efficient, easy-to-use automation and control in our own factories.

As one of the world's leading companies with a global turnover of over 4 trillion Yen (over \$40 billion), employing over 146,000 people, Mitsubishi Electric has the resource and the commitment to deliver the ultimate in service and support as well as the best products.



Low-voltage Power Distribution Products



Transformers, Med-voltage Distribution Products



Power Monitoring and Energy Saving Products



Power (UPS) and Environmental Products



Compact and Modular Controllers



Servos, Motors and Inverters



Visualization: HMIs



Edge Computing Products



Numerical Control (NC)



Collaborative and Industrial Robots



Processing machines: EDM, Lasers

\* Not all products are available in all countries.

# **mitsubishi electric corporation**

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

---